CCD-TR505E
RMT-701

SERVICE MANUAL

AEP Model
UK Model
E Model

Remote commander is available as a unit. But as individual parts the battery case lid of commander is only avaiable.

Video 8
Handycam

FL MECHANISM

CCD-TR505E is based on model CCD-TR305E.

〔Main differences〕
1. Color View Finder is carried.
2. See – through title mode is added.

For MECHANISM ADJUSTMENTS, refer to the "8 mm Video MECHANICAL ADJUSTMENT MANUAL Ⅱ " (9-972-705-11).

In this service manual, only the differences from CCD-TR305E are mentioned.
When servicing, see the CCD-TR305E service manual (9-973-221-11) with this.

SPECIFICATIONS

System

Video recording system	Four Rotary heads, Helical scanning FM system
Audio recording system	Four Rotary heads, Helical scanning FM system
Video signal	PAL colour, CCIR standards
Usable cassette	8 mm video format cassette
Tape speed	SP mode: Approx. 20.051 mm (13/16 inch)/second LP mode: Approx. 10.058 mm (13/32 inch)/second
Recording time	SP mode: 1 hour and 30 minutes (P5-90) LP mode: 3 hours (P5-90)
Playback time	SP mode: 1 hour and 30 minutes (E5/P5-90) LP mode: 3 hours (P5-90)
Fast-forward/rewind time	Approx. 8.5 min. (E5/P5-90)
Image device	CCD (Charge Coupled Device)
Viewfinder	Electronic viewfinder (colour)
Lens	Combined 10 × power zoom lens f = 6.2 – 62 mm (1/4 to 2 1/2 inches) F 1.6 (44.6 to 446 mm (1 13/16 to 17 5/8 inches) when converted to a 35-mm still camera) 37 mm (1 1/2 inches)
Autofocus sytem	TTL autofocus sytem inner focus wide macro system
Colour temperature	Automatic
Minimum illumination	3 lx (F 1.6)
Illumination range	3 lx – 100,000 lx (0.3 – 9,290 footcandles)
Recommended illumination	More than 100 lx (9.3 footcandles)

+V350
V363

Input and output connector

AEP, UK model

Video output	Phono jack, 1 Vp-p, 75 ohms unbalanced sync negative
Audio output	Phono jack (2) Output: –7.5 dBs (at output impedance 47 kilohms) impedance less than 2.2 kilohms

– Continued on next page –

MICROFILM

8 VIDEO CAMERA RECORDER

SONY®

E model

Video input/output	Selectable with the INPUT/OUTPUT selector Phono jack (2), 1 Vp-p, 75 ohms unbalanced sync negative
Audio input/output	Selectable with the INPUT/OUTPUT selector Phono jack (2) Output: –75 dBs, (at output impedance 47 kilohms) impedance less than 2.2 kilohms
RFU DC OUT	Special minijack, DC 5 V
Remote jack	Stereo mini-minijack
MIC jack	Stereo minijack, −66 dBs, low impedance with 2.5−3 V DC output, impedance 6.8 kilohms

General

Power requirements	On battery mounting surface 6.0 V (battery pack) 7.5 V (AC power adaptor) 9.0 V (alkaline batteries)
Average power consumption	6.2 W (camera recording) including the viewfinder
Installation	Vertically, Horizontally
Operating temperature	0 °C to 40 °C (32° F to 104° F)
Storage temperature	−20 °C to +60 °C (−4° F to +140° F)
Dimensions	Approx. 105 × 99 × 182 mm (w/h/d) (4 1/4 × 4 × 7 1/4 inches)
Weight	Approx. 650 g (1 lb 7 oz) excluding the battery pack, lithium battery, cassette, jack cover, and shoulder strap Approx. 870 g (1 lb 15 oz) including the battery pack NP-55, lithium battery CR2025, cassette P5-60, jack cover, and shoulder strap
Microphone	Electret condenser microphone, stereo type

Supplied accessories

(A)

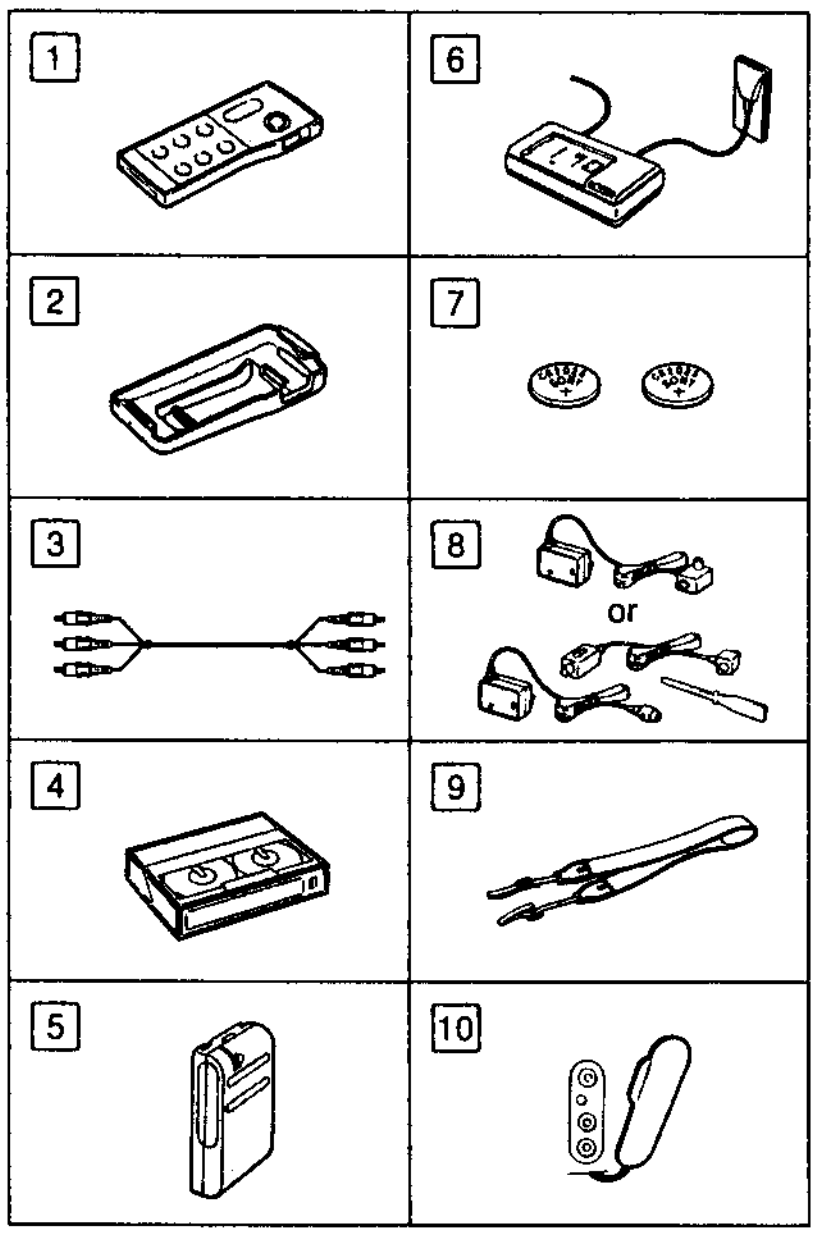

(A)

1 Wireless Remote Commander (1)

2 Remote Commander holder (1)

3 A/V connecting cable (3 phono to 3 phono) (1)

4 Video cassette tape (1)

5 Battery pack NP-55 (1)

6 AC power adaptor AC-V35 or AC-V35A (1)

7 Lithium battery CR2025 (2) (for camcorder/for the Remote Commander)

8 RFU adaptor
RFU-90E (1) (AEP model)
RFU-89EA with an aerial selector and a screw driver (1) (UK/E model)

9 Shoulder strap (1)

10 Jack cover (1) (attached to the camcorder)

TABLE OF CONTENTS

Section Title Page

SERVICE NOTE

Semiconductor for Correction List Display 4
Parts Location Diagram Related to Power Supply 4
Semiconductor Location 4
Head Cleaning 4

1. GENERAL

Identifying the Parts 5
Connecting the Power Sources 7
Superimposing a Title 8
Notes and Precautions 9
Indicators inside the Viewfinder and in the Display Window 10

2. DISASSEMBLY

2-11. Removal of EVF Assembly (CL-28 Board) 11

3. DIAGRAMS

3-1. Circuit Boards Location 12
3-2. Overall Block Diagram 13
3-6. Video (1) Block Diagram 17
3-14. EVF Block Diagram 21
3-15. Power Block Diagram 24

4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. Frame Schematic Diagram 27
4-2. Printed Wiring Boards and Schematic Diagrams 30
- VS-93P Board (Video Head Amp, Video, Servo/System Control) 31
- VS-93P Board (Video Head Amp) 35
- VS-93P Board (Video) 39
- VS-93P Board (Servo/System Control) 43
- VS-93P Board (Video) 47

4-3. Semiconductors 54

5. EXPLODED VIEWS

5-1. Cabinet (L) and F Panel Assemblies 55
5-2. Cabinet (R) and EVF Assemblies 56
5-3. Main Boards Assembly 57

6. ELECTRICAL PARTS LIST 58

HARDWARE LIST 70

7. CAMERA ADJUSTMENT

7-1. Viewfinder Adjustment 72
1. Current Consumption Adjustment (IV-10 Board) 72
2. –8V Power Supply Adjustment (IV-10 Board) 73
3. Power Supply Voltage Check (CL-28 Board) 73
4. LC COM Voltage Check (CL-28 Board) 73
5. VCO Adjustment (CL-28 Board) 74
6. BRIGHT Preset Adjustment (CL-28 Board) 74
7. CONTRAST Adjustment (CL-28 Board) 75
8. SUB CONT R Adjustment (CL-28 Board) 75
9. SUB CONT B Adjustment (CL-28 Board) 76
10. White Balance Adjustment (CL-28 Board) 76
11. BRIGHT Adjustment (CL-28 Board) 76
12. Burst Cleaning Adjustment (CL-28 Board) 78

7-2. Arrangement Diagram for Adjustment Parts 81

8. VIDEO SECTION ADJUSTMENT

8-1. Page D Address List 81

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SERVICE NOTE

[SEMICONDUCTOR FOR CORRECTION LIST DISPLAY]

Part code and part name of the semiconductor for correction of the print board is discribed in the space of each print figure. Use this list when ordering parts.

[SEMICONDUCTOR LOCATION]

In this service manual, the mounted locations of the semiconductors (IC, transistor, diodes) are indicated in red as shown below. This enables to find the location on the board easily when servicing.

[PARTS LOCATION DIAGRAM RELATED TO POWER SUPPLY]

The parts location diagram for the power supply which are often checked and replaced when repairing the fuse and IC link and so on. (See pages 32 and 44.)
This diagram is useful for repair.

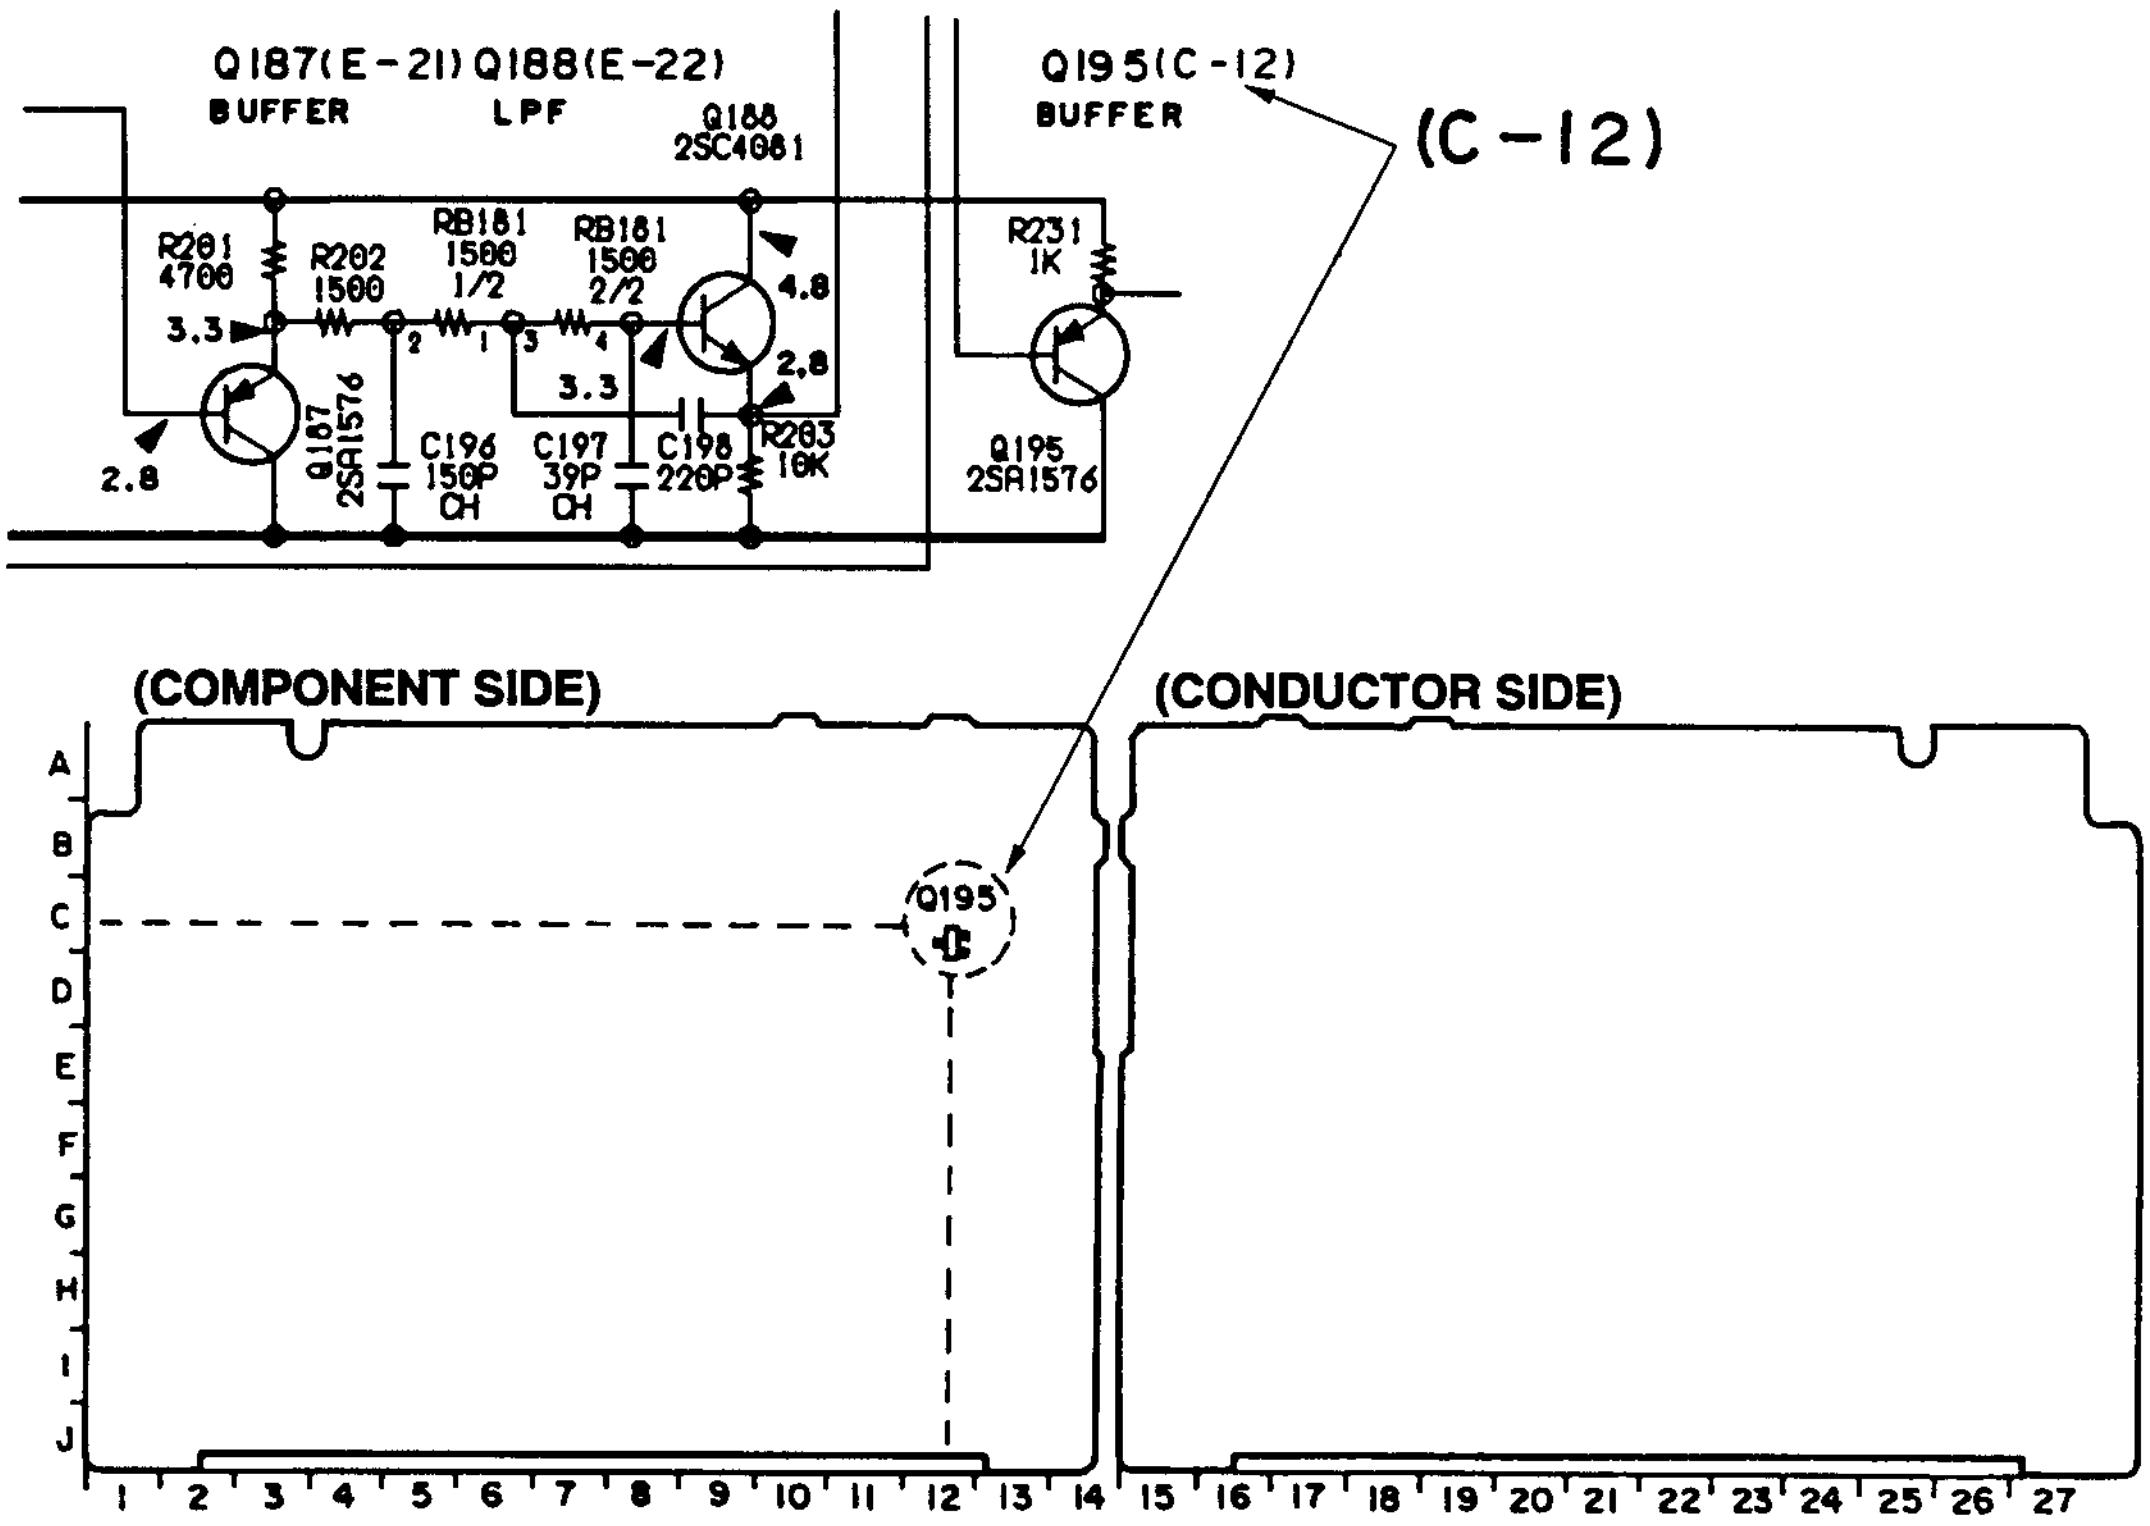
Q187(E-21) Q188(E-22)
BUFFER
LPF
Q188
2SC4081
R201
4700
R202
1500
RB181
1500
1/2
RB181
1500
2/2
3.3
4.8
2.8
3.3
2.8
Q187
2SA1576
C196
150P
CH
C197
39P
CH
C198
220P
R203
10K
Q195(C-12)
BUFFER
R231
1K
Q195
2SA1576
(C-12)
(COMPONENT SIDE)
(CONDUCTOR SIDE)
Q195
A
B
C
D
E
F
G
H
I
J
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27

[HEAD CLEANING]

After an extended period of use the video image may become indistinct or may not appear at all during playback of a tape. The cause of this usually are dirty video heads. For remedy, cleaning of the heads is required.

Check for Head Clogs During Recording

① Use a blank tape, record a short section, then press the stop button to stop.
② Set to recording mode again.
③ If the [✲] mark is flashing in the viewfinder at this time, head clogs are occurred.

Check During Playback of a Tape

① Play back a pre-recorded tape and display the image on a TV screen.
② If there is no sound and the image is unstable, no image appears on the screen, or tape transport is unstable, head clogs are occurred.

Remedy

[Cleaning method using a cleaning tape]

- Use the Cleaning Tape. (Please follow the instructions attached to the cleaning tape.)

SECTION 1
GENERAL

This section is extracted from instruction manual.

Identifying the Parts

(B-1)

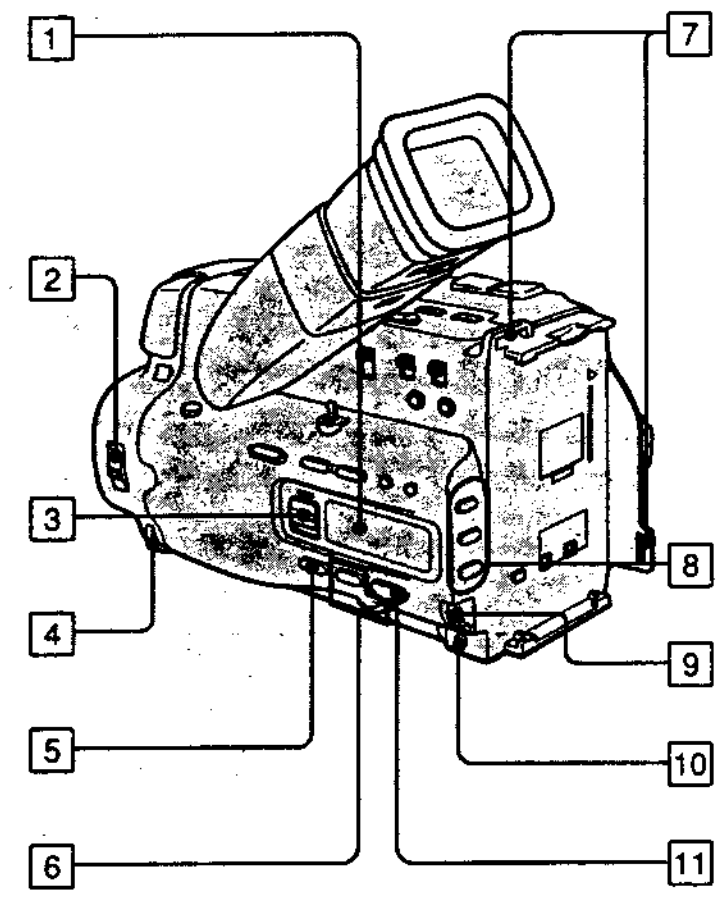

For details on the use of each control, refer to the pages indicated in the circle.

(B-1)

1 **Display window ●**

2 **LENS COVER switch ●**

3 **AUTO LOCK switch ●, ●**

4 **FOCUS MANUAL dial ●**

5 **FOCUS button ●**

6 **EXPOSURE button and EXPOSURE dial ●**

7 **Hooks for shoulder strap**

8 **Superimpose buttons ●–●**

MEMORY button
COLOR/MODE button
SUPERIMPOSE ON/OFF button

9 **BATT (battery eject) knob ●**

10 **REMOTE ⓛ (LANC)* control jack (stereo mini-mini-jack)**
Connect a wired remote control unit, an editing controller, or other equipment here.

11 **PROGRAM AE button ●**

*** About ⓛ (LANC)**
ⓛ (LANC) stands for Local Application Control Bus System. The ⓛ (LANC) connector is used for controlling the tape transport of video equipment and the peripherals connected to it. This connector has the same function as the connectors indicated as CONTROL L or REMOTE.

(B-2)

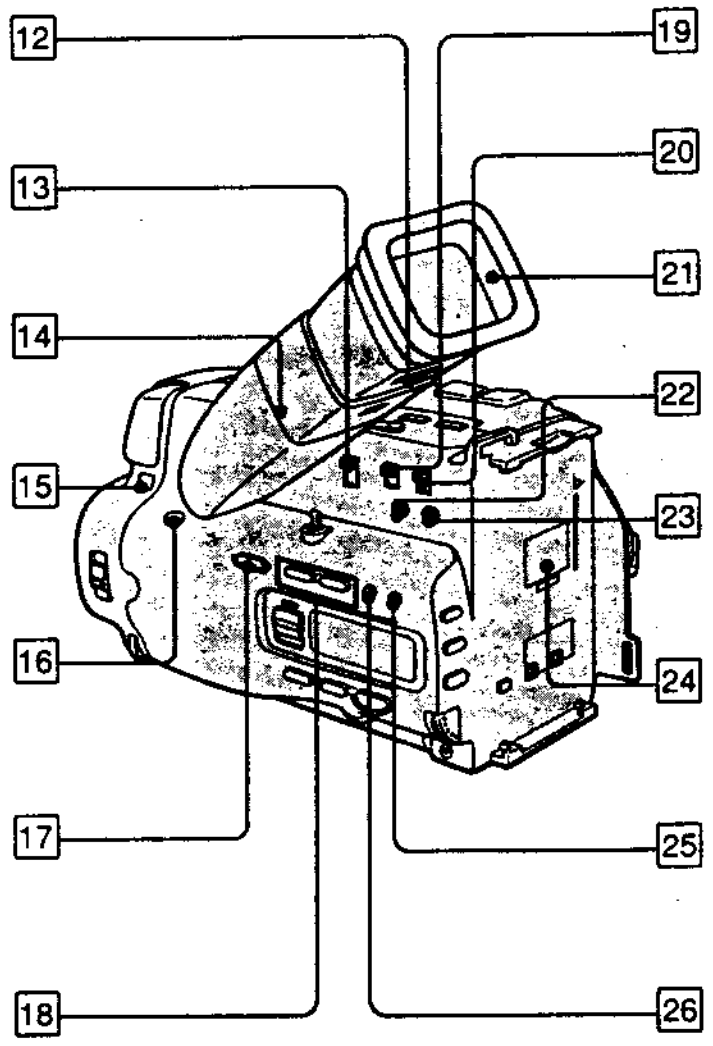

Identifying the Parts

(B-2)

12 **Viewfinder lens control ●**

13 **Hi-Fi SOUND switch ●**

14 **Viewfinder ●**
You can monitor the colour picture being recorded or played back.

15 **Remote sensor ●**

16 **PUSH FOCUS HOLD button ●**

17 **DIGITAL PICTURE button ●**

18 **DATE (+) and TIME (NEXT) buttons ●**

19 **REMOTE COMMANDER ▣ ON/OFF switch ●**

20 **REC MODE (recording mode)/EDIT switch ●, ●**

Mode	Recording	Playback	Editing
Setting	REC MODE SP LP	EDIT	EDIT
Function	Recording mode switch	EDIT switch	

21 **Eyecup**

22 **SUMMERTIME button ●**

23 **AREA button ●**

24 **Lithium battery compartment ●**

25 **ZERO MEM (zero memory) button ●, ●**

26 **COUNTER RESET button ●**

(B-3)

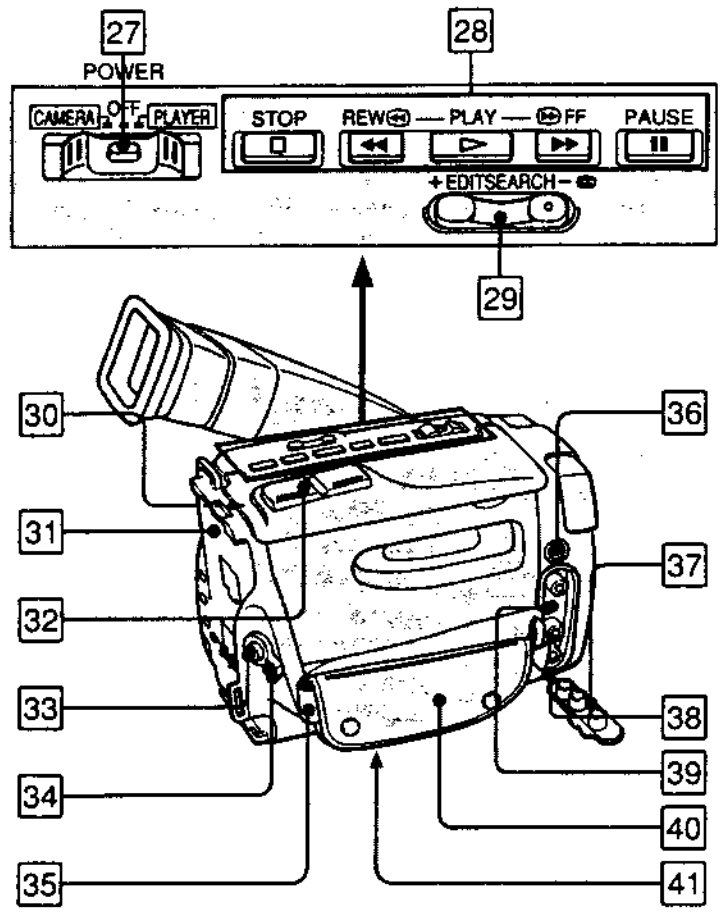

(B-4)

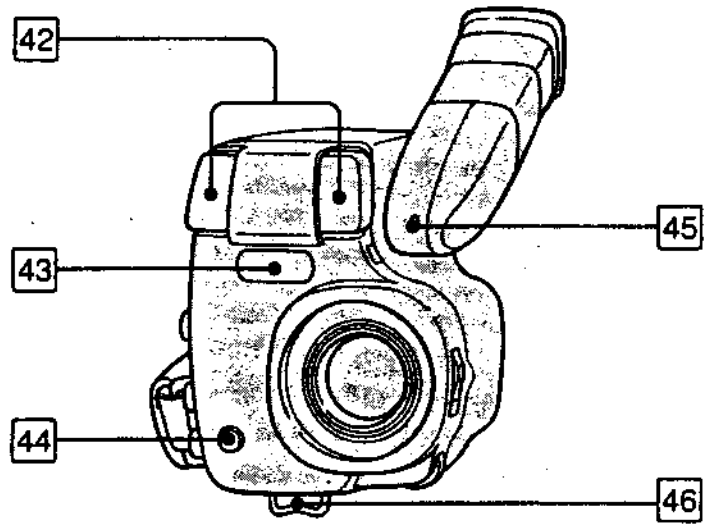

(B-5)

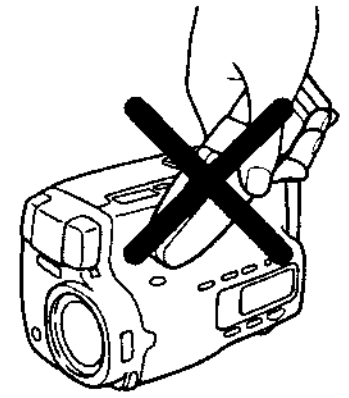

(B-3)

27 **POWER switch**

28 **Tape transport buttons**
▷ PLAY (playback)
▶▶ FF (fast forward)
◀◀ REW (rewind)
□ STOP
❚❚ PAUSE

29 **EDITSEARCH ⊜ button ㉖, ㉗**

30 **EJECT button (below the lid) ㉑**

31 **Battery mounting surface**

32 **Power zoom button ㉕, ㉙**

33 **START/STOP button ㉓**

34 **STANDBY switch ㉓**

35 **Grip strap**

36 **MIC jack (PLUG IN POWER) (stereo minijack)**

37 **Jack cover**

38 **VIDEO/AUDIO output jacks (phono jacks) ㊶–㊹**

39 **RFU DC OUT (RFU adaptor DC output) jack (special minijack) ㊼, ㊸**

40 **Grip strap cover**

41 **Tripod receptacle (bottom)**

(B-4)

42 **Built-in microphone (stereo)**

43 **Remote sensor ❼**

44 **FADER button ㊴**

45 **Camera recording/battery lamp**

46 **Stand**

Caution (B-5)
Do not pick up the camcorder as shown in the illustration.

(B-6)

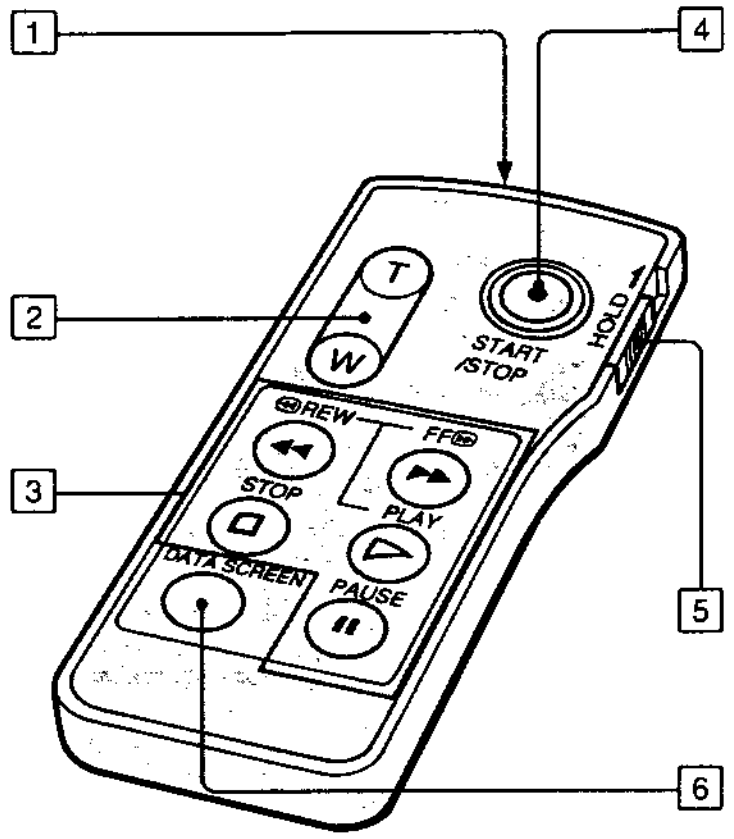

(B-7)

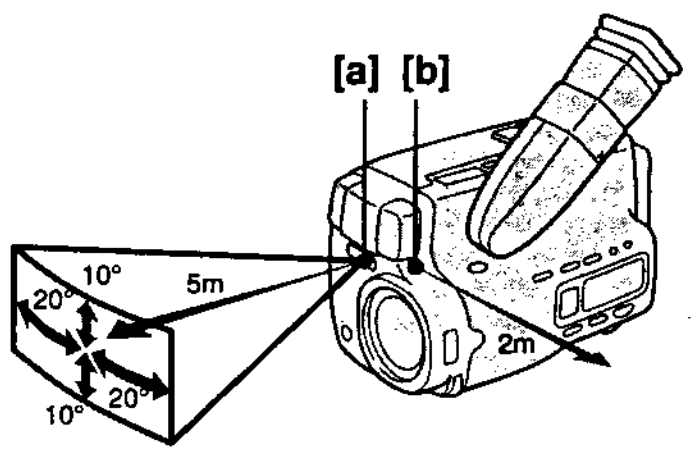

Wireless Remote Commander

You can remotely record or play back a tape. The buttons on the Remote Commander with the same name or same mark as those on the camcorder have the same function.

When you use the Remote Commander
Be sure to insert the supplied lithium battery into it (page 10) and to set REMOTE COMMANDER 🅁 ON/OFF on the camcorder to "ON".

(B-6)

1 **Transmitter**

2 **Power zoom button**

3 **Tape transport buttons**

4 **START/STOP button**

5 **HOLD switch***
Slide in the direction of the arrow to prevent the buttons from being accidentally depressed.

6 **DATA SCREEN button* ㊻**
Press to erase or display the on-screen display.

Note
The * indicates the function which is operable only with the Remote Commander.

Remotely controllable area (B-7)
Point the Remote Commander towards the remote sensor **[a]**.
The unit has another remote sensor **[b]**.

Notes on the Remote Commander

- **Keep the remote sensor away from strong light sources such as direct sunlight or illumination. Otherwise the remote control may not be effective.**
- Be sure that there is no obstacle between the remote sensor and the Remote Commander.
- This camcorder works through the signals of commander mode VTR 2. A commander mode is used to distinguish this camcorder from other Sony VTR to avoid misoperation. If you use another Sony VTR at commander mode VTR 2, we recommend you change the commander mode or cover the remote sensor of the VTR with black paper.

Identifying the Parts

(B-8)



(B-9)

[a]

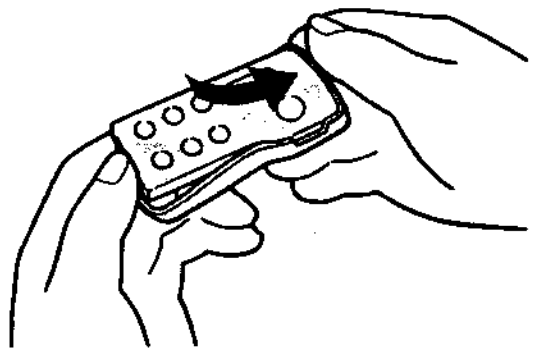

[b]

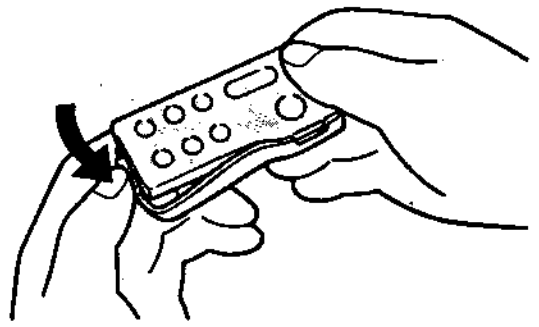

Using the Remote Commander holder
You can clip the Remote Commander holder on your coat pocket or belt, or also slide it onto the shoulder belt before attaching the Remote Commander to it. **(B-8)**

(B-9)

[a] When attaching the Remote Commander to the Remote Commander holder

[b] When detaching the Remote Commander from the Remote Commander holder

Preparing your camcorder 2

Connecting the Power Sources

First, Choose the Power Source.

Place	Power source	Accessory to be used
Outdoors	Battery pack	Battery pack NP-55 (supplied), NP-55H, NP-66H, NP-77, NP-77H, NP-77HD
	Alkaline batteries	Battery case EBP-77
Indoors	House current	AC power adaptor AC-V35 or AC-V35A (supplied), AC-V55, AC-S10
In the car	12V or 24V car battery	DC pack DCP-77, AC power adaptor AC-V55, the car battery cord DCC-16AE and the car battery charger DC-S10

For details, see the operation manual of the accessory you want to use.

Using the Battery Pack

(D-1)

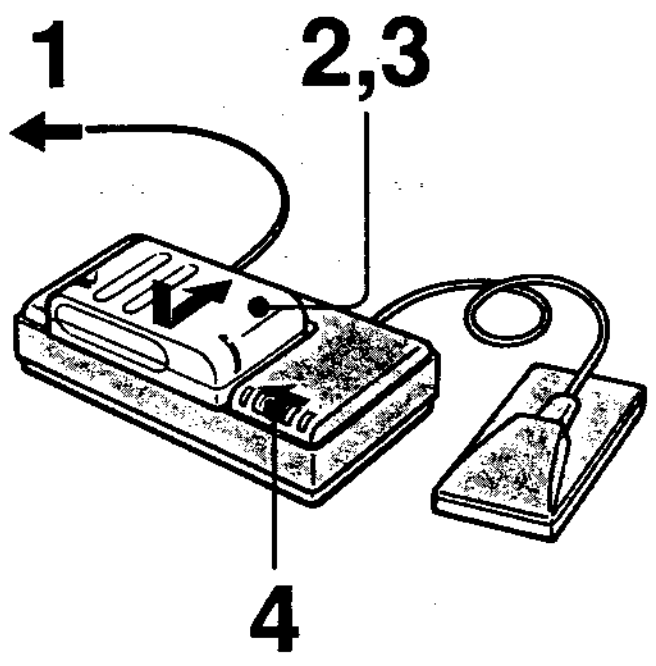

Step 1

Charge the battery pack. (D-1)

1 **Connect the AC power adaptor to a wall outlet.**

2 **Align the right side of the battery pack with the line on the AC power adaptor.**

3 **Slide in the battery pack to the right.**

4 **Set the selector to "CHARGE" position.**
When charging is finished, the charge lamp goes out.

	NP-55	NP-55H	NP-66H	NP-77	NP-77H/77HD
Required charging time*	60	70	110	120	140
Battery life**	50	60	80	95	115

* Approximate minutes using AC-V35 or AC-V35A

** Approximate minutes using fully charged battery pack, continuous recording indoors

(continued)

(R-1)

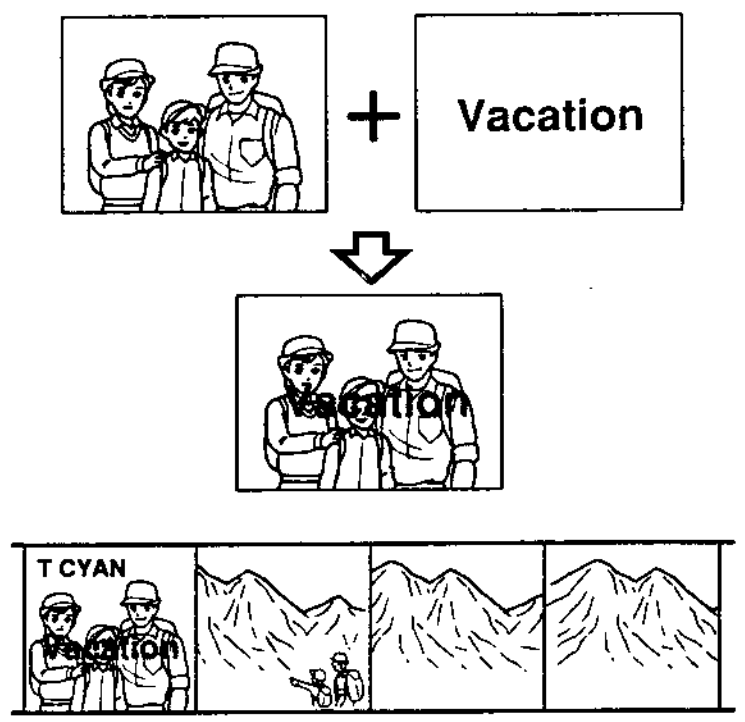

(R-2)

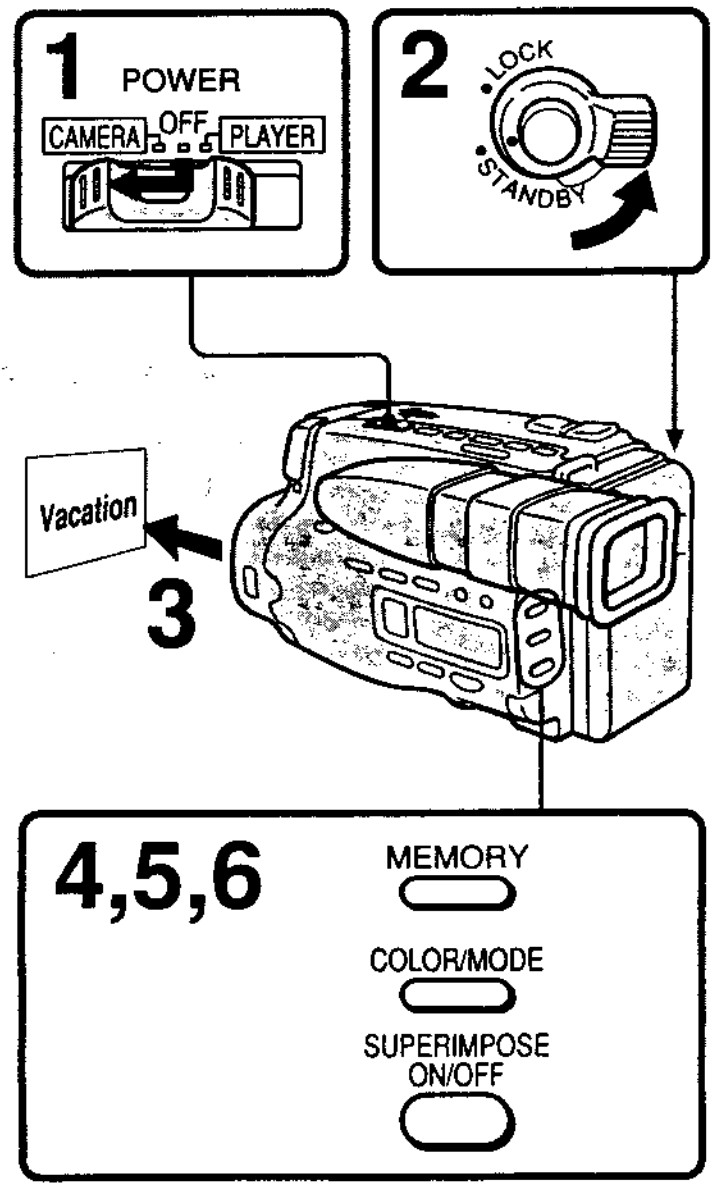

Superimposing a Title

You can superimpose your own hand-written message or illustration (title) over the picture while you are recording. **(R-1)**

- You can store one title.
- You can select the colour of the title from 8 colours.
- You cannot superimpose a title on the tape already recorded.

Before superimposing, store the title.

Storing a Title

Before storing

- Make the desired title card.
  Use a plain, white card and draw the title in thick, dark letters.
- Make sure the lithium battery is installed. (page 9)

How to store (R-2)

1 **While pressing the green button, set the POWER switch to CAMERA switch.**

2 **Turn STANDBY up to set the camcorder in standby mode.**

3 **Point the camcorder to the title card and adjust the focus.**

4 **Press MEMORY to store the title.**

5 **Press COLOR/MODE and select the title colour.**
Each time you press the button, the indicator changes as follows:

$$\begin{tikzcd} \text{WHT (white)} \arrow[r] & \text{BLUE} \arrow[r] & \text{GRN (green)} \arrow[r] & \text{CYAN} \arrow[d] \\ \text{BLK (black)} \arrow[u] & \text{YEL (yellow)} \arrow[l] & \text{VIO (violet)} \arrow[l] & \text{RED} \arrow[l] \end{tikzcd}$$

6 **Press SUPERIMPOSE ON/OFF to turn off the title.**

To check the title
Press SUPERIMPOSE ON/OFF in the standby mode.

To store a new title
Repeat steps 3 and 4.

(R-3)

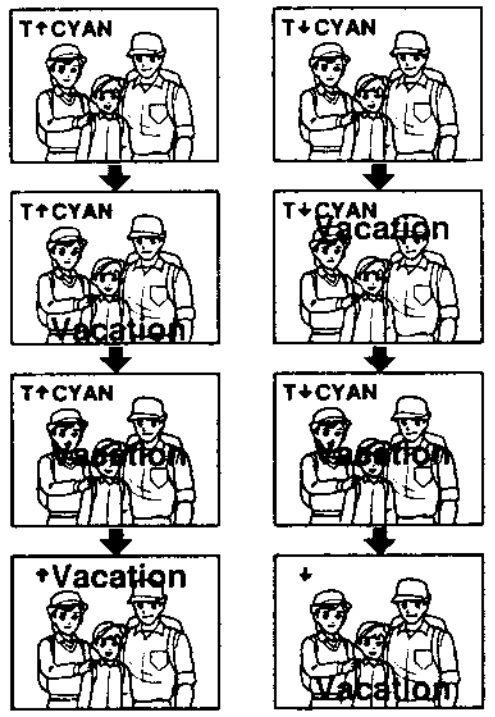

(R-4)



(R-5)

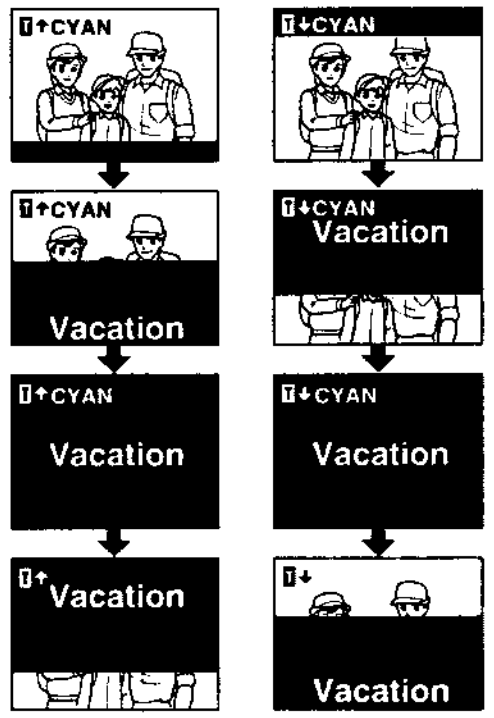

(R-6)

[a] [b]



Various Display Modes of the Title

You can scroll your title like scrolling credits in the movies, or reverse the title. You can also make the title see-through, and reverse it. Select the display mode of the title from the following table.

Display mode	Indicator in the viewfinder
Scrolling up the title (R-3)	↑
Scrolling down the title (R-3)	↓
Reversing the title with the picture (R-4)	▣
Scrolling up the reversed title (R-5)	▣↑
Scrolling down the reversed title (R-5)	▣↓
See-through title with the picture (R-6 [a])	T
Scrolling up the see-through title*	T↑
Scrolling down the see-through title*	T↓
Reversing the see-through title with the picture (R-6 [b])	■
Scrolling up the reversed see-through title*	■↑
Scrolling down the reversed see-through title*	■↓
Normal display mode	No indicator

* The see-through title scrolls up and down in the same way as illustrated in R-3 (normal title) and R-5 (reversed title.)

Selecting the display mode
Before displaying the title, press COLOR/MODE until the indicator of the mode you want appears.

(R-7)

(R-8)

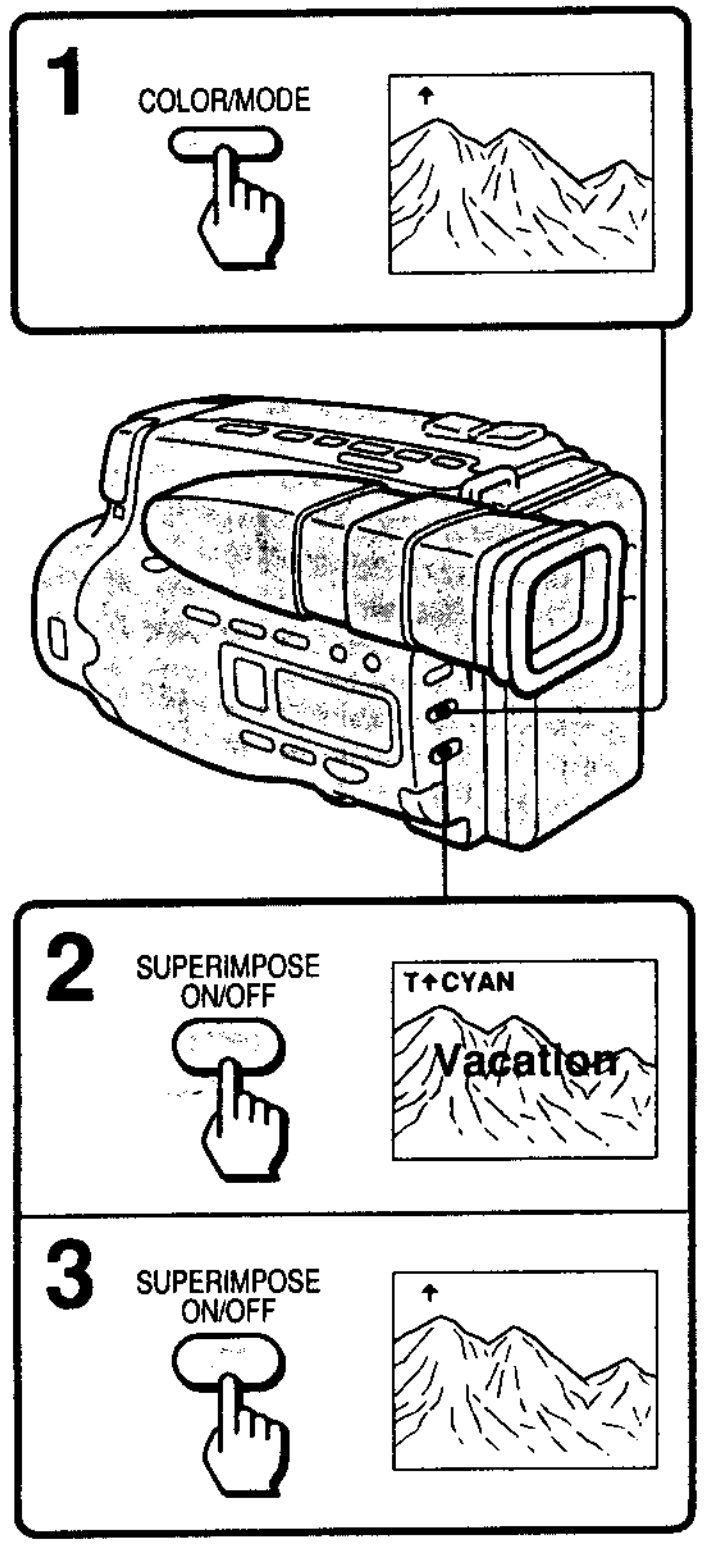

Superimposing a Title

Function of the COLOR/MODE Button

This button has a double function: one is to select the title colour and the other is to select the title display mode. If the title is displayed, this button functions as the colour selection button, and if it is not, it functions as the mode selection button. **(R-7)**

Superimposing a Title on Your Tape

The following shows how to superimpose a title using an example in which the title scrolls up. **(R-8)**

1 **Press COLOR/MODE to select the display mode of the title in the standby mode.**

2 **Press SUPERIMPOSE ON/OFF at the point from which you want to insert the title, during recording.**
You can change the title colour by pressing COLOR/MODE. Each time you press the button, the colour indicator changes.

3 **Wait for a while and press SUPERIMPOSE ON/OFF again.**
The title goes out.

About the colour and the display mode indicators
The colour and the display mode indicators inside the viewfinder are not recorded.

To scroll the title without stopping at the center of the screen
Press SUPERIMPOSE ON/OFF twice continuously at the point from which you want to insert the title.

(X-3)

(X-4)

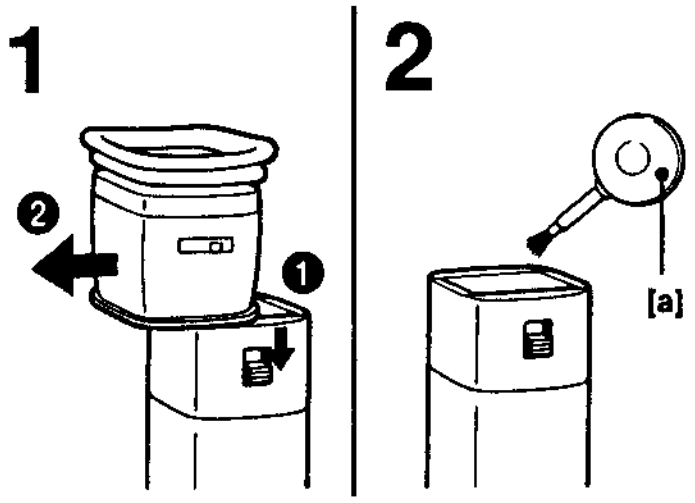

(X-5)

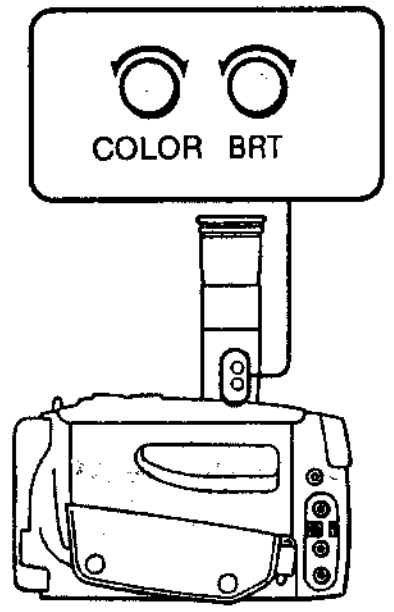

Notes and Precautions

Notes on Video Head Cleaning

(X-3)

To ensure clear picture, clean the video heads periodically.
When playback pictures are noisy or hardly visible, the video heads may be contaminated.
[a] Slight contamination
[b] Critical contamination
In such cases,
1 Clean the video heads with the Sony V8-25CLH cleaning cassette (not supplied), referring to its instructions.
2 After cleaning, check if the picture is clear by recording or playing back with an ordinary tape.
3 If the picture is still noisy, repeat cleaning. (Do not repeat cleaning more than 5 times.)

Caution
Do not use a commercially availabale wet-type cleaning cassette. It may damage the video heads.

Note
If the V8-25CLH cleaning cassette is not available in your area, consult your Sony service facility.

Removing Dust from inside the Viewfinder

(X-4)

1 **While pressing down the hook (❶), slide the viewfinder barrel in the direction of the arrow (❷) and remove it from the viewfinder.**

2 **Remove dust using the blower.**
[a] Blower brush

Adjustment of Picture Quality

(X-5)

You do not need to adjust the colour and brightness of the picture displayed on the viewfinder screen in everyday operation.
If you want to change it, turn the screws on the viewfinder slowly using the phillips screwdriver (not supplied).

	Turn clockwise	**Turn counterclockwise**
COLOR	More colour intensity	Less colour intensity
BRT (brightness)	More brightness	Less brightness

(Y-1)

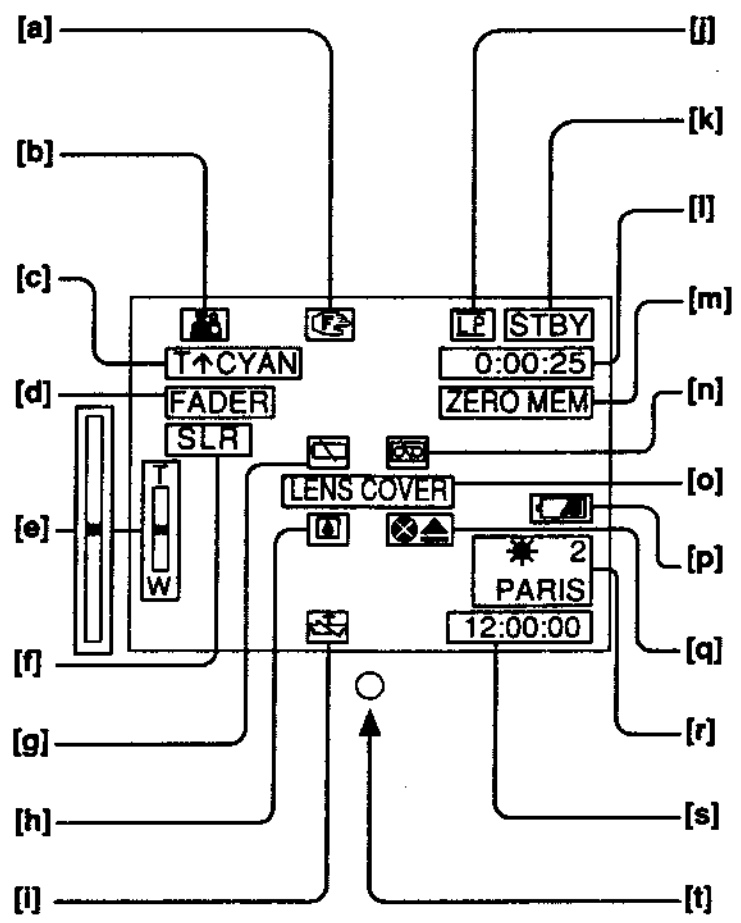
[a]
[b]
[c]
[d]
[e]
[f]
[g]
[h]
[i]
[j]
[k]
[l]
[m]
[n]
[o]
[p]
[q]
[r]
[s]
[t]
T↑CYAN
FADER
SLR
LP
STBY
0:00:25
ZERO MEM
LENS COVER
T
W
2
PARIS
12:00:00

Indicators inside the Viewfinder and in the Display Window

Inside the Viewfinder

(Y-1)

[a] Manual focusing

[b] Setting of PROGRAM AE mode

[c] Title mode

[d] FADER is pressed.

[e] POWER zoom indicator/Exposure indicator

[f] Digital picture indicator

[g] "Replace battery."

[h] "Moisture has condensed."

[i] "Replace lithium battery."

[j] Recording/Playback mode (LP/SP)

[k] Tape transport and camera recording mode

[l] Tape counter

[m]ZERO MEM is pressed.

[n] "Exchange tape or no cassette inside."

[o] The lens cover is closed.

[p] Remaining capacity of battery

[q] "Clean video heads (⊗)" or "trouble has occurred (⏏)".

[r] World clock indicator

[s] Date or time

[t] Lights up during recording.
When flashing: "Replace battery."

(Y-2)

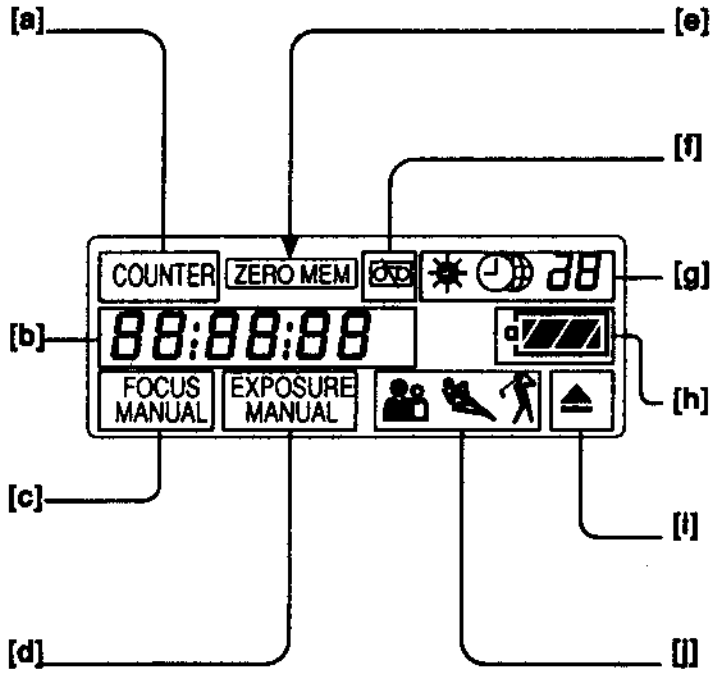
[a]
[b]
[c]
[d]
[e]
[f]
[g]
[h]
[i]
[j]
COUNTER
ZERO MEM
88:88:88
FOCUS MANUAL
EXPOSURE MANUAL

Indicators inside the Viewfinder and in the Display Window

Display Window

(Y-2)

[a] Tape counter indicator

[b] Date, time, or tape counter

[c] Manual focusing

[d] Adjusting exposure manually

[e] ZERO MEM is pressed.

[f] "Exchange tape or no cassette inside."

[g] World clock indicator

[h] Remaining capacity of a battery

[i] "Trouble has occurred."

[j] Program AE setting

SECTION 2
DISASSEMBLY

2-11. REMOVAL OF EVF ASSEMBLY (CL-28 BOARD)

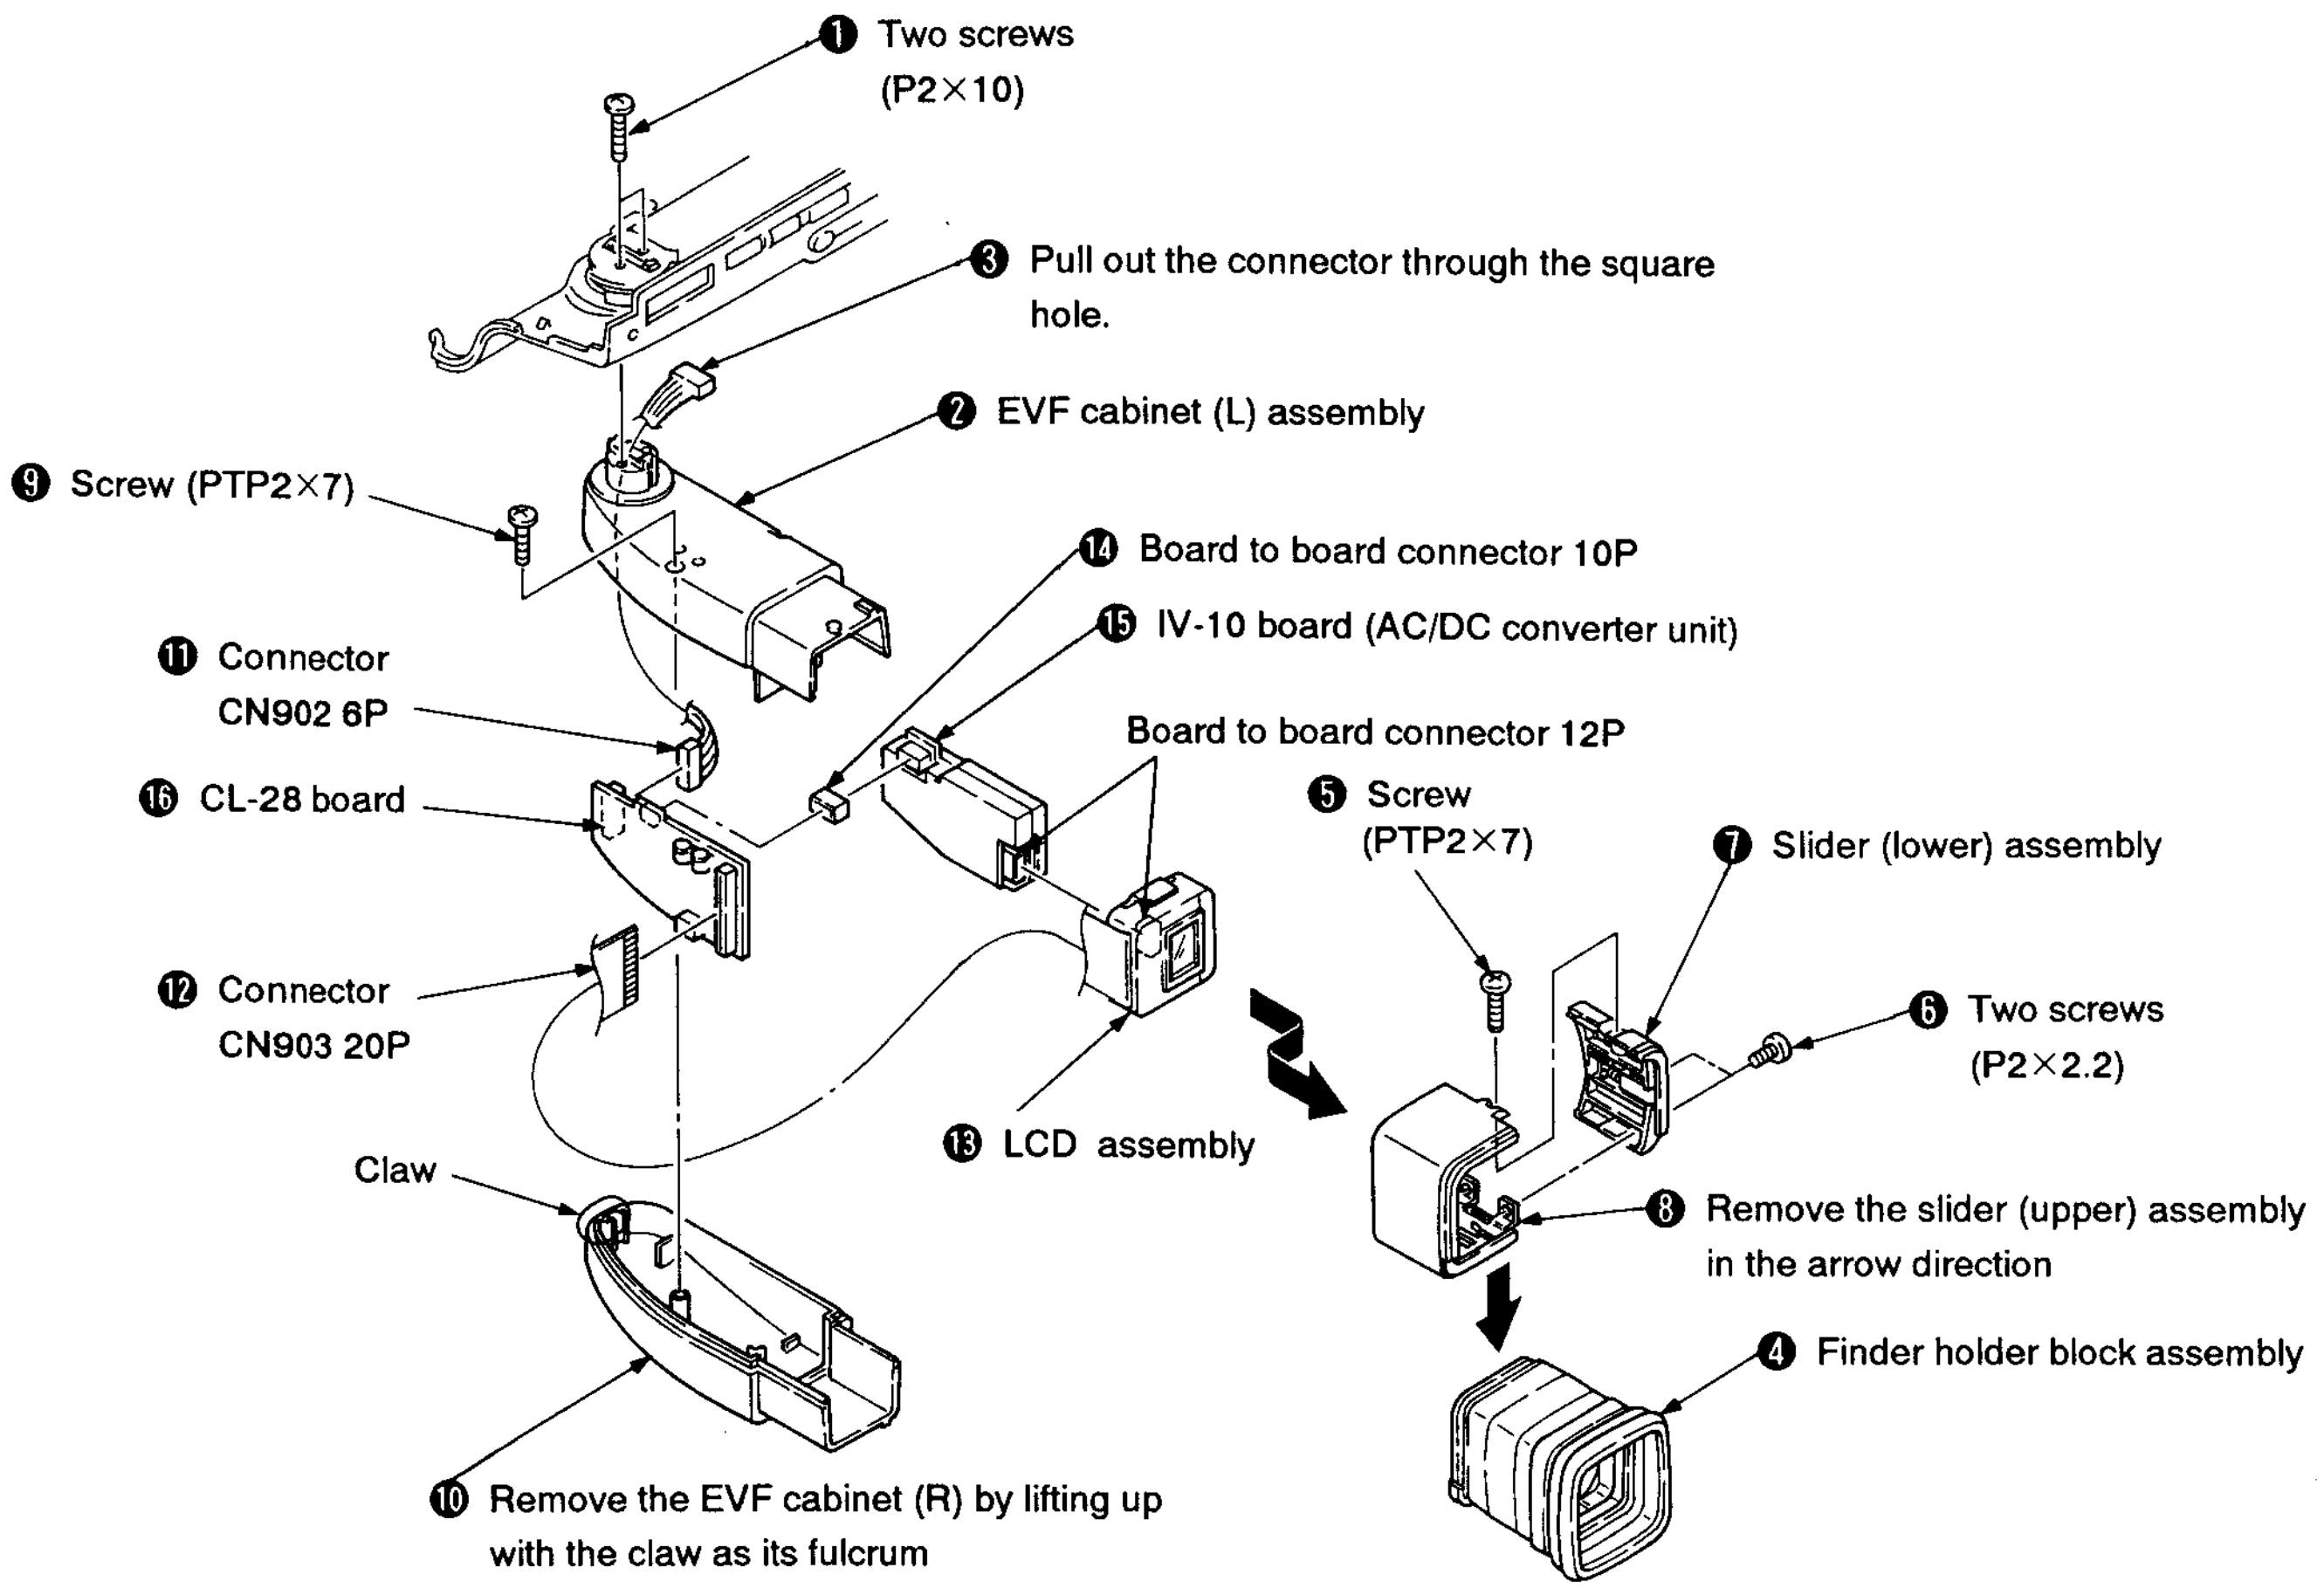
① Two screws
(P2×10)
③ Pull out the connector through the square hole.
② EVF cabinet (L) assembly
⑨ Screw (PTP2×7)
⑭ Board to board connector 10P
⑮ IV-10 board (AC/DC converter unit)
⑪ Connector
CN902 6P
Board to board connector 12P
⑯ CL-28 board
⑤ Screw
(PTP2×7)
⑦ Slider (lower) assembly
⑫ Connector
CN903 20P
⑥ Two screws
(P2×2.2)
⑬ LCD assembly
Claw
⑧ Remove the slider (upper) assembly in the arrow direction
④ Finder holder block assembly
⑩ Remove the EVF cabinet (R) by lifting up with the claw as its fulcrum

SECTION 3
DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

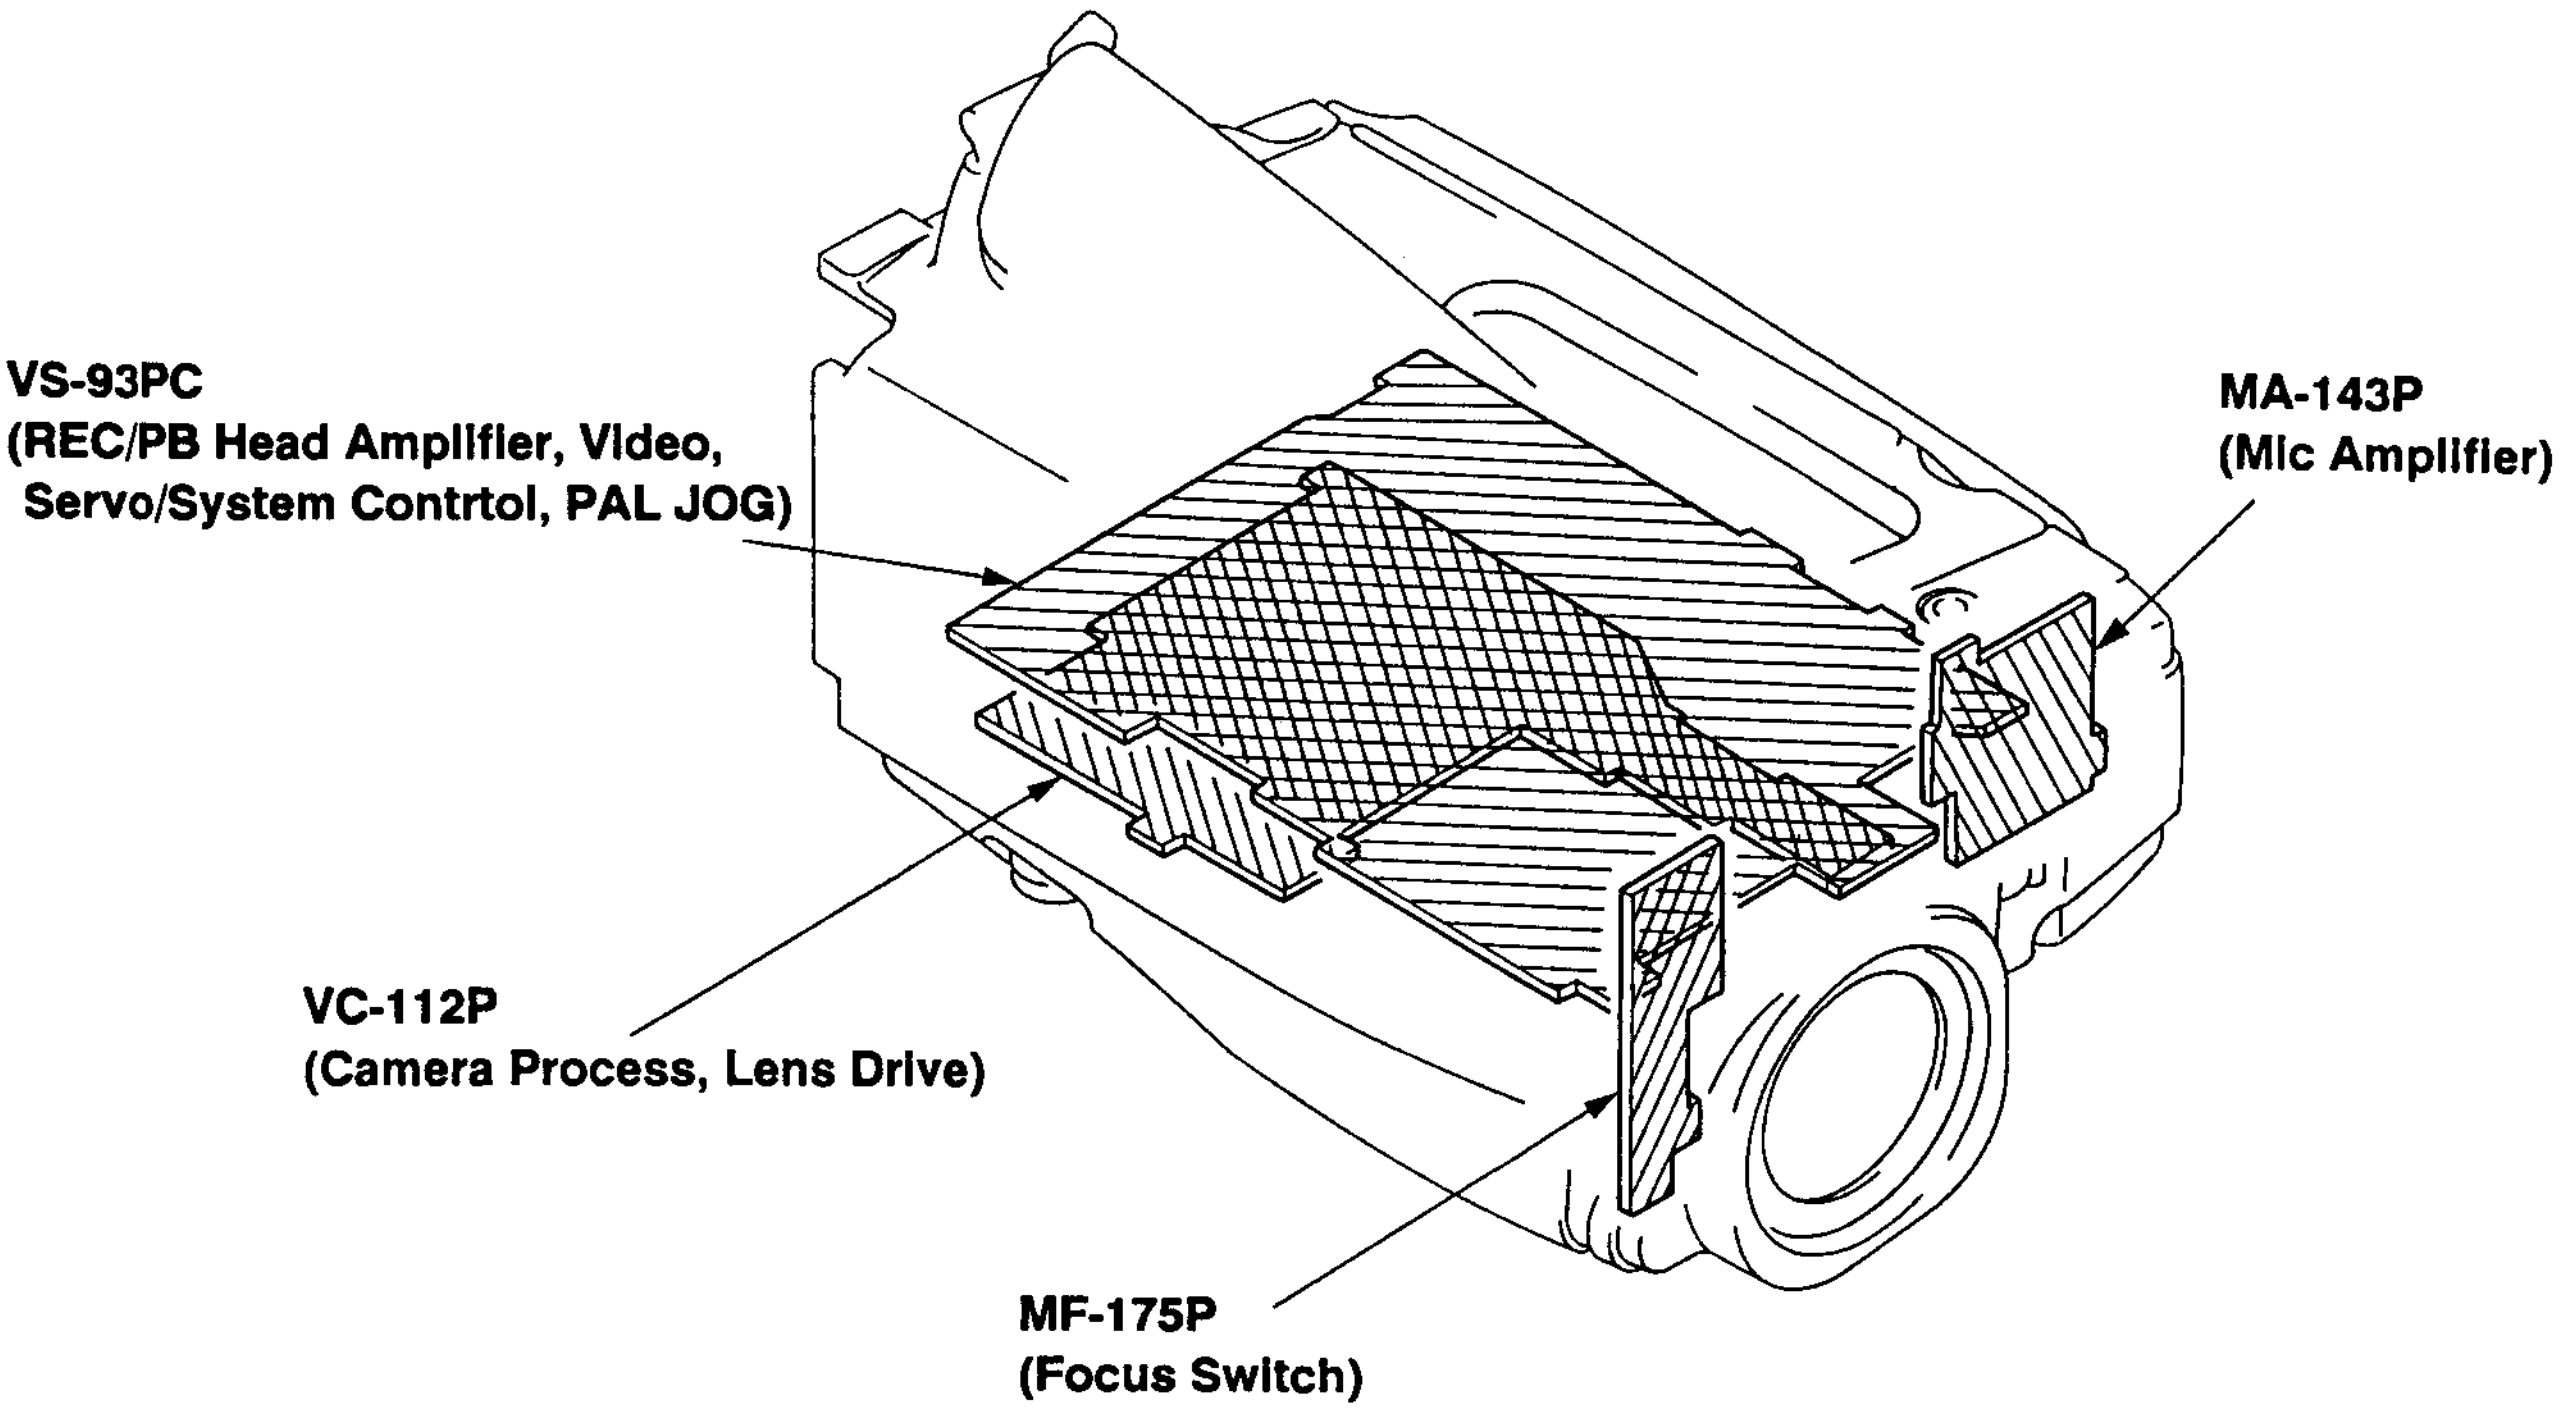
VS-93PC
(REC/PB Head Amplifier, Video,
Servo/System Contrtol, PAL JOG)
MA-143P
(Mic Amplifier)
VC-112P
(Camera Process, Lens Drive)
MF-175P
(Focus Switch)

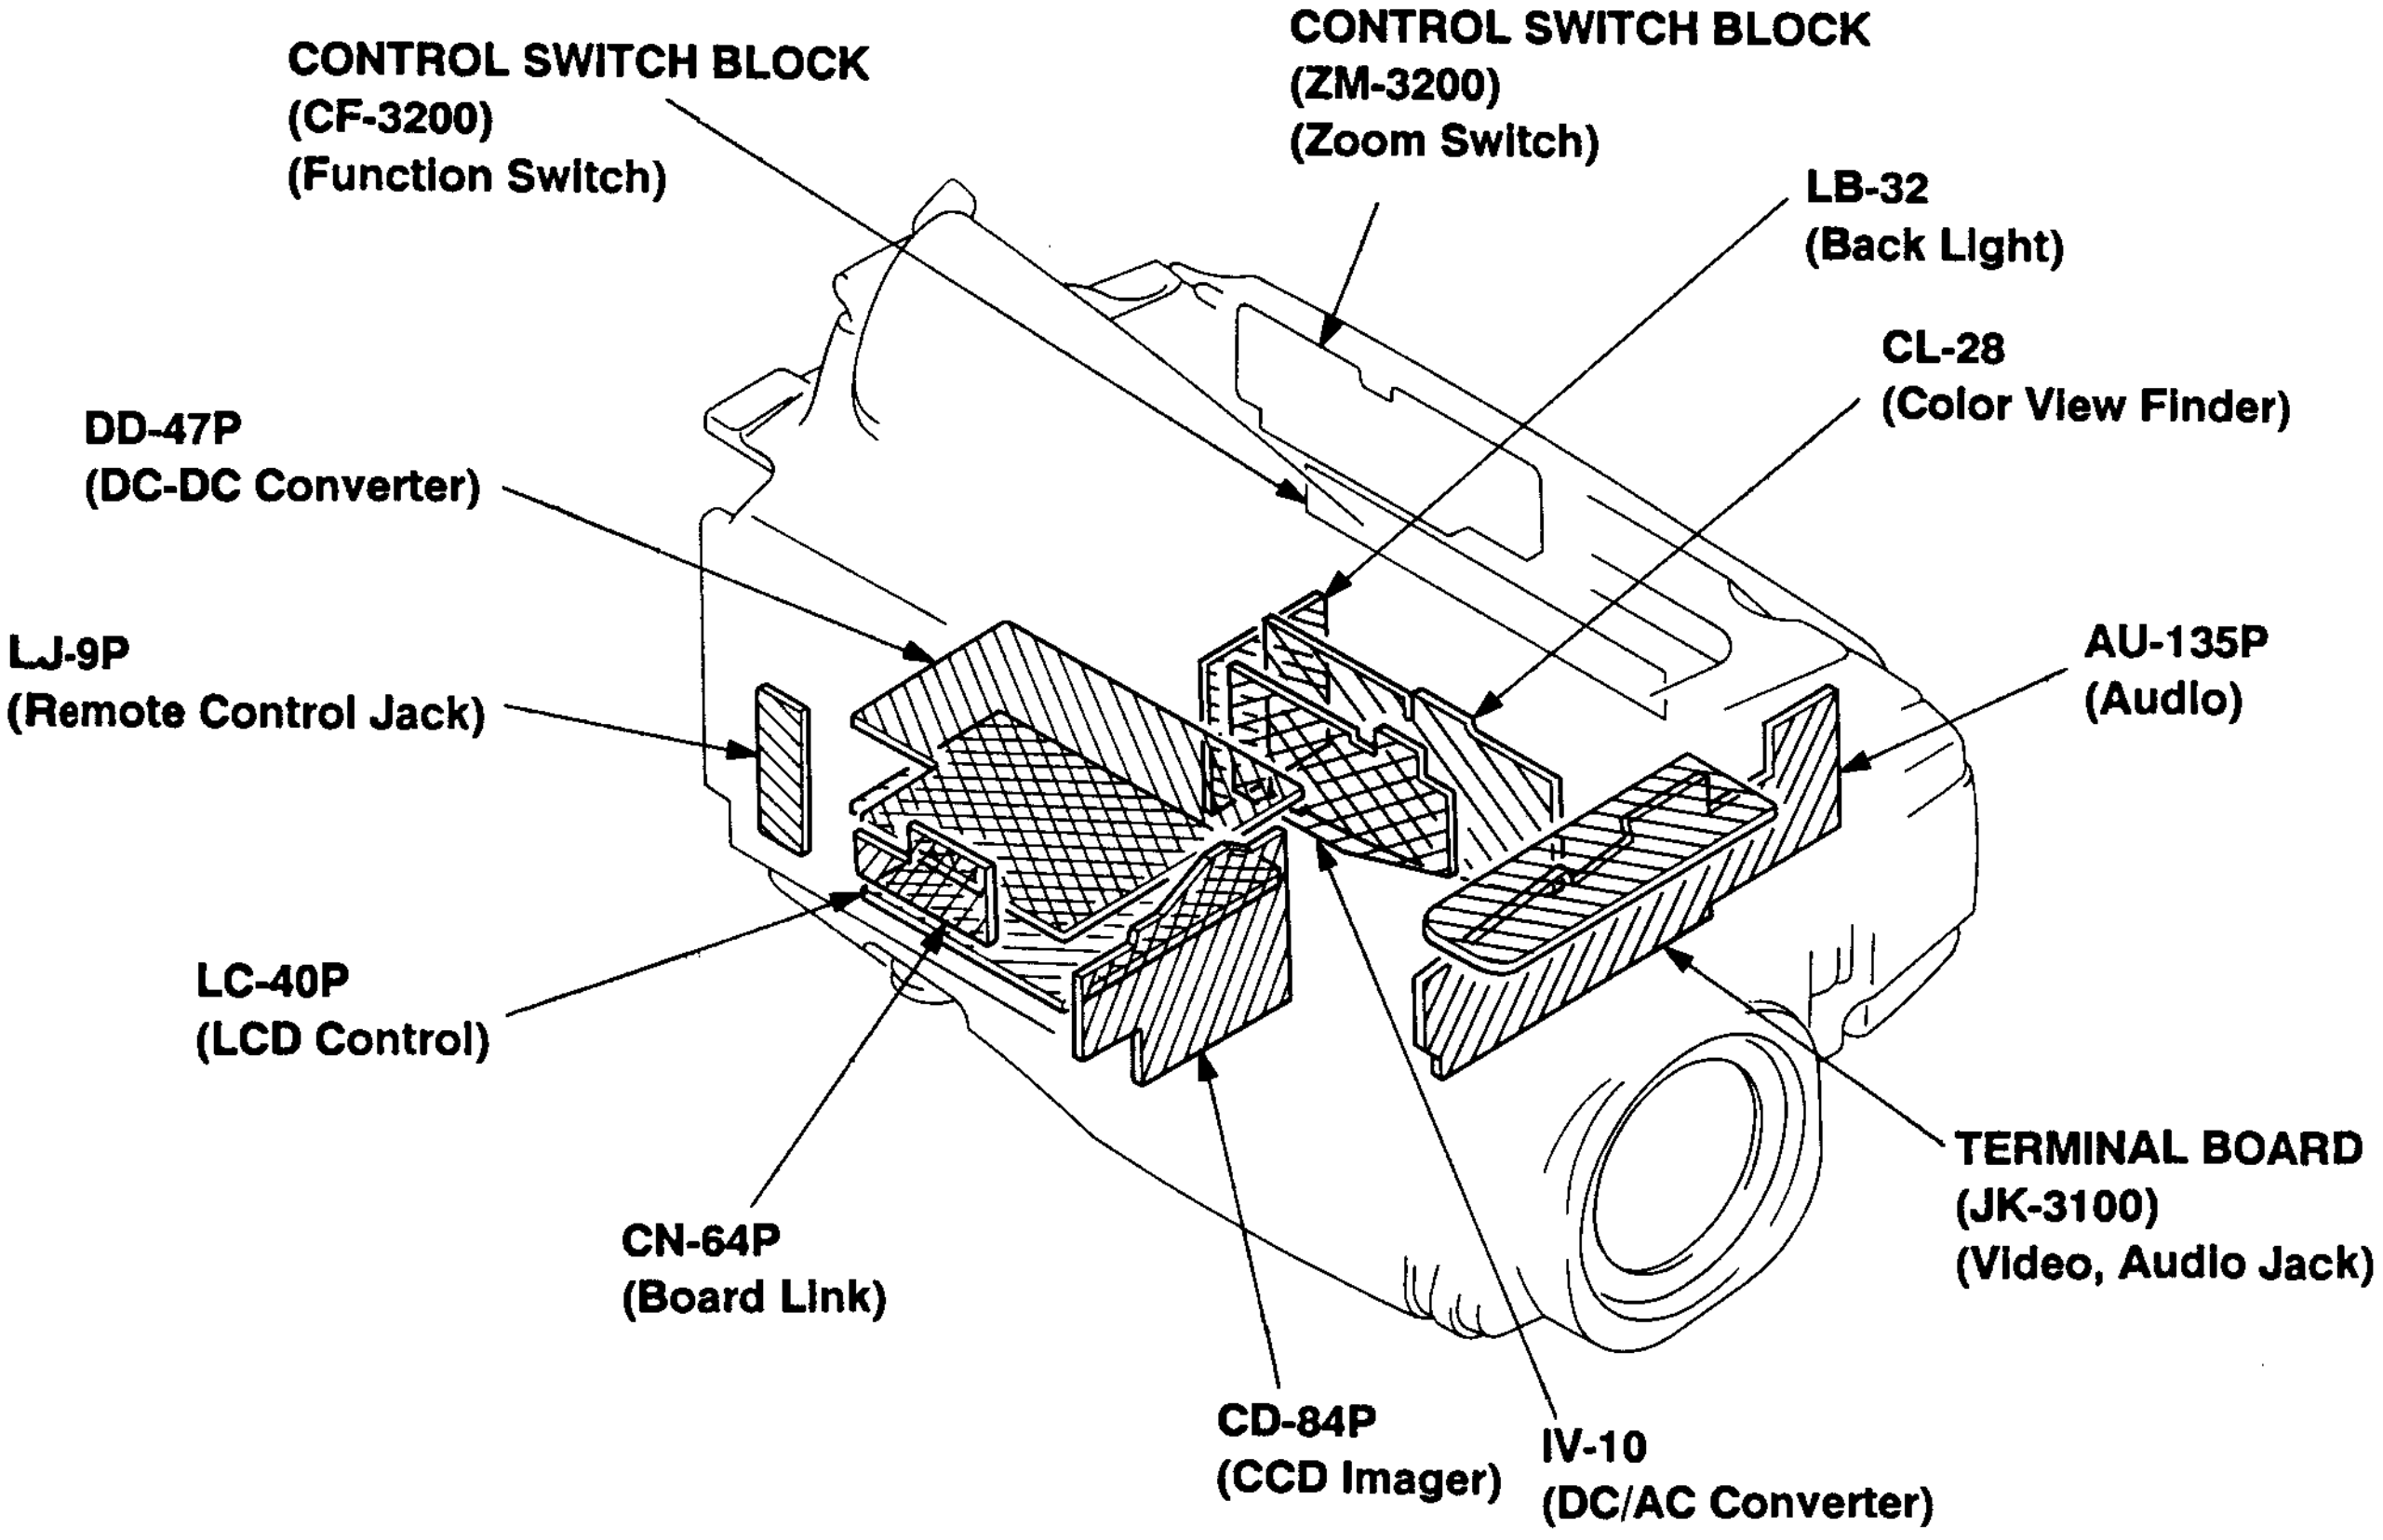
CONTROL SWITCH BLOCK
(CF-3200)
(Function Switch)
CONTROL SWITCH BLOCK
(ZM-3200)
(Zoom Switch)
LB-32
(Back Light)
CL-28
(Color View Finder)
DD-47P
(DC-DC Converter)
LJ-9P
(Remote Control Jack)
AU-135P
(Audio)
LC-40P
(LCD Control)
TERMINAL BOARD
(JK-3100)
(Video, Audio Jack)
CN-64P
(Board Link)
CD-84P
(CCD Imager)
IV-10
(DC/AC Converter)

3-2. OVERALL BLOCK DIAGRAM

< > : The pages above correspond to CCD-TR305E SERVICE MANUAL,

( ) : Pages of CCD-TR505E.

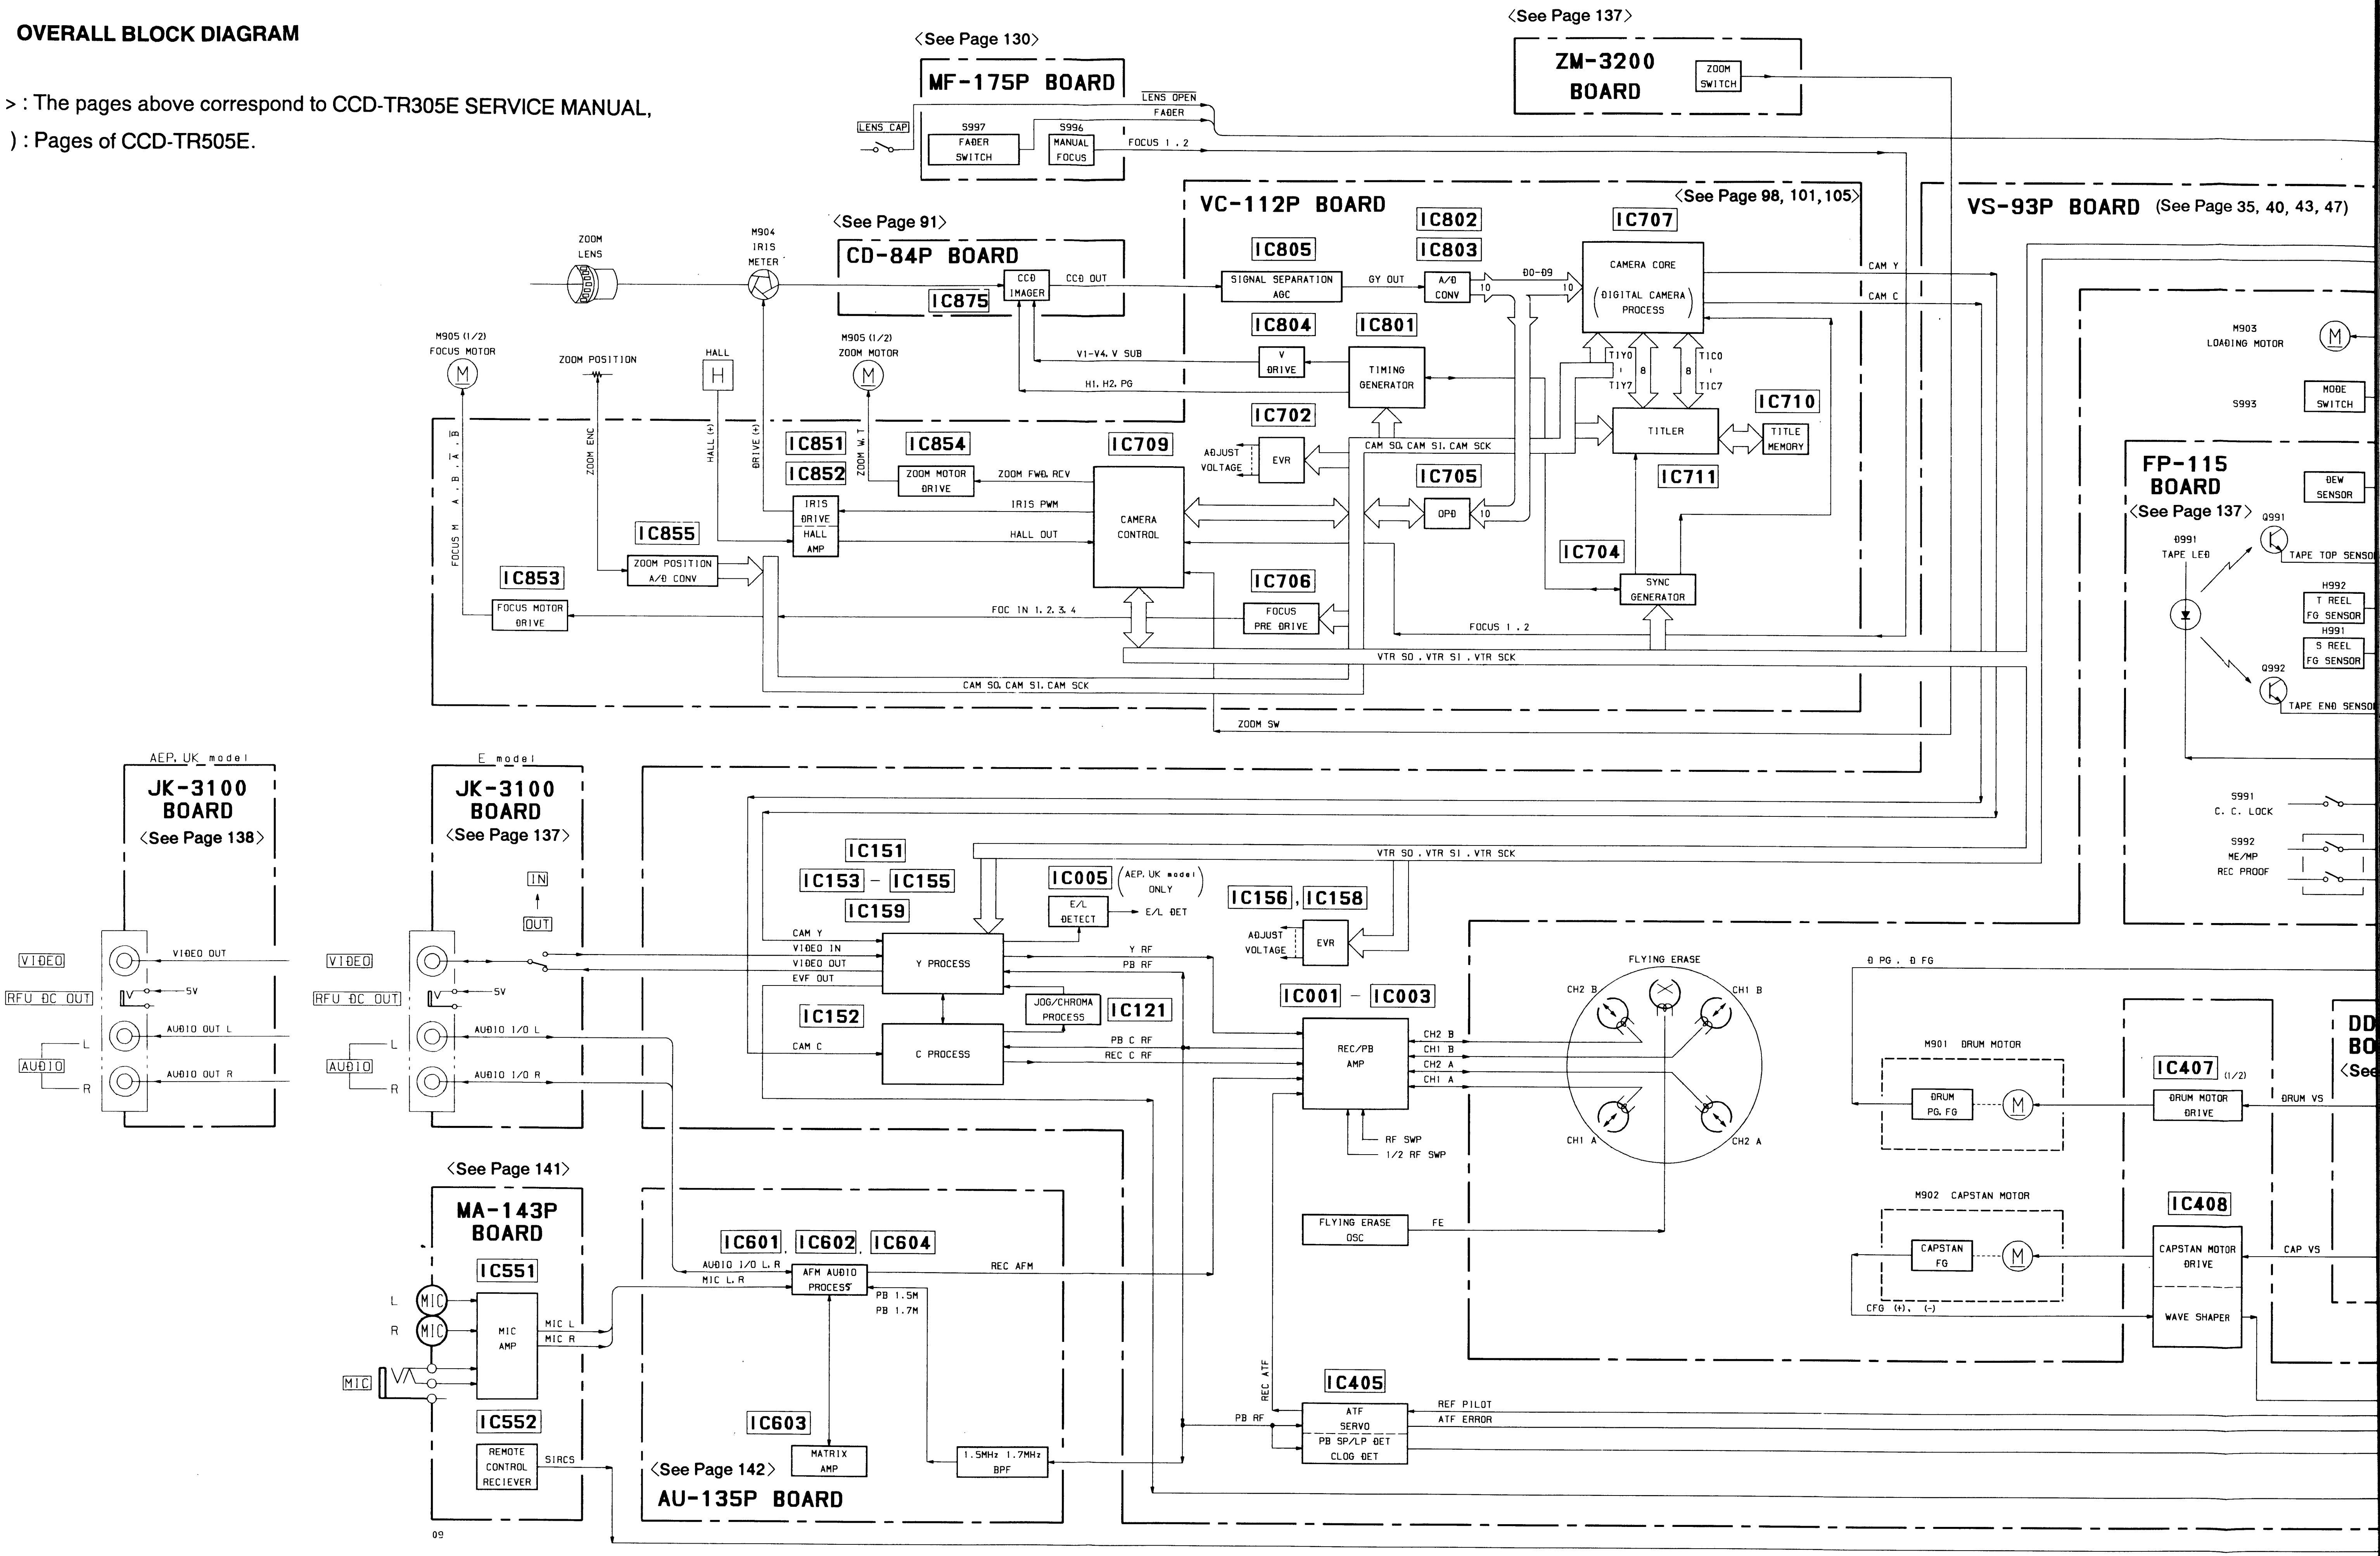

〈See Page 130〉
MF-175P BOARD
LENS CAP
S997 FADER SWITCH
S996 MANUAL FOCUS
LENS OPEN
FADER
FOCUS 1 . 2
〈See Page 137〉
ZM-3200 BOARD
ZOOM SWITCH
VC-112P BOARD
〈See Page 98, 101, 105〉
VS-93P BOARD (See Page 35, 40, 43, 47)
〈See Page 91〉
CD-84P BOARD
ZOOM LENS
M904 IRIS METER
CCD IMAGER
CCD OUT
IC875
IC805
SIGNAL SEPARATION AGC
GY OUT
IC802
IC803
A/D CONV
D0-D9
IC707
CAMERA CORE (DIGITAL CAMERA PROCESS)
CAM Y
CAM C
IC804
V DRIVE
IC801
TIMING GENERATOR
V1-V4, V SUB
H1, H2, PG
TIY0 - TIY7
TIC0 - TIC7
TITLER
IC710
TITLE MEMORY
IC702
ADJUST VOLTAGE
EVR
CAM SO, CAM SI, CAM SCK
IC705
OPD
IC711
IC704
SYNC GENERATOR
IC706
FOCUS PRE DRIVE
FOCUS 1 . 2
VTR SO . VTR SI . VTR SCK
M905 (1/2) FOCUS MOTOR
ZOOM POSITION
HALL
M905 (1/2) ZOOM MOTOR
FOCUS M A, B, Ā, B̄
ZOOM ENC
HALL (+)
DRIVE (+)
ZOOM W, T
IC851
IC852
IC854
ZOOM MOTOR DRIVE
ZOOM FWD, RCV
IC709
IRIS DRIVE
HALL AMP
IRIS PWM
HALL OUT
CAMERA CONTROL
IC855
ZOOM POSITION A/D CONV
IC853
FOCUS MOTOR DRIVE
FOC IN 1, 2, 3, 4
CAM SO, CAM SI, CAM SCK
ZOOM SW
M903 LOADING MOTOR
S993 MODE SWITCH
FP-115 BOARD
〈See Page 137〉
DEW SENSOR
Q991
D991 TAPE LED
TAPE TOP SENSOR
H992 T REEL FG SENSOR
H991 S REEL FG SENSOR
Q992
TAPE END SENSOR
S991 C. C. LOCK
S992 ME/MP REC PROOF
AEP, UK model
JK-3100 BOARD
〈See Page 138〉
E model
JK-3100 BOARD
〈See Page 137〉
IN
OUT
VIDEO
RFU DC OUT
AUDIO
L
R
VIDEO OUT
5V
AUDIO OUT L
AUDIO OUT R
AUDIO I/O L
AUDIO I/O R
IC151
IC153 - IC155
IC159
IC005 (AEP, UK model ONLY)
E/L DETECT
E/L DET
CAM Y
VIDEO IN
VIDEO OUT
EVF OUT
Y PROCESS
Y RF
PB RF
IC152
JOG/CHROMA PROCESS
IC121
CAM C
C PROCESS
PB C RF
REC C RF
VTR SO . VTR SI . VTR SCK
IC156, IC158
ADJUST VOLTAGE
EVR
IC001 - IC003
REC/PB AMP
CH2 B
CH1 B
CH2 A
CH1 A
RF SWP
1/2 RF SWP
FLYING ERASE
D PG , D FG
M901 DRUM MOTOR
DRUM PG, FG
IC407 (1/2)
DRUM MOTOR DRIVE
DRUM VS
DD BO (See
M902 CAPSTAN MOTOR
CAPSTAN FG
CFG (+), (-)
IC408
CAPSTAN MOTOR DRIVE
WAVE SHAPER
CAP VS
FLYING ERASE OSC
FE
〈See Page 141〉
MA-143P BOARD
IC551
MIC AMP
MIC L
MIC R
MIC
IC552
REMOTE CONTROL RECIEVER
SIRCS
IC601, IC602, IC604
AUDIO I/O L, R
MIC L, R
AFM AUDIO PROCESS
REC AFM
PB 1.5M
PB 1.7M
IC603
MATRIX AMP
1.5MHz 1.7MHz BPF
〈See Page 142〉
AU-135P BOARD
REC ATF
PB RF
IC405
ATF SERVO
PB SP/LP DET
CLOG DET
REF PILOT
ATF ERROR
09

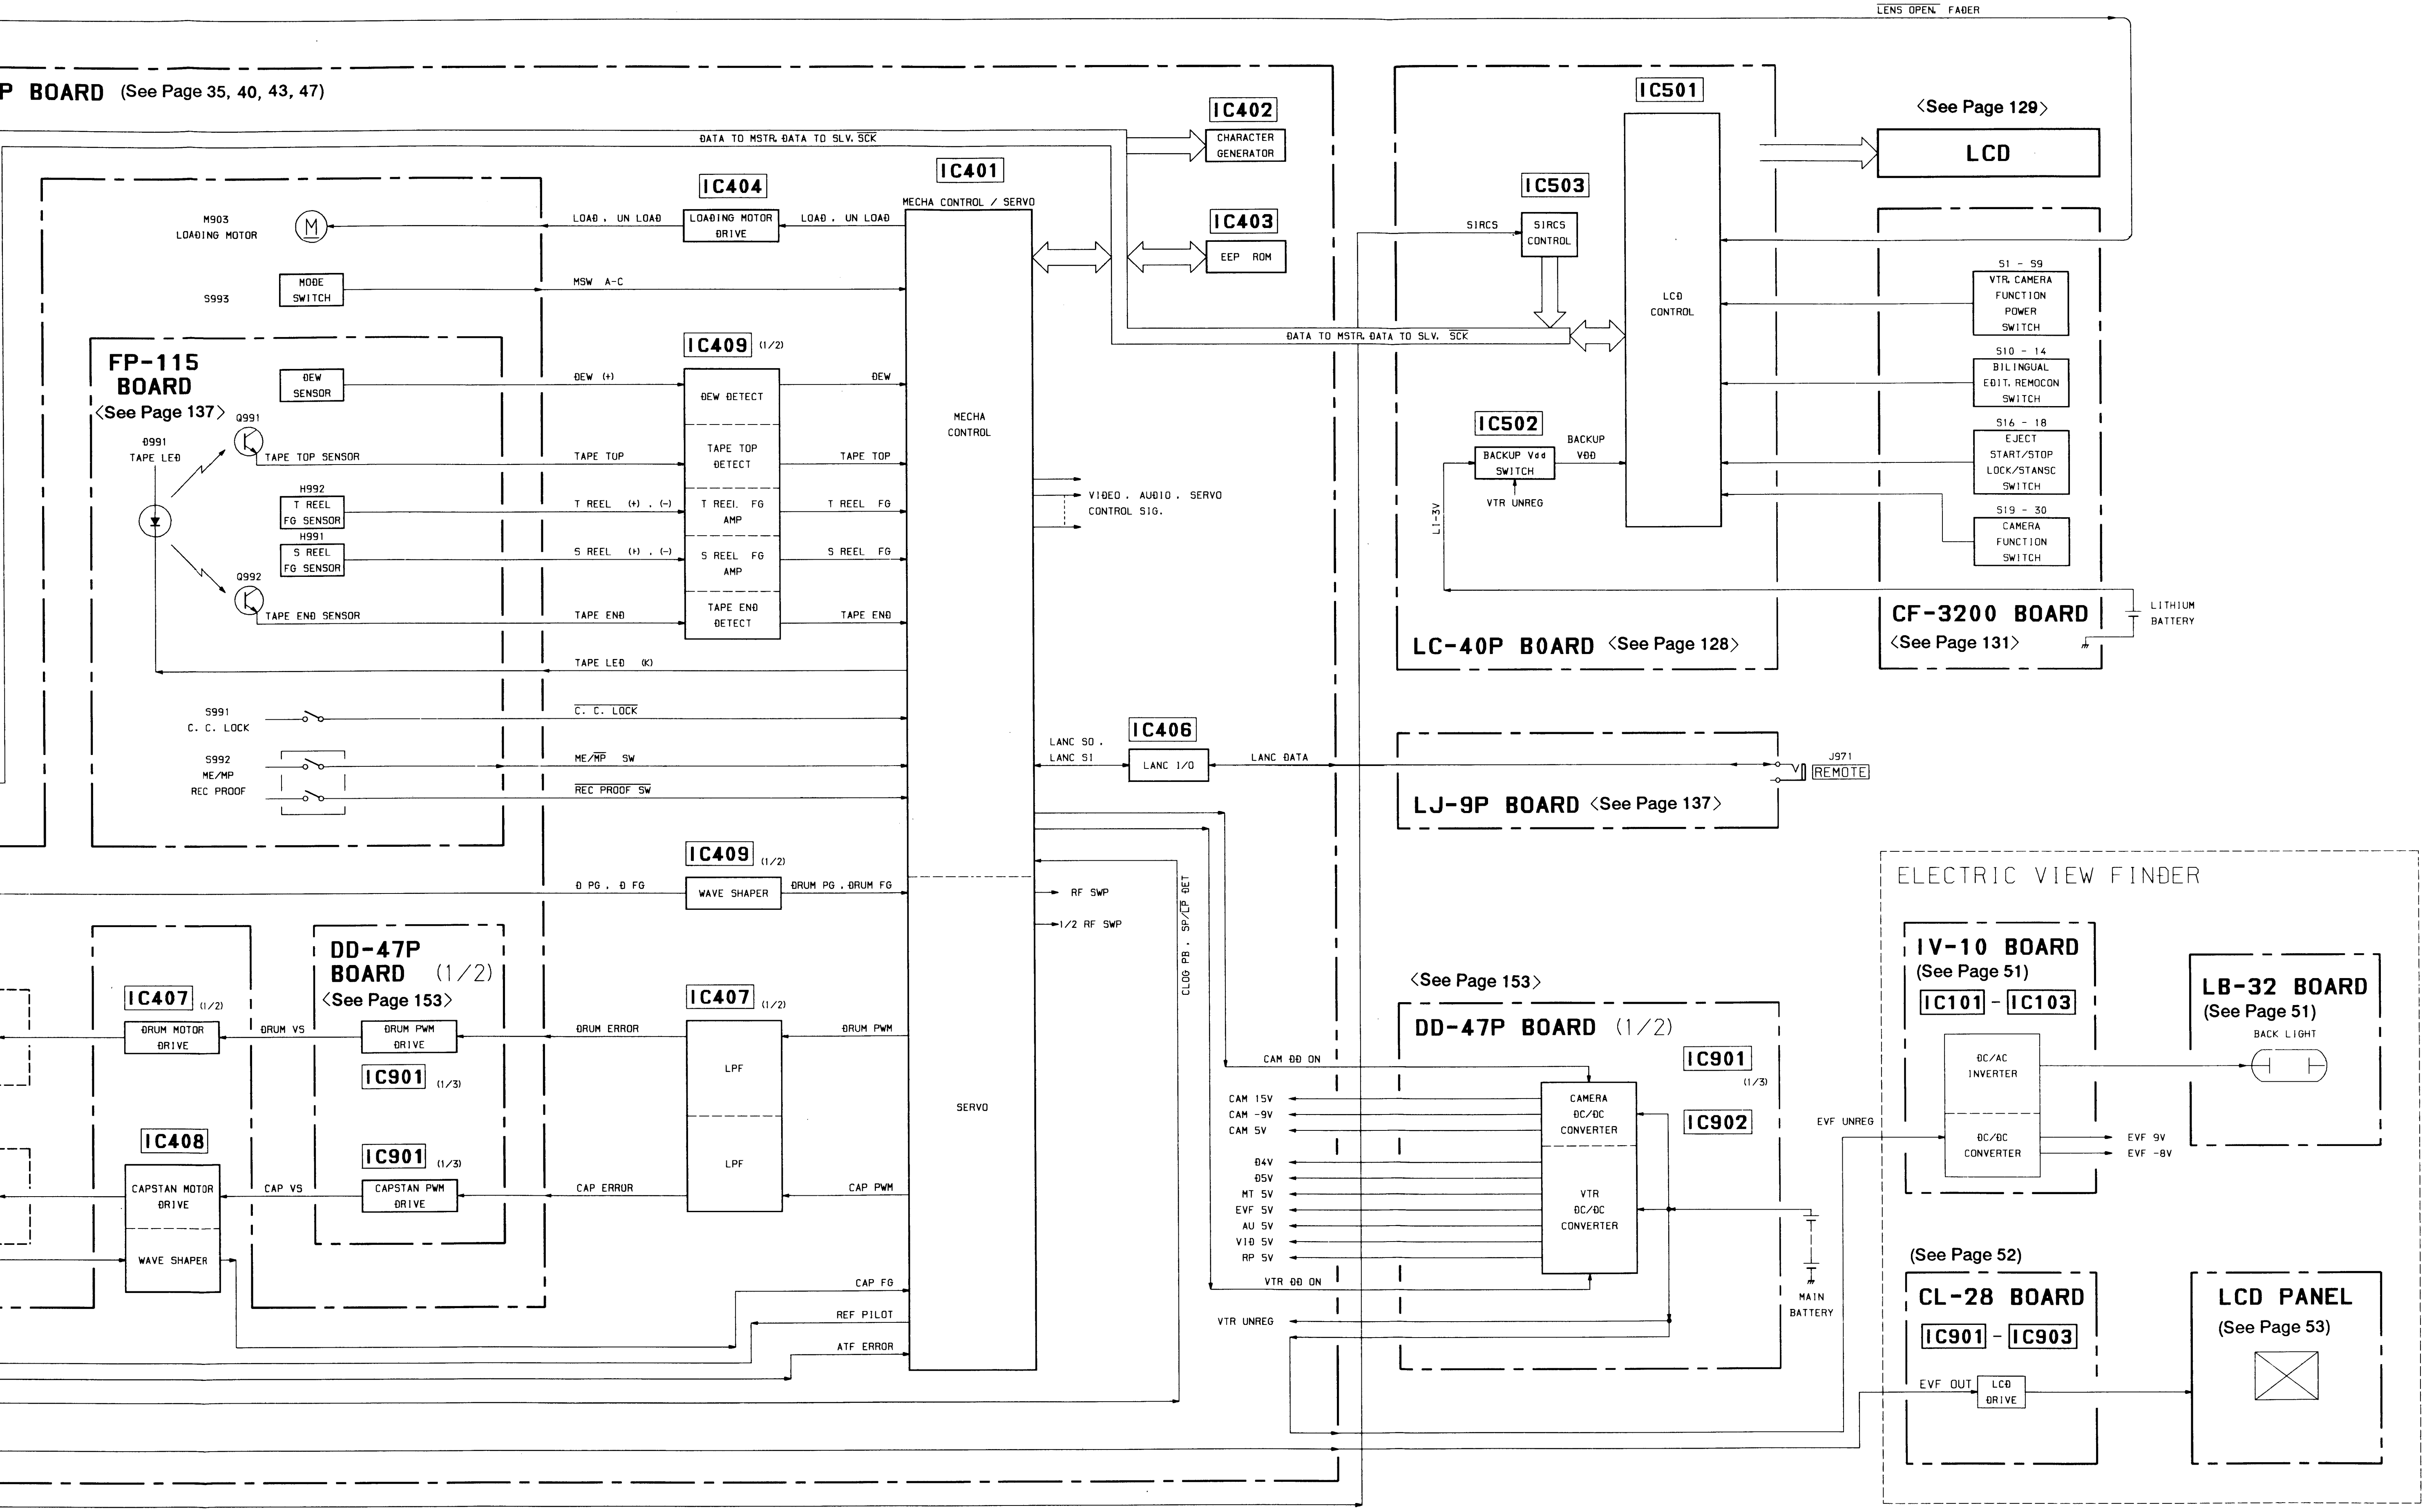
P BOARD (See Page 35, 40, 43, 47)
LENS OPEN. FADER
DATA TO MSTR. DATA TO SLV. SCK
IC402
CHARACTER GENERATOR
IC403
EEP ROM
IC401
MECHA CONTROL / SERVO
MECHA CONTROL
SERVO
IC404
LOADING MOTOR DRIVE
LOAD. UN LOAD
M903
LOADING MOTOR
S993
MODE SWITCH
MSW A-C
FP-115 BOARD
<See Page 137>
DEW SENSOR
DEW (+)
IC409 (1/2)
DEW DETECT
DEW
Q991
D991
TAPE LED
TAPE TOP SENSOR
TAPE TOP
TAPE TOP DETECT
H992
T REEL FG SENSOR
T REEL (+). (-)
T REEL FG AMP
T REEL FG
H991
S REEL FG SENSOR
S REEL (+). (-)
S REEL FG AMP
S REEL FG
Q992
TAPE END SENSOR
TAPE END
TAPE END DETECT
TAPE LED (K)
S991
C. C. LOCK
S992
ME/MP
REC PROOF
ME/MP SW
REC PROOF SW
VIDEO. AUDIO. SERVO CONTROL SIG.
IC406
LANC I/O
LANC SO. LANC SI
LANC DATA
IC409 (1/2)
WAVE SHAPER
D PG. D FG
DRUM PG. DRUM FG
RF SWP
1/2 RF SWP
CLOG PB. SP/LP DET
DD-47P BOARD (1/2)
<See Page 153>
IC407 (1/2)
DRUM MOTOR DRIVE
DRUM VS
DRUM PWM DRIVE
IC901 (1/3)
DRUM ERROR
IC407 (1/2)
LPF
LPF
DRUM PWM
IC408
CAPSTAN MOTOR DRIVE
WAVE SHAPER
CAP VS
IC901 (1/3)
CAPSTAN PWM DRIVE
CAP ERROR
CAP PWM
CAP FG
REF PILOT
ATF ERROR
IC501
LCD CONTROL
IC503
SIRCS CONTROL
SIRCS
DATA TO MSTR. DATA TO SLV. SCK
IC502
BACKUP Vdd SWITCH
BACKUP VDD
VTR UNREG
LI-3V
LC-40P BOARD <See Page 128>
<See Page 129>
LCD
S1 - S9
VTR, CAMERA FUNCTION POWER SWITCH
S10 - 14
BILINGUAL EDIT, REMOCON SWITCH
S16 - 18
EJECT START/STOP LOCK/STANSC SWITCH
S19 - 30
CAMERA FUNCTION SWITCH
CF-3200 BOARD
<See Page 131>
LITHIUM BATTERY
LJ-9P BOARD <See Page 137>
J971
REMOTE
<See Page 153>
DD-47P BOARD (1/2)
IC901
(1/3)
IC902
CAM DD ON
CAM 15V
CAM -9V
CAM 5V
CAMERA DC/DC CONVERTER
D4V
D5V
MT 5V
EVF 5V
AU 5V
VID 5V
RP 5V
VTR DC/DC CONVERTER
VTR DD ON
VTR UNREG
MAIN BATTERY
EVF UNREG
ELECTRIC VIEW FINDER
IV-10 BOARD
(See Page 51)
IC101 - IC103
DC/AC INVERTER
DC/DC CONVERTER
EVF 9V
EVF -8V
LB-32 BOARD
(See Page 51)
BACK LIGHT
(See Page 52)
CL-28 BOARD
IC901 - IC903
EVF OUT
LCD DRIVE
LCD PANEL
(See Page 53)

3-6. VIDEO (1) BLOCK DIAGRAM

< >: The pages above correspond to CCD-TR305E SERVICE MANUAL, ( ): Pages of CCD-TR505E.

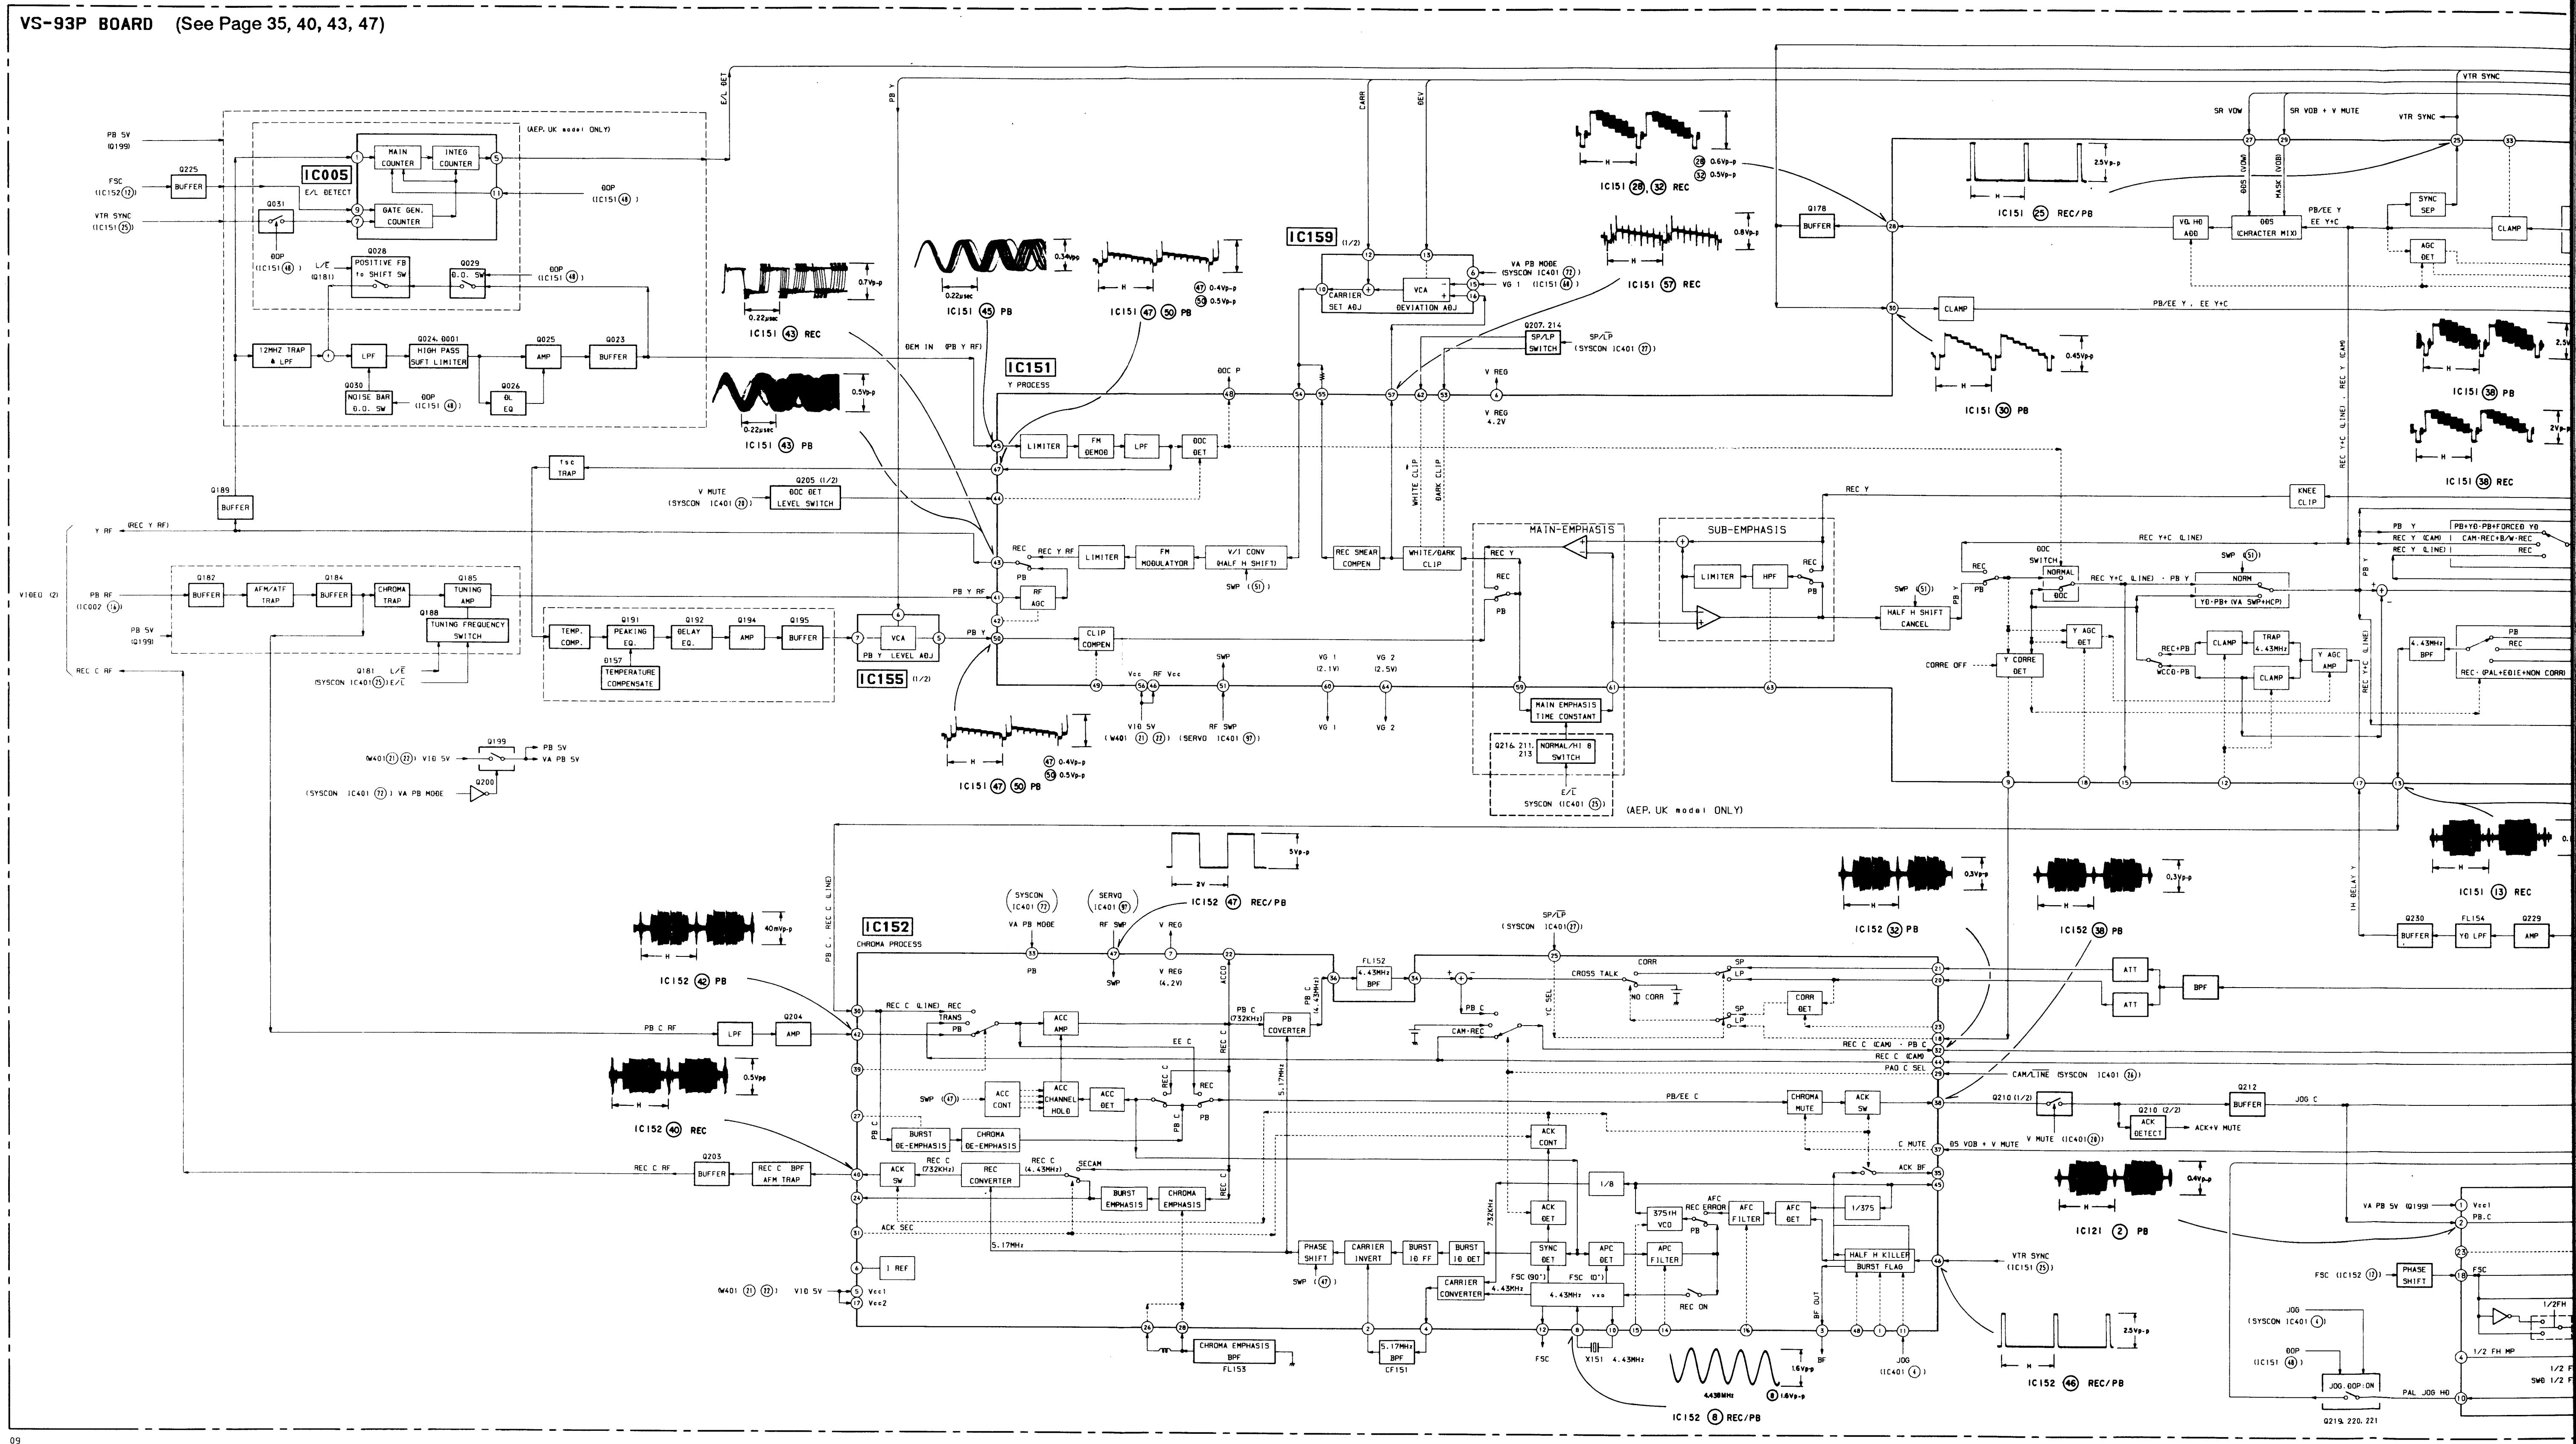
VS-93P BOARD (See Page 35, 40, 43, 47)

PB 5V (Q199)
Q225 BUFFER
FSC (IC152 ⑫)
VTR SYNC (IC151 ㉕)
(AEP, UK model ONLY)
IC005 E/L DETECT
MAIN COUNTER
INTEG COUNTER
GATE GEN. COUNTER
Q031
DOP (IC151 ㊽)
Q028 POSITIVE FB to SHIFT SW
L/E (Q181)
Q029 D.O. SW
12MHZ TRAP & LPF
LPF
Q024, Q001 HIGH PASS SOFT LIMITER
Q025 AMP
Q023 BUFFER
Q030 NOISE BAR D.O. SW
Q026 DL EQ
E/L DET
PB Y
0.7Vp-p
0.22μsec
IC151 ㊸ REC
0.5Vp-p
IC151 ㊸ PB
fsc TRAP
V MUTE (SYSCON IC401 ⑳)
Q205 (1/2) DOC DET LEVEL SWITCH
Q189 BUFFER
Y RF (REC Y RF)
VIDEO (2)
PB RF (IC002 ⑯)
PB 5V (Q199)
REC C RF
Q182 BUFFER
AFM/ATF TRAP
Q184 BUFFER
CHROMA TRAP
Q185 TUNING AMP
Q188 TUNING FREQUENCY SWITCH
Q181 L/E
(SYSCON IC401 ㉕) E/L
TEMP. COMP.
Q191 PEAKING EQ.
Q192 DELAY EQ.
Q194 AMP
Q195 BUFFER
Q157 TEMPERATURE COMPENSATE
VCA
PB Y LEVEL ADJ
IC155 (1/2)
Q199
(W401 ㉑ ㉒) VID 5V
PB 5V
VA PB 5V
Q200
(SYSCON IC401 (72)) VA PB MODE
0.34Vpp
IC151 ㊺ PB
IC151 ㊼ ㊿ PB
㊼ 0.4Vp-p
㊿ 0.5Vp-p
DEM IN (PB Y RF)
IC151 Y PROCESS
LIMITER
FM DEMOD
DOC DET
DOC P
REC Y RF
FM MODULATYOR
V/I CONV (HALF H SHIFT)
SWP ((51))
PB Y RF
RF AGC
CLIP COMPEN
Vcc
RF Vcc
SWP
VG 1 (2.1V)
VG 2 (2.5V)
VID 5V (W401 ㉑ ㉒)
RF SWP (SERVO IC401 (97))
IC159 (1/2)
CARR
DEV
CARRIER SET ADJ
DEVIATION ADJ
VA PB MODE (SYSCON IC401 (72))
VG 1 (IC151 (60))
Q207, 214 SP/LP SWITCH
SP/LP (SYSCON IC401 ㉗)
V REG
V REG 4.2V
WHITE CLIP
DARK CLIP
REC SMEAR COMPEN
WHITE/DARK CLIP
MAIN-EMPHASIS
REC Y
MAIN EMPHASIS TIME CONSTANT
Q216, 211, 213 NORMAL/HI 8 SWITCH
E/L
SYSCON (IC401 ㉕)
SUB-EMPHASIS
HPF
IC151 ㉘, ㉜ REC
㉘ 0.6Vp-p
㉜ 0.5Vp-p
0.8Vp-p
IC151 (57) REC
Q178 BUFFER
IC151 ㉕ REC/PB
2.5Vp-p
SR VDW
SR VOB + V MUTE
VTR SYNC
DOS (VDW)
MASK (VOB)
VD, HD ADD
DOS (CHRACTER MIX)
PB/EE Y
EE Y+C
SYNC SEP
AGC DET
CLAMP
PB/EE Y, EE Y+C
0.45Vp-p
IC151 ㉚ PB
IC151 ㊳ PB
2Vp-p
IC151 ㊳ REC
REC Y+C (LINE), REC Y (CAM)
KNEE CLIP
REC Y+C (LINE)
DOC SWITCH
NORMAL
HALF H SHIFT CANCEL
REC Y+C (LINE) · PB Y
NORM
YD·PB+ (VA SWP+HCP)
Y AGC DET
Y CORRE DET
CORRE OFF
REC+PB
WCCD·PB
TRAP 4.43MHz
Y AGC AMP
PB Y
REC Y (CAM)
REC Y (LINE)
PB+YD·PB+FORCED YD
CAM·REC+B/W·REC
REC
4.43MHz BPF
REC· (PAL+EDIE+NON CORR)
IC151 ⑬ REC
1H DELAY Y
Q230 BUFFER
FL154 YD LPF
Q229 AMP
IC152 CHROMA PROCESS
PB C, REC C (LINE)
40mVp-p
IC152 ㊷ PB
PB C RF
LPF
Q204 AMP
0.5Vpp
IC152 ㊵ REC
Q203 BUFFER
REC C BPF AFM TRAP
(SYSCON IC401 (72)) VA PB MODE
(SERVO IC401 (97)) RF SWP
V REG (4.2V)
5Vp-p
2V
IC152 ㊼ REC/PB
ACCO
REC C (LINE) REC
TRANS
ACC AMP
PB C (732KHz)
PB COVERTER
PB C (4.43MHz)
EE C
ACC CONT
ACC CHANNEL HOLD
ACC DET
SWP (㊼)
BURST DE-EMPHASIS
CHROMA DE-EMPHASIS
ACK SW
REC C (732KHz)
REC CONVERTER
REC C (4.43MHz)
SECAM
BURST EMPHASIS
CHROMA EMPHASIS
ACK SEC
5.17MHz
I REF
(W401 ㉑ ㉒) VID 5V
Vcc1
Vcc2
CHROMA EMPHASIS BPF FL153
FL152 4.43MHz BPF
SP/LP (SYSCON IC401 ㉗)
CROSS TALK
CORR
NO CORR
SP
LP
CORR DET
YC SEL
CAM·REC
REC C (CAM) · PB C
REC C (CAM)
PAD C SEL
PB/EE C
CHROMA MUTE
ACK SW
ACK CONT
C MUTE
ACK BF
1/8
ACK DET
732KHz
PHASE SHIFT
CARRIER INVERT
BURST ID FF
BURST ID DET
SYNC DET
APC DET
375fH VCO
AFC REC ERROR
AFC FILTER
AFC DET
1/375
APC FILTER
CARRIER CONVERTER
FSC (90°)
FSC (0°)
4.43MHz vxo
REC ON
HALF H KILLER
BURST FLAG
BF OUT
5.17MHz BPF CF151
FSC
X151 4.43MHz
BF
JOG (IC401 ④)
1.6Vp-p
4.438MHz
⑧ 1.6Vp-p
IC152 ⑧ REC/PB
0.3Vp-p
IC152 ㉜ PB
IC152 ㊳ PB
ATT
BPF
CAM/LINE (SYSCON IC401 ㉖)
Q210 (1/2)
V MUTE (IC401 ⑳)
Q210 (2/2) ACK DETECT
ACK+V MUTE
Q212 BUFFER
JOG C
DS VOB + V MUTE
VTR SYNC (IC151 ㉕)
0.4Vp-p
IC121 ② PB
IC152 ㊻ REC/PB
VA PB 5V (Q199)
PB.C
FSC (IC152 ⑫)
PHASE SHIFT
1/2FH
1/2 FH MP
JOG (SYSCON IC401 ④)
DOP (IC151 ㊽)
JOG. DOP: ON
PAL JOG HD
Q219, 220, 221

09

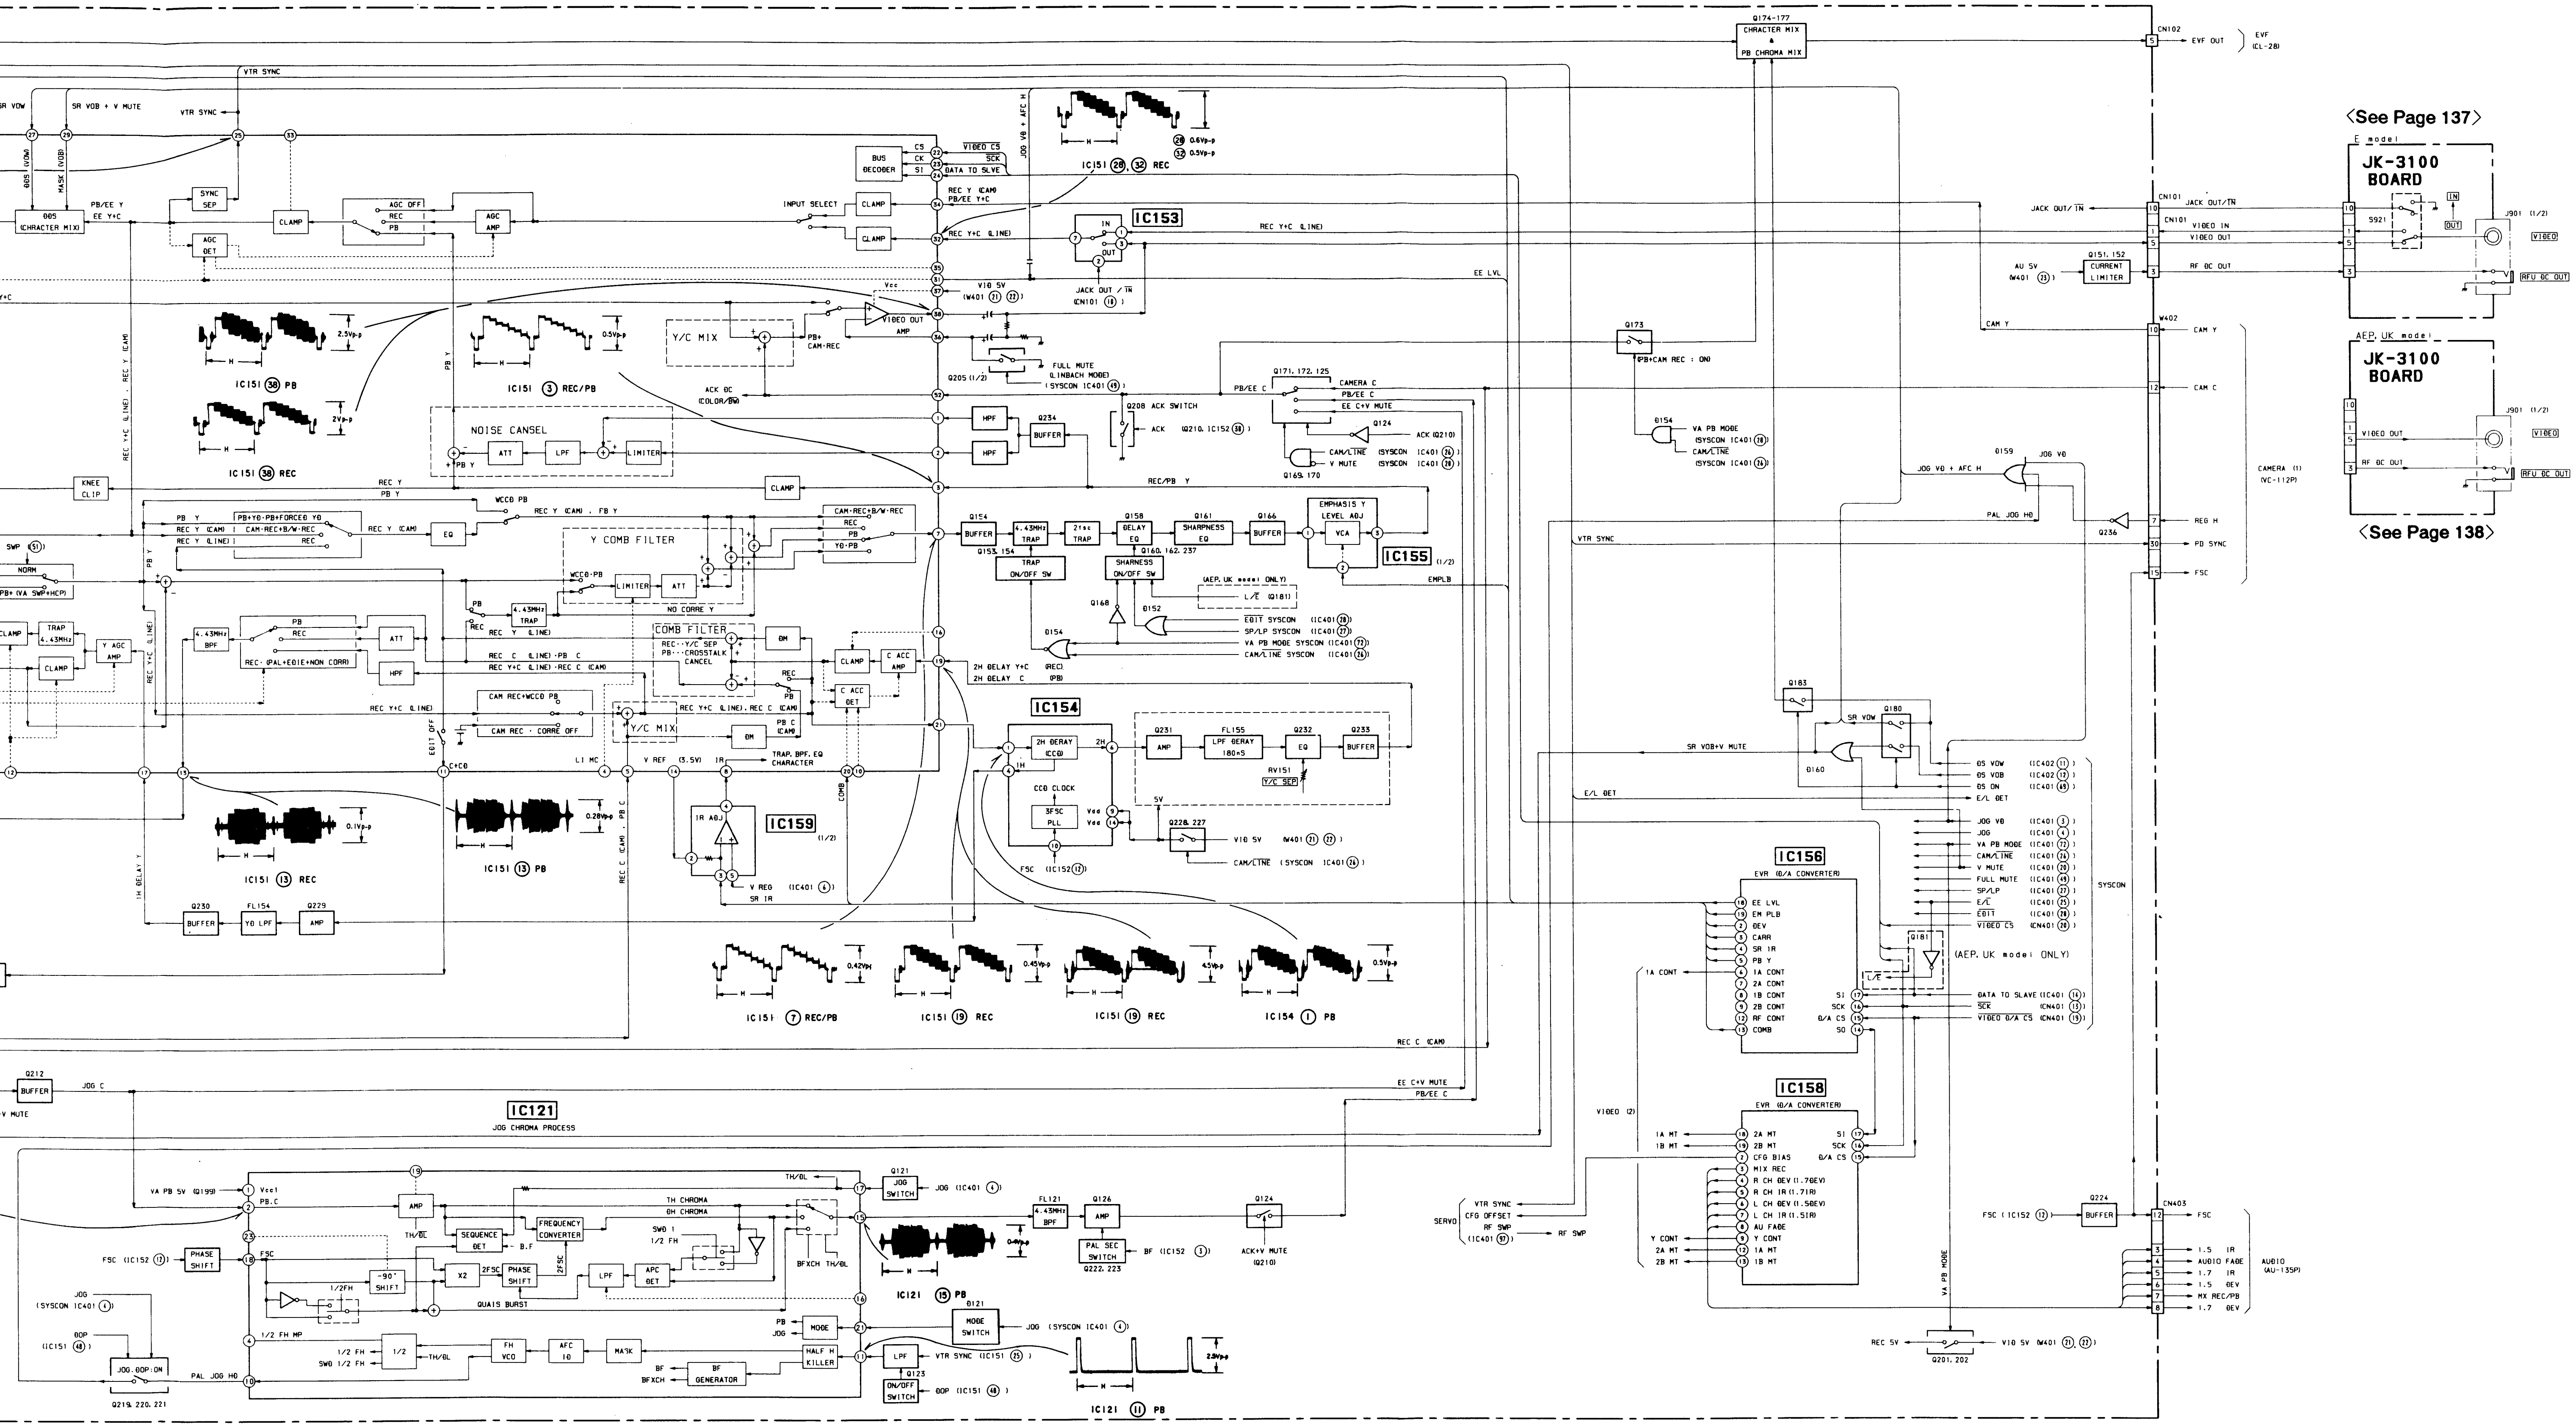
IC151 ㉘, ㉜ REC
IC151 ㊳ PB
IC151 ㊳ REC
IC151 ③ REC/PB
IC153
IC154
IC155
IC156
EVR (D/A CONVERTER)
IC158
EVR (D/A CONVERTER)
IC159
IC121
JOG CHROMA PROCESS
IC151 ⑬ REC
IC151 ⑬ PB
IC151 ⑦ REC/PB
IC151 ⑲ REC
IC154 ① PB
IC121 ⑮ PB
IC121 ⑪ PB
NOISE CANSEL
Y COMB FILTER
COMB FILTER
Y/C MIX
CHRACTER MIX & PB CHROMA MIX
BUS DECODER
VIDEO OUT AMP
2H DELAY (CCD)
3FSC PLL
LPF DELAY 180×5
EMPHASIS Y LEVEL ADJ
SEQUENCE DET
FREQUENCY CONVERTER
PHASE SHIFT
HALF H KILLER
BF GENERATOR
FH VCO
AFC ID
MASK
JOG SWITCH
MODE SWITCH
PAL SEC SWITCH
CURRENT LIMITER
JACK OUT/IN
VIDEO IN
VIDEO OUT
RF DC OUT
EVF OUT
EVF (CL-28)
CAMERA (1) (VC-112P)
AUDIO (AU-135P)
SYSCON
SERVO
(AEP, UK model ONLY)
<See Page 137>
E model
JK-3100 BOARD
AEP, UK model
JK-3100 BOARD
<See Page 138>
J901 (1/2)
VIDEO
RFU DC OUT

3-14. EVF BLOCK DIAGRAM

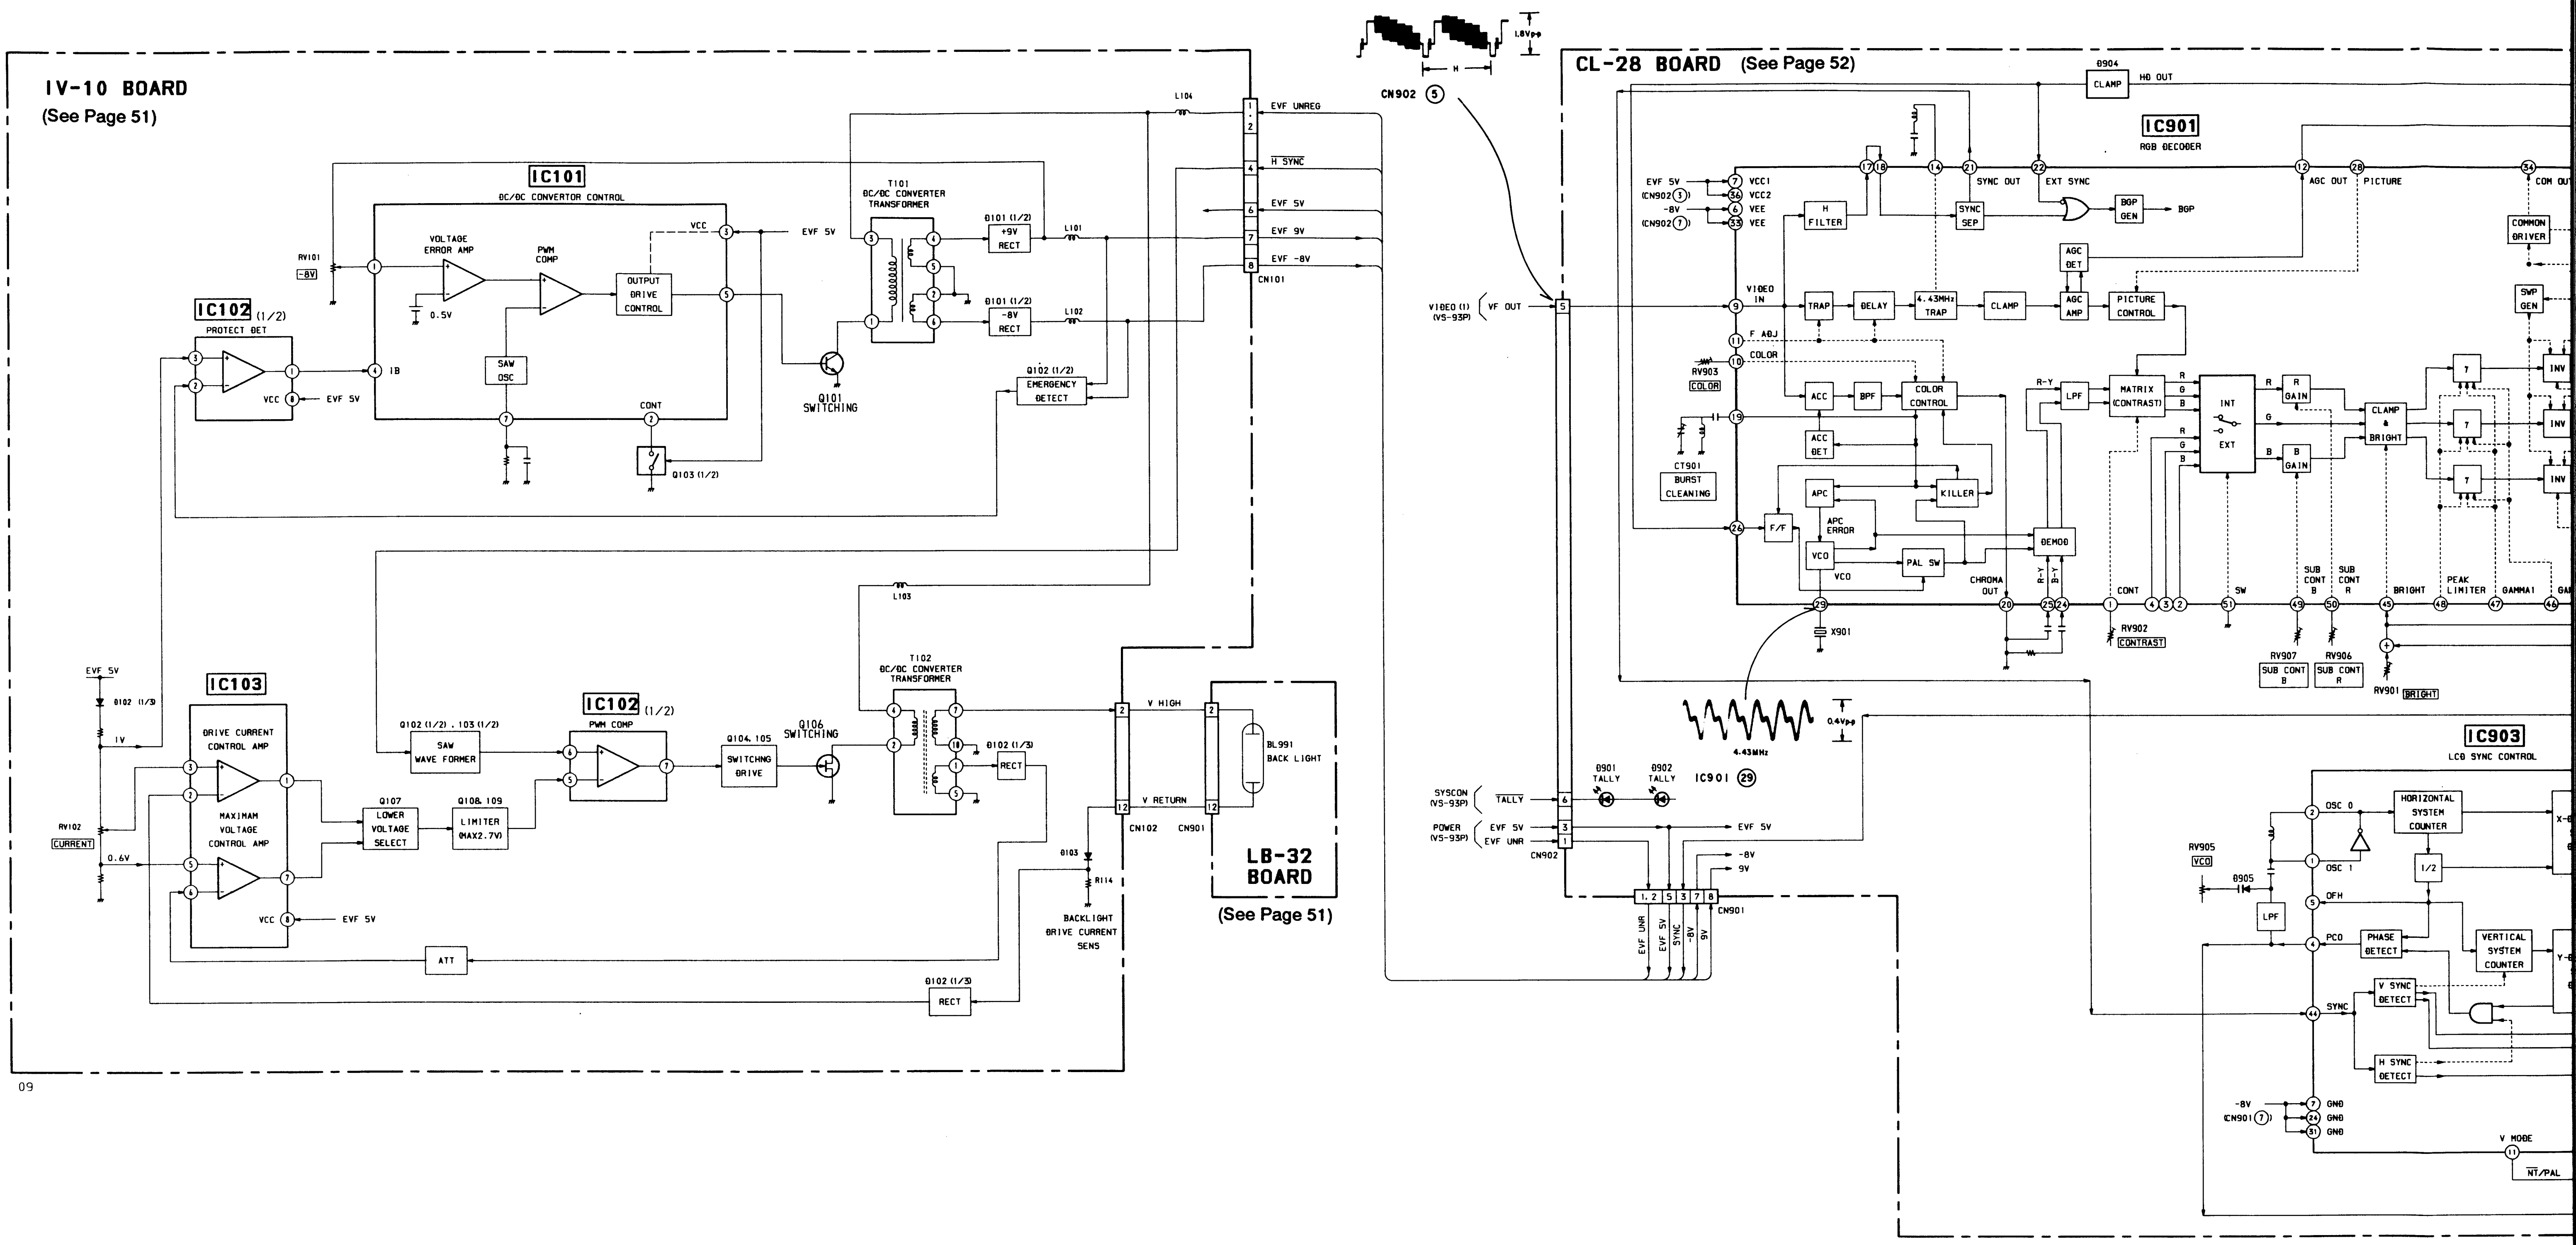
IV-10 BOARD
(See Page 51)
IC101
DC/DC CONVERTOR CONTROL
VOLTAGE ERROR AMP
PWM COMP
SAW OSC
OUTPUT DRIVE CONTROL
VCC
EVF 5V
IB
CONT
0.5V
RV101 -8V
IC102 (1/2)
PROTECT DET
Q103 (1/2)
Q101 SWITCHING
T101 DC/DC CONVERTER TRANSFORMER
D101 (1/2) +9V RECT
D101 (1/2) -8V RECT
L101
L102
L104
Q102 (1/2) EMERGENCY DETECT
EVF UNREG
H SYNC
EVF 5V
EVF 9V
EVF -8V
CN101
IC103
DRIVE CURRENT CONTROL AMP
MAXIMAM VOLTAGE CONTROL AMP
EVF 5V
D102 (1/3)
IV
0.6V
RV102 CURRENT
Q102 (1/2), 103 (1/2) SAW WAVE FORMER
IC102 (1/2) PWM COMP
Q107 LOWER VOLTAGE SELECT
Q108, 109 LIMITER (MAX2.7V)
Q104, 105 SWITCHING DRIVE
Q106 SWITCHING
T102 DC/DC CONVERTER TRANSFORMER
L103
D102 (1/3) RECT
D103
R114
BACKLIGHT DRIVE CURRENT SENS
ATT
D102 (1/3) RECT
V HIGH
V RETURN
CN102
CN901
BL991 BACK LIGHT
LB-32 BOARD
(See Page 51)
09
1.8Vp-p
H
CN902 ⑤
CL-28 BOARD (See Page 52)
IC901
RGB DECODER
D904 CLAMP
HD OUT
EVF 5V
(CN902 ③)
-8V
(CN902 ⑦)
VCC1
VCC2
VEE
VEE
H FILTER
SYNC OUT
EXT SYNC
SYNC SEP
BGP GEN
BGP
AGC DET
AGC OUT
PICTURE
COM OUT
COMMON DRIVER
SWP GEN
VIDEO (1) (VS-93P)
VF OUT
VIDEO IN
TRAP
DELAY
4.43MHz TRAP
CLAMP
AGC AMP
PICTURE CONTROL
F ADJ
COLOR
RV903 COLOR
ACC
BPF
COLOR CONTROL
ACC DET
CT901 BURST CLEANING
APC
KILLER
F/F
APC ERROR
VCO
PAL SW
DEMOD
CHROMA OUT
R-Y
B-Y
LPF
MATRIX (CONTRAST)
INT
EXT
R GAIN
B GAIN
CLAMP & BRIGHT
INV
CONT
SW
SUB CONT B
SUB CONT R
BRIGHT
PEAK LIMITER
GAMMA1
X901
RV902 CONTRAST
RV907 SUB CONT B
RV906 SUB CONT R
RV901 BRIGHT
4.43MHz
0.4Vp-p
SYSCON (VS-93P)
TALLY
POWER (VS-93P)
EVF 5V
EVF UNR
CN902
D901 TALLY
D902 TALLY
IC901 (29)
EVF 5V
-8V
9V
CN901
EVF UNR
EVF 5V
SYNC
-8V
9V
IC903
LCD SYNC CONTROL
OSC 0
OSC 1
OFH
PCO
SYNC
HORIZONTAL SYSTEM COUNTER
1/2
RV905 VCO
D905
LPF
PHASE DETECT
VERTICAL SYSTEM COUNTER
V SYNC DETECT
H SYNC DETECT
-8V
(CN901 ⑦)
GND
GND
GND
V MODE
NT/PAL

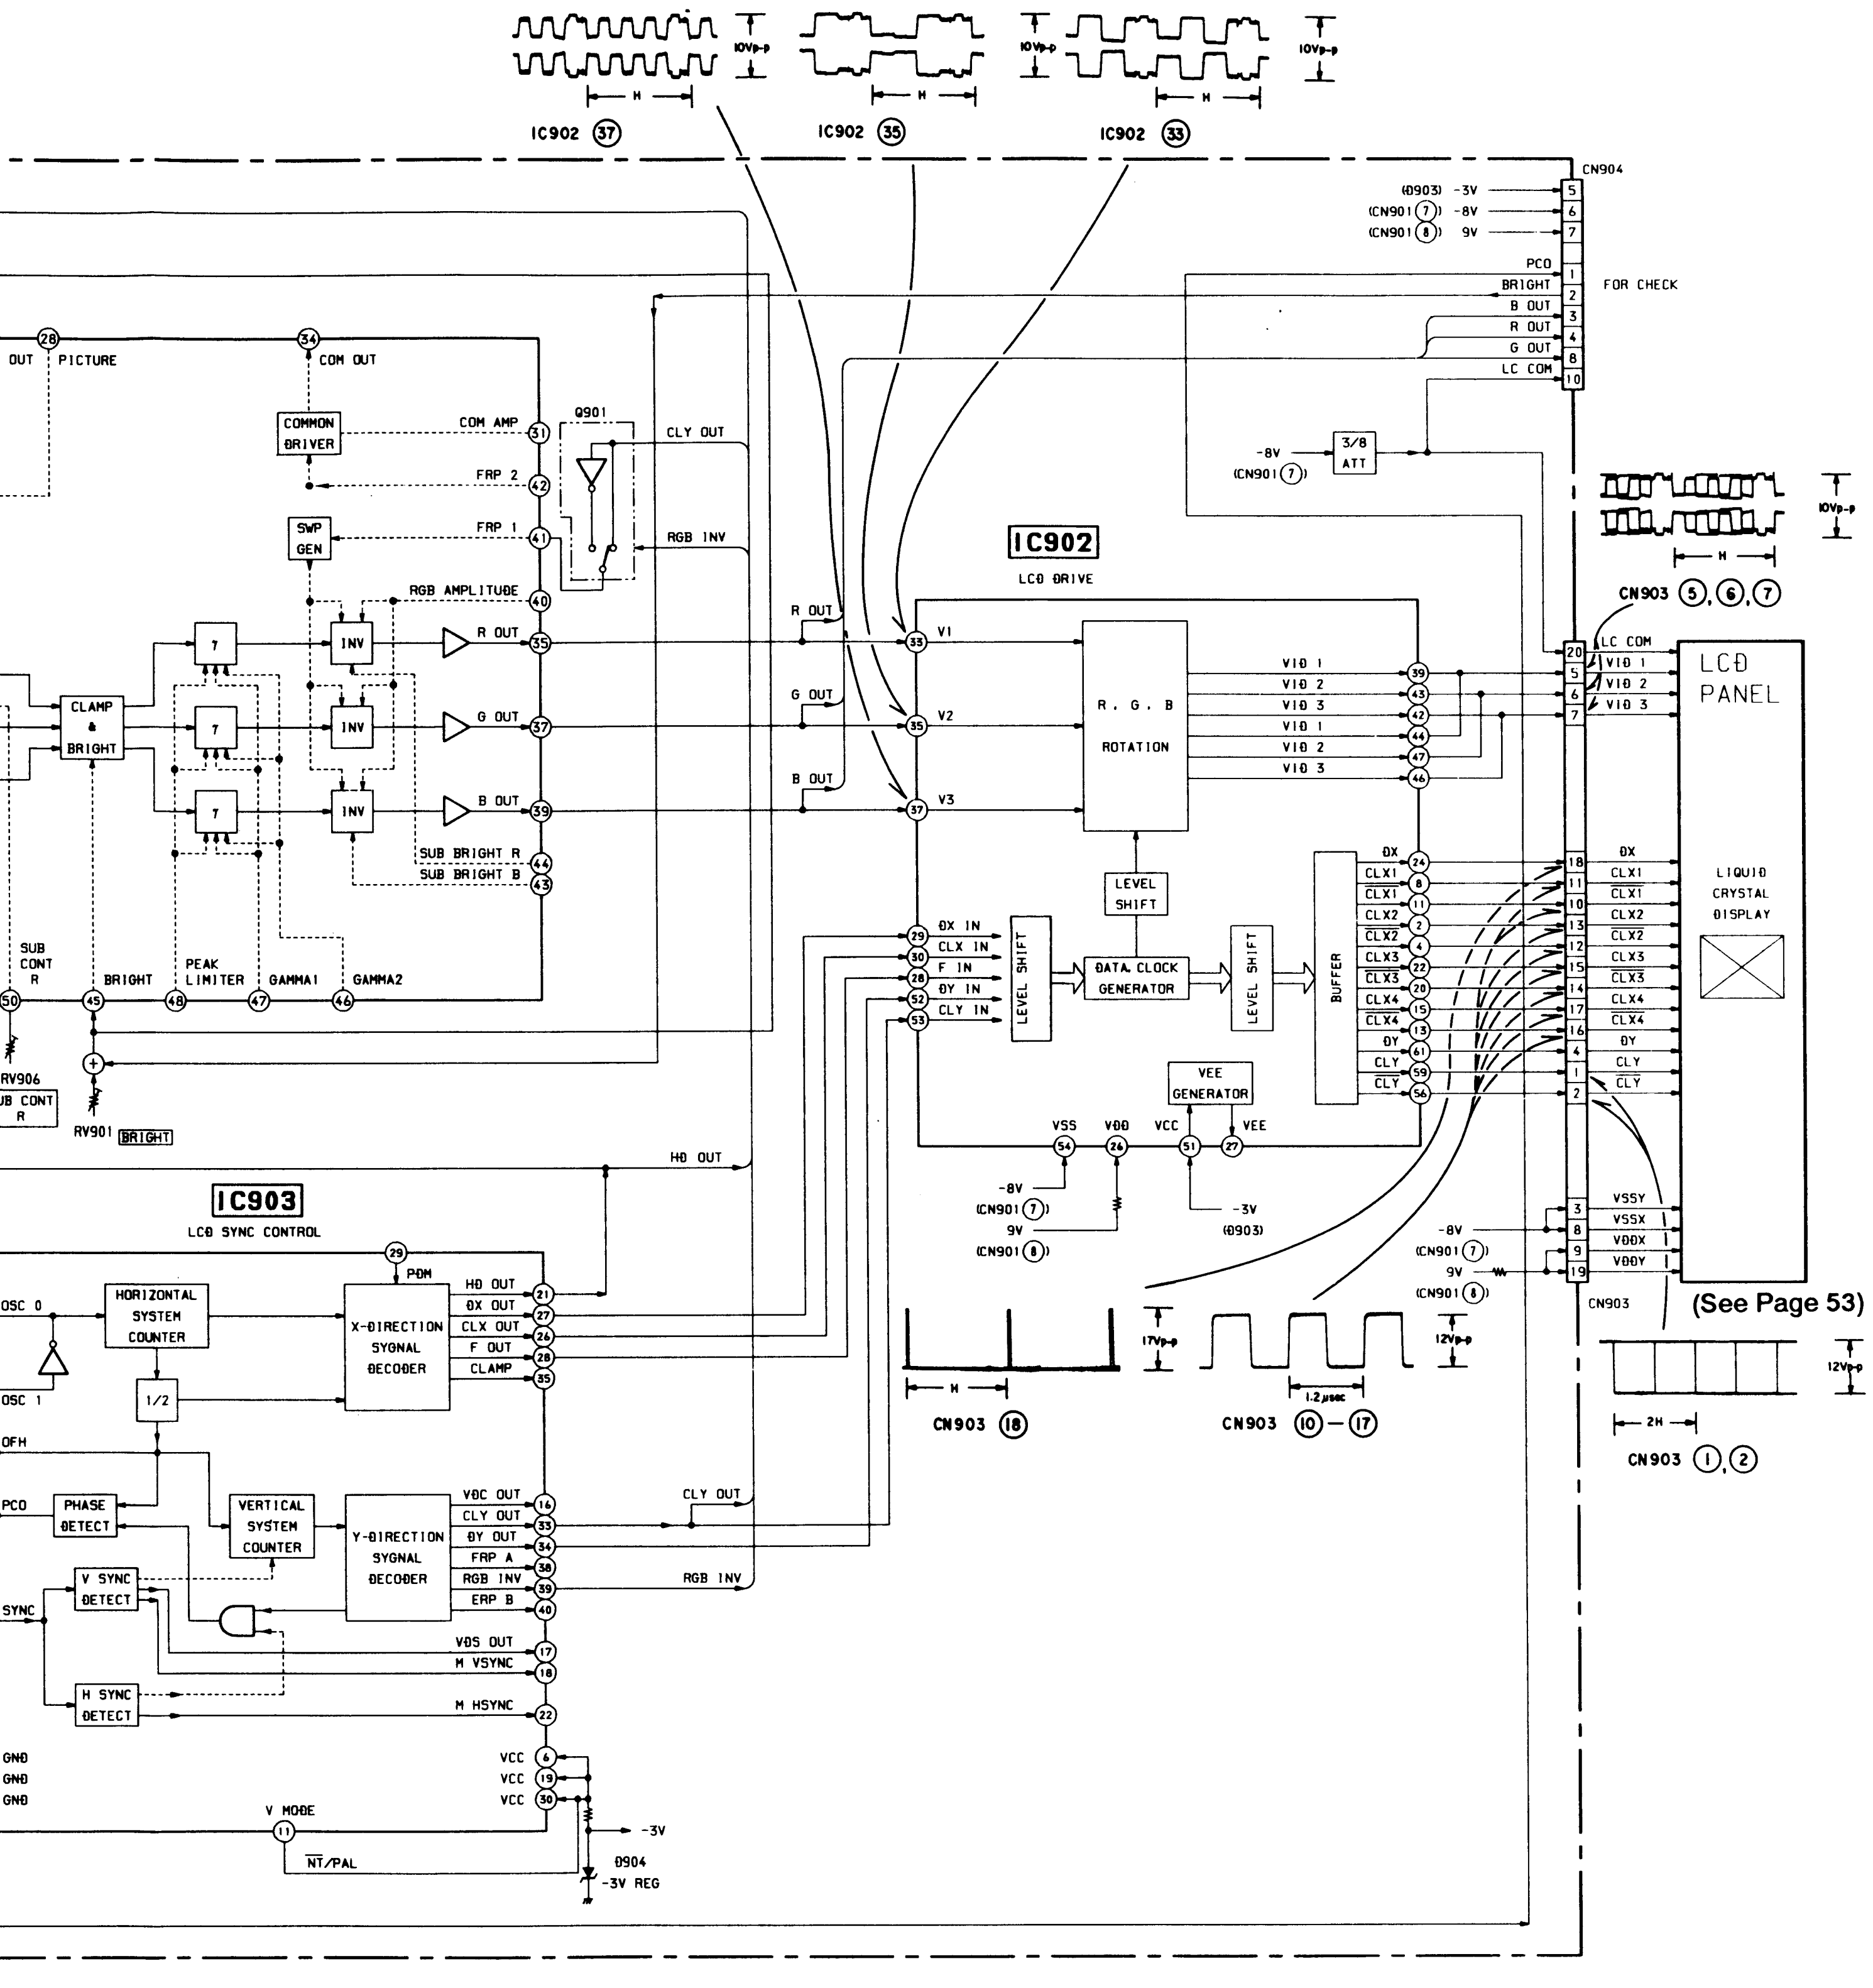
IC902 (37)
IC902 (35)
IC902 (33)
10Vp-p
H
CN904
(D903) -3V
(CN901 ⑦) -8V
(CN901 ⑧) 9V
PCO
BRIGHT
B OUT
R OUT
G OUT
LC COM
FOR CHECK
-8V
(CN901 ⑦)
3/8 ATT
OUT
PICTURE
COM OUT
COMMON DRIVER
COM AMP
FRP 2
FRP 1
SWP GEN
RGB AMPLITUDE
Q901
CLY OUT
RGB INV
R OUT
G OUT
B OUT
CLAMP & BRIGHT
INV
γ
SUB BRIGHT R
SUB BRIGHT B
SUB CONT R
BRIGHT
PEAK LIMITER
GAMMA1
GAMMA2
RV906
SUB CONT R
RV901 BRIGHT
IC902
LCD DRIVE
V1
V2
V3
R, G, B ROTATION
VID 1
VID 2
VID 3
LEVEL SHIFT
DX IN
CLX IN
F IN
DY IN
CLY IN
DATA CLOCK GENERATOR
BUFFER
DX
CLX1
CLX2
CLX3
CLX4
DY
CLY
VEE GENERATOR
VSS
VDD
VCC
VEE
-8V
(CN901 ⑦)
9V
(CN901 ⑧)
-3V
(D903)
CN903 ⑤,⑥,⑦
LC COM
LCD PANEL
LIQUID CRYSTAL DISPLAY
VSSY
VSSX
VDDX
VDDY
CN903
(See Page 53)
17Vp-p
12Vp-p
1.2μsec
CN903 ⑱
CN903 ⑩ – ⑰
2H
CN903 ①,②
HD OUT
IC903
LCD SYNC CONTROL
PDM
OSC 0
OSC 1
HORIZONTAL SYSTEM COUNTER
1/2
X-DIRECTION SYGNAL DECODER
HD OUT
DX OUT
CLX OUT
F OUT
CLAMP
OFH
PCO
PHASE DETECT
VERTICAL SYSTEM COUNTER
Y-DIRECTION SYGNAL DECODER
VDC OUT
CLY OUT
DY OUT
FRP A
RGB INV
ERP B
SYNC
V SYNC DETECT
H SYNC DETECT
VDS OUT
M VSYNC
M HSYNC
GND
VCC
V MODE
NT/PAL
-3V
D904
-3V REG

3-15. POWER BLOCK DIAGRAM

< > : The pages above correspond to CCD-TR305E SERVICE MANUAL, ( ) : Pages of CCD-TR505E.

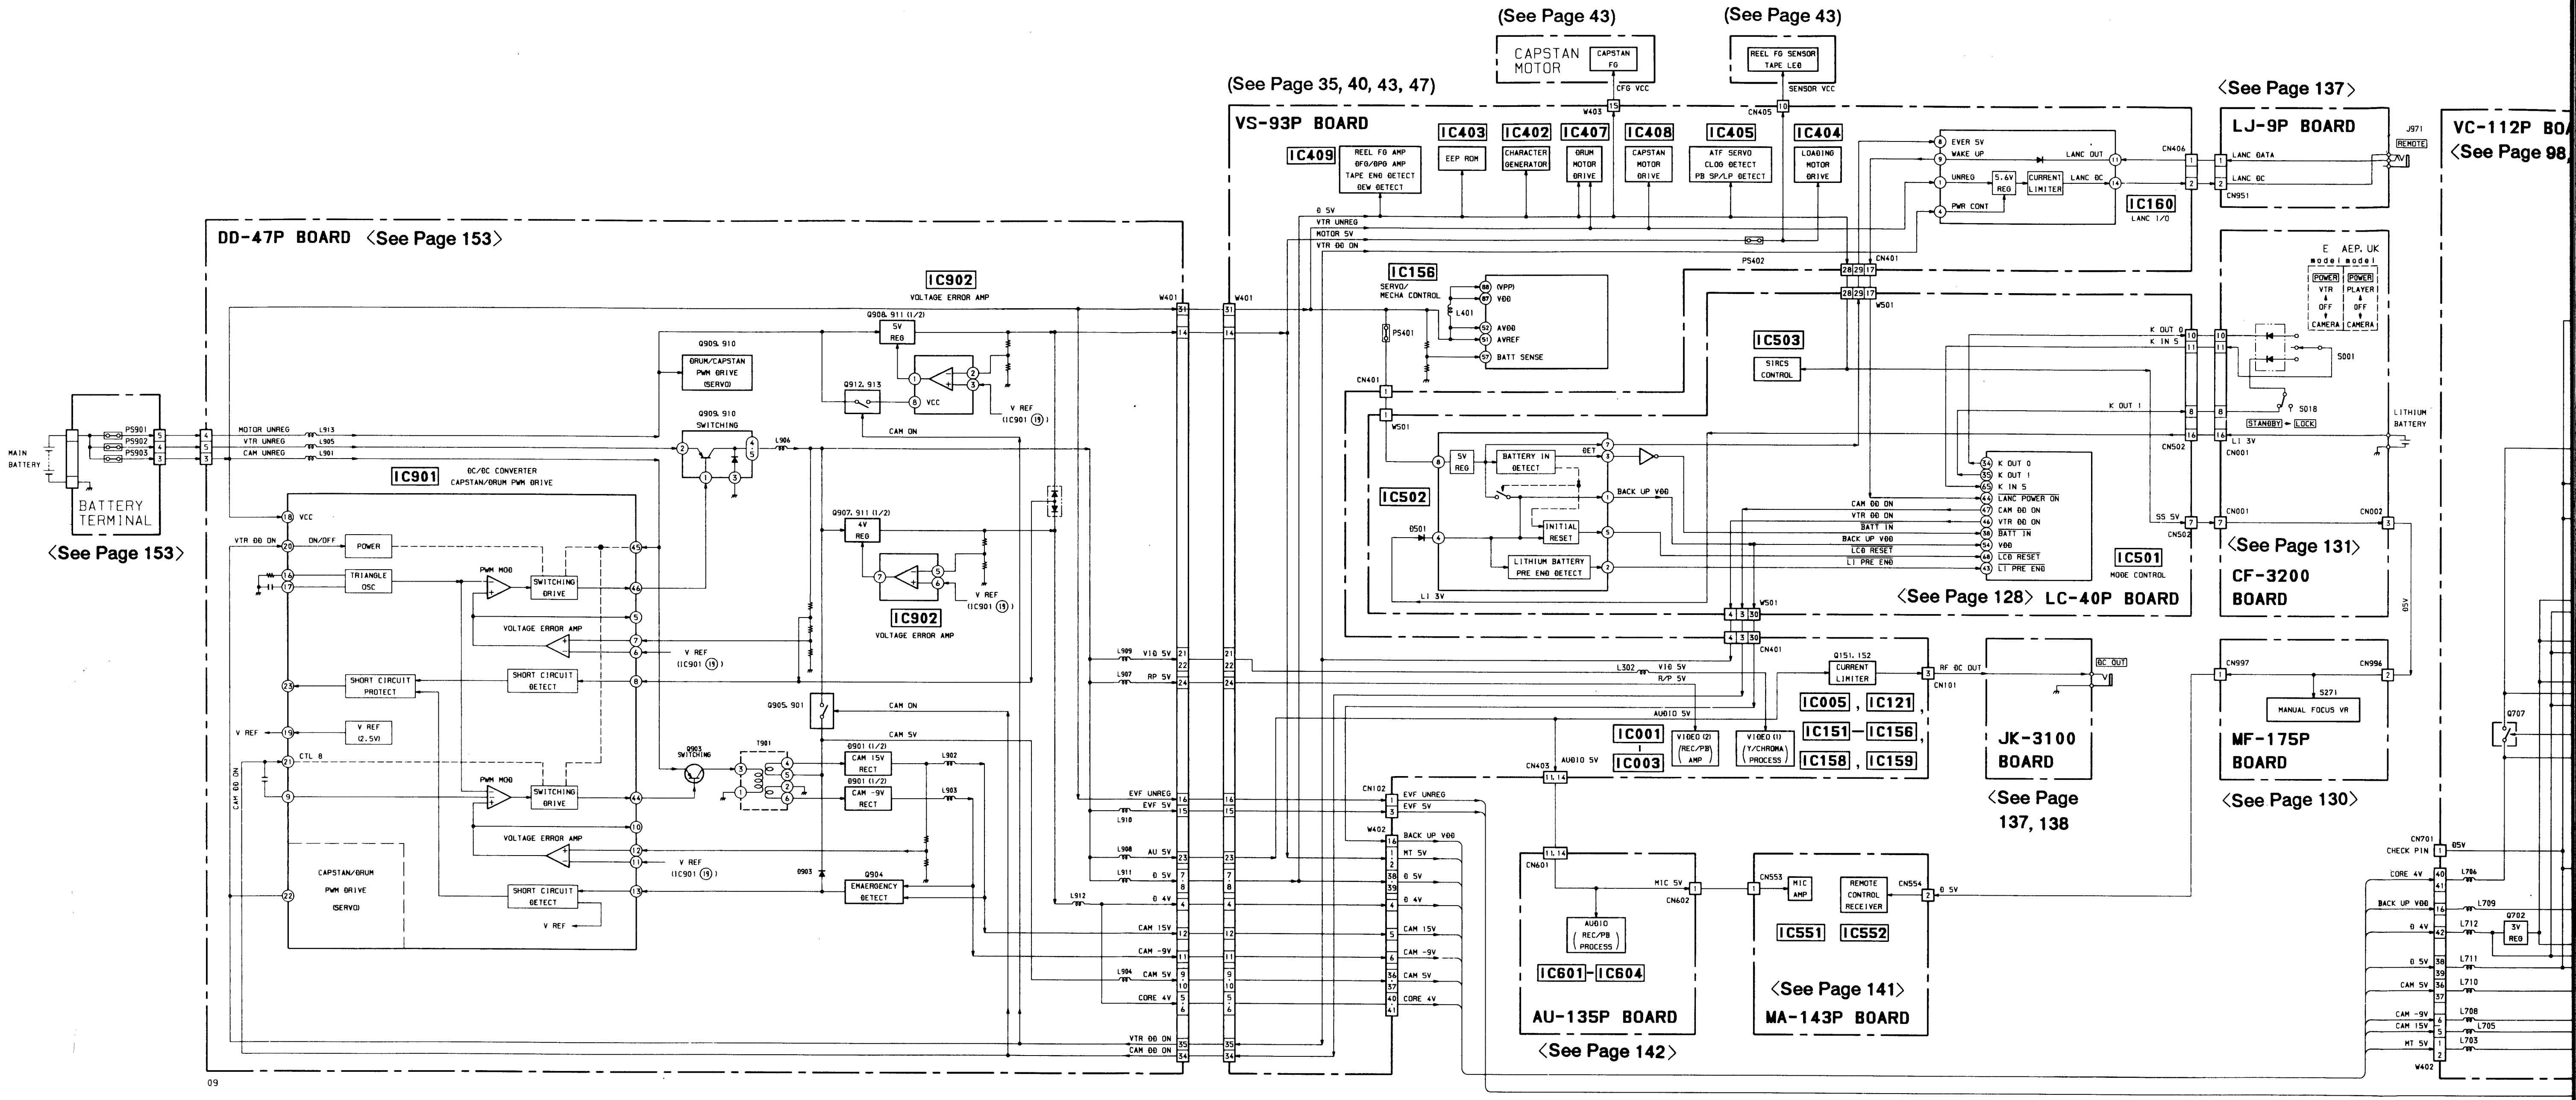
(See Page 43)
CAPSTAN MOTOR
CAPSTAN FG
(See Page 43)
REEL FG SENSOR TAPE LED
(See Page 35, 40, 43, 47)
VS-93P BOARD
IC409
REEL FG AMP
BFG/BPG AMP
TAPE END DETECT
DEW DETECT
IC403
EEP ROM
IC402
CHARACTER GENERATOR
IC407
DRUM MOTOR DRIVE
IC408
CAPSTAN MOTOR DRIVE
IC405
ATF SERVO
CLOG DETECT
PB SP/LP DETECT
IC404
LOADING MOTOR DRIVE
EVER 5V
WAKE UP
UNREG
5.6V REG
CURRENT LIMITER
PWR CONT
LANC OUT
LANC DC
IC160
LANC I/O
CN406
(See Page 137)
LJ-9P BOARD
LANC DATA
LANC DC
CN951
J971
REMOTE
VC-112P BO
(See Page 98
DD-47P BOARD (See Page 153)
IC902
VOLTAGE ERROR AMP
5V REG
4V REG
IC901
DC/DC CONVERTER
CAPSTAN/DRUM PWM DRIVE
DRUM/CAPSTAN PWM DRIVE (SERVO)
SWITCHING
VCC
V REF
POWER
TRIANGLE OSC
PWM MOD
SWITCHING DRIVE
VOLTAGE ERROR AMP
SHORT CIRCUIT PROTECT
SHORT CIRCUIT DETECT
V REF (2.5V)
CAPSTAN/DRUM PWM DRIVE (SERVO)
CAM 15V RECT
CAM -9V RECT
EMERGENCY DETECT
CAM ON
CAM 5V
MAIN BATTERY
BATTERY TERMINAL
(See Page 153)
MOTOR UNREG
VTR UNREG
CAM UNREG
VTR DD ON
CAM DD ON
VIO 5V
RP 5V
EVF UNREG
EVF 5V
AU 5V
D 5V
D 4V
CAM 15V
CAM -9V
CORE 4V
IC156
SERVO/MECHA CONTROL
IC503
SIRCS CONTROL
IC502
5V REG
BATTERY IN DETECT
INITIAL RESET
LITHIUM BATTERY PRE END DETECT
BACK UP VDD
LI 3V
K OUT 0
K OUT 1
K IN 5
LANC POWER ON
CAM DD ON
VTR DD ON
BATT IN
VDD
LCD RESET
LI PRE END
IC501
MODE CONTROL
(See Page 128) LC-40P BOARD
E AEP, UK model model
POWER VTR OFF CAMERA
POWER PLAYER OFF CAMERA
S001
S018
STANDBY LOCK
LITHIUM BATTERY
(See Page 131)
CF-3200 BOARD
CURRENT LIMITER
RF DC OUT
IC005, IC121,
IC151 – IC156,
IC158, IC159
IC001 – IC003
VIDEO (2) (REC/PB AMP)
VIDEO (1) (Y/CHROMA PROCESS)
AUDIO 5V
JK-3100 BOARD
(See Page 137, 138)
DC OUT
MANUAL FOCUS VR
MF-175P BOARD
(See Page 130)
AUDIO (REC/PB PROCESS)
IC601 – IC604
AU-135P BOARD
(See Page 142)
MIC 5V
MIC AMP
REMOTE CONTROL RECEIVER
IC551 IC552
(See Page 141)
MA-143P BOARD
CHECK PIN
3V REG
MT 5V

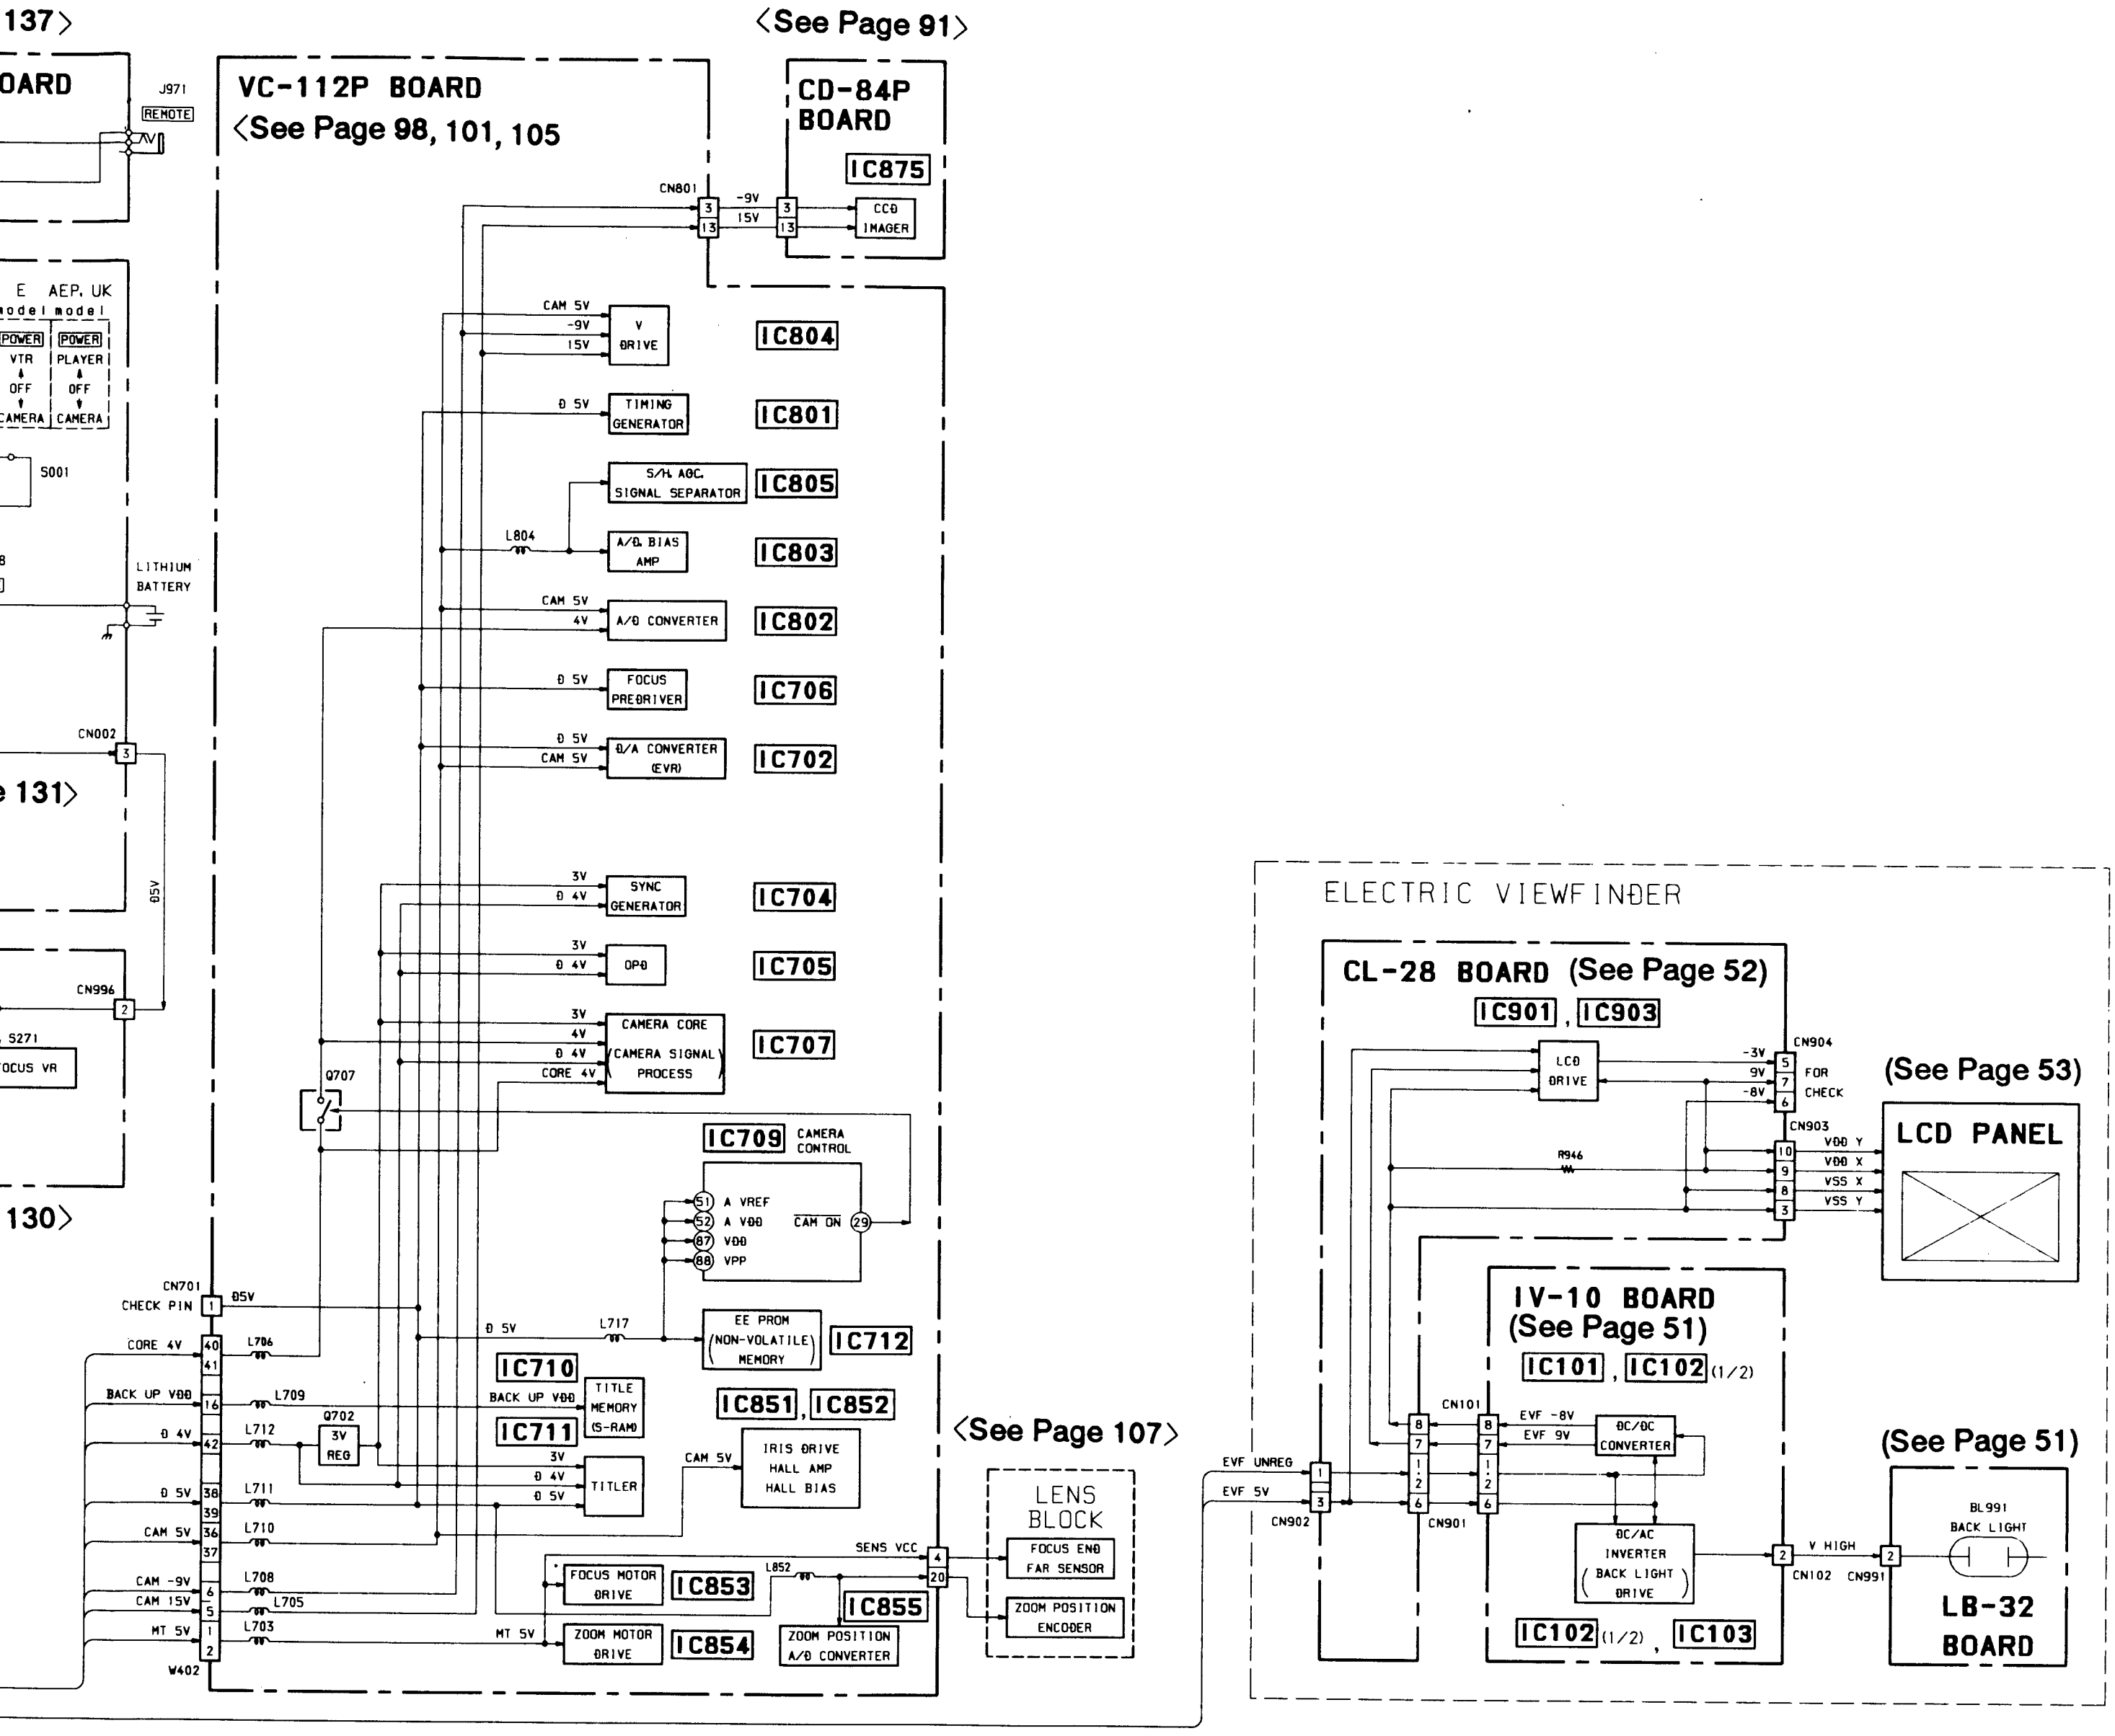
137〉
OARD
J971
REMOTE
E AEP, UK
model model
POWER VTR OFF CAMERA
POWER PLAYER OFF CAMERA
S001
LITHIUM BATTERY
CN002
e 131〉
ØSV
CN996
S271
OCUS VR
130〉
VC-112P BOARD
〈See Page 98, 101, 105
〈See Page 91〉
CD-84P BOARD
IC875
CN801
-9V
15V
CCD IMAGER
CAM 5V
-9V
15V
V DRIVE
IC804
D 5V
TIMING GENERATOR
IC801
S/H, AGC SIGNAL SEPARATOR
IC805
L804
A/D, BIAS AMP
IC803
CAM 5V
4V
A/D CONVERTER
IC802
D 5V
FOCUS PREDRIVER
IC706
D 5V
CAM 5V
D/A CONVERTER (EVR)
IC702
3V
D 4V
SYNC GENERATOR
IC704
3V
D 4V
OPD
IC705
3V
4V
D 4V
CORE 4V
CAMERA CORE (CAMERA SIGNAL PROCESS)
IC707
Q707
IC709 CAMERA CONTROL
51 A VREF
52 A VDD
87 VDD
88 VPP
CAM ON 29
CN701
CHECK PIN
ØSV
D 5V
L717
EE PROM (NON-VOLATILE) MEMORY
IC712
CORE 4V
L706
IC710
BACK UP VDD
L709
TITLE MEMORY (S-RAM)
IC851, IC852
D 4V
L712
Q702 3V REG
IC711
3V
D 4V
D 5V
TITLER
CAM 5V
IRIS DRIVE HALL AMP HALL BIAS
D 5V
L711
CAM 5V
L710
SENS VCC
CAM -9V
L708
CAM 15V
L705
FOCUS MOTOR DRIVE
IC853
L852
IC855
MT 5V
L703
MT 5V
ZOOM MOTOR DRIVE
IC854
ZOOM POSITION A/D CONVERTER
W402
〈See Page 107〉
LENS BLOCK
FOCUS END FAR SENSOR
ZOOM POSITION ENCODER
EVF UNREG
EVF 5V
CN902
ELECTRIC VIEWFINDER
CL-28 BOARD (See Page 52)
IC901, IC903
LCD DRIVE
-3V
9V
-8V
CN904
FOR CHECK
(See Page 53)
LCD PANEL
CN903
VDD Y
VDD X
VSS X
VSS Y
R946
IV-10 BOARD (See Page 51)
IC101, IC102 (1/2)
CN101
EVF -8V
EVF 9V
DC/DC CONVERTER
CN901
DC/AC INVERTER (BACK LIGHT DRIVE)
IC102 (1/2), IC103
V HIGH
CN102
CN991
(See Page 51)
BL991 BACK LIGHT
LB-32 BOARD

SECTION 4

PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM

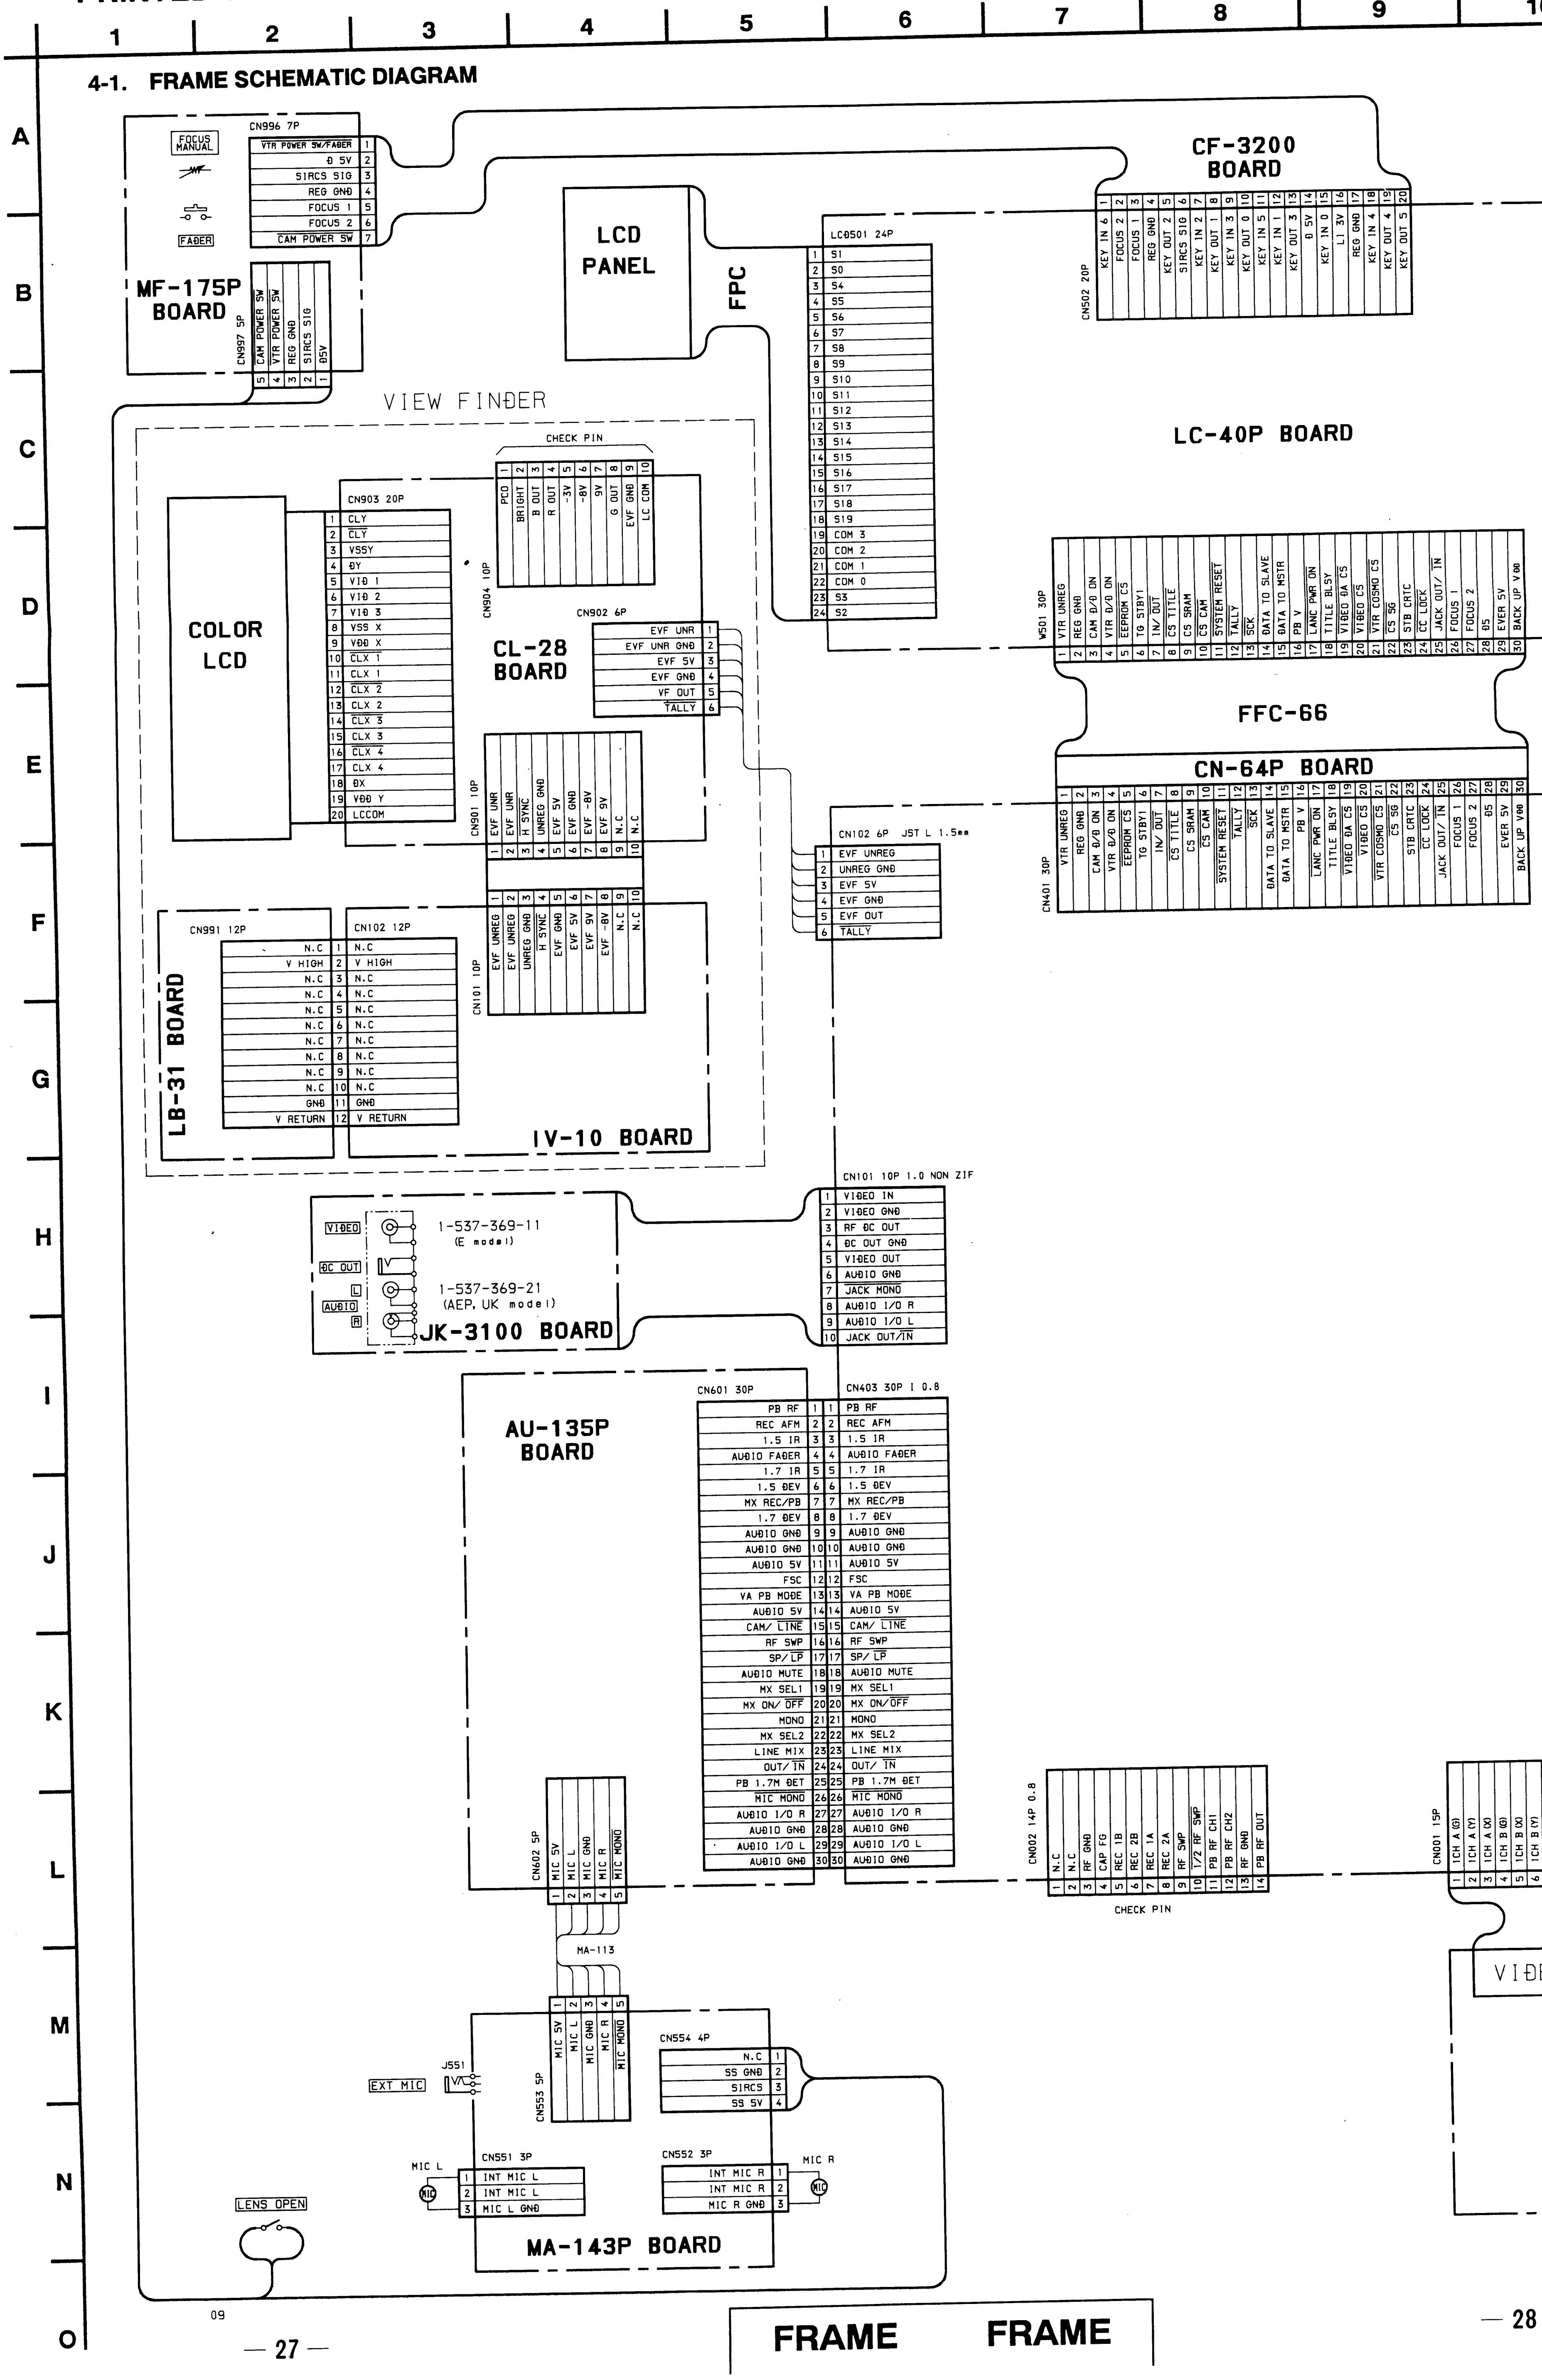

MF-175P BOARD
CN996 7P
VTR POWER SW/FADER
D 5V
SIRCS SIG
REG GND
FOCUS 1
FOCUS 2
CAM POWER SW
FOCUS MANUAL
FADER
CN997 5P
LCD PANEL
FPC
LC0501 24P
CF-3200 BOARD
CN502 20P
LC-40P BOARD
VIEW FINDER
CHECK PIN
CN903 20P
CN904 10P
CN902 6P
COLOR LCD
CL-28 BOARD
CN901 10P
CN101 10P
CN991 12P
CN102 12P
LB-31 BOARD
IV-10 BOARD
W501 30P
FFC-66
CN-64P BOARD
CN401 30P
CN102 6P JST L 1.5mm
CN101 10P 1.0 NON ZIF
VIDEO
DC OUT
AUDIO
1-537-369-11 (E model)
1-537-369-21 (AEP, UK model)
JK-3100 BOARD
AU-135P BOARD
CN601 30P
CN403 30P I 0.8
CN602 5P
MA-113
CN002 14P 0.8
CHECK PIN
CN001 15P
CN553 5P
CN554 4P
J551
EXT MIC
CN551 3P
CN552 3P
MIC L
MIC R
LENS OPEN
MA-143P BOARD
09

FRAME FRAME

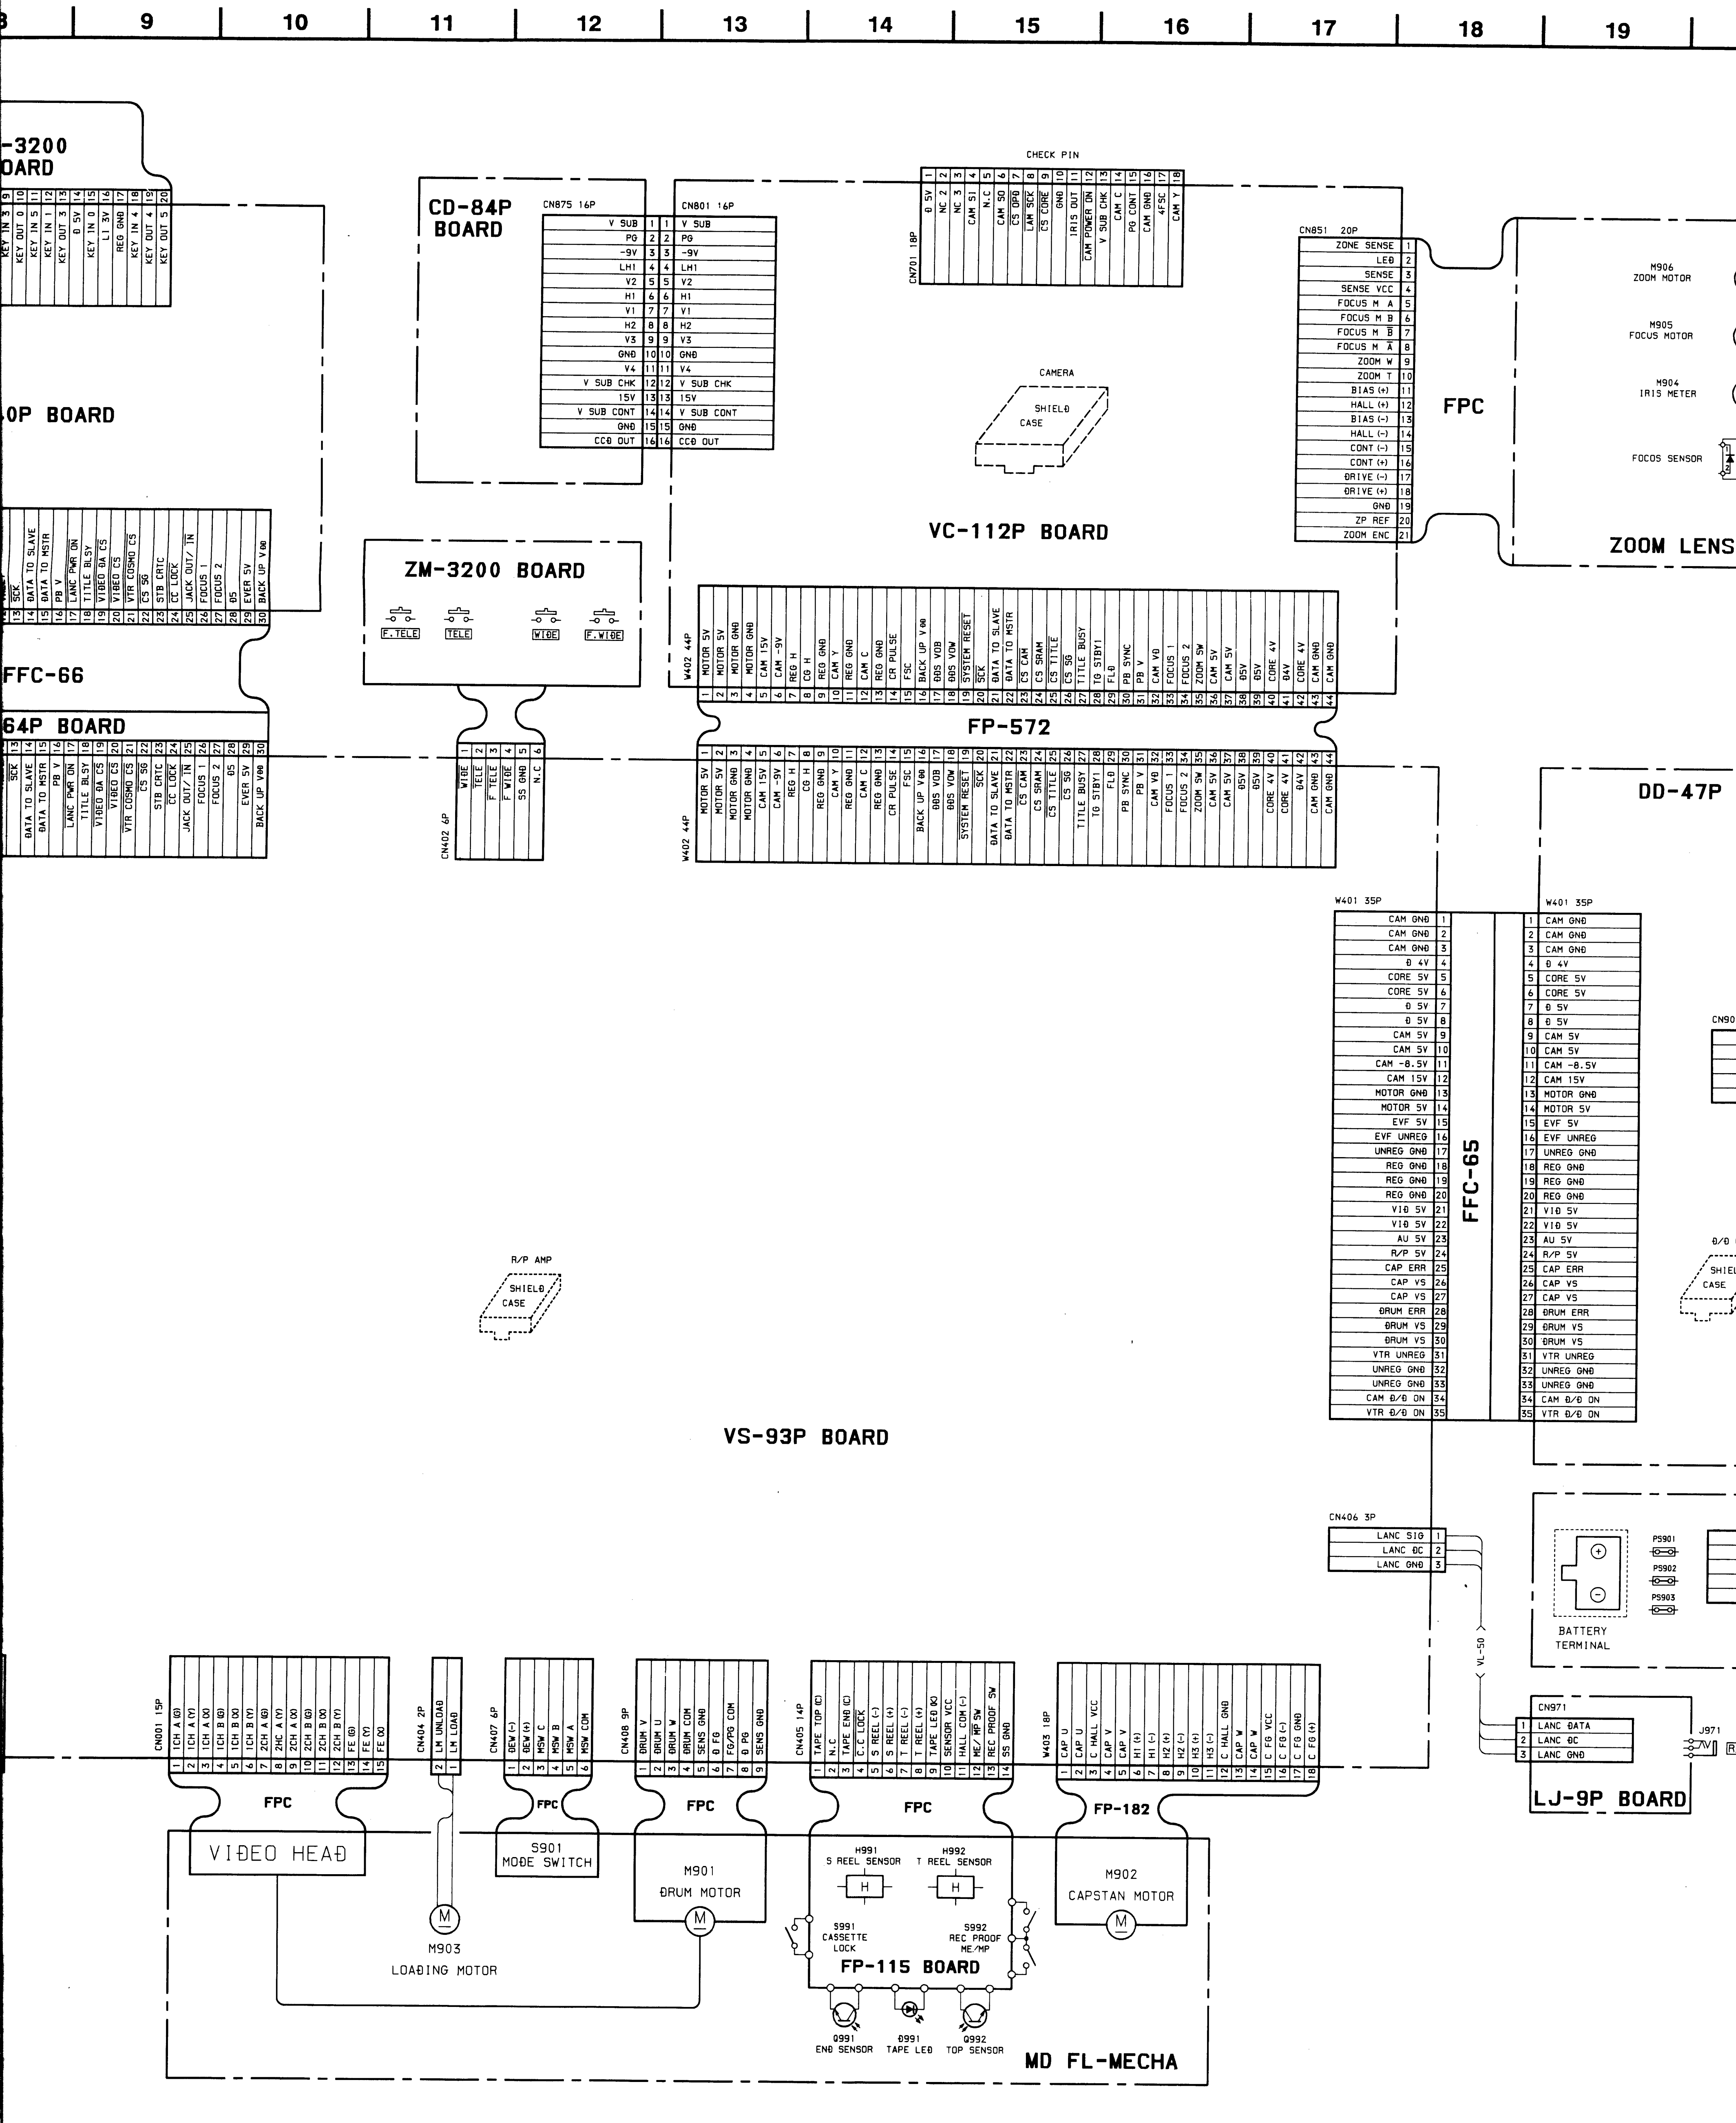
9
10
11
12
13
14
15
16
17
18
19
-3200
OARD
OP BOARD
FFC-66
64P BOARD
CD-84P BOARD
CN875 16P
CN801 16P
V SUB
PG
-9V
LH1
V2
H1
V1
H2
V3
GND
V4
V SUB CHK
15V
V SUB CONT
GND
CCD OUT
CHECK PIN
CN701 18P
CAMERA
SHIELD CASE
VC-112P BOARD
ZM-3200 BOARD
F.TELE
TELE
WIDE
F.WIDE
CN402 6P
W402 44P
FP-572
CN851 20P
ZONE SENSE
LED
SENSE
SENSE VCC
FOCUS M A
FOCUS M B
ZOOM W
ZOOM T
BIAS (+)
HALL (+)
BIAS (-)
HALL (-)
CONT (-)
CONT (+)
DRIVE (-)
DRIVE (+)
GND
ZP REF
ZOOM ENC
FPC
M906 ZOOM MOTOR
M905 FOCUS MOTOR
M904 IRIS METER
FOCUS SENSOR
ZOOM LENS
DD-47P
W401 35P
FFC-65
CAM GND
D 4V
CORE 5V
D 5V
CAM 5V
CAM -8.5V
CAM 15V
MOTOR GND
MOTOR 5V
EVF 5V
EVF UNREG
UNREG GND
REG GND
VID 5V
AU 5V
R/P 5V
CAP ERR
CAP VS
DRUM ERR
DRUM VS
VTR UNREG
CAM D/D ON
VTR D/D ON
R/P AMP
SHIELD CASE
VS-93P BOARD
CN406 3P
LANC SIG
LANC DC
LANC GND
BATTERY TERMINAL
PS901
PS902
PS903
VL-50
CN971
LANC DATA
J971
LJ-9P BOARD
CN001 15P
CN404 2P
CN407 6P
CN408 9P
CN405 14P
W403 18P
FPC
FP-182
VIDEO HEAD
S901 MODE SWITCH
M901 DRUM MOTOR
M903 LOADING MOTOR
H991 S REEL SENSOR
H992 T REEL SENSOR
S991 CASSETTE LOCK
S992 REC PROOF ME/MP
FP-115 BOARD
M902 CAPSTAN MOTOR
Q991 END SENSOR
D991 TAPE LED
Q992 TOP SENSOR
MD FL-MECHA

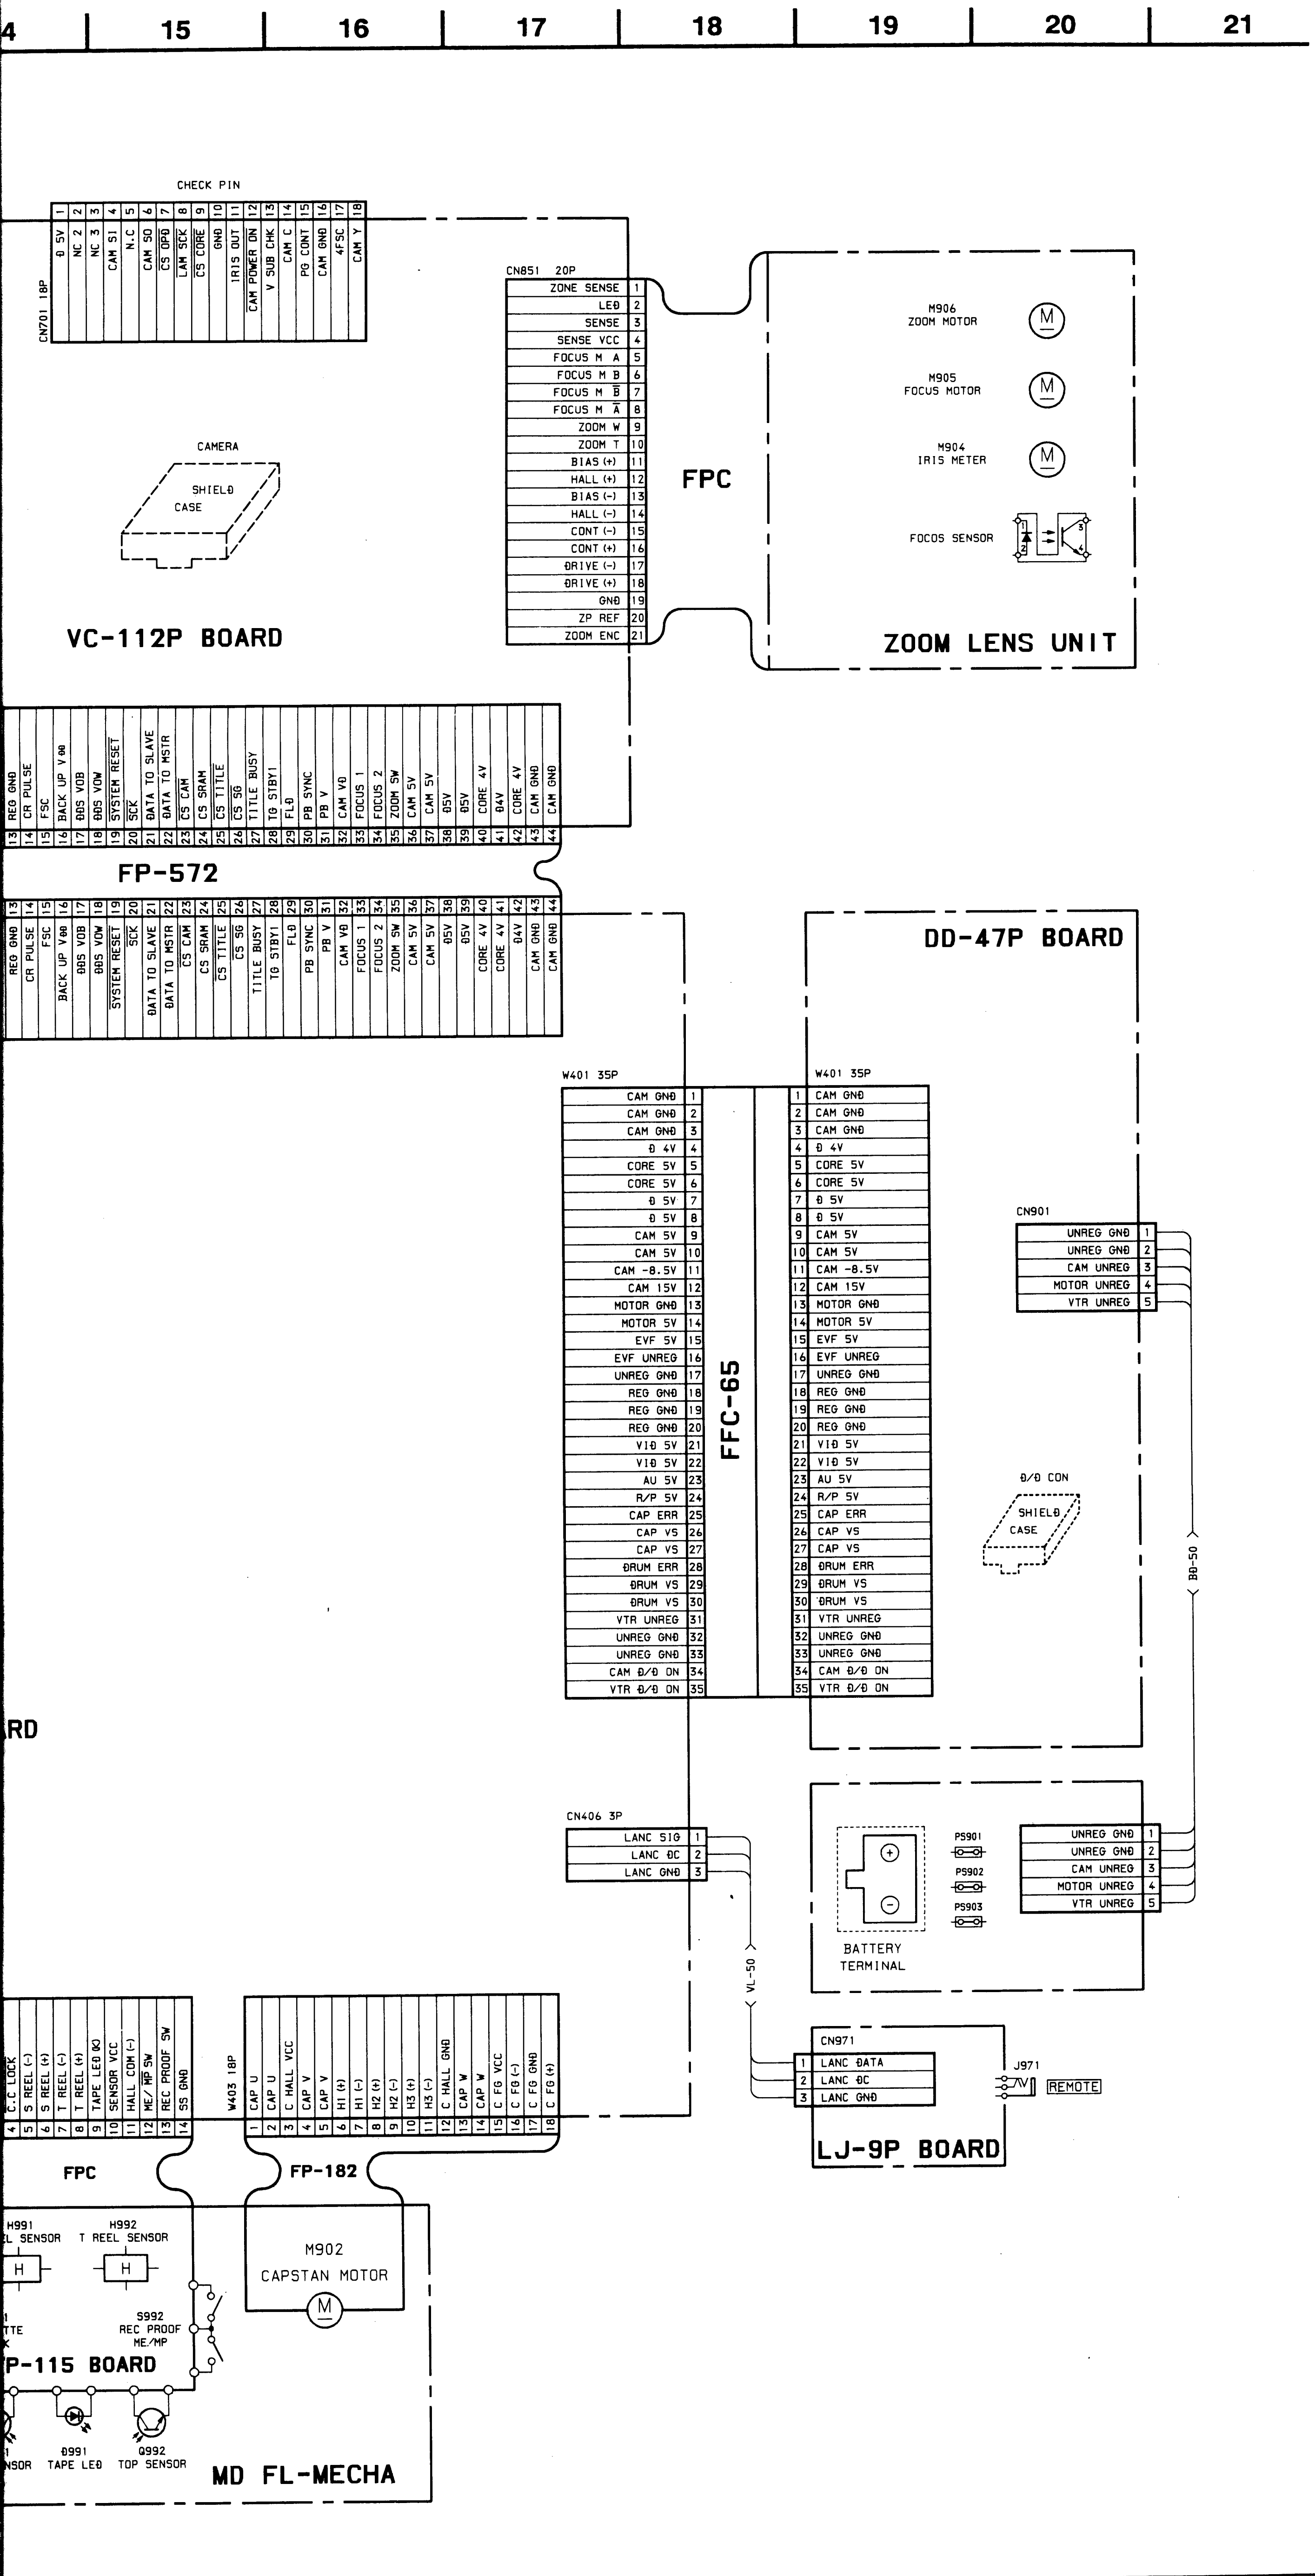
4
15
16
17
18
19
20
21
CHECK PIN
CN701 18P
0 5V
NC 2
NC 3
CAM SI
N.C
CAM SO
CS OPO
LAM SCK
CS CORE
GND
IRIS OUT
CAM POWER ON
V SUB CHK
CAM C
PG CONT
CAM GND
4FSC
CAM Y
CAMERA
SHIELD CASE
VC-112P BOARD
CN851 20P
ZONE SENSE
LED
SENSE
SENSE VCC
FOCUS M A
FOCUS M B
FOCUS M B̄
FOCUS M Ā
ZOOM W
ZOOM T
BIAS (+)
HALL (+)
BIAS (-)
HALL (-)
CONT (-)
CONT (+)
DRIVE (-)
DRIVE (+)
GND
ZP REF
ZOOM ENC
FPC
M906 ZOOM MOTOR
M905 FOCUS MOTOR
M904 IRIS METER
FOCOS SENSOR
ZOOM LENS UNIT
FP-572
DD-47P BOARD
W401 35P
FFC-65
CN901
UNREG GND
CAM UNREG
MOTOR UNREG
VTR UNREG
D/D CON
SHIELD CASE
BD-50
CN406 3P
LANC SIG
LANC DC
LANC GND
PS901
PS902
PS903
BATTERY TERMINAL
VL-50
CN971
LANC DATA
J971
REMOTE
LJ-9P BOARD
RD
W403 18P
FPC
FP-182
H991 REEL SENSOR
H992 T REEL SENSOR
M902 CAPSTAN MOTOR
S992 REC PROOF ME/MP
P-115 BOARD
D991 TAPE LED
Q992 TOP SENSOR
MD FL-MECHA

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

- Refer to page 88 to CCD-305E SERVICE MANUAL.

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND
(In addition to this , the necessary note is printed in each block.)

- **For printed wiring boards.**
- ○— : indicated a lead wire mounted on the component side.
- —— : indicated a lead wire mounted on the conductor side.
- ■ : Parts mounted on the conductor side.
- ▨ : Pattern from the side which enables seeing.

(The other layers'patterns are not indicated.)
- Circled numbers refer to waveforms.
- (B) or (F), etc. of capacitors indicate the temperature characteristics.
- ● : Through hole.

Caution:

Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

- **For schematic diagrams.**
- Caution when replacing chip parts.
  New parts must be attached after removal of chip.
  Be careful not to heat the minuts side of tantalum capacitor, because it is damaged by the heat.
- All resistors are in ohms, 1/4W unless otherwise noted.
  Chip resistor are 1/10W unless otherwise noted.
  kΩ : 1000Ω , MΩ : 1000kΩ .
- All capacitors are in μF unless otherwise noted. pF: μμF.
  50V or less are not indicated except for electrolytics and tantalums.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- ▭ : nonflammable resistor.
- ⏛ : fusible resistor.
- ▭ : panel designation.
- △ : internal component.
- ▭ : adjustment for repeair.*
- ━━ : B+ Line.*
- ━ ━ ━ : B– Line.*
- ⇨ : IN/OUT direction of (+, –) B LINE.*
- Circled numbers refer to waveforms.*

* : indicated by the color red.

Note:
The components identi- fied by mark ⚠ or dotted line with mark ⚠ are critical for safty.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- **Measu**

(CAMER
- The obj
- Voltage
  Readin
- Voltage
  toleranc

1. Connec

2. Adjust
   Fig. b



(VIDEO
VIEW F
- Volta
- Read
- Read
- Volta
  tolera

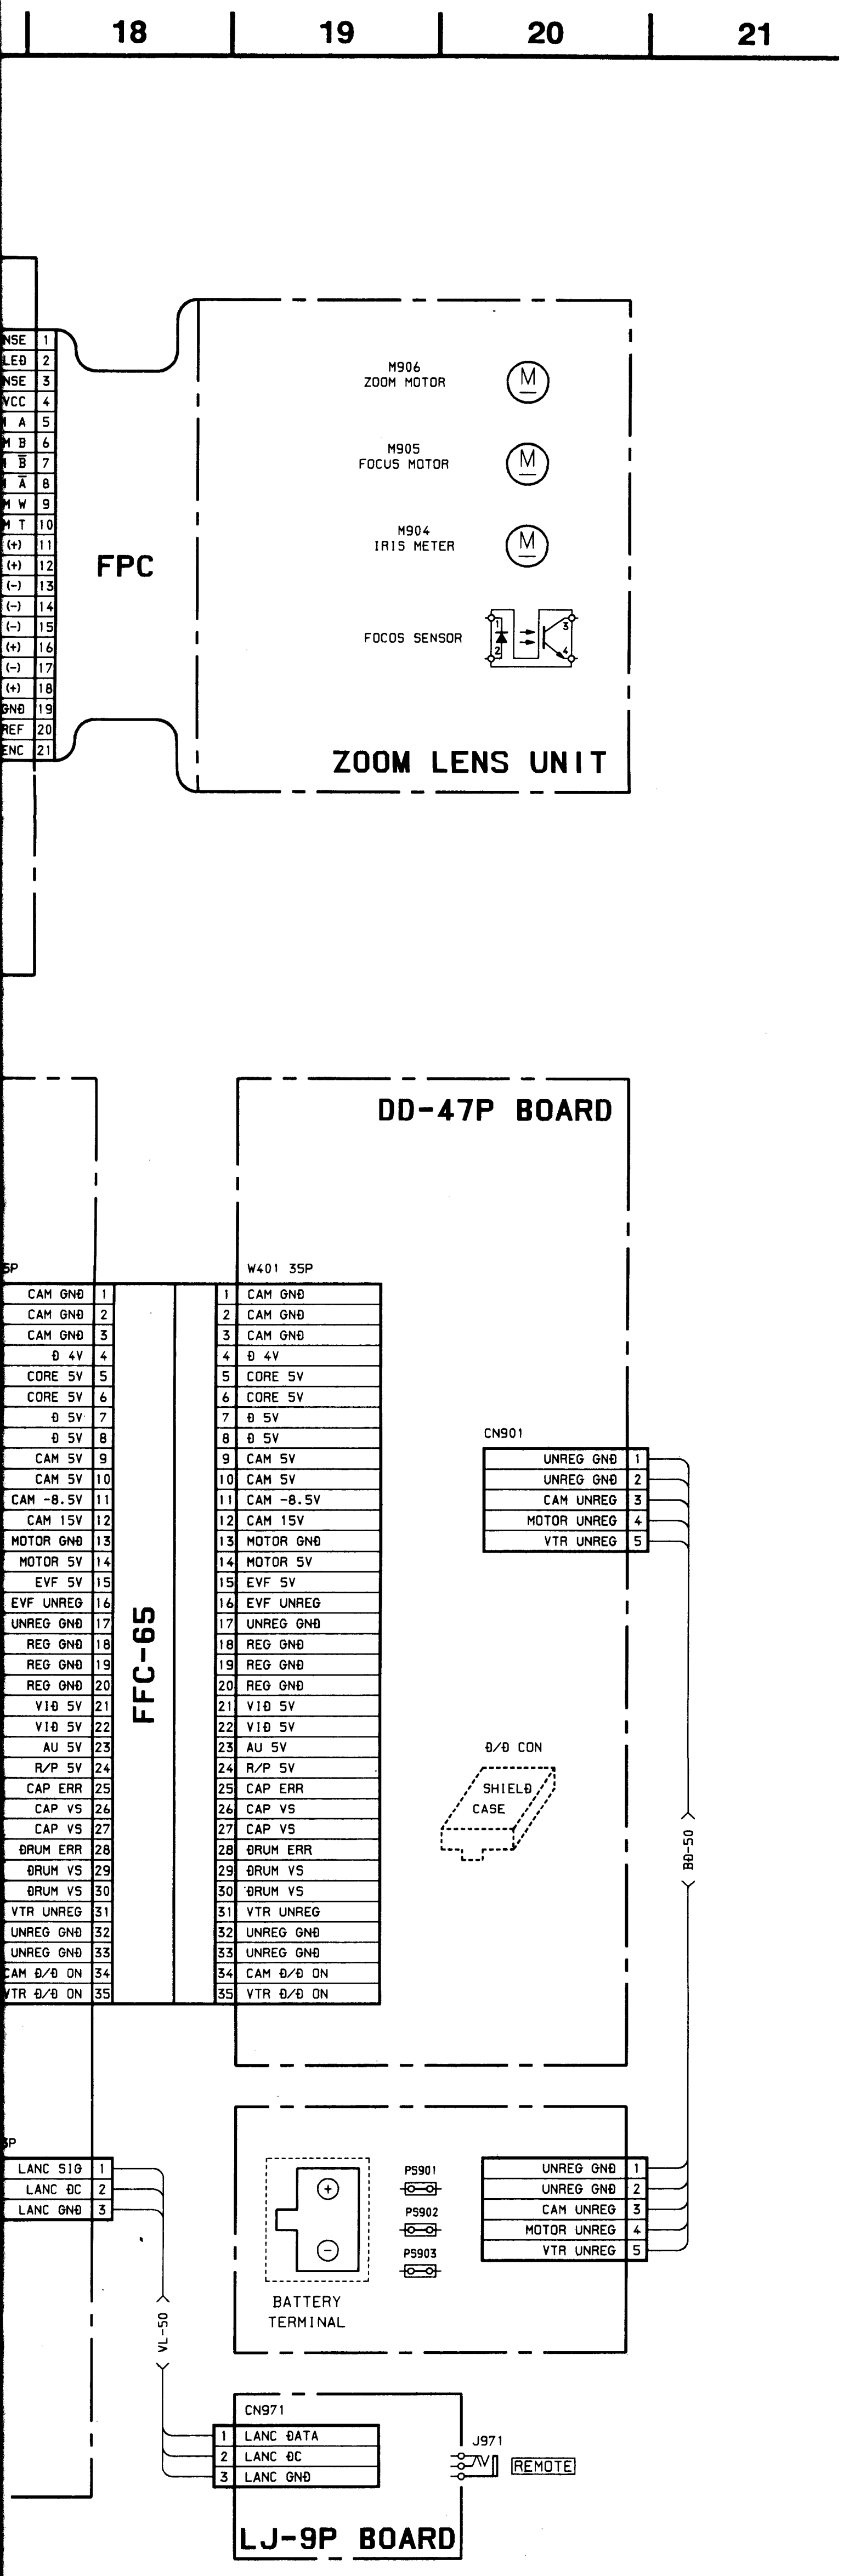
18
19
20
21
FPC
M906 ZOOM MOTOR
M905 FOCUS MOTOR
M904 IRIS METER
FOCOS SENSOR
ZOOM LENS UNIT
DD-47P BOARD
W401 35P
1 CAM GND
2 CAM GND
3 CAM GND
4 D 4V
5 CORE 5V
6 CORE 5V
7 D 5V
8 D 5V
9 CAM 5V
10 CAM 5V
11 CAM -8.5V
12 CAM 15V
13 MOTOR GND
14 MOTOR 5V
15 EVF 5V
16 EVF UNREG
17 UNREG GND
18 REG GND
19 REG GND
20 REG GND
21 VID 5V
22 VID 5V
23 AU 5V
24 R/P 5V
25 CAP ERR
26 CAP VS
27 CAP VS
28 DRUM ERR
29 DRUM VS
30 DRUM VS
31 VTR UNREG
32 UNREG GND
33 UNREG GND
34 CAM D/D ON
35 VTR D/D ON
FFC-65
CN901
UNREG GND 1
UNREG GND 2
CAM UNREG 3
MOTOR UNREG 4
VTR UNREG 5
D/D CON
SHIELD CASE
BD-50
PS901
PS902
PS903
BATTERY TERMINAL
VL-50
CN971
1 LANC DATA
2 LANC DC
3 LANC GND
J971
REMOTE
LJ-9P BOARD

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

- Refer to page 88 to CCD-305E SERVICE MANUAL.

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.

(In addition to this , the necessary note is printed in each block.)

- **For printed wiring boards.**
- ○— : indicated a lead wire mounted on the component side.
- —— : indicated a lead wire mounted on the conductor side.
- ■ : Parts mounted on the conductor side.
- ▨ : Pattern from the side which enables seeing.

(The other layers'patterns are not indicated.)

- Circled numbers refer to waveforms.
- (B) or (F), etc. of capacitors indicate the temperature characteristics.
- ● : Through hole.

Caution:

Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

- **For schematic diagrams.**
- Caution when replacing chip parts.

New parts must be attached after removal of chip.
Be careful not to heat the minuts side of tantalum capacitor, because it is damaged by the heat.

- All resistors are in ohms, 1/4W unless otherwise noted.

Chip resistor are 1/10W unless otherwise noted.
kΩ : 1000Ω , MΩ : 1000kΩ .

- All capacitors are in μF unless otherwise noted. pF: μμF.

50V or less are not indicated except for electrolytics and tantalums.

- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- ▭ : nonflammable resistor.
- ▭ : fusible resistor.
- ▭ : panel designation.
- △ : internal component.
- ▭ : adjustment for repeair.*
- ━━ : B+ Line.*
- ╍╍╍ : B– Line.*
- ⇨ : IN/OUT direction of (+, –) B LINE.*
- Circled numbers refer to waveforms.*

* : indicated by the color red.

Note:
The components identi- fied by mark ⚠ or dotted line with mark ⚠ are critical for safty.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- **Measuring conditions voltage value and waveform.**

(CAMERA, DIGITAL TITLE block)

- The object is color bar chart of pattern box.
- Voltages are dc between ground and measurement points. Readings are taken with a digital multimeter (DC 10MΩ).*
- Voltage variations may be noted due to normal production tolerances.*

1. Connection

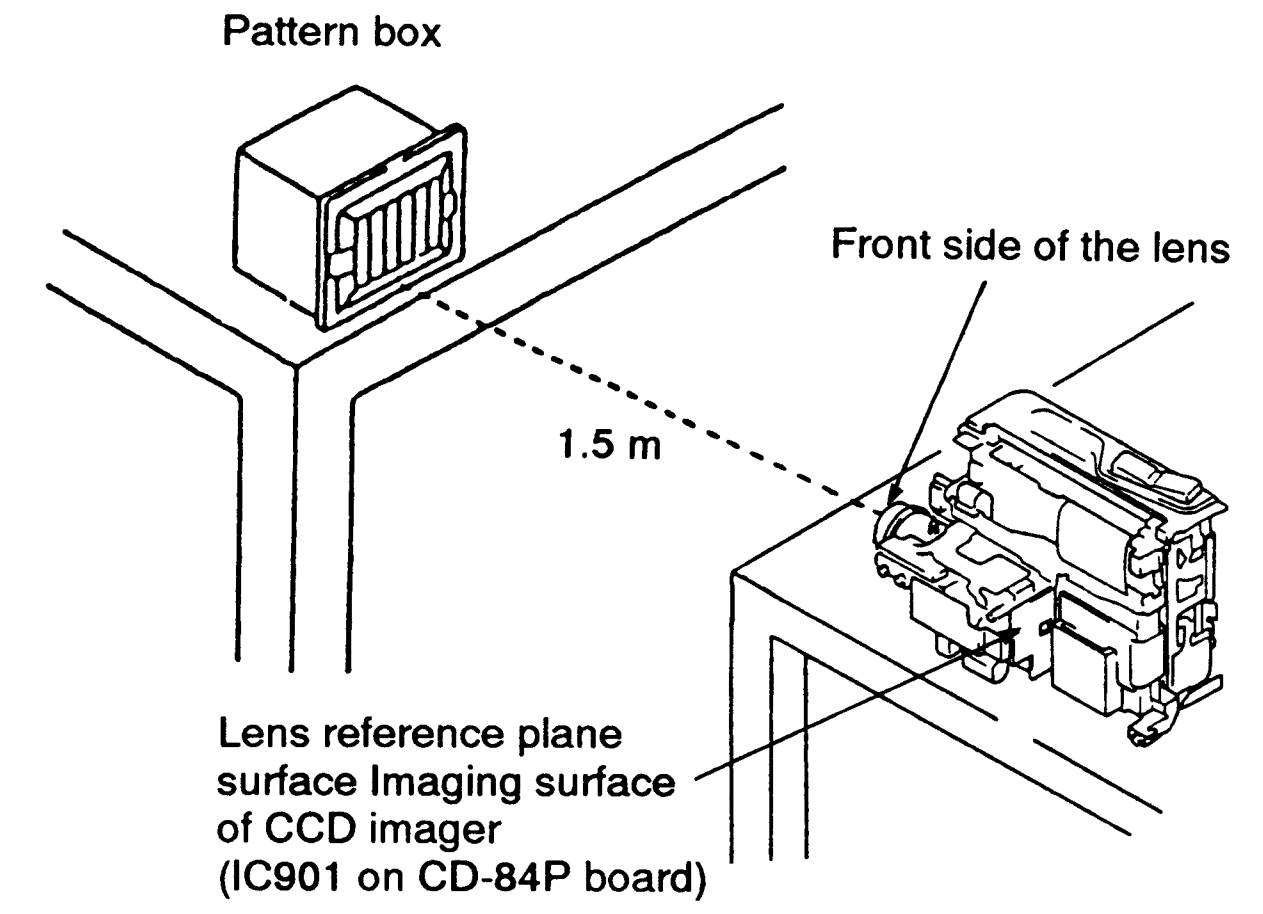
Pattern box
Front side of the lens
1.5 m
Lens reference plane surface Imaging surface of CCD imager (IC901 on CD-84P board)

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

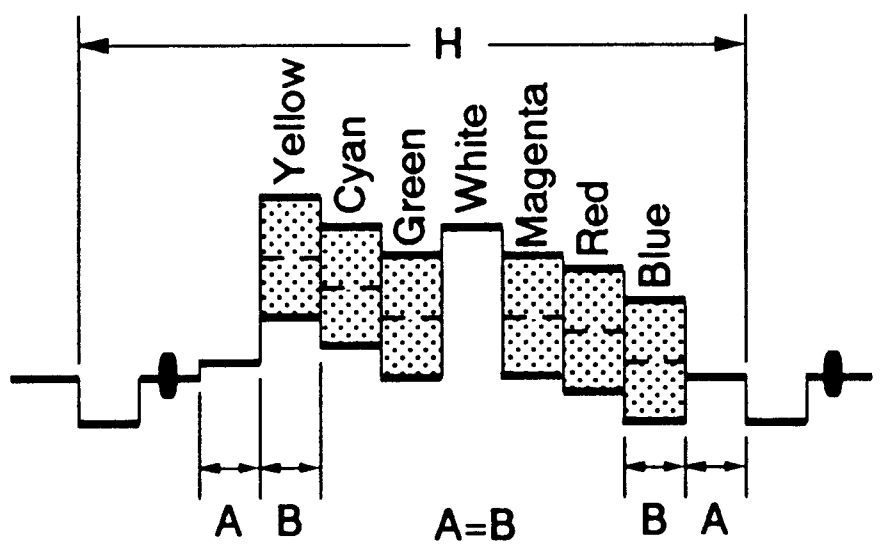
H
Yellow
Cyan
Green
White
Magenta
Red
Blue
A B
A=B
B A

Fig. a (Video output terminal output waveform)

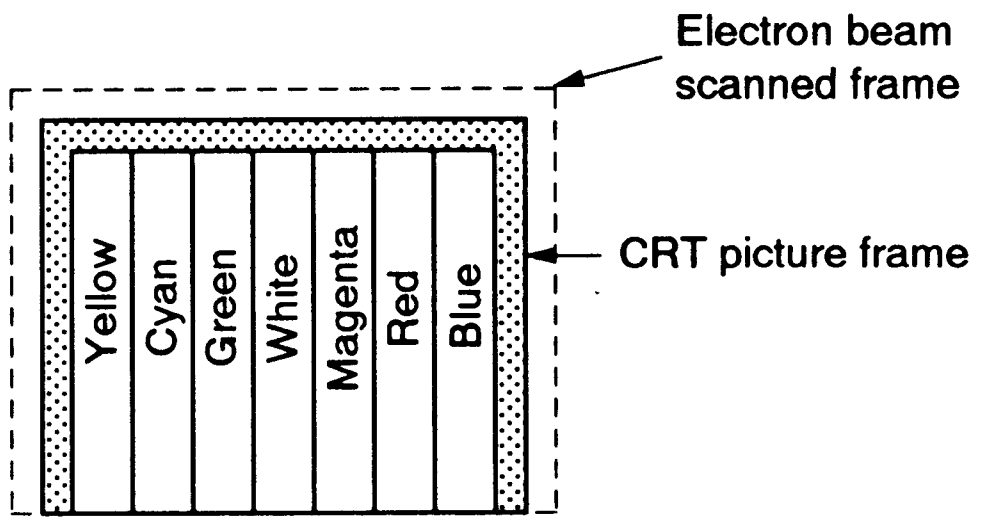
Electron beam scanned frame
CRT picture frame
Yellow
Cyan
Green
White
Magenta
Red
Blue

Fig. (Picture on monitor TV)

(VIDEO, SERVO/SYSTEM CONTROL, LCD CONTROL, VIEW FINDER block)

- Voltages are dc between ground and measurement points.*
- Readings are taken with a color-bar signal input.*
- Readings are taken with a digital multimeter (DC10MΩ).*
- Voltage variations may be noted due to normal production tolerances.*

(DIODE)

D001	8-719-951-22	IC	IMN10
D121	8-719-941-86	DIODE	DAN202U
D152	8-719-991-00	DIODE	DAP222
D154	8-719-989-03	DIODE	DAN222
D157	8-719-991-00	DIODE	DAP222
D159	8-719-941-86	DIODE	DAN202U
D160	8-719-941-86	DIODE	DAN202U

(IC)

IC001	8-752-033-38	IC	CXA1202R
IC002	8-752-033-38	IC	CXA1202R
IC003	8-752-053-21	IC	CXA1211M
IC005	8-759-998-32	IC	CXD-2107M (AEP, UK model)
IC121	8-759-605-61	IC	CXA1203N
IC151	8-752-036-19	IC	CXA1207R
IC152	8-752-036-20	IC	CXA1208R
IC153	8-759-710-29	IC	NJM2235M
IC154	8-752-333-24	IC	CXL1506M
IC155	8-752-053-21	IC	CXA1211M
IC156	8-759-064-36	IC	MB88346BPFV-EF
IC158	8-759-064-36	IC	MB88346BPFV-EF
IC159	8-759-636-33	IC	CXA1452N
IC401	8-752-838-56	IC	CXP80624-413R
IC402	8-759-069-29	IC	uPD6456GS-618
IC403	8-759-044-78	IC	AK6420F
IC404	8-759-057-81	IC	MPC1727VMER
IC405	8-759-059-42	IC	CXA1481AR
IC406	8-759-999-02	IC	TL1596CDB
IC407	8-759-057-77	IC	MCD004BN
IC408	8-759-057-74	IC	MCD002AR
IC409	8-759-823-90	IC	LB8110M

(TRANSISTOR)

Q001	8-729-216-22	TRANSISTOR	2SA1162-G
Q003	8-729-905-23	TRANSISTOR	2SA1576-R
Q004	8-729-905-18	TRANSISTOR	DTC144EU
Q005	8-729-905-18	TRANSISTOR	DTC144EU
Q006	8-729-823-86	TRANSISTOR	2SA1745
Q007	8-729-823-86	TRANSISTOR	2SA1745
Q008	8-729-905-23	TRANSISTOR	2SA1576-R
Q009	8-729-905-23	TRANSISTOR	2SA1576-R
Q010	8-729-905-12	TRANSISTOR	DTA144EU
Q011	8-729-905-18	TRANSISTOR	DTC144EU
Q012	8-729-905-18	TRANSISTOR	DTC144EU
Q013	8-729-823-86	TRANSISTOR	2SA1745
Q014	8-729-823-86	TRANSISTOR	2SA1745
Q015	8-729-905-23	TRANSISTOR	2SA1576-R
Q016	8-729-905-23	TRANSISTOR	2SA1576-R
Q017	8-729-905-12	TRANSISTOR	DTA144EU
Q018	8-729-905-18	TRANSISTOR	DTC144EU
Q019	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q020	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q021	8-729-905-23	TRANSISTOR	2SA1576-R
Q022	8-729-905-23	TRANSISTOR	2SA1576-R
Q023	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q024	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q025	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q026	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q027	8-729-905-96	TRANSISTOR	DTA114TU (AEP, UK model)
Q028	8-729-905-96	TRANSISTOR	DTA114TU (AEP, UK model)
Q029	8-729-905-96	TRANSISTOR	DTA114TU
Q030	8-729-905-15	TRANSISTOR	DTC144WU
Q031	8-729-905-18	TRANSISTOR	DTC144EU (AEP, UK model)
Q121	8-729-905-12	TRANSISTOR	DTA144EU
Q123	8-729-905-18	TRANSISTOR	DTC144EU
Q124	8-729-905-12	TRANSISTOR	DTA144EU
Q125	8-729-117-73	TRANSISTOR	2SC4178-F14
Q126	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q151	8-729-101-07	TRANSISTOR	2SB798-DL
Q152	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q153	8-729-928-81	TRANSISTOR	DTC144EE
Q154	8-729-927-XX	TRANSISTOR	2SC4617TL-QR
Q155	8-729-823-16	TRANSISTOR	2SC4555-5. 6. 7
Q158	8-729-927-XX	TRANSISTOR	2SC4617TL-QR
Q160	8-729-928-19	TRANSISTOR	2SA1774R (AEP, UK model)
Q161	8-729-927-XX	TRANSISTOR	2SC4617TL-QR
Q162	8-729-928-27	TRANSISTOR	DTA144EE
Q166	8-729-928-19	TRANSISTOR	2SA1774R
Q168	8-729-928-27	TRANSISTOR	DTA144EE
Q169	8-729-905-18	TRANSISTOR	DTC144EU
Q170	8-729-421-90	TRANSISTOR	XN4113
Q171	8-729-117-73	TRANSISTOR	2SC4178-F14
Q172	8-729-117-73	TRANSISTOR	2SC4178-F14
Q173	8-729-905-18	TRANSISTOR	DTC144EU
Q174	8-729-117-73	TRANSISTOR	2SC4178-F14
Q175	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q176	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q177	8-729-905-23	TRANSISTOR	2SA1576-R
Q178	8-729-905-23	TRANSISTOR	2SA1576-R
Q180	8-729-422-54	TRANSISTOR	XN4215
Q181	8-729-905-18	TRANSISTOR	DTC144EU (AEP, UK model)
Q182	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q183	8-729-905-96	TRANSISTOR	DTA114TU
Q184	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q185	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q188	8-729-402-81	TRANSISTOR	XN4501
Q189	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q191	8-729-927-XX	TRANSISTOR	2SC4617TL-QR
Q192	8-729-927-XX	TRANSISTOR	2SC4617TL-QR
Q194	8-729-927-XX	TRANSISTOR	2SC4617TL-QR
Q195	8-729-928-19	TRANSISTOR	2SA1774R
Q199	8-729-807-87	TRANSISTOR	2SB1295-UL6
Q200	8-729-905-18	TRANSISTOR	DTC144EU
Q201	8-729-420-12	TRANSISTOR	XN4213
Q202	8-729-117-16	TRANSISTOR	2SA1611-M6
Q203	8-729-905-23	TRANSISTOR	2SA1576-R
Q204	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q205	8-729-420-12	TRANSISTOR	XN4213
Q207	8-729-905-12	TRANSISTOR	DTA144EU
Q208	8-729-905-18	TRANSISTOR	DTC144EU
Q210	8-729-420-12	TRANSISTOR	XN4213
Q211	8-729-823-16	TRANSISTOR	2SC4555-5. 6. 7 (AEP, UK model)
Q212	8-729-905-23	TRANSISTOR	2SA1576-R
Q213	8-729-823-16	TRANSISTOR	2SC4555-5. 6. 7 (AEP, UK model)
Q214	8-729-420-12	TRANSISTOR	XN4213
Q216	8-729-905-18	TRANSISTOR	DTC144EU (AEP, UK model)
Q219	8-729-905-12	TRANSISTOR	DTA144EU
Q220	8-729-905-18	TRANSISTOR	DTC144EU
Q221	8-729-420-12	TRANSISTOR	XN4213
Q222	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q223	8-729-905-18	TRANSISTOR	DTC144EU
Q224	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q225	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q227	8-729-117-16	TRANSISTOR	2SA1611-M6
Q228	8-729-420-12	TRANSISTOR	XN4213
Q229	8-729-905-23	TRANSISTOR	2SA1576-R
Q230	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q231	8-729-905-23	TRANSISTOR	2SA1576-R
Q232	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q233	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q234	8-729-905-23	TRANSISTOR	2SA1576-R
Q236	8-729-905-09	TRANSISTOR	DTA144WU
Q237	8-729-928-19	TRANSISTOR	2SA1774R
Q401	8-729-905-12	TRANSISTOR	DTA144EU
Q402	8-729-905-18	TRANSISTOR	DTC144EU
Q403	8-729-907-00	TRANSISTOR	DTC114EU
Q404	8-729-905-23	TRANSISTOR	2SA1576-R

VS-93P (VIDEO HEAD AMP, VIDEO, SERVO/SYSTEM CONTROL) PRINTED WIRING BOARDS

— Ref. No. VS-93P BOARD: 3000 series —

VS-93P BOARD (COMPONENT SIDE)

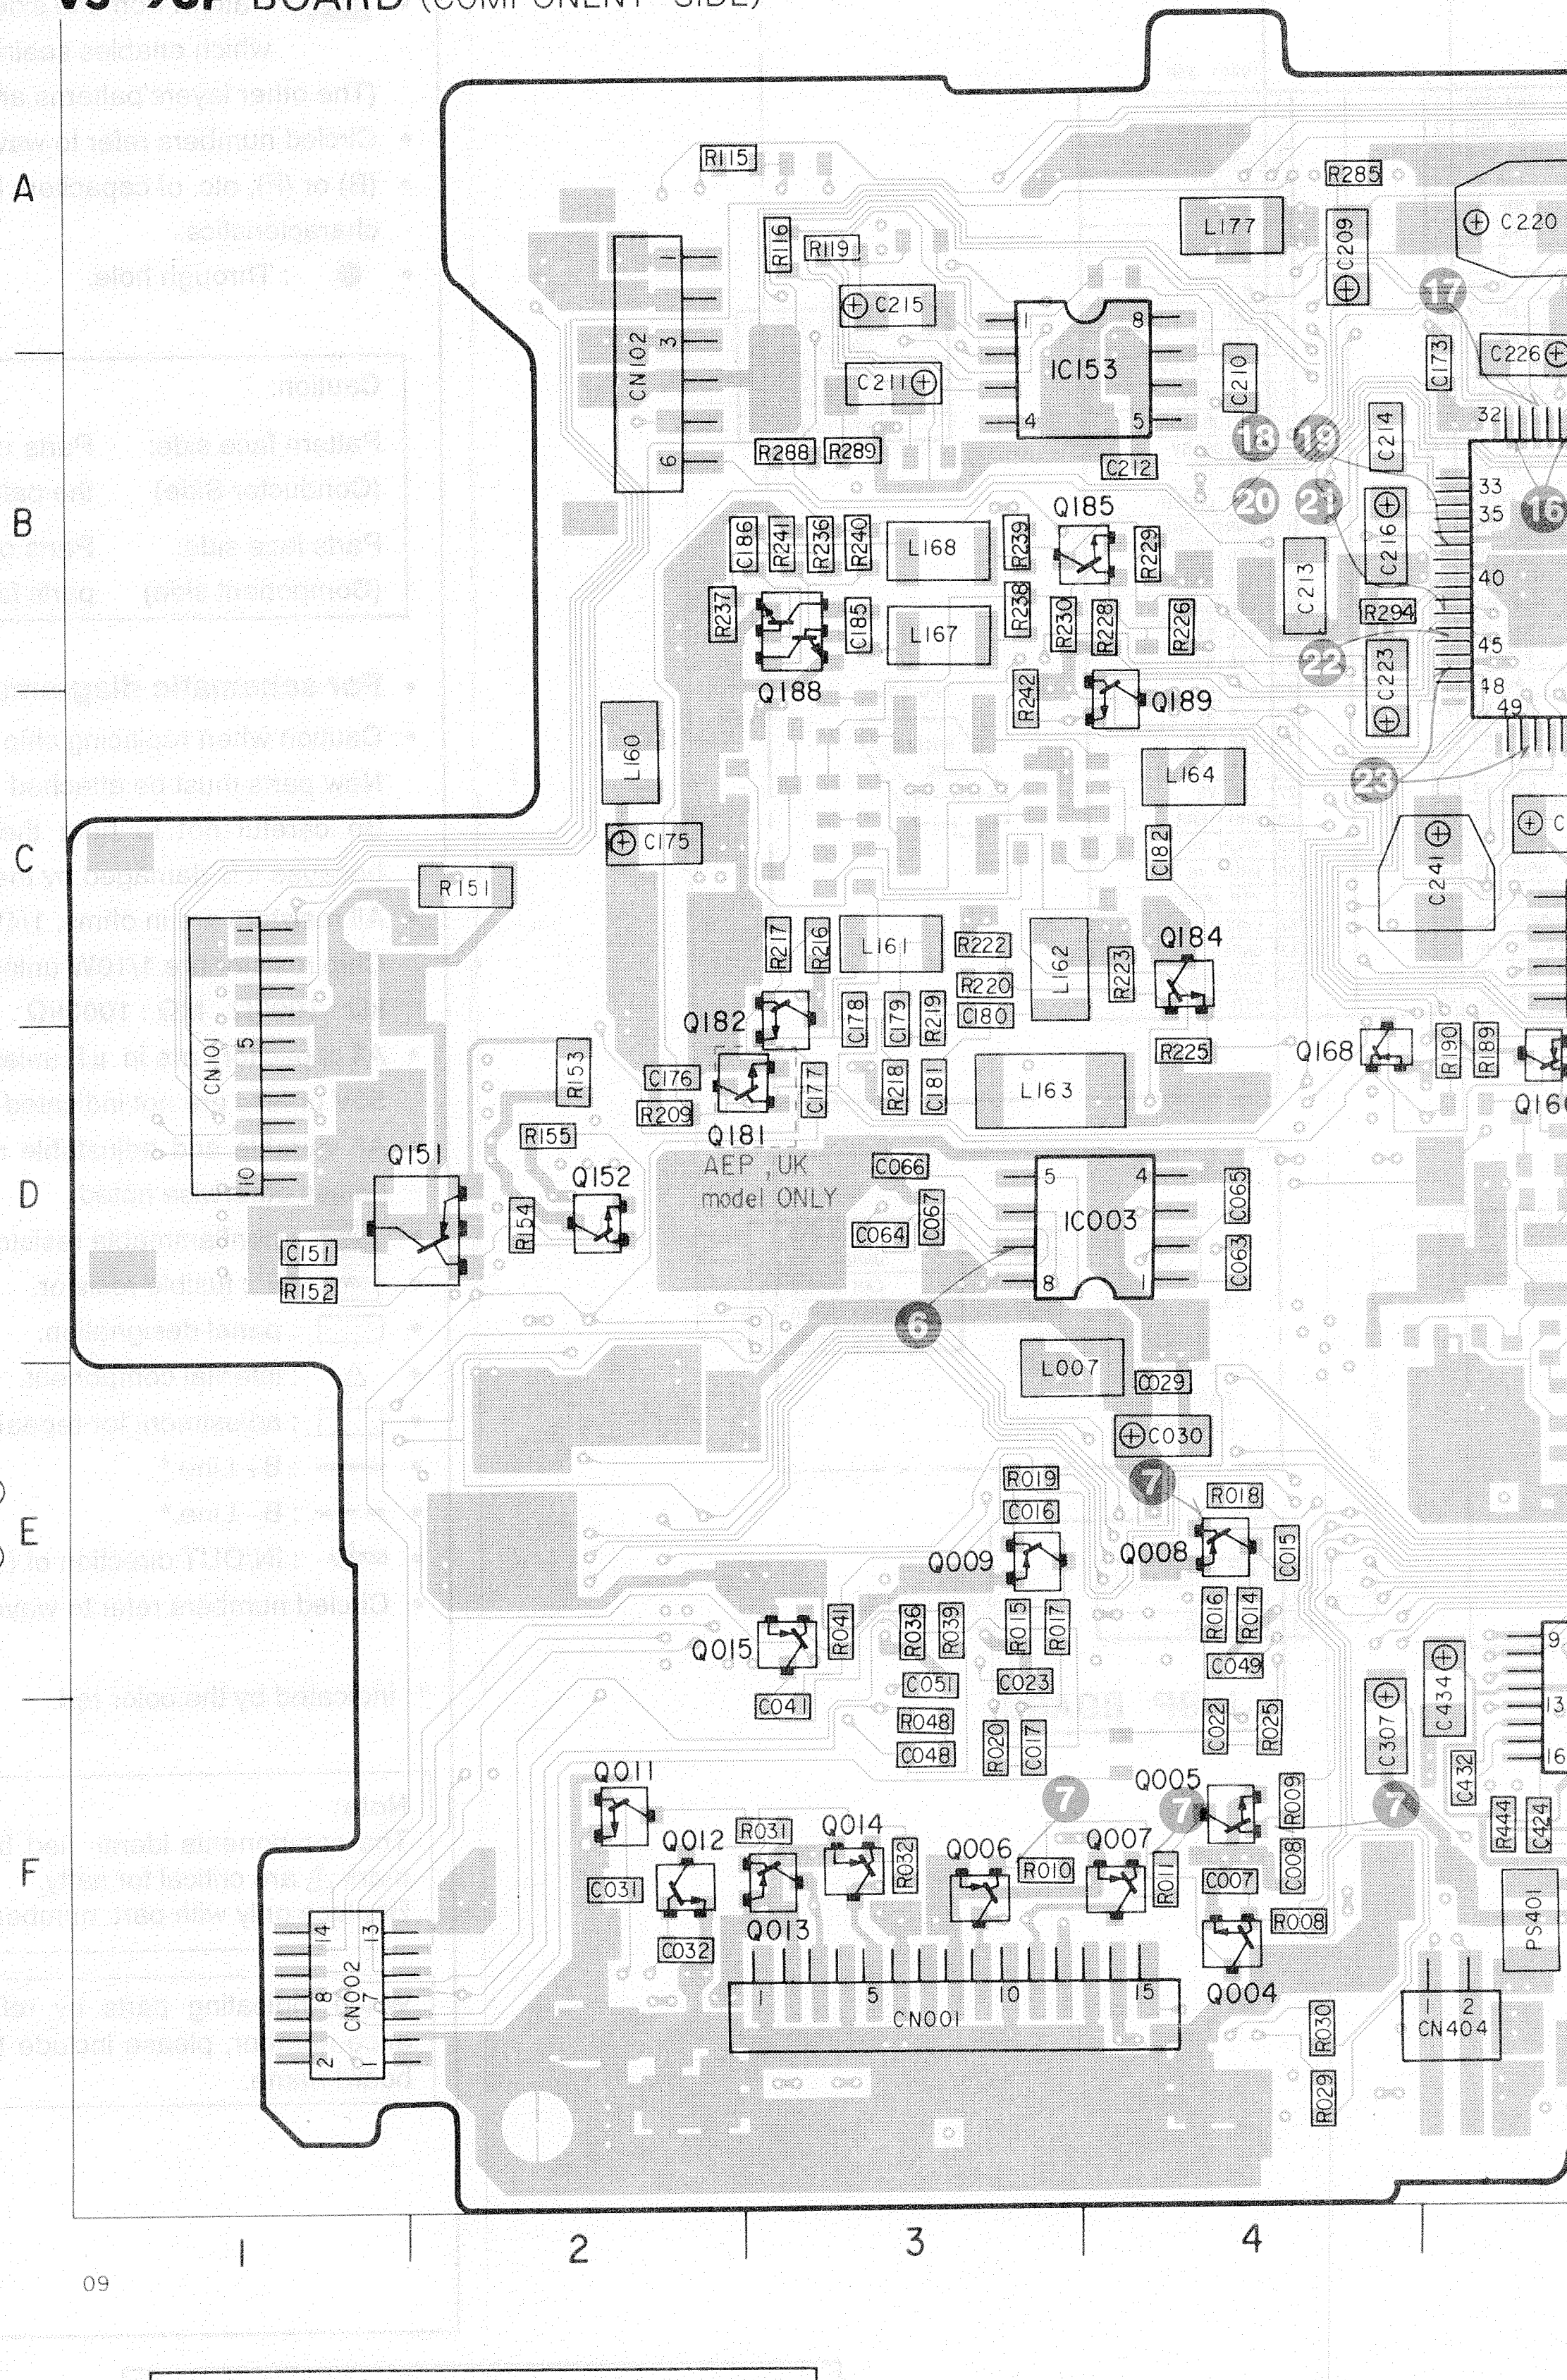

CONTROL) PRINTED WIRING BOARDS

- **For printed wiring boards.**
- VS-93P board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:	
Pattern face side: (Conductor Side)	Parts the p
Parts face side: (Component side)	Parts patte

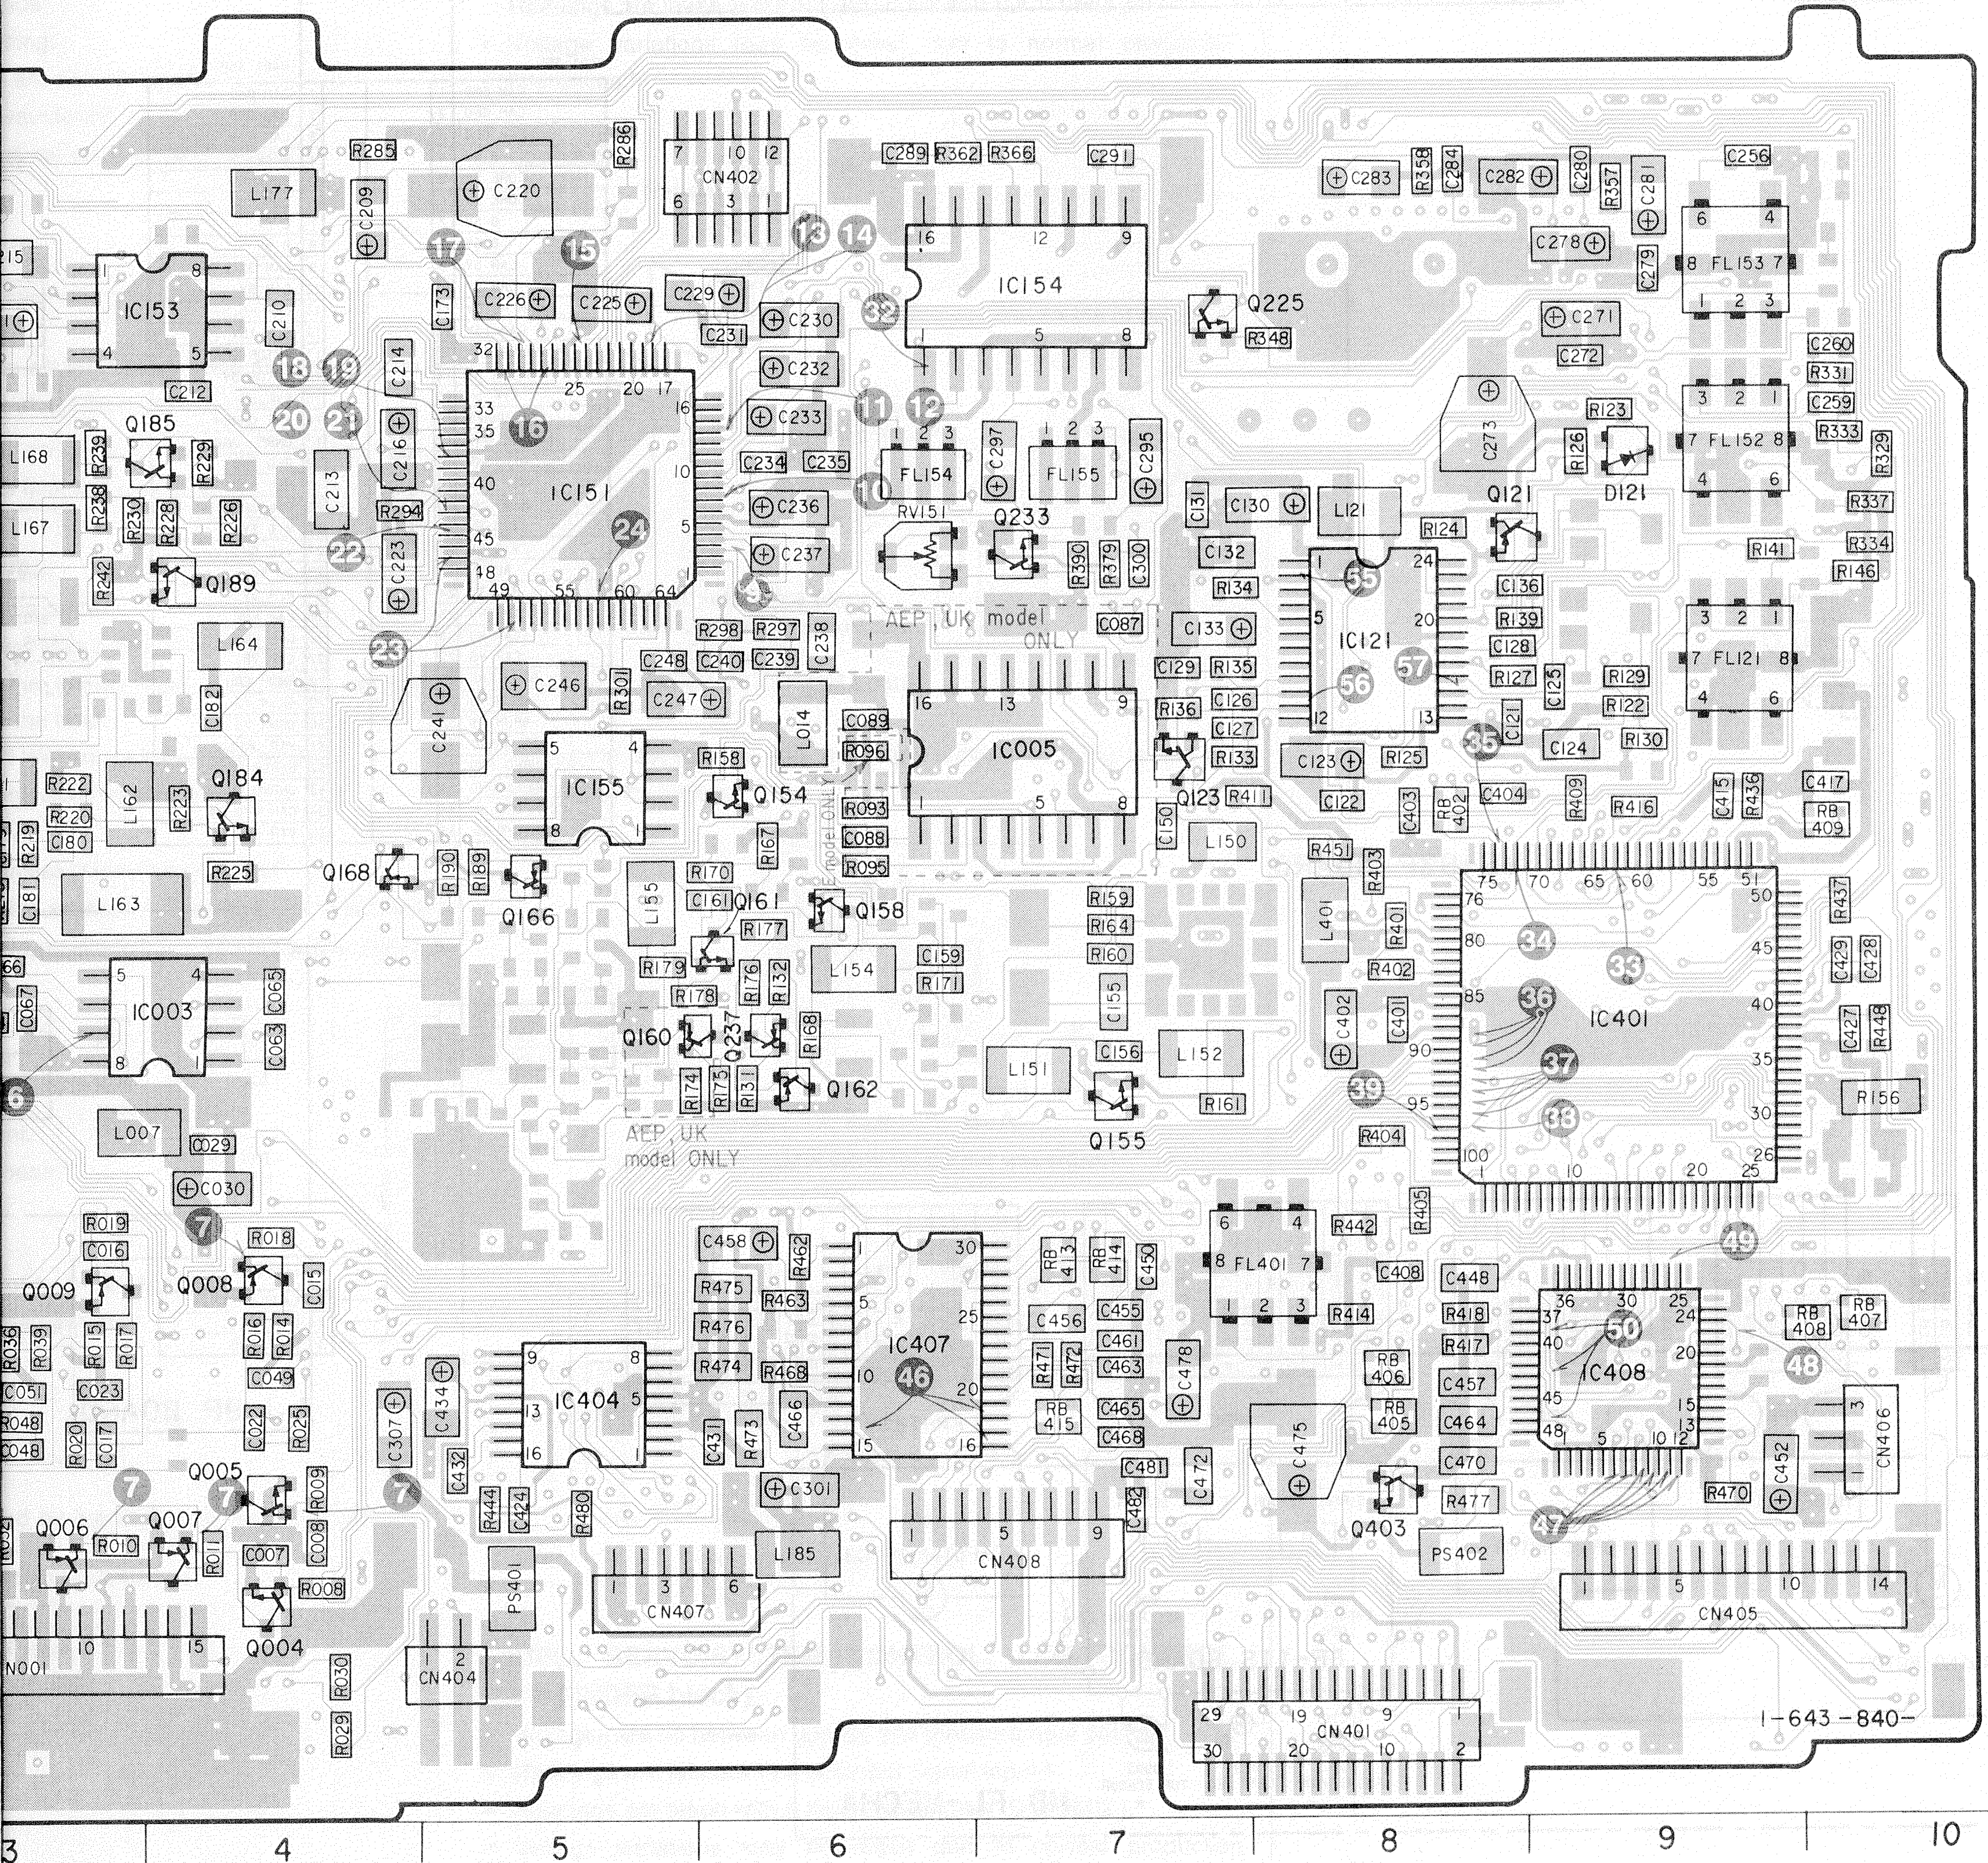
IC151
IC153
IC154
IC155
IC121
IC005
IC003
IC401
IC404
IC407
IC408
CN401
CN402
CN404
CN405
CN407
CN408
CN406
FL154
FL155
FL152
FL153
FL121
FL401
RV151
PS401
PS402
AEP, UK model ONLY
1-643-840-
23
3
4
5
6
7
8
9
10

VS-93P BOARD (CONDUCTOR SID

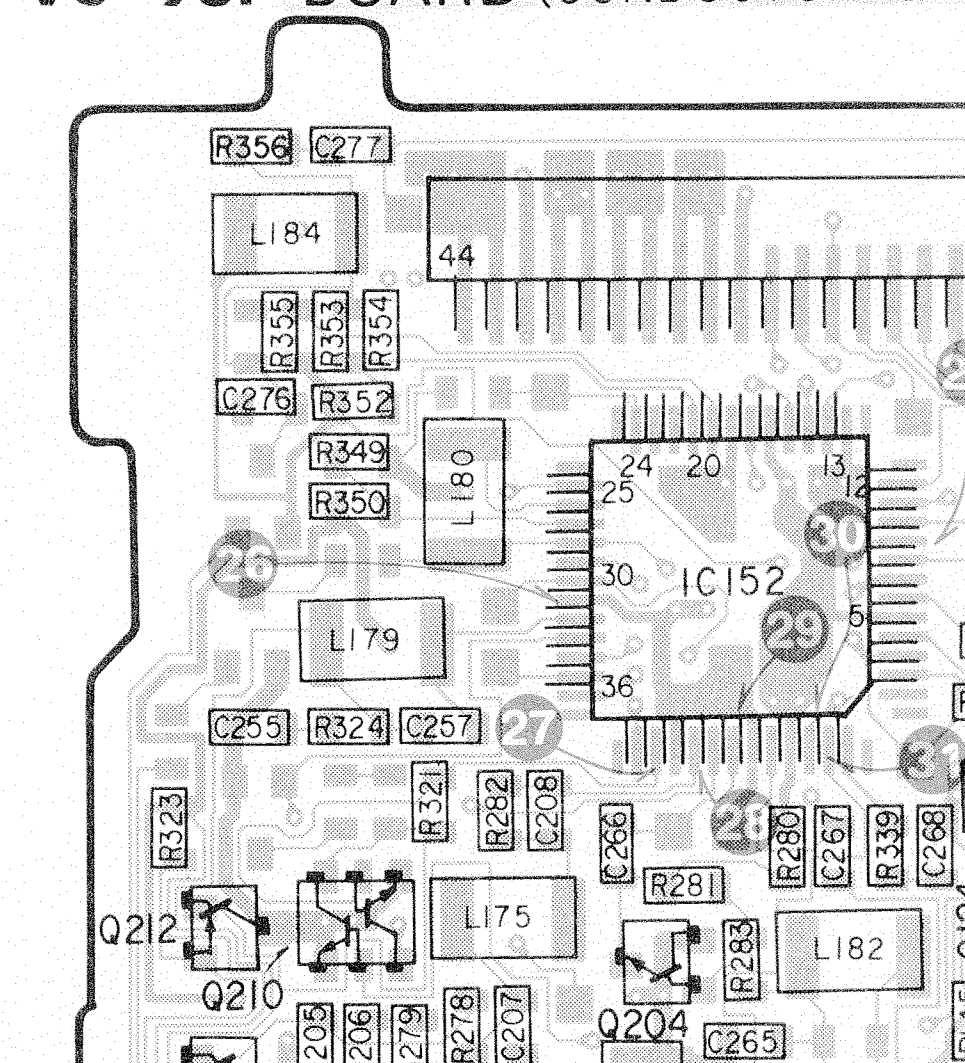
IC152
IC406
W401
W403
X401
L184
Q212
Q210
Q204
Q203
Q404
11
12

r layers

Caution:

Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the pattern face are indicated.

93P BOARD (CONDUCTOR SIDE)

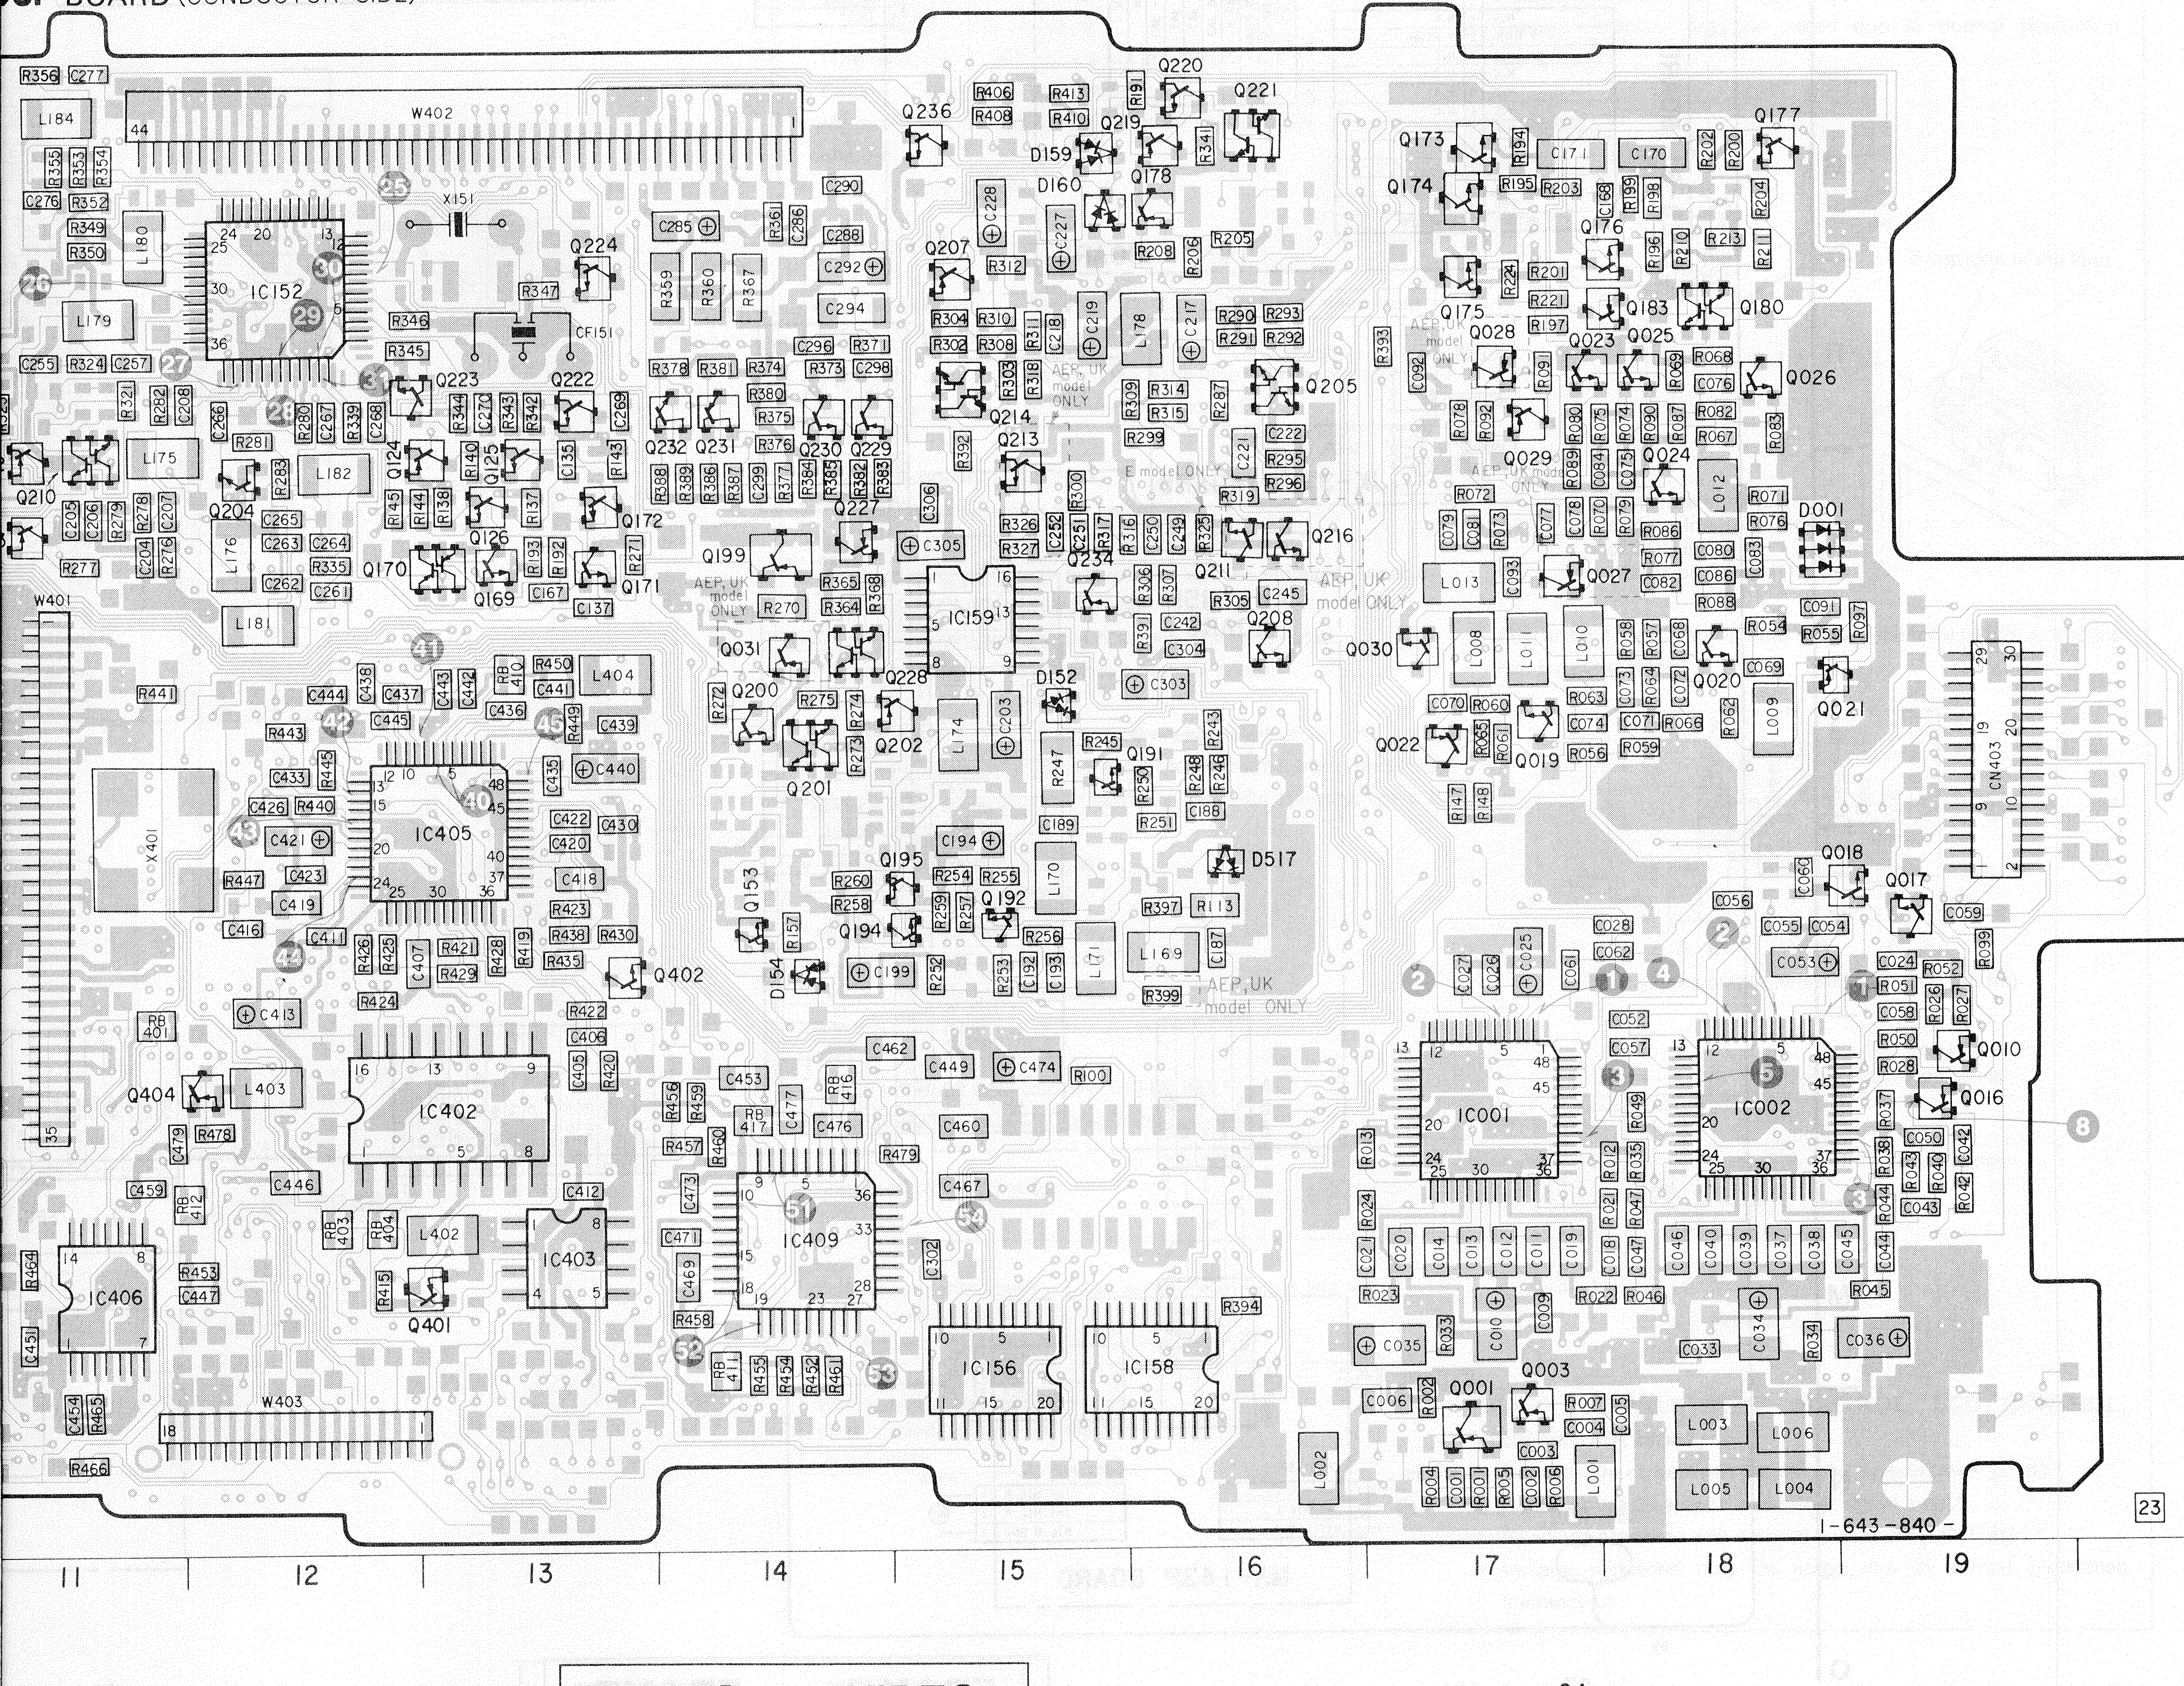
W402
W401
W403
IC152
IC405
IC402
IC403
IC406
IC409
IC159
IC156
IC158
IC001
IC002
CN403
X151
X401
1-643-840-
23
11
12
13
14
15
16
17
18
19

VS-93P (VIDEO HEAD AMP) SCHEMATIC DIAGRAM

• Refer to page 31 for Printed Wiring Board.

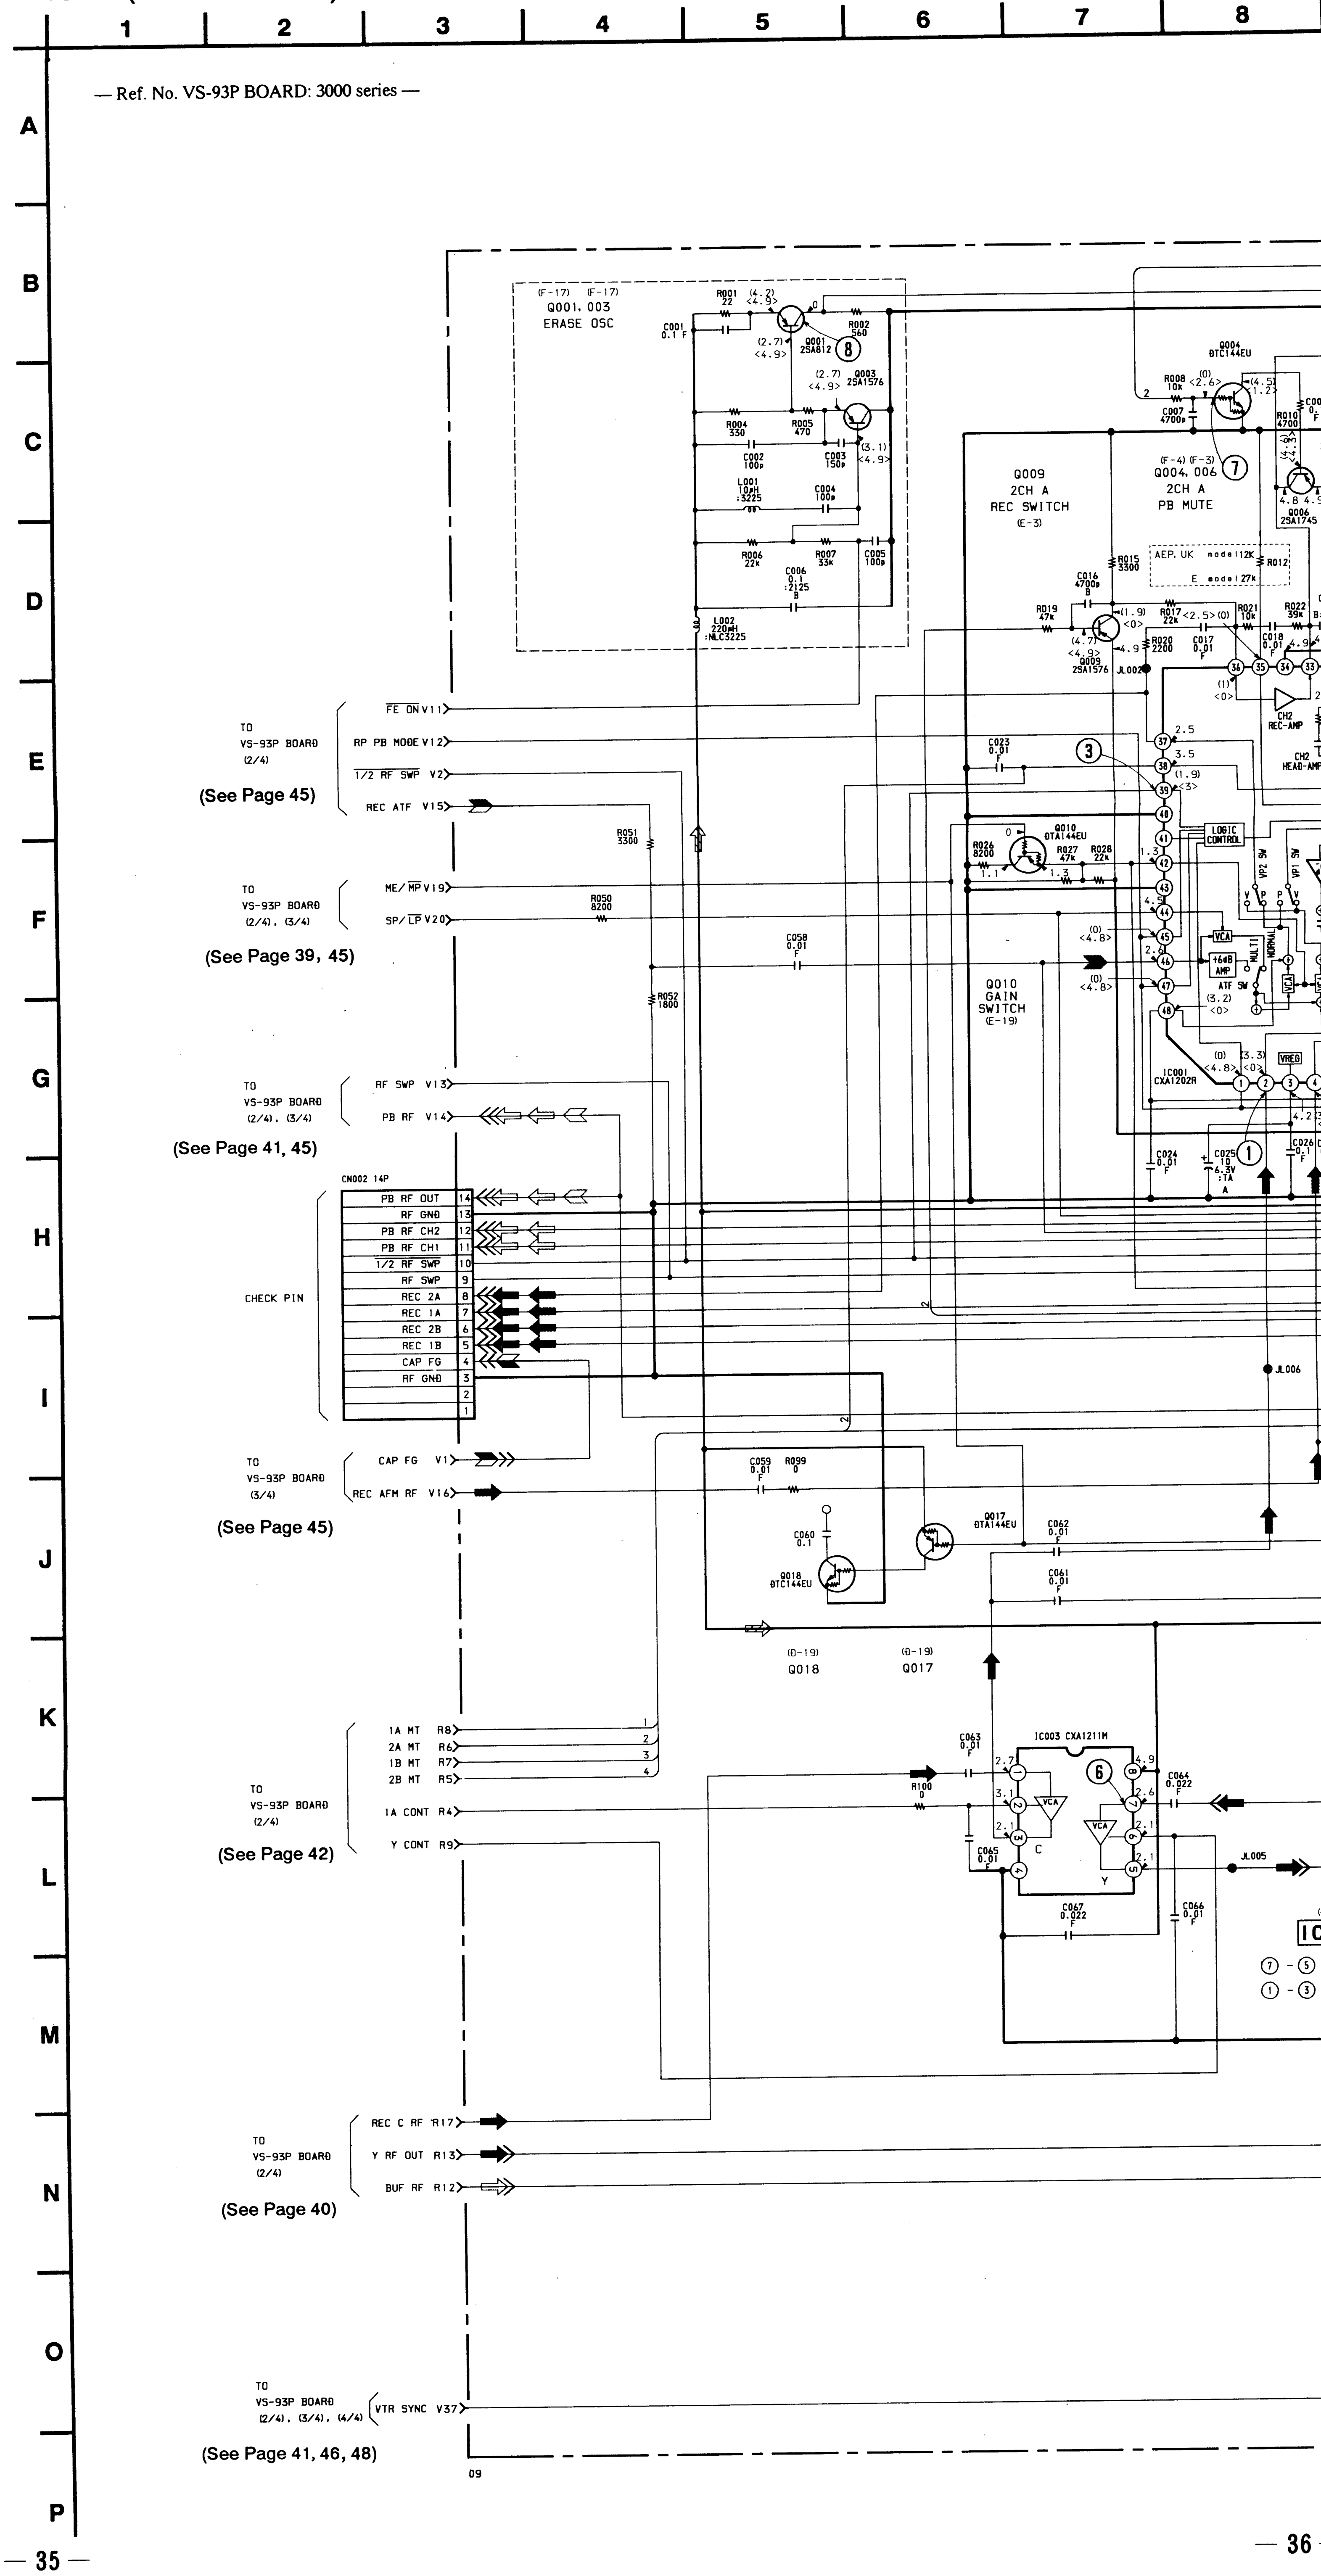

— Ref. No. VS-93P BOARD: 3000 series —

1
2
3
4
5
6
7
8
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
Q001, 003
ERASE OSC
Q001 2SA812
Q003 2SA1576
Q004 DTC144EU
Q009
2CH A
REC SWITCH
Q004, 006
2CH A
PB MUTE
Q006 2SA1745
AEP, UK model 12K
E model 27K
Q010 DTA144EU
Q010
GAIN
SWITCH
IC001
CXA1202R
LOGIC CONTROL
VCA
+6dB AMP
ATF SW
VREG
CH2 REC-AMP
CH2 HEAD-AMP
Q017 DTA144EU
Q018 DTC144EU
IC003 CXA1211M
TO
VS-93P BOARD
(2/4)
FE ON V11
RP PB MODE V12
1/2 RF SWP V2
REC ATF V15
(See Page 45)
TO
VS-93P BOARD
(2/4), (3/4)
ME/MP V19
SP/LP V20
(See Page 39, 45)
TO
VS-93P BOARD
(2/4), (3/4)
RF SWP V13
PB RF V14
(See Page 41, 45)
CN002 14P
PB RF OUT
RF GND
PB RF CH2
PB RF CH1
1/2 RF SWP
RF SWP
REC 2A
REC 1A
REC 2B
REC 1B
CAP FG
RF GND
CHECK PIN
TO
VS-93P BOARD
(3/4)
CAP FG V1
REC AFM RF V16
(See Page 45)
TO
VS-93P BOARD
(2/4)
1A MT R8
2A MT R6
1B MT R7
2B MT R5
1A CONT R4
Y CONT R9
(See Page 42)
TO
VS-93P BOARD
(2/4)
REC C RF R17
Y RF OUT R13
BUF RF R12
(See Page 40)
TO
VS-93P BOARD
(2/4), (3/4), (4/4)
VTR SYNC V37
(See Page 41, 46, 48)
JL005
JL006

ng Board.

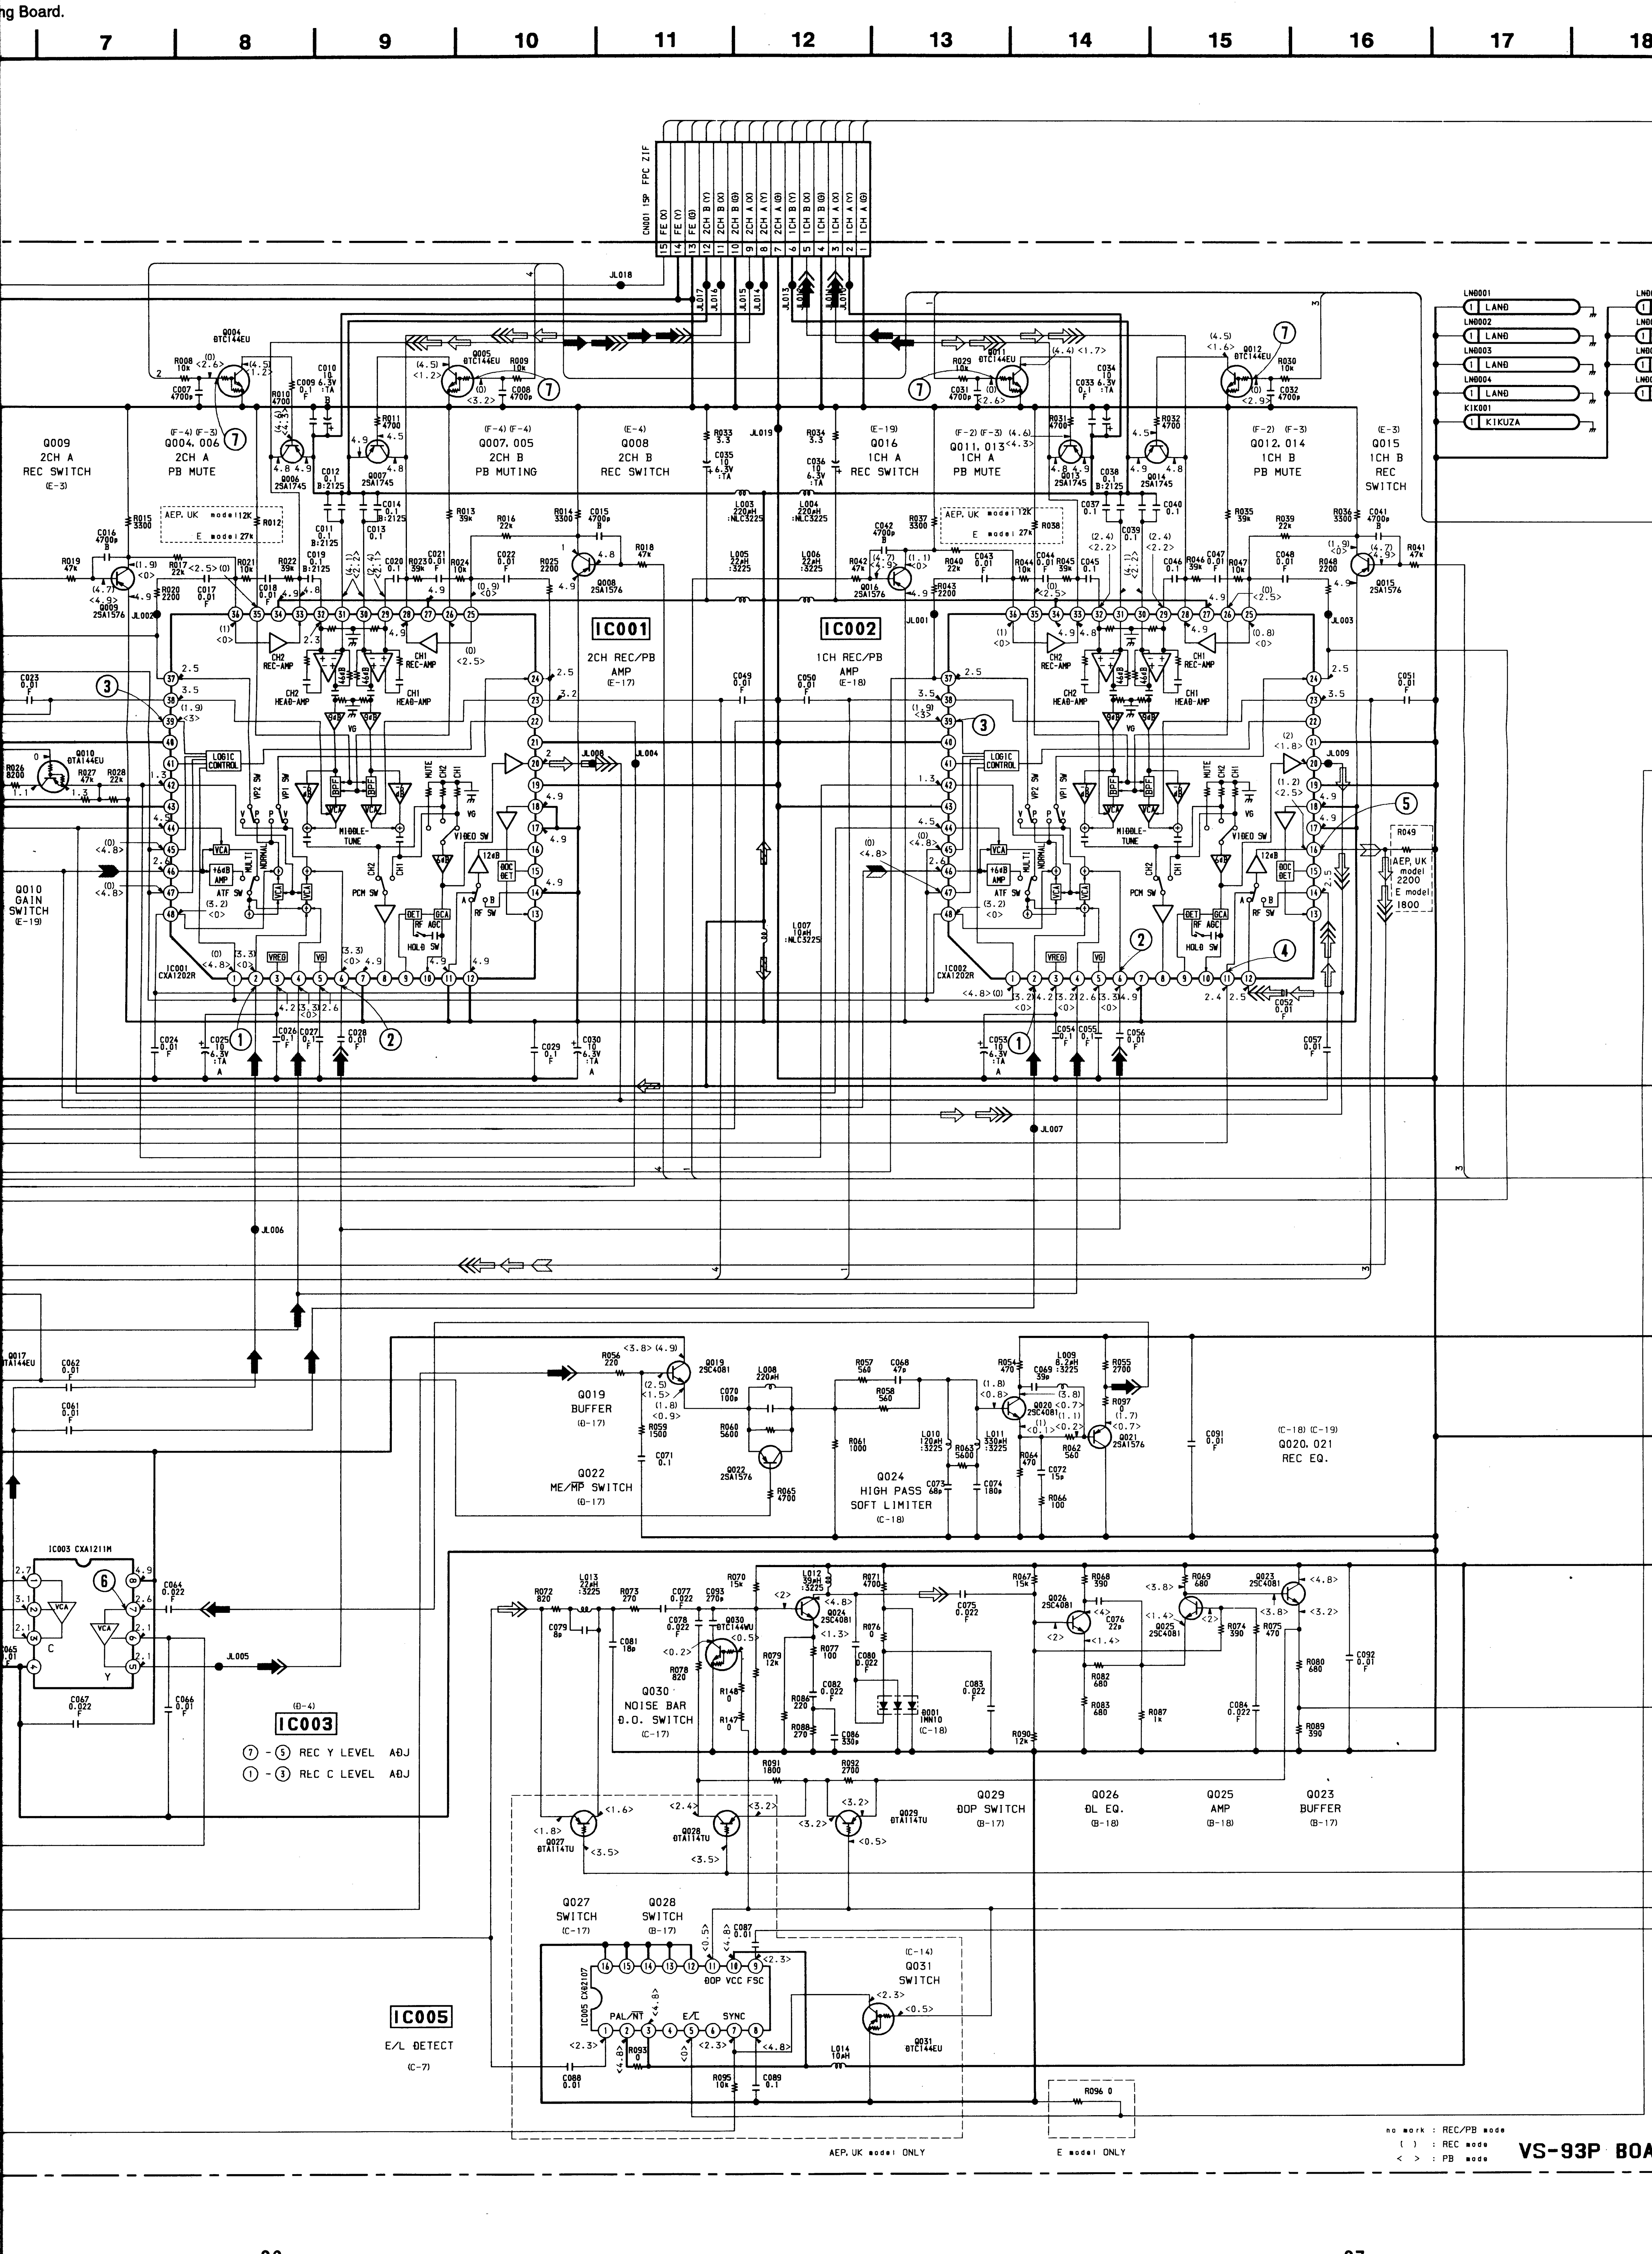
7
8
9
10
11
12
13
14
15
16
17
18
CN001 15P FPC ZIF
FE (X)
FE (Y)
FE (G)
2CH B (Y)
2CH B (X)
2CH B (G)
2CH A (X)
2CH A (Y)
2CH A (G)
1CH B (Y)
1CH B (G)
1CH B (X)
1CH A (X)
1CH A (Y)
1CH A (G)
JL018
JL017
JL016
JL015
JL014
JL013
JL019
JL001
JL002
JL003
JL004
JL005
JL006
JL007
JL008
JL009
Q009 2CH A REC SWITCH (E-3)
Q004, 006 2CH A PB MUTE (F-4) (F-3)
Q007, 005 2CH B PB MUTING (F-4) (F-4)
Q008 2CH B REC SWITCH (E-4)
Q016 1CH A REC SWITCH (E-19)
Q011, 013 1CH A PB MUTE (F-2) (F-3)
Q012, 014 1CH B PB MUTE (F-2) (F-3)
Q015 1CH B REC SWITCH (E-3)
Q010 GAIN SWITCH (E-19)
IC001 2CH REC/PB AMP (E-17)
IC002 1CH REC/PB AMP (E-18)
IC001 CXA1202R
IC002 CXA1202R
AEP, UK model 12K
E model 27K
AEP, UK model 2200
E model 1800
REC-AMP
HEAD-AMP
LOGIC CONTROL
MIDDLE-TUNE
VIDEO SW
PCM SW
ATF SW
RF SW
HOLD SW
RF AGC
VREG
VG
MUTE
LN0001 LAND
LN0002 LAND
LN0003 LAND
LN0004 LAND
KIK001 KIKUZA
Q017 DTA144EU
IC003 CXA1211M
VCA
IC003 (D-4)
⑦ - ⑤ REC Y LEVEL ADJ
① - ③ REC C LEVEL ADJ
Q019 BUFFER (D-17)
Q022 ME/MP SWITCH (D-17)
Q024 HIGH PASS SOFT LIMITER (C-18)
Q020, 021 REC EQ. (C-18) (C-19)
Q030 NOISE BAR D.O. SWITCH (C-17)
D001 1MN10 (C-18)
Q029 DOP SWITCH (B-17)
Q026 DL EQ. (B-18)
Q025 AMP (B-18)
Q023 BUFFER (B-17)
Q027 SWITCH (C-17)
Q028 SWITCH (B-17)
Q031 SWITCH (C-14)
IC005 CX20107
IC005 E/L DETECT (C-7)
DOP VCC FSC
PAL/NT
E/E
SYNC
R096 0
AEP, UK model ONLY
E model ONLY

no mark : REC/PB mode
( ) : REC mode
< > : PB mode

VS-93P BOA

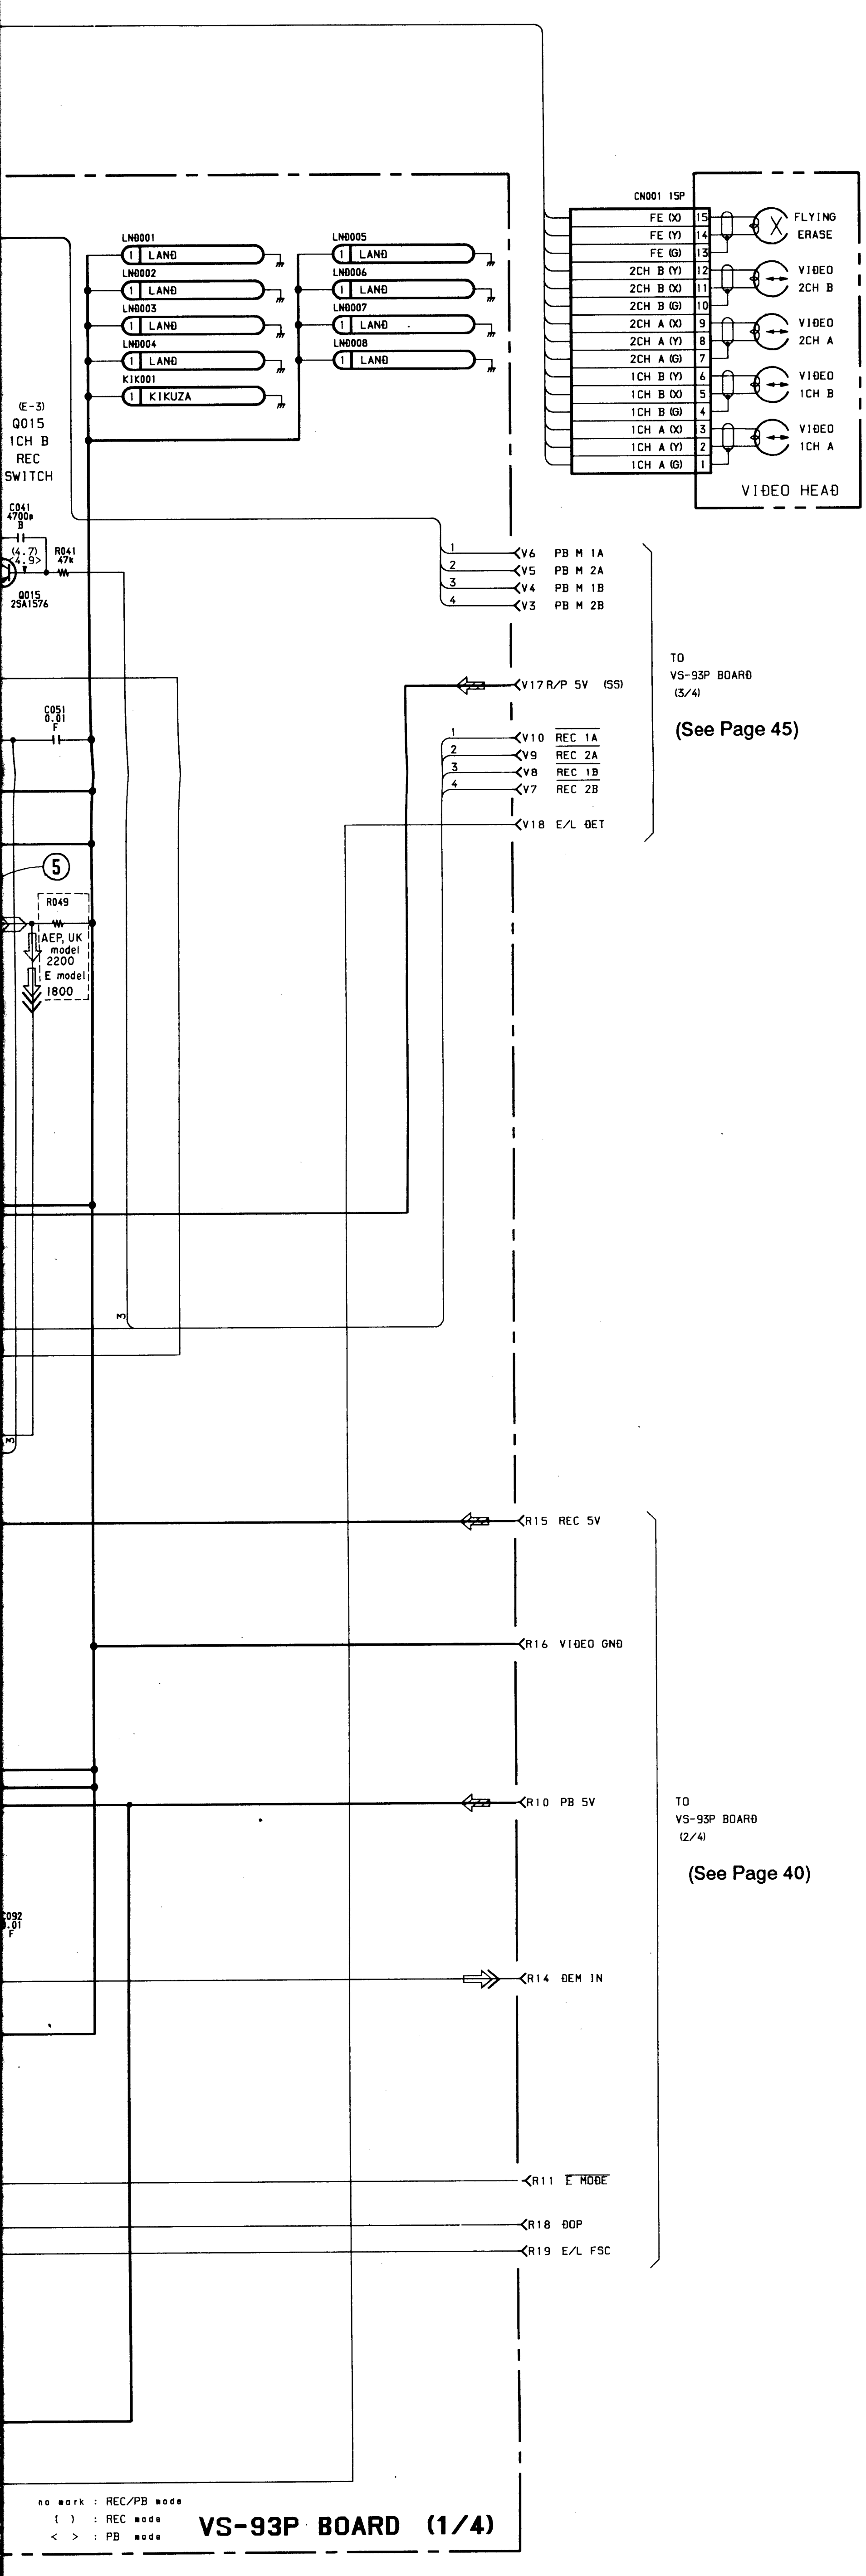
LN0001
1 LAND
LN0002
1 LAND
LN0003
1 LAND
LN0004
1 LAND
KIK001
1 KIKUZA
LN0005
1 LAND
LN0006
1 LAND
LN0007
1 LAND
LN0008
1 LAND
CN001 15P
FE (X) 15
FE (Y) 14
FE (G) 13
2CH B (Y) 12
2CH B (X) 11
2CH B (G) 10
2CH A (X) 9
2CH A (Y) 8
2CH A (G) 7
1CH B (Y) 6
1CH B (X) 5
1CH B (G) 4
1CH A (X) 3
1CH A (Y) 2
1CH A (G) 1
FLYING ERASE
VIDEO 2CH B
VIDEO 2CH A
VIDEO 1CH B
VIDEO 1CH A
VIDEO HEAD
(E-3)
Q015
1CH B
REC
SWITCH
C041
4700p
B
(4.7)
<4.9>
R041
47k
Q015
2SA1576
V6 PB M 1A
V5 PB M 2A
V4 PB M 1B
V3 PB M 2B
V17 R/P 5V (SS)
V10 REC 1A
V9 REC 2A
V8 REC 1B
V7 REC 2B
V18 E/L DET
TO
VS-93P BOARD
(3/4)
(See Page 45)
C051
0.01
F
⑤
R049
AEP, UK model 2200
E model 1800
R15 REC 5V
R16 VIDEO GND
R10 PB 5V
TO
VS-93P BOARD
(2/4)
(See Page 40)
R14 DEM IN
C092
0.01
F
R11 E MODE
R18 DOP
R19 E/L FSC
no mark : REC/PB mode
( ) : REC mode
< > : PB mode
VS-93P BOARD (1/4)

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	➡»	➡»»	➡
PB		⇨»	⇨»»	⇨

	REC	REC/PB	PB
Drum speed servo			
Drum phase servo			
Drum servo (speed and phase)			
Capstan speed servo			
Capstan phase servo			
Capstan servo (speed and phase)		➢»»	
Ref. signal	➤	➢	▷

VS-93P BOARD(1/4)

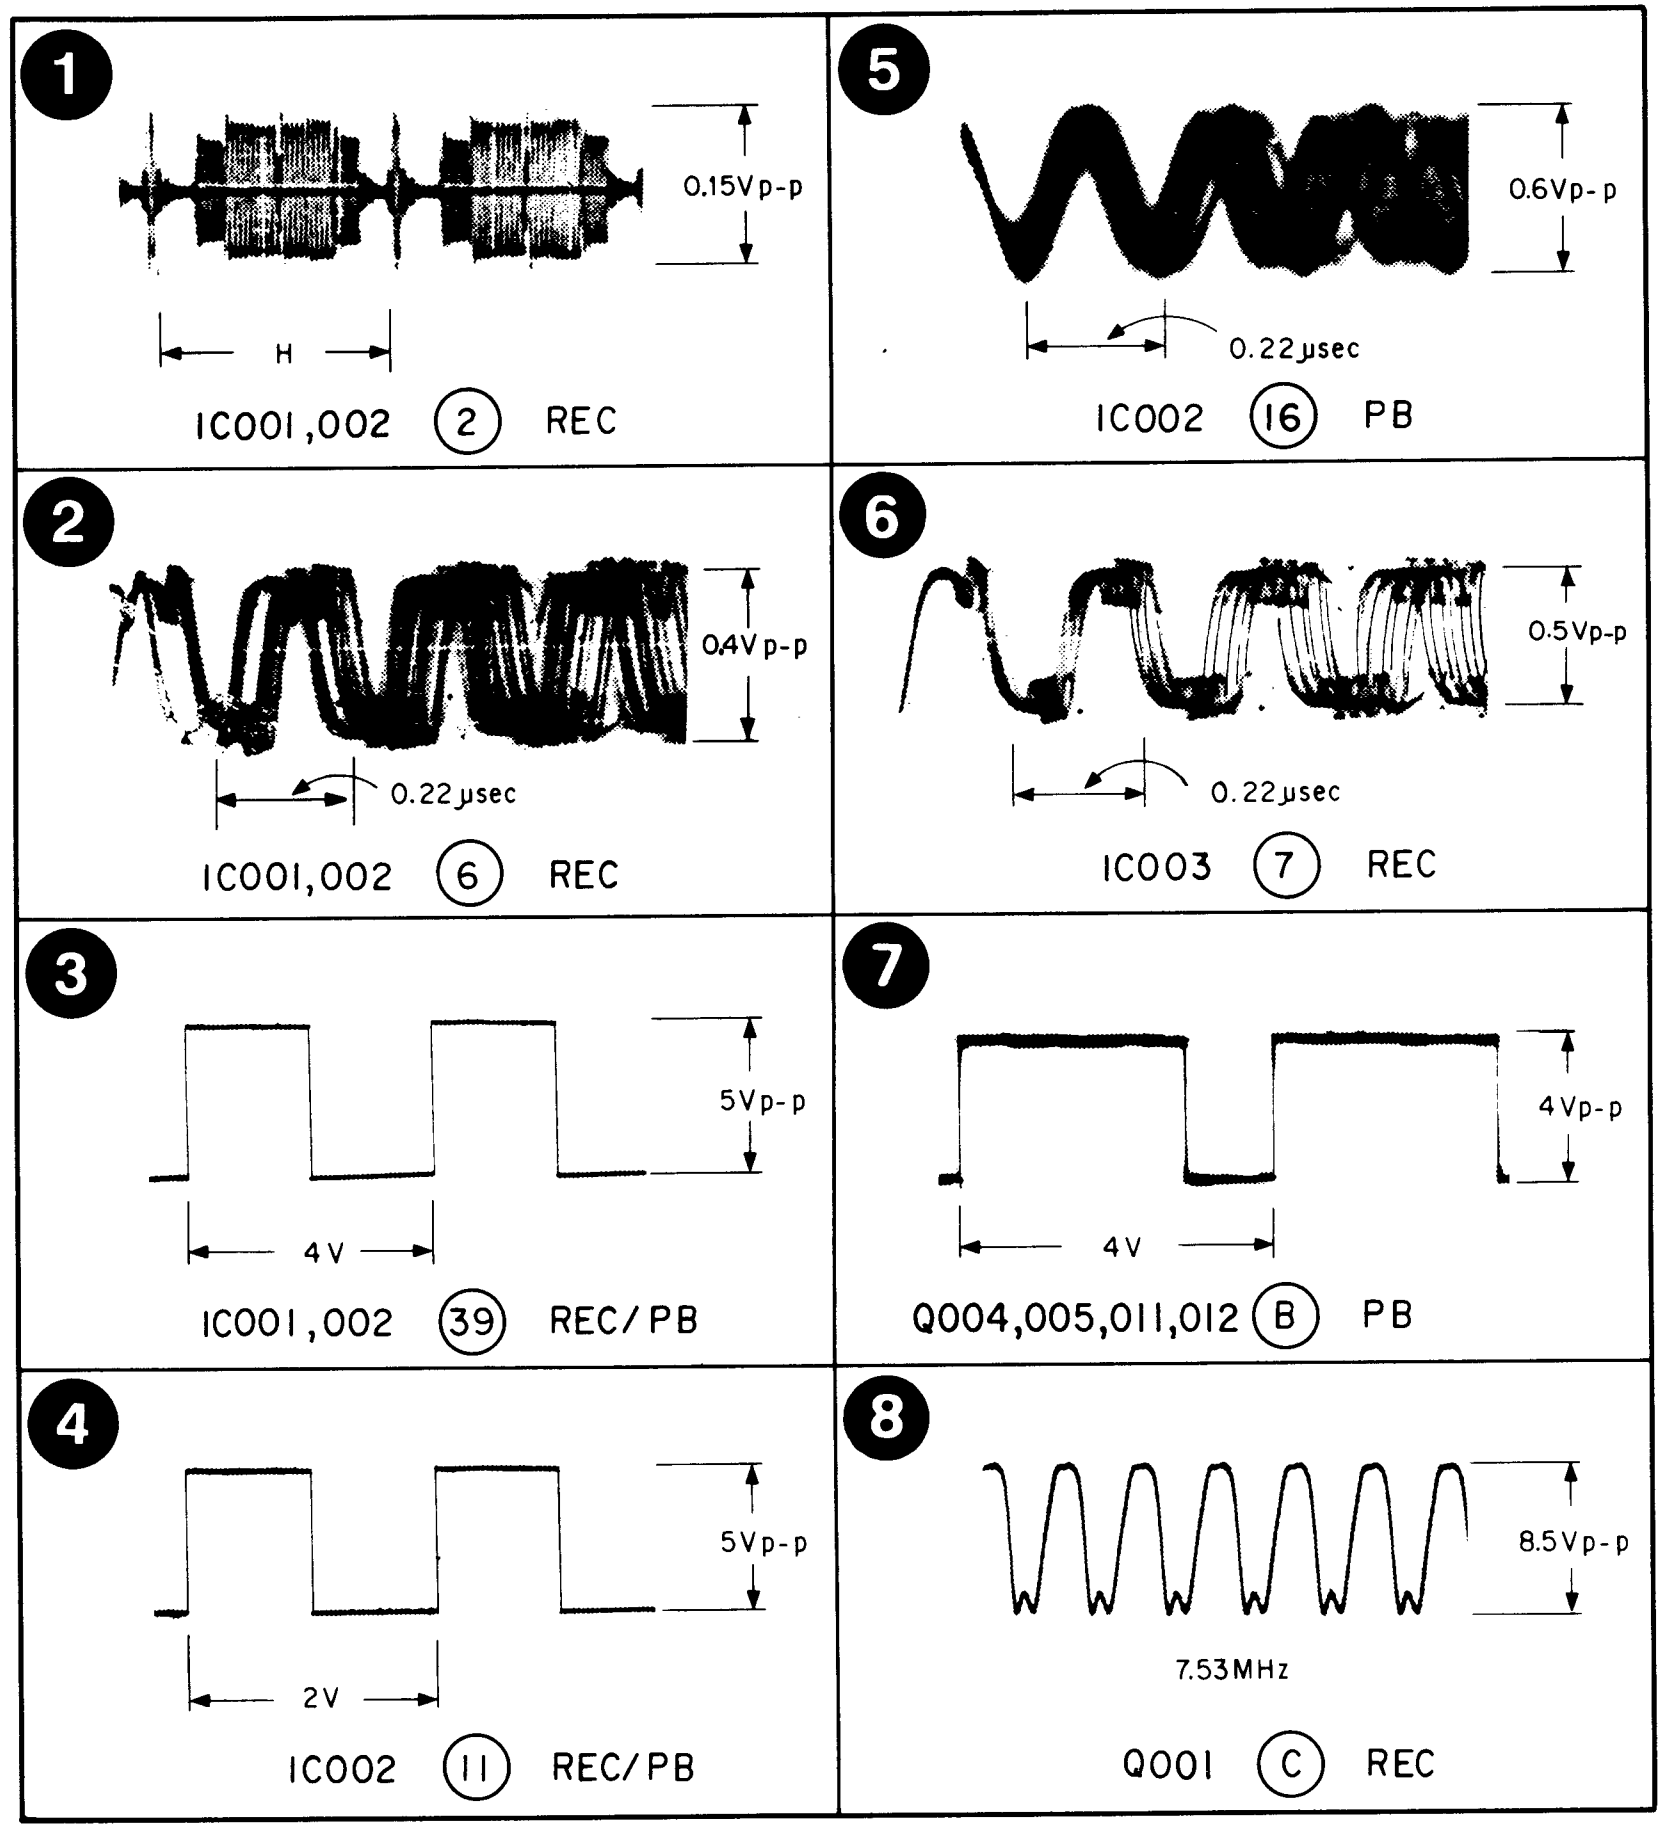

VS-93P (VIDEO) SCHEMATIC DIAGRAM

- Refer to page 31 for Printed Wiring Board.

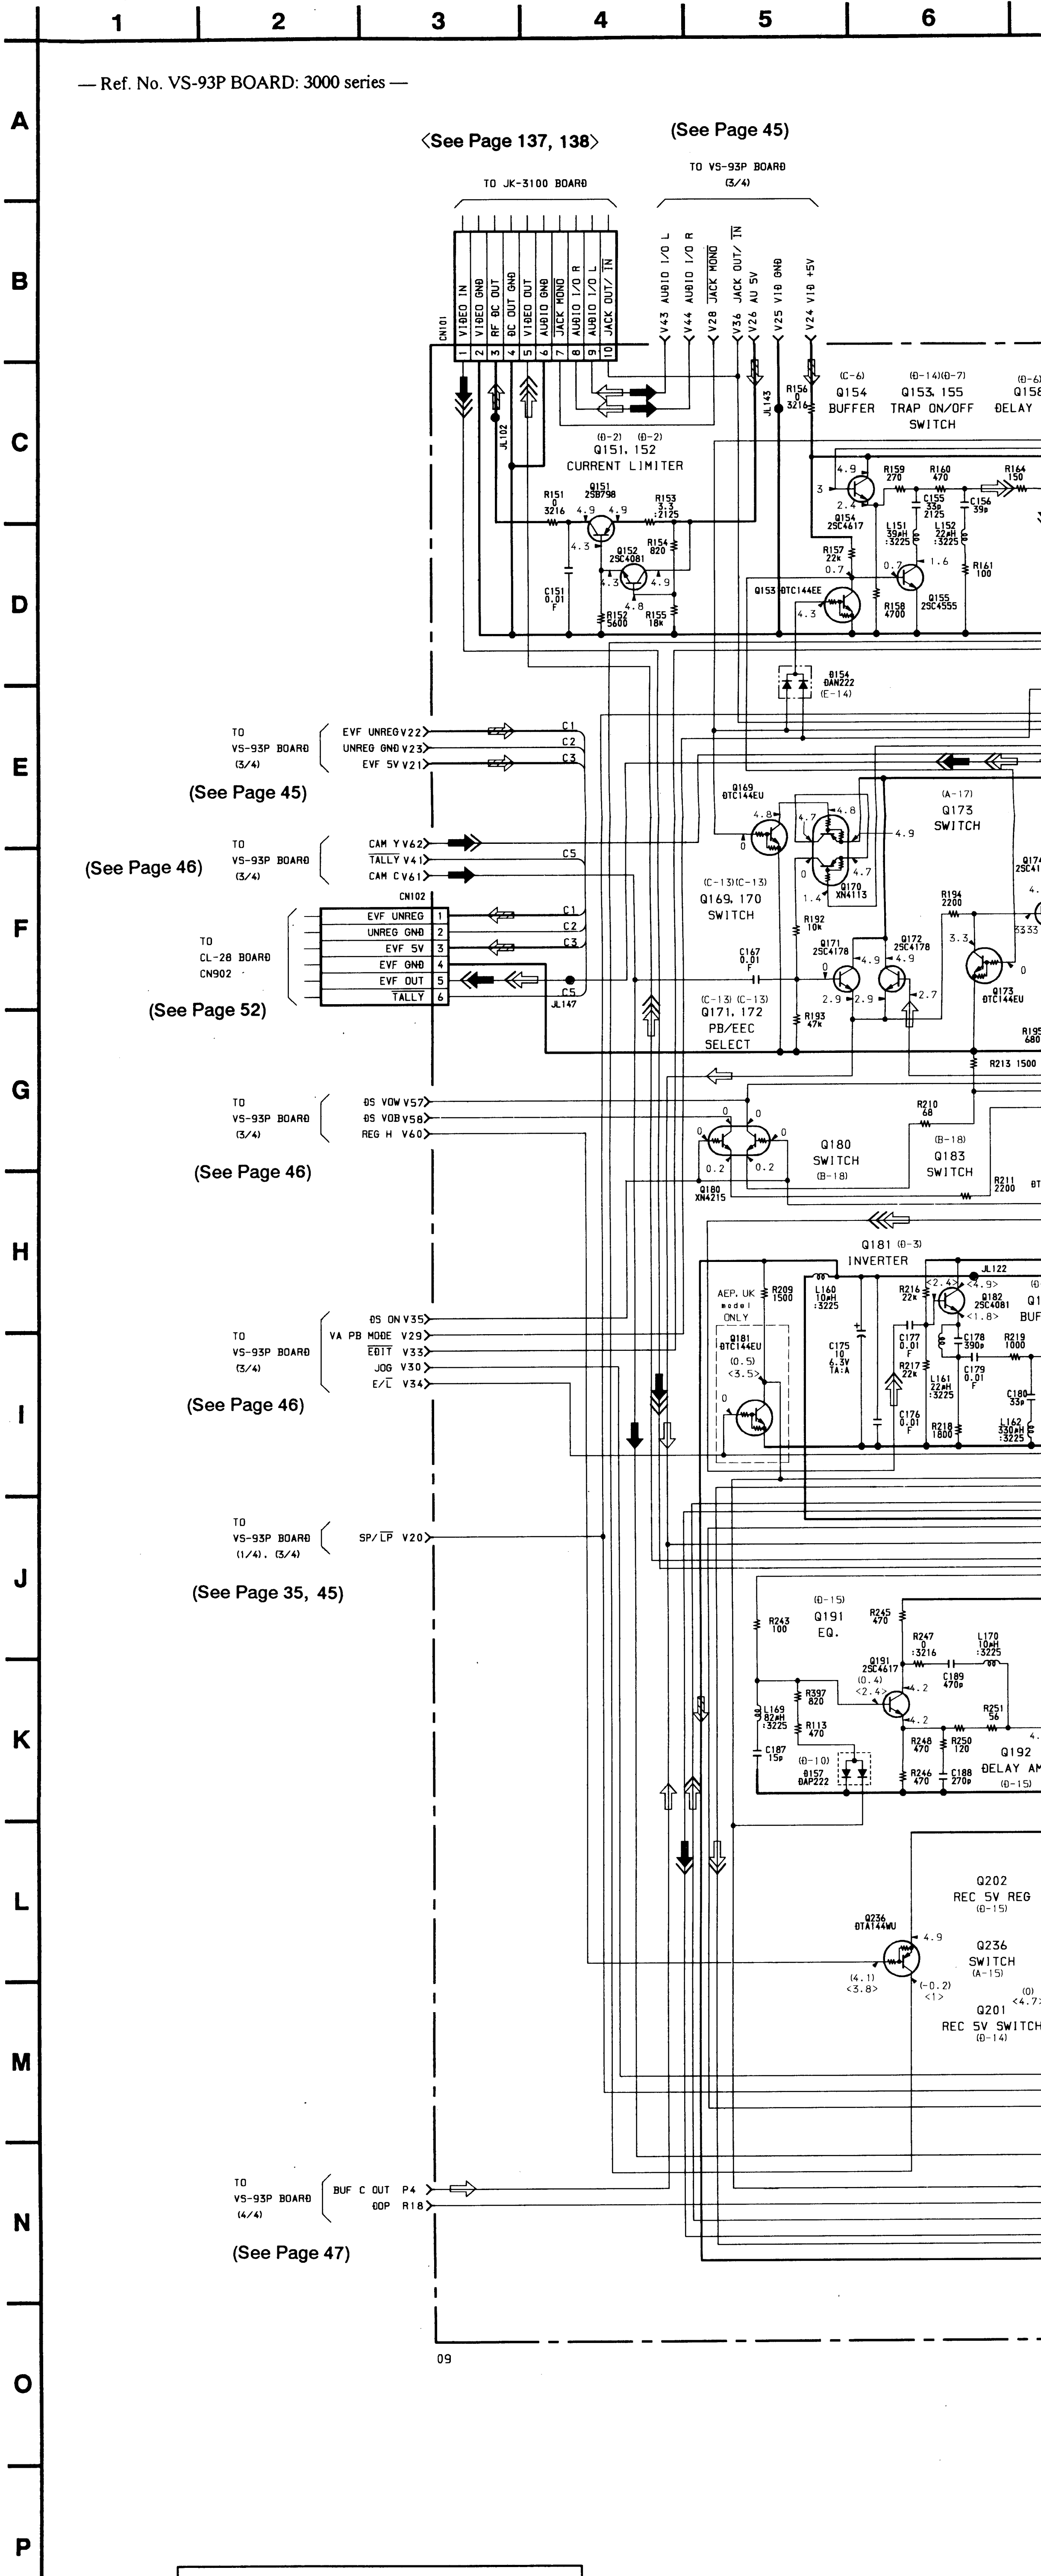
1
2
3
4
5
6
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
— Ref. No. VS-93P BOARD: 3000 series —
⟨See Page 137, 138⟩
(See Page 45)
TO JK-3100 BOARD
TO VS-93P BOARD (3/4)
CN101
1 VIDEO IN
2 VIDEO GND
3 RF DC OUT
4 DC OUT GND
5 VIDEO OUT
6 AUDIO GND
7 JACK MONO
8 AUDIO I/O R
9 AUDIO I/O L
10 JACK OUT/IN
V43 AUDIO I/O L
V44 AUDIO I/O R
V28 JACK MONO
V36 JACK OUT/IN
V26 AU 5V
V25 V18 GND
V24 V18 +5V
JL102
JL143
(D-2) (D-2)
Q151, 152
CURRENT LIMITER
(C-6)
Q154
BUFFER
(D-14)(D-7)
Q153, 155
TRAP ON/OFF
SWITCH
Q158
DELAY
Q169, 170
SWITCH
(A-17)
Q173
SWITCH
Q171, 172
PB/EEC
SELECT
Q180
SWITCH
Q183
SWITCH
Q181 (B-3)
INVERTER
AEP, UK model ONLY
Q191
EQ.
Q192
DELAY AMP
Q202
REC 5V REG
Q236
SWITCH
Q201
REC 5V SWITCH
TO VS-93P BOARD (3/4)
EVF UNREG V22
UNREG GND V23
EVF 5V V21
(See Page 45)
TO VS-93P BOARD (3/4)
CAM Y V62
TALLY V41
CAM C V61
(See Page 46)
TO CL-28 BOARD CN902
CN102
1 EVF UNREG
2 UNREG GND
3 EVF 5V
4 EVF GND
5 EVF OUT
6 TALLY
JL147
(See Page 52)
TO VS-93P BOARD (3/4)
DS VDW V57
DS VOB V58
REG H V60
(See Page 46)
TO VS-93P BOARD (3/4)
DS ON V35
VA PB MODE V29
EDIT V33
JOG V30
E/L V34
(See Page 46)
TO VS-93P BOARD (1/4), (3/4)
SP/LP V20
(See Page 35, 45)
TO VS-93P BOARD (4/4)
BUF C OUT P4
DDP R18
(See Page 47)
09

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	➾	➾≫	➡
PB	⇨	⇨	⇨≫	⇨

VS-93P BOARD (2/4)

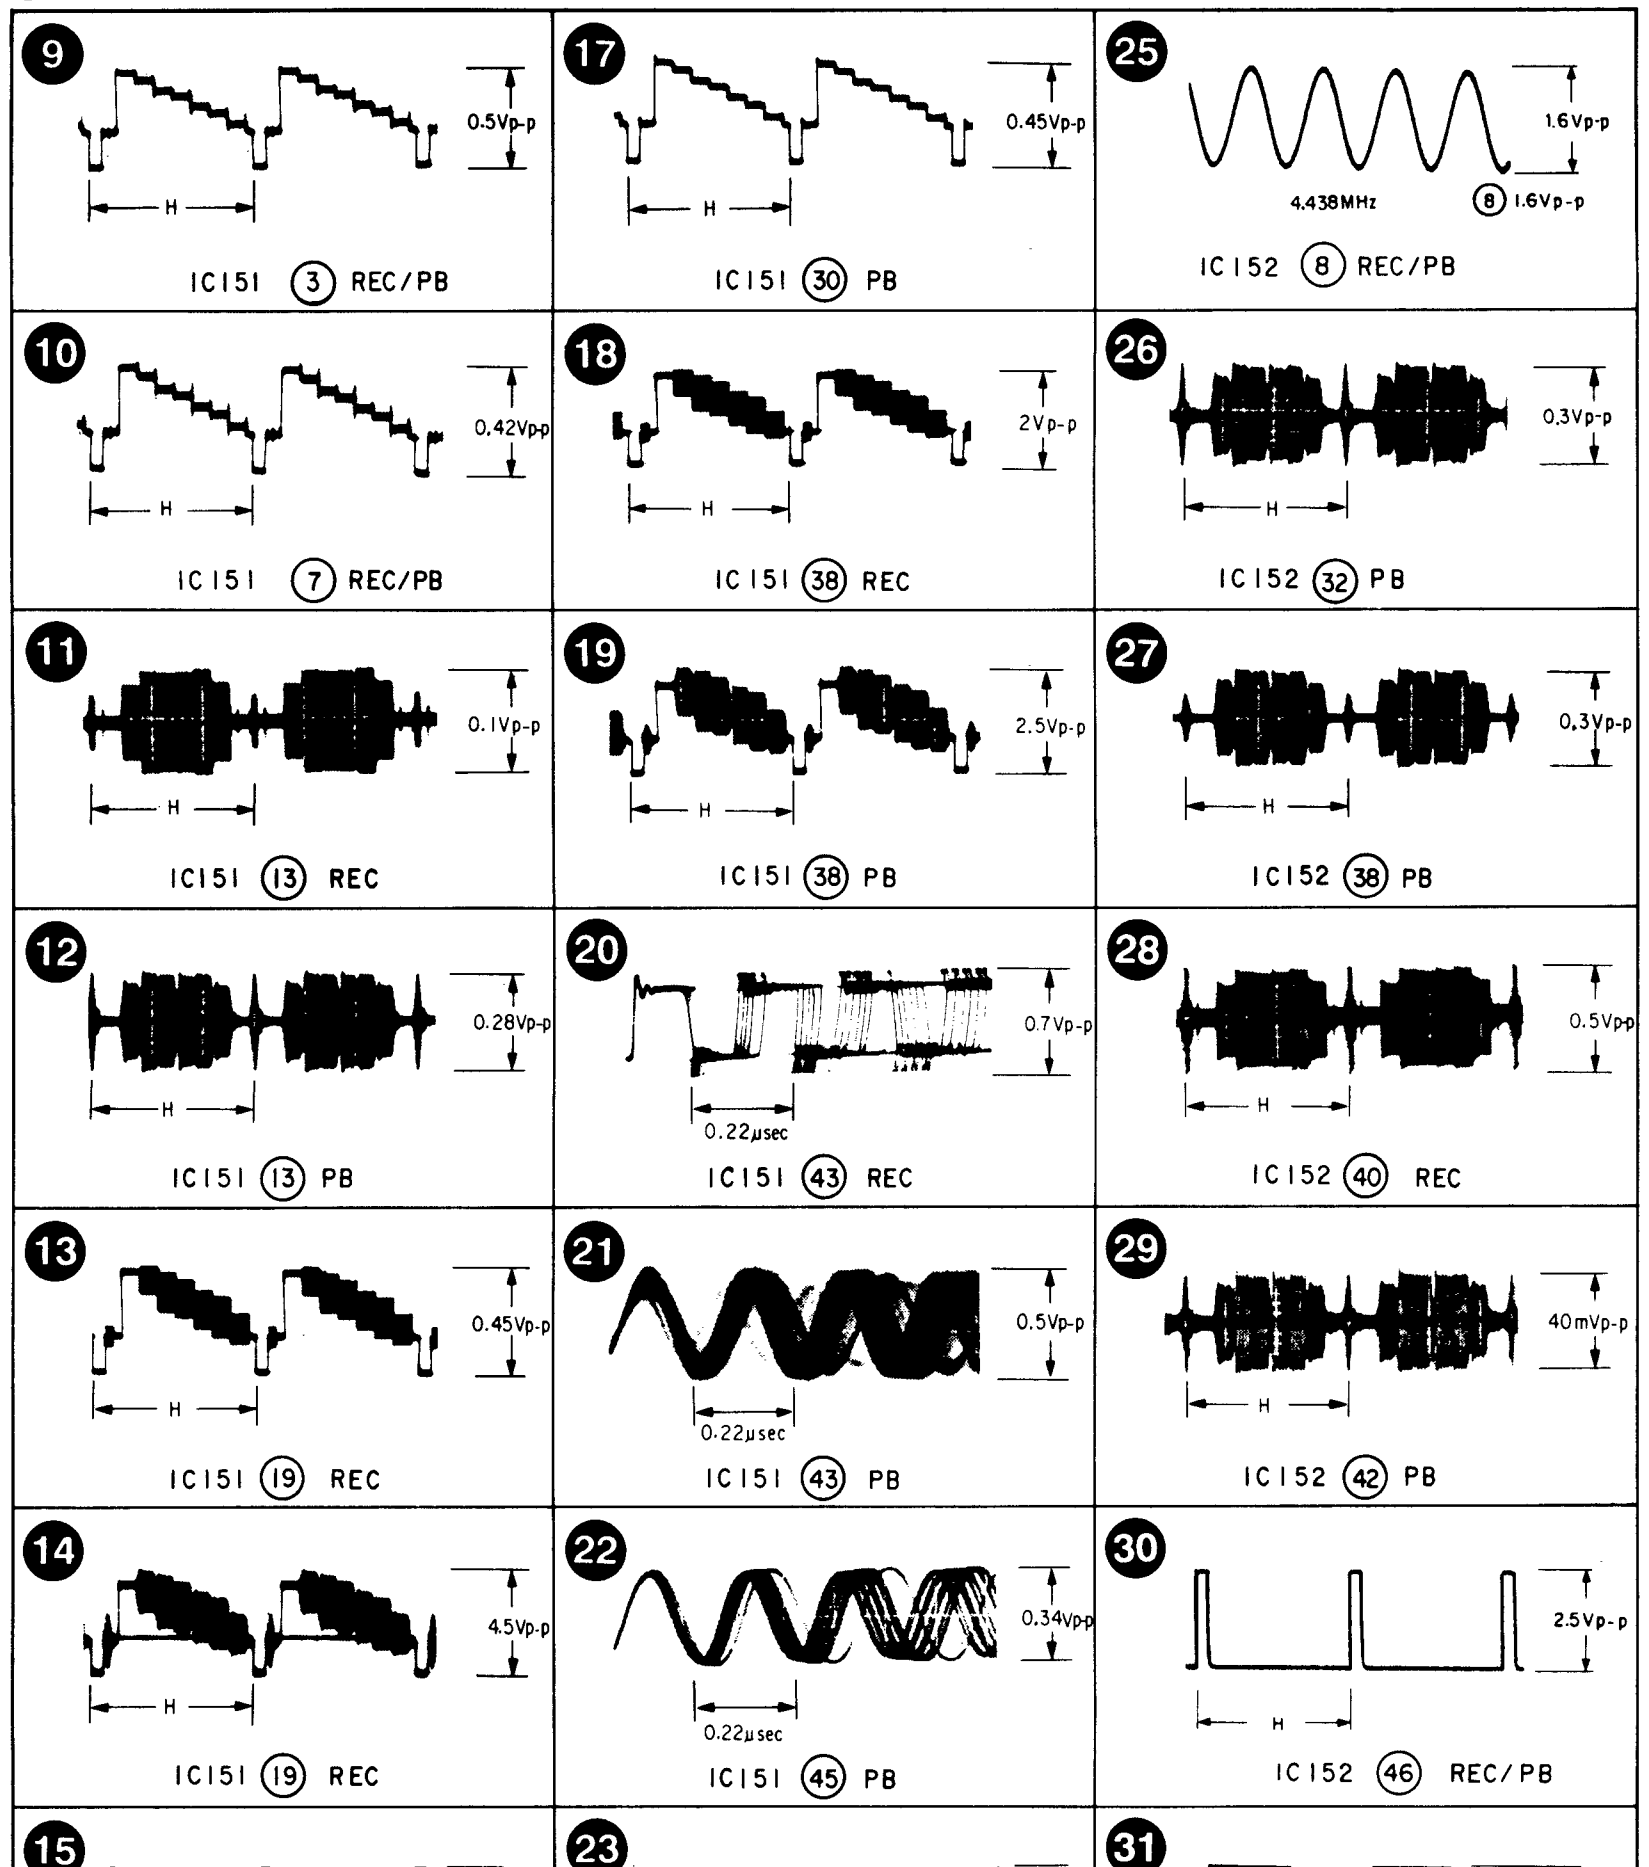

Wiring Board. < >: The pages above correspond to CCD-TR305E SERVICE MANUAL, ( ): Pages of CCD-TR505E.

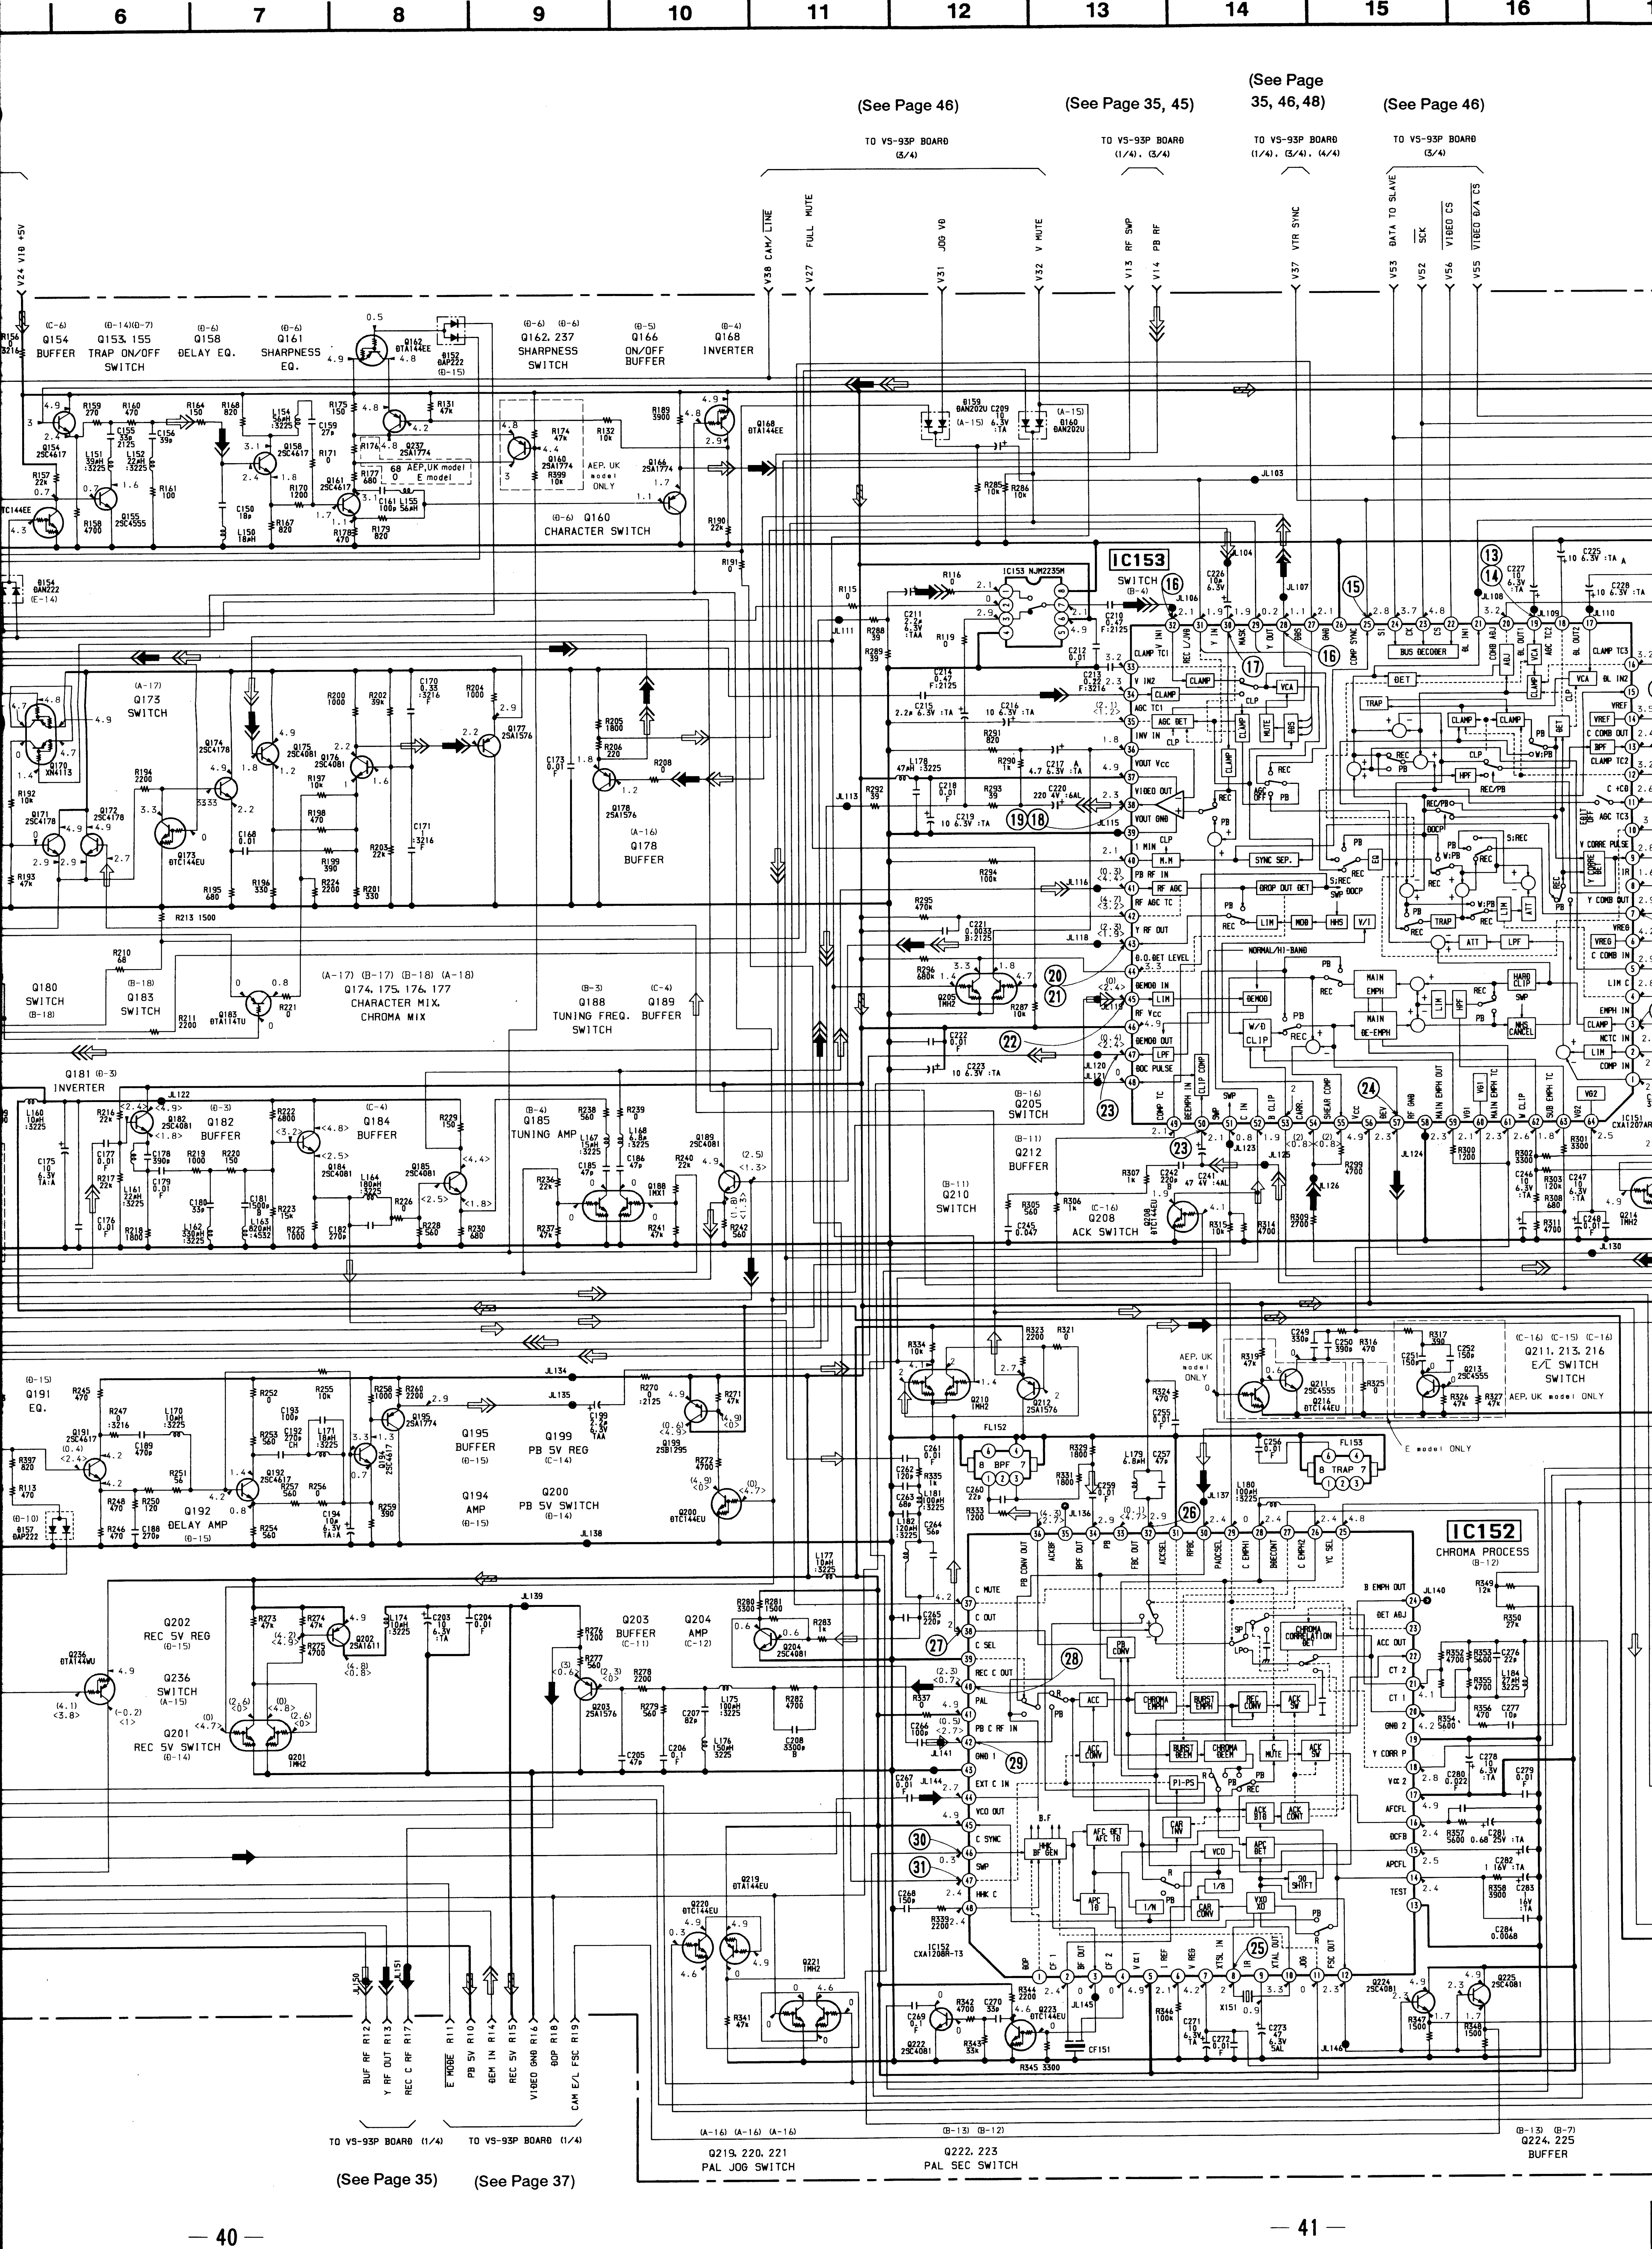
6
7
8
9
10
11
12
13
14
15
16
(See Page 46)
TO VS-93P BOARD (3/4)
(See Page 35, 45)
TO VS-93P BOARD (1/4), (3/4)
(See Page 35, 46, 48)
TO VS-93P BOARD (1/4), (3/4), (4/4)
(See Page 46)
TO VS-93P BOARD (3/4)
V24 VID +5V
V38 CAM/LINE
V27 FULL MUTE
V31 JOG VD
V32 V MUTE
V13 RF SWP
V14 PB RF
V37 VTR SYNC
V53 DATA TO SLAVE
V52 SCK
V56 VIDEO CS
V55 VIDEO D/A CS
Q154 BUFFER
Q153, 155 TRAP ON/OFF SWITCH
Q158 DELAY EQ.
Q161 SHARPNESS EQ.
Q162, 237 SHARPNESS SWITCH
Q166 ON/OFF BUFFER
Q168 INVERTER
Q160 CHARACTER SWITCH
AEP, UK model ONLY
AEP, UK model 0 E model
IC153
SWITCH
IC153 NJM2235M
Q173 SWITCH
Q178 BUFFER
Q180 SWITCH
Q183 SWITCH
Q174, 175, 176, 177 CHARACTER MIX, CHROMA MIX
Q188 TUNING FREQ. SWITCH
Q189 BUFFER
Q181 INVERTER
Q182 BUFFER
Q184 BUFFER
Q185 TUNING AMP
Q205 SWITCH
Q212 BUFFER
Q210 SWITCH
Q208 ACK SWITCH
BUS DECODER
NORMAL/HI-BAND
SYNC SEP.
DROP OUT DET
MAIN EMPH
MAIN DE-EMPH
HARD CLIP
W/D CLIP
NHS CANCEL
Q191 EQ.
Q195 BUFFER
Q199 PB 5V REG
Q194 AMP
Q200 PB 5V SWITCH
Q192 DELAY AMP
Q211, 213, 216 E/L SWITCH
AEP, UK model ONLY
E model ONLY
IC152
CHROMA PROCESS
IC152 CXA1208R-T3
FL152
FL153
BPF
TRAP
Q202 REC 5V REG
Q236 SWITCH
Q201 REC 5V SWITCH
Q203 BUFFER
Q204 AMP
CHROMA CORRELATION DET
Q219, 220, 221 PAL JOG SWITCH
Q222, 223 PAL SEC SWITCH
Q224, 225 BUFFER
BUF RF R12
Y RF OUT R13
REC C RF R17
E MODE R11
PB 5V R10
OEM IN R14
REC 5V R15
VIDEO GND R16
DOP R18
CAM E/L FSC R19
TO VS-93P BOARD (1/4)
TO VS-93P BOARD (1/4)
(See Page 35)
(See Page 37)

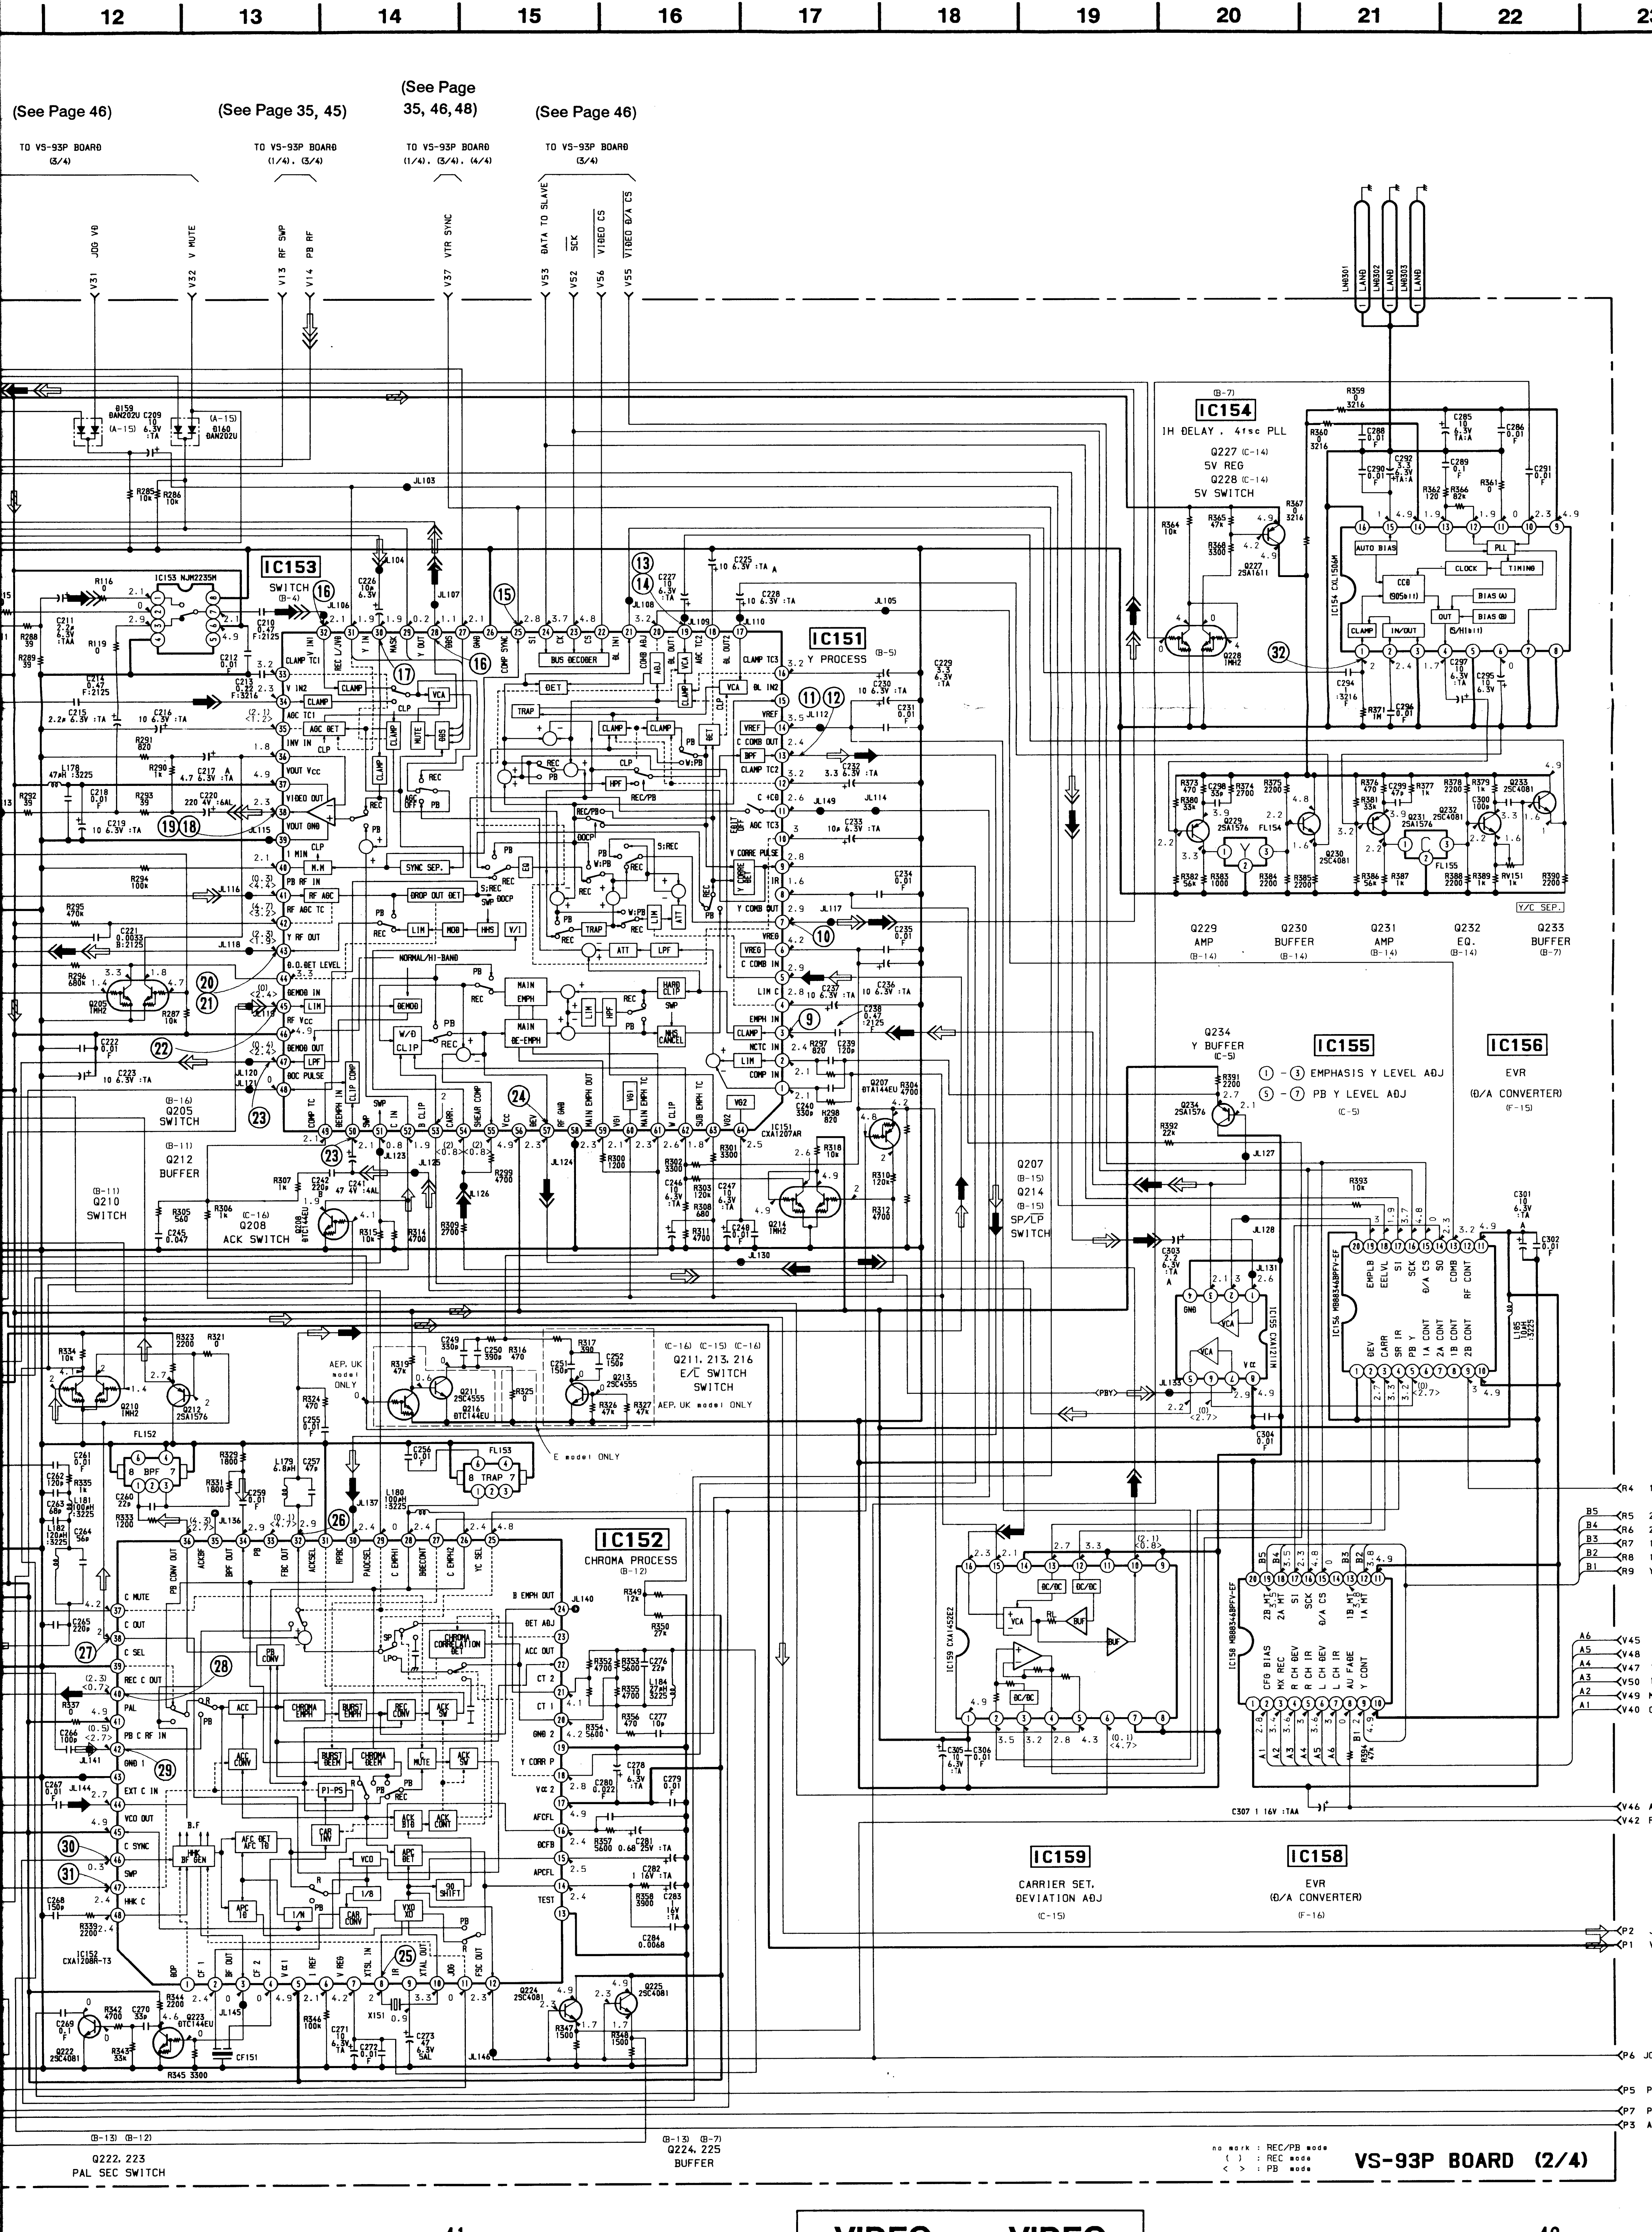
12
13
14
15
16
17
18
19
20
21
22
(See Page 46)
(See Page 35, 45)
(See Page 35, 46, 48)
(See Page 46)
TO VS-93P BOARD (3/4)
TO VS-93P BOARD (1/4), (3/4)
TO VS-93P BOARD (1/4), (3/4), (4/4)
TO VS-93P BOARD (3/4)
JOG VD
V MUTE
RF SWP
PB RF
VTR SYNC
DATA TO SLAVE
SCK
VIDEO CS
VIDEO D/A CS
LND301
LND302
LND303
IC153
SWITCH
IC153 NJM2235M
IC151
Y PROCESS
IC151 CXA1207AR
IC154
1H DELAY, 4fsc PLL
Q227 5V REG
Q228 5V SWITCH
IC154 CXL1506M
Q229 AMP
Q230 BUFFER
Q231 AMP
Q232 EQ.
Q233 BUFFER
Y/C SEP.
Q234 Y BUFFER
IC155
① - ③ EMPHASIS Y LEVEL ADJ
⑤ - ⑦ PB Y LEVEL ADJ
IC156
EVR (D/A CONVERTER)
IC156 MB88346BPFV-EF
IC155 CXA1211M
Q207, Q214 SP/LP SWITCH
Q205 SWITCH
Q212 BUFFER
Q210 SWITCH
Q208 ACK SWITCH
Q211, 213, 216 E/C SWITCH SWITCH
AEP, UK model ONLY
E model ONLY
IC152
CHROMA PROCESS
IC152 CXA1208R-T3
IC159
CARRIER SET, DEVIATION ADJ
IC159 CXA1452E2
IC158
EVR (D/A CONVERTER)
IC158 MB88346BPFV-EF
Q222, 223 PAL SEC SWITCH
Q224, 225 BUFFER
no mark : REC/PB mode
( ) : REC mode
< > : PB mode
VS-93P BOARD (2/4)

VIDEO VIDEO

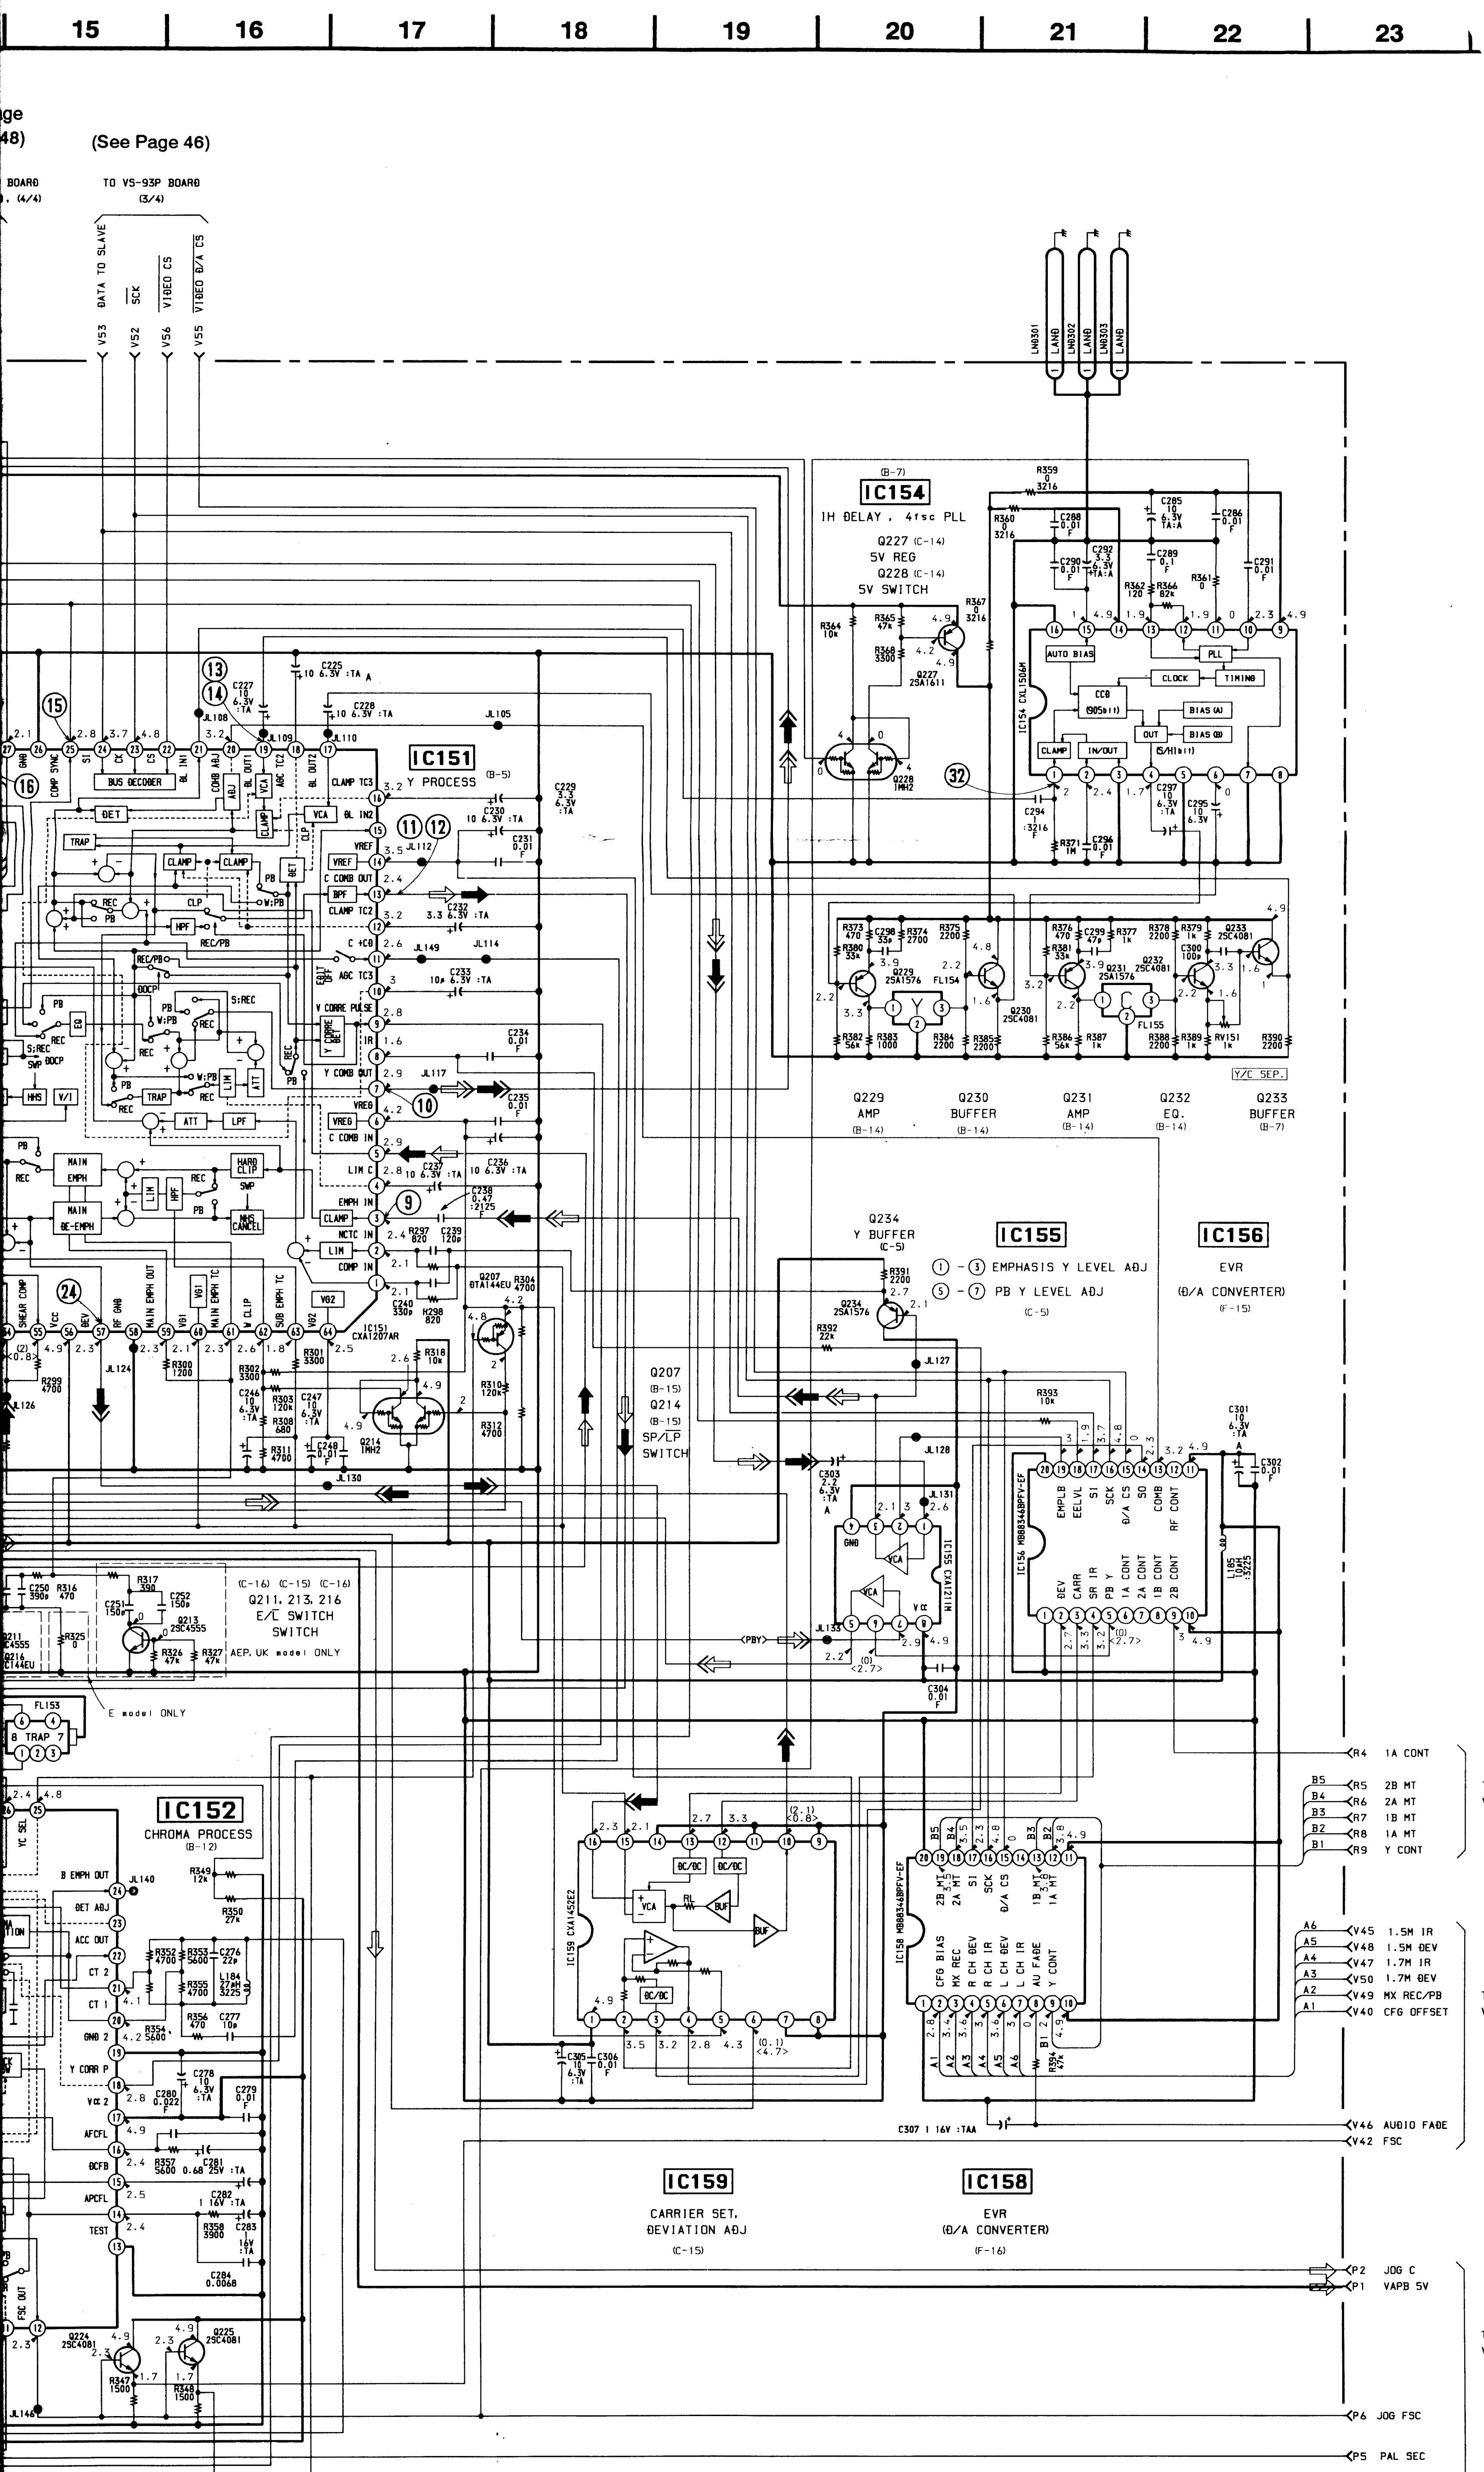

15
16
17
18
19
20
21
22
23
(See Page 46)
TO VS-93P BOARD (3/4)
DATA TO SLAVE
SCK
VIDEO CS
VIDEO D/A CS
V53
V52
V56
V55
LND301
LND302
LND303
IC154
1H DELAY, 4fsc PLL
Q227 5V REG
Q228 5V SWITCH
AUTO BIAS
CCD
CLOCK
TIMING
PLL
BIAS
IC151
Y PROCESS
BUS DECODER
DET
TRAP
CLAMP
REC/PB
HPF
LPF
ATT
LIM
MAIN EMPH
MAIN DE-EMPH
HARD CLIP
NHS CANCEL
Y/C SEP.
Q229 AMP
Q230 BUFFER
Q231 AMP
Q232 EQ.
Q233 BUFFER
Q234 Y BUFFER
IC155
1 - 3 EMPHASIS Y LEVEL ADJ
5 - 7 PB Y LEVEL ADJ
IC156
EVR
(D/A CONVERTER)
Q207 Q214 SP/LP SWITCH
Q211, 213, 216 E/C SWITCH SWITCH
AEP, UK model ONLY
E model ONLY
FL153 TRAP
IC152
CHROMA PROCESS
IC159
CARRIER SET. DEVIATION ADJ
IC158
EVR
(D/A CONVERTER)
Q224, 225 BUFFER
R4 1A CONT
R5 2B MT
R6 2A MT
R7 1B MT
R8 1A MT
R9 Y CONT
TO VS-93P BOARD (1/4)
V45 1.5M IR
V48 1.5M DEV
V47 1.7M IR
V50 1.7M DEV
V49 MX REC/PB
V40 CFG OFFSET
TO VS-93P BOARD (3/4)
V46 AUDIO FADE
V42 FSC
P2 JOG C
P1 VAPB 5V
TO VS-93P BOARD (4/4)
P6 JOG FSC
P5 PAL SEC
P7 PAL JOG HD
P3 ACK
no mark : REC/PB mode
( ) : REC mode
< > : PB mode
VS-93P BOARD (2/4)

(See Page 35)

(See Page 46)

(See Page 47)

VS-93P (SERVO/SYSTEM CONTROL) SCHEMATIC DIAGRAM

• Refer to page 31 for Printed Wiring Board.

< > : The pages a

— Ref. No. VS-93P BOARD: 3000 series —

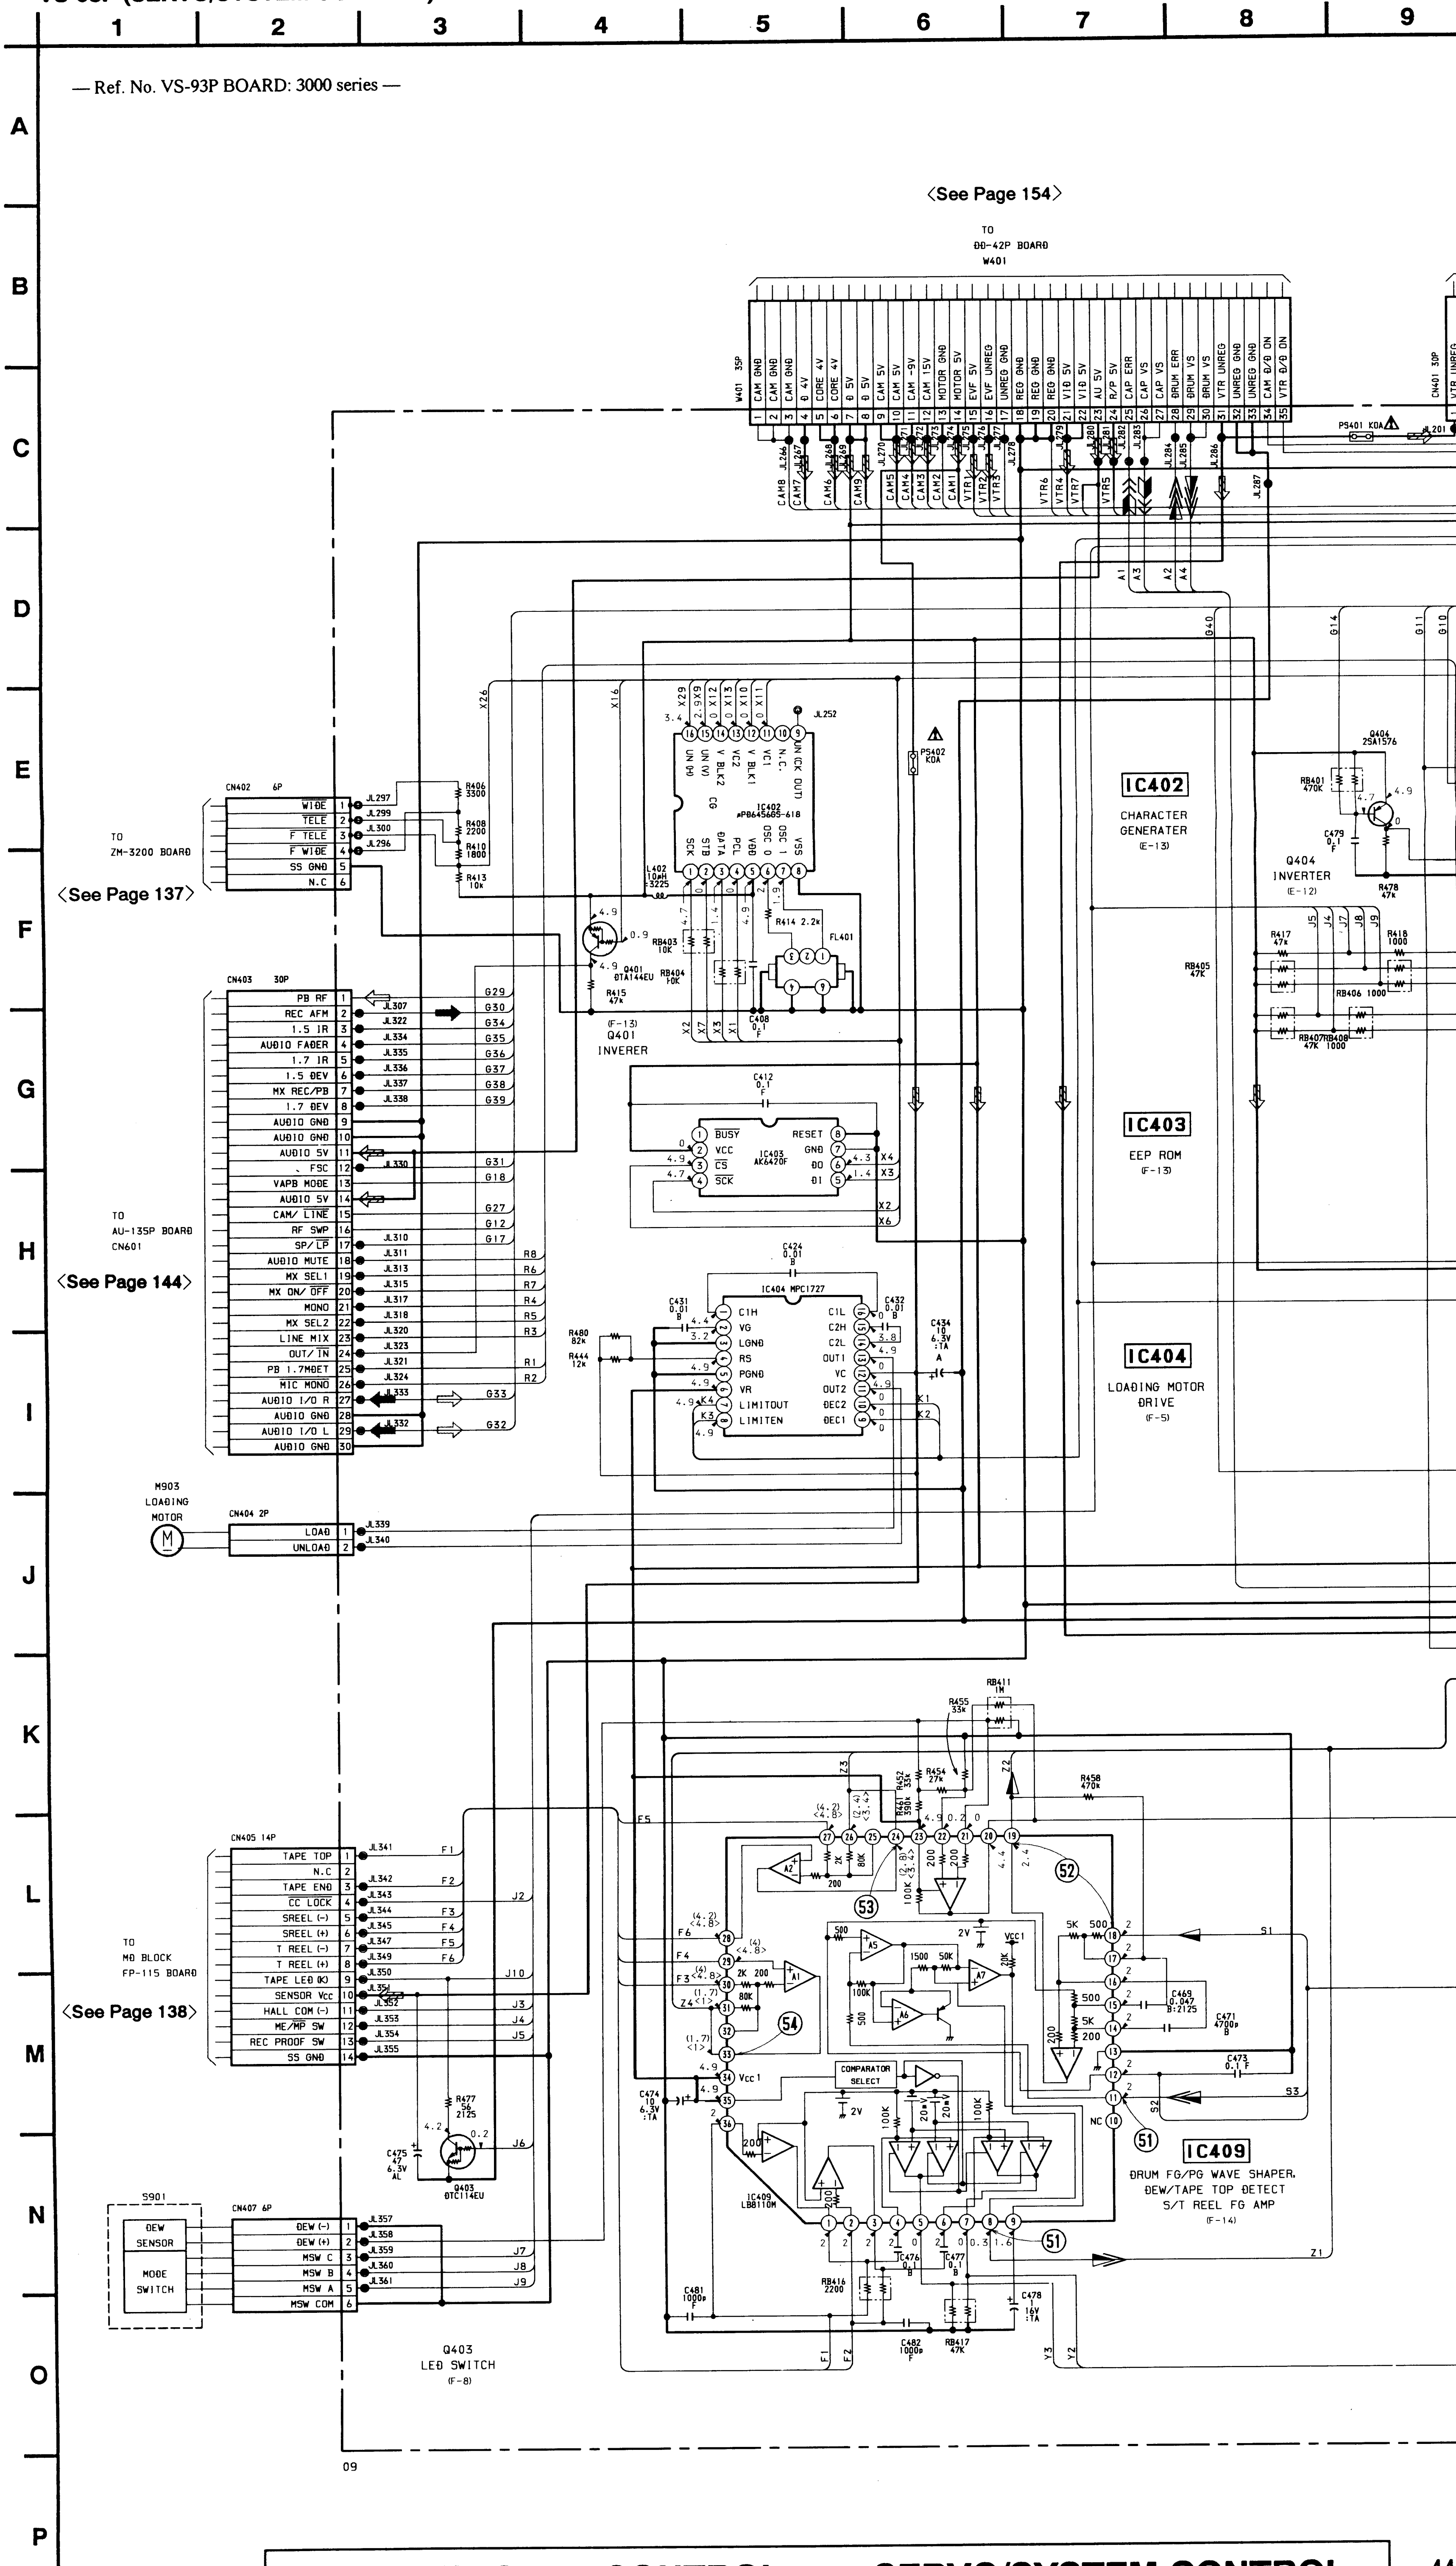
1
2
3
4
5
6
7
8
9
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
P
<See Page 154>
TO DD-42P BOARD W401
W401 35P
CAM GND
CAM GND
CAM GND
D 4V
CORE 4V
CORE 4V
D 5V
D 5V
CAM 5V
CAM -9V
CAM 15V
MOTOR GND
MOTOR 5V
EVF 5V
EVF UNREG
UNREG GND
REG GND
REG GND
V18 5V
AU 5V
P/P 5V
CAP ERR
CAP VS
DRUM ERR
DRUM VS
VTR UNREG
UNREG GND
UNREG GND
CAM D/D ON
VTR D/D ON
CN401 30P
PS401 KOA
PS402 KOA
IC402
CHARACTER GENERATER
(E-13)
IC402 μPD6455605-618
Q404 2SA1576
Q404 INVERTER
(E-12)
TO ZM-3200 BOARD
<See Page 137>
CN402 6P
WIDE
TELE
F TELE
F WIDE
SS GND
N.C
Q401 DTA144EU
Q401 INVERER
(F-13)
FL401
IC403
EEP ROM
(F-13)
IC403 AK6470F
BUSY
VCC
CS
SCK
RESET
GND
DO
DI
TO AU-135P BOARD CN601
<See Page 144>
CN403 30P
PB RF
REC AFM
1.5 IR
AUDIO FADER
1.7 IR
1.5 DEV
MX REC/PB
1.7 DEV
AUDIO GND
AUDIO GND
AUDIO 5V
FSC
VAPB MODE
AUDIO 5V
CAM/ LINE
RF SWP
SP/ LP
AUDIO MUTE
MX SEL1
MX ON/ OFF
MONO
MX SEL2
LINE MIX
OUT/ IN
PB 1.7MDET
MIC MONO
AUDIO I/O R
AUDIO GND
AUDIO I/O L
AUDIO GND
IC404
LOADING MOTOR DRIVE
(F-5)
IC404 MPC1727
M903 LOADING MOTOR
CN404 2P
LOAD
UNLOAD
TO MD BLOCK FP-115 BOARD
<See Page 138>
CN405 14P
TAPE TOP
N.C
TAPE END
CC LOCK
SREEL (-)
SREEL (+)
T REEL (-)
T REEL (+)
TAPE LED (K)
SENSOR Vcc
HALL COM (-)
ME/MP SW
REC PROOF SW
SS GND
Q403 DTC114EU
Q403 LED SWITCH
(F-8)
S901
DEW SENSOR
MODE SWITCH
CN407 6P
DEW (-)
DEW (+)
MSW C
MSW B
MSW A
MSW COM
COMPARATOR SELECT
IC409 LB8110M
IC409
DRUM FG/PG WAVE SHAPER, DEW/TAPE TOP DETECT S/T REEL FG AMP
(F-14)
(51)
(52)
(53)
(54)
09

SERVO/SYSTEM CONTROL SERVO/SYSTEM CONTROL

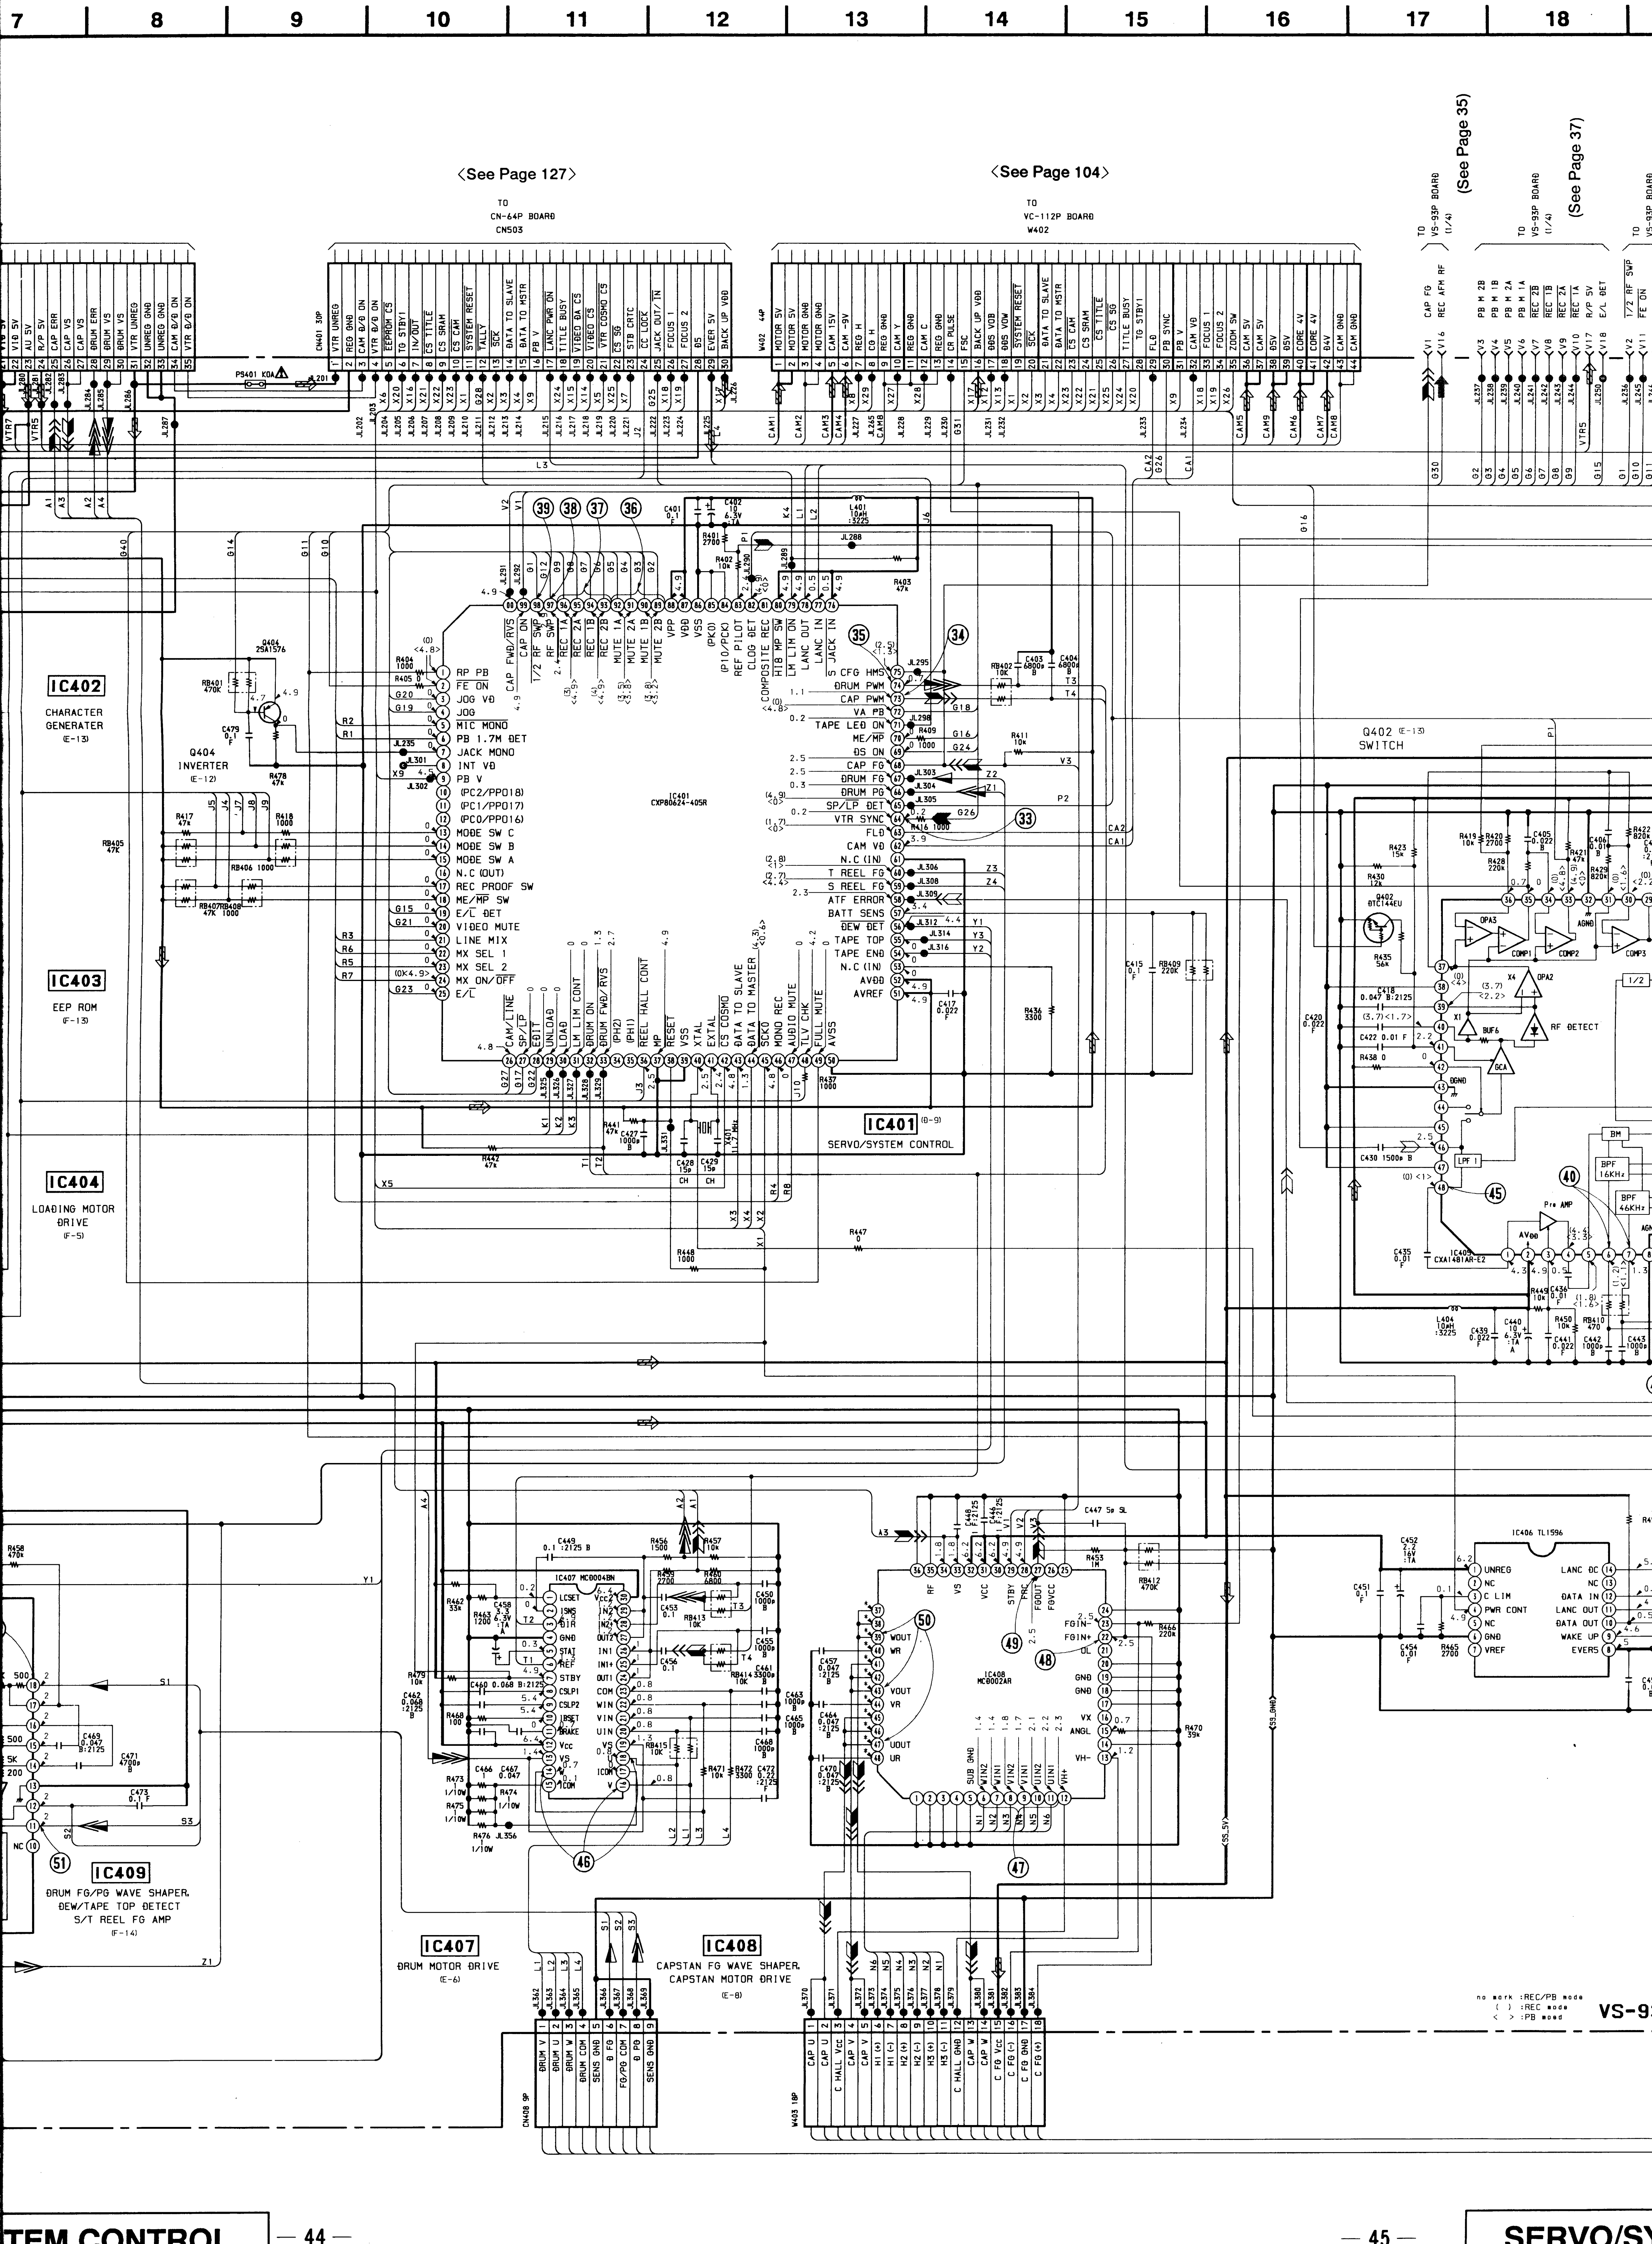
7
8
9
10
11
12
13
14
15
16
17
18
<See Page 127>
TO CN-64P BOARD CN503
<See Page 104>
TO VC-112P BOARD W402
TO VS-93P BOARD (1/4)
(See Page 35)
(See Page 37)
IC402
CHARACTER GENERATER (E-13)
Q404 2SA1576
Q404 INVERTER (E-12)
IC403
EEP ROM (F-13)
IC404
LOADING MOTOR DRIVE (F-5)
IC401 CXP80624-405R
IC401 (D-9)
SERVO/SYSTEM CONTROL
Q402 (E-13)
SWITCH
Q402 DTC144EU
IC405 CXA1481AR-E2
IC406 TL1596
IC407 MC80004BN
IC408 MC80002AR
IC409
DRUM FG/PG WAVE SHAPER, DEW/TAPE TOP DETECT S/T REEL FG AMP (F-14)
IC407
DRUM MOTOR DRIVE (E-6)
IC408
CAPSTAN FG WAVE SHAPER, CAPSTAN MOTOR DRIVE (E-8)
CN408 9P
W403 18P
no mark :REC/PB mode
( ) :REC mode
< > :PB mode
VS-9

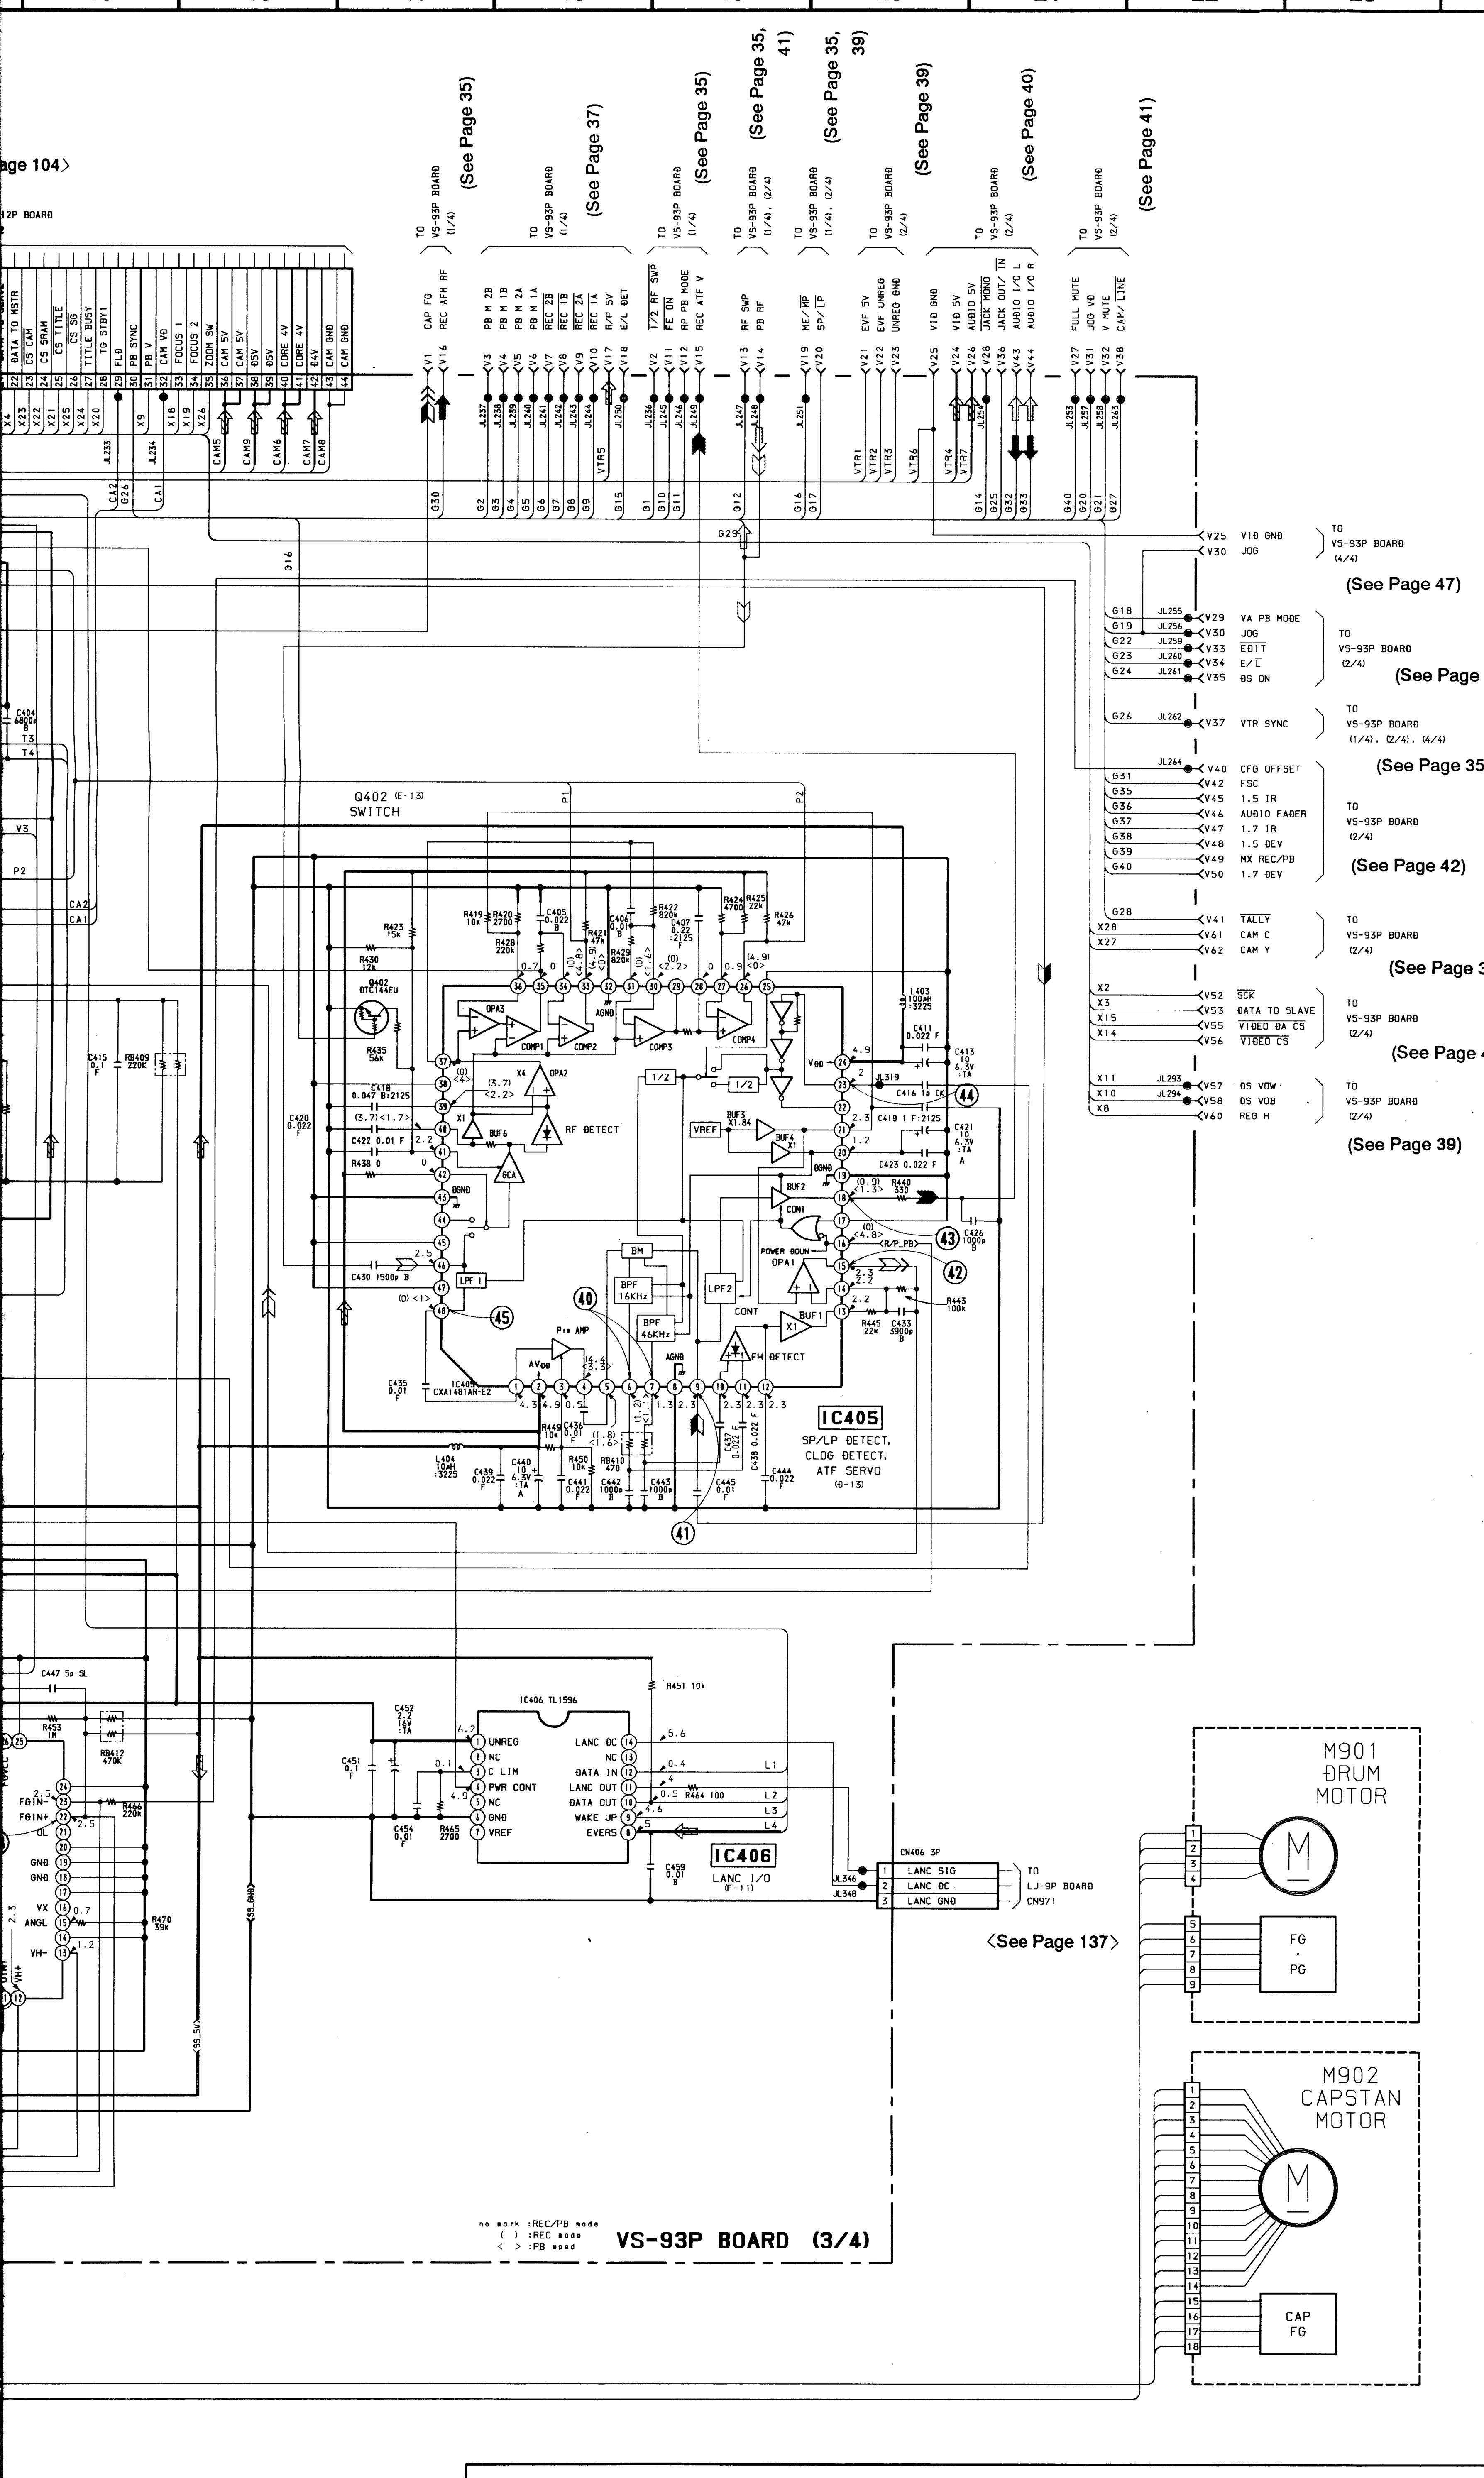
(See Page 35)
(See Page 37)
(See Page 35)
(See Page 35, 41)
(See Page 35, 39)
(See Page 39)
(See Page 40)
(See Page 41)
TO VS-93P BOARD (1/4)
TO VS-93P BOARD (2/4)
TO VS-93P BOARD (4/4)
(See Page 47)
VA PB MODE
JOG
EDIT
E/L
BS ON
(See Page 39)
VTR SYNC
TO VS-93P BOARD (1/4), (2/4), (4/4)
(See Page 35, 41, 48)
CFG OFFSET
FSC
1.5 IR
AUDIO FADER
1.7 IR
1.5 BEV
MX REC/PB
1.7 BEV
(See Page 42)
TALLY
CAM C
CAM Y
(See Page 39)
SCK
DATA TO SLAVE
VIDEO DA CS
VIDEO CS
(See Page 41)
BS VDW
BS VDB
REG H
(See Page 39)
Q402 (E-13) SWITCH
IC405 CXA1481AR-E2
RF DETECT
COMP1
COMP2
COMP3
COMP4
OPA1
OPA2
OPA3
BPF 16KHz
BPF 46KHz
LPF1
LPF2
Pre AMP
FH DETECT
POWER GAIN
IC405
SP/LP DETECT.
CLOG DETECT.
ATF SERVO
(D-13)
IC406 TL1596
UNREG
NC
C LIM
PWR CONT
NC
GND
VREF
LANC DC
NC
DATA IN
LANC OUT
DATA OUT
WAKE UP
EVERS
IC406
LANC I/O
(F-11)
CN406 3P
LANC SIG
LANC DC
LANC GND
TO LJ-9P BOARD CN971
<See Page 137>
M901 DRUM MOTOR
FG PG
M902 CAPSTAN MOTOR
CAP FG
no mark :REC/PB mode
( ) :REC mode
< > :PB mode
VS-93P BOARD (3/4)
age 104>
12P BOARD

• SIGNAL PATH

	VIDE	
	CHROMA	Y
REC		
PB		

Drum speed servo
Drum phase servo
Drum servo (speed and p
Capstan speed servo
Capstan phase servo
Capstan servo (speed an
Ref. signal

VS-93P BOARD (3/4)

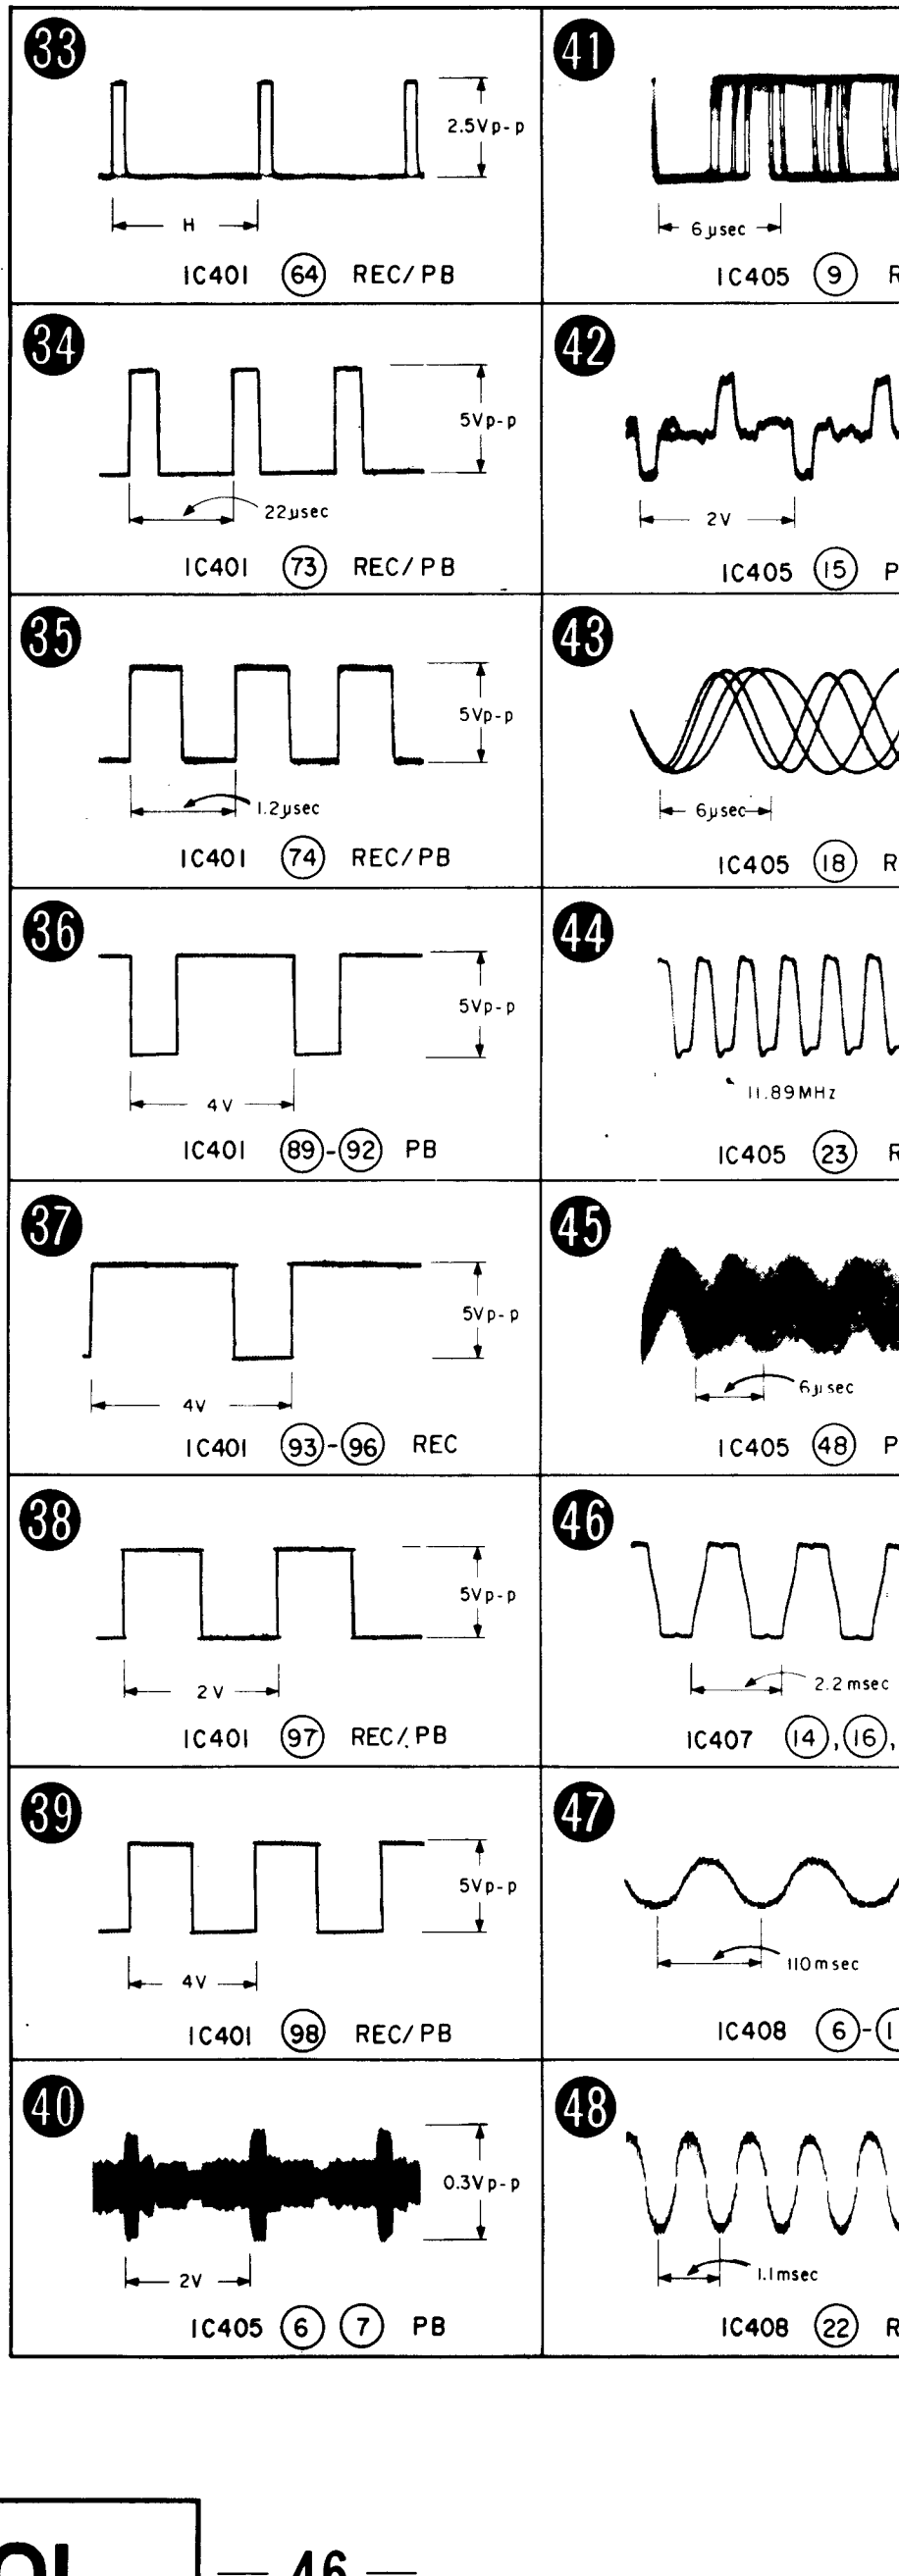
㉝ 2.5Vp-p H IC401 (64) REC/PB
㉞ 5Vp-p 22μsec IC401 (73) REC/PB
㉟ 5Vp-p 1.2μsec IC401 (74) REC/PB
㊱ 5Vp-p 4V IC401 (89)-(92) PB
㊲ 5Vp-p 4V IC401 (93)-(96) REC
㊳ 5Vp-p 2V IC401 (97) REC/PB
㊴ 5Vp-p 4V IC401 (98) REC/PB
㊵ 0.3Vp-p 2V IC405 ⑥ ⑦ PB
㊶ 6μsec IC405 ⑨
㊷ 2V IC405 ⑮
㊸ 6μsec IC405 ⑱
㊹ 11.89MHz IC405 ㉓
㊺ 6μsec IC405 (48)
㊻ 2.2msec IC407 ⑭,⑯
㊼ 110msec IC408 ⑥
㊽ 1.1msec IC408 ㉒

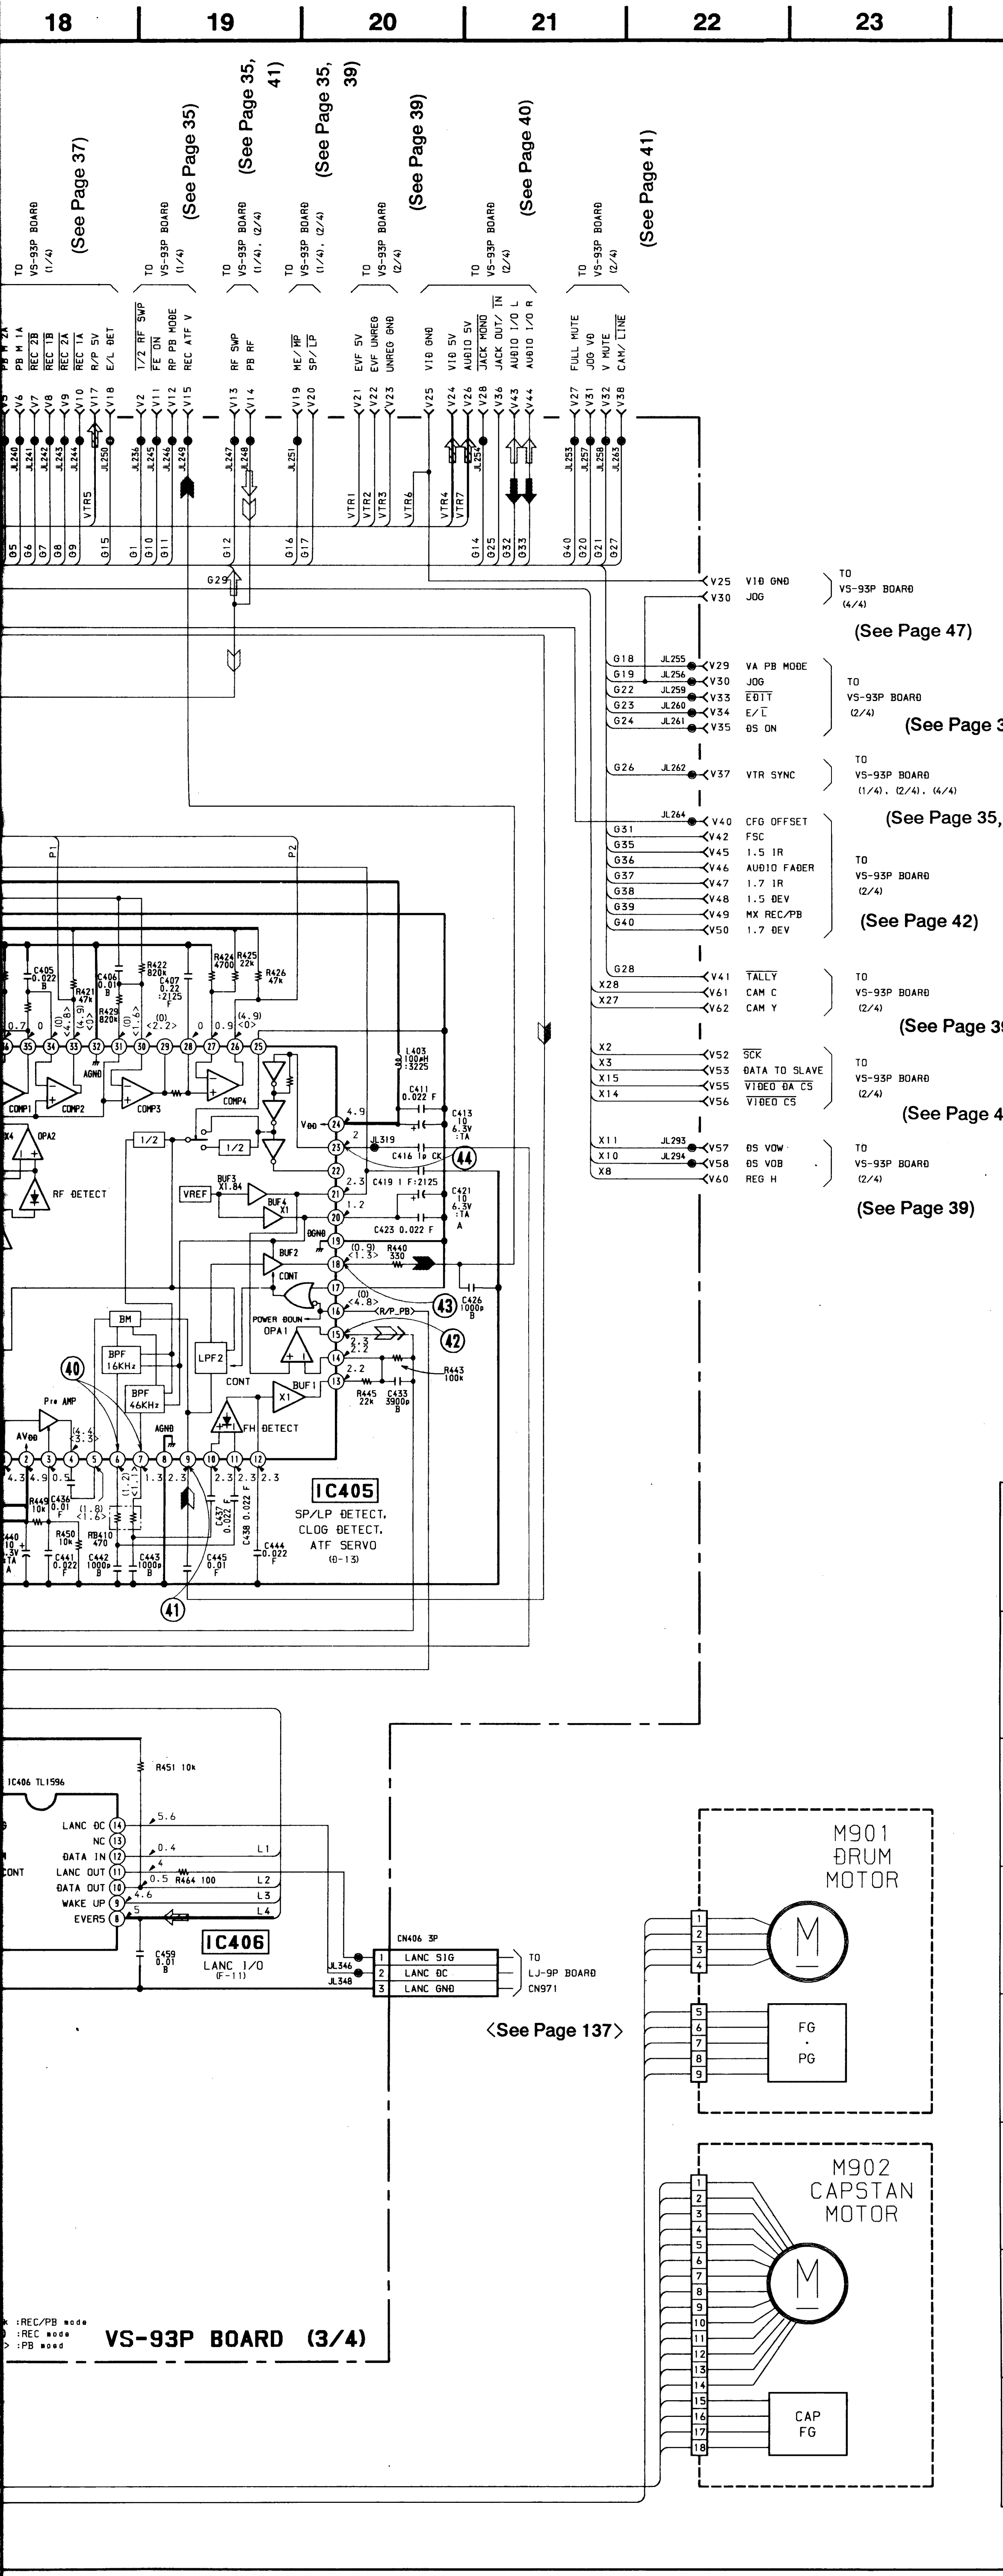
18
19
20
21
22
23
24
25
26
27
28
TO VS-93P BOARD (1/4) (See Page 37)
TO VS-93P BOARD (1/4) (See Page 35)
TO VS-93P BOARD (1/4), (2/4) (See Page 35, 41)
TO VS-93P BOARD (1/4), (2/4) (See Page 35, 39)
TO VS-93P BOARD (2/4) (See Page 39)
TO VS-93P BOARD (2/4) (See Page 40)
TO VS-93P BOARD (2/4) (See Page 41)
REC 2B
REC 1B
REC 2A
REC 1A
R/P 5V
E/L DET
1/2 RF SWP
FE ON
RP PB MODE
REC ATF V
RF SWP
PB RF
HE/MP
SP/LP
EVF 5V
EVF UNREG
UNREG GND
VID GND
VID 5V
AUDIO 5V
JACK MONO
JACK OUT/IN
AUDIO I/O L
AUDIO I/O R
FULL MUTE
JOG VD
V MUTE
CAM/LINE
V25 VID GND
V30 JOG
TO VS-93P BOARD (4/4)
(See Page 47)
V29 VA PB MODE
V30 JOG
V33 EDIT
V34 E/L
V35 OS ON
TO VS-93P BOARD (2/4)
(See Page 39)
V37 VTR SYNC
TO VS-93P BOARD (1/4), (2/4), (4/4)
(See Page 35, 41, 48)
V40 CFG OFFSET
V42 FSC
V45 1.5 IR
V46 AUDIO FADER
V47 1.7 IR
V48 1.5 DEV
V49 MX REC/PB
V50 1.7 DEV
TO VS-93P BOARD (2/4)
(See Page 42)
V41 TALLY
V61 CAM C
V62 CAM Y
TO VS-93P BOARD (2/4)
(See Page 39)
V52 SCK
V53 DATA TO SLAVE
V55 VIDEO DA CS
V56 VIDEO CS
TO VS-93P BOARD (2/4)
(See Page 41)
V57 OS VDW
V58 OS VDB
V60 REG H
TO VS-93P BOARD (2/4)
(See Page 39)
COMP1
COMP2
COMP3
COMP4
OPA2
RF DETECT
VREF
BUF3 X1.84
BUF4 X1
BUF2
CONT
POWER DOWN
OPA1
BM
BPF 16KHz
BPF 46KHz
LPF2
BUF1 X1
FH DETECT
Pre AMP
AVDD
AGND
DGND
VDD
L403 100µH
C411 0.022 F
C413 10 6.3V TA
C416 1p CK
C419 1 F:2125
C421 10 6.3V TA
C423 0.022 F
R440 330
C426 1000p B
R443 100k
R445 22k
C433 3900p B
C444 0.022 F
C445 0.01 F
C443 1000p B
C442 1000p B
C441 0.022 B
R450 10k
RB410 470
R449 10k
C436 0.01 F
C437 0.022 F
C438 0.022 F
R422 820k
R421 47k
R429 820k
C405 0.022 B
C406 0.01 B
C407 0.22 :2125
R424 4700
R425 22k
R426 47k
IC405
SP/LP DETECT, CLOG DETECT, ATF SERVO (D-13)
40
41
42
43
44
R451 10k
IC406 TL1596
LANC DC
NC
DATA IN
LANC OUT
DATA OUT
WAKE UP
EVERS
L1
L2
L3
L4
R464 100
IC406
LANC I/O (F-11)
C459 0.01 B
CN406 3P
1 LANC SIG
2 LANC DC
3 LANC GND
TO LJ-9P BOARD CN971
<See Page 137>
M901 DRUM MOTOR
M
FG · PG
M902 CAPSTAN MOTOR
M
CAP FG
:REC/PB mode
:REC mode
:PB mode
VS-93P BOARD (3/4)

• **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				➡
PB				⇨

	REC	REC/PB	PB
Drum speed servo		▷	
Drum phase servo		⊳	
Drum servo (speed and phase)		⋙	
Capstan speed servo			
Capstan phase servo	➧›		⊐›
Capstan servo (speed and phase)		➧»›	
Ref. signal	➧	➢	▷

VS-93P BOARD (3/4)

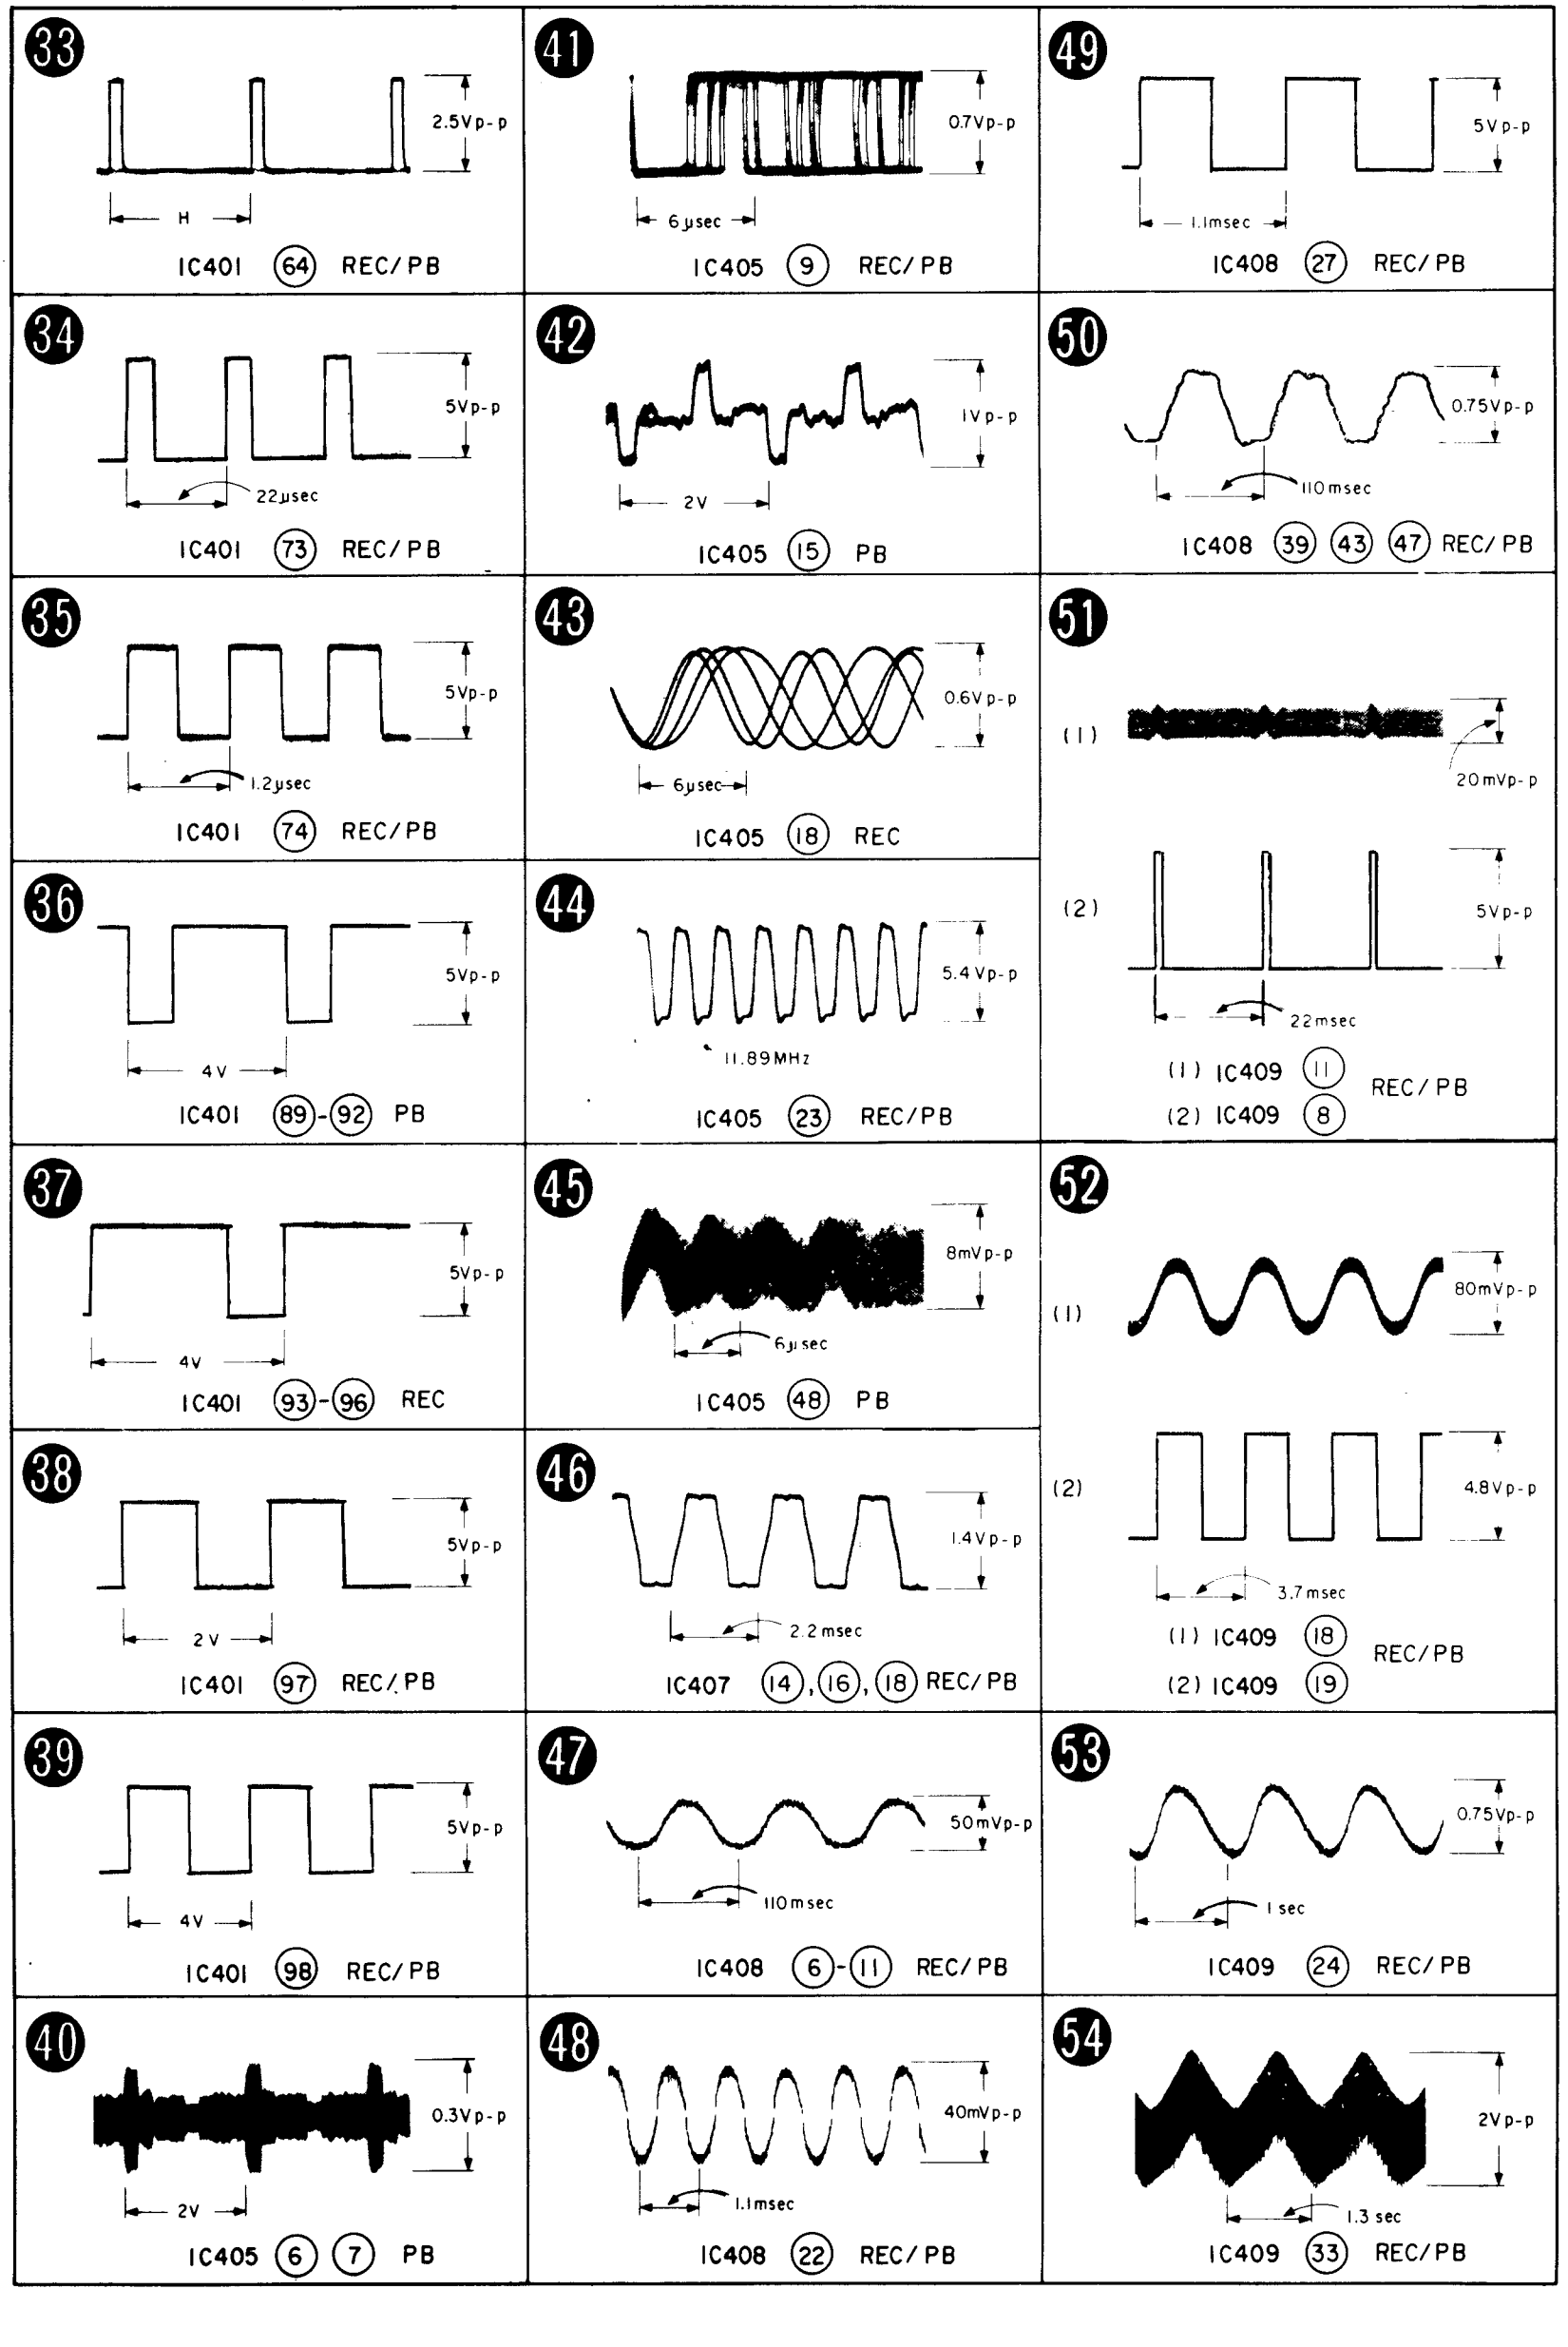

VS-93P (VIDEO) SCHEMATIC DIAGRAM

- Refer to page 31 for Printed Wiring Board.

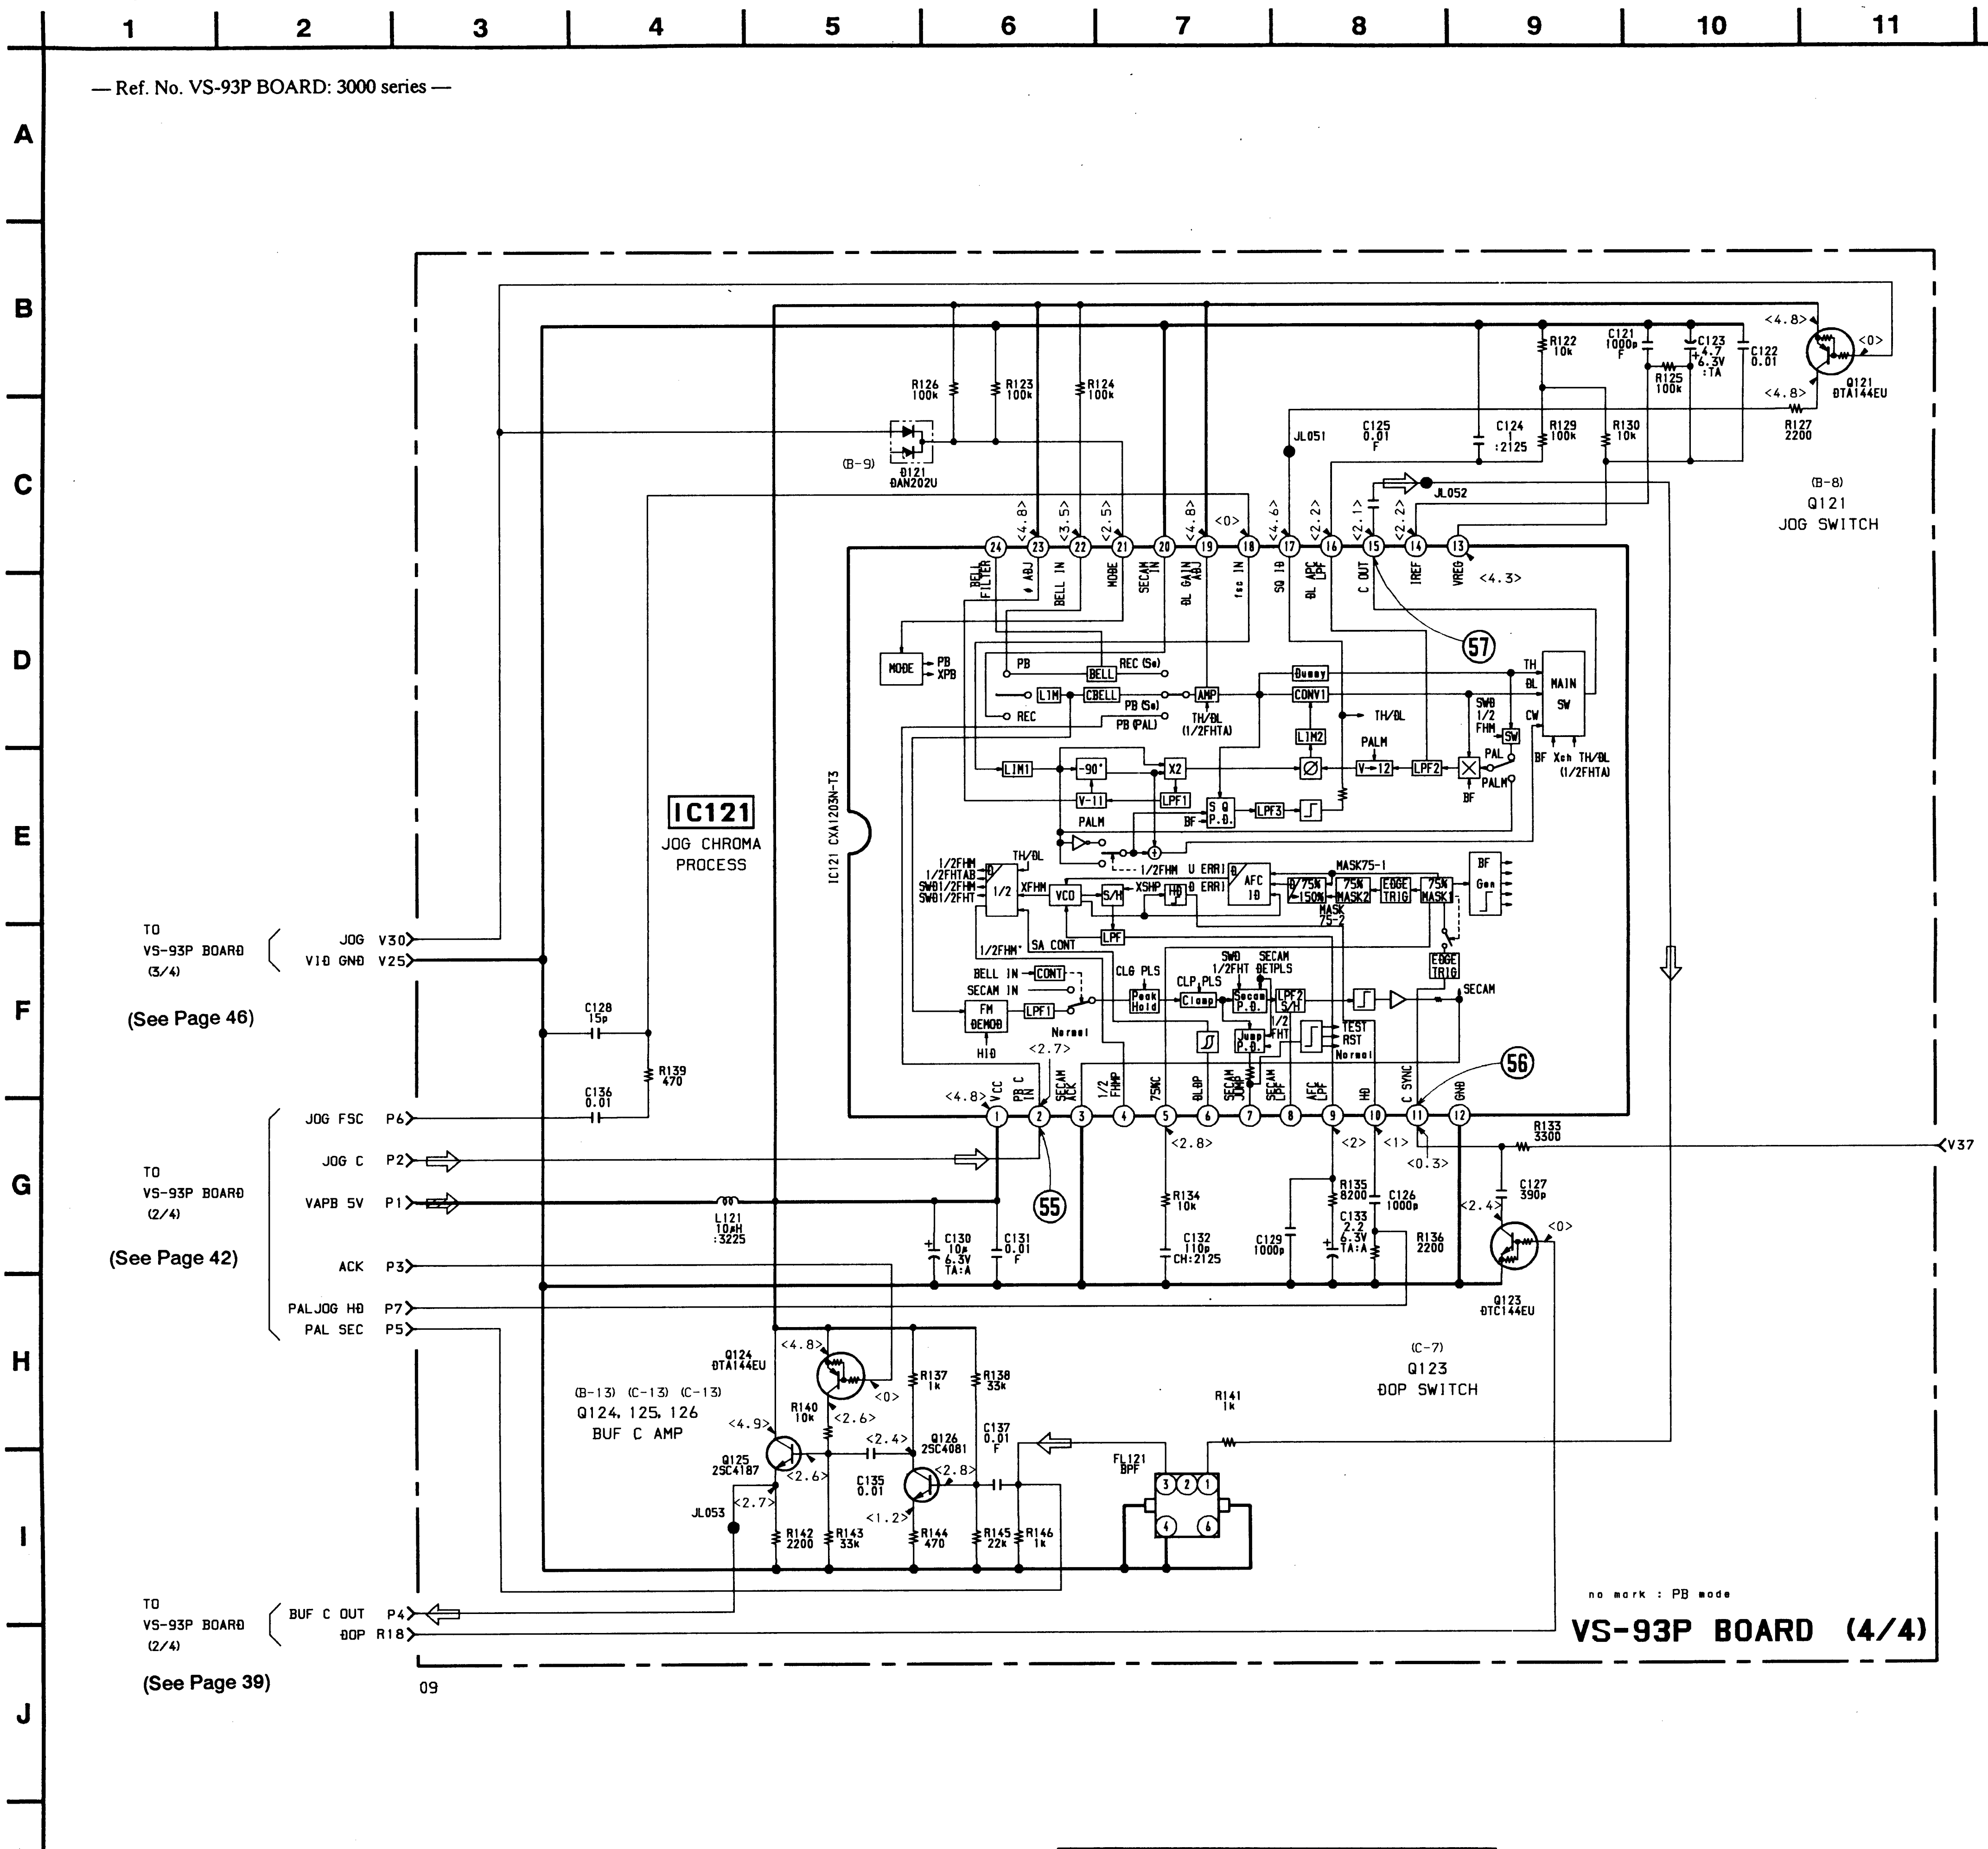
1
2
3
4
5
6
7
8
9
10
11
A
B
C
D
E
F
G
H
I
J
— Ref. No. VS-93P BOARD: 3000 series —
IC121
JOG CHROMA PROCESS
IC121 CXA1203N-T3
TO VS-93P BOARD (3/4)
JOG V30
VID GND V25
(See Page 46)
JOG FSC P6
JOG C P2
VAPB 5V P1
ACK P3
PALJOG HD P7
PAL SEC P5
TO VS-93P BOARD (2/4)
(See Page 42)
TO VS-93P BOARD (2/4)
BUF C OUT P4
DOP R18
(See Page 39)
V37
Q121 DTA144EU
(B-8) Q121 JOG SWITCH
D121 DAN202U
(B-9)
R126 100k
R123 100k
R124 100k
R122 10k
C121 1000p F
C123 4.7 6.3V :TA
C122 0.01
R125 100k
R127 2200
C125 0.01 F
C124 :2125
R129 100k
R130 10k
JL051
JL052
JL053
C128 15p
C136 0.01
R139 470
L121 10μH :3225
C130 10μ 6.3V TA:A
C131 0.01 F
R134 10k
C132 110p CH:2125
C129 1000p
R135 8200
C133 2.2 6.3V TA:A
C126 1000p
R136 2200
R133 3300
C127 390p
Q123 DTC144EU
(C-7) Q123 DOP SWITCH
Q124 DTA144EU
(B-13) (C-13) (C-13)
Q124, 125, 126 BUF C AMP
Q125 2SC4187
Q126 2SC4081
R137 1k
R138 33k
R140 10k
C137 0.01 F
C135 0.01
R142 2200
R143 33k
R144 470
R145 22k
R146 1k
R141 1k
FL121 BPF
BELL FILTER
φ ADJ
BELL IN
MODE
SECAM IN
BL GAIN ADJ
fsc IN
SQ ID
BL ADJ LPF
C OUT
IREF
VREG
VCC
PB C IN
SECAM REC
1/2 FHMP
75NC
BLBP
SECAM JUDG
SECAM DEF
HD
C SYNC
GND
MODE
PB XPB
PB
REC (Se)
REC
BELL
LIM
CBELL
PB (Se)
PB (PAL)
AMP
TH/BL (1/2FHTA)
Bunny
CONV1
LIM2
TH/BL
PALM
SWB 1/2 FHM
SW
PAL
BF
MAIN SW
TH
BL
CW
BF Xch TH/BL (1/2FHTA)
LIM1
-90°
X2
V-11
LPF1
SQ P.D.
LPF3
V-12
LPF2
1/2FHM
1/2FHTAB
SWB1/2FHM
SWB1/2FHT
1/2
XFHM
VCO
S/H
XSHP
HD
U ERR1
D ERR1
AFC ID
MASK75-1
75N 150N
MASK2
MASK 75-2
EDGE TRIG
75N MASK1
BF Gen
SA CONT
BELL IN
SECAM IN
FM DEMOD
HID
Normal
CLD PLS
SWD 1/2FHT
SECAM DETPLS
CLP PLS
Peak Hold
Clamp
Secam P.D.
LPF2 S/H
Jump P.D.
1/2 FHT
TEST RST Normal
EDGE TRIG
SECAM
<4.8>
<3.5>
<2.5>
<0>
<4.6>
<2.2>
<2.1>
<4.3>
<2.7>
<2.8>
<2>
<1>
<0.3>
<2.4>
<4.9>
<2.6>
<1.2>
55
56
57
09
no mark : PB mode
VS-93P BOARD (4/4)

VIDEO VIDEO

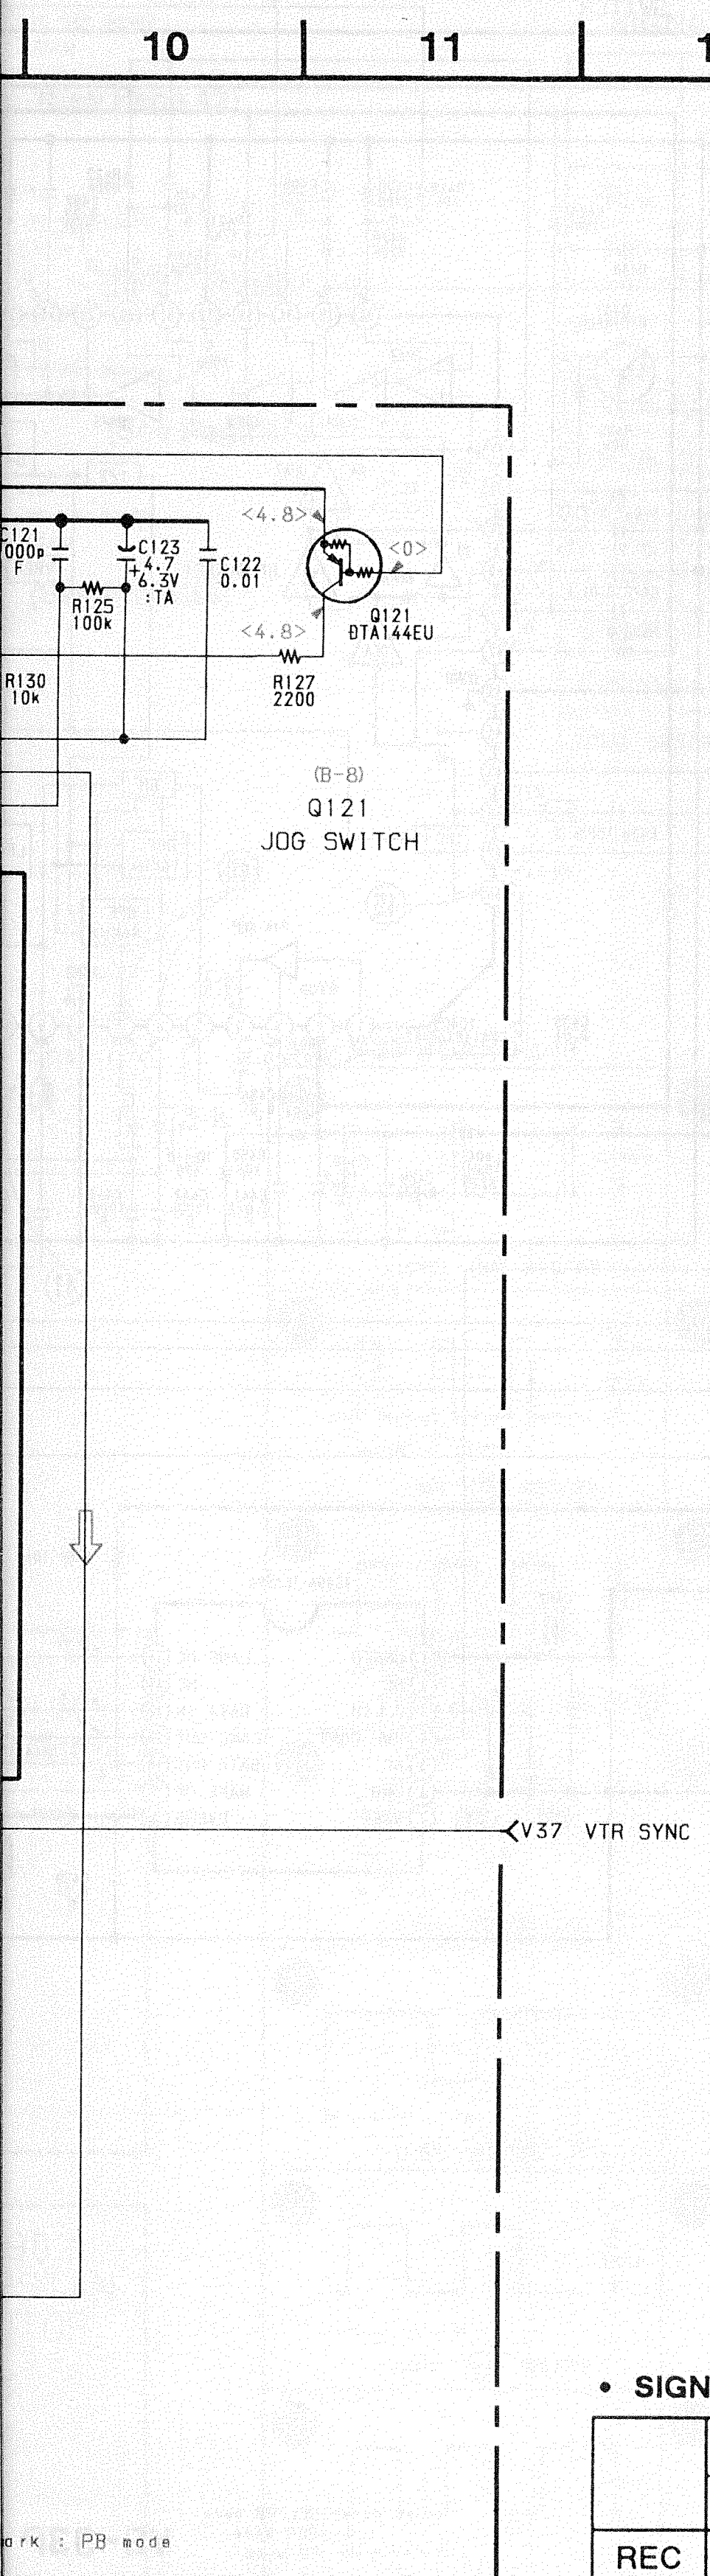
10
11
12
13
14
C121
000p
F
C123
4.7
6.3V
:TA
C122
0.01
<4.8>
<0>
<4.8>
R125
100k
R130
10k
R127
2200
Q121
DTA144EU
(B-8)
Q121
JOG SWITCH
V37 VTR SYNC
TO
VS-93P BOARD
(1/4), (2/4), (3/4)
ork : PB mode

-93P BOARD (4/4)

(See Page 35, 41, 46)

VS-93P BOARD(4/4)

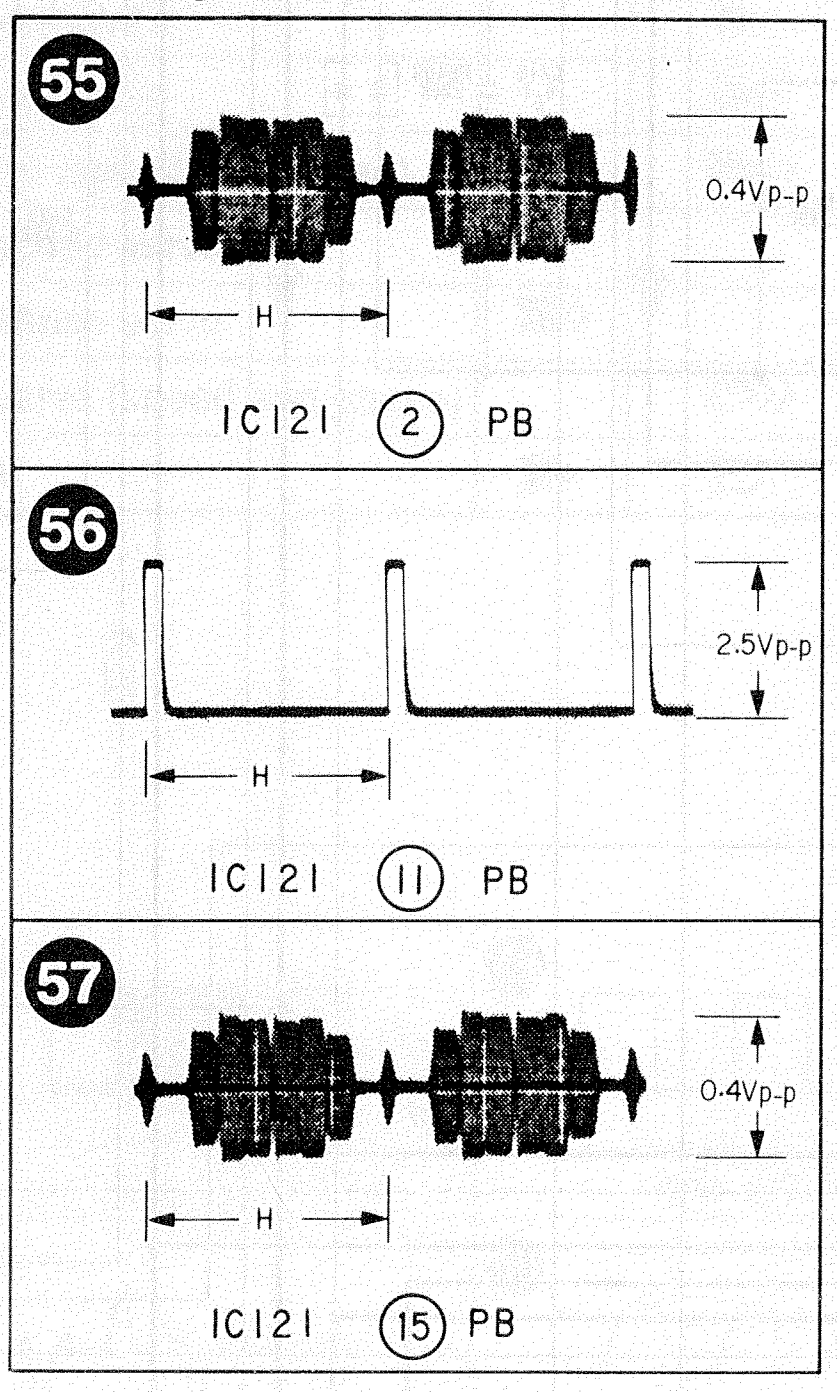
55
0.4Vp-p
H
IC121 (2) PB
56
2.5Vp-p
H
IC121 (11) PB
57
0.4Vp-p
H
IC121 (15) PB

- SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				
PB	⇨			

CL-28 (COLOR VIEW FINDER), IV-10 (DC/AC CONVE

— Ref. No. LB-32 BOARD: 2000 series, CL-25, IV-10 BOARD: 9000 seri

- **For printed wiring boards.**

- ● : Through hole is omitted.

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the pattern face are indicated.

IV-10 BOARD (COMPONENT SIDE)

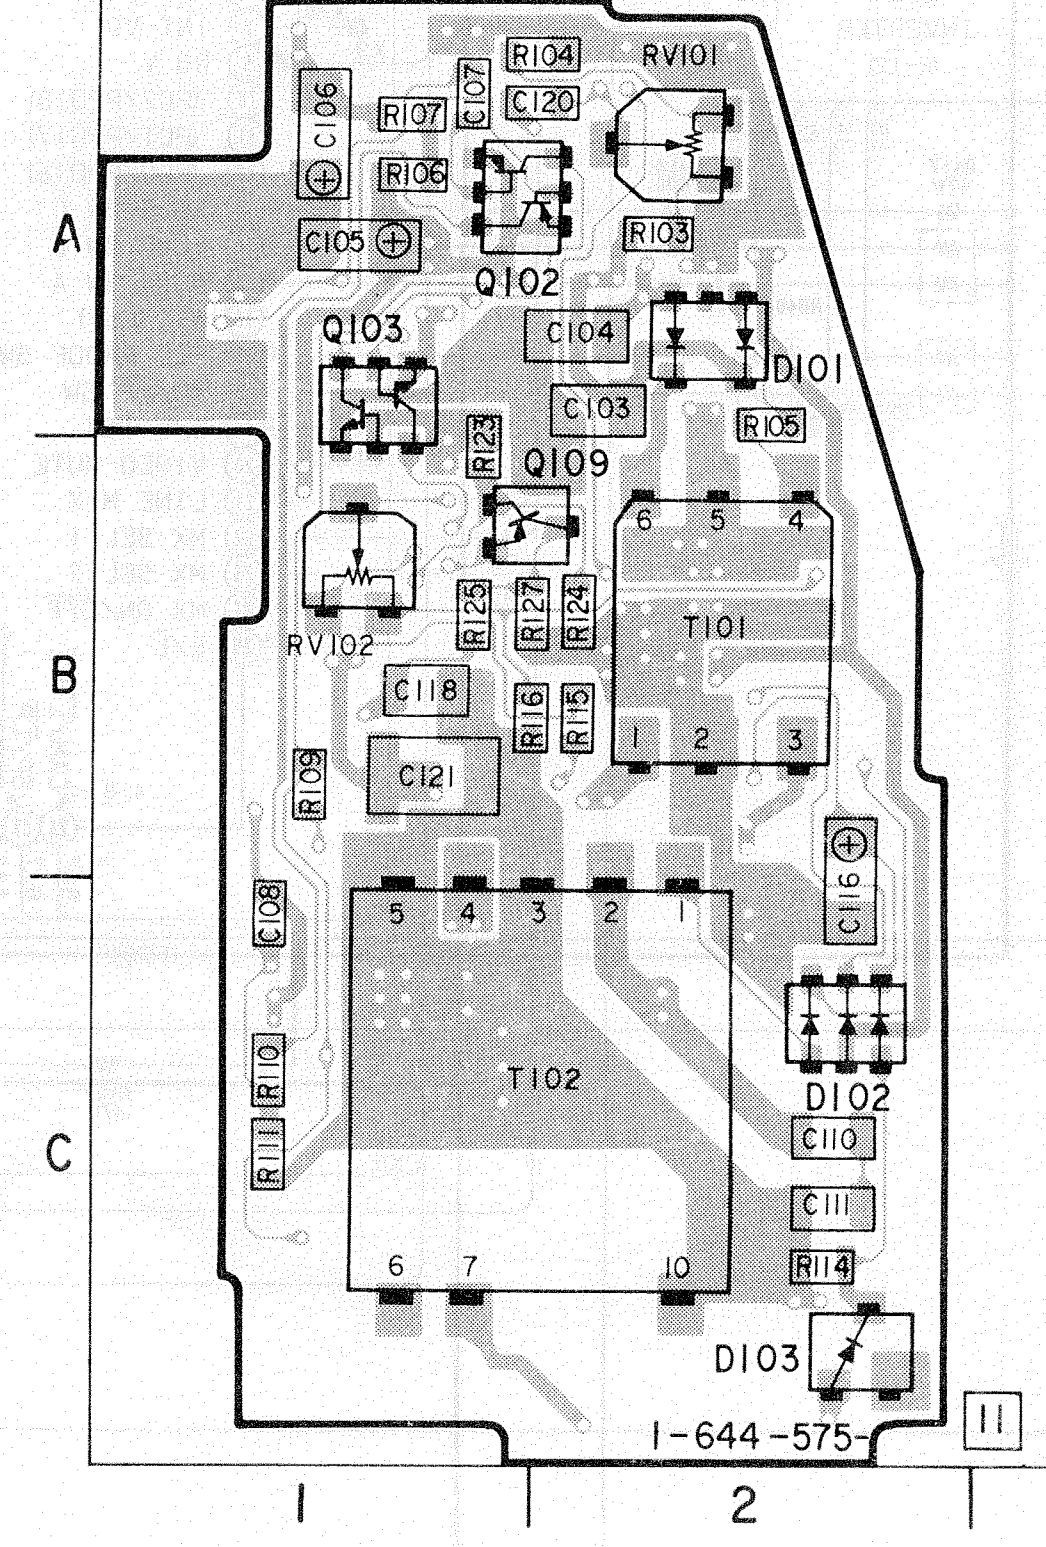
A
B
C
C106
R104
C107
C120
RV101
R107
R106
C105
R103
Q102
Q103
C104
D101
C103
R105
R123
Q109
RV102
R125
R127
R124
T101
C118
R116
R115
C121
R109
C108
C116
T102
R110
R111
D102
C110
C111
R114
D103
1-644-575-
11
1
2
3
5
4
3
2
1
6
5
4
6
7
10

09

IV-10 B


4
5
R120
R121
C117
R122
R128
Q101
Q106
CN
11
12
3

〈 DIODE 〉

D101	8-719-981-59	DIODE	FC805
D102	8-719-951-22	IC	IMN10
D103	8-719-802-36	DIODE	1SS250

〈 IC 〉

IC101	8-759-070-30	IC	MB3776APNF-G-BND
IC102	8-759-998-92	IC	LM393D
IC103	8-759-998-98	IC	LM358D

〈 TRANSISTOR 〉

Q101	8-729-822-05	TRANSISTOR	2SD1622-ST-TD .
Q102	8-729-421-90	TRANSISTOR	XN4113
Q103	8-729-420-12	TRANSISTOR	XN4213
Q104	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q105	8-729-905-23	TRANSISTOR	2SA1576-R
Q106	8-729-011-35	TRANSISTOR	2SK1299S
Q107	8-729-015-04	TRANSISTOR	XN4401
Q108	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q109	8-729-905-23	TRANSISTOR	2SA1576-R

IEW FINDER), IV-10 (DC/AC CONVERTER), LB-32 (BACK LIGHT) PRINTED WIRING BOARDS

RD: 2000 series, CL-25, IV-10 BOARD: 9000 series —

g boards.

is omitted.

> Parts on the pattern face side seen from the pattern face are indicated.
>
> Parts on the parts face side seen from the pattern face are indicated.

(DIODE)

D901	8-719-980-83	DIODE	GL3PR43
D902	8-719-941-34	DIODE	GL-1HD51
D903	8-719-421-18	DIODE	MA8033-L
D904	8-719-820-05	DIODE	1SS181
D905	8-719-002-81	DIODE	1T363
D906	8-719-404-46	DIODE	MA110

(IC)

IC901	8-759-070-66	IC	IR3P961
IC902	8-759-513-06	IC	ETM3011F0A
IC903	8-759-513-07	IC	ETM3020F0A

(TRANSISTOR)

Q901	8-729-402-81	TRANSISTOR	XN4501

D (COMPONENT SIDE)

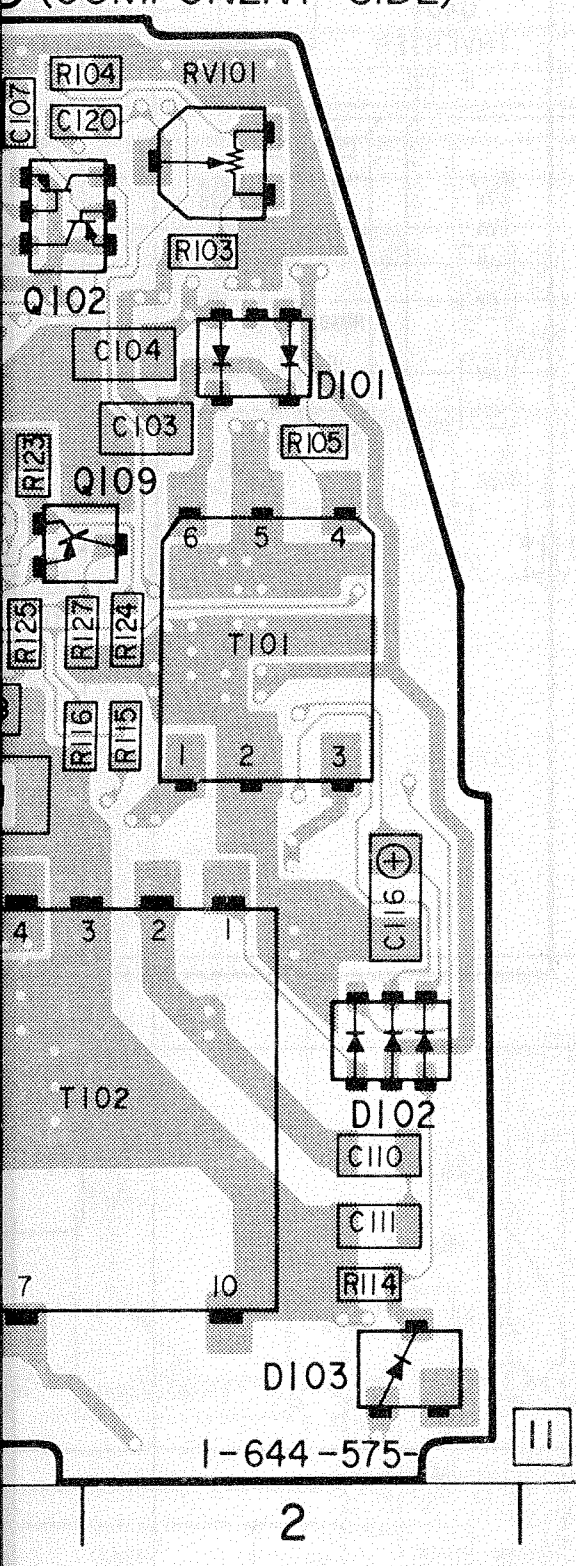
R104
RV101
C107
C120
R103
Q102
C104
D101
R105
R123
Q109
C103
T101
R125
R127
R124
R116
R115
C116
T102
D102
C110
C111
R114
D103
1-644-575-
11
2

IV-10 BOARD (CONDUCTOR SIDE)

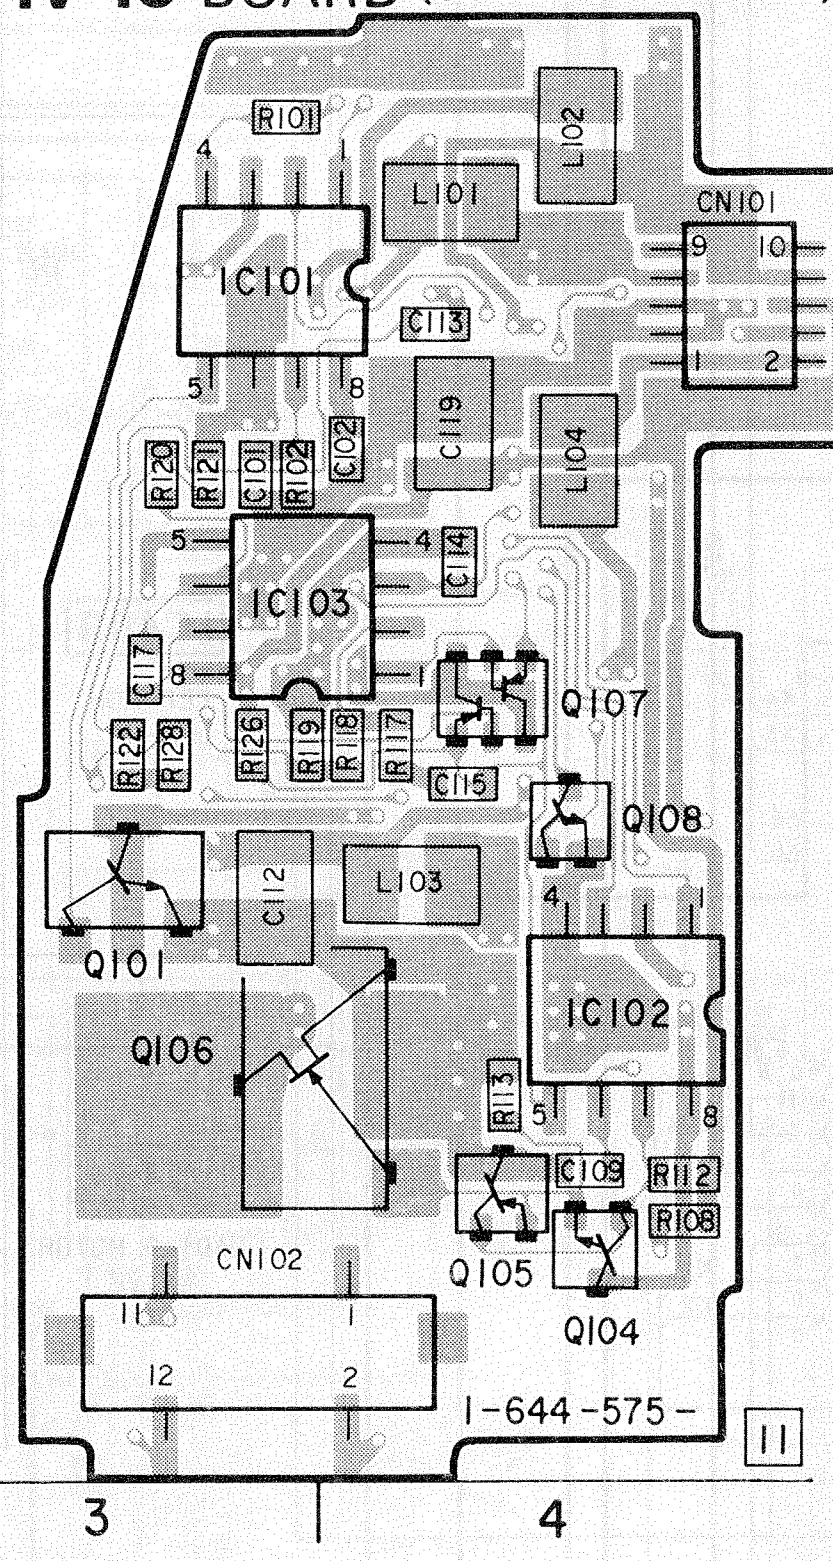
R101
L102
CN101
L101
IC101
C113
C119
L104
R120
R121
R101
R102
C102
IC103
C114
C117
R122
R128
R126
R119
R118
R117
Q107
C115
Q108
L103
C112
Q101
Q106
IC102
R113
C109
R112
R108
CN102
Q105
Q104
1-644-575-
11
3
4

CL-28 BOARD (COMPONENT SIDE)

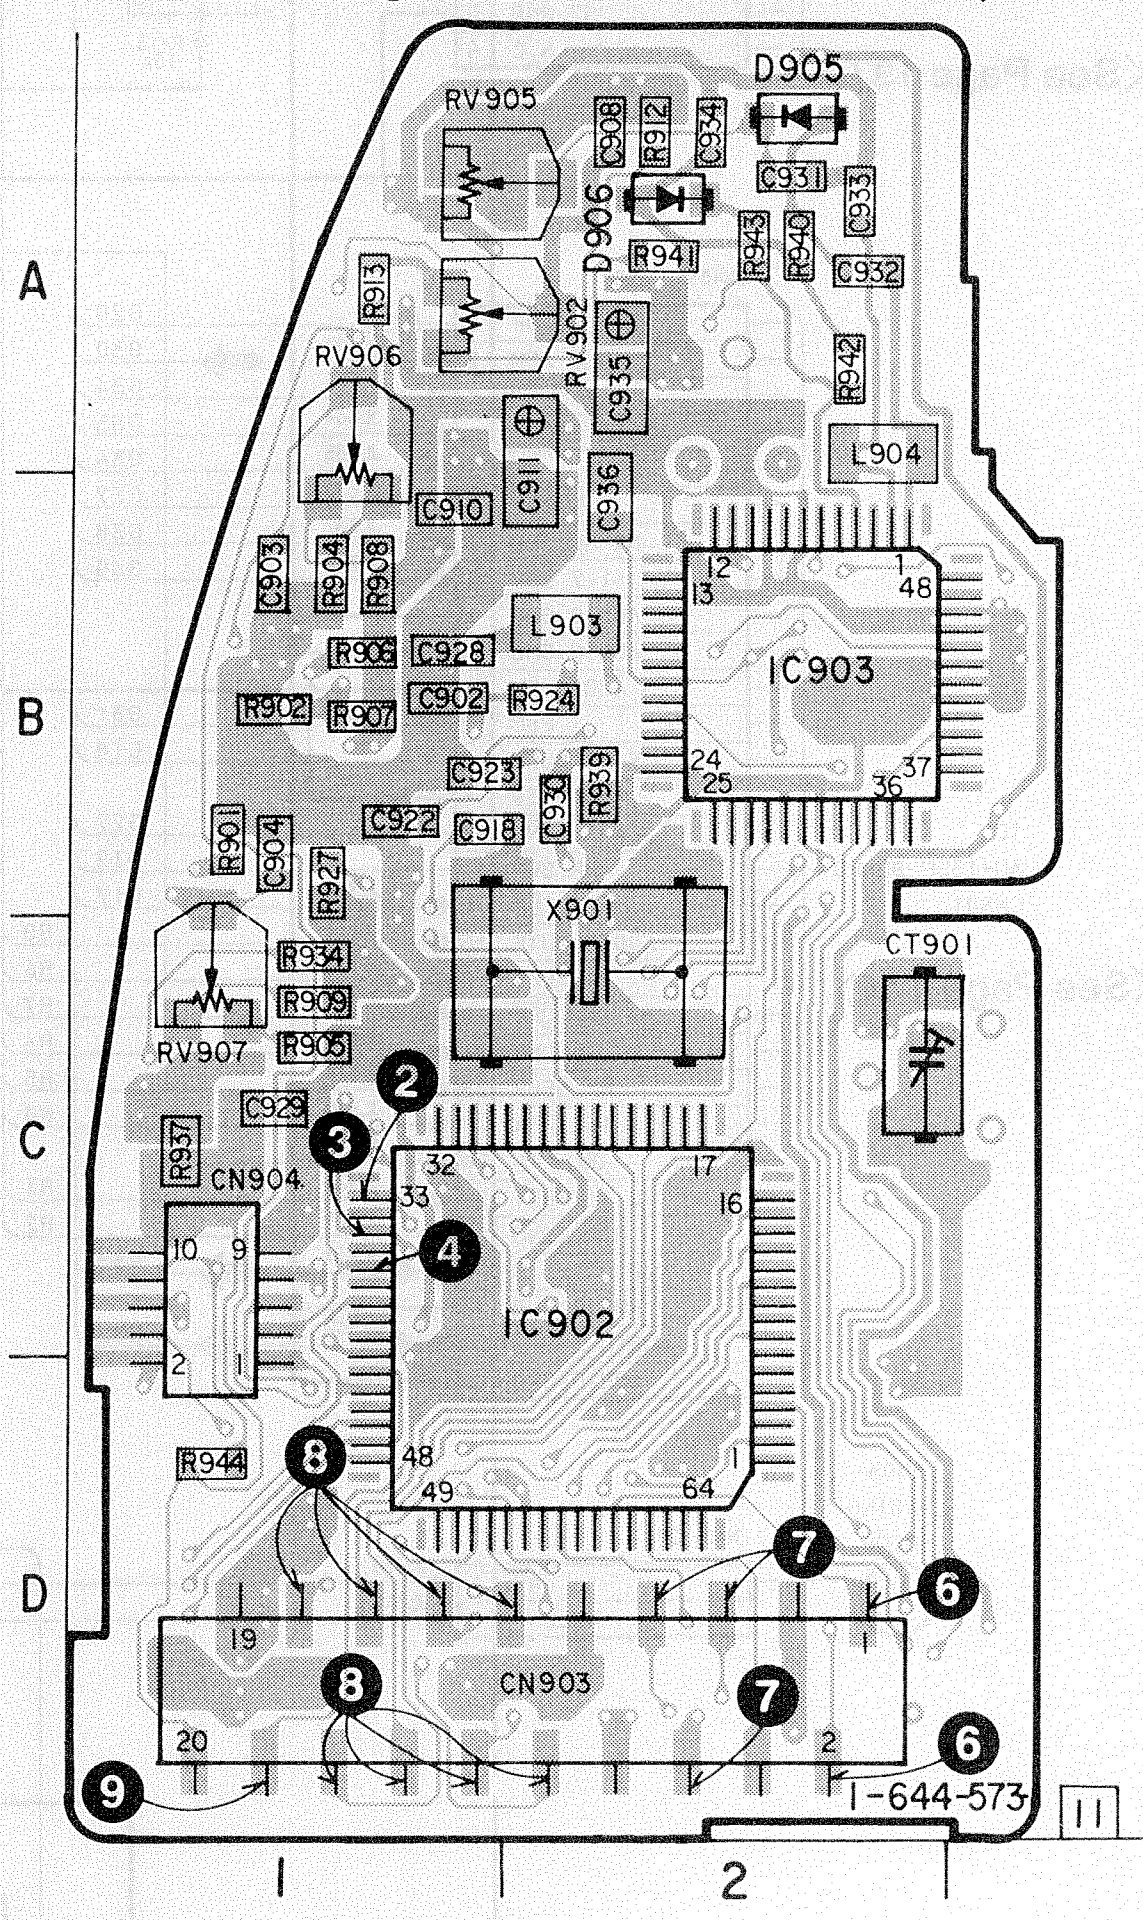
D905
RV905
D906
R941
C931
C932
C933
R913
RV902
C935
RV906
C942
L904
C910
C911
C936
C903
R904
R908
L903
IC903
R903
C928
R902
R907
C902
R924
C923
C922
C918
C930
R939
R901
C904
R927
X901
CT901
R934
R909
RV907
R905
C929
R937
CN904
IC902
R944
CN903
1-644-573
11
A
B
C
D
1
2
3

CL-28 BOARD (CONDUCTOR SIDE)

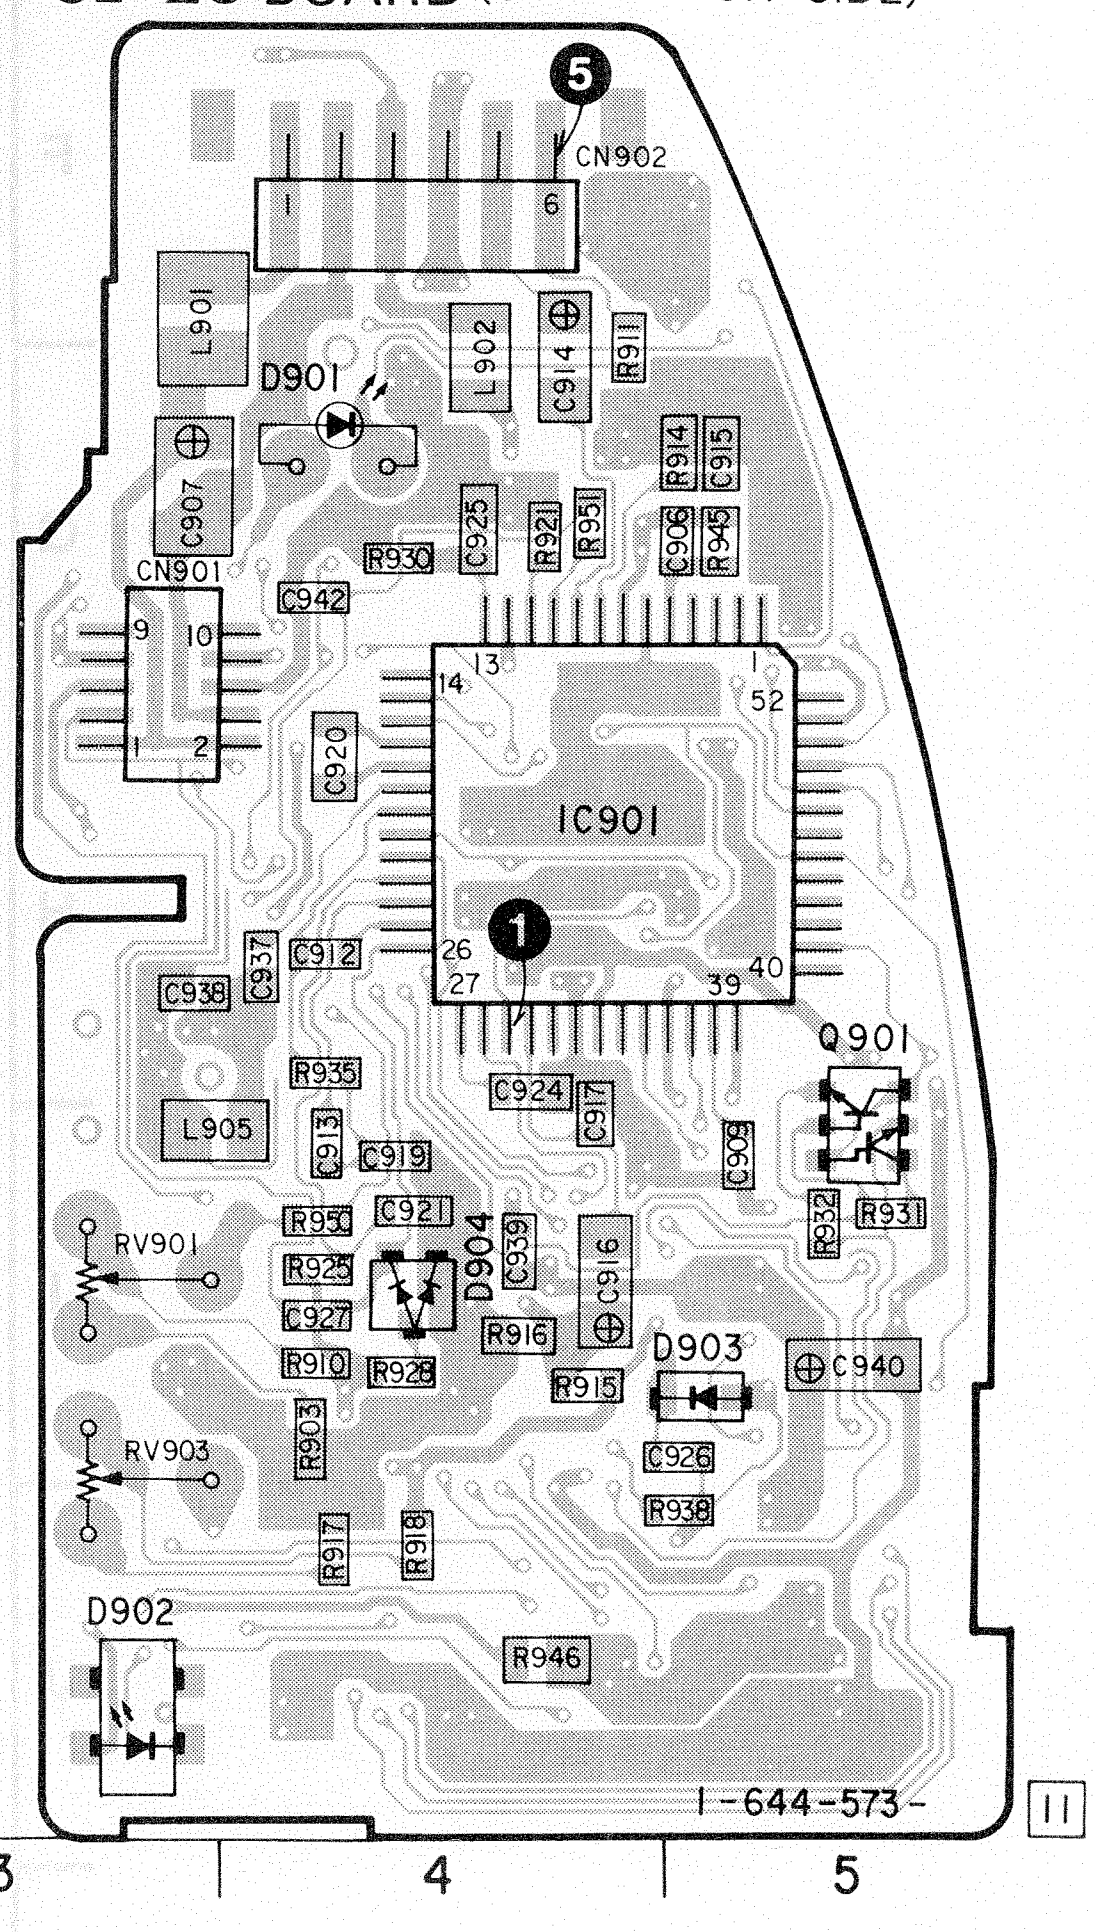
CN902
L901
L902
C914
R911
D901
C907
CN901
R914
C915
C906
R945
R930
R921
R951
C925
C942
IC901
C920
C937
C912
C938
Q901
C924
C917
R935
L905
R913
C919
C921
RV901
R950
R925
D904
C939
C916
C927
R916
R910
R926
D903
C940
R915
RV903
C926
R938
R903
R917
R918
D902
R946
R932
R931
C909
1-644-573-
11
4
5

(DIODE)

59 DIODE FC805
22 IC IMN10
36 DIODE 1SS250

(IC)

30 IC MB3776APNF-G-BND
92 IC LM393D
98 IC LM358D

(TRANSISTOR)

-05 TRANSISTOR 2SD1622-ST-TD .
-90 TRANSISTOR XN4113
-12 TRANSISTOR XN4213
-28 TRANSISTOR 2SC1623-L5L6
-23 TRANSISTOR 2SA1576-R

-35 TRANSISTOR 2SK1299S
-04 TRANSISTOR XN4401
-28 TRANSISTOR 2SC1623-L5L6
-23 TRANSISTOR 2SA1576-R

LB-32 BOARD (COMPONENT SIDE)

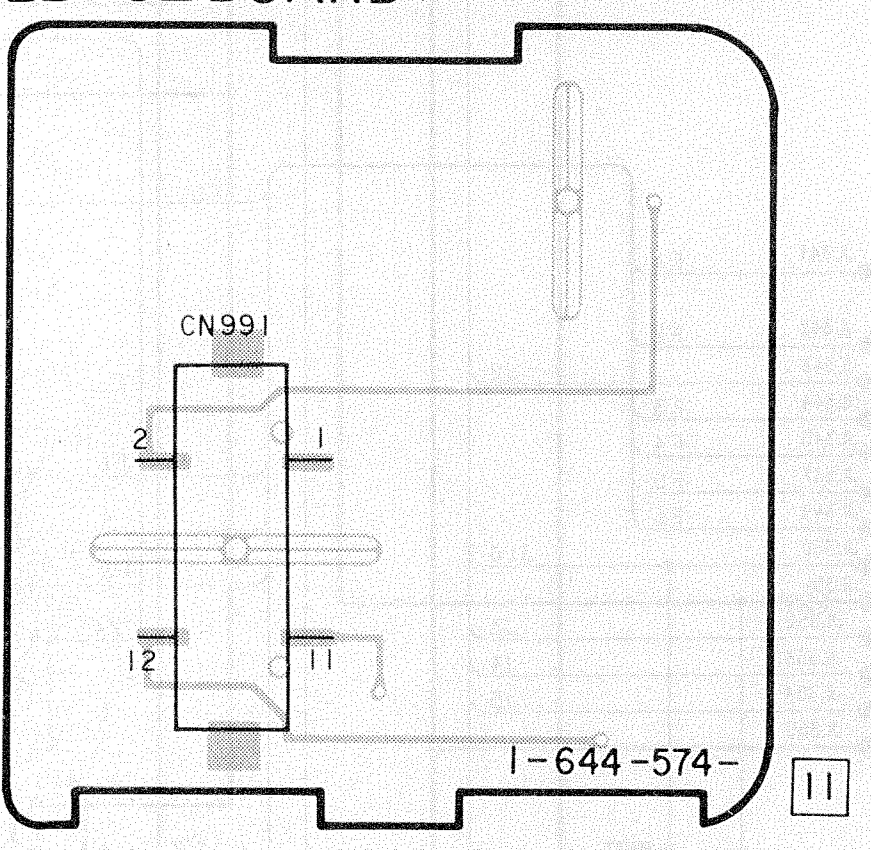
CN991
2
1
12
11
1-644-574-
11

LB-32 BOARD (CONDUCTOR SIDE)

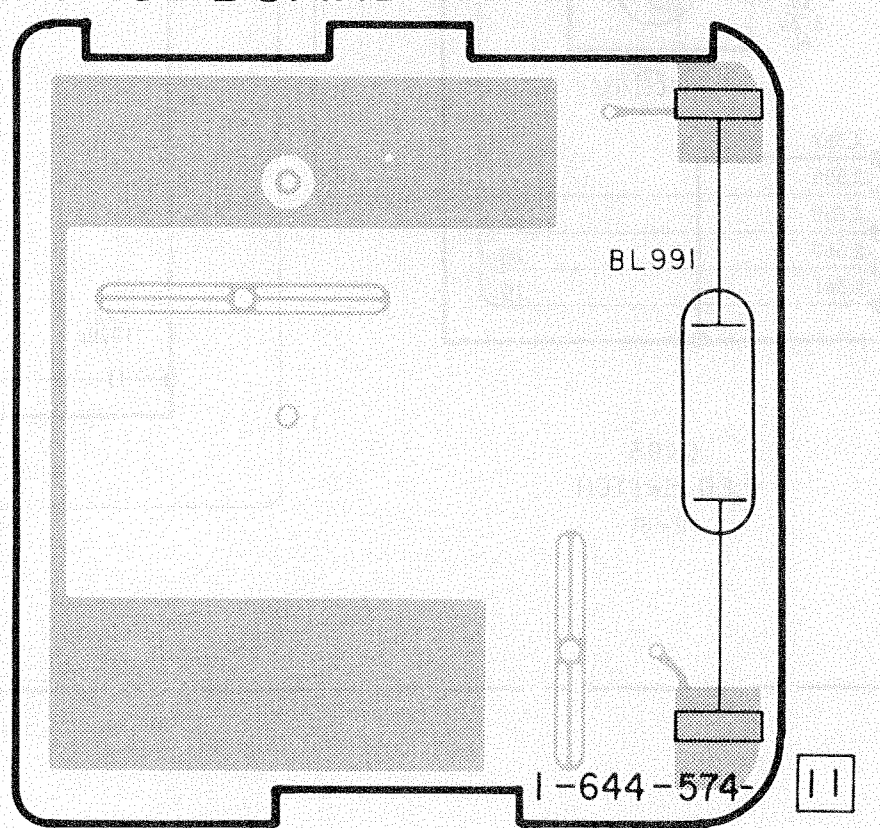
BL991
1-644-574-
11

CL-28 BOARD

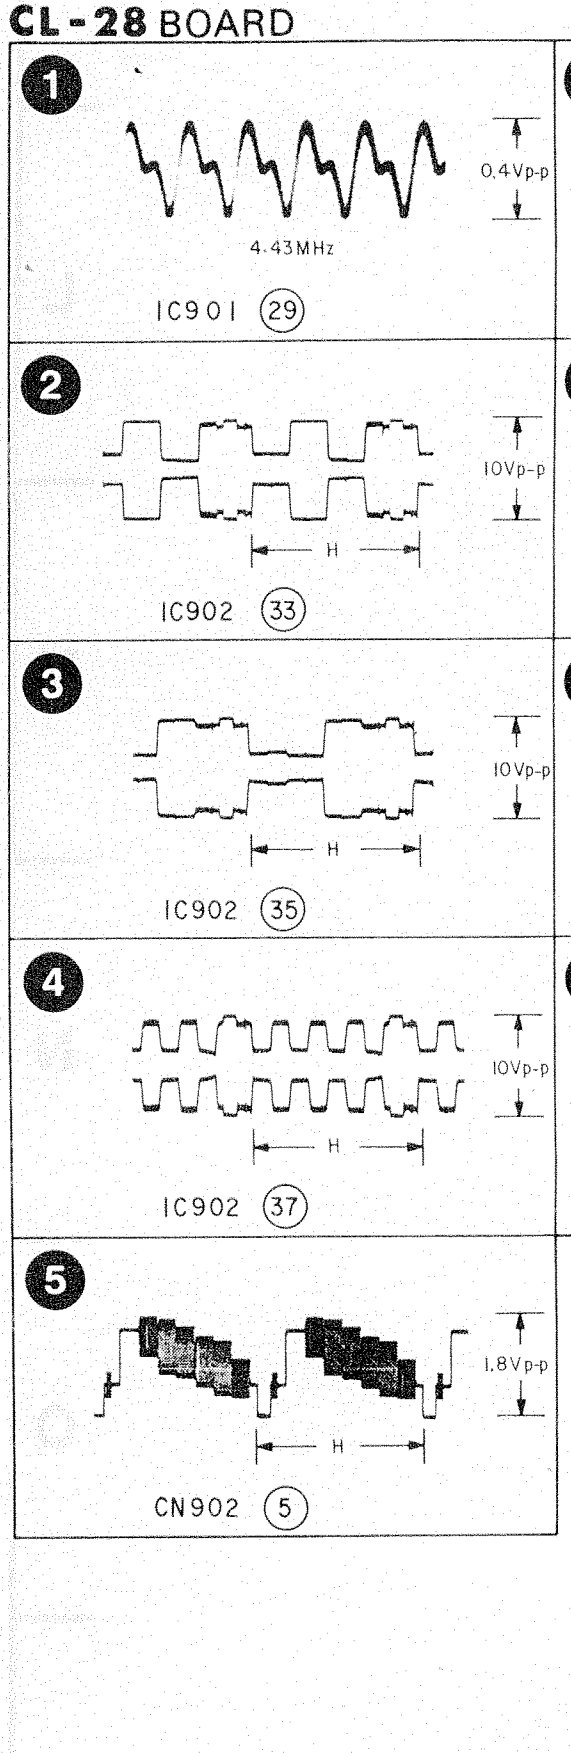

CL-28 (COLOR VIEW FINDER), IV-10 (DC/AC CONVERTER), LB-32 (BACK LIGHT) SCHEMATIC DIAGRAMS

— Ref. No. LB-32 BOARD: 2000 series, CL-25, IV-10 BOARD: 9000 series —

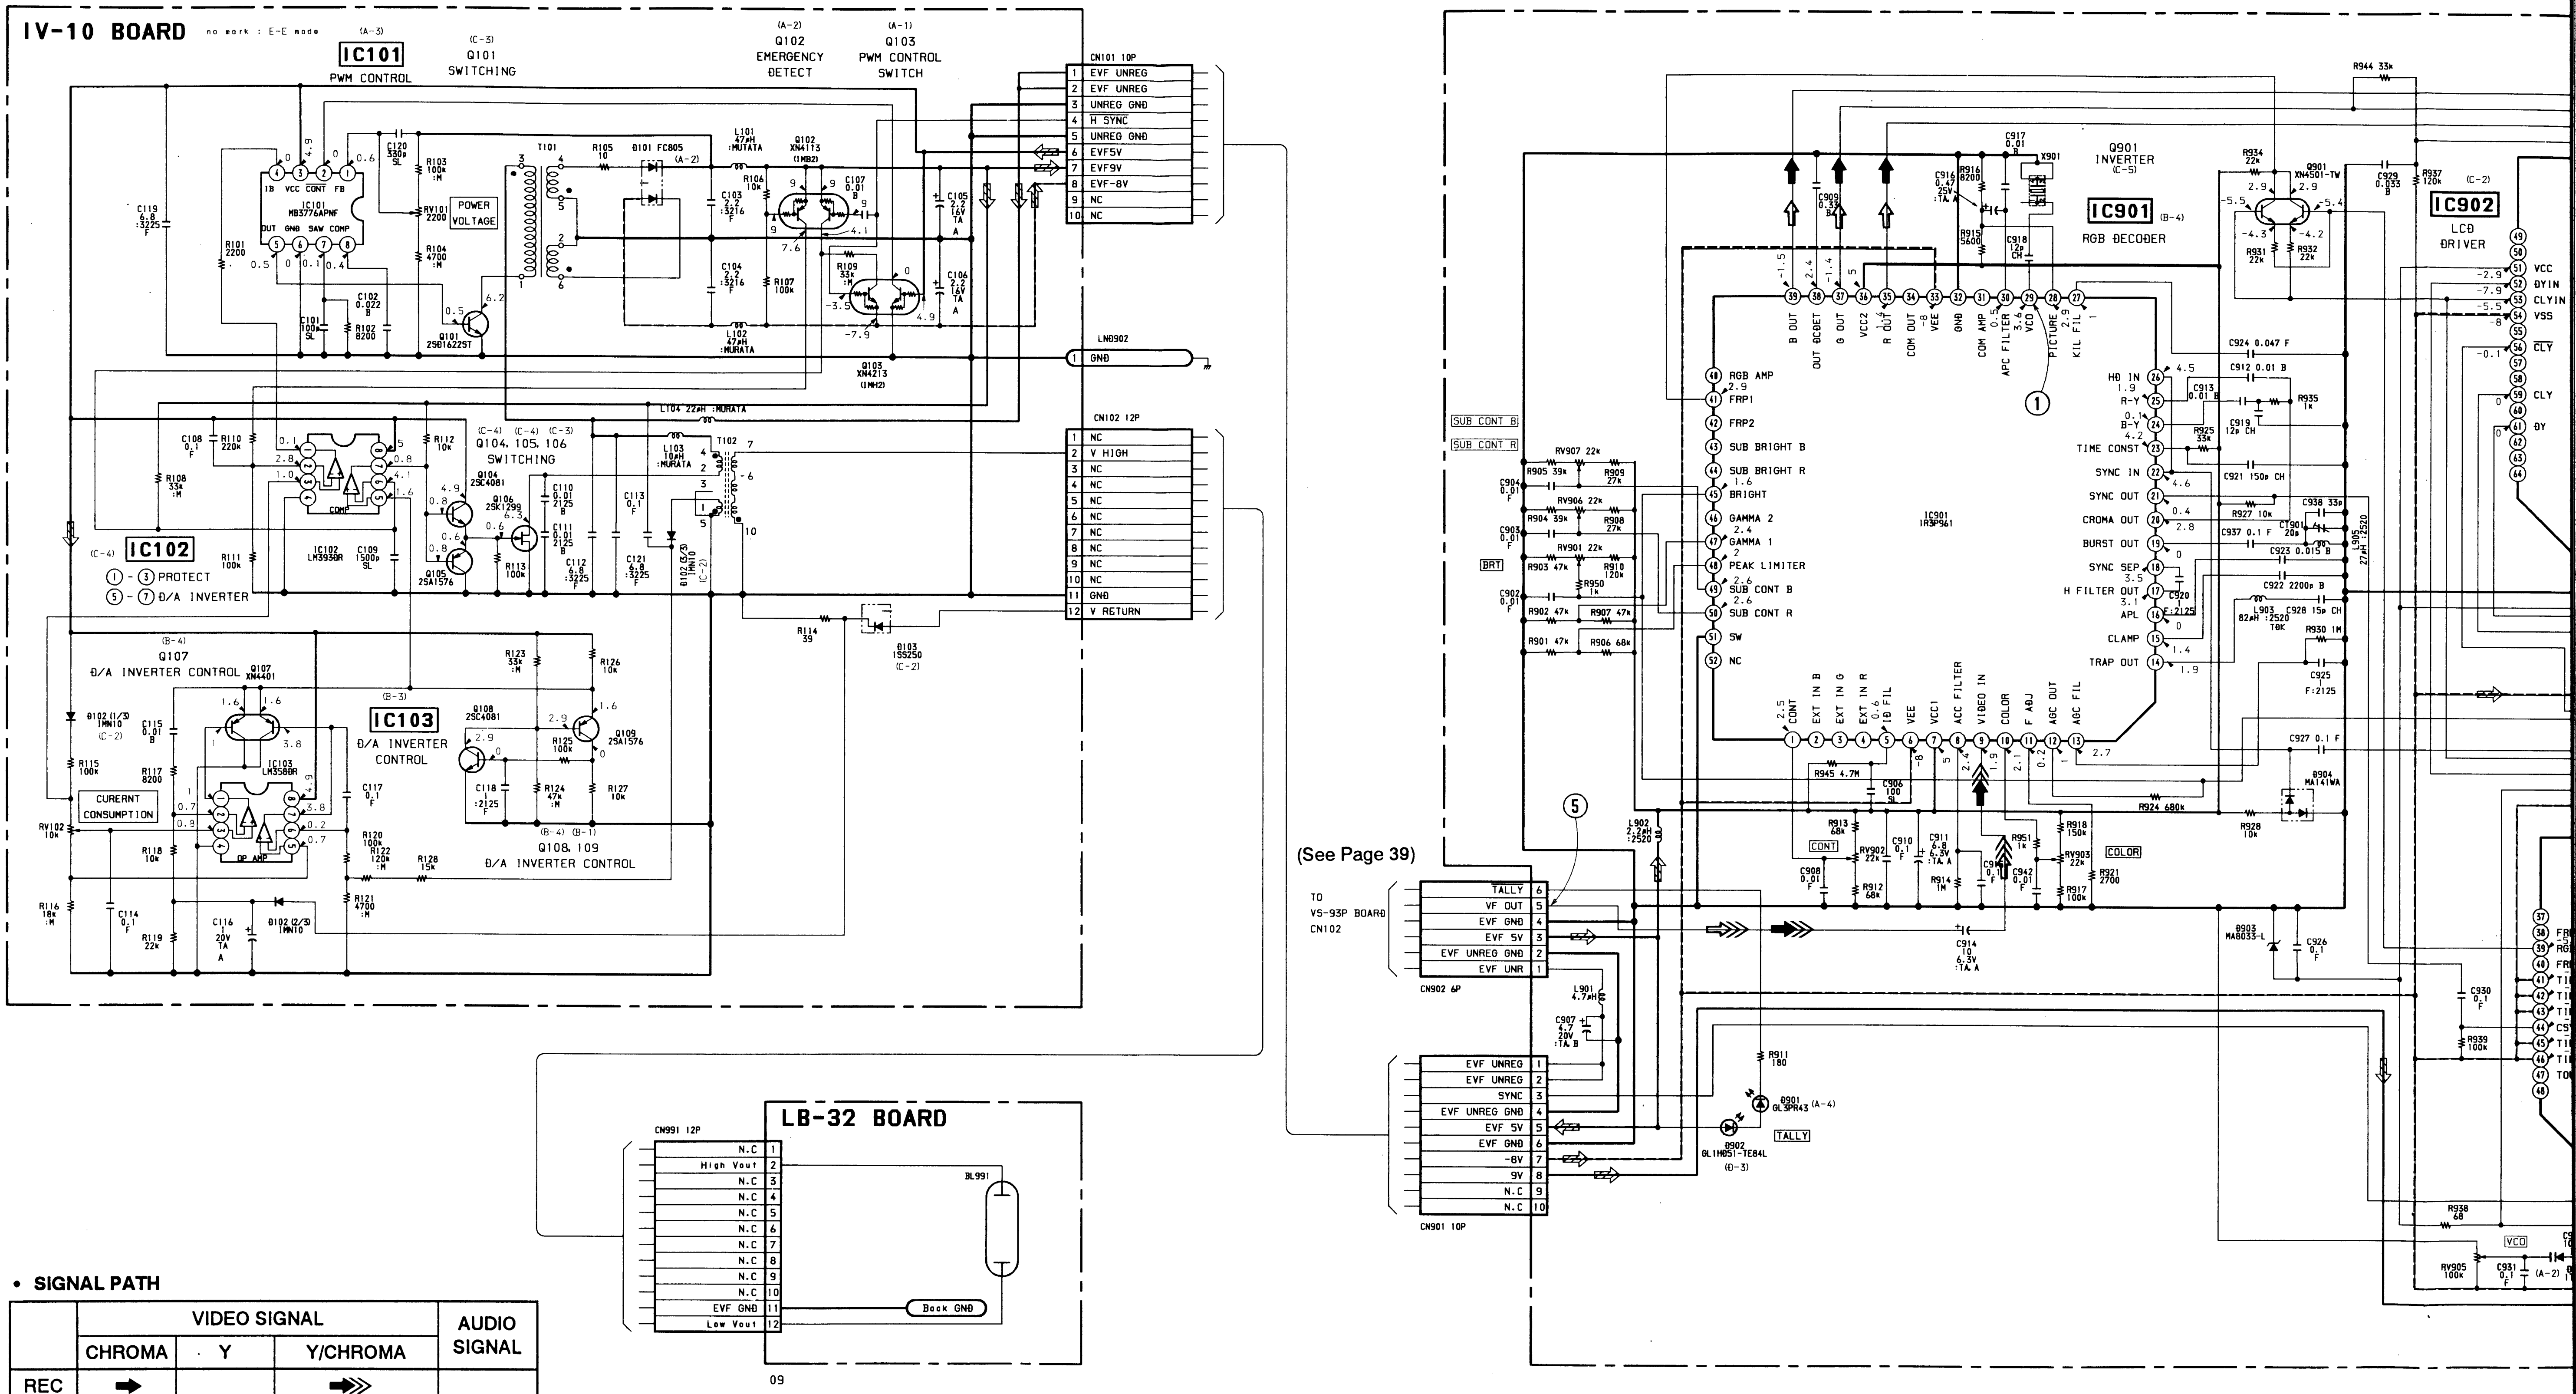

IV-10 BOARD
no mark : E-E mode
IC101 PWM CONTROL
Q101 SWITCHING
Q102 EMERGENCY DETECT
Q103 PWM CONTROL SWITCH
POWER VOLTAGE
IC101 MB3776APNF
T101
CN101 10P
1 EVF UNREG
2 EVF UNREG
3 UNREG GND
4 H SYNC
5 UNREG GND
6 EVF5V
7 EVF9V
8 EVF-8V
9 NC
10 NC
LND902
1 GND
IC102
①-③ PROTECT
⑤-⑦ Ø/A INVERTER
IC102 LM393OR
Q104, 105, 106 SWITCHING
T102
CN102 12P
1 NC
2 V HIGH
3 NC
4 NC
5 NC
6 NC
7 NC
8 NC
9 NC
10 NC
11 GND
12 V RETURN
Q107 Ø/A INVERTER CONTROL
IC103 Ø/A INVERTER CONTROL
IC103 LM358OR
CURERNT CONSUMPTION
OP AMP
Q108, 109 Ø/A INVERTER CONTROL
LB-32 BOARD
CN991 12P
1 N.C
2 High Vout
3 N.C
4 N.C
5 N.C
6 N.C
7 N.C
8 N.C
9 N.C
10 N.C
11 EVF GND
12 Low Vout
BL991
Back GND
09
(See Page 39)
TO VS-93P BOARD CN102
CN902 6P
6 TALLY
5 VF OUT
4 EVF GND
3 EVF 5V
2 EVF UNREG GND
1 EVF UNR
CN901 10P
1 EVF UNREG
2 EVF UNREG
3 SYNC
4 EVF UNREG GND
5 EVF 5V
6 EVF GND
7 -8V
8 9V
9 N.C
10 N.C
D901 GL3PR43
D902 GL1HD51-TE84L
TALLY
SUB CONT B
SUB CONT R
BRT
CONT
COLOR
Q901 INVERTER
IC901 RGB DECODER
IC901 IR3P961
B OUT
OUT ØCDET
G OUT
VCC2
R OUT
COM OUT
VEE
GND
COM AMP
APC FILTER
VCO
PICTURE
KIL FIL
RGB AMP
FRP1
FRP2
SUB BRIGHT B
SUB BRIGHT R
BRIGHT
GAMMA 2
GAMMA 1
PEAK LIMITER
SUB CONT B
SUB CONT R
SW
NC
HD IN
R-Y
B-Y
TIME CONST
SYNC IN
SYNC OUT
CROMA OUT
BURST OUT
SYNC SEP
H FILTER OUT
APL
CLAMP
TRAP OUT
CONT
EXT IN B
EXT IN G
EXT IN R
ID FIL
VEE
VCC1
ACC FILTER
VIDEO IN
COLOR
F ADJ
AGC OUT
AGC FIL
IC902 LCD DRIVER
VCC
ØYIN
CLYIN
VSS
CLY
CLY
ØY
VCO

• **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡		➡≫	
PB	⇨		⇨≫	

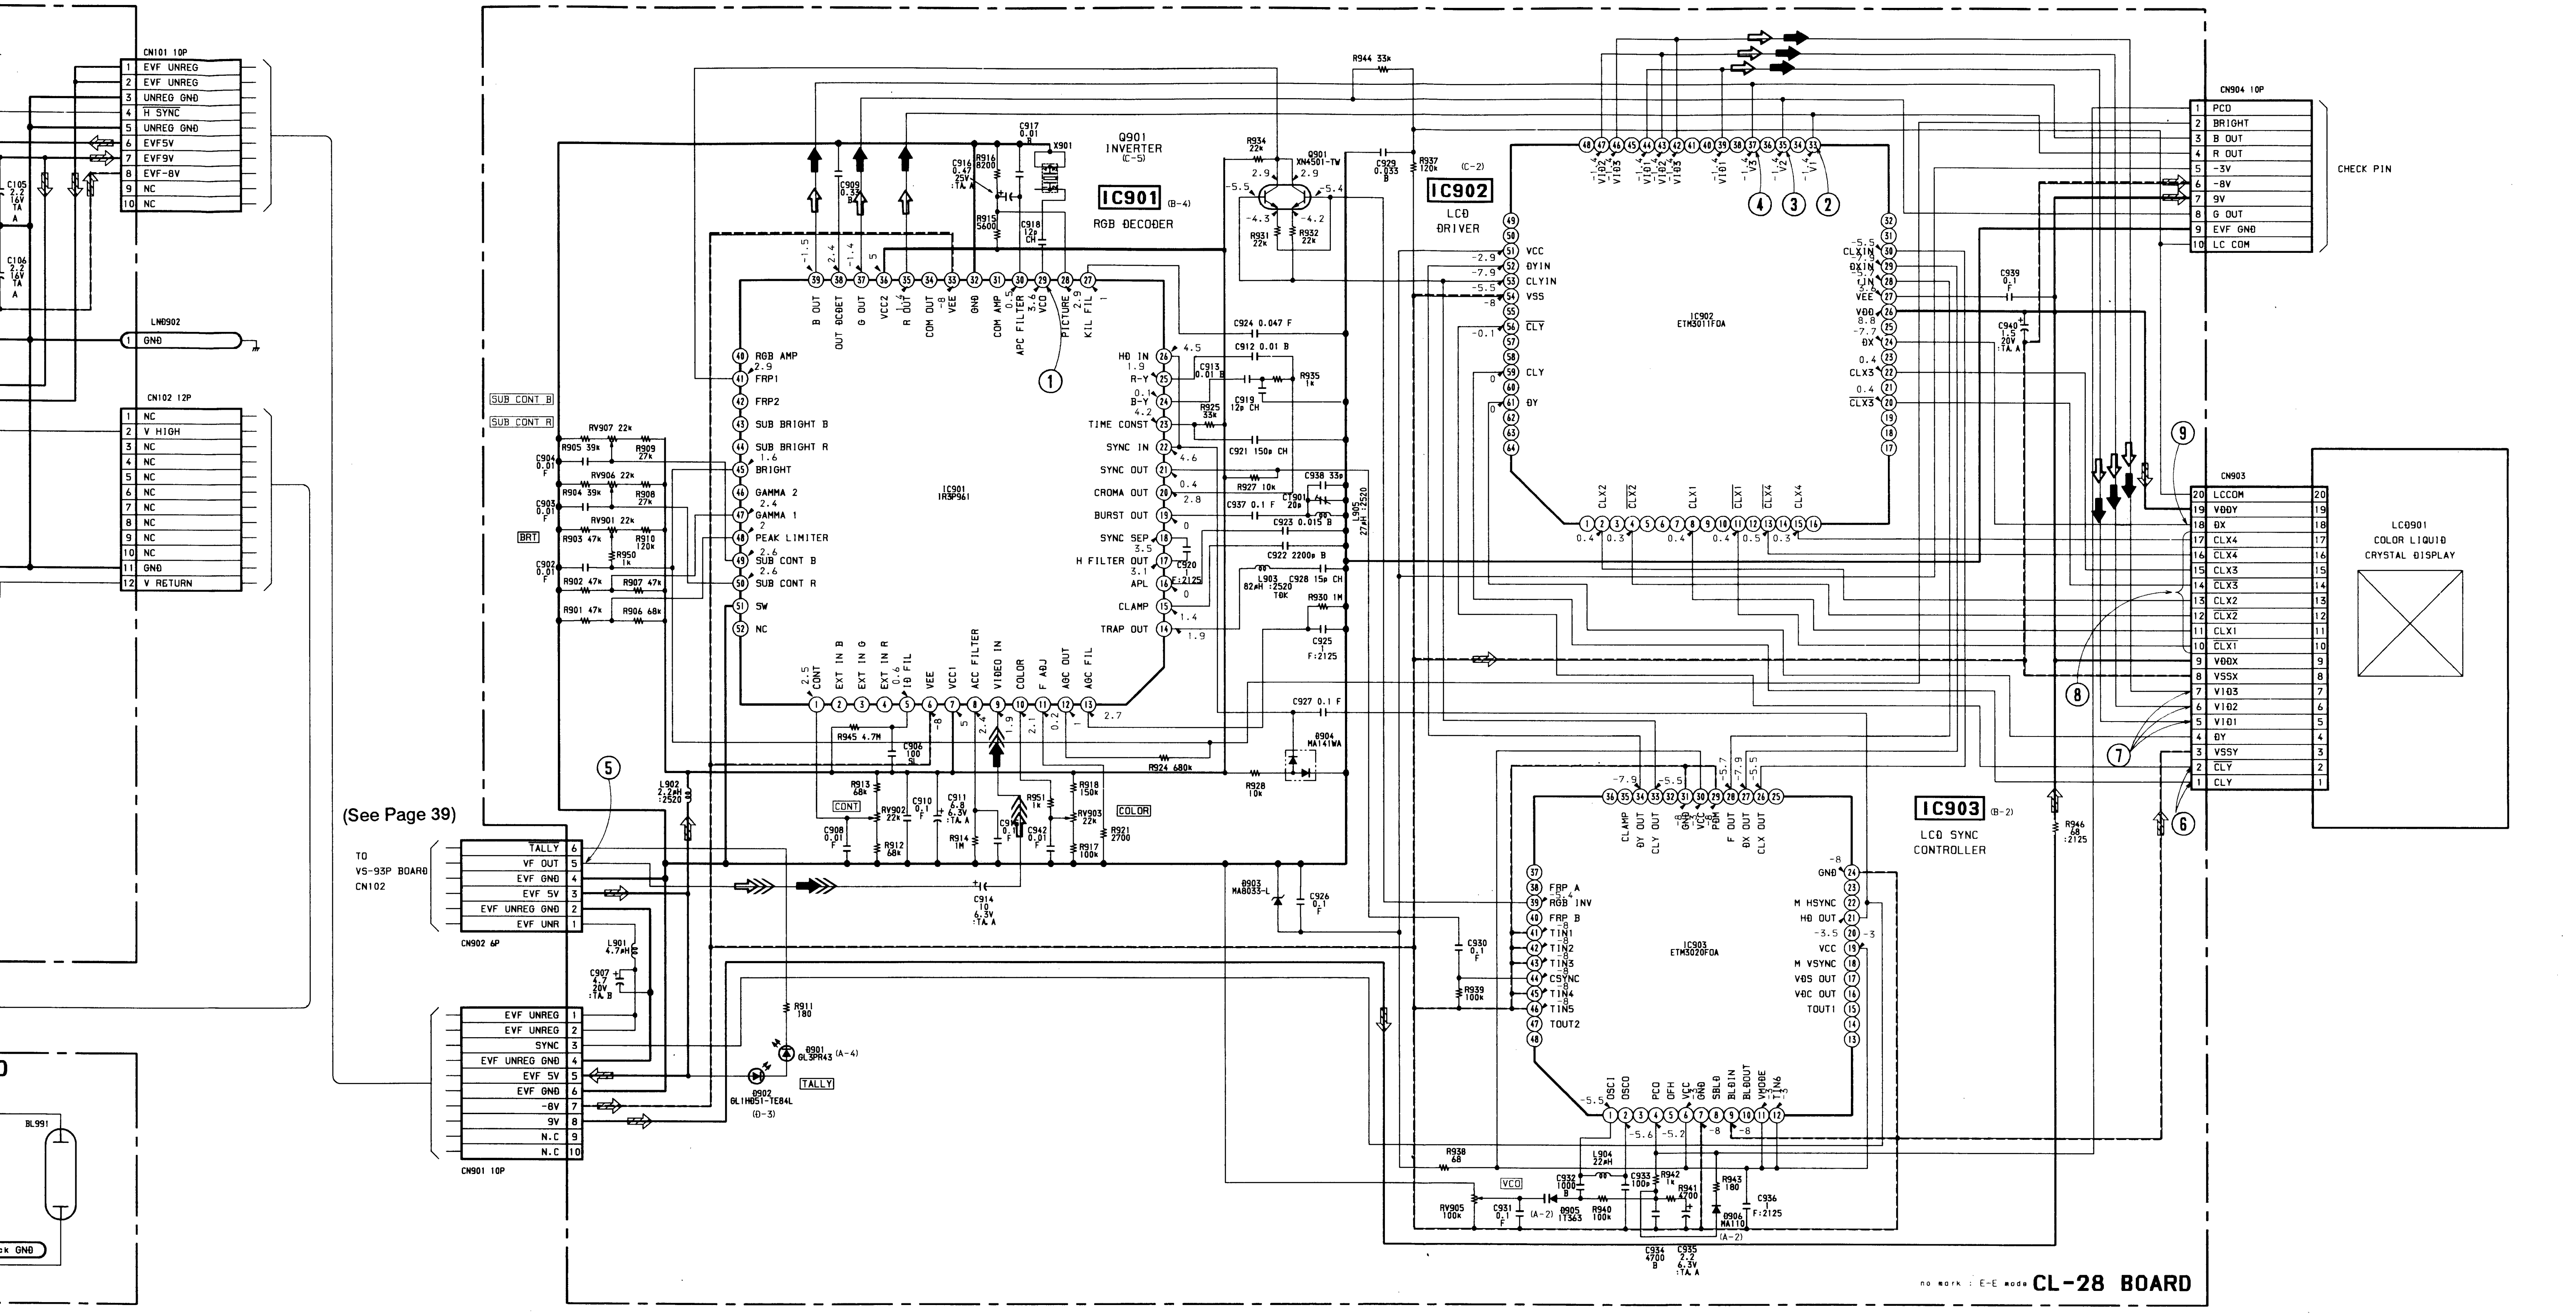
CN101 10P
EVF UNREG
EVF UNREG
UNREG GND
H SYNC
UNREG GND
EVF5V
EVF9V
EVF-8V
NC
NC
LN0902
GND
CN102 12P
V HIGH
GND
V RETURN
BL991
k GND
(See Page 39)
TO VS-93P BOARD CN102
TALLY
VF OUT
EVF GND
EVF 5V
EVF UNREG GND
EVF UNR
CN902 6P
EVF UNREG
EVF UNREG
SYNC
EVF UNREG GND
EVF 5V
EVF GND
-8V
9V
N.C
N.C
CN901 10P
SUB CONT B
SUB CONT R
BRT
CONT
COLOR
TALLY
VCO
IC901 (B-4)
RGB DECODER
IC901 IR3P961
Q901 INVERTER (C-5)
Q901 XN4501-TW
X901
RGB AMP
FRP1
FRP2
SUB BRIGHT B
SUB BRIGHT R
BRIGHT
GAMMA 2
GAMMA 1
PEAK LIMITER
SUB CONT B
SUB CONT R
SW
NC
HD IN
R-Y
B-Y
TIME CONST
SYNC IN
SYNC OUT
CROMA OUT
BURST OUT
SYNC SEP
H FILTER OUT
APL
CLAMP
TRAP OUT
B OUT
OUT 0CBET
G OUT
VCC2
R OUT
COM OUT
VEE
GND
COM AMP
APC FILTER
VCO
PICTURE
KIL FIL
CONT
EXT IN B
EXT IN G
EXT IN R
10 FIL
VEE
VCC1
ACC FILTER
VIDEO IN
COLOR
F ADJ
AGC OUT
AGC FIL
D901 GL3PR43 (A-4)
D902 GL1HD51-TE84L (D-3)
D903 MA8033-L
D904 MA141WA
D905 1T363
D906 MA110
IC902 (C-2)
LCD DRIVER
IC902 ETM3011FOA
VCC
DYIN
CLYIN
VSS
CLY
CLY
DY
CLXIN
DXIN
VEE
VDD
DX
CLX3
CLX3
CLX2
CLX1
CLX4
IC903 (B-2)
LCD SYNC CONTROLLER
IC903 ETM3020FOA
FRP A
RGB INV
FRP B
TIN1
TIN2
TIN3
CSYNC
TIN4
TIN5
TOUT2
GND
H HSYNC
HD OUT
VCC
H VSYNC
VDS OUT
VDC OUT
TOUT1
CLAMP
DV OUT
CLY OUT
FRP
DY OUT
F OUT
DX OUT
CLX OUT
OSC1
OSC0
PCO
OFH
VCC
GND
SBL0
BL0IN
BL0OUT
VMODE
TIN6
CN904 10P
PCO
BRIGHT
B OUT
R OUT
-3V
-8V
9V
G OUT
EVF GND
LC COM
CHECK PIN
CN903
LCCOM
VDDY
DX
CLX4
CLX4
CLX3
CLX3
CLX2
CLX2
CLX1
CLX1
VDDX
VSSX
V103
V102
V101
DY
VSSY
CLY
CLY
LCD901 COLOR LIQUID CRYSTAL DISPLAY
①
②
③
④
⑤
⑥
⑦
⑧
⑨
no mark : E-E mode
CL-28 BOARD

4-3. SEMICONDUCTORS

CXP80624-413R

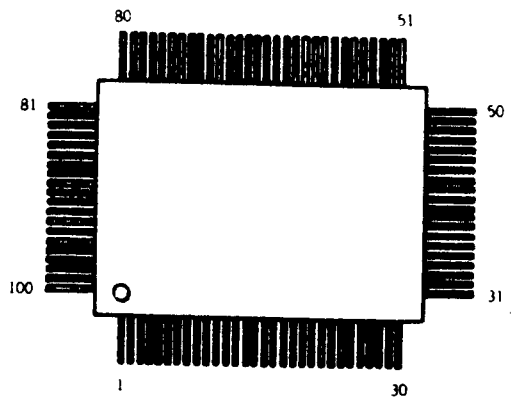
80
51
81
50
100
31
1
30

ETM3020F0A
IR3P90B

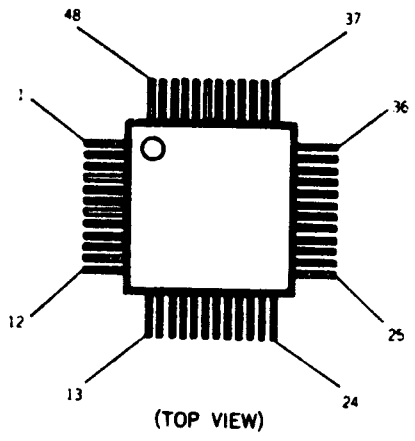
48
37
1
36
12
25
13
24
(TOP VIEW)

ETM3011F0A

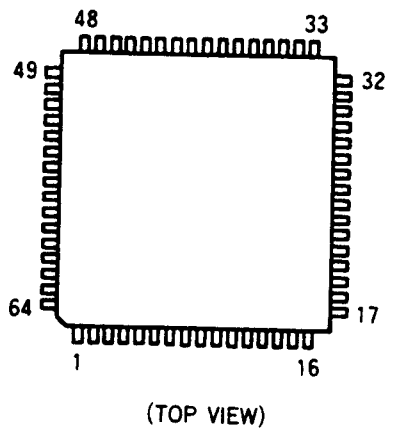
48
33
49
32
64
17
1
16
(TOP VIEW)

LM358D
LM393D


14
8
1
7
(TOP VIEW)

GL1HD51


1 ANODE
2 CATHODE

GL3PR43

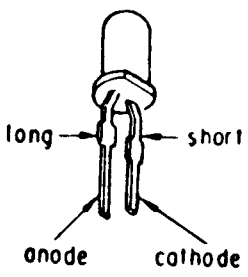
long
short
anode
cathode

SECTION 5
EXPLODED VIEWS

NOTE:
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked " ∗ " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

5-1. CABINET (L) AND F PANEL ASSEMBLIES

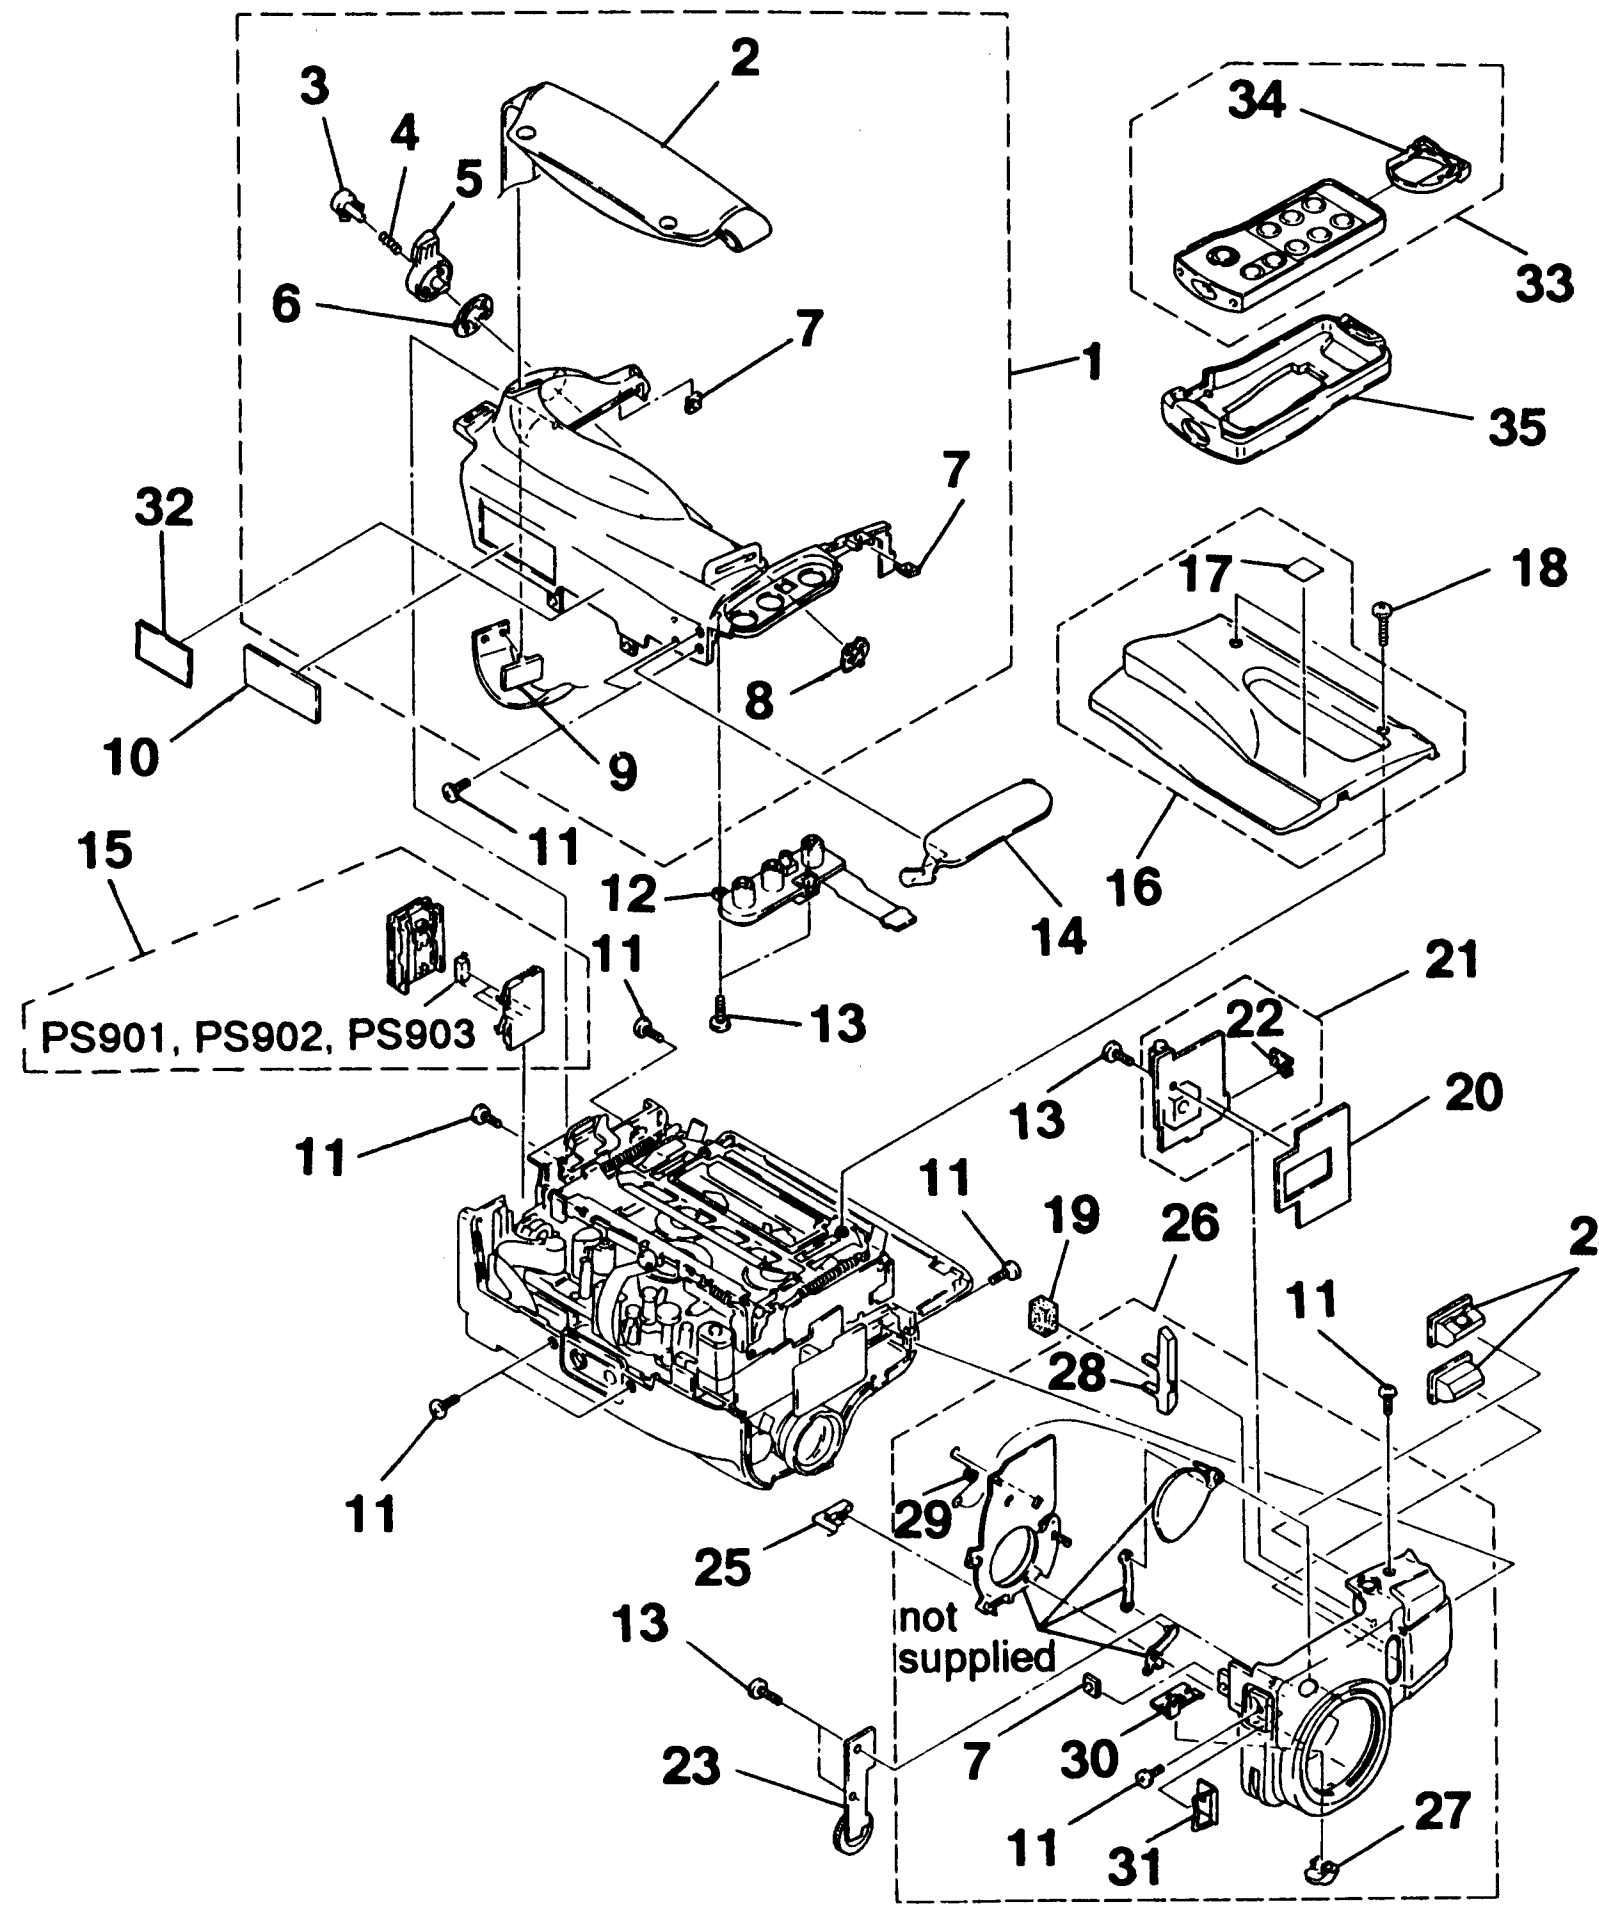

Ref. No.	Part No.	Description	Remark
1	X-3941-776-1	CABINET (L) ASSY (AEP, UK model)	
1	X-3941-933-1	CABINET (L) ASSY (E model)	
2	3-736-807-01	BELT, GRIP	
3	3-942-950-01	BUTTON, S/S	
4	3-578-221-00	SPRING, COMPRESSION	
5	3-942-985-01	KNOB, STAND-BY	
6	3-736-364-01	SPRING	
7	3-718-233-01	NUT, PLATE	
8	3-942-894-01	HOLDER, STAND-BY KNOB	
9	3-942-895-01	STOPPER, BELT	
* 10	3-948-038-01	LABEL, MODEL NUMBER (AEP)(AEP model)	
* 10	3-948-739-01	LABEL, MODEL NUMBER (UK)(UK, E model)	
11	3-719-381-01	SCREW (M2X4)	
12	1-537-369-11	TERMINAL BOARD (JK-3100) (E model)	
12	1-537-369-21	TERMINAL BOARD (JK-3100) (AEP, UK model)	
13	3-719-601-01	SCREW (B2X5), TAPPING	
14	3-943-012-01	COVER, JACK	
15	1-537-368-21	TERMINAL BOARD (BATTERY)	
16	X-3941-774-1	LID ASSY, CASSETTE	
* 17	3-703-713-41	STICKER, SONY SYMBOL (10)	
18	3-727-902-61	SCREW (M1.4X5), SPECIAL	
* 19	3-948-551-01	CUSHION (1)	
* 20	3-948-472-01	CUSHION (MA)	
* 21	A-7063-167-A	MA-143P BOARD, COMPLETE	
* 22	3-947-506-01	PLATE, GROUND, MICROPHONE	
* 23	A-7071-607-A	MF-175P BOARD, COMPLETE	
24	A-7091-800-A	MICROPHONE UNIT	
25	1-692-084-11	SWITCH ASSY	
26	X-3941-775-1	PANEL ASSY, F	
27	3-942-905-01	KNOB, S	
28	3-947-361-01	PLATE, LIGHT GUIDE	
29	3-947-357-01	SPRING, TORSION	
30	3-947-800-01	HOLDER, S KNOB	
31	3-947-358-01	STAND	
* 32	3-704-235-01	LABEL, CAUTION (UK model)	
33	1-693-137-31	REMOTE COMMANDER (CAM CORDER)(RMT-701)	
34	3-708-412-01	LID, REMOTE COMMANDER	
35	3-943-154-11	HOLDER (B), REMOTE CONTOROL	
⚠PS901	1-532-841-41	LINK, IC	
⚠PS902	1-532-841-41	LINK, IC	
⚠PS903	1-532-841-41	LINK, IC	

5-2. CABINET (R) AND EVF ASSEMBLIES

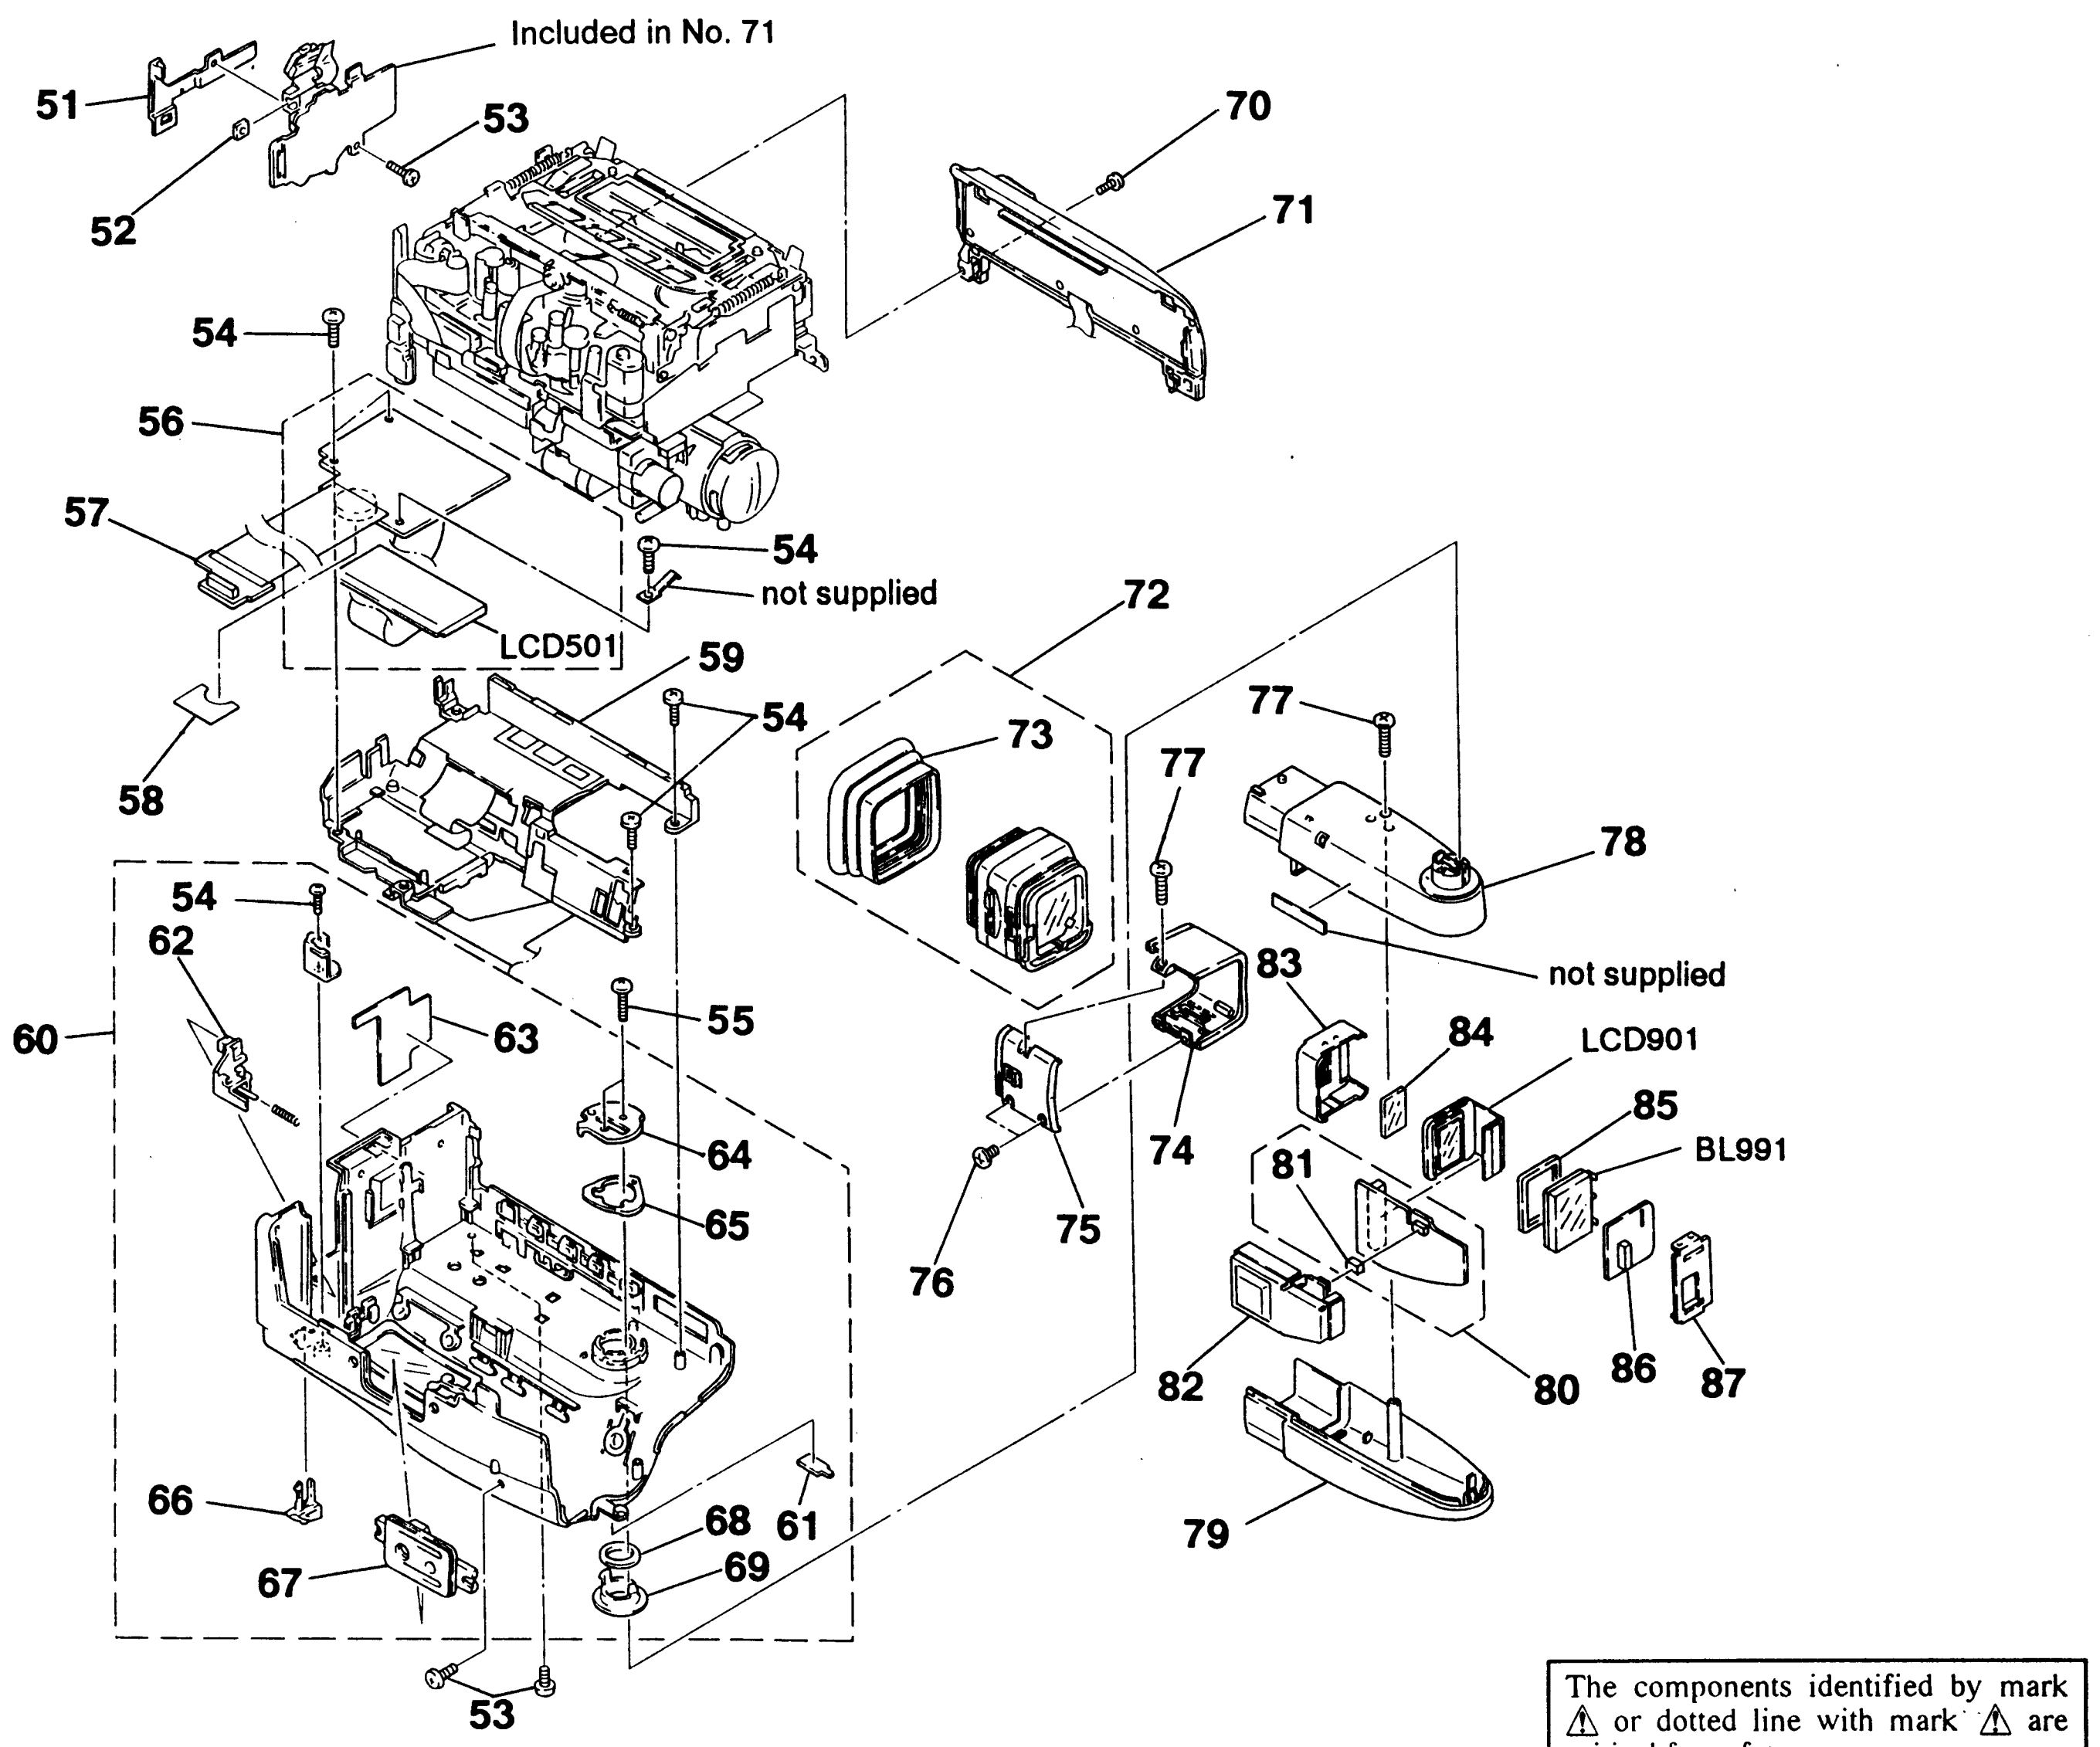

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
* 51	3-947-354-01	BRACKET (L)	
52	3-718-233-01	NUT, PLATE	
53	3-719-381-01	SCREW (M2X4)	
54	3-719-601-01	SCREW (B2X5), TAPPING	
55	3-740-546-01	SCREW (M2X10)	
* 56	A-7063-166-A	LC-40P BOARD, COMPLETE	
* 57	A-7071-606-A	CN-64P BOARD, COMPLETE	
* 58	3-948-369-01	SHEET, BLIND	
* 59	1-466-711-21	SWITCH BLOCK, CONTROL (CF-3200)	
60	X-3941-777-1	CABINET (R) ASSY (AEP, UK model)	
60	X-3941-932-1	CABINET (R) ASSY (E model)	
* 61	3-948-630-01	CUSHION (RF)	
62	3-947-449-01	LOCK, BATTERY	
* 63	3-944-102-01	LABEL, BATTERY FITTING	
64	3-942-897-01	PLATE, LOCK, TILT	
65	3-747-110-01	SPRING, LEAF, TILT	
66	3-943-068-01	KNOB, BATTERY	
67	3-942-911-01	SCREW, TRIPOD	
68	3-747-112-01	RING, TILT	
69	3-747-109-01	SLEEVE, EVF	
70	3-713-786-51	SCREW (M2X3)	
71	1-466-710-21	SWITCH BLOCK, CONTROL (ZM-3200)	
72	X-3941-559-1	HOLDER BLOCK ASSY, FINDER	
73	3-948-162-01	EYE CUP	
74	X-3941-956-1	SLIDER (UPPER) ASSY	
75	X-3941-957-1	SLIDER (LOWER) ASSY	
76	3-945-888-01	SCREW (M2X2.2)	
77	3-944-591-01	SCREW (M2X7), TAPPING	
78	X-3941-773-1	CABINET (L) ASSY, EVF	
79	3-944-590-01	CABINET (R), EVF	
* 80	A-7063-223-A	CL-28 BOARD, COMPLETE	
81	1-573-989-11	CONNECTOR, BOARD TO BOARD 10P	
⚠82	A-7063-224-A	IV-10 BOARD, COMPLETE (AC/DC CONVERTER)	
83	3-944-609-01	HOLDER (F), BL	
84	3-944-642-01	PROTECTOR, LCD	
85	3-944-611-01	SPONGE, SEAL	
* 86	A-7071-630-A	LB-32 BOARD, COMPLETE	
87	3-944-610-01	HOLDER (R), BL	
BL991	1-519-667-11	TUBE, FLUORESCENT	
LCD501	1-809-671-21	DISPLAY PANEL, LIQUID CRYSTAL	
LCD901	1-809-291-11	DISPLAY MODULE, LIQUID CRYSTAL	

5-3. MAIN BOARDS ASSEMBLY

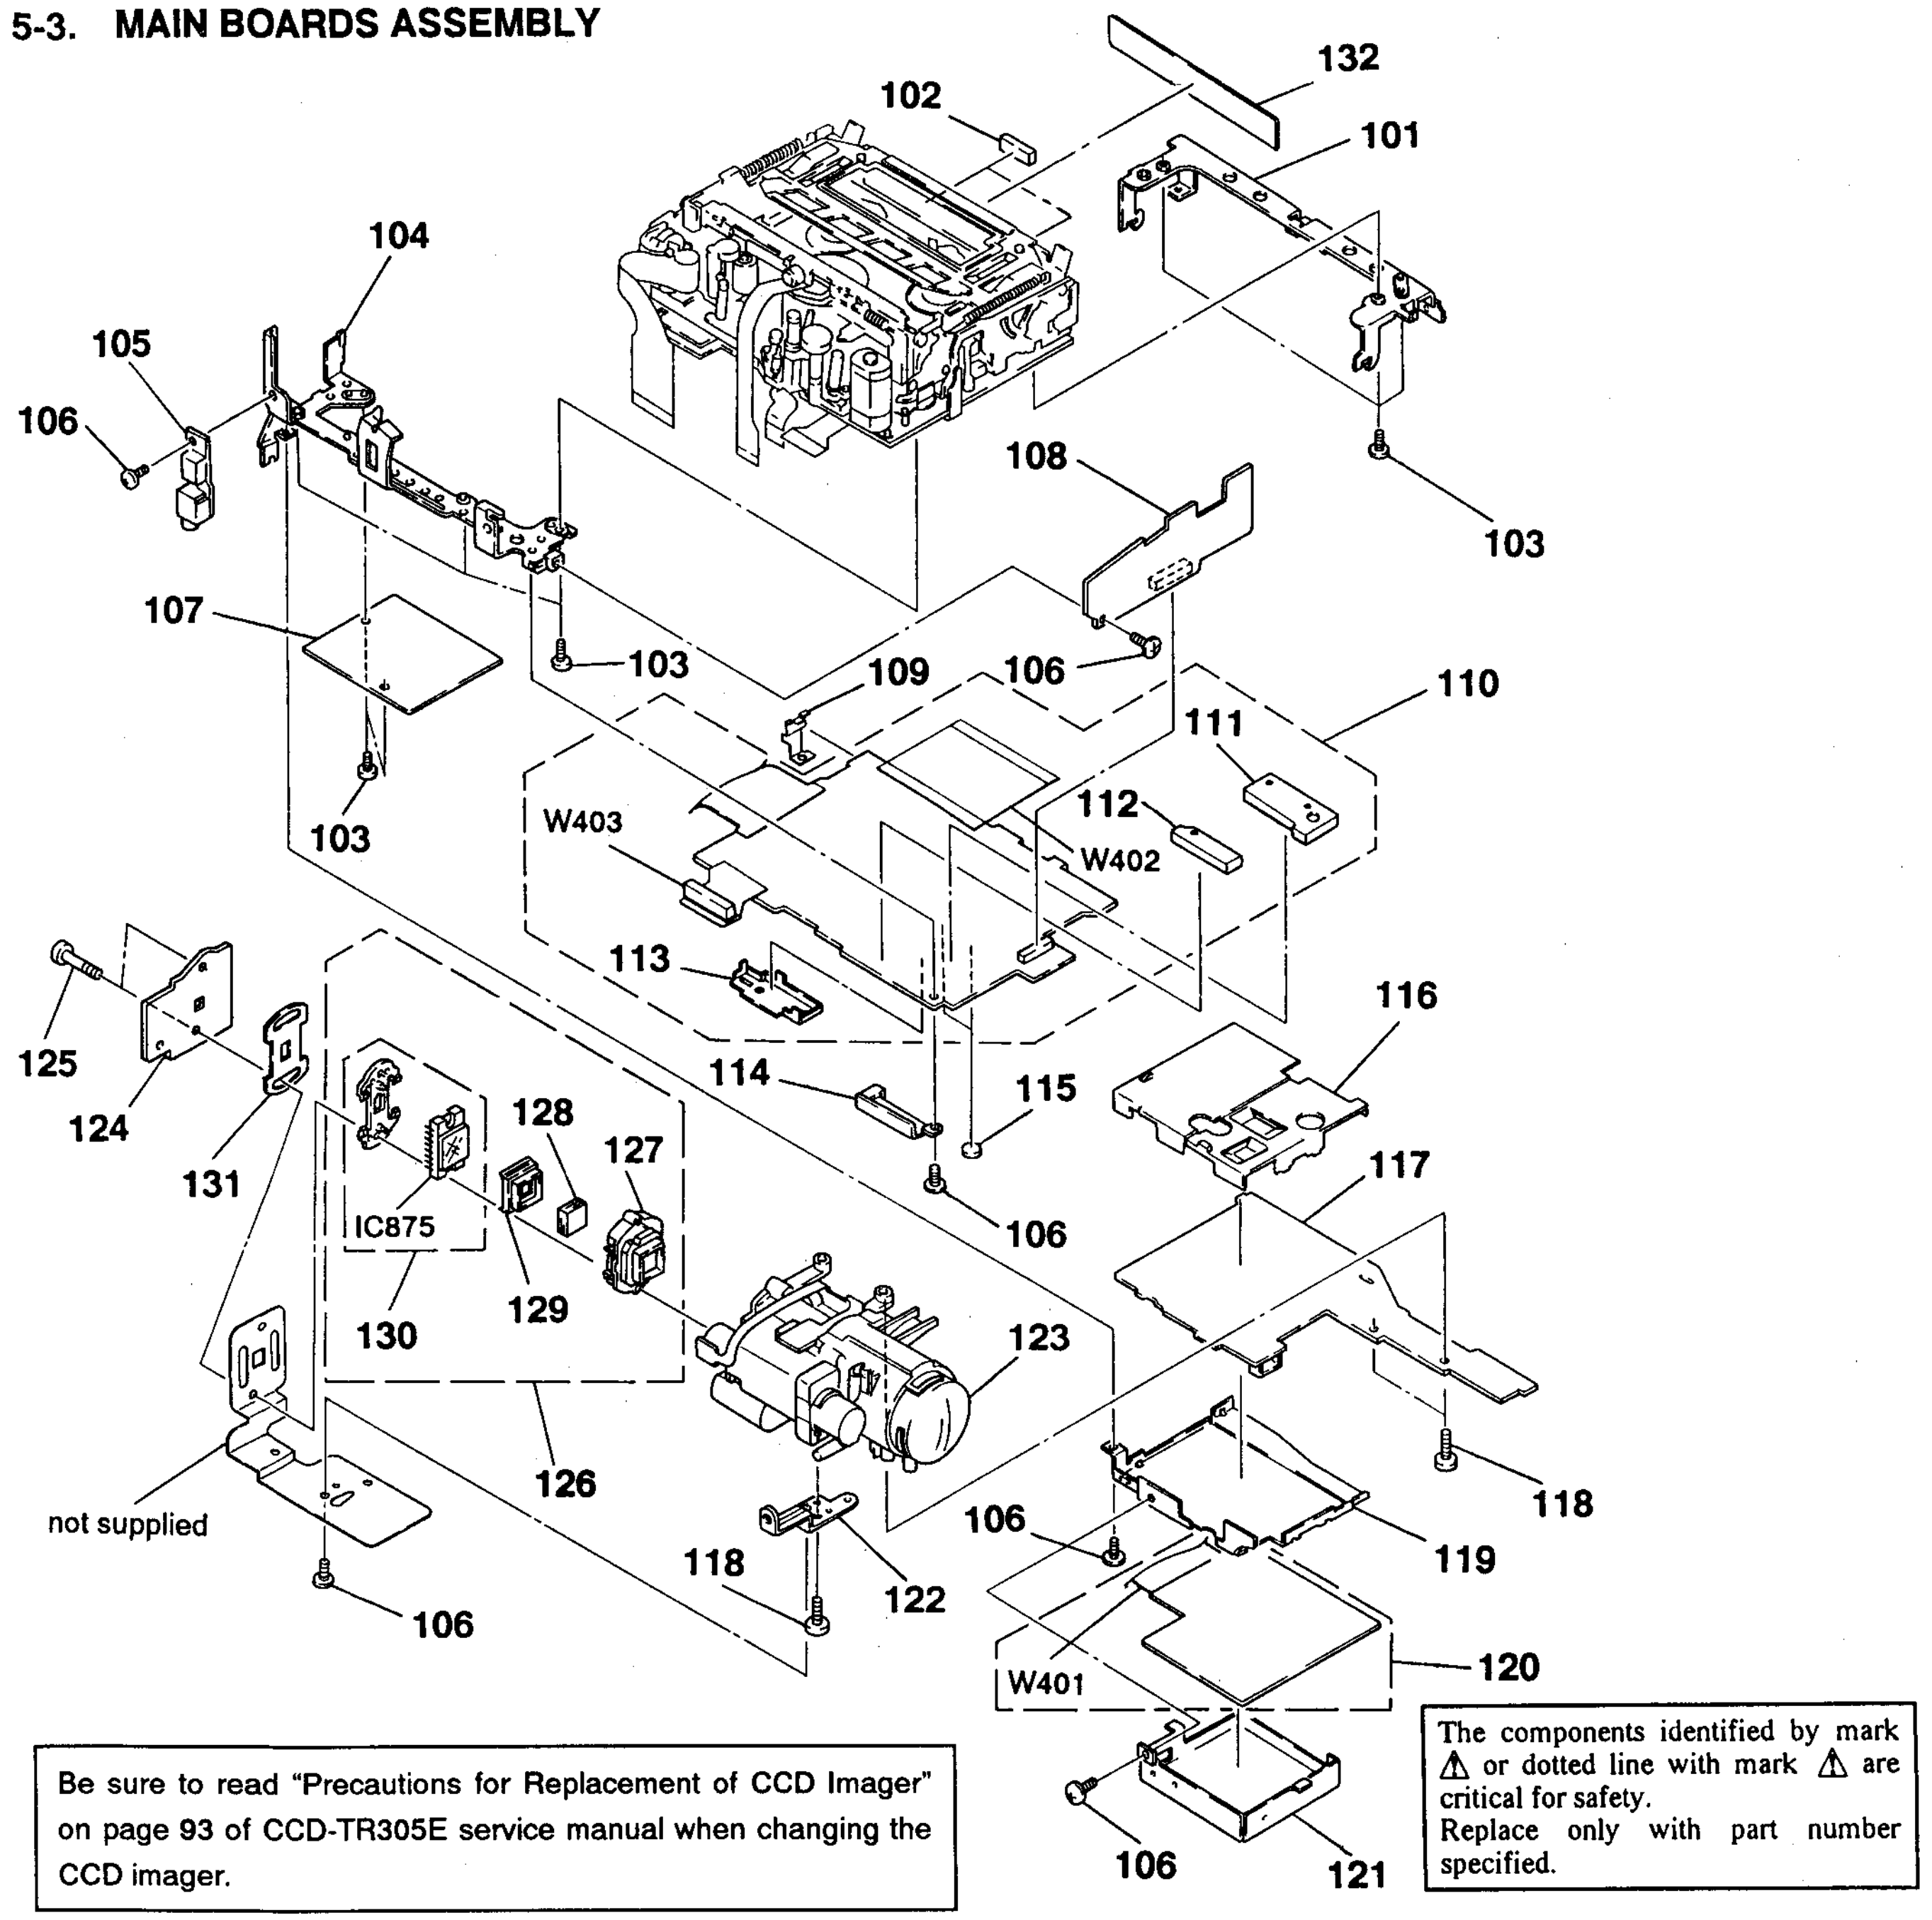
132
102
101
104
105
106
103
108
107
103
109
106
110
111
112
W403
W402
103
113
116
125
124
114
115
128
127
131
IC875
106
117
129
130
123
126
118
106
119
not supplied
118
122
106
120
W401
106
121

Be sure to read "Precautions for Replacement of CCD Imager" on page 93 of CCD-TR305E service manual when changing the CCD imager.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
* 101	3-947-459-01	FRAME (UPPER)	
102	3-942-882-01	SPACER, FK	
103	3-703-816-41	SCREW (M1.4X2.5), SPECIAL HEAD	
* 104	3-942-921-11	FRAME (LOWER)	
* 105	A-7071-605-A	LJ-9P BOARD, COMPLETE	
106	3-713-786-51	SCREW (M2X3)	
107	3-943-959-11	SHEET, VM	
* 108	A-7063-165-A	AU-135P BOARD, COMPLETE	
* 109	3-947-355-01	PLATE, GROUND, VS	
* 110	A-7063-222-A	VS-93PC BOARD, COMPLETE (AEP,UK model)	
* 110	A-7063-269-A	VS-93PC BOARD, COMPLETE (E model)	
111	3-943-007-01	CASE (LOWER), SHIELD, RP	
112	3-943-009-01	PLATE, SHIELD, FE	
113	3-943-006-01	CASE (UPPER), SHIELD, RP	
114	3-943-008-01	PLATE, SHIELD, RP CONNECTOR	
115	3-943-014-01	CUSHION, RUBBER	
* 116	3-947-347-01	CASE (LOWER), SHIELD, VC	
* 117	A-7063-163-A	VC-112P BOARD, COMPLETE	
118	3-719-601-01	SCREW (B2X5), TAPPING	
* 119	X-3941-473-1	CASE (UPPER) ASSY, SHIELD, VC	
*⚠120	A-7063-161-A	DD-47P BOARD, COMPLETE (DC-DC CONVERTER UNIT)	
* 121	3-947-352-01	CASE (UPPER), SHIELD, DD	
* 122	3-947-442-01	BRACKET (A), FITTING	
123	1-547-548-11	LENS, ZOOM (VCL-6210WC)	
* 124	A-7063-164-A	CD-84P BOARD, COMPLETE	
125	3-947-268-01	SCREW (P TIGHT) (2), TAPPING	
126	A-7030-322-A	CCD ASSY (BOND)	
127	3-947-818-11	ADAPTOR (D), CCD FITTING	
128	1-547-558-21	FILTER BLOCK, OPTICAL	
129	3-947-820-11	RUBBER (D), SEAL	
130	A-7030-321-A	CCD BLOCK ASSY (BOND)	
* 131	3-947-821-01	SHEET (D), INSULATING	
132	3-943-701-01	LABEL, CAUTION	
IC875	8-752-607-39	IC ICX045BKA-2 (CCD IMAGER)	
W401	1-690-817-11	CABLE, FLAT (FFC-65)	
W402	1-644-285-11	FP-572 FLEXIBLE BOARD	
W403	1-630-591-11	FP-182 FLEXIBLE BOARD	

CL-28

SECTION 6
ELECTRICAL PARTS LIST

NOTE:

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms
  METAL: Metal-film resistor
  METAL OXIDE: Metal Oxide-film resistor
  F : nonflammable
- Hardware (# mark) list is given in the last of this parts list.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u: μ, for example:
  uA...: μA..., uPA...: μPA...,
  uPB...: μPB..., uPC...: μPC...,
  uPD...: μPD...
- CAPACITORS
  uF : μF
- COILS
  uH : μH

Ref. No.	Part No.	Description	Remark
	A-7063-223-A	CL-28 BOARD, COMPLETE ********************** (Ref.No 9,000 Series)	
	1-573-989-11	CONNECTOR, BOARD TO BOARD 10P	
	3-944-643-01	HOLDER, LED	
		(CAPACITOR)	
C902	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C903	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C904	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C906	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C907	1-135-214-21	TANTAL. CHIP 4.7uF 20% 20V	
C908	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C909	1-165-112-11	CERAMIC CHIP 0.33uF 16V	
C910	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C911	1-135-211-11	TANTAL. CHIP 6.8uF 20% 6.3V	
C912	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C913	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C914	1-135-259-11	TANTAL. CHIP 10uF 10% 6.3V	
C915	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C916	1-135-145-11	TANTALUM CHIP 0.47uF 10% 35V	
C917	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C918	1-162-916-11	CERAMIC CHIP 12PF 5% 50V	
C919	1-162-916-11	CERAMIC CHIP 12PF 5% 50V	
C920	1-164-634-11	CERAMIC CHIP 1uF 16V	
C921	1-164-217-11	CERAMIC CHIP 150PF 5% 50V	
C922	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V	
C923	1-164-245-11	CERAMIC CHIP 0.015uF 10% 25V	
C924	1-164-361-11	CERAMIC CHIP 0.047uF 16V	
C925	1-164-634-11	CERAMIC CHIP 1uF 16V	
C926	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C927	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C928	1-162-917-11	CERAMIC CHIP 15PF 5% 50V	
C929	1-164-677-11	CERAMIC CHIP 0.033uF 10% 16V	
C930	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C931	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C932	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C933	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C934	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C935	1-135-149-21	TANTALUM CHIP 2.2uF 20% 10V	
C936	1-164-634-11	CERAMIC CHIP 1uF 16V	
C937	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C938	1-162-921-11	CERAMIC CHIP 33PF 5% 50V	

Ref. No.	Part No.	Description	Remark
C939	1-164-156-11	CERAMIC CHIP 0.1uF 25V	
C940	1-135-178-11	TANTAL. CHIP 1.5uF 20% 20V	
C942	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
		(CONNECTOR)	
CN901	1-573-305-11	CONNECTOR, BOARD TO BOARD 10P	
CN902	1-573-806-21	PIN, CONNECTOR (1.5MM) (SMD)6P	
CN903	1-573-853-31	CONNECTOR, FPC/FFC 20P	
CN904	1-573-990-21	CONNECTOR, BOARD TO BOARD 10P	
		(TRIMMER)	
CT901	1-141-423-61	CAP, ADJ	
		(DIODE)	
D901	8-719-980-83	DIODE GL3PR43	
D902	8-719-941-34	DIODE GL-1HD51	
D903	8-719-421-18	DIODE MA8033-L	
D904	8-719-820-05	DIODE 1SS181	
D905	8-719-002-81	DIODE 1T363	
D906	8-719-404-46	DIODE MA110	
		(IC)	
IC901	8-759-070-66	IC IR3P961	
IC902	8-759-513-06	IC ETM3011F0A	
IC903	8-759-513-07	IC ETM3020F0A	
		(COIL)	
L901	1-412-028-11	INDUCTOR CHIP 4.7uH	
L902	1-412-943-11	INDUCTOR 2.2uH	
L903	1-412-962-11	INDUCTOR 82uH	
L904	1-412-955-11	INDUCTOR 22uH	
L905	1-412-956-21	INDUCTOR 27uH	
		(TRANSISTOR)	
Q901	8-729-402-81	TRANSISTOR XN4501	
		(RESISTOR)	
R901	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R902	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R903	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R904	1-216-840-11	METAL CHIP 39K 5% 1/16W	
R905	1-216-840-11	METAL CHIP 39K 5% 1/16W	
R906	1-216-843-11	METAL CHIP 68K 5% 1/16W	

Ref. No.	Part No.	Description	Remark
R907	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R908	1-216-838-11	METAL CHIP 27K 5% 1/16W	
R909	1-216-838-11	METAL CHIP 27K 5% 1/16W	
R910	1-216-846-11	METAL CHIP 120K 5% 1/16W	
R911	1-216-812-11	METAL CHIP 180 5% 1/16W	
R912	1-216-843-11	METAL CHIP 68K 5% 1/16W	
R913	1-216-843-11	METAL CHIP 68K 5% 1/16W	
R914	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R915	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	
R916	1-216-832-11	METAL CHIP 8.2K 5% 1/16W	
R917	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R918	1-216-847-11	METAL CHIP 150K 5% 1/16W	
R921	1-216-826-11	METAL CHIP 2.7K 5% 1/16W	
R924	1-216-855-11	METAL CHIP 680K 5% 1/16W	
R925	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R927	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R928	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R930	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R931	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R932	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R934	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R935	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R937	1-218-897-11	METAL CHIP 120K 0.50% 1/16W	
R938	1-216-807-11	METAL CHIP 68 5% 1/16W	
R939	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R940	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R941	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R942	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R943	1-216-812-11	METAL CHIP 180 5% 1/16W	
R944	1-218-883-11	METAL CHIP 33K 0.50% 1/16W	
R945	1-220-397-91	METAL GLAZE 4.7M 5% 1/16W	
R946	1-216-021-00	METAL CHIP 68 5% 1/10W	
R950	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R951	1-216-821-11	METAL CHIP 1K 5% 1/16W	

(VARIABLE RESISTOR)

Ref. No.	Part No.	Description	Remark
RV901	1-241-556-11	RES, ADJ, CARBON 22K (BRT)	
RV902	1-238-857-11	RES, ADJ, CERMET 22K	
RV903	1-241-556-11	RES, ADJ, CARBON 22K (COLOR)	
RV905	1-238-859-11	RES, ADJ, CERMET 100K	
RV906	1-238-857-11	RES, ADJ, CERMET 22K	
RV907	1-238-857-11	RES, ADJ, CERMET 22K	

(VIBRATOR)

Ref. No.	Part No.	Description	Remark
X901	1-579-661-21	OSCILLATOR, CRYSTAL	

****

Ref. No.	Part No.	Description	Remark
	A-7063-224-A	IV-10 BOARD, COMPLETE ********************** (Ref.No 9,000 Series)	
*	3-949-098-01	CASE (UPPER), SHIELD, IV	
*	3-949-099-01	CASE (LOWER), SHIELD, IV	

(CAPACITOR)

Ref. No.	Part No.	Description	Remark
C101	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C102	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C103	1-164-337-11	CERAMIC CHIP 2.2uF 16V	
C104	1-164-337-11	CERAMIC CHIP 2.2uF 16V	
C105	1-135-179-21	TANTAL. CHIP 2.2uF 20% 16V	
C106	1-135-179-21	TANTAL. CHIP 2.2uF 20% 16V	
C107	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C108	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C109	1-164-672-11	CERAMIC CHIP 1500PF 5% 16V	
C110	1-164-232-11	CERAMIC CHIP 0.01uF 50V	
C111	1-164-232-11	CERAMIC CHIP 0.01uF 50V	
C112	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C113	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C114	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C115	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C116	1-135-177-21	TANTALUM CHIP 1uF 20% 20V	
C117	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C118	1-164-346-11	CERAMIC CHIP 1uF 16V	
C119	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C120	1-162-959-11	CERAMIC CHIP 330PF 5% 50V	
C121	1-165-178-11	CERAMIC CHIP 6.8uF 16V	

(CONNECTOR)

Ref. No.	Part No.	Description	Remark
CN101	1-573-305-11	CONNECTOR, BOARD TO BOARD 10P	
CN102	1-573-811-11	CONNECTOR, BOARD TO BOARD 12P	

(DIODE)

Ref. No.	Part No.	Description	Remark
D101	8-719-981-59	DIODE FC805	
D102	8-719-951-22	IC IMN10	
D103	8-719-802-36	DIODE 1SS250	

(IC)

Ref. No.	Part No.	Description	Remark
IC101	8-759-070-30	IC MB3776APNF-G-BND	
IC102	8-759-998-92	IC LM393D	
IC103	8-759-998-98	IC LM358D	

(COIL)

Ref. No.	Part No.	Description	Remark
L101	1-412-031-11	INDUCTOR CHIP 47uH	
L102	1-412-031-11	INDUCTOR CHIP 47uH	
L103	1-412-029-11	INDUCTOR CHIP 10uH	
L104	1-412-030-11	INDUCTOR CHIP 22uH	

Ref. No.	Part No.	Description	Remark
		(TRANSISTOR)	
Q101	8-729-822-05	TRANSISTOR 2SD1622-ST-TD	
Q102	8-729-421-90	TRANSISTOR XN4113	
Q103	8-729-420-12	TRANSISTOR XN4213	
Q104	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q105	8-729-905-23	TRANSISTOR 2SA1576-R	
Q106	8-729-011-35	TRANSISTOR 2SK1299S	
Q107	8-729-015-04	TRANSISTOR XN4401	
Q108	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q109	8-729-905-23	TRANSISTOR 2SA1576-R	
		(RESISTOR)	
R101	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R102	1-216-832-11	METAL CHIP 8.2K 5% 1/16W	
R103	1-218-740-11	METAL CHIP 100K 0.50% 1/16W	
R104	1-218-708-11	METAL CHIP 4.7K 0.50% 1/16W	
R105	1-216-797-11	METAL CHIP 10 5% 1/16W	
R106	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R107	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R108	1-218-883-11	METAL CHIP 33K 0.50% 1/16W	
R109	1-218-883-11	METAL CHIP 33K 0.50% 1/16W	
R110	1-216-849-11	METAL CHIP 220K 5% 1/16W	
R111	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R112	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R113	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R114	1-216-804-11	METAL CHIP 39 5% 1/16W	
R115	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R116	1-216-836-11	METAL CHIP 18K 5% 1/16W	
R117	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R118	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R119	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R120	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R121	1-218-708-11	METAL CHIP 4.7K 0.50% 1/16W	
R122	1-216-846-11	METAL CHIP 120K 5% 1/16W	
R123	1-218-883-11	METAL CHIP 33K 0.50% 1/16W	
R124	1-218-732-11	METAL CHIP 47K 0.50% 1/16W	
R125	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R126	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R127	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R128	1-216-835-11	METAL CHIP 15K 5% 1/16W	
		(VARIABLE RESISTOR)	
RV101	1-238-854-11	RES, ADJ, CERMET 2.2K	
RV102	1-238-856-11	RES, ADJ, CERMET 10K	
		(TRANSFORMER)	
T101	1-450-974-21	TRANSFORMER, D-D	
T102	1-450-975-21	TRANSFORMER, INVERTER	

Ref. No.	Part No.	Description	Remark
**			
	A-7071-630-A	LB-32 BOARD, COMPLETE ********************** (Ref.No 2,000 Series)	
		(CONNECTOR)	
CN991	1-573-812-11	CONNECTOR, BOARD TO BOARD 12P	
**			
	A-7063-222-A	VS-93PC BOARD, COMPLETE (AEP, UK model) ***********************	
	A-7063-269-A	VS-93PC BOARD, COMPLETE (E model) *********************** (Ref.No 3,000 Series)	
	3-943-006-01	CASE (UPPER), SHIELD, RP	
	3-943-007-01	CASE (LOWER), SHIELD, RP	
	3-943-009-01	PLATE, SHIELD, FE	
	3-943-014-01	CUSHION, RUBBER	
*	3-947-355-01	PLATE, GROUND, VS	
	3-949-730-01	INSULATOR, VS	
		(CAPACITOR)	
C001	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C002	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C003	1-162-955-11	CERAMIC CHIP 150PF 5% 50V	
C004	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C005	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C006	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C007	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C008	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C009	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C010	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C011	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C012	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C013	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C014	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C015	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C016	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C017	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C018	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C019	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C020	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C021	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C022	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C023	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C024	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C025	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C026	1-164-360-11	CERAMIC CHIP 0.1uF 16V	

Ref. No.	Part No.	Description				Remark
C027	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C028	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C029	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C030	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C031	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	
C032	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	
C033	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C034	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C035	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C036	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C037	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V	
C038	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V	
C039	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V	
C040	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V	
C041	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	
C042	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V	
C043	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C044	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C045	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V	
C046	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V	
C047	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C048	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C049	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C050	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C051	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C052	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C053	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C054	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C055	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C056	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C057	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C058	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C059	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C060	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C061	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C062	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C063	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C064	1-162-995-11	CERAMIC CHIP	0.022uF		50V	
C065	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C066	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C067	1-162-995-11	CERAMIC CHIP	0.022uF		50V	
C068	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	
C069	1-162-948-11	CERAMIC CHIP	39PF	5%	50V	
C070	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	
C071	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C072	1-162-943-11	CERAMIC CHIP	15PF	5%	50V	
C073	1-162-951-11	CERAMIC CHIP	68PF	5%	50V	
C074	1-162-956-11	CERAMIC CHIP	180PF	5%	50V	
C075	1-162-995-11	CERAMIC CHIP	0.022uF		50V	
C076	1-162-945-11	CERAMIC CHIP	22PF	5%	50V	
C077	1-162-995-11	CERAMIC CHIP	0.022uF		50V	
C078	1-162-995-11	CERAMIC CHIP	0.022uF		50V	
C079	1-162-939-11	CERAMIC CHIP	8PF	0.5PF	50V	
C080	1-162-995-11	CERAMIC CHIP	0.022uF		50V	
C081	1-162-944-11	CERAMIC CHIP	18PF	5%	50V	
C082	1-162-995-11	CERAMIC CHIP	0.022uF		50V	
C083	1-162-995-11	CERAMIC CHIP	0.022uF		50V	
C084	1-162-995-11	CERAMIC CHIP	0.022uF		50V	
C086	1-162-959-11	CERAMIC CHIP	330PF	5%	50V	
C087	1-162-974-11	CERAMIC CHIP	0.01uF		50V	(AEP, UK model)
C088	1-162-974-11	CERAMIC CHIP	0.01uF		50V	(AEP, UK model)
C089	1-164-360-11	CERAMIC CHIP	0.1uF		16V	(AEP, UK model)
C091	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C092	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C093	1-162-958-11	CERAMIC CHIP	270PF	5%	50V	
C121	1-162-971-11	CERAMIC CHIP	0.001uF		50V	
C122	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C123	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	
C124	1-164-346-11	CERAMIC CHIP	1uF		16V	
C125	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C126	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C127	1-164-145-11	CERAMIC CHIP	390PF	5%	50V	
C128	1-162-943-11	CERAMIC CHIP	15PF	5%	50V	
C129	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C130	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C131	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C132	1-163-118-00	CERAMIC CHIP	110PF	5%	50V	
C133	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V	
C135	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C136	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C137	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C150	1-162-944-11	CERAMIC CHIP	18PF	5%	50V	
C151	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C155	1-163-105-00	CERAMIC CHIP	33PF	5%	50V	
C156	1-162-948-11	CERAMIC CHIP	39PF	5%	50V	
C159	1-162-946-11	CERAMIC CHIP	27PF	5%	50V	
C161	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	
C167	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C168	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C170	1-162-568-11	CERAMIC CHIP	0.33uF		25V	
C171	1-162-638-11	CERAMIC CHIP	1uF		16V	
C173	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C175	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C176	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C177	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C178	1-164-145-11	CERAMIC CHIP	390PF	5%	50V	
C179	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C180	1-162-947-11	CERAMIC CHIP	33PF	5%	50V	

VS-93PC

Ref. No.	Part No.	Description				Remark
C181	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V	
C182	1-162-958-11	CERAMIC CHIP	270PF	5%	50V	
C185	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	
C186	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	
C187	1-162-943-11	CERAMIC CHIP	15PF	5%	50V	
C188	1-162-958-11	CERAMIC CHIP	270PF	5%	50V	
C189	1-164-362-11	CERAMIC CHIP	470PF	5%	50V	
C192	1-162-958-11	CERAMIC CHIP	270PF	5%	50V	
C193	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	
C194	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C199	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V	
C203	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C204	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C205	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	
C206	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C207	1-162-952-11	CERAMIC CHIP	82PF	5%	50V	
C208	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V	
C209	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C210	1-164-005-11	CERAMIC CHIP	0.47uF		25V	
C211	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V	
C212	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C213	1-163-081-00	CERAMIC CHIP	0.22uF		25V	
C214	1-164-005-11	CERAMIC CHIP	0.47uF		25V	
C215	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V	
C216	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C217	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V	
C218	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C219	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C220	1-126-246-11	ELECT CHIP	220uF	20%	4V	
C221	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V	
C222	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C223	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C225	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C226	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C227	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C228	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C229	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V	
C230	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C231	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C232	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V	
C233	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C234	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C235	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C236	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C237	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C238	1-164-005-11	CERAMIC CHIP	0.47uF		25V	
C239	1-162-954-11	CERAMIC CHIP	120PF	5%	50V	
C240	1-162-959-11	CERAMIC CHIP	330PF	5%	50V	
C241	1-126-607-11	ELECT CHIP	47uF	20%	4V	
C242	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	

Ref. No.	Part No.	Description				Remark
C245	1-163-035-00	CERAMIC CHIP	0.047uF		50V	
C246	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C247	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C248	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C249	1-162-959-11	CERAMIC CHIP	330PF	5%	50V	
C250	1-164-145-11	CERAMIC CHIP	390PF	5%	50V	
C251	1-162-955-11	CERAMIC CHIP	150PF	5%	50V	(AEP, UK model)
C252	1-162-955-11	CERAMIC CHIP	150PF	5%	50V	(AEP, UK model)
C255	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C256	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C257	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	
C259	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C260	1-162-945-11	CERAMIC CHIP	22PF	5%	50V	
C261	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C262	1-162-954-11	CERAMIC CHIP	120PF	5%	50V	
C263	1-162-951-11	CERAMIC CHIP	68PF	5%	50V	
C264	1-162-950-11	CERAMIC CHIP	56PF	5%	50V	
C265	1-162-957-11	CERAMIC CHIP	220PF	5%	50V	
C266	1-162-953-11	CERAMIC CHIP	100PF	5%	50V	
C267	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C268	1-162-955-11	CERAMIC CHIP	150PF	5%	50V	
C269	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C270	1-162-947-11	CERAMIC CHIP	33PF	5%	50V	
C271	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C272	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C273	1-126-205-11	ELECT CHIP	47uF	20%	6.3V	
C276	1-162-945-11	CERAMIC CHIP	22PF	5%	50V	
C277	1-162-941-11	CERAMIC CHIP	10PF	0.5PF	50V	
C278	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C279	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C280	1-162-995-11	CERAMIC CHIP	0.022uF		50V	
C281	1-135-146-21	TANTALUM CHIP	0.68uF	20%	25V	
C282	1-135-091-00	TANTALUM CHIP	1uF	20%	16V	
C283	1-135-091-00	TANTALUM CHIP	1uF	20%	16V	
C284	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V	
C285	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C286	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C288	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C289	1-164-360-11	CERAMIC CHIP	0.1uF		16V	
C290	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C291	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C292	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V	
C294	1-162-638-11	CERAMIC CHIP	1uF		16V	
C295	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C296	1-162-974-11	CERAMIC CHIP	0.01uF		50V	
C297	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V	
C298	1-162-947-11	CERAMIC CHIP	33PF	5%	50V	
C299	1-162-949-11	CERAMIC CHIP	47PF	5%	50V	

Ref. No.	Part No.	Description	Remark
C300	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C301	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C302	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C303	1-135-149-21	TANTALUM CHIP 2.2uF 20% 10V	
C304	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C305	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C306	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C307	1-135-091-00	TANTALUM CHIP 1uF 20% 16V	
C401	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C402	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C403	1-162-969-11	CERAMIC CHIP 0.0068uF 10% 25V	
C404	1-162-969-11	CERAMIC CHIP 0.0068uF 10% 25V	
C405	1-164-227-11	CERAMIC CHIP 0.022uF 10% 25V	
C406	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C407	1-164-222-11	CERAMIC CHIP 0.22uF 25V	
C408	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C411	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C412	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C413	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C415	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C416	1-162-905-11	CERAMIC CHIP 1PF 0.25PF50V	
C417	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C418	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C419	1-164-346-11	CERAMIC CHIP 1uF 16V	
C420	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C421	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C422	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C423	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C424	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C426	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C427	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C428	1-162-917-11	CERAMIC CHIP 15PF 5% 50V	
C429	1-162-917-11	CERAMIC CHIP 15PF 5% 50V	
C430	1-162-965-11	CERAMIC CHIP 0.0015uF 10% 50V	
C431	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C432	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C433	1-164-173-11	CERAMIC CHIP 0.0039uF 10% 50V	
C434	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C435	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C436	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C437	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C438	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C439	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C440	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C441	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C442	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C443	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C444	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C445	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C446	1-164-346-11	CERAMIC CHIP 1uF 16V	
C447	1-162-936-11	CERAMIC CHIP 5PF 0.25PF 50V	
C448	1-164-346-11	CERAMIC CHIP 1uF 16V	
C449	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C450	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C451	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C452	1-135-179-21	TANTAL. CHIP 2.2uF 20% 16V	
C453	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C454	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C455	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C456	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C457	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C458	1-135-180-21	TANTALUM CHIP 3.3uF 20% 6.3V	
C459	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C460	1-163-833-00	CERAMIC CHIP 0.068uF 25V	
C461	1-162-967-11	CERAMIC CHIP 0.0033uF 10% 50V	
C462	1-163-833-00	CERAMIC CHIP 0.068uF 25V	
C463	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C464	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C465	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C466	1-164-346-11	CERAMIC CHIP 1uF 16V	
C467	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C468	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C469	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C470	1-163-809-11	CERAMIC CHIP 0.047uF 10% 25V	
C471	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C472	1-164-222-11	CERAMIC CHIP 0.22uF 25V	
C473	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C474	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C475	1-126-205-11	ELECT CHIP 47uF 20% 6.3V	
C476	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C477	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C478	1-135-091-00	TANTALUM CHIP 1uF 20% 16V	
C479	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C481	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C482	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
		〈 FILTER 〉	
CF151	1-579-371-11	FILTER, CERAMIC	
		〈 CONNECTOR 〉	
CN001	1-566-531-11	CONNECTOR, FPC (ZIF) 15P	
CN002	1-573-371-21	CONNECTOR, BOARD TO BOARD 14P	
CN101	1-566-542-31	CONNECTOR, FPC (NON ZIF) 10P	
CN102	1-580-789-21	PIN, CONNECTOR (SMD) 6P	
CN401	1-691-539-11	CONNECTOR, BOARD TO BOARD 30P	
CN402	1-691-472-21	CONNECTOR, FFC/FPC 6P	
CN403	1-691-519-11	CONNECTOR, BOARD TO BOARD 30P	
CN404	1-573-293-21	PIN, CONNECTOR (1.5MM)(SMD) 2P	
CN405	1-566-546-11	CONNECTOR, FPC (NON ZIF) 14P	
CN406	1-580-056-21	PIN, CONNECTOR 3P	

Ref. No.	Part No.	Description	Remark
CN407	1-566-538-11	CONNECTOR, FPC (NON ZIF) 6P	
CN408	1-566-541-11	CONNECTOR, FPC (NON ZIF) 9P	
		(DIODE)	
D001	8-719-951-22	IC IMN10	
D121	8-719-941-86	DIODE DAN202U	
D152	8-719-991-00	DIODE DAP222	
D154	8-719-989-03	DIODE DAN222	
D157	8-719-991-00	DIODE DAP222	
D159	8-719-941-86	DIODE DAN202U	
D160	8-719-941-86	DIODE DAN202U	
		(FILTER)	
FL121	1-236-188-11	FILTER, BAND PASS	
FL152	1-236-849-21	FILTER, BAND PASS	
FL153	1-236-186-11	FILTER, BAND PASS	
FL154	1-239-055-21	FILTER, LOW PASS (CCD. PAL. Y)	
FL155	1-236-848-21	FILTER, LOW PASS	
FL401	1-406-452-11	COIL, OSC	
		(IC)	
IC001	8-752-033-38	IC CXA1202R	
IC002	8-752-033-38	IC CXA1202R	
IC003	8-752-053-21	IC CXA1211M	
IC005	8-759-998-32	IC CXD-2107M (AEP, UK model)	
IC121	8-759-605-61	IC CXA1203N	
IC151	8-752-036-19	IC CXA1207R	
IC152	8-752-036-20	IC CXA1208R	
IC153	8-759-710-29	IC NJM2235M	
IC154	8-752-333-24	IC CXL1506M	
IC155	8-752-053-21	IC CXA1211M	
IC156	8-759-064-36	IC MB88346BPFV-EF	
IC158	8-759-064-36	IC MB88346BPFV-EF	
IC159	8-759-636-33	IC CXA1452N	
IC401	8-752-838-56	IC CXP80624-413R	
IC402	8-759-069-29	IC uPD6456GS-618	
IC403	8-759-044-78	IC AK6420F	
IC404	8-759-057-81	IC MPC1727VMER	
IC405	8-759-059-42	IC CXA1481AR	
IC406	8-759-999-02	IC TL1596CDB	
IC407	8-759-057-77	IC MCD004BN	
IC408	8-759-057-74	IC MCD002AR	
IC409	8-759-823-90	IC LB8110M	
		(COIL)	
L001	1-410-381-11	INDUCTOR CHIP 10uH	
L002	1-412-066-21	INDUCTOR CHIP 220uH	
L003	1-412-066-21	INDUCTOR CHIP 220uH	
L004	1-412-066-21	INDUCTOR CHIP 220uH	
L005	1-410-385-11	INDUCTOR CHIP 22uH	
L006	1-410-385-11	INDUCTOR CHIP 22uH	
L007	1-412-058-11	INDUCTOR CHIP 10uH	
L008	1-410-658-31	INDUCTOR CHIP 220uH	
L009	1-410-380-31	INDUCTOR CHIP 8.2uH	
L010	1-410-655-31	INDUCTOR CHIP 120uH	
L011	1-412-280-31	INDUCTOR 330uH	
L012	1-410-388-21	INDUCTOR CHIP 39uH	
L013	1-410-385-11	INDUCTOR CHIP 22uH	
L014	1-412-058-11	INDUCTOR CHIP 10uH (AEP, UK model)	
L121	1-410-381-11	INDUCTOR CHIP 10uH	
L150	1-412-954-11	INDUCTOR 18uH	
L151	1-410-388-21	INDUCTOR CHIP 39uH	
L152	1-410-385-11	INDUCTOR CHIP 22uH	
L154	1-410-390-11	INDUCTOR CHIP 56uH	
L155	1-410-390-11	INDUCTOR CHIP 56uH	
L160	1-412-058-11	INDUCTOR CHIP 10uH	
L161	1-410-385-11	INDUCTOR CHIP 22uH	
L162	1-412-280-31	INDUCTOR 330uH	
L163	1-410-167-41	INDUCTOR CHIP 820uH	
L164	1-410-657-21	INDUCTOR CHIP 180uH	
L167	1-410-383-31	INDUCTOR CHIP 15uH	
L168	1-410-379-31	INDUCTOR CHIP 6.8uH	
L169	1-410-392-11	INDUCTOR CHIP 82uH	
L170	1-410-381-11	INDUCTOR CHIP 10uH	
L171	1-410-384-31	INDUCTOR CHIP 18uH	
L174	1-412-058-11	INDUCTOR CHIP 10uH	
L175	1-410-393-11	INDUCTOR CHIP 100uH	
L176	1-410-656-11	INDUCTOR CHIP 150uH	
L177	1-412-058-11	INDUCTOR CHIP 10uH	
L178	1-412-062-11	INDUCTOR CHIP 47uH	
L179	1-410-379-31	INDUCTOR CHIP 6.8uH	
L180	1-410-393-11	INDUCTOR CHIP 100uH	
L181	1-410-393-11	INDUCTOR CHIP 100uH	
L182	1-410-655-31	INDUCTOR CHIP 120uH	
L184	1-410-386-11	INDUCTOR CHIP 27uH	
L185	1-412-058-11	INDUCTOR CHIP 10uH	
L401	1-412-058-11	INDUCTOR CHIP 10uH	
L402	1-412-058-11	INDUCTOR CHIP 10uH	
L403	1-412-064-11	INDUCTOR CHIP 100uH	
L404	1-412-058-11	INDUCTOR CHIP 10uH	
		(IC LINK)	
⚠PS401	1-576-122-21	RINK, IC	
⚠PS402	1-576-123-21	RINK, IC	
		(TRANSISTOR)	
Q001	8-729-216-22	TRANSISTOR 2SA1162-G	
Q003	8-729-905-23	TRANSISTOR 2SA1576-R	
Q004	8-729-905-18	TRANSISTOR DTC144EU	
Q005	8-729-905-18	TRANSISTOR DTC144EU	
Q006	8-729-823-86	TRANSISTOR 2SA1745	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
Q007	8-729-823-86	TRANSISTOR 2SA1745	
Q008	8-729-905-23	TRANSISTOR 2SA1576-R	
Q009	8-729-905-23	TRANSISTOR 2SA1576-R	
Q010	8-729-905-12	TRANSISTOR DTA144EU	
Q011	8-729-905-18	TRANSISTOR DTC144EU	
Q012	8-729-905-18	TRANSISTOR DTC144EU	
Q013	8-729-823-86	TRANSISTOR 2SA1745	
Q014	8-729-823-86	TRANSISTOR 2SA1745	
Q015	8-729-905-23	TRANSISTOR 2SA1576-R	
Q016	8-729-905-23	TRANSISTOR 2SA1576-R	
Q017	8-729-905-12	TRANSISTOR DTA144EU	
Q018	8-729-905-18	TRANSISTOR DTC144EU	
Q019	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q020	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q021	8-729-905-23	TRANSISTOR 2SA1576-R	
Q022	8-729-905-23	TRANSISTOR 2SA1576-R	
Q023	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q024	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q025	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q026	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q027	8-729-905-96	TRANSISTOR DTA114TU (AEP, UK model)	
Q028	8-729-905-96	TRANSISTOR DTA114TU (AEP, UK model)	
Q029	8-729-905-96	TRANSISTOR DTA114TU	
Q030	8-729-905-15	TRANSISTOR DTC144WU	
Q031	8-729-905-18	TRANSISTOR DTC144EU (AEP, UK model)	
Q121	8-729-905-12	TRANSISTOR DTA144EU	
Q123	8-729-905-18	TRANSISTOR DTC144EU	
Q124	8-729-905-12	TRANSISTOR DTA144EU	
Q125	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q126	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q151	8-729-101-07	TRANSISTOR 2SB798-DL	
Q152	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q153	8-729-928-81	TRANSISTOR DTC144EE	
Q154	8-729-927-XX	TRANSISTOR 2SC4617TL-QR	
Q155	8-729-823-16	TRANSISTOR 2SC4555-5.6.7	
Q158	8-729-927-XX	TRANSISTOR 2SC4617TL-QR	
Q160	8-729-928-19	TRANSISTOR 2SA1774R (AEP, UK model)	
Q161	8-729-927-XX	TRANSISTOR 2SC4617TL-QR	
Q162	8-729-928-27	TRANSISTOR DTA144EE	
Q166	8-729-928-19	TRANSISTOR 2SA1774R	
Q168	8-729-928-27	TRANSISTOR DTA144EE	
Q169	8-729-905-18	TRANSISTOR DTC144EU	
Q170	8-729-421-90	TRANSISTOR XN4113	
Q171	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q172	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q173	8-729-905-18	TRANSISTOR DTC144EU	
Q174	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q175	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q176	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q177	8-729-905-23	TRANSISTOR 2SA1576-R	
Q178	8-729-905-23	TRANSISTOR 2SA1576-R	
Q180	8-729-422-54	TRANSISTOR XN4215	
Q181	8-729-905-18	TRANSISTOR DTC144EU (AEP, UK model)	
Q182	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q183	8-729-905-96	TRANSISTOR DTA114TU	
Q184	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q185	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q188	8-729-402-81	TRANSISTOR XN4501	
Q189	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q191	8-729-927-XX	TRANSISTOR 2SC4617TL-QR	
Q192	8-729-927-XX	TRANSISTOR 2SC4617TL-QR	
Q194	8-729-927-XX	TRANSISTOR 2SC4617TL-QR	
Q195	8-729-928-19	TRANSISTOR 2SA1774R	
Q199	8-729-807-87	TRANSISTOR 2SB1295-UL6	
Q200	8-729-905-18	TRANSISTOR DTC144EU	
Q201	8-729-420-12	TRANSISTOR XN4213	
Q202	8-729-117-16	TRANSISTOR 2SA1611-M6	
Q203	8-729-905-23	TRANSISTOR 2SA1576-R	
Q204	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q205	8-729-420-12	TRANSISTOR XN4213	
Q207	8-729-905-12	TRANSISTOR DTA144EU	
Q208	8-729-905-18	TRANSISTOR DTC144EU	
Q210	8-729-420-12	TRANSISTOR XN4213	
Q211	8-729-823-16	TRANSISTOR 2SC4555-5.6.7 (AEP, UK model)	
Q212	8-729-905-23	TRANSISTOR 2SA1576-R	
Q213	8-729-823-16	TRANSISTOR 2SC4555-5.6.7 (AEP, UK model)	
Q214	8-729-420-12	TRANSISTOR XN4213	
Q216	8-729-905-18	TRANSISTOR DTC144EU (AEP, UK model)	
Q219	8-729-905-12	TRANSISTOR DTA144EU	
Q220	8-729-905-18	TRANSISTOR DTC144EU	
Q221	8-729-420-12	TRANSISTOR XN4213	
Q222	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q223	8-729-905-18	TRANSISTOR DTC144EU	
Q224	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q225	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q227	8-729-117-16	TRANSISTOR 2SA1611-M6	
Q228	8-729-420-12	TRANSISTOR XN4213	
Q229	8-729-905-23	TRANSISTOR 2SA1576-R	
Q230	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q231	8-729-905-23	TRANSISTOR 2SA1576-R	
Q232	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q233	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q234	8-729-905-23	TRANSISTOR 2SA1576-R	
Q236	8-729-905-09	TRANSISTOR DTA144WU	
Q237	8-729-928-19	TRANSISTOR 2SA1774R	
Q401	8-729-905-12	TRANSISTOR DTA144EU	
Q402	8-729-905-18	TRANSISTOR DTC144EU	
Q403	8-729-907-00	TRANSISTOR DTC114EU	
Q404	8-729-905-23	TRANSISTOR 2SA1576-R	

(RESISTOR)

Ref. No.	Part No.	Description				Remark
R001	1-216-801-11	METAL CHIP	22	5%	1/16W	
R002	1-216-818-11	METAL CHIP	560	5%	1/16W	
R004	1-216-815-11	METAL CHIP	330	5%	1/16W	
R005	1-216-817-11	METAL CHIP	470	5%	1/16W	
R006	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R007	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R008	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R009	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R010	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R011	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R012	1-216-834-11	METAL CHIP	12K	5%	1/16W	(AEP, UK model)
R012	1-216-838-11	METAL CHIP	27K	5%	1/16W	(E model)
R013	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R014	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R015	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R016	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R017	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R018	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R019	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R020	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R021	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R022	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R023	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R024	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R025	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R026	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	
R027	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R028	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R029	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R030	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R031	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R032	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R033	1-216-791-11	METAL CHIP	3.3	5%	1/16W	
R034	1-216-791-11	METAL CHIP	3.3	5%	1/16W	
R035	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R036	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R037	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R038	1-216-834-11	METAL CHIP	12K	5%	1/16W	(AEP, UK model)
R038	1-216-838-11	METAL CHIP	27K	5%	1/16W	(E model)
R039	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R040	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R041	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R042	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R043	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R044	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R045	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R046	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R047	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R048	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R049	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	(AEP, UK model)
R049	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	(E model)
R050	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	
R051	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R052	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	
R054	1-216-817-11	METAL CHIP	470	5%	1/16W	
R055	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R056	1-216-813-11	METAL CHIP	220	5%	1/16W	
R057	1-216-818-11	METAL CHIP	560	5%	1/16W	
R058	1-216-818-11	METAL CHIP	560	5%	1/16W	
R059	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	
R060	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	
R061	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R062	1-216-818-11	METAL CHIP	560	5%	1/16W	
R063	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	
R064	1-216-817-11	METAL CHIP	470	5%	1/16W	
R065	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R066	1-216-809-11	METAL CHIP	100	5%	1/16W	
R067	1-216-835-11	METAL CHIP	15K	5%	1/16W	
R068	1-216-816-11	METAL CHIP	390	5%	1/16W	
R069	1-216-819-11	METAL CHIP	680	5%	1/16W	
R070	1-216-835-11	METAL CHIP	15K	5%	1/16W	
R071	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R072	1-216-820-11	METAL CHIP	820	5%	1/16W	
R073	1-216-814-11	METAL CHIP	270	5%	1/16W	
R074	1-216-816-11	METAL CHIP	390	5%	1/16W	
R075	1-216-817-11	METAL CHIP	470	5%	1/16W	
R076	1-216-864-11	METAL CHIP	0	5%	1/16W	
R077	1-216-809-11	METAL CHIP	100	5%	1/16W	
R078	1-216-820-11	METAL CHIP	820	5%	1/16W	
R079	1-216-834-11	METAL CHIP	12K	5%	1/16W	
R080	1-216-819-11	METAL CHIP	680	5%	1/16W	
R082	1-216-819-11	METAL CHIP	680	5%	1/16W	
R083	1-216-819-11	METAL CHIP	680	5%	1/16W	
R086	1-216-813-11	METAL CHIP	220	5%	1/16W	
R087	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R088	1-216-814-11	METAL CHIP	270	5%	1/16W	
R089	1-216-816-11	METAL CHIP	390	5%	1/16W	
R090	1-216-834-11	METAL CHIP	12K	5%	1/16W	
R091	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	
R092	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R093	1-216-864-11	METAL CHIP	0	5%	1/16W	(AEP, UK model)
R095	1-216-833-11	METAL CHIP	10K	5%	1/16W	(AEP, UK model)
R096	1-216-864-11	METAL CHIP	0	5%	1/16W	(E model)
R097	1-216-864-11	METAL CHIP	0	5%	1/16W	
R099	1-216-864-11	METAL CHIP	0	5%	1/16W	
R100	1-216-864-11	METAL CHIP	0	5%	1/16W	

Ref. No.	Part No.	Description				Remark
R113	1-809-350-21	THERMISTOR, NTC (			2125)	
R115	1-216-864-11	METAL CHIP	0	5%	1/16W	
R116	1-216-864-11	METAL CHIP	0	5%	1/16W	
R119	1-216-864-11	METAL CHIP	0	5%	1/16W	
R122	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R123	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R124	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R125	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R126	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R127	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R129	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R130	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R131	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R132	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R133	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R134	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R135	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	
R136	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R137	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R138	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R139	1-216-817-11	METAL CHIP	470	5%	1/16W	
R140	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R141	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R142	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R143	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R144	1-216-817-11	METAL CHIP	470	5%	1/16W	
R145	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R146	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R147	1-216-864-11	METAL CHIP	0	5%	1/16W	
R148	1-216-864-11	METAL CHIP	0	5%	1/16W	
R151	1-216-296-00	METAL CHIP	0	5%	1/8W	
R152	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	
R153	1-216-304-11	METAL CHIP	3.3	5%	1/10W	
R154	1-216-820-11	METAL CHIP	820	5%	1/16W	
R155	1-216-836-11	METAL CHIP	18K	5%	1/16W	
R156	1-216-296-00	METAL CHIP	0	5%	1/8W	
R157	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R158	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R159	1-216-814-11	METAL CHIP	270	5%	1/16W	
R160	1-216-817-11	METAL CHIP	470	5%	1/16W	
R161	1-216-809-11	METAL CHIP	100	5%	1/16W	
R164	1-216-811-11	METAL CHIP	150	5%	1/16W	
R167	1-216-820-11	METAL CHIP	820	5%	1/16W	
R168	1-216-820-11	METAL CHIP	820	5%	1/16W	
R170	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	
R171	1-216-864-11	METAL CHIP	0	5%	1/16W	
R174	1-216-841-11	METAL CHIP	47K	5%	1/16W	(AEP, UK model)
R175	1-216-811-11	METAL CHIP	150	5%	1/16W	
R176	1-216-807-11	METAL CHIP	68	5%	1/16W	(AEP, UK model)

Ref. No.	Part No.	Description				Remark
R176	1-216-864-11	METAL CHIP	0	5%	1/16W	(E model)
R177	1-216-819-11	METAL CHIP	680	5%	1/16W	
R178	1-216-817-11	METAL CHIP	470	5%	1/16W	
R179	1-216-820-11	METAL CHIP	820	5%	1/16W	
R189	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	
R190	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R191	1-216-864-11	METAL CHIP	0	5%	1/16W	
R192	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R193	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R194	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R195	1-216-819-11	METAL CHIP	680	5%	1/16W	
R196	1-216-815-11	METAL CHIP	330	5%	1/16W	
R197	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R198	1-216-817-11	METAL CHIP	470	5%	1/16W	
R199	1-216-816-11	METAL CHIP	390	5%	1/16W	
R200	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R201	1-216-815-11	METAL CHIP	330	5%	1/16W	
R202	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R203	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R204	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R205	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	
R206	1-216-813-11	METAL CHIP	220	5%	1/16W	
R208	1-216-864-11	METAL CHIP	0	5%	1/16W	
R209	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	
R210	1-216-807-11	METAL CHIP	68	5%	1/16W	
R211	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R213	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	
R216	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R217	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R218	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	
R219	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R220	1-216-811-11	METAL CHIP	150	5%	1/16W	
R221	1-216-864-11	METAL CHIP	0	5%	1/16W	
R222	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	
R223	1-216-835-11	METAL CHIP	15K	5%	1/16W	
R224	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R225	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R226	1-216-864-11	METAL CHIP	0	5%	1/16W	
R228	1-216-818-11	METAL CHIP	560	5%	1/16W	
R229	1-216-811-11	METAL CHIP	150	5%	1/16W	
R230	1-216-819-11	METAL CHIP	680	5%	1/16W	
R236	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R237	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R238	1-216-818-11	METAL CHIP	560	5%	1/16W	
R239	1-216-864-11	METAL CHIP	0	5%	1/16W	
R240	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R241	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R242	1-216-818-11	METAL CHIP	560	5%	1/16W	
R243	1-216-809-11	METAL CHIP	100	5%	1/16W	

Ref. No.	Part No.	Description				Remark
R245	1-216-817-11	METAL CHIP	470	5%	1/16W	
R246	1-216-817-11	METAL CHIP	470	5%	1/16W	
R247	1-216-296-00	METAL CHIP	0	5%	1/8W	
R248	1-216-817-11	METAL CHIP	470	5%	1/16W	
R250	1-216-810-11	METAL CHIP	120	5%	1/16W	
R251	1-216-806-11	METAL GLAZE	56	5%	1/16W	
R252	1-216-864-11	METAL CHIP	0	5%	1/16W	
R253	1-216-818-11	METAL CHIP	560	5%	1/16W	
R254	1-216-818-11	METAL CHIP	560	5%	1/16W	
R255	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R256	1-216-864-11	METAL CHIP	0	5%	1/16W	
R257	1-216-818-11	METAL CHIP	560	5%	1/16W	
R258	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R259	1-216-816-11	METAL CHIP	390	5%	1/16W	
R260	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R270	1-216-295-00	METAL CHIP	0	5%	1/10W	
R271	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R272	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R273	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R274	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R275	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R276	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	
R277	1-216-818-11	METAL CHIP	560	5%	1/16W	
R278	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R279	1-216-818-11	METAL CHIP	560	5%	1/16W	
R280	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R281	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	
R282	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R283	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R285	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R286	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R287	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R288	1-216-804-11	METAL CHIP	39	5%	1/16W	
R289	1-216-804-11	METAL CHIP	39	5%	1/16W	
R290	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R291	1-216-820-11	METAL CHIP	820	5%	1/16W	
R292	1-216-804-11	METAL CHIP	39	5%	1/16W	
R293	1-216-804-11	METAL CHIP	39	5%	1/16W	
R294	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R295	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R296	1-216-855-11	METAL CHIP	680K	5%	1/16W	
R297	1-216-820-11	METAL CHIP	820	5%	1/16W	
R298	1-216-820-11	METAL CHIP	820	5%	1/16W	
R299	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R300	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	
R301	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R302	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R303	1-216-846-11	METAL CHIP	120K	5%	1/16W	
R304	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R305	1-216-818-11	METAL CHIP	560	5%	1/16W	

Ref. No.	Part No.	Description				Remark
R306	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R307	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R308	1-216-819-11	METAL CHIP	680	5%	1/16W	
R309	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R310	1-216-846-11	METAL CHIP	120K	5%	1/16W	
R311	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R312	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R314	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R315	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R316	1-216-817-11	METAL CHIP	470	5%	1/16W	
R317	1-216-816-11	METAL CHIP	390	5%	1/16W	(AEP, UK model)
R318	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R319	1-216-841-11	METAL CHIP	47K	5%	1/16W	(AEP, UK model)
R321	1-216-864-11	METAL CHIP	0	5%	1/16W	
R323	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R324	1-216-817-11	METAL CHIP	470	5%	1/16W	
R325	1-216-864-11	METAL CHIP	0	5%	1/16W	(E model)
R326	1-216-841-11	METAL CHIP	47K	5%	1/16W	(AEP, UK model)
R327	1-216-841-11	METAL CHIP	47K	5%	1/16W	(AEP, UK model)
R329	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	
R331	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	
R333	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	
R334	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R335	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R337	1-216-864-11	METAL CHIP	0	5%	1/16W	
R339	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R341	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R342	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R343	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R344	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R345	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R346	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R347	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	
R348	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	
R349	1-216-834-11	METAL CHIP	12K	5%	1/16W	
R350	1-216-838-11	METAL CHIP	27K	5%	1/16W	
R352	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R353	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	
R354	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	
R355	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R356	1-216-817-11	METAL CHIP	470	5%	1/16W	
R357	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	
R358	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	
R359	1-216-296-00	METAL CHIP	0	5%	1/8W	
R360	1-216-296-00	METAL CHIP	0	5%	1/8W	
R361	1-216-864-11	METAL CHIP	0	5%	1/16W	

Ref. No.	Part No.	Description				Remark
R362	1-216-810-11	METAL CHIP	120	5%	1/16W	
R364	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R365	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R366	1-216-844-11	METAL CHIP	82K	5%	1/16W	
R367	1-216-296-00	METAL CHIP	0	5%	1/8W	
R368	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R371	1-216-857-11	METAL CHIP	1M	5%	1/16W	
R373	1-216-817-11	METAL CHIP	470	5%	1/16W	
R374	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R375	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R376	1-216-817-11	METAL CHIP	470	5%	1/16W	
R377	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R378	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R379	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R380	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R381	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R382	1-216-842-11	METAL CHIP	56K	5%	1/16W	
R383	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R384	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R385	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R386	1-216-842-11	METAL CHIP	56K	5%	1/16W	
R387	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R388	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R389	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R390	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R391	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R392	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R393	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R394	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R397	1-216-820-11	METAL CHIP	820	5%	1/16W	
R399	1-216-833-11	METAL CHIP	10K	5%	1/16W	(AEP, UK model)
R401	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R402	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R403	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R404	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R405	1-216-864-11	METAL CHIP	0	5%	1/16W	
R406	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R407	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R408	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R409	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R410	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	
R411	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R413	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R414	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R415	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R416	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R417	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R418	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R419	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R420	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R421	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R422	1-216-856-11	METAL CHIP	820K	5%	1/16W	
R423	1-216-835-11	METAL CHIP	15K	5%	1/16W	
R424	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R425	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R426	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R428	1-216-849-11	METAL CHIP	220K	5%	1/16W	
R429	1-216-856-11	METAL CHIP	820K	5%	1/16W	
R430	1-216-834-11	METAL CHIP	12K	5%	1/16W	
R435	1-216-842-11	METAL CHIP	56K	5%	1/16W	
R436	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R437	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R438	1-216-864-11	METAL CHIP	0	5%	1/16W	
R440	1-216-815-11	METAL CHIP	330	5%	1/16W	
R441	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R442	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R443	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R444	1-216-834-11	METAL CHIP	12K	5%	1/16W	
R445	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R447	1-216-864-11	METAL CHIP	0	5%	1/16W	
R448	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R449	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R450	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R451	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R452	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R453	1-216-857-11	METAL CHIP	1M	5%	1/16W	
R454	1-216-838-11	METAL CHIP	27K	5%	1/16W	
R455	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R456	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	
R457	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R458	1-216-853-11	METAL CHIP	470K	5%	1/16W	
R459	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R460	1-216-831-11	METAL CHIP	6.8K	5%	1/16W	
R461	1-216-852-11	METAL CHIP	390K	5%	1/16W	
R462	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R463	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	
R464	1-216-809-11	METAL CHIP	100	5%	1/16W	
R465	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R466	1-216-849-11	METAL CHIP	220K	5%	1/16W	
R468	1-216-809-11	METAL CHIP	100	5%	1/16W	
R470	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R471	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R472	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R473	1-217-671-11	METAL CHIP	1	5%	1/10W	
R474	1-217-671-11	METAL CHIP	1	5%	1/10W	
R475	1-217-671-11	METAL CHIP	1	5%	1/10W	
R476	1-217-671-11	METAL CHIP	1	5%	1/10W	
R477	1-216-019-00	METAL CHIP	56	5%	1/10W	
R478	1-216-841-11	METAL CHIP	47K	5%	1/16W	

Ref. No.	Part No.	Description	Remark
R479	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R480	1-216-844-11	METAL CHIP 82K 5% 1/16W	
		(CONPOSITION CIRCUIT BLOCK)	
RB401	1-236-444-11	NETWORK, RES 470K	
RB402	1-236-424-11	NETWORK, RES 10K	
RB403	1-236-424-11	NETWORK, RES 10K	
RB404	1-236-424-11	NETWORK, RES 10K	
RB405	1-236-432-11	NETWORK, RES 47K	
RB406	1-236-412-11	NETWORK, RES 1.0K	
RB407	1-236-432-11	NETWORK, RES 47K	
RB408	1-236-412-11	NETWORK, RES 1.0K	
RB409	1-236-440-11	NETWORK, RES 220K	
RB410	1-236-408-11	NETWORK, RES 470	
RB411	1-236-448-11	NETWORK, RES 1.0M	
RB412	1-236-444-11	NETWORK, RES 470K	
RB413	1-236-424-11	NETWORK, RES 10K	
RB414	1-236-424-11	NETWORK, RES 10K	
RB415	1-236-424-11	NETWORK, RES 10K	
RB416	1-236-416-11	NETWORK, RES 2.2K	
RB417	1-236-432-11	NETWORK, RES 47K	
		(FLAT CABLE)	
W401	1-690-817-11	CABLE, FLAT (FFC-65)	
W402	1-644-285-11	FP-572 FLEXIBLE BOARD	
		(VIBRATOR)	
X151	1-577-117-21	OSCILLATOR, CRYSTAL (4.433619MHz)	
X401	1-579-368-31	VIBRATOR, CRYSTAL	

****

MISCELLANEOUS

****

Ref. No.	Part No.	Description	Remark
12	1-537-369-11	TERMINAL BOARD (JK-3100)	(E model)
12	1-537-369-21	TERMINAL BOARD (JK-3100)	(AEP, UK model)
15	1-537-368-21	TERMINAL BOARD (BATTERY)	
25	1-692-084-11	SWITCH ASSY	
* 59	1-466-711-21	SWITCH BLOCK, CONTROL (CF-3200)	
71	1-466-710-21	SWITCH BLOCK, CONTROL (ZM-3200)	
123	1-547-548-11	LENS, ZOOM (VCL-6210WC)	
128	1-547-558-21	FILTER BLOCK, OPTICAL	
BL991	1-519-667-11	TUBE, FLUORESCENT	
IC875	8-752-607-39	IC ICX045BKA-2 (CCD IMAGER)	
LCD901	1-809-291-11	DISPLAY MODULE, LIQUID CRYSTAL	
M901	A-7048-214-A	DRUM BLOCK ASSY (DGH-37A-R)	(E model)
M901	A-7048-534-A	DRUM BLOCK ASSY (DGH-80A-R)	(AEP, UK model)
M902	8-835-329-12	MOTOR, DC U-21A (CAPSTAN)	
M903	1-541-607-21	MOTOR, DC (LA12G-344VA)(LOADING)	
M904	3-708-494-01	METER ASSY, IG (IRIS)	
M905	3-708-491-01	MOTOR ASSY, STEPPING (FOCUS)	
M906	3-708-492-01	MOTOR ASSY, PZ (ZOOM)	
⚠PS901	1-532-841-41	LINK, IC	
⚠PS902	1-532-841-41	LINK, IC	
⚠PS903	1-532-841-41	LINK, IC	

****

ACCESSORIES & PACKING MATERIALS

****

Ref. No.	Part No.	Description	Remark
	1-571-164-11	SWITCH, ANTENNA CHANGE (CABLE)	(UK, E model)
	1-573-291-11	CONNECTOR, CONVERSION	(AEP, UK model)
	1-575-334-11	CORD, CONNECTION	
	1-693-137-31	REMOTE COMMANDER (CAM CORDER)(RMT-701)	
	3-712-673-01	SCREWDRIVER	(UK, E model)
	3-738-517-01	BELT (S), SHOULDER	
	3-943-154-11	HOLDER (B), REMOTE CONTROL	
*	3-948-282-02	CUSHION, ACC	
	3-755-087-61	MANUAL, INSTRUCTION (ENGLISH)	(E model)
	3-755-087-71	MANUAL, INSTRUCTION (ENGLISH, GERMAN, SPANISH)	(E model)
	3-755-087-81	MANUAL, INSTRUCTION (ARABIC)	(E model)
	3-755-087-91	MANUAL, INSTRUCTION (CHINESE)	(E model)
	3-755-088-41	MANUAL, INSTRUCTION (ENGLISH)	(AEP, UK model)
	3-755-088-51	MANUAL, INSTRUCTION (FRENCH, GERMAN, SPANISH)	(AEP model)
	3-755-088-61	MANUAL, INSTRUCTION (DUTCH, SWEDISH, ITALIAN)	(AEP model)
	3-755-088-71	MANUAL, INSTRUCTION (PORTUGUESE)	(AEP model)
	3-755-088-81	MANUAL, INSTRUCTION (DANISH, FINNISH)	(AEP model)
*	3-948-281-91	INDIVIDUAL CARTON	
*	3-948-283-01	CUSHION (LOWER)	
*	A-6767-706-A	RFU ADAPTOR (RFU-89EA)	(E model)
*	A-6767-707-A	RFU ADAPTOR (RFU-89EA)	(UK model)
*	A-6768-254-A	RFU ADAPTOR (RFU-90E)	(AEP model)
**	AC-V35 or AC-V35A	AC POWER ADAPTOR	
***	NP-55	BATTERY PACK	

Note

** MARK PARTS IS AVAILABLE FOR REPAIR SERVICE.

*** MARK PARTS IS AVAILABLE AS AN OPTIONAL ACCESSORIES.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

SECTION 7
CAMERA ADJUSTMENT

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 78.

7-1. VIEWFINDER ADJUSTMENT

Note 1: The back light (fluorescent tube) is driven by a 600 Vp-p, 16 kHz AC power supply.
Therefore, be careful not to touch the back light holder as you may receive an electric shock.

Note 2: Pay special attention that damages by static electricity do not occur when replacing the LCD unit.

[Extension cable]

The following extension cables are available. Use as required.

1) For extension (6P, 1.5 mm) between the main body (CN102 of the VS-93P board) and the viewfinder (CN902 of the CL-28 board)
Part code: J-6082-152-A

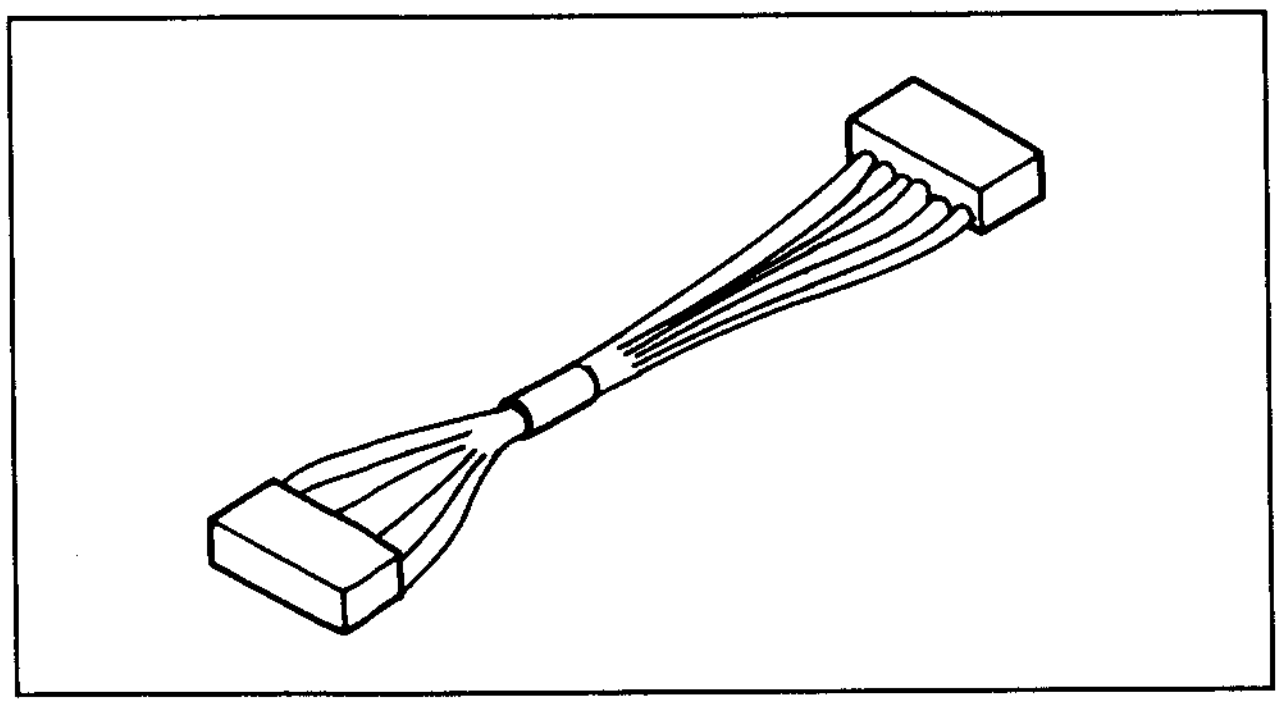

2) For extension (10P, 0.8 mm) between the CL-28 board (CN901) and the IV-10 board (CN101).
Part code: J-6082-150-A

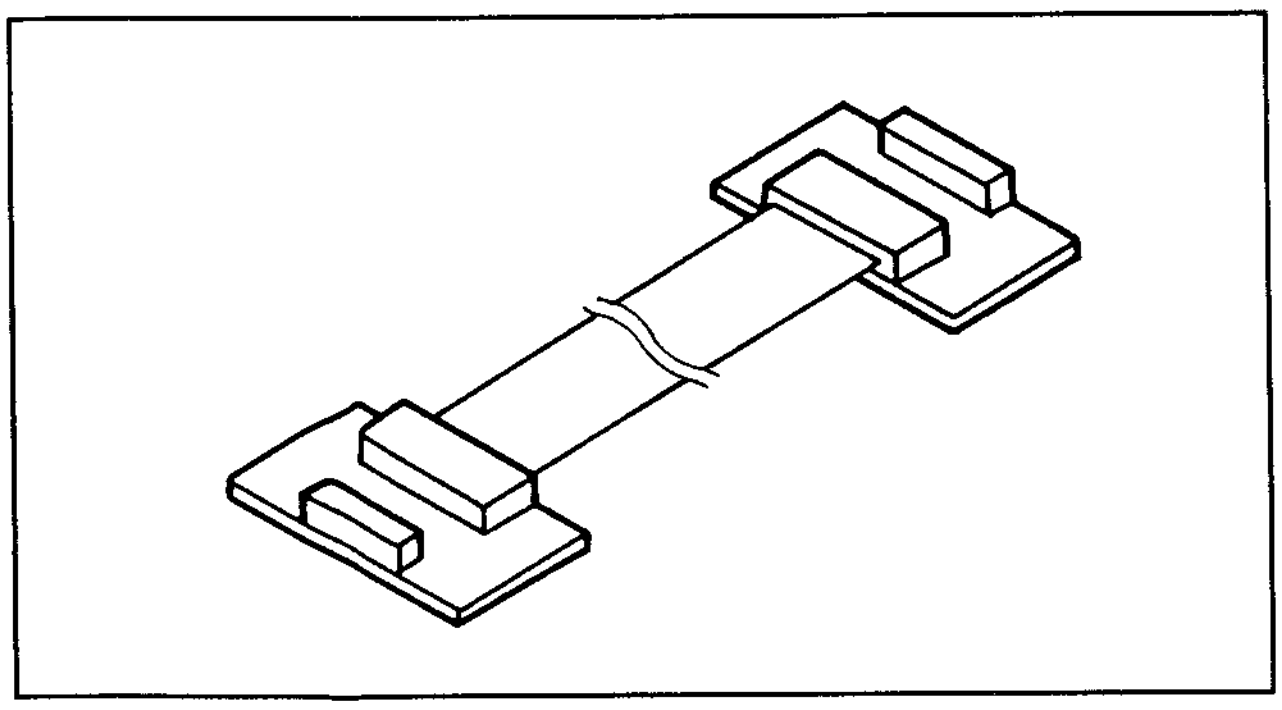

※ When using, remove the connector used for changing pins.

[Connector for adjustments]

Almost all the points to be measured when adjusting the viewfinder are concentrated in CN904 of the CL-28 board. Connect the measuring equipment via the measuring pin jig. The following table shows the pin numbers of CN904 and the signal names.

Pin No.	Signal Name	Pin No.	Signal Name
1	PCO	2	BRIGHT
3	B OUT	4	R OUT
5	-3V	6	-8V
7	9V	8	G OUT
9	EVF GND	10	LC COM

Table 7-1.

Measuring pin jig
Part code: J-6082-151-A

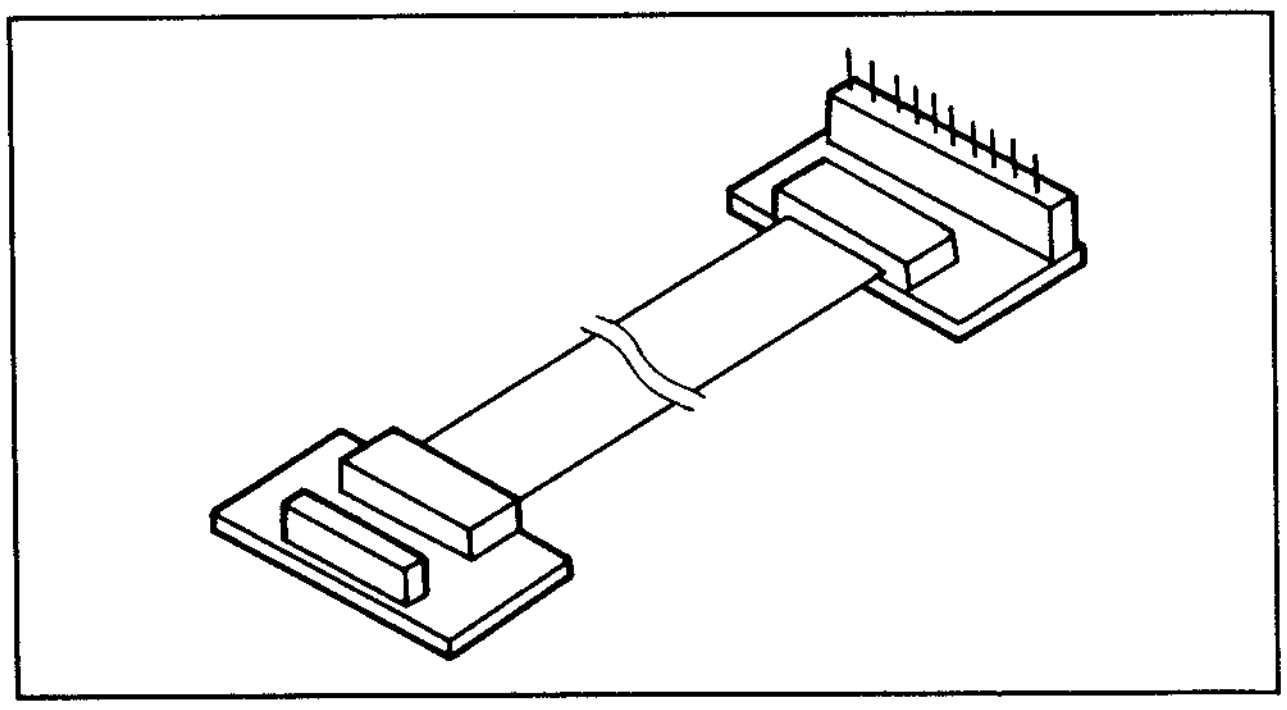

[Positions of RVs during adjustment]

Unless specified otherwise, position each RV as follows, and adjust.

RV901 (BRIGHT)·····Refer to "BRIGHT Preset Adjustment"
RV903 (COLOR)······Mechanical center

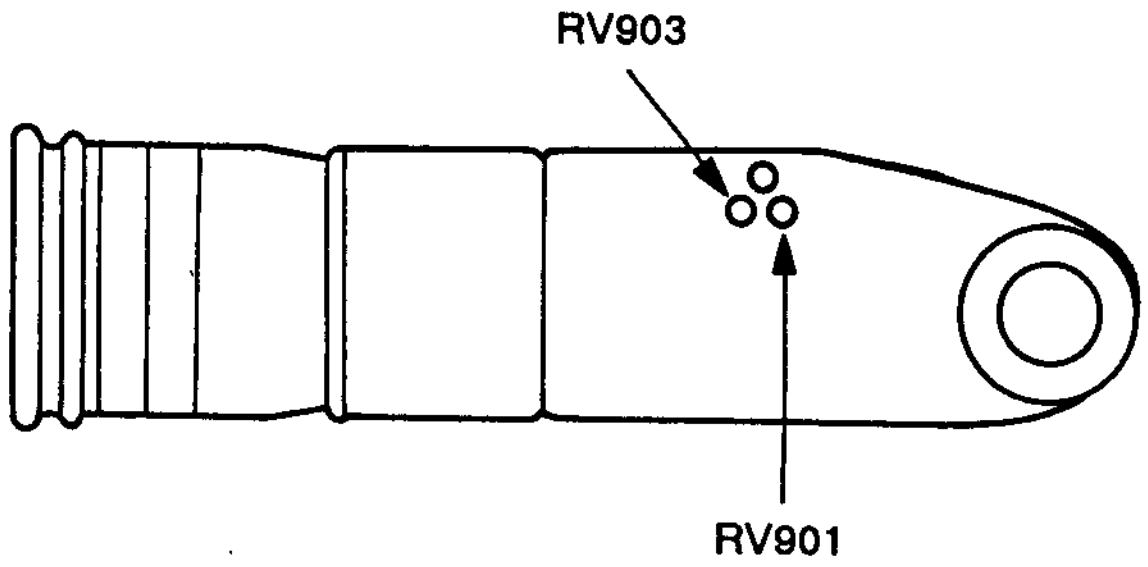

Fig. 7-1.

[Power supply voltage]

Adjust the power supply voltage to the battery terminal so that Pin ① of CN902 of the CL-28 board (EVF UNREG) becomes 6.0 ± 0.1 Vdc.

[Video input signal for adjustment]

When the signal column indicates "color bar signal turning off chroma and burst signals", input the color bar signal turning off the chroma and burst signals to the video input terminal as the video input signal for adjustment. In addition, check that the signal level of Pin ⑤ of CN902 of the CL-28 board is 0.9 ± 0.12 Vp-p before adjusting.

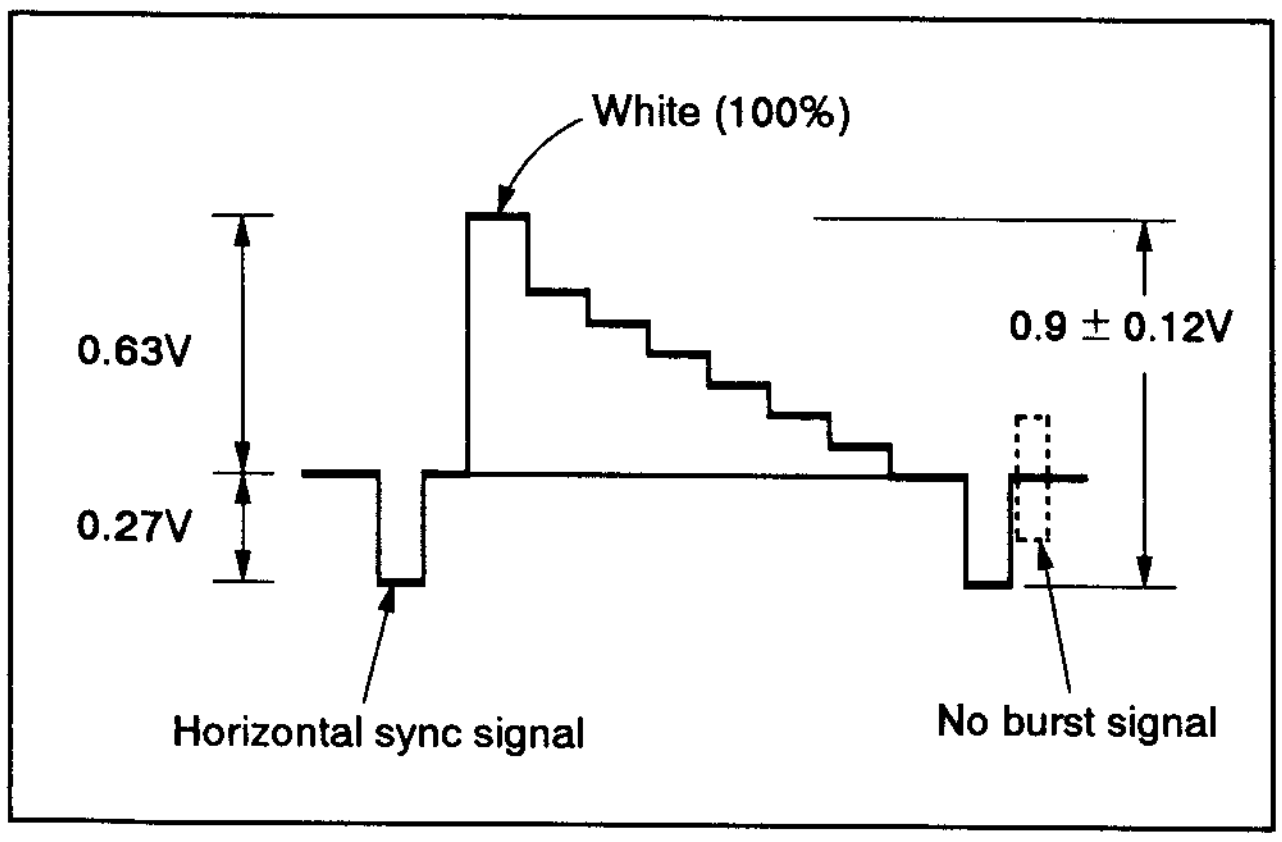

Fig. 7-2. Color bar signal turning off chroma and burst signals

1. Current Consumption Adjustment (IV-10 Board)

Mode	E-E (VTR POWER ON)
Signal	Color bar signal turning off the chroma and burst signals
Measurement Point	Measure after removing L901 of the CL-25 board +: Pin ① of CN902 –: Pin ① of CN901
Measuring Instrument	Ampere meter
Adjustment Element	RV102
Specified Value	135 ± 3 mA

Note 1: Adjust within 30 seconds after turning on the power supply.

Note 2: After adjusting, connect L901 of the CL-28 board.

Adjusting method:

1) Check that the voltage of Pin ① of CN901 of the CL-28 board (± terminal of C907) is 6.0 ± 0.1 Vdc.
2) Adjust the current consumption to 135 ± 3 mA with RV102.

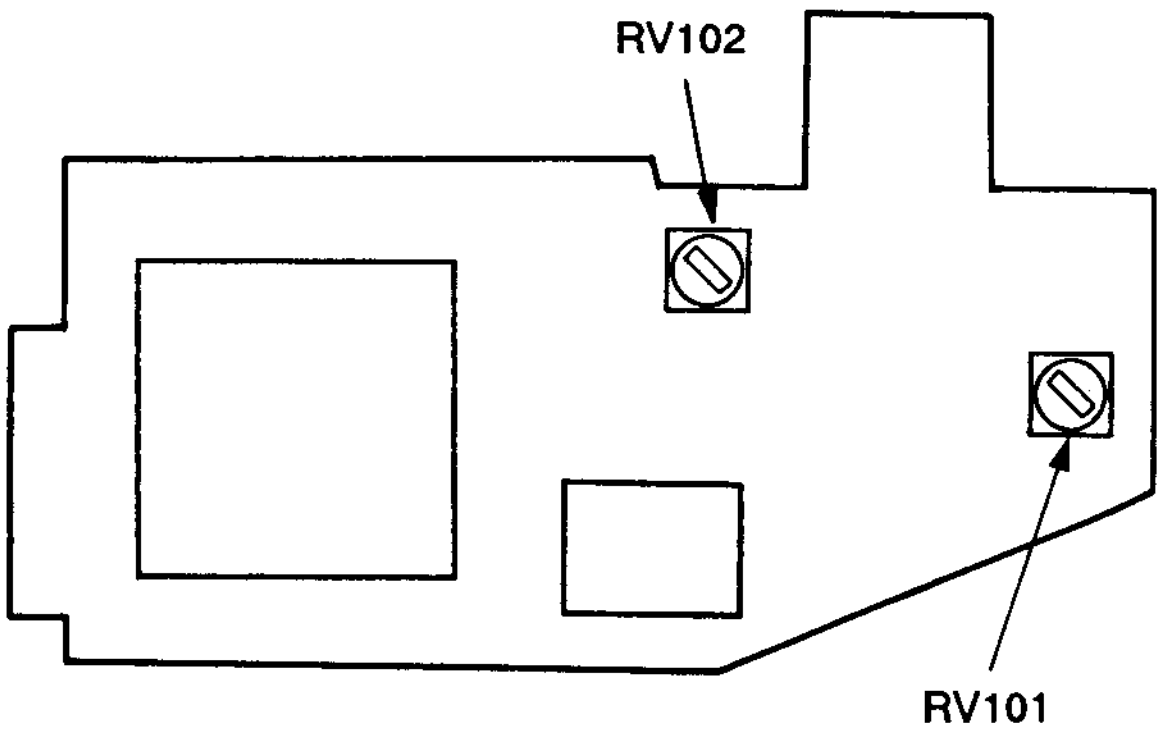

Fig. 7-3.

2. –8V Power Supply Adjustment (IV-10 Board)

Mode	E-E (VTR POWER ON)
Measuring Instrument	Digital voltmeter
Measurement Point	Pin ⑥ of CN904 of the CL-25 board (–8V)
Adjustment Element	RV101
Specified Value	–8.00 ± 0.03 Vdc

Adjusting method:

1) Check that the UNREG power supply voltage (Pin ① of CN902 of the CL-28 board) is 6.0 ± 0.1 Vdc.
2) Adjust the –8V power supply voltage to the specified value with RV101.

3. Power Supply Voltage Check (CL-28 Board)

Mode	E-E (VTR POWER ON)
Measuring Instrument	Digital voltmeter
-3V check	
Measurement Point	Pin ⑤ of CN904 (-3V)
Specified Value	-2.91 ± 0.15 Vdc
9V check	
Measurement Point	Pin ⑦ of CN904 (9V)
Specified Value	8.53 ± 0.4 Vdc

Checking method:

1) Check that the UNREG power supply voltage (Pin ① of CN902) is 6.0+-0.1 Vdc.
2) Check that each power supply voltage satisfies the specified value.

4. LC COM Voltage Check (CL-28 Board)

Mode	E-E (VTR POWER ON)
Measurement Point	Pin ⑩ of CN904 (LC COM)
Measuring Instrument	Digital voltmeter
Specified Value	-2.97 ± 0.15 Vdc

Checking method:

1) Check that the UNREG power supply voltage (Pin ① of CN902) is 6.0 ± 0.1 Vdc.
2) Check that the LC COM voltage satisfies the specified value.

5. VCO Adjustment (CL-28 Board)

Mode	E-E (VTR POWER ON)
Signal	Color bar turning off the chroma and burst signals
Measurement Point	Pin ① of CN904 (PCO)
Measuring Instrument	Oscilloscope (DC range)
Adjustment Element	RV905
Specified Value	A=5.8 ± 0.1V

Adjusting method

1) Check the GND level of the oscilloscope
2) Adjust the PCO voltage (A) to the specified value with RV905.

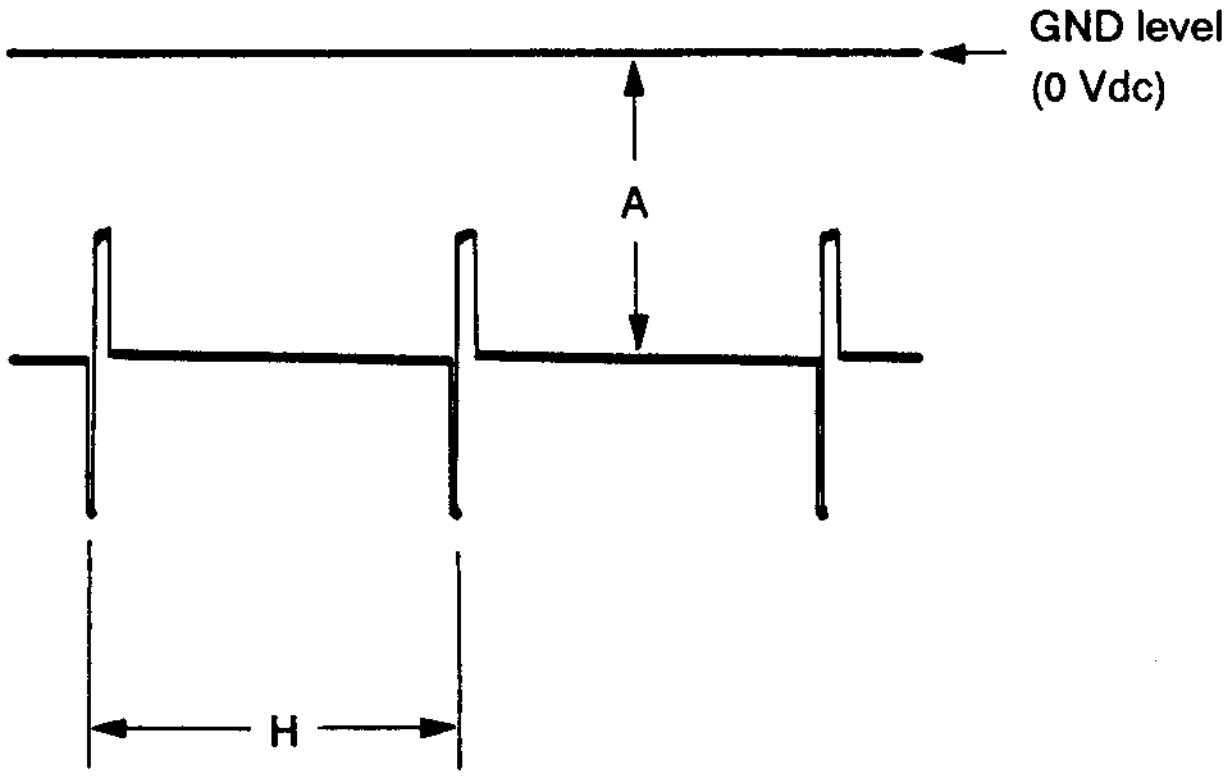

Fig. 7-4.

6. BRIGHT Preset Adjustment (CL-28 Board)

Mode	E-E (VTR POWER ON)
Signal	Color bar turning off the chroma and burst signals
Measurement Point	Pin ⑧ of CN904 (G OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	RV901
Specified Value	A=8.0 ± 0.1V

Adjusting method:

1) Adjust the potential difference (A) between the reversed waveform pedestal and non-reversed one to the specified value.

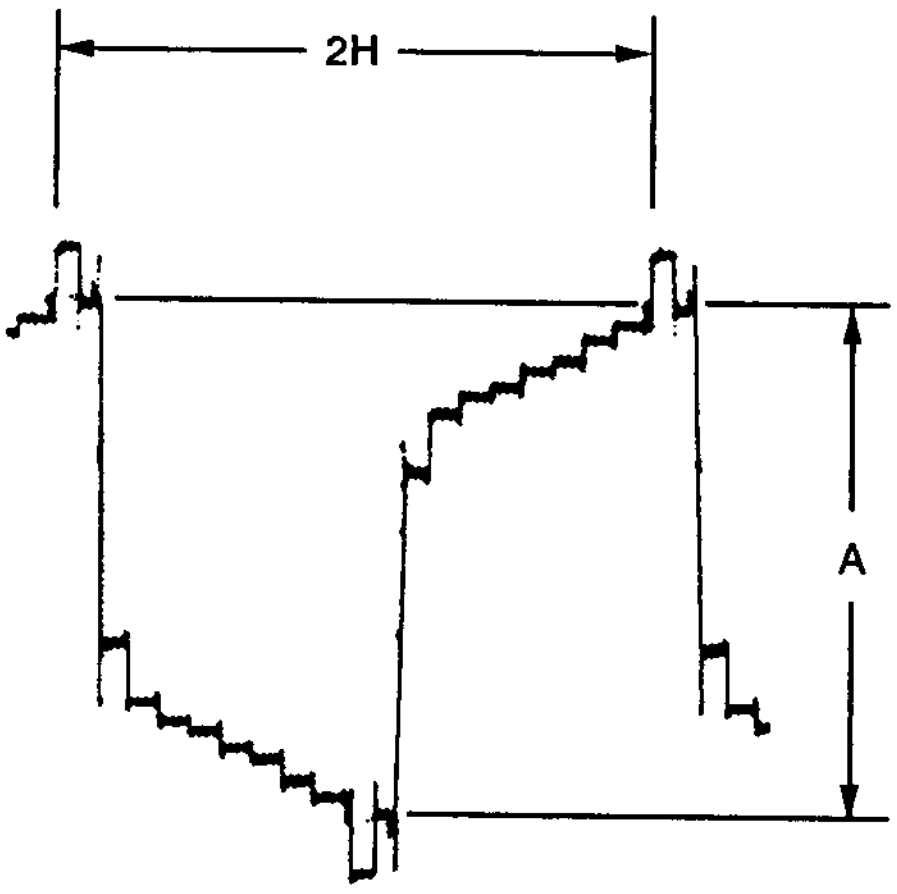

Fig. 7-5.

7. CONTRAST Adjustment (CL-28 Board)

Mode	E-E (VTR POWER ON)
Signal	Color bar turning off the chroma and burst signals
Measurement Point	Pin ⑧ of CN904 (G OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	RV902
Specified Value	A=2.4 ± 0.1V

Adjusting method:

1) Adjust the 100% white level (A) to the specified value with RV902.

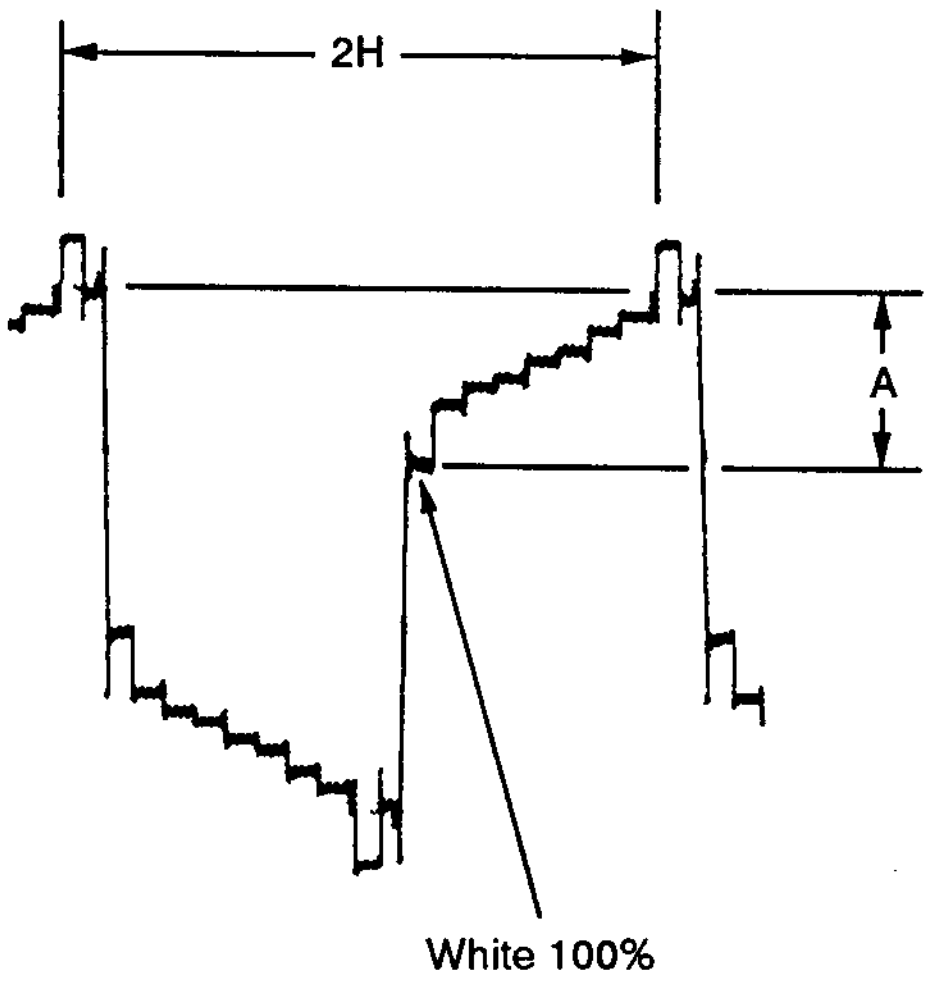

Fig. 7-6.

8. SUB CONT R Adjustment (CL-28 Board)

Mode	E-E (VTR POWER ON)
Signal	Color bar turning off the chroma and burst signals
Measurement Point	Pin ④ of CN904 (R OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	RV906
Specified Value	A=2.4 ± 0.1V

Adjusting method:

1) Adjust the 100% white level (A) to the specified value with RV906.

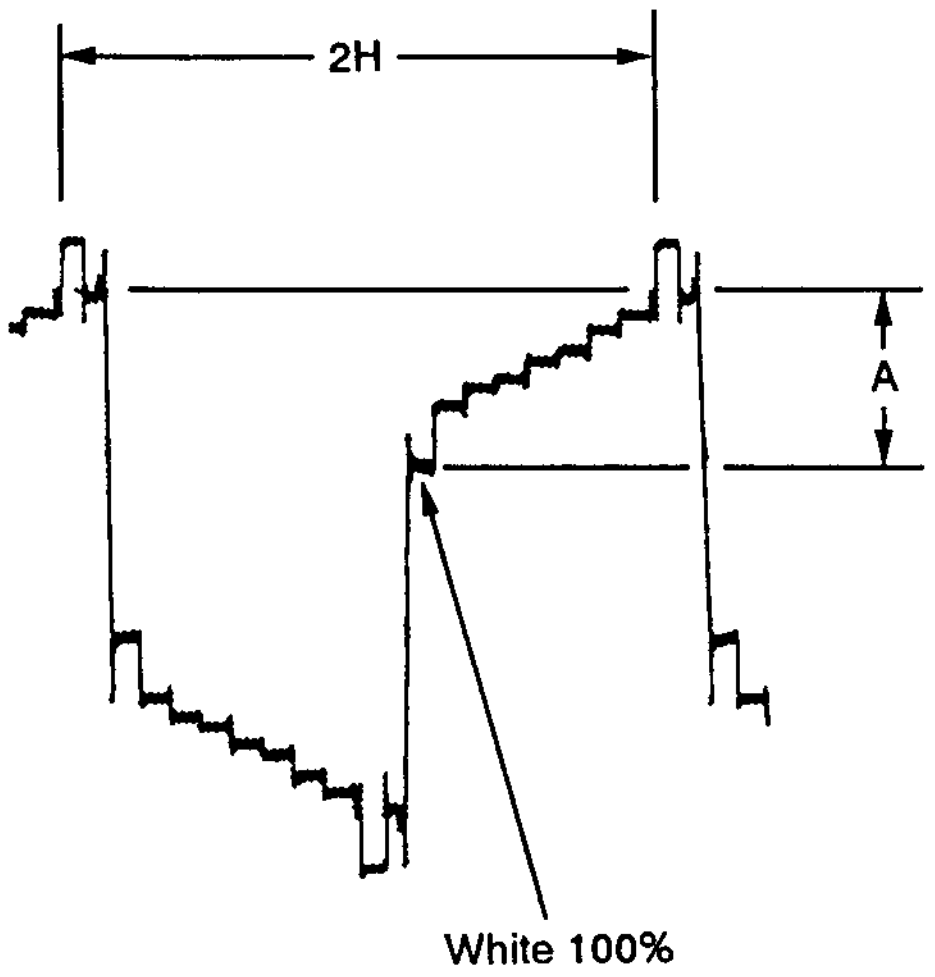

Fig. 7-7.

9. SUB CONT B Adjustment (CL-28 Board)

Mode	E-E (VTR POWER ON)
Signal	Color bar turning off the chroma and burst signals
Measurement Point	Pin ③ of CN904 (B OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	RV907
Specified Value	A=2.4 ± 0.1V

Adjusting method:

1) Adjust the 100% white level (A) to the specified value with RV907.

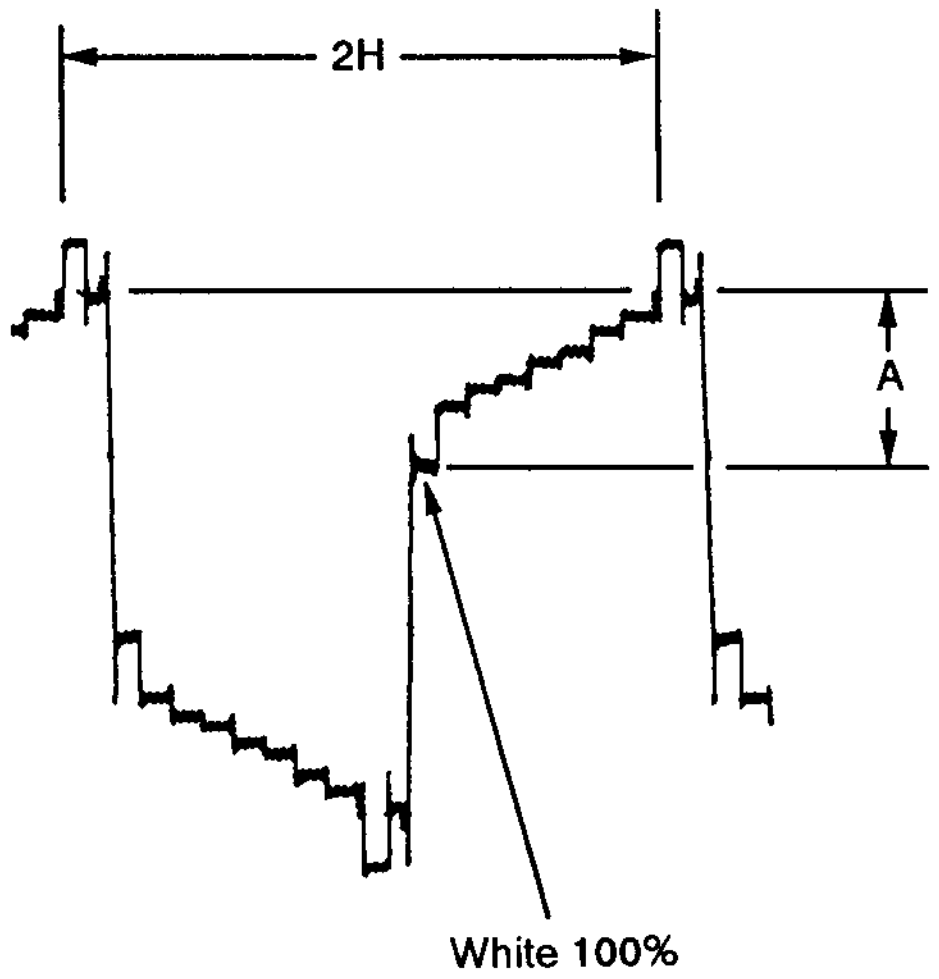

Fig. 7-8.

10. White Balance Adjustment (CL-28 Board)

Mode	E-E (VTR POWER ON)
Signal	Color bar turning off the chroma and burst signals
Measurement Point	Check on the LCD screen
Measuring Instrument	
Adjustment Element	R: RV906 B: RV907
Specified Value	The image should not be colored.

Note: Adjust within 1½ minutes to 1 minute after the power supply has been turned on.

Adjusting method:

1) Check that the LCD screen is not colored. If it is, adjust RV906 and RV907.

11. BRIGHT Adjustment (CL-28 Board)

Mode	E-E (VTR POWER ON)
Signal	Color bar turning off the chroma and burst signals
Measurement Point	Check on the LCD screen
Measuring Instrument	
Adjustment Element	RV901
Specified Value	The first and second black segments can barely be distinguished.

Adjusting method:

1) Fully rotate RV901 in the clockwise direction (↻).
2) Rotate RV901 in the counterclockwise direction slowly until the dividing line between the first and second black segments can barely be distinguished.

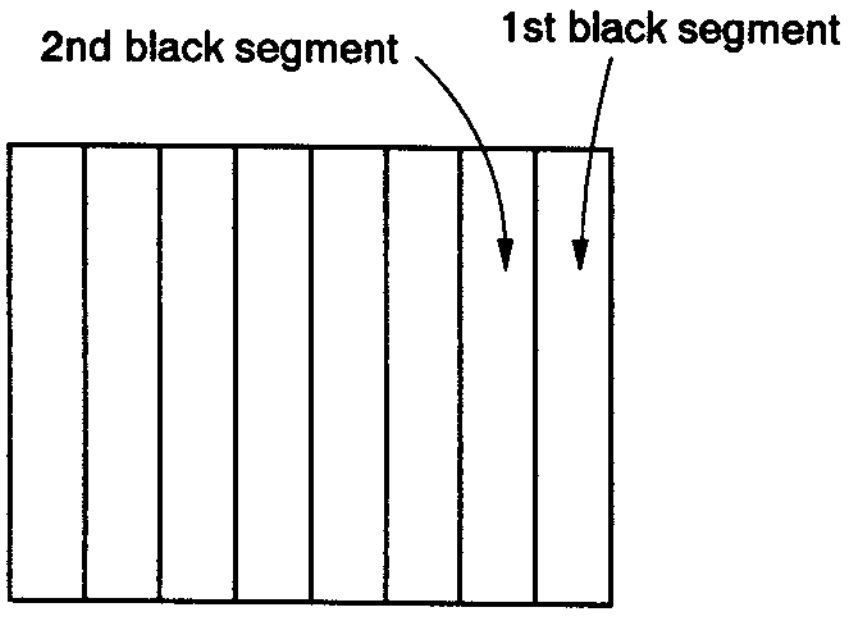

Fig. 7-9.

12. Burst Cleaning Adjustment (CL-28 Board)

Mode	E-E (VTR POWER ON)
Signal	Color bar
Measurement Point	Pin ⑧ of CN904 (G OUT)
Measuring Instrument	Oscilloscope
Adjustment Element	CT901
Specified Value	A=0 ± 100 mV

Adjusting method:

1) Adjust CT901 so that the amplitude of the blue section of the G OUT signal becomes minimum.

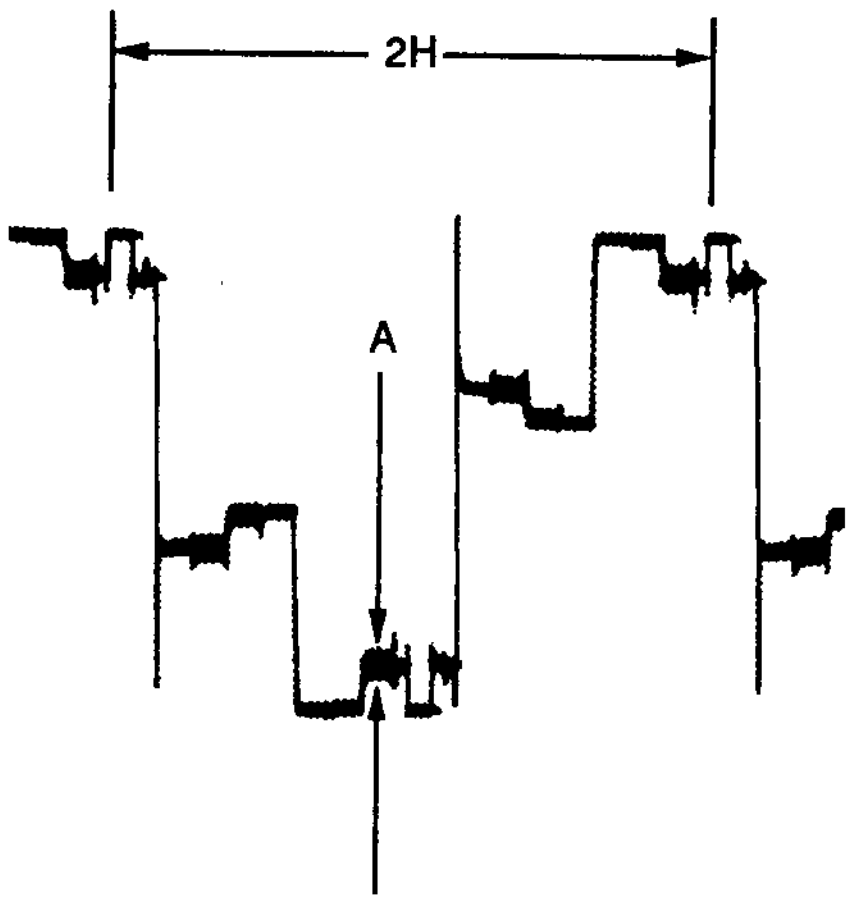

Fig. 7-10.

7-2. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS

CL-28 BOARD (COMPONENT SIDE)

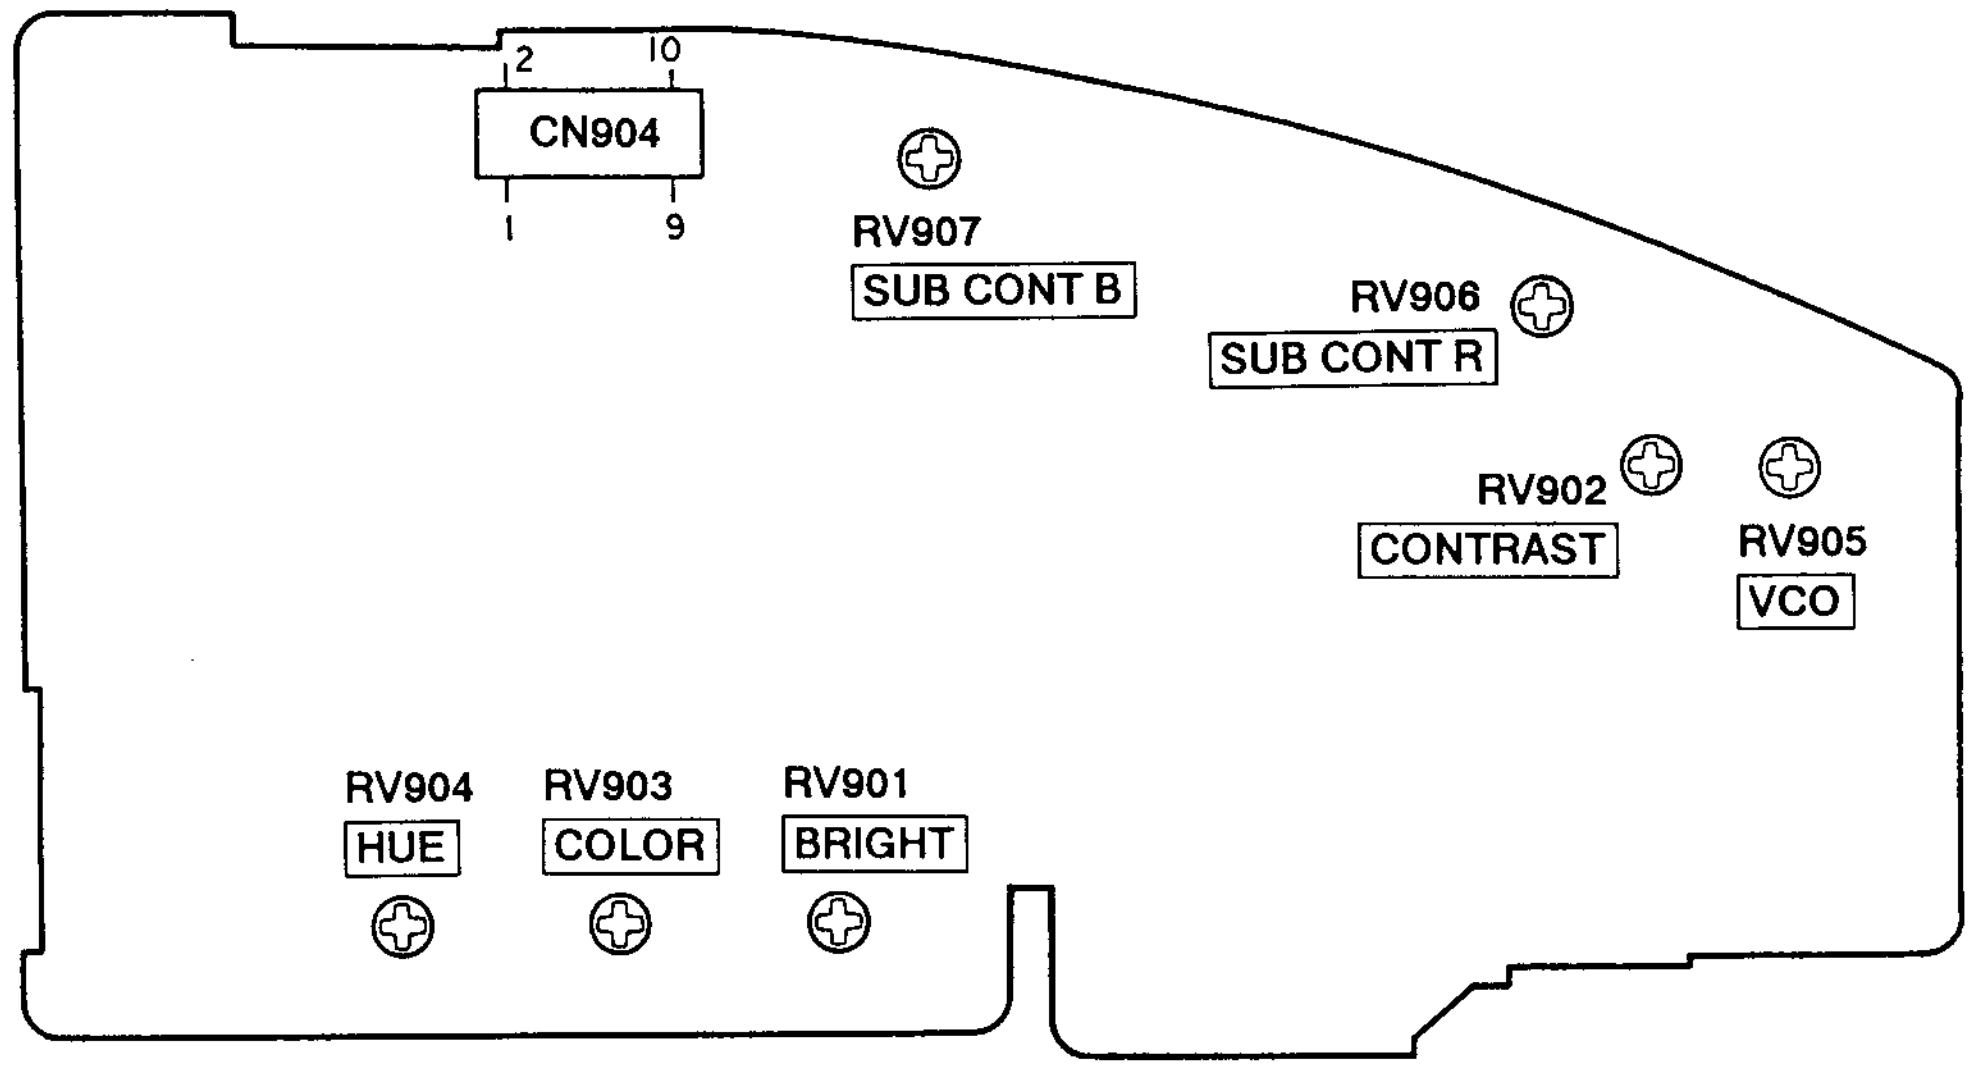
2
10
CN904
1
9
RV907
SUB CONT B
RV906
SUB CONT R
RV902
CONTRAST
RV905
VCO
RV904
HUE
RV903
COLOR
RV901
BRIGHT

IV-10 BOARD (COMPONENT SIDE)

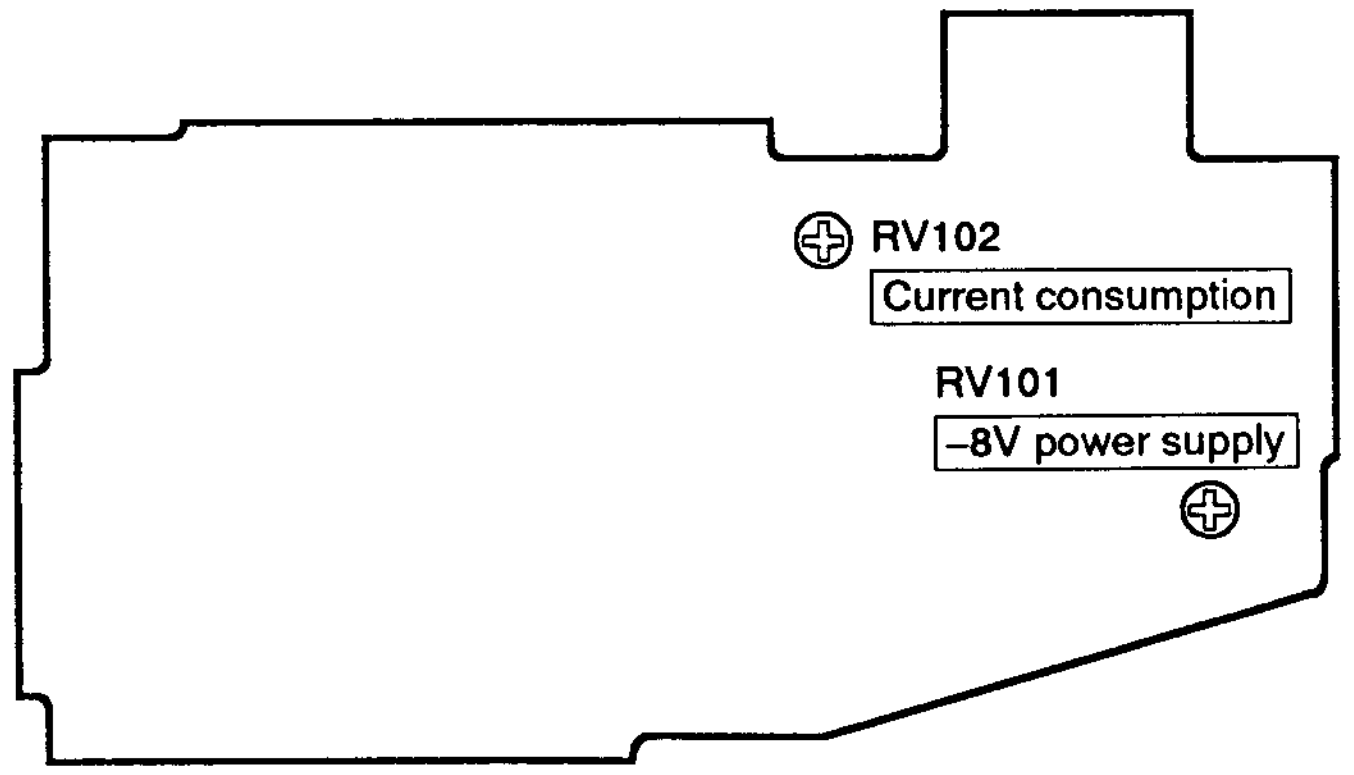
RV102
Current consumption
RV101
–8V power supply

SECTION 8
VIDEO SECTION ADJUSTMENT

8-1. PAGE D ADDRESS LIST

Only address 20 is different from CCD-TR305E.

Address	Name	Function	Adjustment data	
			Initial value	Memo column
20	Permission flag		21	21

CCD-TR305E
RMT-701

SERVICE MANUAL

AEP Model
UK Model
E Model
Australian Model
Tourist Model

Video8
Handycam

FL MECHANISM

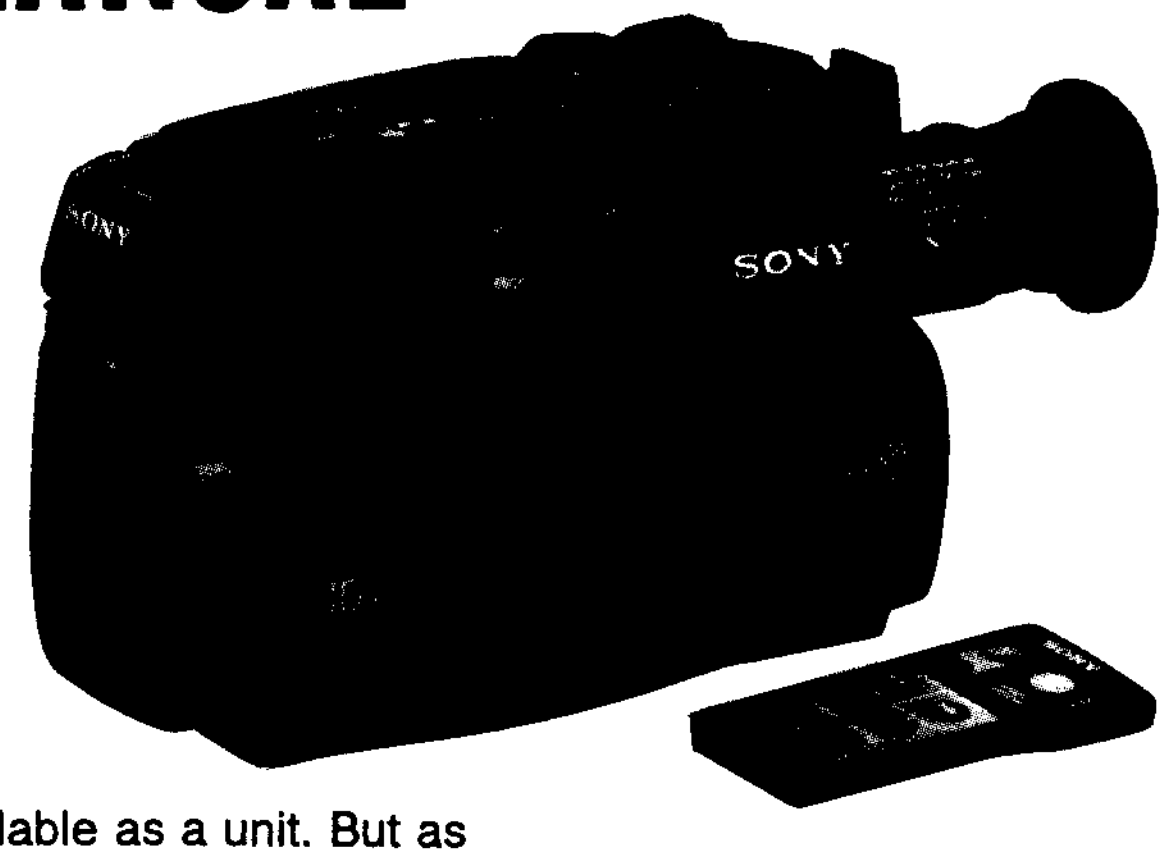

Remote commander is available as a unit. But as individual parts the battery case lid of commander is only avaiable.

For MECHANISM ADJUSTMENTS, refer to the "8 mm Video MECHANICAL ADJUSTMENT MANUAL Ⅱ " (9-972-705-11).

SPECIFICATIONS

System

Video recording system	Four Rotary heads, Helical scanning FM system
Audio recording system	Four Rotary heads, Helical scanning FM system
Video signal	PAL colour, CCIR standards
Usable cassette	8 mm video format cassette
Tape speed	SP mode: Approx. 20.051 mm (13/16 inch)/second LP mode: Approx. 10.058 mm (13/32 inch)/second
Recording time	SP mode: 1 hour and 30 minutes (P5-90) LP mode: 3 hours (P5-90)
Playback time	SP mode: 1 hour and 30 minutes (E5/P5-90) LP mode: 3 hours (P5-90)
Fast-forward/rewind time	Appros. 8.5 min. (E5/P5-90)
Image device	CCD (Charge Coupled Device)
Viewfinder	Electronic viewfinder (black and white)
Lens	Combined 10 × power zoom lens f = 6.2 – 62 mm (1/4 to 2 1/2 inches) F 1.6 (44.6 to 446 mm (1 13/16 to 17 5/8 inches) when converted to a 35-mm still camera) 37 mm (1 1/2 inches)
Autofocus sytem	TTL autofocus sytem inner focus wide macro system
Colour temperature	Automatic
Minimum illumination	3 lx (F 1.6)
Illumination range	3 lx – 100,000 lx (0.3 – 9,920 footcandles)
Recommended illumination	More than 100 lx (9.3 footcandles)

Input and output connector

AEP, UK model

Video output	Phono jack, 1 Vp-p, 75 ohms unbalanced sync negative
Audio output	Phono jack (2) Output: −7.5 dBs (at output impedance 47 kilohms) impedance less than 2.2 kilohms

— Continued on next page —

8 VIDEO CAMERA RECORDER

SONY®

E, Australian, Tourist model

Video input/output	Selectable with IN/OUT selector Phono jack (1), 1 Vp-p, 75 ohms unbalanced sync negative
Audio input/output	Selectable with IN/OUT selector Phono jack (1) Input: –75 dBs, input impedance more than 47 kilohms Output: –75 dBs, (at output impedance 47 kilohms) impedance less than 2.2 kilohms
RFU DC OUT	Special minijack, DC 5 V
Remote jack	Stereo mini-minijack
MIC jack	Stereo minijack, –66 dBs, low impedance with 2.5–3 V DC output, impedance 6.8 kilohms

General

Power requirements	On battery mounting surface 6.0 V (battery pack) 7.5 V (AC power adaptor) 9.0 V (alkaline batteries)
Average power consumption	5.7 W (camera recording) including the viewfinder
Installation	Verically, Horizontally
Operating temperature	0 °C to 40 °C (32° F to 104° F)
Storage temperature	–20 °C to +60 °C (–4° F to +140° F)
Dimensions	Approx. 105 × 99 × 173 mm (w/h/d) (4 1/4 × 4 × 6 7/8 inches)
Weight	Approx. 650 g (1 lb 7 oz) excluding the battery pack, lithium battery, cassette, jack cover, and shoulder strap Approx. 870 g (1 lb 15 oz) including the battery pack NP-55, lithium battery CR2025, cassette P5-90, jack cover, and shoulder strap
Microphone	Electret condenser microphone, stereo type

Supplied accessories

(A)

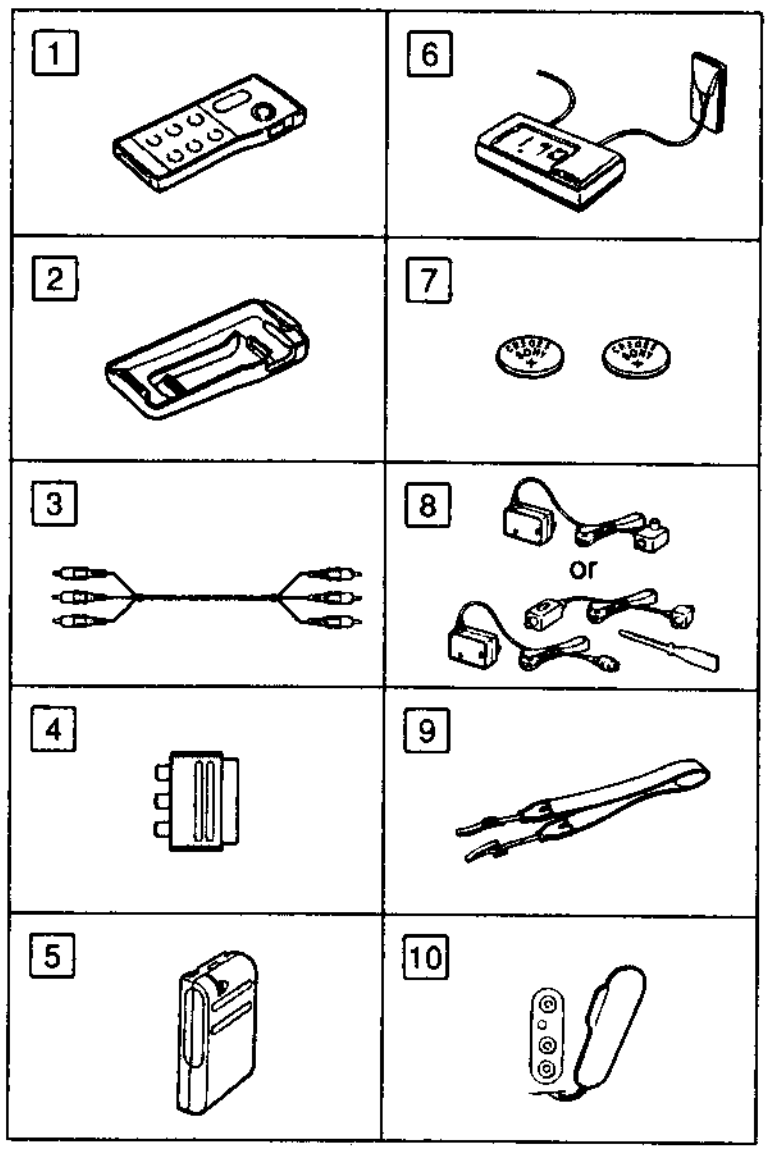

(A)

1 **Wireless Remote Commander (1)**

2 **Remote Commander holder (1)**

3 **A/V connecting cable (3 phono to 3 phono) (1)**

4 **21-pin adaptor (1)**

5 **Battery pack NP-55 (1)**

6 **AC power adaptor AC-V35 or AC-V35A (1)**

7 **Lithium battery CR2025 (2) (for camcorder/for the Remote Commander)**

8 **RFU adaptor**
RFU-90E (1) (AEP model)
RFU-90AS (1) (Australian model)
RFU-89EA with an aerial selector and a screw driver (1) (UK/E/Tourist model)

9 **Shoulder strap (1)**

10 **Jack cover (1) (attached to the camcorder)**

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

Section Title Page

SERVICE NOTE

Semiconductor for Correction List Display 6
Parts Location Diagram Related to Power Supply 6
Semiconductor Location 6
Head Cleaning 6

1. GENERAL

Identifying the Parts 7
Inserting the Lithium Batteries 9
Connecting the Power Sources 10
Setting the Date and Time 12
Inserting a Cassette 13
Adjusting the Viewfinder Lens 14
Recording a Picture Using Automatic Adjustments 14
Selecting the Automatic or Manual Adjustment 17
Manual Focusing 17
Fixing the Focus to the Object 18
Adjusting the Exposure 18
Using the PROGRAM AE Function 19
Using the Digital Picture Function 19
Fade-in and Fade-out 20
Using the World Clock 20
Superimposing a Title 22
Playing Back a Tape 23
Using the Tape Counter 24
Editing onto Another VTR 25
Hints for Better Shooting 25
Notes and Precautions 26
Indicators inside the Viewfinder and in the Display Window 27

2. DISASSEMBLY

2-1. Removal of F Panel Assembly 28
2-2. Removal of Cabinet (L) Assembly and Terminal Board (JK-3100) 28
2-3. Removal of Cassette LID Assembly 29
2-4. Removal of Cabinet (R) Assembly 29
2-5. Removal of Control Switch Block (CF-3200) 30
2-6. Removal of DD-47P Board (DC-DC Converter Unit) 30
2-7. Removal of Control Switch Block (ZM-3200) 30
2-8. Removal of Lens Assembly (CD-84P Board) 31
2-9. Opening of VC-112P Board 31
2-10. Removal of VS-93P Board 31
2-11. Removal of EVF Assembly (VF-42P Board) 32
2-12. Removal of Cassette Compartment Holder Assembly ... 32
2-13. Internal views 33

3. DIAGRAMS

3-1. Circuit Boards Location 34
3-2. Overall Block Diagram 35
3-3. Camera (1) Block Diagram 39
3-4. Camera Microprocessor Pin Function (IC709 on VC-112P Board: CXP80624-285R/298R) 43
3-5. Camera (2) Block Diagram 45
3-6. Video (1) Block Diagram 48
3-7. Video (2) Block Diagram 53
3-8. Servo Block Diagram 56
3-9. System Control Block Diagram 59
3-10. Mechanism Control Microprocessor Pin Function (IC401 on VS-93P Board: CXP80624) 63
3-11. Mode Control Microprocessor Pin Function (IC501 on LC-40P Board: μPD75316) 67
3-12. Interface 69
  3-12-1. System Control – Video/Audio Block Interface (VS-93P Board) 69
  3-12-2. System Control – Servo Block Interface 73
3-13. Audio Block Diagram 76
3-14. EVF Block Diagram 79
3-15. Power Block Diagram 82

4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. Frame Schematic Diagram 85
4-2. Printed Wiring Boards and Schematic Diagrams 88
- CD-84P Board 89
- VC-112P Board (Camera Process, Lens Drive) 94
- VC-112P Board (Camera Process) 97
- VC-112P Board (Lens Drive) 105
- VS-93P Board (REC/PB Head Amp, Video, Servo/System Control, PAL JOG) 108
- VS-93P Board (REC/PB Head Amp) 111
- VS-93P Board (Video) 115
- VS-93P Board (Servo/System Control) 119
- VS-93P Board (PAL JOG) 123
- LC-40P, CN-64P Boards 125
- CF-3200, MF-175P Boards 130
- LJ-9P, FP-115, ZM-3200, JK-3100 Boards 135
- AU-135P, MA-143P Boards 139
- VF-42P Board 146
- DD-47P Board 151

4-3. Semiconductors 155

5. EXPLODED VIEWS

5-1. Cabinet (L) and F Panel Assemblies 156
5-2. Cabinet (R) and EVF Assemblies 157
5-3. Main Boards Assembly 158
5-4. Cassette Compartment Holder Assembly 159
5-5. LS Chassis Assembly 160
5-6. Mechanism Chassis Assembly (1) 161
5-7. Mechanism Chassis Assembly (2) 162

6. ELECTRICAL PARTS LIST 163

HARDWARE LIST 184

Section Title Page

7. CAMERA SECTION ADJUSTMENTS

7-1. Preparations Before Adjustment (Camera Section) 185
  7-1-1. List of Service Tools 185
  7-1-2. Preparations 187
  7-1-3. Precautions 188
    1. Switch settings 188
    2. Adjustment Procedure 188
    3. Subject 188
  7-1-4. Adjusting Remote Control Unit 189
    1. Using the adjusting remote control unit 189
    2. Precautions upon using the adjusting remote control unit 189
  7-1-5. Page F Address List 190
  7-1-6. 6 Page, 1 Page Address List 196
    1. Page 6 196
    2. Page 1 197
  7-1-7. Adjustment Connector 197
  7-1-8. Data Processing 198
7-2. Camera System Adjustment 199
  1. Power Supply Voltage Check (DD-47P board) 199
  2. Page F Data Initialization 199
  3. Page F Data Modification 200
  4. 28 MHz Original Oscillation Adjustment (VC-112P board) 201
  5. V SUB Adjustment (VC-112P board) 201
  6. VRG Adjustment (VC-112P board) 201
  7. CCD Imager Correction Data Write 201
  8. HALL Adjustment 202
  9. Flange Back Adjustment 203
  10. Flange Back Check 203
  11. SYNC Level Adjustment (VC-112P board) 204
  12. BURST Level Adjustment (VC-112P board) 204
  13. A/D Offset Adjustment 205
  14. Carrier Balance Adjustment 205
  15. Picture Frame Setting 206
  16. IRIS Level Adjustment (VC-112P board) 207
  17. MAX GAIN Adjustment (VC-112P board) 207
  18. IRIS IN/OUT Adjustment 208
  19. Pre-white Balance Adjustment 208
  20. Color Reproduction Adjustment 209
  21. Auto White Balance Preset Adjustment 210
  22. Auto White Balance Adjustment 210
  23. White Balance Check 211
  24. Linear Matrix Adjustment 212
  25. VIDEO OUT Level Check 213
  26. Title Color Reproduction Adjustment 213
7-3. Electronic Viewfinder System Adjustments 214
  7-3-1. Horizontal Slant Adjustment 214
  7-3-2. Centering Adjustment 214
  7-3-3. Focus Adjustment 214
  7-3-4. Aberration Adjustment 215
  7-3-5. Horizontal Oscillation Frequency Adjustment (VF-42P board) 215
  7-3-6. Horizontal Amplitude Adjustment (VF-42P board) 215
  7-3-7. Vertical Amplitude Adjustment (VF-42P board) 216
  7-3-8. Brightness, Contrast Adjustments (VF-42P board) 216
  7-3-9. Horizontal Amplitude, Vertical Amplitude, Focus Check 216
7-4. Arrangement Diagram for Adjustment Parts 218

Section Title Page

8. MECHANICAL SECTION ADJUSTMENTS

8-1. Operating with the Cassette Compartment Holder Assembly Removed (Refer to Fig. 8-1.) 223
8-2. Tape Path Adjustment 225

9. VIDEO SECTION ADJUSTMENT

9-1. Preparations Before Adjustment 226
  9-1-1. Equipments to be used 226
  9-1-2. Connecting the equipments 226
  9-1-3. How to Set the REC Mode in the Model without REC Switch 227
  9-1-4. Precautions upon adjustment 227
  9-1-5. Connectors for adjustments (VS-93P board CN002) 227
  9-1-6. Set-up during Adjustment 227
  9-1-7. Alignment Tape 228
  9-1-8. Input/Output Level and Impedance 229
  9-1-9. Service Mode 230
    1. Setting the Service mode 230
    2. Types of Self-diagnostic Feature 232
    3. Page D Write Protect 232
    4. Page F Write Protect 232
    5. Test Mode Setting 233
    6. Emergency code 233
    7. Emergency mode 234
    8. Bit value Discrimination 234
    9. Check of Tape Distinction Switch, etc. 235
    10. Mode Switch Check 236
    11. Mechanism Control Micro Processor Input/Output Signal Level Check 237
    12. Mechanism Control A/D Port Input Voltage Check 238
    13. Tape Top/End Sensor Condition Check 236
    14. Battery Voltage Check 238
    15. Individual Operations of the Drum, Capstan, and Loading Motor 238
    16. Mode control micro processor key matrix check 239
    17. Wireless Remote Control Unit Reception Content Check 239
    18. REC MODE/EDIT Switch, Remote Commander Switch Check 240
    19. HIFI Sound Switch, IN/OUT Switch Check 240
    20. White Balance Mode and Focus Mode Display/Switchover 240
    21. LCD, LED Check, etc. 240
    22. Page D Address List 241
9-2. Power System Adjustments 244
  1. Oscillator Frequency Check (DD-47P board) 244
  2. Power Voltage Check (DD-47P board) 244
9-3. System Control System Adjustments 245
  1. Page D Initial Value Input 245
  2. Battery End Adjustment 245
  3. Battery Down Check 246
9-4. Servo System Adjustments 246
  1. Switching Position Adjustment (VS-93P board) 246
  2. CAP FG Duty Adjustment (VS-93P board) 247

Section Title Page

9-5. Video Adjustments ········ 247
1. Playback Frequency Characteristic Adjustment (VS-93P board) ········ 248
2. Flying Erase Check (VS-93P board) ········ 249
3. VXO Oscillation Frequency Check (VS-93P board) ··· 249
4. EE Level Adjustment (VS-93P board) ········ 249
5. IR Adjustment (VS-93P board) ········ 250
6. Y/C Separation Adjustment (VS-93P board) ········ 250
7. Emphasis Input Level Adjustment (VS-93P board) ···· 251
8. PB Y Level Adjustment (VS-93P board) ········ 251
9. PB LINE OUT Level Adjustment ········ 252
10. Y FM Carrier Frequency Adjustment (VS-93P board) ········ 252
11. Deviation Adjustment (VS-93P board) ········ 253
12. Chroma Emphasis f0 Adjustment (VS-93P board) ····· 253
13. REC Y Level Adjustment (VS-93P board) ········ 254
14. REC C Level Adjustment (VS-93P board) ········ 254
15. REC ATF Level Check (VS-93P board) ········ 255
16. REC AFM Level Check (VS-93P board) ········ 255
9-6. Audio System Adjustment ········ 256
1. IR Adjustment (AU-135P board) ········ 257
2. 1.5 MHz Carrier Frequency Check (AU-135P board) ········ 257
3. 1.7 MHz Carrier Frequency Check (AU-135P board) ········ 257
4. 1.5 MHz Record Level Check (AU-135P board) ········ 257
5. 1.7 MHz Record Level Check (AU-135P board) ········ 258
6. E-E Output Level Check (AU-135P board) ········ 258
7. REC Matrix L-R Adjustment (AU-135P board) ········ 258
8. REC Matrix L+R Check (AU-135P board) ········ 258
9. 1.5 MHz Deviation Adjustment (AU-135P board) ······· 259
10. 1.7 MHz Deviation Adjustment (AU-135P board) ······· 259
11. PB Matrix L Adjustment (AU-135P board) ········ 260
12. PB Matrix R Check (AU-135P board) ········ 260
13. Overall Level Characteristic, Distortion Check (AU-135P board) ········ 260
14. Separation Check (AU-135P board) ········ 261
15. Overall Noise Level Check (AU-135P board) ········ 261
9-7. Arrangement Diagram for Adjustment Parts ········ 262

There is the color reproduction standard frame at the back of the book.

SERVICE NOTE

[SEMICONDUCTOR FOR CORRECTION LIST DISPLAY]

Part code and part name of the semiconductor for correction of the print board is discribed in the space of each print figure. Use this list when ordering parts.

[PARTS LOCATION DIAGRAM RELATED TO POWER SUPPLY]

The parts location diagram for the power supply which are often checked and replaced when repairing the fuse and IC link and so on. (See pages 108 and 120.)
This diagram is useful for repair.

[SEMICONDUCTOR LOCATION]

In this service manual, the mounted locations of the semiconductors (IC, transistor, diodes) are indicated in red as shown below. This enables to find the location on the board easily when servicing.

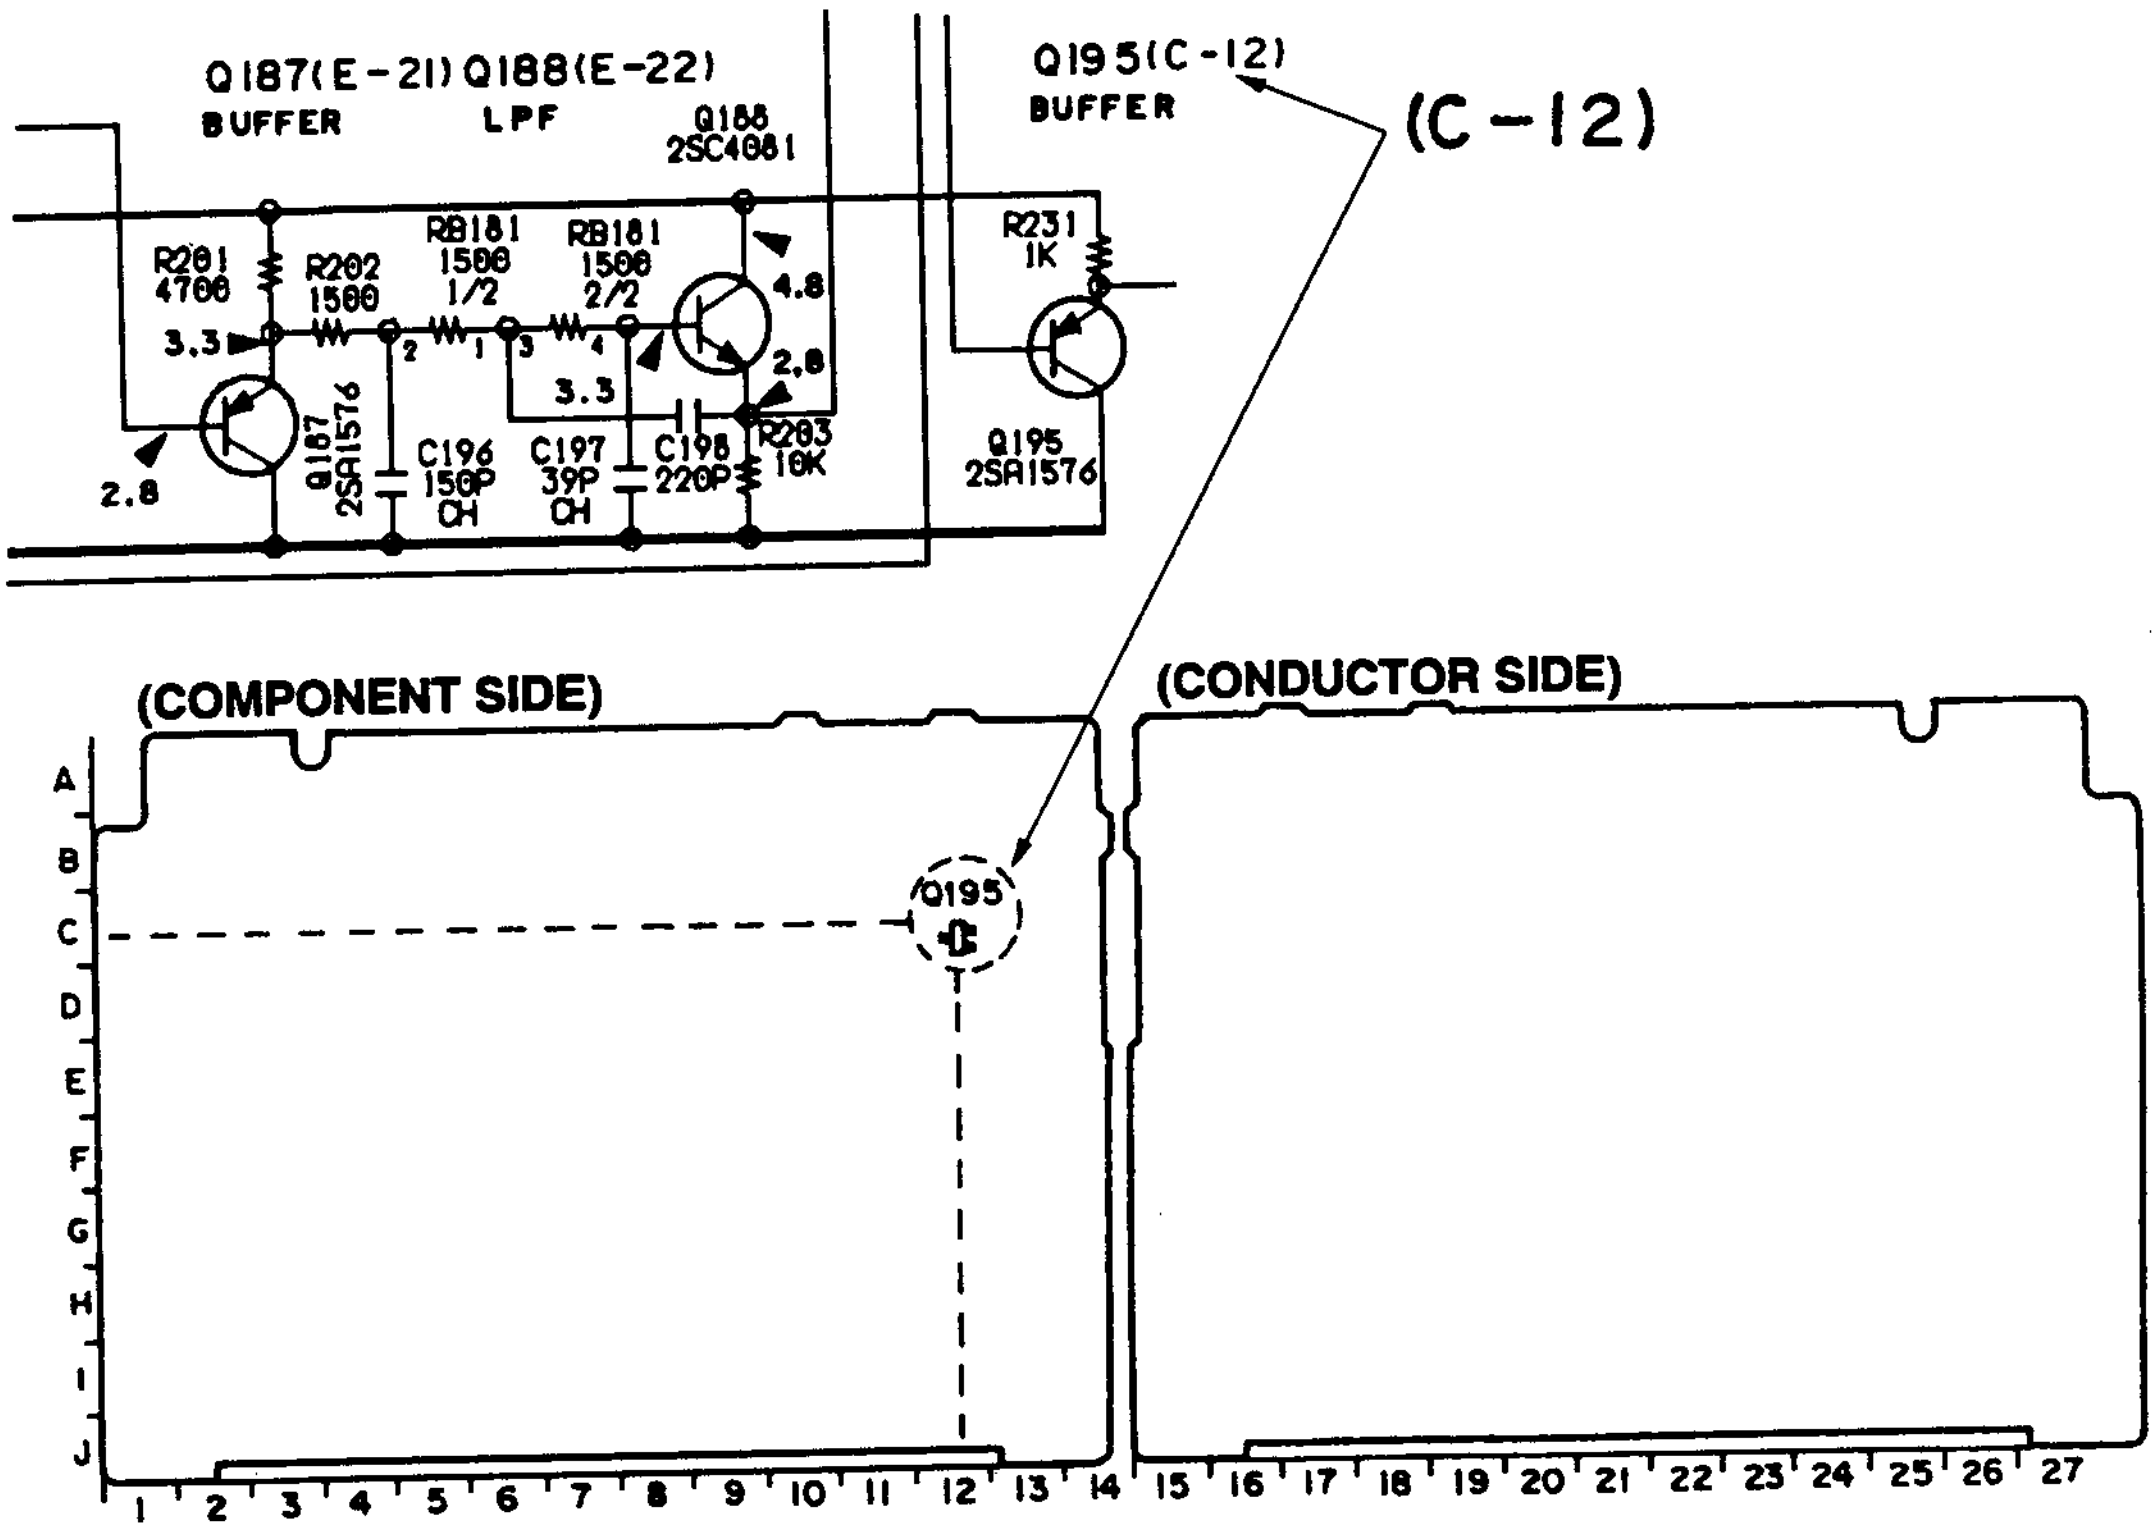
Q187(E-21) Q188(E-22)
BUFFER
LPF
Q188
2SC4081
Q195(C-12)
BUFFER
(C-12)
R201
4700
R202
1500
RB181
1500
1/2
RB181
1500
2/2
3.3
4.8
2.8
3.3
2.8
Q187
2SA1576
C196
150P
CH
C197
39P
CH
C198
220P
R203
10K
R231
1K
Q195
2SA1576
(COMPONENT SIDE)
(CONDUCTOR SIDE)
Q195
A
B
C
D
E
F
G
H
I
J
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27

[HEAD CLEANING]

After an extended period of use the video image may become indistinct or may not appear at all during playback of a tape. The cause of this usually are dirty video heads. For remedy, cleaning of the heads is required.

Check for Head Clogs During Recording

① Use a blank tape, record a short section, then press the stop button to stop.
② Set to recording mode again.
③ If the [✲] mark is flashing in the viewfinder at this time, head clogs are occurred.

Check During Playback of a Tape

① Play back a pre-recorded tape and display the image on a TV screen.
② If there is no sound and the image is unstable, no image appears on the screen, or tape transport is unstable, head clogs are occurred.

Remedy

[Cleaning method using a cleaning tape]

- Use the Cleaning Tape. (Please follow the instructions attached to the cleaning tape.)

SECTION 1

GENERAL

This section is extracted from instruction manual of AEP/UK model.

Identifying the Parts

(B-1)

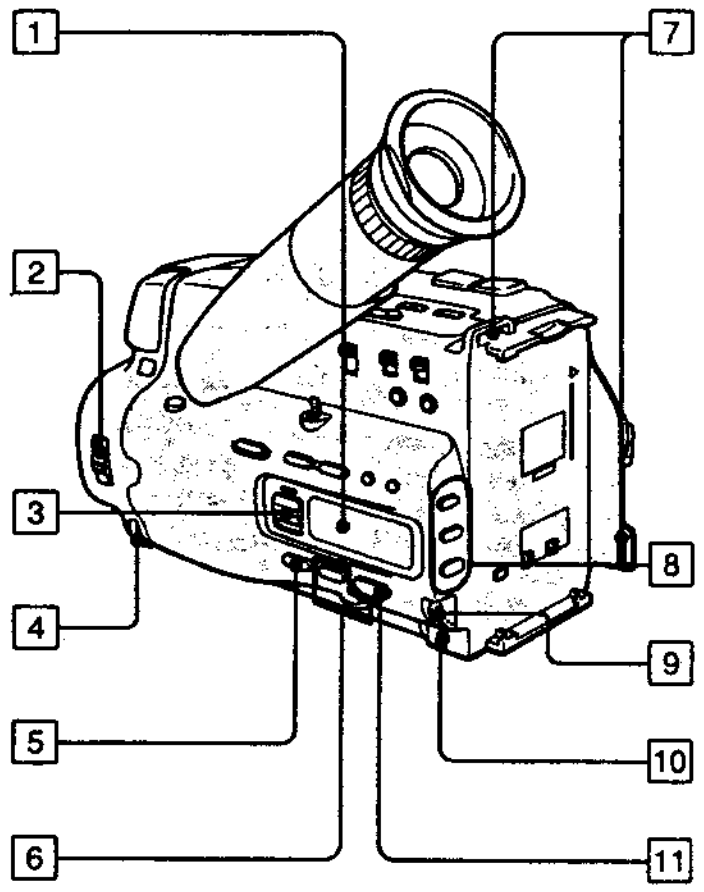

For details on the use of each control, refer to the pages indicated in the circle.

(B-1)

1 **Display window ●**

2 **LENS COVER switch ●**

3 **AUTO LOCK switch ●, ●**

4 **FOCUS MANUAL dial ●**

5 **FOCUS button ●**

6 **EXPOSURE button and EXPOSURE dial ●**

7 **Hooks for shoulder strap**

8 **Superimpose buttons ●–●**

MEMORY button
COLOR/MODE button
SUPERIMPOSE ON/OFF button

9 **BATT (battery eject) knob ●**

10 **REMOTE ⏚ (LANC)* control jack (stereo mini-mini-jack)**
Connect a wired remote control unit, an editing controller, or other equipment here.

11 **PROGRAM AE button ●**

*** About ⏚ (LANC)**
⏚ (LANC) stands for Local Application Control Bus System. The ⏚ (LANC) connector is used for controlling the tape transport of video equipment and the peripherals connected to it. This connector has the same function as the connectors indicated as CONTROL L or REMOTE.

Identifying the Parts

(B-2)

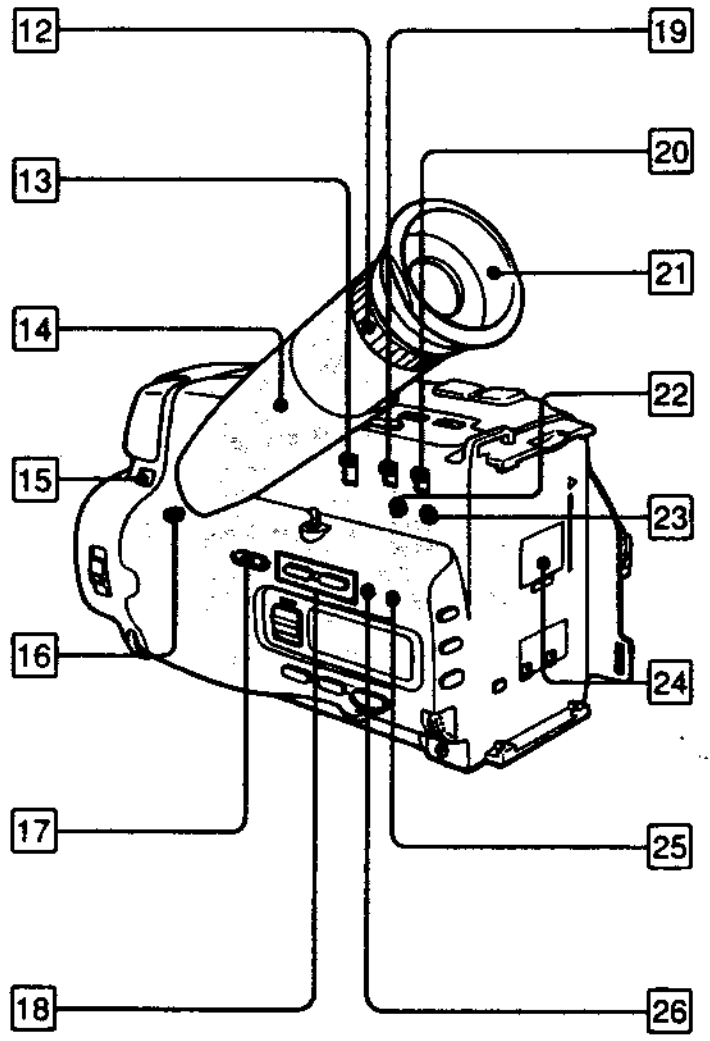

(B-2)

12 **Viewfinder lens adjustment ring ●**

13 **Hi-Fi SOUND switch ●**

14 **Viewfinder ●**
You can monitor the monochrome picture being recorded or played back.

15 **Remote sensor ●**

16 **PUSH FOCUS HOLD button ●**

17 **DIGITAL PICTURE button ●**

18 **DATE (+) and TIME (NEXT) buttons ●**

19 **REMOTE COMMANDER ▣ ON/OFF switch ●**

20 **REC MODE (recording mode)/EDIT switch ●, ●**

Mode	Recording	Playback	Editing
Setting	REC MODE SP LP	EDIT	EDIT
Function	Recording mode switch	EDIT switch	

21 **Eyecup**

22 **SUMMERTIME button ●**

23 **AREA button ●**

24 **Lithium battery compartment ●**

25 **ZERO MEM (zero memory) button ●, ●**

26 **COUNTER RESET button ●**

(B-3)

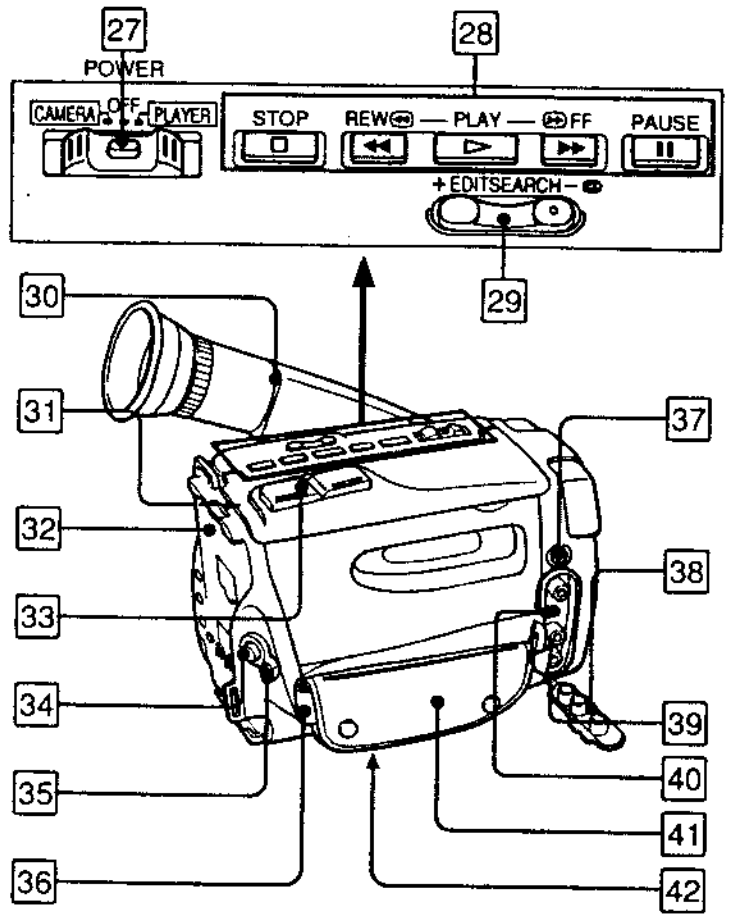

(B-4)

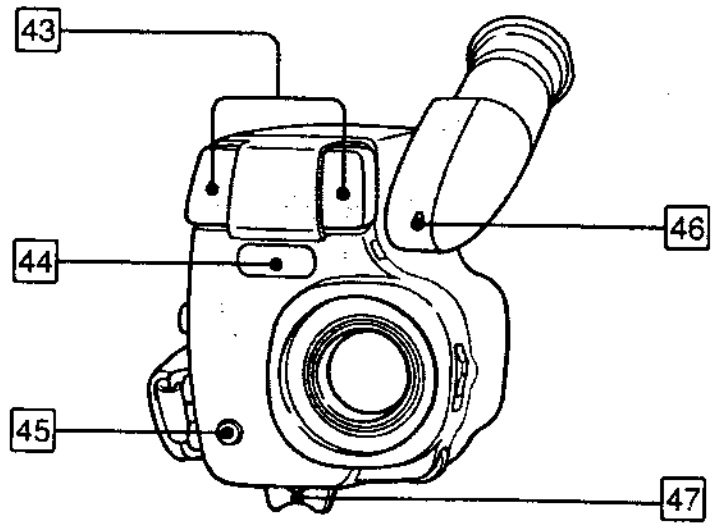

(B-5)

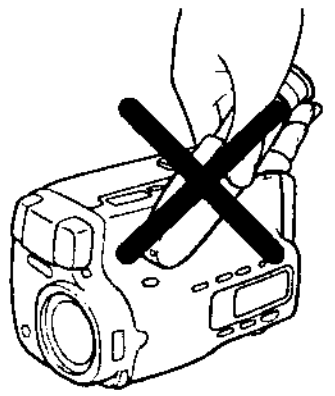

(B-3)

27 **POWER switch**

28 **Tape transport buttons**
▷ PLAY (playback)
▶▶ FF (fast forward)
◀◀ REW (rewind)
□ STOP
❚❚ PAUSE

29 **EDITSEARCH ⊜ button ㉖, ㉗**

30 **Camera recording/battery lamp**

31 **EJECT button (below the lid) ㉑**

32 **Battery mounting surface**

33 **Power zoom button ㉕, ㉙**

34 **START/STOP button ㉓**

35 **STANDBY switch ㉓**

36 **Grip strap**

37 **MIC jack (PLUG IN POWER) (stereo minijack**

38 **Jack cover**

39 **VIDEO/AUDIO output jacks (phono jacks) ㊶–㊹**

40 **RFU DC OUT (RFU adaptor DC output) jack (special minijack) ㊷, ㊸**

41 **Grip strap cover**

42 **Tripod receptacle (bottom)**

(B-4)

43 **Built-in microphone (stereo)**

44 **Remote sensor ⑦**

45 **FADER button ㉞**

46 **Camera recording/battery lamp**

47 **Stand**

Caution (B-5)
Do not pick up the camcorder as shown in the illustration.

(B-6)

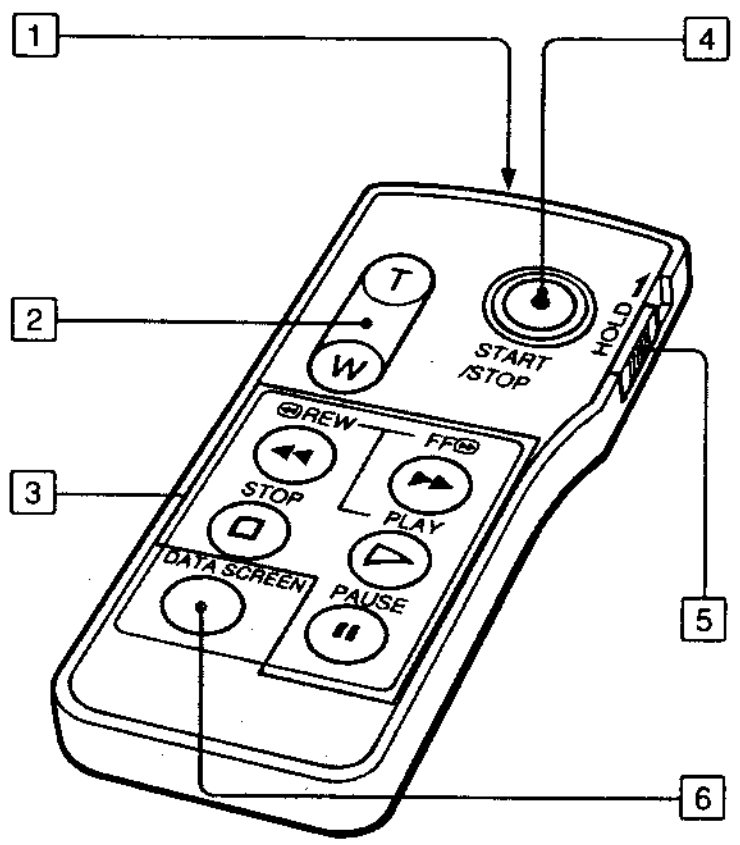

(B-7)

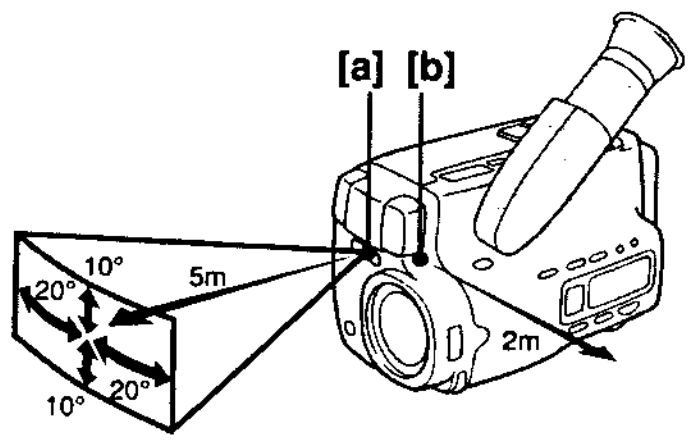

Wireless Remote Commander

You can remotely record or play back a tape. The buttons on the Remote Commander with the same name or same mark as those on the camcorder have the same function.

When you use the Remote Commander
Be sure to insert the supplied lithium battery into it (page 10) and to set REMOTE COMMANDER ◘ ON/OFF on the camcorder to "ON".

(B-6)

1 **Transmitter**

2 **Power zoom button**

3 **Tape transport buttons**

4 **START/STOP button**

5 **HOLD switch***
Slide in the direction of the arrow to prevent the buttons from being accidentally depressed.

6 **DATA SCREEN button* ㊻**
Press to erase or display the on-screen display.

Note
The * indicates the function which is operable only with the Remote Commander.

Remotely controllable area (B-7)
Point the Remote Commander towards the remote sensor [a].
The unit has another remote sensor [b].

Notes on the Remote Commander

- **Keep the remote sensor away from strong light sources such as direct sunlight or illumination. Otherwise the remote control may not be effective.**
- Be sure that there is no obstacle between the remote sensor and the Remote Commander.
- This camcorder works through the signals of commander mode VTR 2. A commander mode is used to distinguish this camcorder from other Sony VTR to avoid misoperation. If you use another Sony VTR at commander mode VTR 2, we recommend you change the commander mode or cover the remote sensor of the VTR with black paper.

(B-8)



(B-9)

[a]

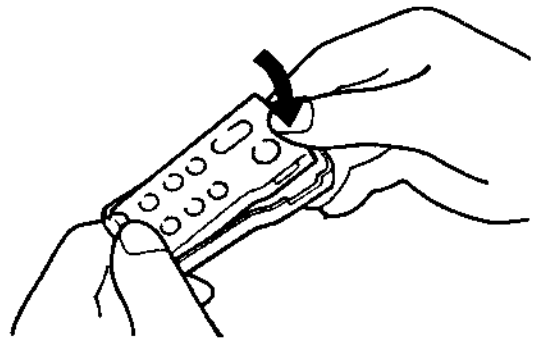

[b]

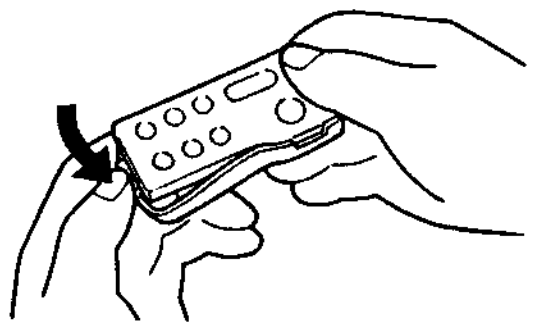

Using the Remote Commander holder
You can clip the Remote Commander holder on your coat pocket or belt, or also slide it onto the shoulder belt before attaching the Remote Commander to it. **(B-8)**

(B-9)

[a] When attaching the Remote Commander to the Remote Commander holder

[b] When detaching the Remote Commander from the Remote Commander holder

(C-1)

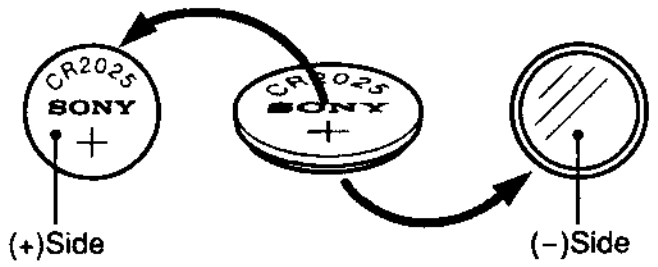

(C-2)

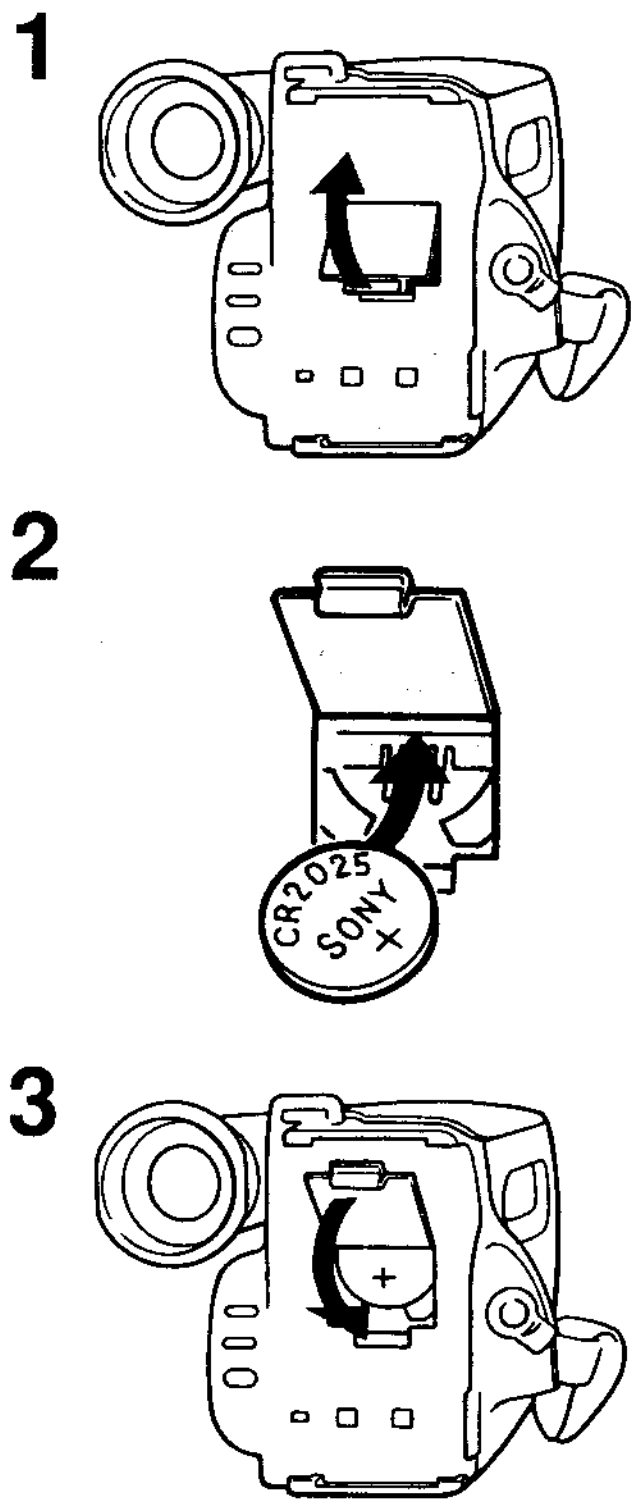

Preparing your camcorder 1

Inserting the Lithium Batteries

Your camcorder is supplied with two lithium batteries. One is for the camcorder, and the other is for the Remote Commander. Note that the lithium battery has a + (plus) side and a – (minus) side as illustrated. **Be sure to install the lithium battery with the correct polarity. (C-1)**

Inserting the Lithium Battery into the Camcorder

(C-2)

This camcorder uses a lithium battery to activate the clock and to keep a title in memory. At first install the supplied lithium battery.

1. **Open the lid of the lithium battery compartment.**
2. **Install the supplied CR2025 lithium battery with the + side facing out.**
3. **Close the lid.**

To change the lithium battery
Remove the battery pack, open the lid of the lithium battery compartment, and replace the lithium battery with a new one.
After replacing the battery, readjust the date, time and title.

(C-3)

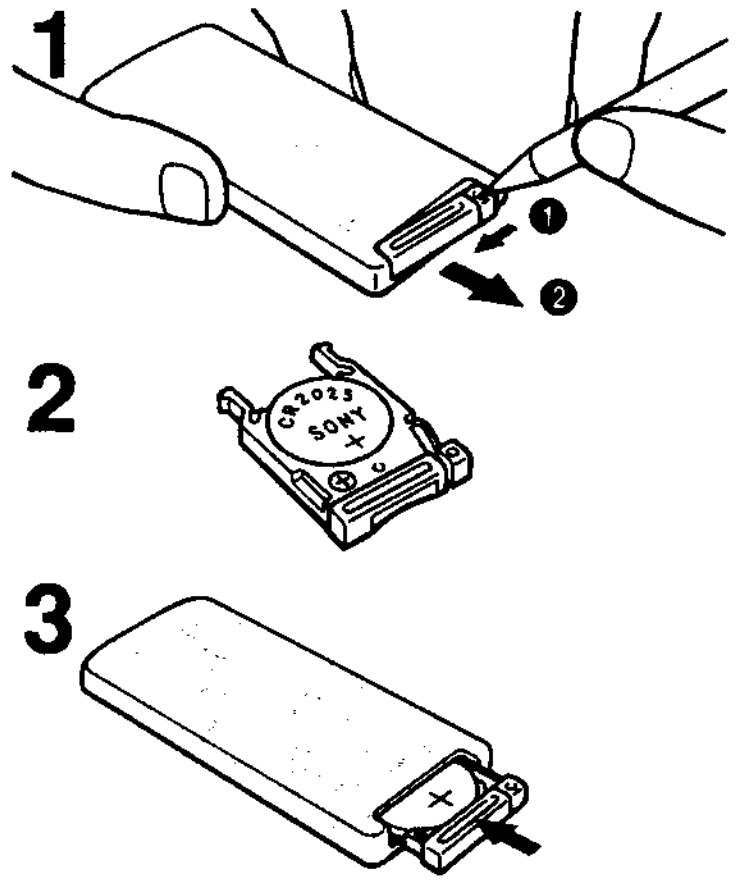

Inserting the Lithium Batteries

Inserting the Lithium Battery into the Remote Commander

(C-3)

1 **Pull out the lithium battery holder from the Commander.**

2 **Install the lithium battery with the + side facing upward.**

3 **Put the lithium battery holder back into the Commander.**

(C-4)

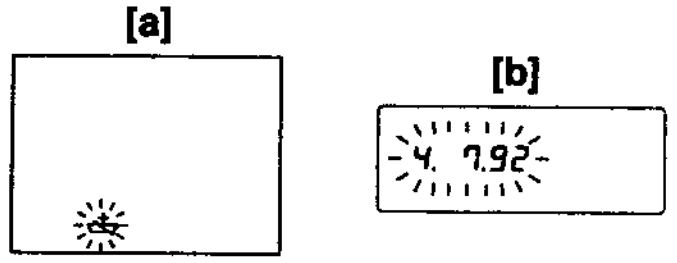

Lithium battery life (under normal operation)
(C-4)

The battery for the camcorder lasts for approximately 1 year.
When the battery becomes weak, the 🔋 indicator will flash inside the viewfinder for about 5 seconds (when the POWER switch is set to CAMERA) **[a]** and the tape counter or date (or time) will flash in the display window for about 5 seconds **[b]**.
The battery for the Remote Commander lasts for approximately 6 months. When the battery becomes weak or dead, the Commander does not work.
In either case, replace the battery with a Sony CR2025 battery. Use of any other type of battery may present the risk of fire or explosion.

CAUTIONS
- Keep the lithium battery out of the reach of children.
  Should the battery be swallowed, immediately consult a doctor.
- Do not hold the battery with the metallic tweezers, otherwise a short-circuit may occur.
- The battery may explode if mistreated.
  Do not recharge, disassemble, or dispose of in fire.

(D-1)

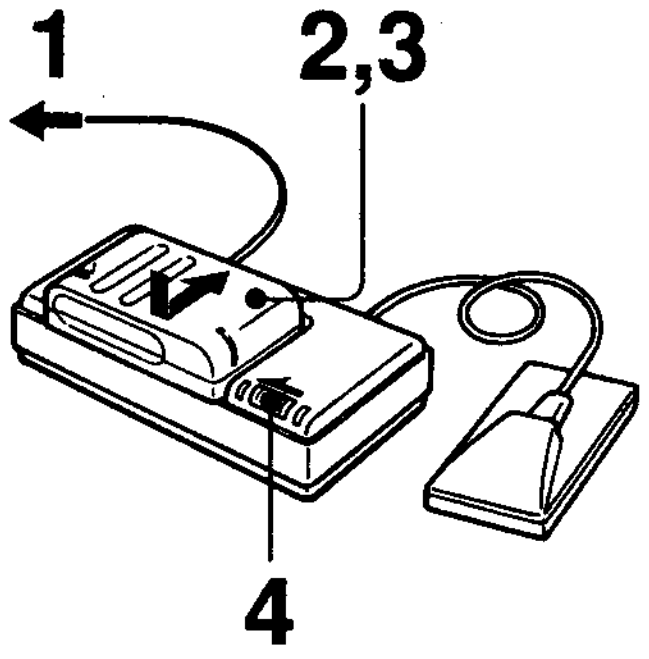

Preparing your camcorder 2

Connecting the Power Sources

First, Choose the Power Source.

Place	**Power source**	**Accessory to be used**
Outdoors	Battery pack	Battery pack NP-55 (supplied), NP-55H, NP-66H, NP-77, NP-77H, NP-77HD
	Alkaline batteries	Battery case EBP-77
Indoors	House current	AC power adaptor AC-V35 or AC-V35A (supplied), AC-V55, AC-S10
In the car	12V or 24V car battery	DC pack DCP-77, AC power adaptor AC-V55, the car battery cord DCC-16AE and the car battery charger DC-S10

For details, see the operation manual of the accessory you want to use.

Using the Battery Pack

Step 1

Charge the battery pack. (D-1)

1 **Connect the AC power adaptor to a wall outlet.**

2 **Align the right side of the battery pack with the line on the AC power adaptor.**

3 **Slide in the battery pack to the right.**

4 **Set the selector to "CHARGE" position.**
When charging is finished, the charge lamp goes out.

	NP-55	NP-55H	NP-77H/ 77HD	NP-77	NP-66H
Required charging time*	60	70	140	120	110
Battery life**	55	65	120	105	90

* Approximate minutes using AC-V35 or AC-V35A
** Approximate minutes using fully charged battery pack, continuous recording indoors

(continued)

(D-2)

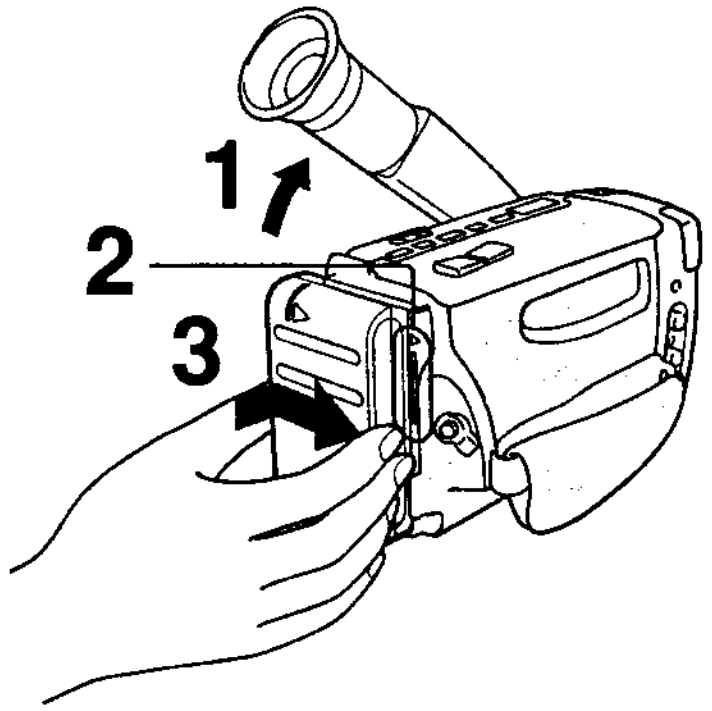

(D-3)

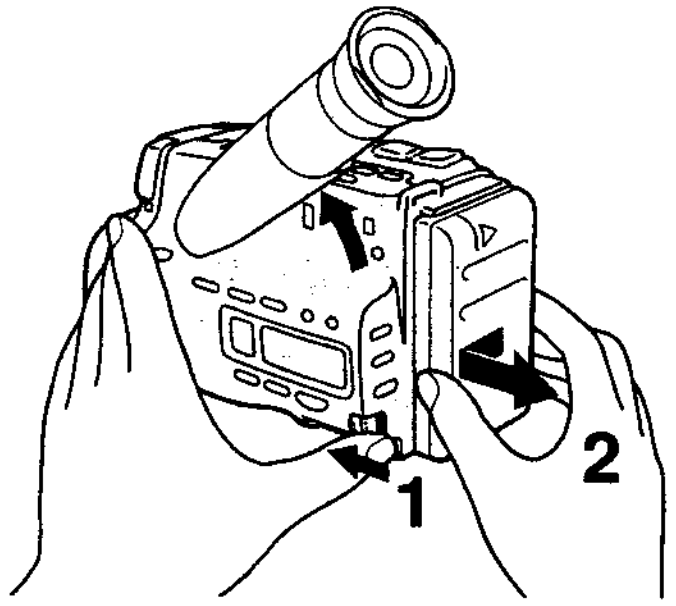

(D-4)

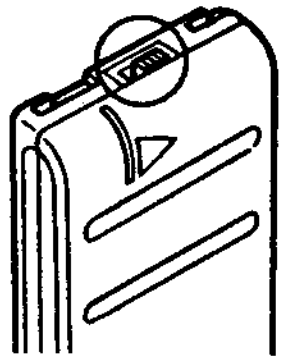

Step 2

Mount the battery pack on the camcorder. (D-2)

1 **Lift up the viewfinder.**

2 **Align the right side of the battery pack with the white line on the camcorder.**

3 **Slide the battery pack to the right.**

Note

Make sure the battery fits completely on the mounting surface of the camcorder.

To remove the battery pack (D-3)

1 While pressing the BATT knob in the direction of the arrow, 2 slide the battery pack to the left and pull it out as illustrated.

How to use the switch on the battery pack (D-4)

This switch is provided so that you can remember the charging condition. Set the switch to the "no mark" position when charging is completed. Set the switch to the "red mark" position when the battery is dead.

(D-5)

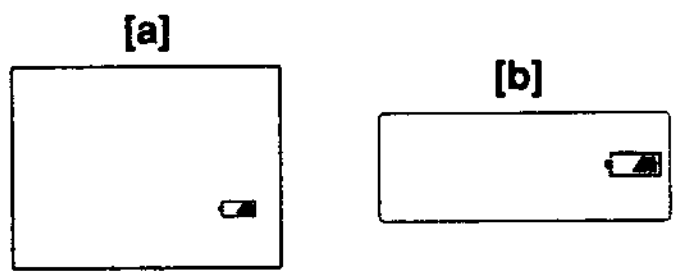

Battery life indicator

You can check the remaining battery capacity with the battery life indicator inside the viewfinder [a] and in the display window [b]. The decreasing black bar indicates decreasing battery power. (D-5)

Note

The battery life indicator of the camcorder may indicate a different remaining capacity from that of the NP-77HD battery pack. The indicator of NP-77HD is more accurate.

Other options for charging

- AC-V55 AC power adaptor:
  You can charge two battery packs simultaneously.
- AC-S10 AC power adaptor:
  This adaptor has a discharging function. When you want charging only, slide the skip switch on the adaptor in the direction of the arrow.
- BC-55 portable battery charger:
  You can charge a battery pack on 100 – 240 V AC.
- DC-V30 car battery charger:
  You can charge a battery pack by connecting the car battery charger to the cigarette lighter socket. This battery charger also supplies power for Sony 8 mm equipment that operates on a battery pack.
- DC-S10 car battery charger:
  This charger has a discharging function. When you want charging only, slide the skip switch on the charger in the direction of the arrow.

(D-6)

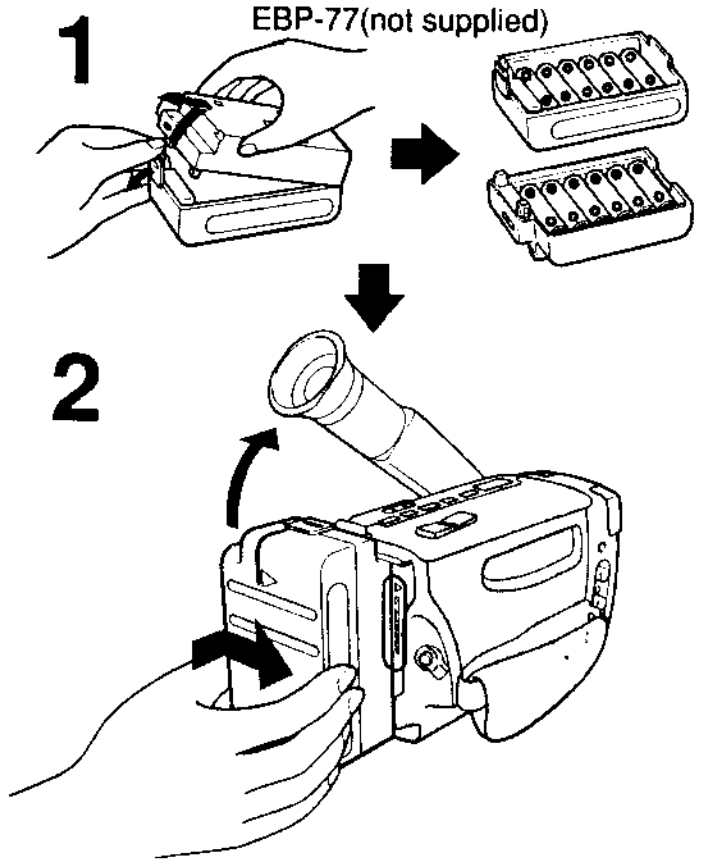

(D-7)

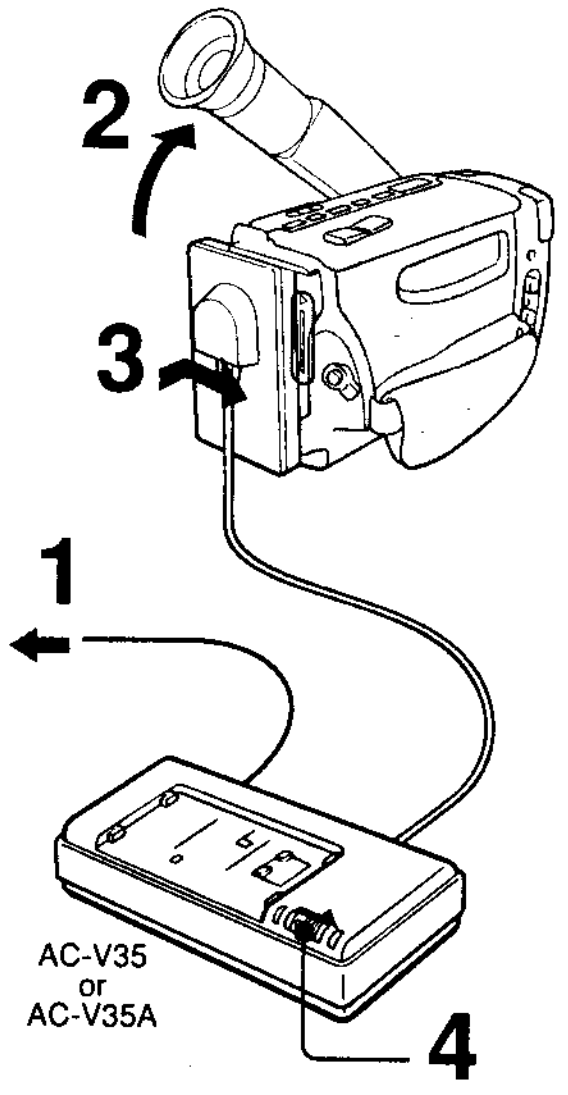

Connecting the Power Sources

Using Alkaline Batteries

(D-6)

1 **Insert 12 R6 (AA) size alkaline batteries into the battery case.**

2 **Attach the case in the same way as the battery pack.**

Battery life (when using Sony alkaline batteries)
The battery lasts for approximately 2 hours and 15 minutes under continuous recording indoors. However, when you use non-Sony alkaline batteries, their life may shorten.

Notes on battery life

- Batteries will not last as long in cold places.
- No indication appears inside the viewfinder when the batteries are weak.

To remove the battery case
Remove it in the same way you do the battery pack. See page 12.

Using House Current

(D-7)

1 **Connect the AC power adaptor to a wall outlet.**

2 **Lift up the viewfinder.**

3 **Align the right side of the connecting plate with the white line on the camcorder, and slide it in to the right.**

4 **Set the selector to "VTR (DC OUT)" position.**

To remove the connecting plate
Remove it in the same way you do the battery pack. See page 12.

(F)

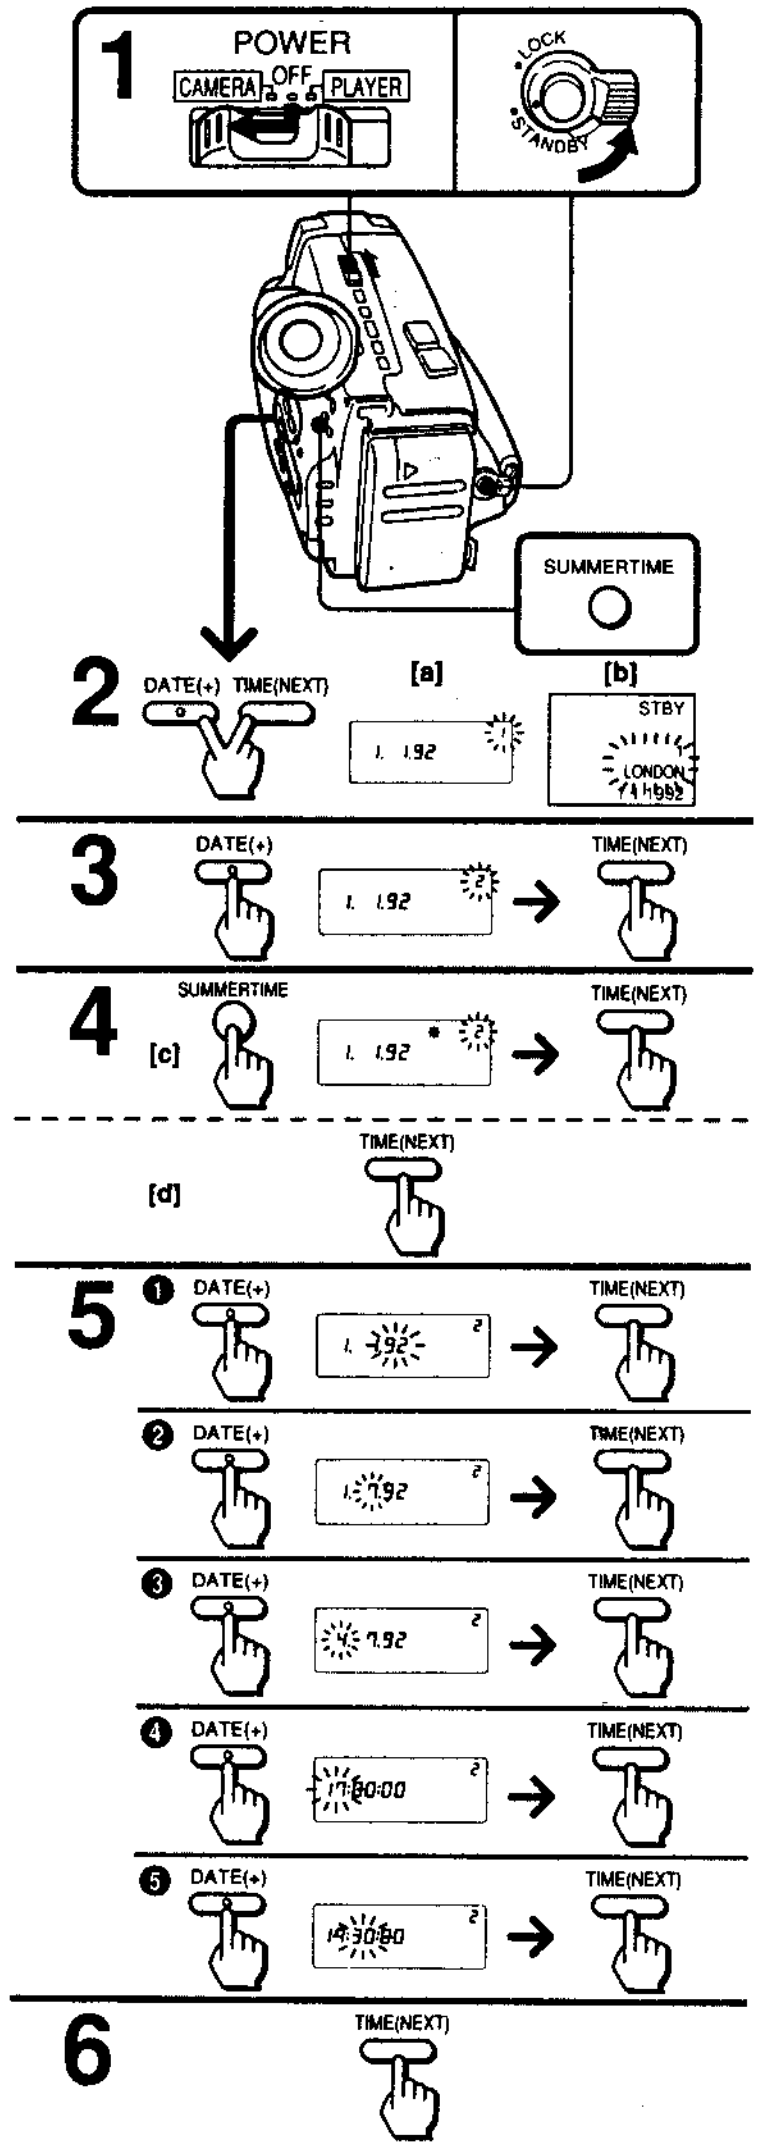

Preparing your camcorder 3

Setting the Date and Time

(F)

Make sure that a power source and lithium battery are installed.

1 **While pressing the green button, set the POWER switch to CAMERA, and turn STANDBY up.**

2 **Press DATE (+) and TIME (NEXT) simultaneously for more than 2 seconds until " 1 " flashes in the display window [a] and " 1 LONDON" flashes inside the viewfinder [b].**
DATE (+) now functions as + (to advance numbers) and TIME (NEXT) functions as NEXT (to execute).

3 **Press DATE (+) until your area name and number appear and then press TIME (NEXT).**

Countries	Area name	Area number
The United Kingdom and Portugal (GMT)	LONDON	1
Other European countries (CET)	PARIS	2
Finland, Greece, etc.	CAIRO	3

4 **Choose one of the following options to set the clock:**
[c] To set to summer time, press SUMMERTIME. Then press TIME (NEXT). The ☀ indicator appears inside the viewfinder and in the display window.
[d] To set to standard time, press TIME (NEXT).

5 **Set the year *, month, day, hour and minute, in this order.**
First adjust the flashing digits with DATE (+) and then press TIME (NEXT)
* To set the year to 1992, no need to press DATE (+) in step 5 – ❶.

6 **Press TIME (NEXT) to set the second.**
The clock starts operating.

To correct the date and time setting
Press TIME (NEXT) repeatedly until the digits of minute stop flashing. Then repeat step 2 to 6.

Setting the Date and Time

To advance the digits faster
Keep DATE (+) pressed.

To check the preset date and time
Press DATE (+) or TIME (NEXT). When you press the same button again, the indicator goes off.

To reset to standard time
Press SUMMERTIME. The ☀ indicator goes off.

If the camcorder goes off abruptly while setting the date and time
If you leave the camcorder in the standby mode for 5 minutes or more, the camcorder will go off automatically. Turn STANDBY down once and slide it up again.

Preparing your camcorder 4

Inserting a Cassette

(G-1)

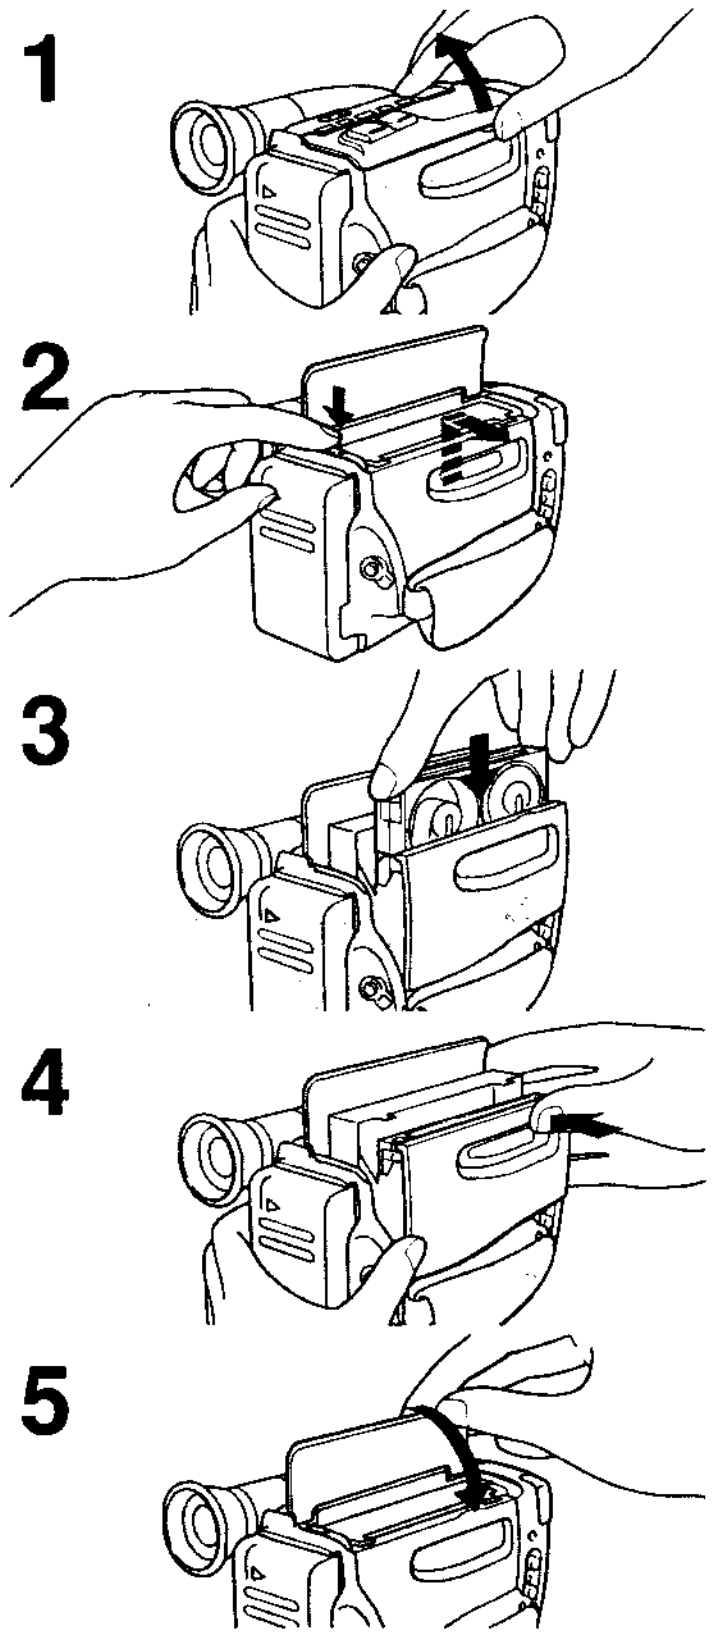

(G-2)

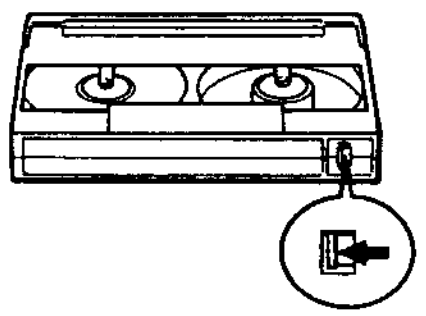

Inserting a Cassette

(G-1)

Make sure that a power source is connected.

1 **Lift up the lid at the indentation point.**

2 **Press EJECT.**
The cassette compartment will automatically lift up and open.

3 **Insert a cassette with the window facing out.**

4 **Press the PUSH mark on the cassette compartment cover to close it.**

5 **Close the lid.**

Ejecting the Cassette

Make sure that a power source is connected.

1 **Lift up the lid at the indentation point.**

2 **Press EJECT.**

3 **Take out the cassette and press the PUSH mark on the comparment cover to close it.**

4 **Close the lid.**

Preventing Accidental Erasure

(G-2)

Slide the tab on the cassette to expose the red mark. This will prevent accidental recording.
To re-record on this tape, slide the tab back out covering the red mark.
If you try to record with the red mark exposed, the 📼 and ⏏ indicators flash inside the viewfinder and in the display window.

Note on handling tapes
Never insert anything in the small holes on the rear of the cassette. These holes are used to sense the type of tape, thickness of tape, or if the tab is out or in, etc.

Preparing your camcorder 5

Adjusting the Viewfinder Lens

The position of the viewfinder lens for optimum vision varies depending on the person. Adjust it when you use the camcorder for the first time, or when you use it after someone else did.
(H)

1 **Make sure that the power source is connected and that the cassette is inserted.**

2 **Pull the viewfinder out until it clicks.**

3 **While pressing the green button, set the POWER switch to CAMERA.**

4 **Turn STANDBY up.**

5 **Turn the viewfinder lens adjustment ring so that "STBY" displayed in the viewfinder screen comes into sharp focus.**

(H)

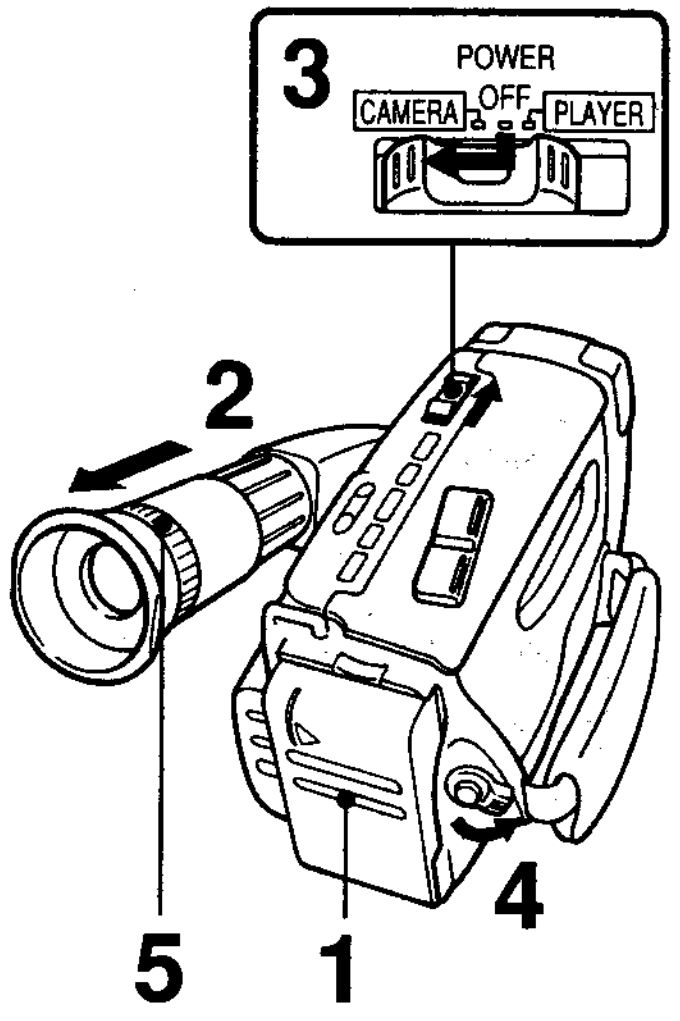

Recording a Picture Using Automatic Adjustments

Before recording "once-only" events, we strongly recommend you make a trial recording and check that everything is working properly.

Make sure that the AUTO LOCK switch is slid up so that the AUTO LOCK mark (green) appears. This puts everything into automatic.
(I-1)

Start Recording

1 **Hold the camcorder as illustrated.**

2 **Make sure that the viewfinder is pulled out.**

3 **Slide LENS COVER to OPEN.**
If it is not open, you cannot record.

4 **While pressing the green button, set the POWER switch to CAMERA.**

5 **Set the REC MODE switch to LP (long play) or SP (standard play), according to the length of your planned recording.**

6 **Turn STANDBY up.**
"STBY" appears inside the viewfinder.

7 **Press START/STOP.**
"REC" appears and the red lamp lights up inside the viewfinder. The camcorder is now recording.

To standby (to stop momentarily)
Press START/STOP again.
"STBY" appears inside the viewfinder. The camcorder is in the standby mode again.

To stop
Turn STANDBY down and set the POWER switch to OFF.

Note
Shoot the subject at the wide-angle position in macro. At the telephoto position, if the subject is closer than 80 cm (2 ft. 7 1/2 in.), it cannot be brought into focus.

(I-1)

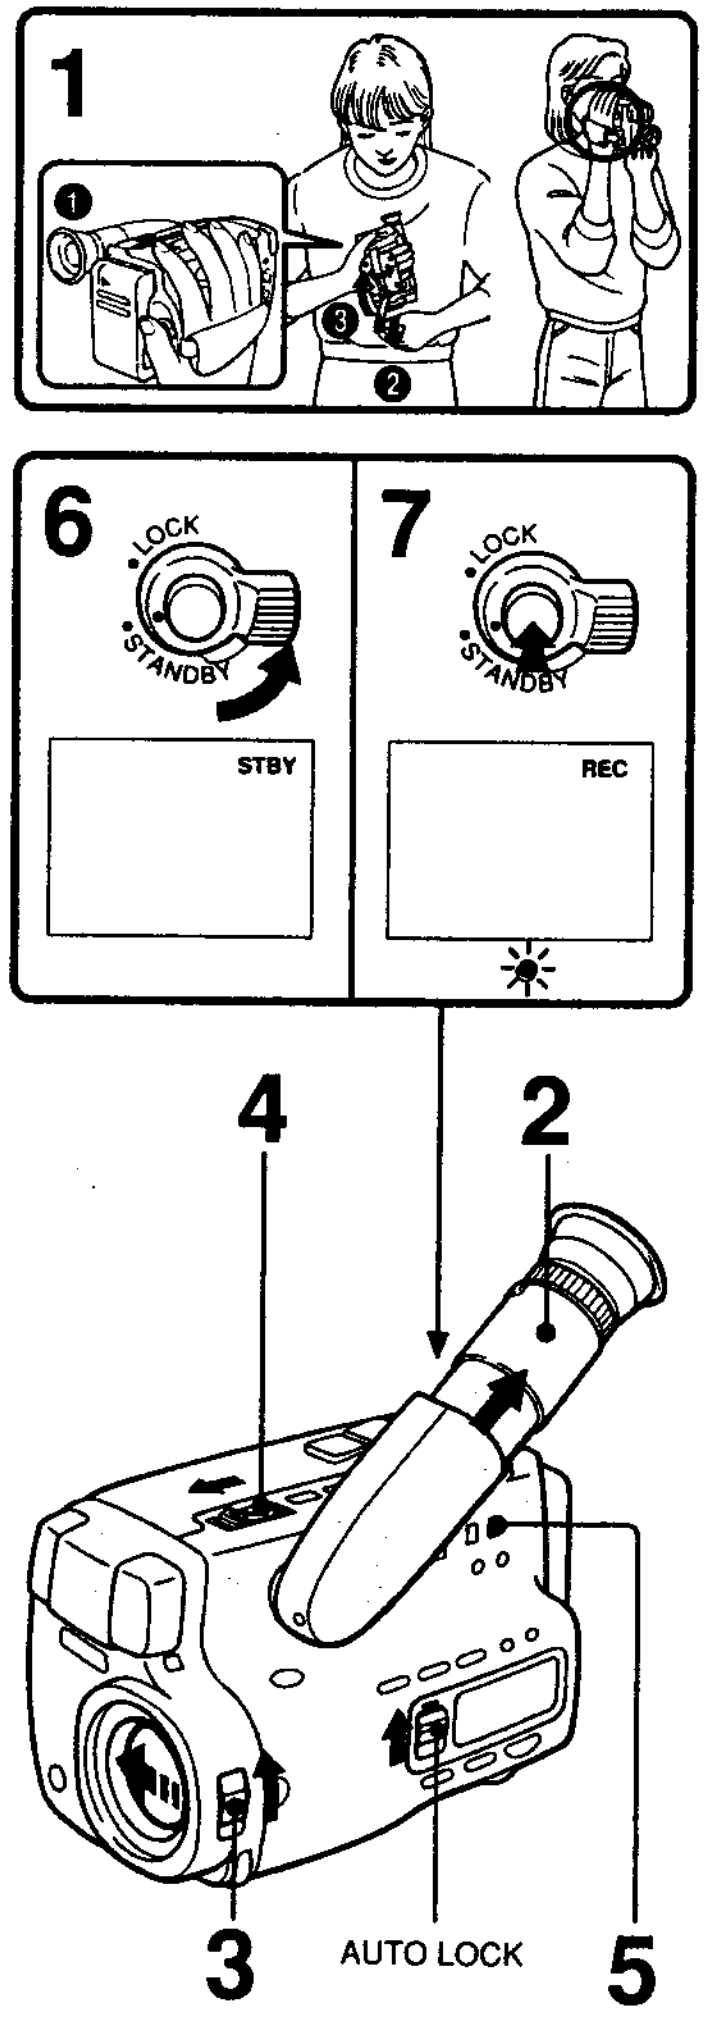

Recording a Picture Using Automatic Adjustments

(I-2)

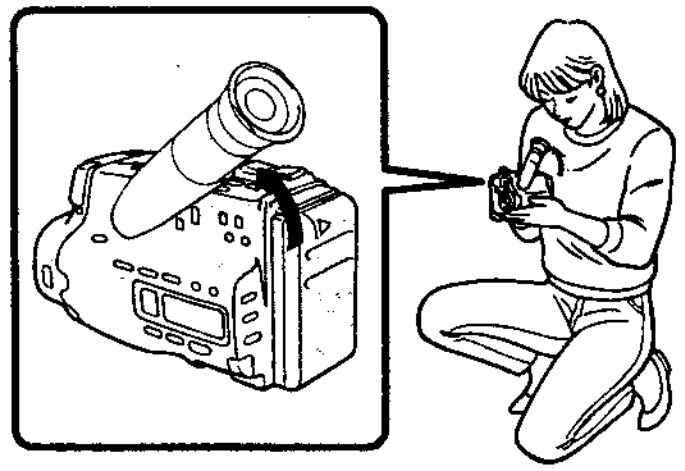

For low-position recording (I-2)
The viewfinder can be turned 90 degrees upward.
It can be used in either the pushed-down or pulled-out position.

Near the end of the tape
The ▭ indicator, the red lamp inside the viewfinder, and the camera recording/battery lamp on the camcorder flash slowly. When the tape reaches the end, the flashing becomes rapid.

Note on recording
To record from the beginning of the tape, run the tape for about 15 seconds before recording. This will avoid missing the starting point when the tape is played back.

Note on the standby mode
If you leave the camcorder in the standby mode for 5 minutes or more, the camcorder will go off automatically. To resume the standby mode, turn STANDBY down once and slide it up again. To start recording, press START/STOP directly.

Recording mode
You can record and play back a picture on a tape in both SP (standard play) and LP (long play) modes.
However, the quality of the playback picture in the LP mode will not be as good as that in the SP mode.

Recording Date or Time

(I-3)

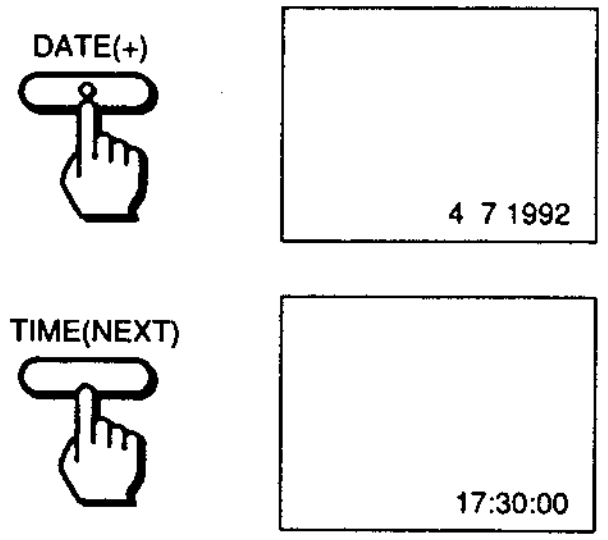

During camera recording or when in the recording pause mode, press DATE(+) for date indicator or TIME(NEXT) for time indicator.
The date or time displayed inside the viewfinder is recorded with the picture.

To stop recording date or time
Press DATE(+) or TIME(NEXT) again.
The date or time indicator disappears.
The picture recording continues.

Recording a Picture Using Automatic Adjustment

Using Zooming Features

(I-4)

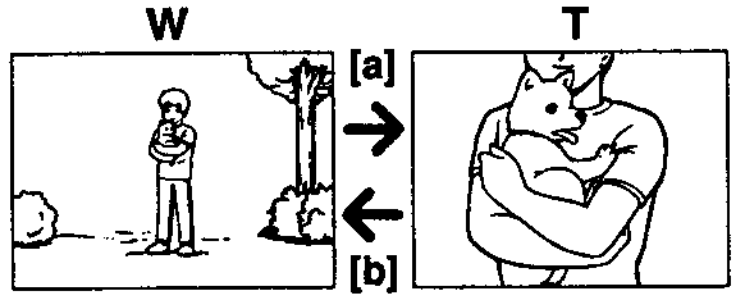

(I-5)

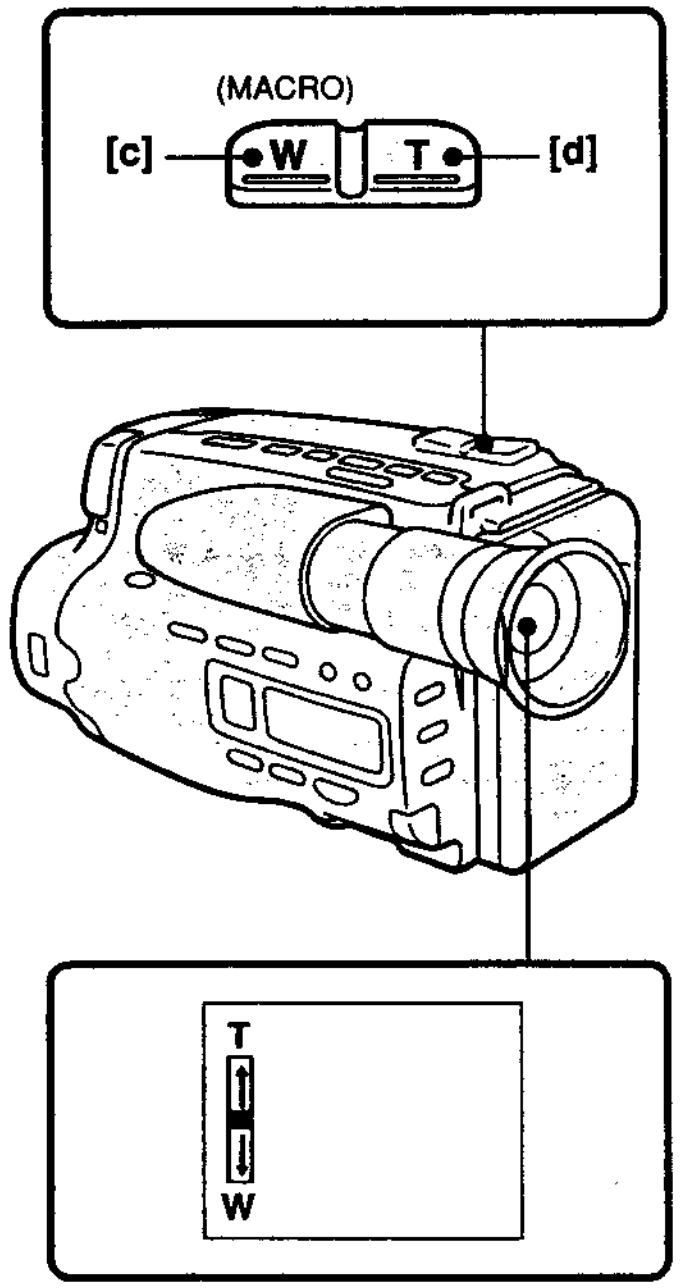

By zooming, you can change the size of the subject in the scene. Use "zoom-in (Telephoto)" for dramatic close-ups [a], and "zoom-out (Wide-angle)" for panoramic long shots [b]. Also use the zoom to focus manually or to decide the shooting angle.
For more professional-looking recordings, use zooming sparingly. (I-4)

Two-Speed Zooming (I-5)

The camcorder's power zoom button offers two-speed zooming. Press it firmly for high speed zooming and softly for relatively slow zooming.

[c] W side: for wide-angle (subject appears farther away)
[d] T side: for telephoto (subject appears closer)

Autofocusing in macro
Even small subjects, such as flowers, insects, and images in photographs, can literally fill the screen using autofocusing in macro.
We recommend you to use a tripod when shooting in macro.

1. **Bring the camcorder as close as necessary to obtain the desired subject size.**
2. **Slide the AUTO LOCK switch up so that the AUTO LOCK mark (green) appears.**
3. **Keep pressing the W (MACRO) side of the power zoom button until the zooming stops (wide-angle).**

Manual focusing in macro
You can also shoot with manual focus while doing close-up.
For manual focusing, see page 29.

(I-6)

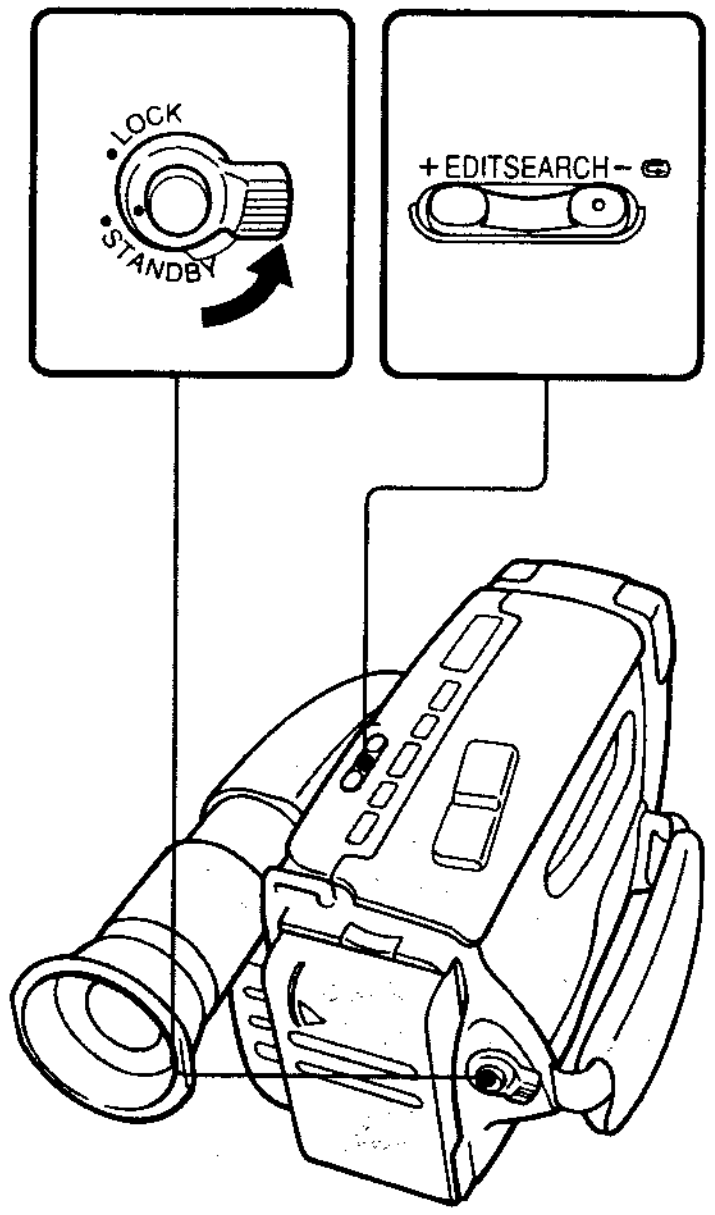

Checking the Recorded Picture Inside the Viewfinder (EDITSEARCH)

Using EDITSEARCH, you can review the last recorded scene or check the recorded picture inside the viewfinder. After checking your recorded picture, you can also re-record over a previously recorded portion. **(I-6)**

To review the last recorded scene — Rec Review
You can check the last portion of a scene you just recorded in the CAMERA mode. This is convenient for quick, on-the-spot checks.

1 **Set the camcorder in the standby mode by turning STANDBY up.**

2 **Press the – side of EDITSEARCH (⊜) momentarily.**
The last few seconds of the recorded portion are played back inside the viewfinder. Then, the camcorder goes back to standby mode, ready for the next recording.

To check your recorded picture
You can check the recorded picture inside the viewfinder. After checking, you can also re-recorded over a previously recorded portion.

1 **Set the camcorder in the standby mode by turning STANDBY up.**

2 **Keep pressing the + side or – side of EDITSEARCH to play back the picture while looking inside the viewfinder.**
+ side: to view the forward playback picture
– side: to view the reverse playback picture
To stop playback, release EDITSEARCH.

3 **If you want to re-record over a recorded portion, follow the procedures below:**
❶ Press the + side or – side of EDITSEARCH to locate the point you want to begin re-recording.
❷ Press START/STOP to begin re-recording. Re-recording begins from the point you released EDITSEARCH. As long as the tape is not ejected, the transition between the scenes will be smooth.

(I-7)

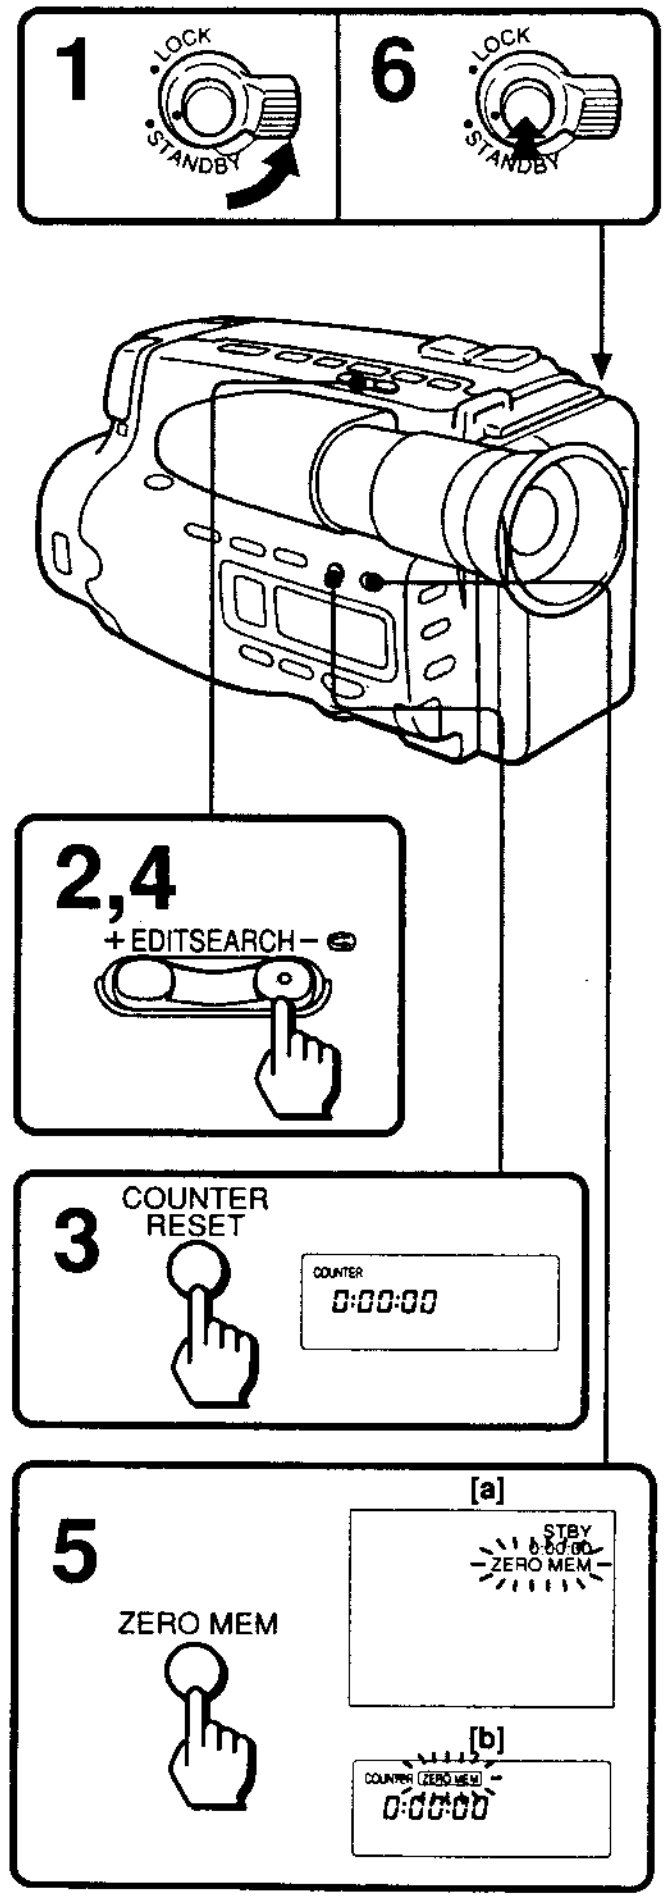

Re-recording a Picture in the Middle of a Recorded Tape (Insert Recording)

(I-7)

1 **Turn STANDBY up to set the camcorder in the standby mode.**

2 **While looking inside the viewfinder, keep pressing the + or – side of EDITSEARCH and release the button where you want to end the insertion.**
The camcorder enters the standby mode again.

3 **Press COUNTER RESET.**
The counter is reset to zero.

4 **While looking inside the viewfinder, keep pressing the – side of EDITSEARCH and release the button at the point where you want to start the insertion.**

5 **Press ZERO MEM.**
The insert ending point is stored in memory.
[a] Viewfinder
[b] Display window

6 **Press START/STOP.**
Insert recording begins.
It stops automatically near the counter zero point.

To cancel ZERO MEM
Press ZERO MEM.

Note
The picture may be distorted at the end of the inserted portion when played back.

(J)

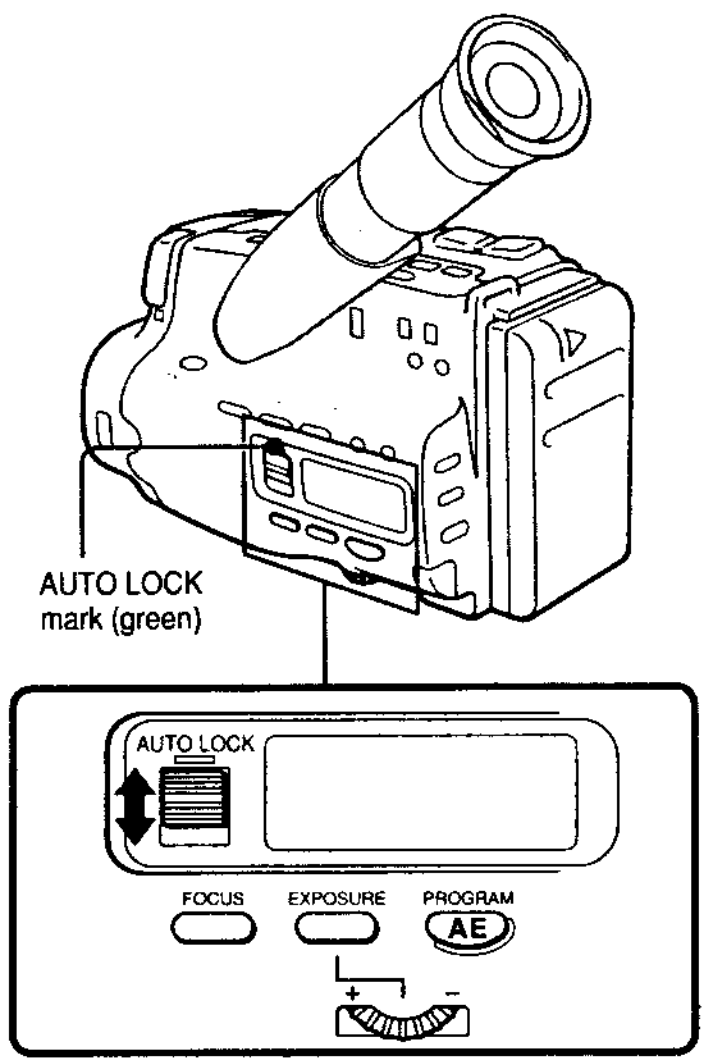

Selecting the Automatic or Manual Adjustment

The camcorder's automatic functions offer you worry-free operation under most shooting conditions. But in some circumstances, manual adjustment is better for effective recording. You can manually adjust focus and exposure with this camcorder. You can also select the recording mode with the PROGRAM AE button to meet the shooting situations. **(J)**

Automatic adjustment
Slide the AUTO LOCK switch up so that the AUTO LOCK mark (green) appears.
Focus and exposure are adjusted automatically with this camcorder.

Manual adjustment
Slide the AUTO LOCK switch down so that the AUTO LOCK mark (green) disappears.
You can manually adjust focus (page 29) and exposure (page 31). You can also select the recording mode ("Portrait," "Sports" or "High-speed shutter") with the PROGRAM AE button. (See page 32.)

Even if you slide the AUTO LOCK switch down (in manual adjustment mode)
The settings you didn't adjust manually remain the same as those in automatic adjustment.

About the previous settings
The settings you made during manual adjustment are retained in the following cases:

- When you set the POWER switch to OFF.
- When you slide the AUTO LOCK switch up after you have made manual adjustment, and then slide it down again.
  They are canceled if more than 5 minutes pass after you have detached the power source.

(K-1)

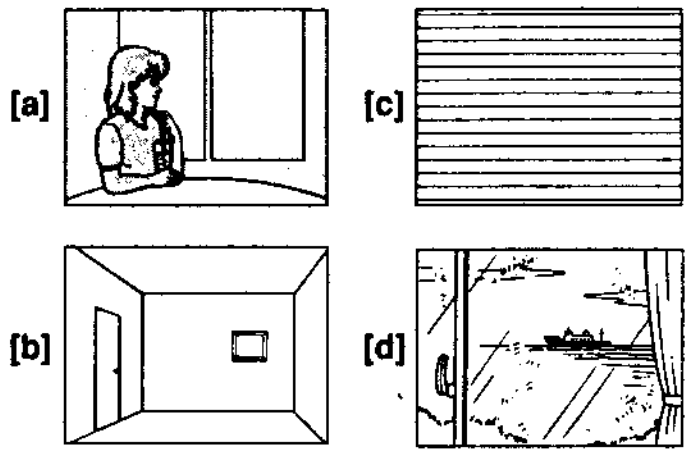

(K-2)

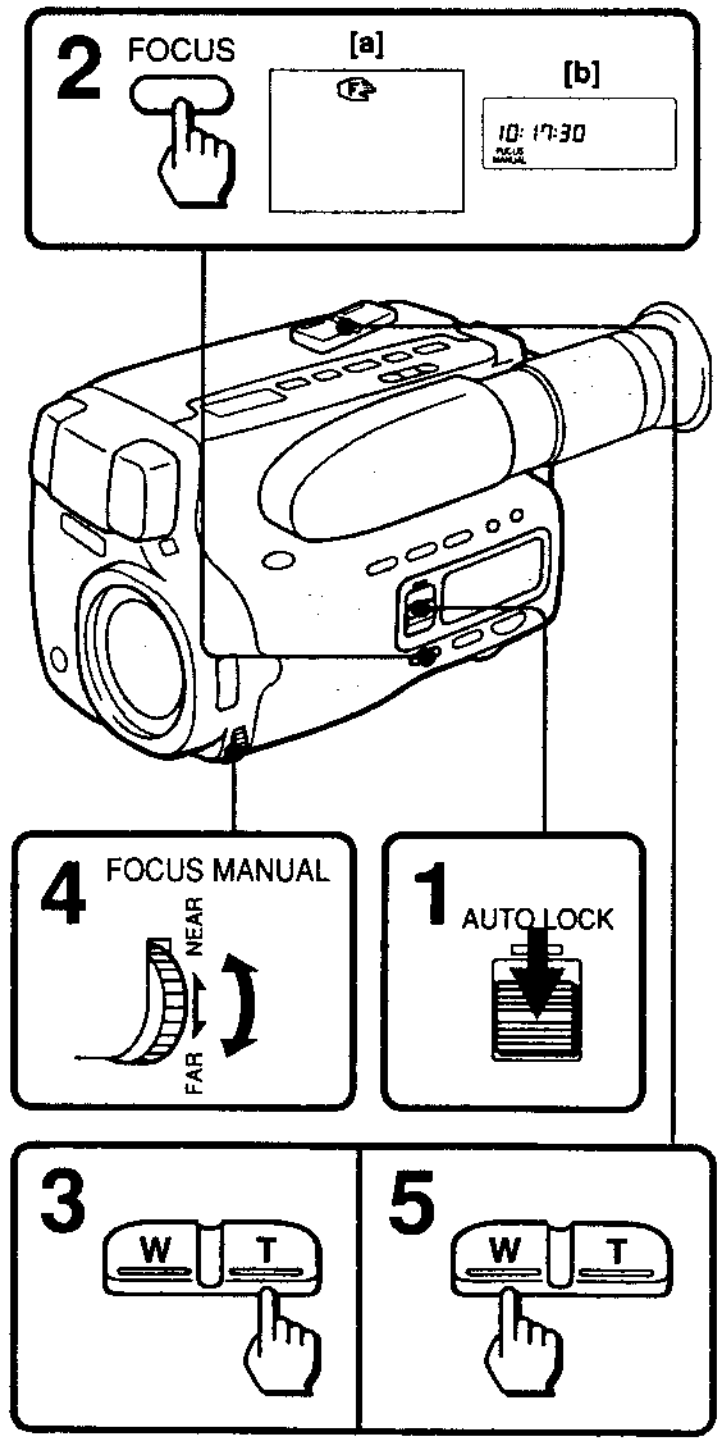

Manual Focusing

We recommend manual focusing in the following cases. **(K-1)**

[a] Too bright behind the subject
[b] Subjects with little contrast—wall, sky, etc.
[c] Horizontal stripes
[d] Subject through frosted glass

- Insufficient light
- One subject is close; the other is in the center, but at a distance
- Subjects beyond nets, etc., or another subject passes in front of the camcorder
- Bright subject or subject reflecting light
- High contrast behind the subject (the background may be in focus)
- When shooting a stationary subject using tripod
- When you want to save battery power

Focusing Manually

(K-2)

1 **Slide the AUTO LOCK switch down so that the AUTO LOCK mark (green) disappears.**

2 **Press FOCUS .**
The F (manual focusing) indicator appears inside the viewfinder **[a]** and the FOCUS MANUAL indicator appears in the display window **[b]**.

3 **Keep pressing the T side of the power zoom button until the zooming stops (telephoto).**

4 **Turn the FOCUS MANUAL dial to achieve sharp focus.**

5 **Keep pressing the W side of the power zoom button to obtain the desired subject size.**

To reactivate autofocusing
Press FOCUS again, or slide the AUTO LOCK switch up so that the AUTO LOCK mark (green) appears. The F indicator and the FOCUS MANUAL indicator disappear.

Shooting in relatively dark places
Shoot at wide angles after focusing in telephoto.

Note
The focus dial does not have a stop position.

(L)

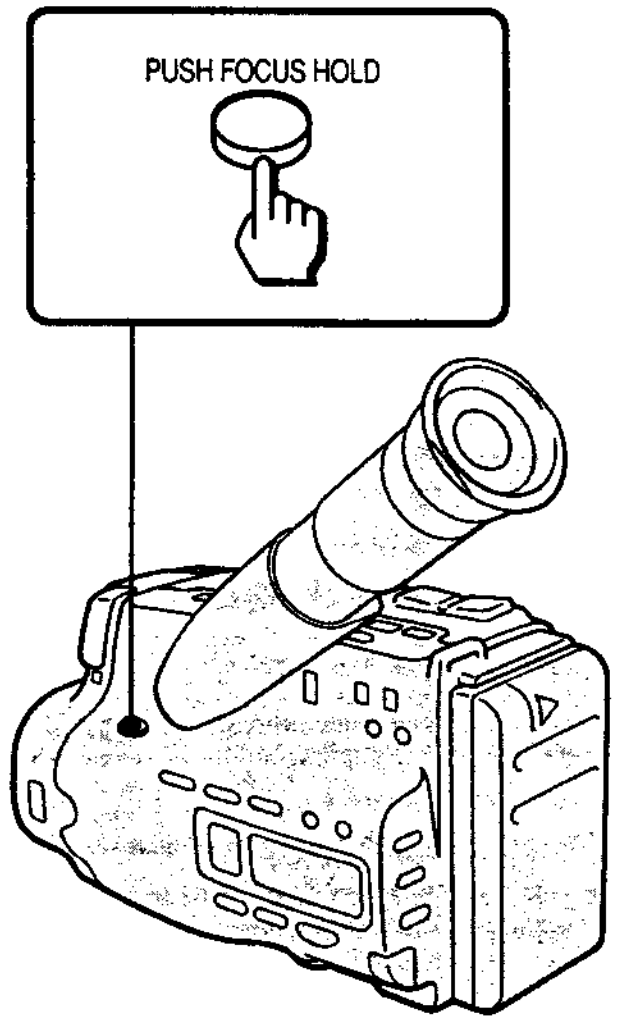

Fixing the Focus to the Object

When shooting a certain object with automatic focusing, you may see that an object abruptly passing in front of the object you want to shoot is in focus and the object on which you want to focus is out of focus. In this case, use the PUSH FOCUS HOLD button to set the focus to the object you want to focus. **(L)**

1 **Focus on the object you want to shoot.**

2 **Keep pressing PUSH FOCUS HOLD.**
As long as you hold the button, the automatic focus is inactivated (the Ⓕ indicator appears inside the viewfinder) and the focus is fixed to the object you want to focus.

To restore the automatic focusing mode
Release PUSH FOCUS HOLD.

(M)

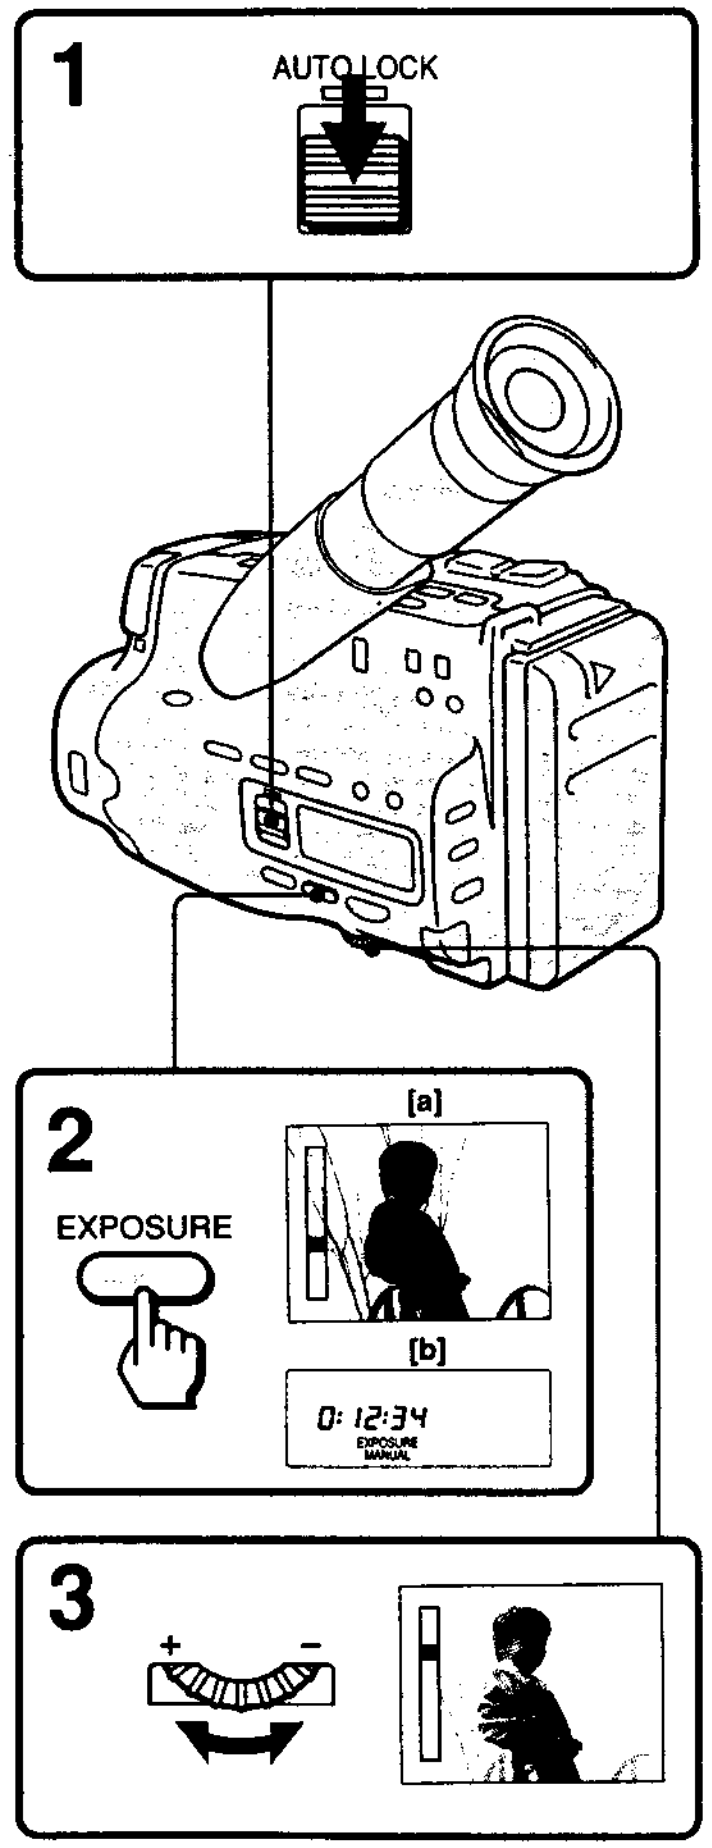

Adjusting the Exposure

In the following cases you should obtain better results by adjusting the exposure manually.

Conditions	Turn the EXPOSURE dial:
The background is too bright (backlighting)	+ – in the + direction
Insufficient light: most of the picture is dark.	
Bright subject and dark background	+ – in the – direction
To record the darkness faithfully	

Adjusting the Exposure Manually

(M)

1 **Slide the AUTO LOCK switch down so that the AUTO LOCK mark (green) disappears.**

2 **Press EXPOSURE.**
The exposure is locked at the present brightness.
The exposure indicator appears inside the viewfinder **[a]** and the EXPOSURE MANUAL indicator appears in the display window **[b]**.

3 **Adjust the exposure by turning the EXPOSURE dial in the + or – direction.**
The exposure is locked at the adjusted brightness.

To restore the automatic exposure mode
Slide the AUTO LOCK switch up or press EXPOSURE again so that the exposure indicator inside the viewfinder and the EXPOSURE MANUAL indicator in the display window disappear.

(N-1)

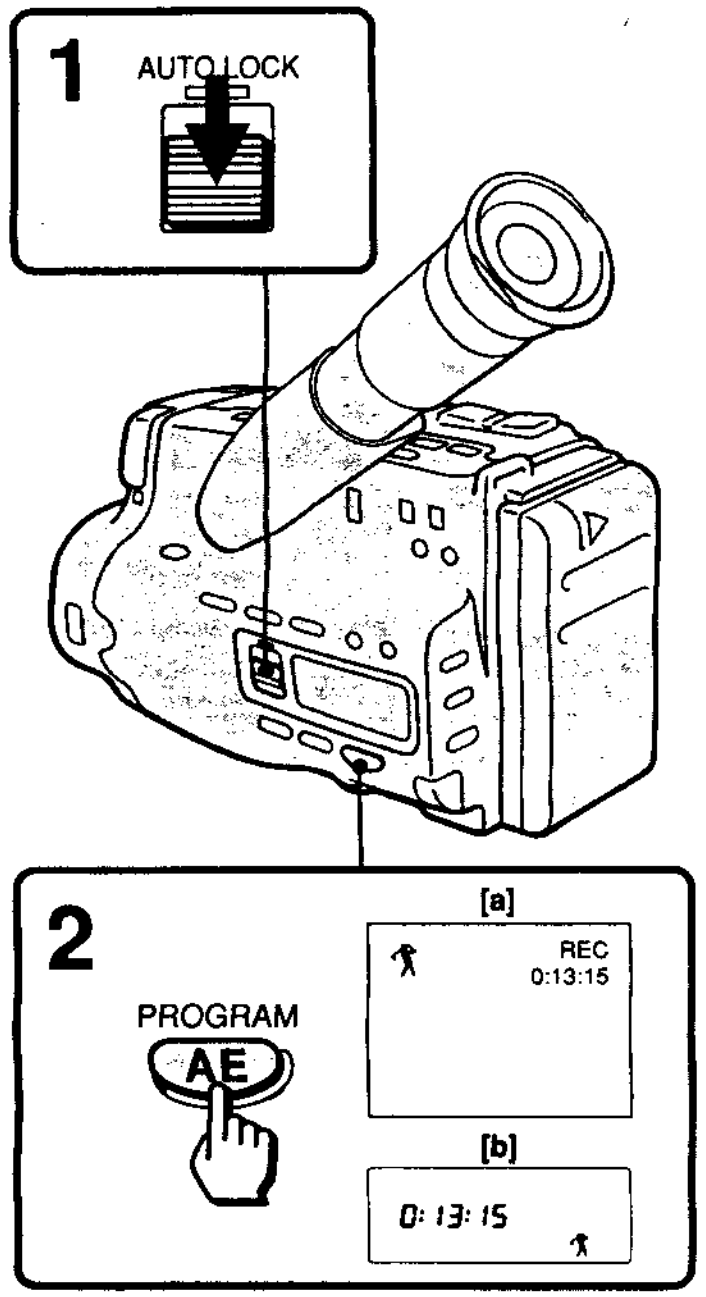

(N-2)

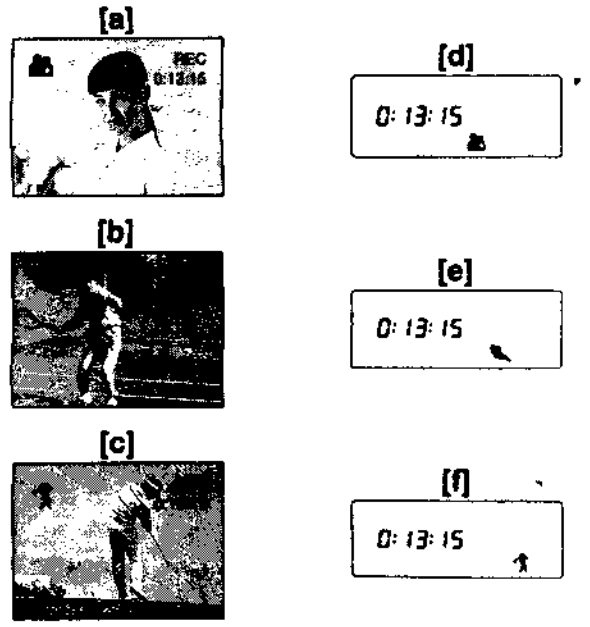

Using the PROGRAM AE Function

When you use the PROGRAM AE (Auto Exposure) function, you can create a "portrait" effect or capture high-speed action using the "sports" mode or "high-speed shutter" mode.

(N-1)

1 Slide the AUTO LOCK switch down so that the AUTO LOCK mark (green) disappears.

2 Press PROGRAM AE.
The PROGRAM AE indicator appears inside the viewfinder **[a]** and in the display window **[b]**.

Each time you press the button, the PROGRAM AE mode indicator changes as follows:

→ ("Portrait" mode) → ("Sports" mode)
No indicator (normal mode) ← ("High-speed shutter" mode) ←

To restore automatic adjustment
Slide the AUTO LOCK switch up or press PROGRAM AE again so that the PROGRAM AE indicator disappears.

To select the mode

(N-2)

You may want to use the respective mode when shooting the following subjects or when shooting under the following conditions:

[a] [d] Portrait mode
- A still subject such as a person or flower
- Subject behind such obstacles as a net
- Zooming on a subject in the telephoto mode

[b] [e] Sports mode
- Recording a landscape while in a moving car
- Outdoor sports scene such as football or tennis
- Subjects moving at high speed, such as a roller coaster on a cloudy day

[c] [f] High-speed shutter mode
- Shooting a golf swing or a tennis match with the tennis ball captured clearly on a fine day
- You wish to play back certain scenes having high speed movement and getting a clear, sharp picture

(O-1)

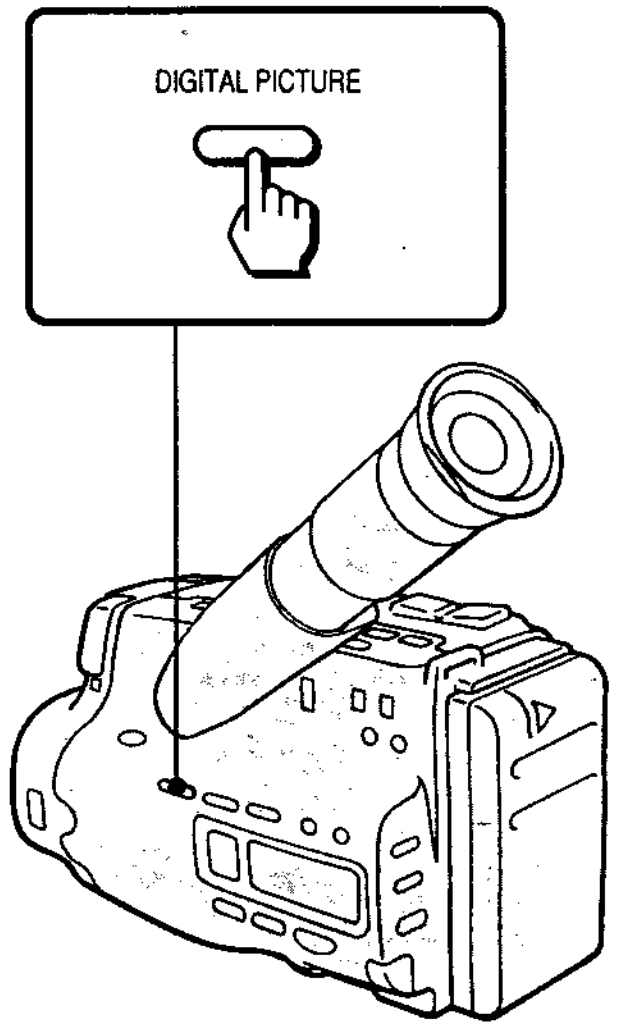

(O-2)

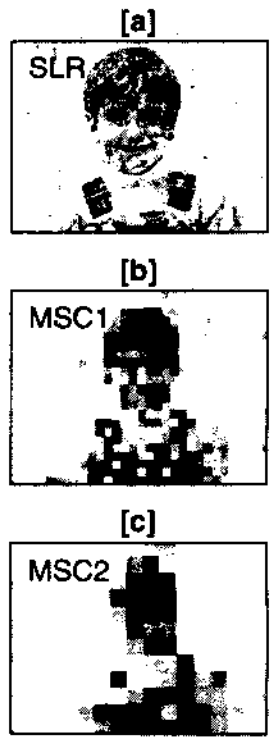

Notes
- As long as the PROGRAM AE indicators are displayed inside the viewfinder and in the display window, you cannot adjust exposure manually. If you should press EXPOSURE when the PROGRAM AE indicator is displayed, the PROGRAM AE function is canceled and the exposure adjustment function starts to operate. To restore the PROGRAM AE function, press PROGRAM AE again.
- The shutter speed in each PROGRAM AE mode is as follows:
  Portrait mode — between 1/50 to 1/1650
  Sports mode — between 1/50 to 1/500
  High-speed shutter mode — 1/4000

Using the Digital Picture Function

When you use the digital picture function, you can record the picture with a solarization effect or two types of mosaic effect.

(O-1)

Press DIGITAL PICTURE during recording or in the recording standby mode.
Each time you press the button, the indicator inside the viewfinder changes as follows:

→SLR (solarization) → MSC1 (mosaic 1)
No indicator (normal picture) ← MSC2 (mosaic 2) ←

(O-2)

[a] Picture with a solarization effect (SLR)
[b] Picture with a mosaic effect (MSC1)
[c] Picture with a mosaic effect (MSC2)

To cancel the digital picture function
Press DIGITAL PICTURE repeatedly until the digital picture indicator disappears from the viewfinder.

Fade-in and Fade-out

(P-1)

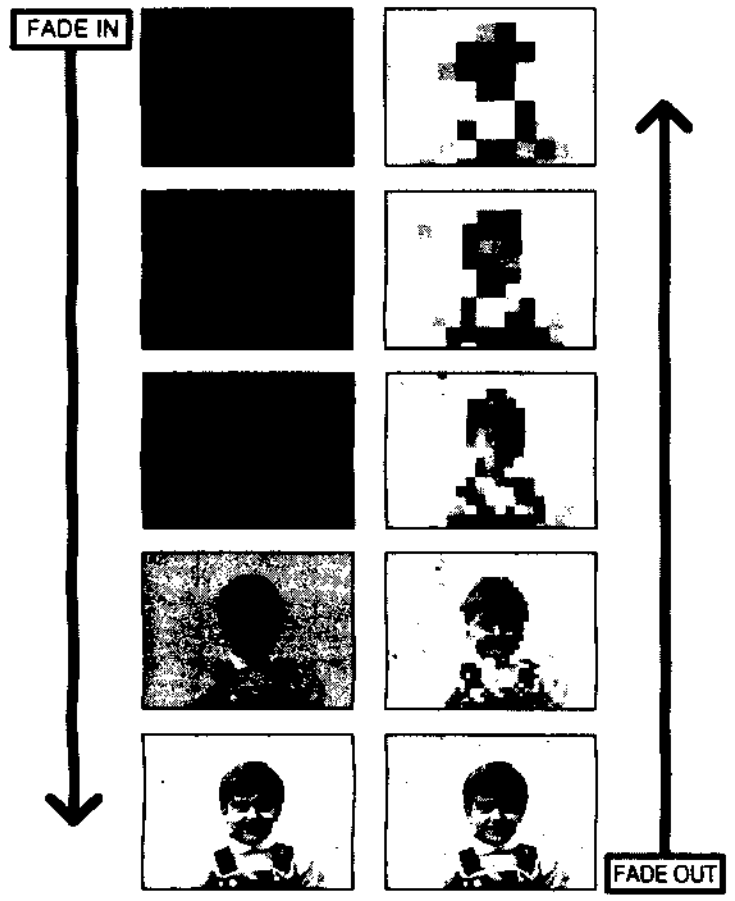

(P-1)

You can fade-in or fade-out to give your recording a professional appearance.
When fading-in, the picture will gradually appear from black or mosaic. The sound will also gradually increase.
When fading-out, the picture will gradually fade to black or mosaic. The sound will also gradually decrease.

(P-2)

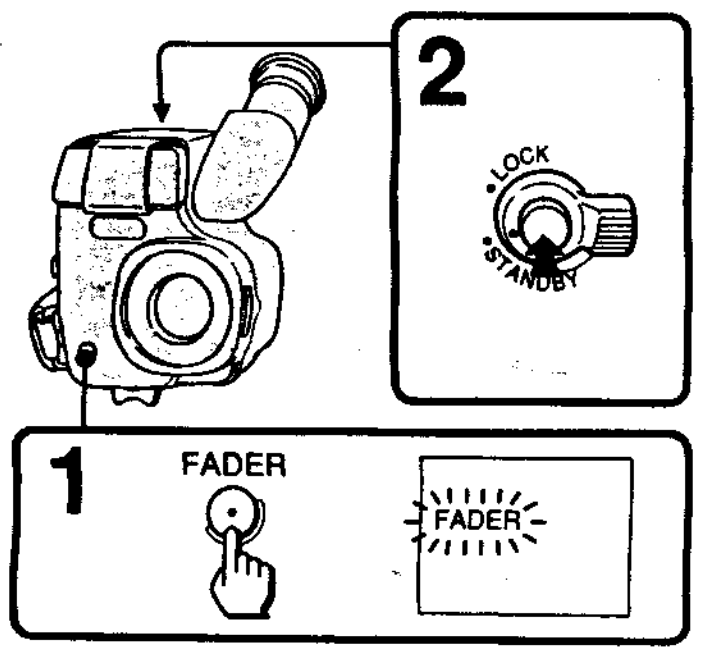

About the FADER button (P-2)
Each time you press FADER, the indicator inside the viewfinder changes as follows:

FADER → M. FADER → (No indicator)
(black fade) (mosaic fade)

1 **Select the type of fade by pressing FADER as follows:**
  [a] When fading-in, press FADER after turning STANDBY up to put the camcorder into the standby mode.
  The fade indicator starts flashing.
  [b] When fading-out, press FADER while recording.
  The fade indicator starts flashing.

2 **Press START/STOP.**
  When fading-in, the fade indicator stops flashing and the recording starts fading-in.
  When fading-out, the fade indicator stops flashing and the picture fades out and then the recording stops.

To cancel the fade-in/fade-out function before it is performed
Before pressing START/STOP, press FADER again.

Using the World Clock

(Q-1)

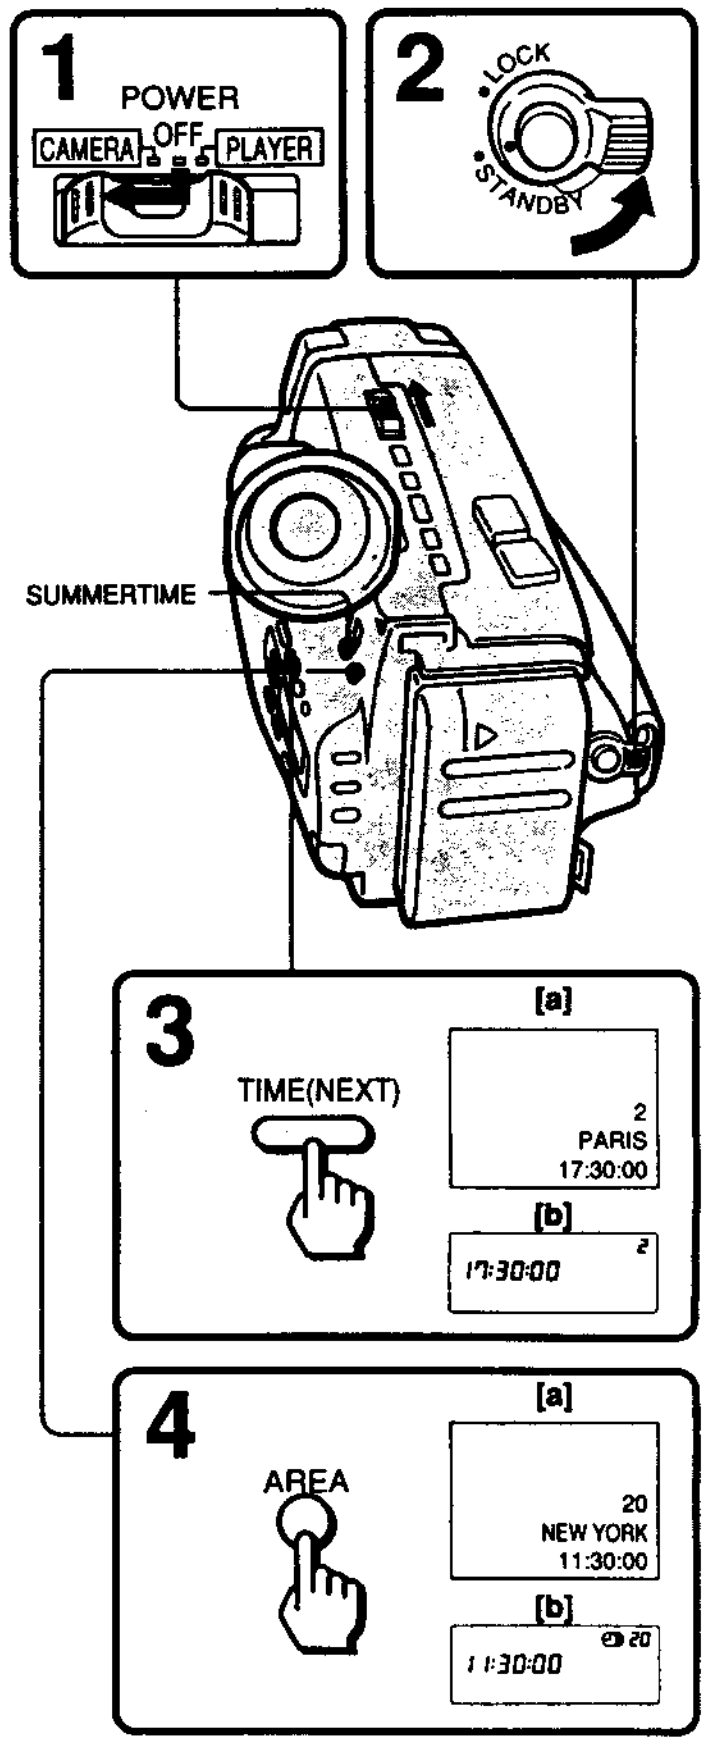

This camcorder has a world clock. While traveling abroad, you can easily adjust time of the place where you are using the camcorder by pressing AREA.
Before pressing AREA, set the date and time in your country (see page 19). **(Q-1)**

1 **While pressing the green button, set the POWER switch to CAMERA.**

2 **Turn STANDBY up to set the camcorder in standby mode.**

3 **Press TIME (NEXT).**
  The time in your country appears inside the viewfinder **[a]** and in the display window **[b]**.

4 **Press AREA until the area name and number where you are now using the camcorder appear.**
  The 🌐 indicator appears in the display window. You can find the area name and number in the "Time Zone Chart" on the pages 36 and 37.

To check the date
Press DATE (+).
To turn off the date indication, press DATE (+) again.

To reset to your country area time
Press AREA until your country area and number appears.

(Q-2)



To set summer time
Press SUMMERTIME. Time changes to summer time. ☀ indicator appears inside the viewfinder **[a]** and in the display window **[b]**. **(Q-2)**
To set to standard time, press SUMMERTIME again.

Using the World Clock

Time Zone Chart

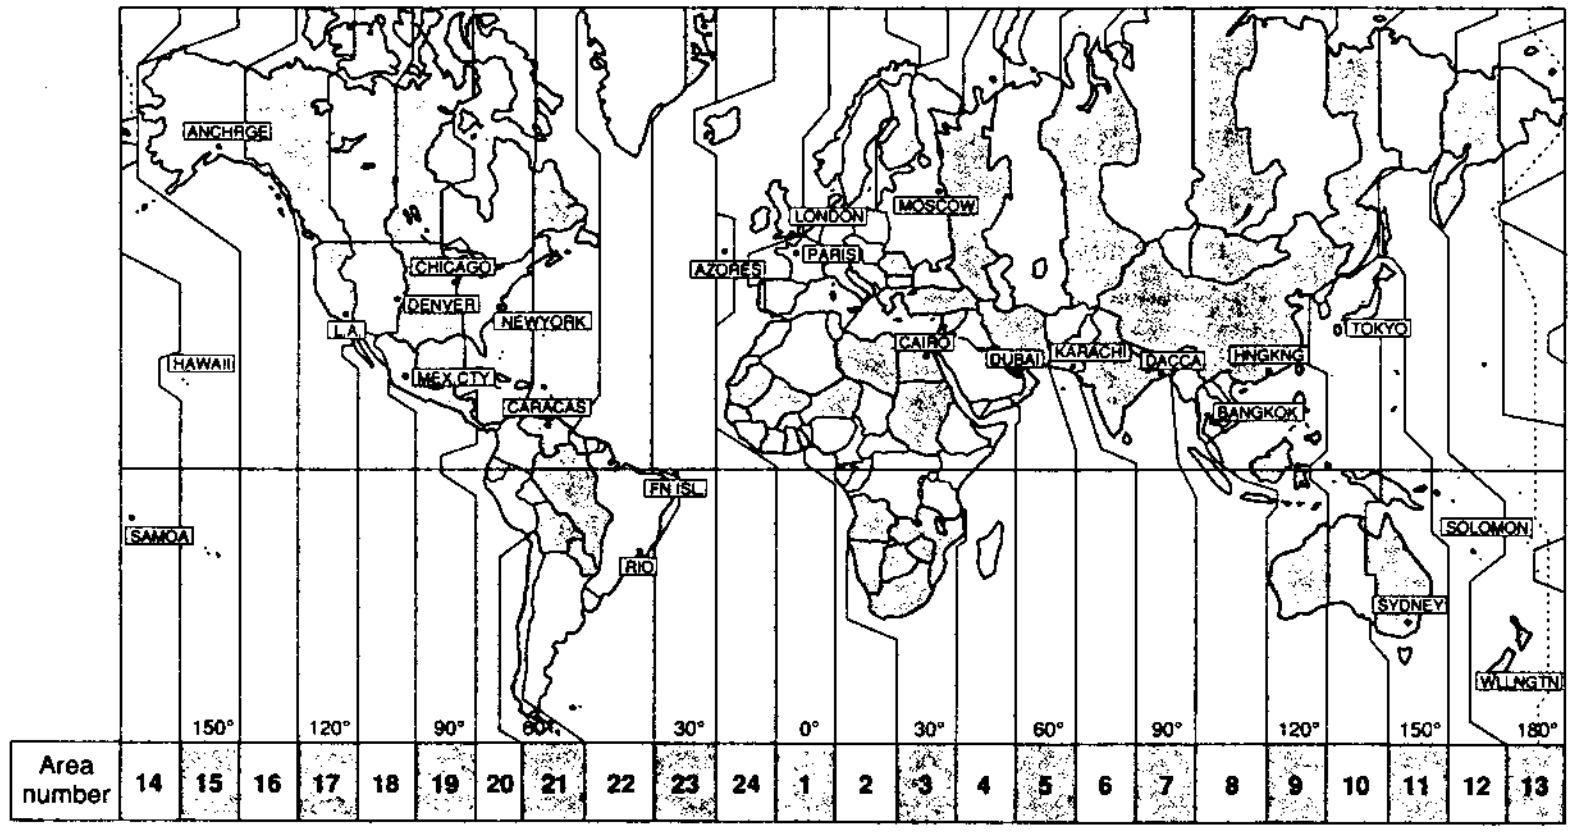
ANCHRGE
HAWAII
SAMOA
L.A.
DENVER
CHICAGO
NEWYORK
MEX.CTY
CARACAS
FN ISL
RIO
AZORES
LONDON
PARIS
MOSCOW
CAIRO
DUBAI
KARACHI
DACCA
HNGKNG
BANGKOK
TOKYO
SOLOMON
SYDNEY
WLLNGTN
150°
120°
90°
60°
30°
0°
30°
60°
90°
120°
150°
180°
Area number
14 15 16 17 18 19 20 21 22 23 24 1 2 3 4 5 6 7 8 9 10 11 12 13

Area number	Area name	Countries or area*
1	LONDON	England, Morocco, Portugal, GMT (Greenwich Mean Time)
2	PARIS	Austria, France, Germany, Italy, Netherlands, Spain, Sweden, Switzerland, CST (Continental Standard Time), Tunisia
3	CAIRO	Egypt, Finland, Greece, Turkey
4	MOSCOW	Ethiopia, Iraq, Kenya, Mauritius, Saudi Arabia, Seychells, former U.S.S.R (Moscow)
5	DUBAI	United Arab Emirates
6	KARACHI	Moldives, Pakistan
7	DACCA	Bangladesh, India, Myanmar
8	BANGKOK	Cambodia, Indonesia (Jakarta), Thailand, Vietnam
9	HNGKNG	Australia (Perth), China, Hong Kong, Indonesia (Bali, Borneo), Malaysia, Philippines, Singapore, Taiwan
10	TOKYO	Japan, Korea
11	SYDNEY	Australia (Sydney)
12	SOLOMON	New Caledonia
13	WLLNGTN	Fiji, New Zealand
14	SAMOA	Western Samoa
15	HAWAII	Hawaii I., Tahiti, HST (Hawaii Standard Time)
16	ANCHRGE	U.S.A. (Alaska), AST (Alaska Standard Time)
17	L.A.	U.S.A. (Los Angels, San Francisco), PST (Pacific Standard Time)
18	DENVER	U.S.A. (Denver), MST (Mountain Standard Time)
19	CHICAGO	Mexico, U.S.A. (Chicago), CST (Central Standard Time)
20	NEWYORK	Canada (Montreal), Jamaica, Peru, U.S.A. (New York, Washington D.C.), EST (East Standard Time)
21	CARACAS	Chile, Dominica, Venezuela
22	RIO	Argentina, Brazil, Uruguay
23	FN ISL.	Fernando de Noronha
24	AZORES	Azores Islands

* These are common names. The formal names may be different.

Superimposing a Title

(R-1)

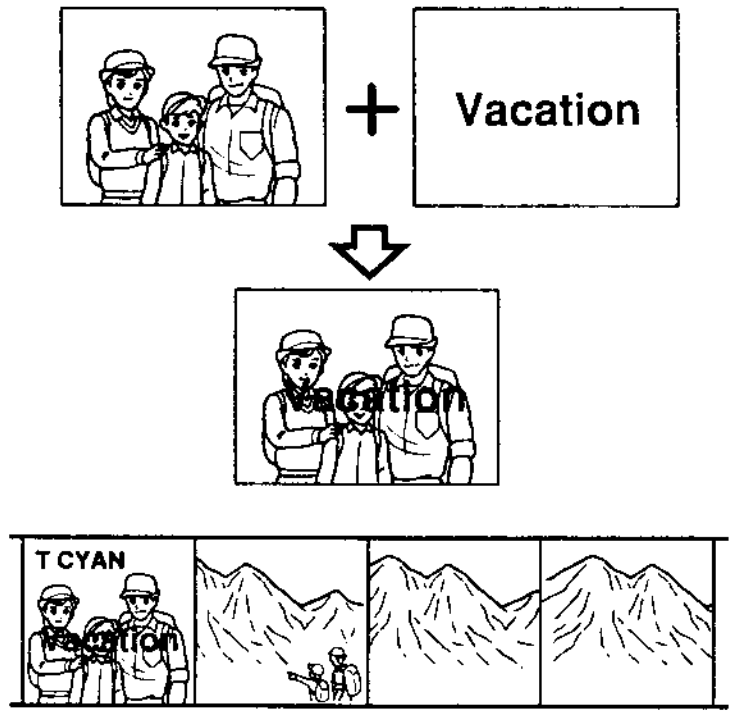

(R-2)

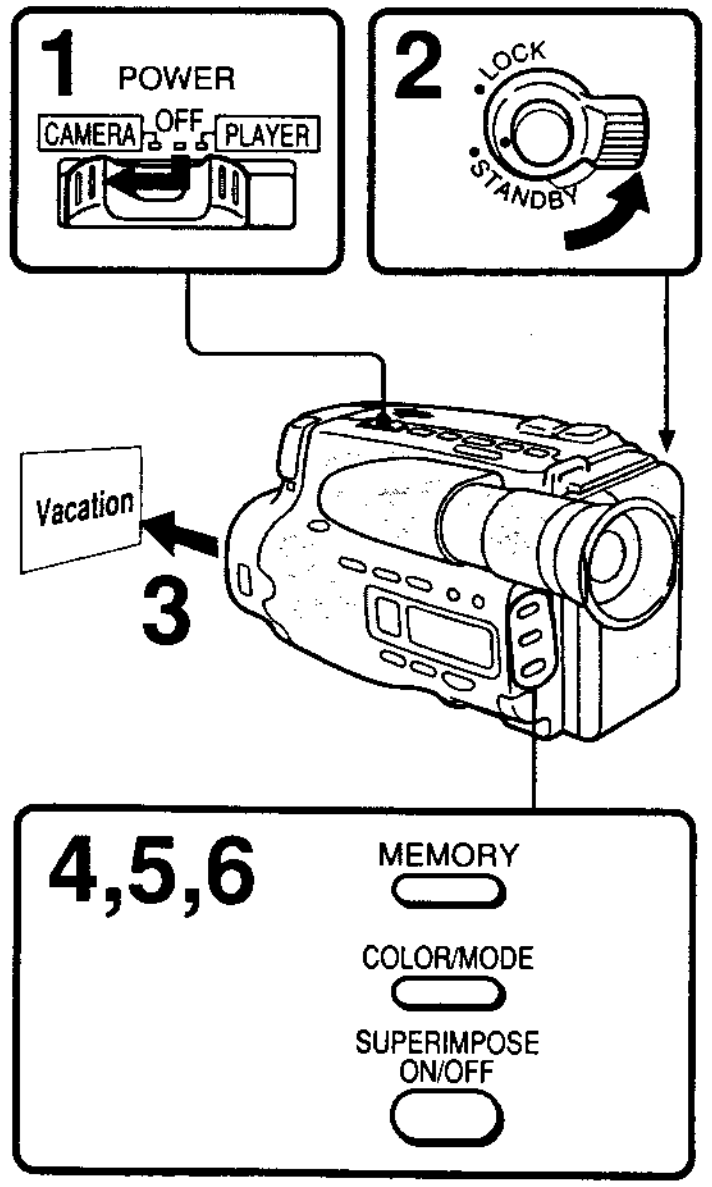

You can superimpose your own hand-written message or illustration (title) over the picture while you are recording. **(R-1)**

- You can store one title.
- You can select the colour of the title from 8 colours.
- You cannot superimpose a title on the tape already recorded.

Before superimposing, store the title.

Storing a Title

Before storing

- Make the desired title card.
  Use a plain, white card and draw the title in thick, dark letters.
- Make sure the lithium battery is installed. (page 9)

How to store (R-2)

1. **While pressing the green button, set the POWER switch to CAMERA switch.**
2. **Turn STANDBY up to set the camcorder in standby mode.**
3. **Point the camcorder to the title card and adjust the focus.**
4. **Press MEMORY to store the title.**
5. **Press COLOR/MODE and select the title colour.**
   Each time you press the button, the indicator changes as follows:

   WHT (white) → BLUE → GRN (green) → CYAN
   ↑ ↓
   BLK (black) ← YEL (yellow) ← VIO (violet) ← RED
6. **Press SUPERIMPOSE ON/OFF to turn off the title.**

To check the title
Press SUPERIMPOSE ON/OFF in the standby mode.

To store a new title
Repeat steps 3 and 4.

(R-3)

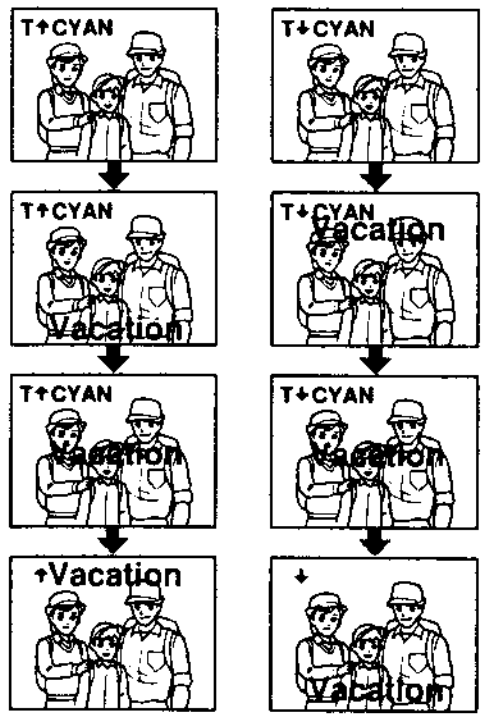

(R-4)



(R-5)

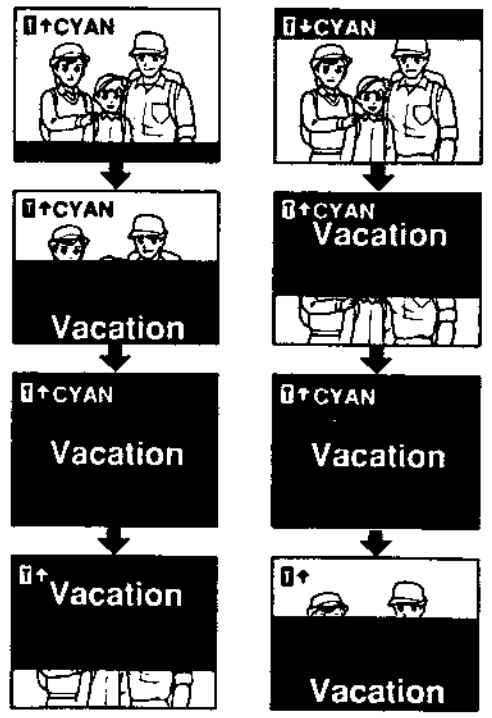

(R-6)

Various Display Modes of the Title

You can scroll your title like scrolling credits in the movies, or reverse the title.
Select the display mode of the title from the following table.

Display mode	Indicator in the viewfinder
Scrolling up the title (R-3)	↑
Scrolling down the title (R-3)	↓
Reversing the title with the picture (R-4)	🆃
Scrolling up the reversed title (R-5)	🆃↑
Scrolling down the reversed title (R-5)	🆃↓
Normal display mode	No indicator

Selecting the display mode
Before displaying the title, press COLOR/MODE until the indicator of the mode you want appears. **(R-6)**

Function of the COLOR/MODE Button

This button has a double function: one is to select the title colour and the other is to select the title display mode. If the title is displayed, this button functions as the colour selection button, and if it is not, it functions as the mode selection button.

(R-7)

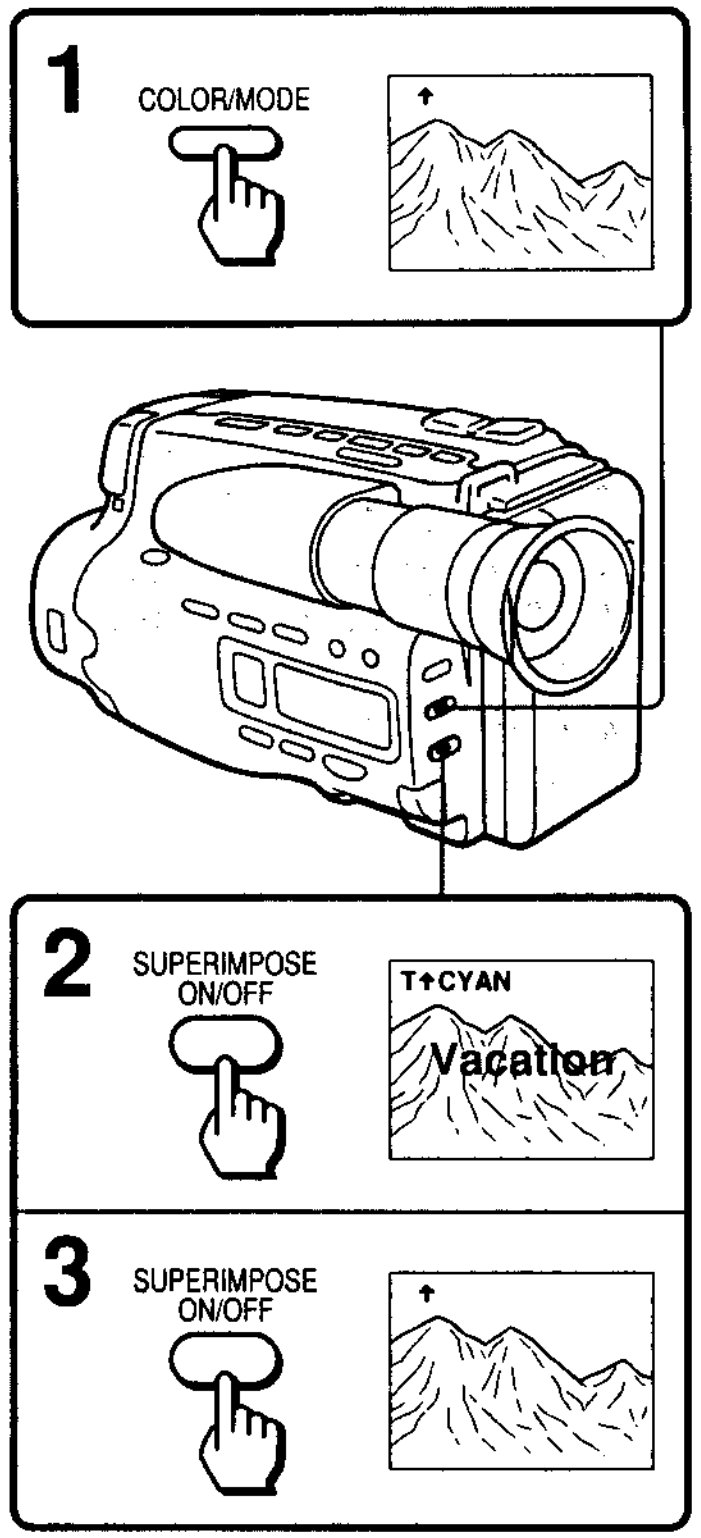

Superimposing a Title

Superimposing a Title on Your Tape

The following shows how to superimpose a title using an example in which the title scrolls up. **(R-7)**

1 **Press COLOR/MODE to select the display mode of the title in the standby mode.**

2 **Press SUPERIMPOSE ON/OFF at the point from which you want to insert the title, during recording.**
You can change the title colour by pressing COLOR/MODE. Each time you press the button, the colour indicator changes.

3 **Wait for a while and press SUPERIMPOSE ON/OFF again.**
The title goes out.

About the colour and the display mode indicators
The colour and the display mode indicators inside the viewfinder are not recorded.

To scroll the title without stopping at the center of the screen
Press SUPERIMPOSE ON/OFF twice continuously at the point from which you want to insert the title.

(T-1)

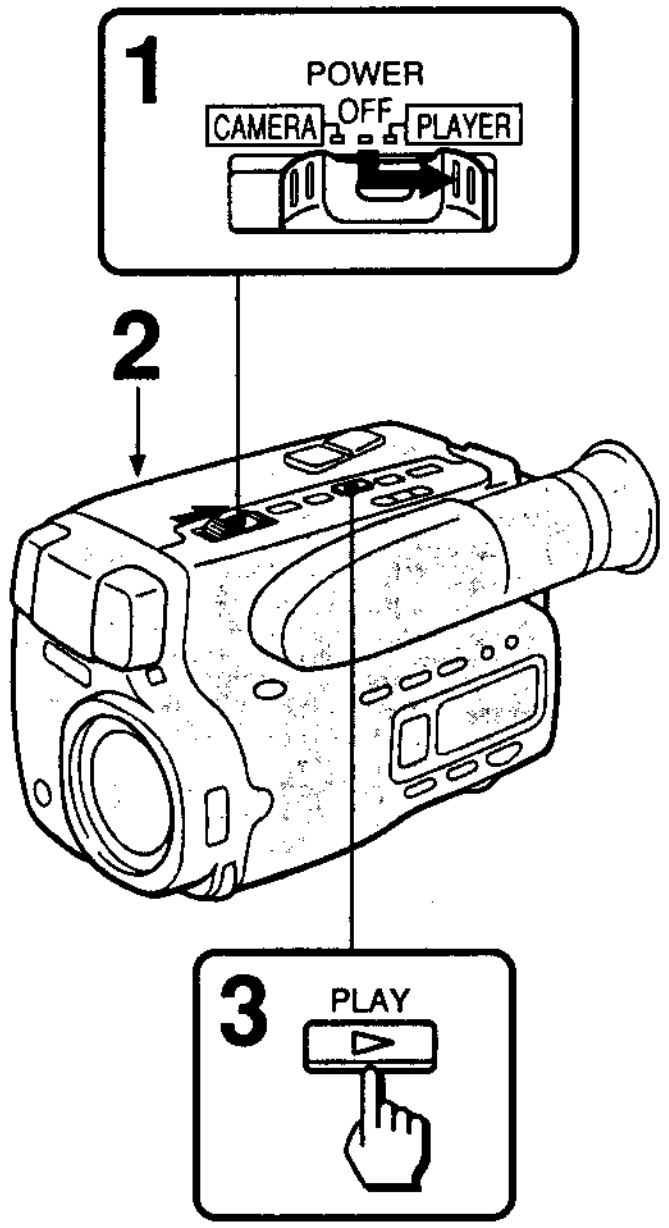

Playing Back a Tape

Turn on the TV, and select the channel for viewing a playback picture (set the TV/VIDEO selector to VIDEO).
Of course, you can monitor the playback picture inside the viewfinder at the same time.
(T-1)

1 **While pressing the green button, set the POWER switch to PLAYER.**

2 **Insert a tape.**

3 **Press ▷.**
Playback starts.

To view a still picture, press ❚❚ during playback.
To resume playback, press ❚❚ or ▷ again.

Notes
- **This unit has function to play back the tapes recorded in the Hi8 video system (in SP mode only), though the function it has is very basic.** You cannot get such finely detailed pictures as you could get with the video camera recorder with a Hi8 video system. Noise may result when you play back the tapes recorded in the Hi8 video system on this unit.
- When the still picture mode lasts for 5 minutes or more, the camcorder automatically enters the stop mode.

To rewind the tape, press ◀◀.

To advance the tape raidly, press ▶▶.

To stop the tape, press □.

To stop the tape momentarily, press ❚❚.

In the playback pause mode, you can view the picture in a sequence of stop-motion images by pressing EDITSEARCH. If you keep pressing EDITSEARCH, you can view the picture playback in the forward or reverse direction.

Note
Streaks appear and sound is muted in the still picture mode.

(T-2)

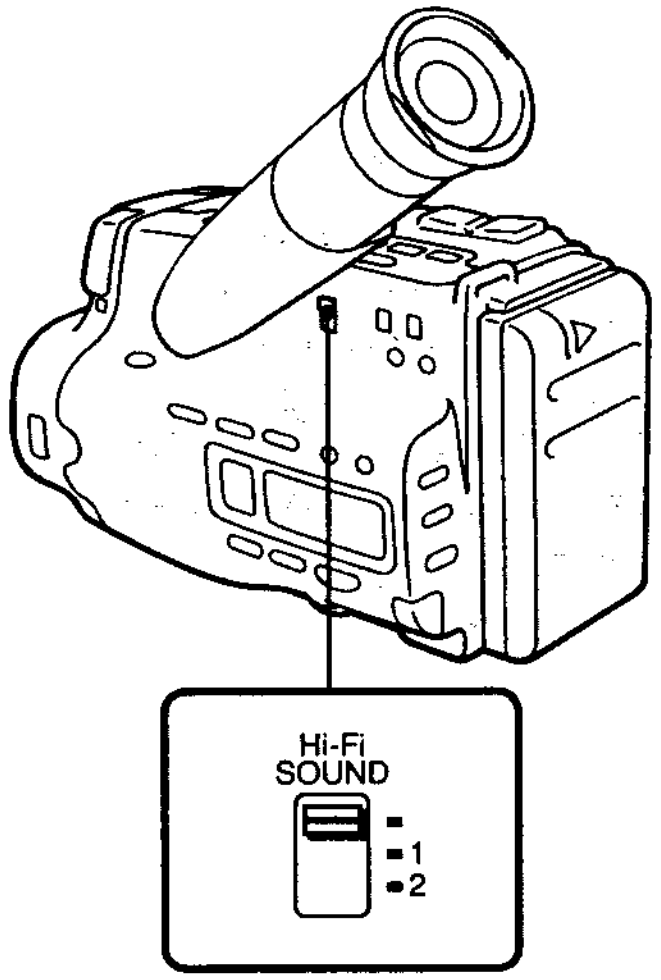

(T-3)

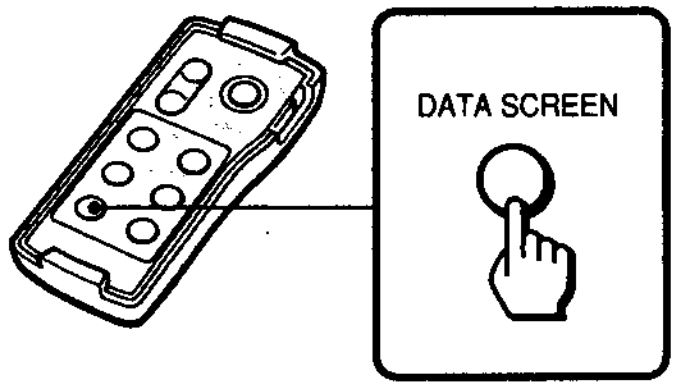

Playing Back a Tape

Monitoring a High-Speed Picture

To locate a scene (picture search)
Keep pressing ◀◀ or ▶▶ during playback. You can monitor the picture at high speed as long as you keep pressing the button.
To resume a normal playback, release the button.

To locate a scene quickly (skip scan)
Keep pressing ◀◀ during rewinding, or ▶▶ while advancing the tape rapidly.
You can monitor the picture at high speed as long as you keep pressing the button.
To resume a normal fast forwarding or rewinding, release the button.
To resume a normal playback, press ▷.

Selecting the Monitor Sound

(T-2)

You can select the playback sound with the Hi-Fi SOUND switch.

When playing back a Hi-Fi stereo sound recorded tape
Set the switch to "green postion."

When playing back an AFM monaural sound recorded tape
Set the switch to "green position."
Monaural sound comes from both audio jacks.

When playing back a dual sound track tape
Set the switch to "1" or "2".

Displaying the Viewfinder Screen Indicators on the TV

(T-3)

Press DATA SCREEN on the Remote Commander.
The indicators in the viewfinder screen appear on the TV.
To erase the indicators, press DATA SCREEN again.

(U)

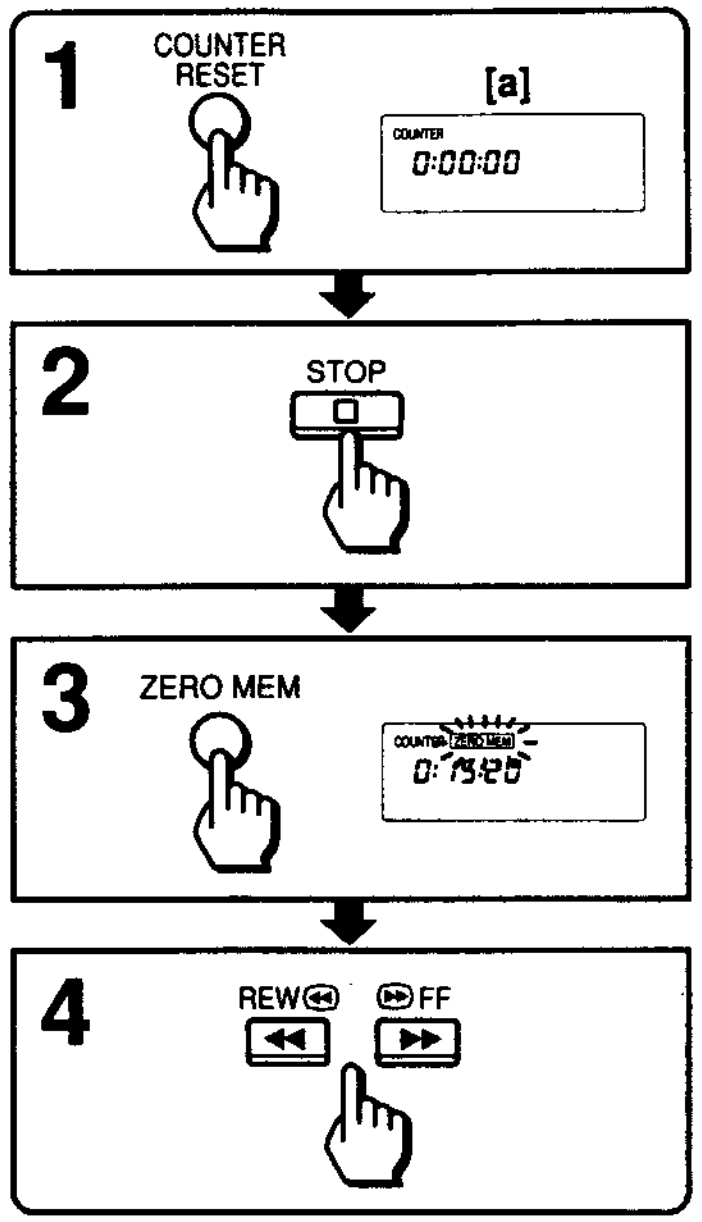

Using the Tape Counter

During recording or playback, the digits on the counter indicate the actual recording or playing time.

Indexing the Whole Tape

(U)

Press COUNTER RESET at the beginning of the tape so that the counter shows "0:00:00."

Returning to a Pre-registered Point

1 **During playback, press COUNTER RESET at the point you later want to locate.**
The counter shows "0:00:00."
[a] Display window

2 **Press □ when playback has finished.**

3 **Press ZERO MEM.**
The "ZERO MEM" indicator flashes in the display window and inside the viewfinder.

Note
Be sure to press ZERO MEM after you stop the tape. It does not function during recording or playback.

4 **Press ◀◀ or ▶▶.**
The tape rewinds or advances and stops automatically when the counter reaches approximately zero.

Notes on the tape counter and ZERO MEM

- The counter reading and the point on the tape may not correspond exactly. Use the counter as a guide. There will be a time lag of several seconds especially when you repeat fast-forwarding/rewinding and play back a tape recorded in LP and SP modes mixed.
- The ZERO MEM mode is canceled automatically once the tape is rewound or sent forward to the point you pre-registered.

(V)

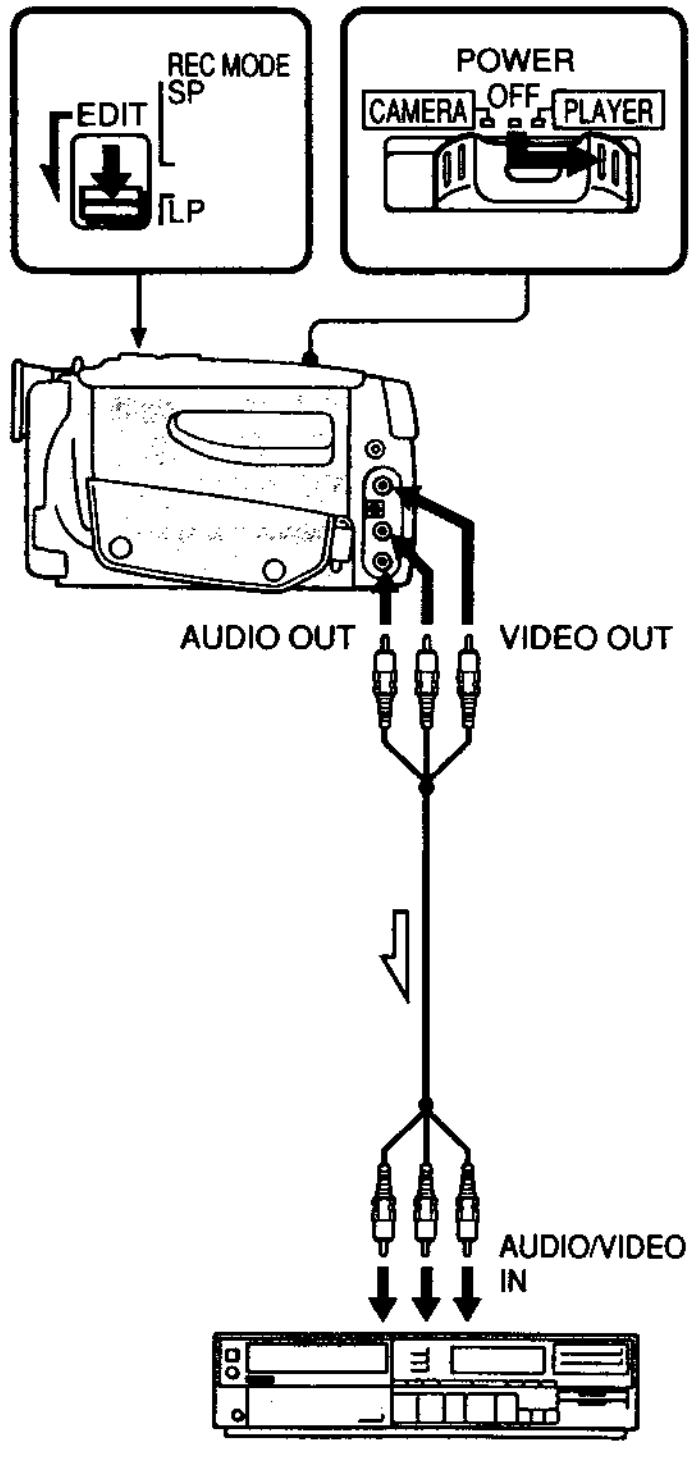

⊿ : Signal flow

Editing onto Another VTR

You can create your own video programme by editing with any other **8** 8 mm, **Hi8** Hi8 mm, **B** Betamax, **VHS** VHS, **S-VHS** S-VHS, **VHS-C** VHSC, **S-VHS-C** S-VHSC VTR that has video/audio inputs.

Before You Begin

- Make connections using the supplied A/V connecting cable. **(V)**
- Set the input selector of the VTR to LINE, if available.

Operation

1 Insert a tape to be recorded on into the recording VTR.
2 Move EDIT on the camcorder in the direction of the arrow. (EDIT ON)
3 Set the POWER switch of the camcorder to PLAYER and insert your recorded tape.
4 Play back the tape on the camcorder and locate the point where you want to start editing and set the camcorder to the playback pause mode.
5 On the recording VTR, locate the recording start point and set the VTR to the recording pause mode.
6 Press ❚❚ on the camcorder and on the VTR simultaneously to start editing.

To stop editing momentarily, press ❚❚ on the VTR.

To edit more scenes, repeat steps 4 to 6.

To stop editing, press □ on the camcorder and on the VTR.

Use of the EDIT switch
When you set EDIT in the direction of the arrow (EDIT ON), picture deterioration resulting from editing can be kept to the minimum. Don't use the edited tape for multiple generations of editing. After editing, move EDIT in the opposite direction of the arrow (EDIT OFF).

(W-1)

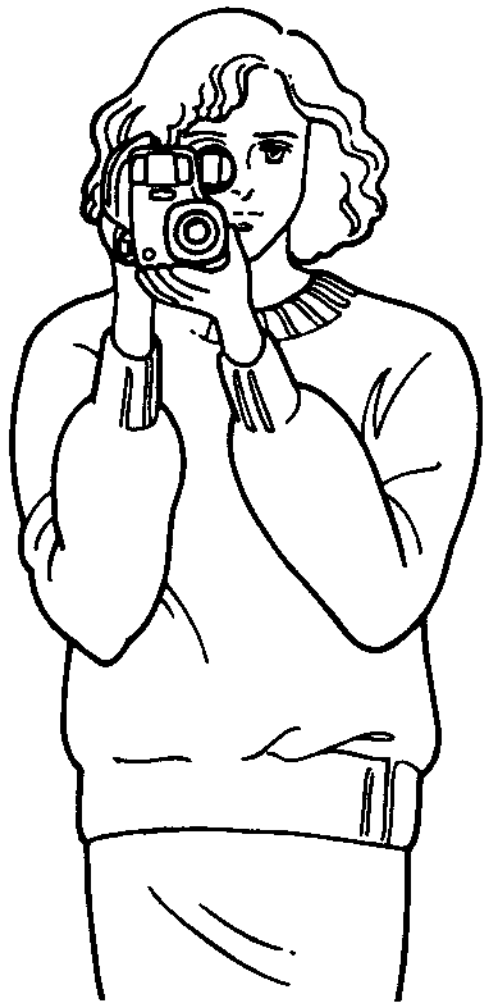

(W-2)

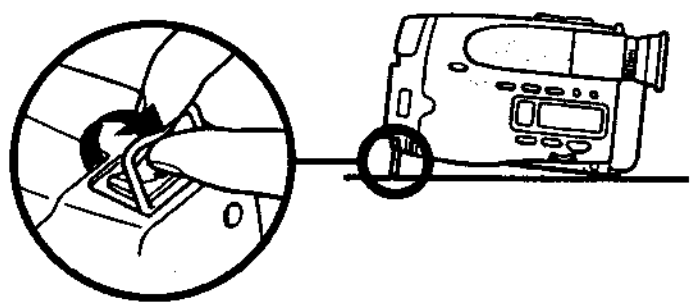

Hints for Better Shooting

Getting Stable Pictures

Assume good posture for shooting (W-1)
For hand-held shots, it is important to hold the camcorder properly.

- Hold the camcorder firmly and secure it with the grip strap so that you can easily manipulate the camcorder with your thumb.
- Place your right elbow against your side.
- Place your left hand under the camcorder to support it. When adjusting the focus manually, make sure the camcorder does not move.
- Stand opposite the object and let your feet take a comfortable stance.
- Place your eye firmly against the viewfinder eyecup.

Use a tripod
If you have a tripod for a still camera, it can also be used with the camcorder. If a tripod is not available, try placing the camcorder on a table top or any other flat surface of suitable height.

Note
When attaching a non-Sony tripod, make sure that the length of the camera mounting screw is less than 6.5 mm. Otherwise, the screw may damage the inner parts of the camcorder.

Use the built-in stand (W-2)
This camcorder has a built-in stand at the bottom. Lift it up until it clicks and place the camcorder on a flat surface, such as a table. Use the stand when:

- You want to correct any camera-shake.
- You record the subject using the Remote Commander.

Do not attach a shoulder belt through the stand.

Keep the horizontal plane level
The horizontal plane can be easily determined by using the viewfinder frame as a reference.

(W-3)

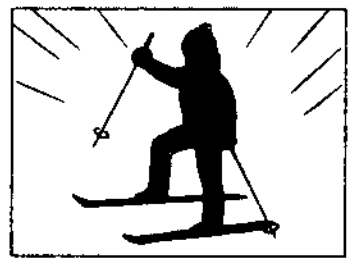

Hints for Better Shooting

Lighting

(W-3)

Shoot with the sun behind you
When the light source is behind the subject, or in the following situations, the subject will be recorded too dark and the background too light.

- The subject is indoors and there is a window behind the subject.
- Bright light sources such as fluorescent or incandescent lamps are included in the scene.
- You are shooting a person wearing white or shiny clothes in front of a white backgrounds. In this case, the face will be recorded too dark.

Use video light in the dark
To get the best colours, you must maintain a very high lighting level. When using a video light, attach it to this camcorder with a video light attachment (not supplied.)

(X-1)

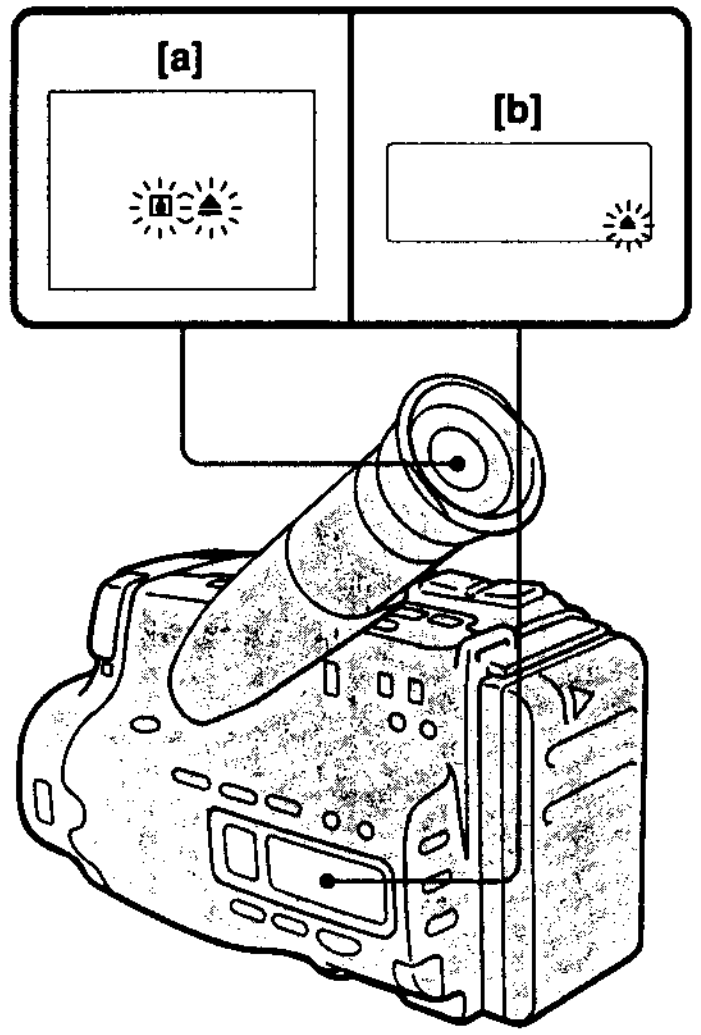

(X-2)

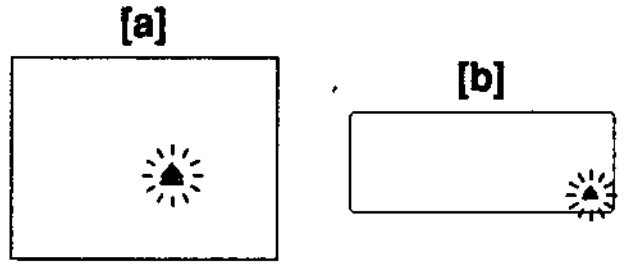

Notes and Precautions

Notes on Moisture Condensation

If the camcorder is brought directly from a cold place to a warm place, moisture may condense inside the camcorder, on the surface of the tape, or on the lens. In this condition, the tape may stick to the head drum and be damaged or the camcorder may not operate correctly. To prevent possible damage under these circumstances, the camcorder is furnished with a moisture sensor. However, take the following precautions:

If moisture condenses inside the camcorder (X-1)
When the ▣ and ⏏ indicators inside the viewfinder **[a]** and the ⏏ indicator in the display window **[b]** flash, moisture condenses inside the camcorder. In this case, no function except for cassette ejection will work.
Eject the tape, turn off the camcorder, and leave it with the cassette holder open for about 1 hour.
The camcorder can be used again if ⏏ indicator does not appear when the power is turned on again.

If moisture condenses on the surface of the tape (X-2)
If moisture is present on the surface of the tape when the tape is inserted and a tape transport button (▷, ▶▶, etc.) is pressed, the ⏏ indicator flashes inside the viewfinder **[a]** and in the display window **[b]**.
In such case, no function except for tape ejection will work.
Eject the tape and let it sit for about 1 hour.
The tape can be used again if the ⏏ indicator does not appear when the tape is inserted and a tape transport button is pressed.

If moisture condenses on the lens
No indicator will appear, but the picture becomes dim.
Turn off the power and leave the camcorder unused for about 1 hour.

(Y-1)

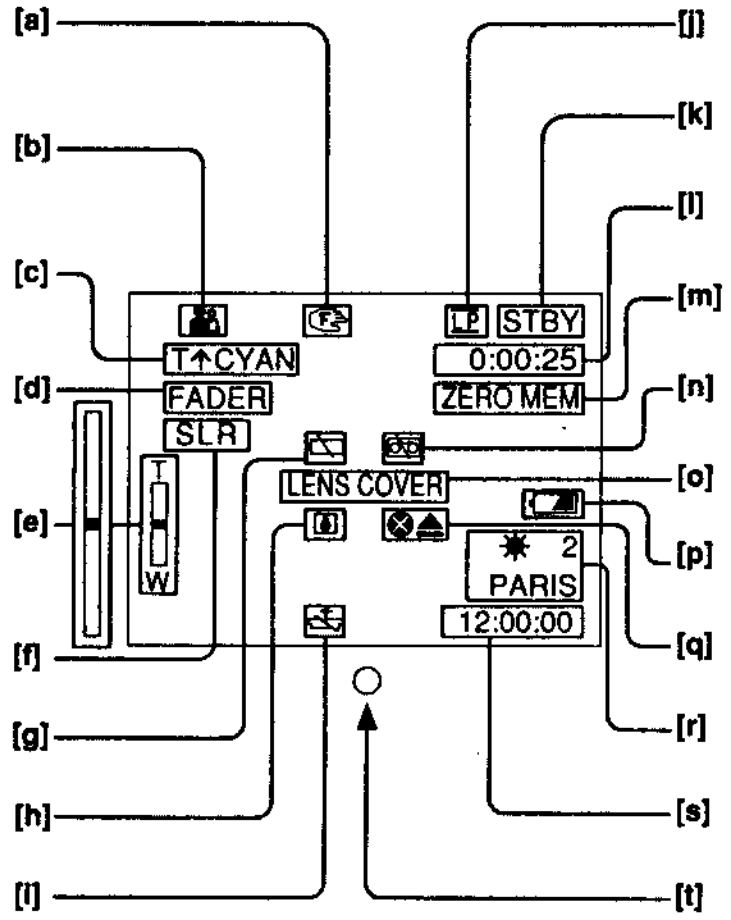
[a]
[b]
[c]
[d]
[e]
[f]
[g]
[h]
[i]
[j]
[k]
[l]
[m]
[n]
[o]
[p]
[q]
[r]
[s]
[t]
LP
STBY
T↑CYAN
0:00:25
FADER
ZERO MEM
SLR
T
W
LENS COVER
2
PARIS
12:00:00

Indicators inside the Viewfinder and in the Display Window

Inside the Viewfinder

(Y-1)

- [a] Manual focusing
- [b] Setting of PROGRAM AE mode
- [c] Title mode
- [d] FADER is pressed.
- [e] POWER zoom indicator/Exposure indicator
- [f] Digital picture indicator
- [g] "Replace battery."
- [h] "Moisture has condensed."
- [i] "Replace lithium battery."
- [j] Recording/Playback mode (LP/SP)
- [k] Tape transport and camera recording mode
- [l] Tape counter
- [m]ZERO MEM is pressed.
- [n] "Exchange tape or no cassette inside."
- [o] The lens cover is closed.
- [p] Remaining capacity of battery
- [q] "Clean video heads (⊗)" or "trouble has occurred (⏏)".
- [r] World clock indicator
- [s] Date or time
- [t] Lights up during recording.
  When flashing: "Replace battery."

(Y-2)

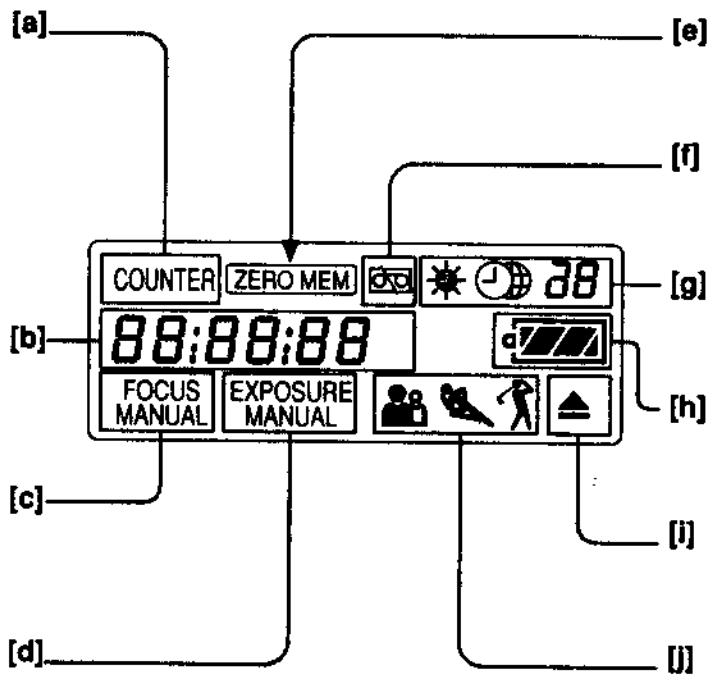
[a]
[b]
[c]
[d]
[e]
[f]
[g]
[h]
[i]
[j]
COUNTER
ZERO MEM
88:88:88
FOCUS MANUAL
EXPOSURE MANUAL

Indicators inside the Viewfinder and in the Display Window

Display Window

(Y-2)

- [a] Tape counter indicator
- [b] Date, time, or tape counter
- [c] Manual focusing
- [d] Adjusting exposure manually
- [e] ZERO MEM is pressed.
- [f] "Exchange tape or no cassette inside."
- [g] World clock indicator
- [h] Remaining capacity of a battery
- [i] "Trouble has occurred."
- [j] Program AE setting

SECTION 2
DISASSEMBLY

2-1. REMOVAL OF F PANEL ASSEMBLY

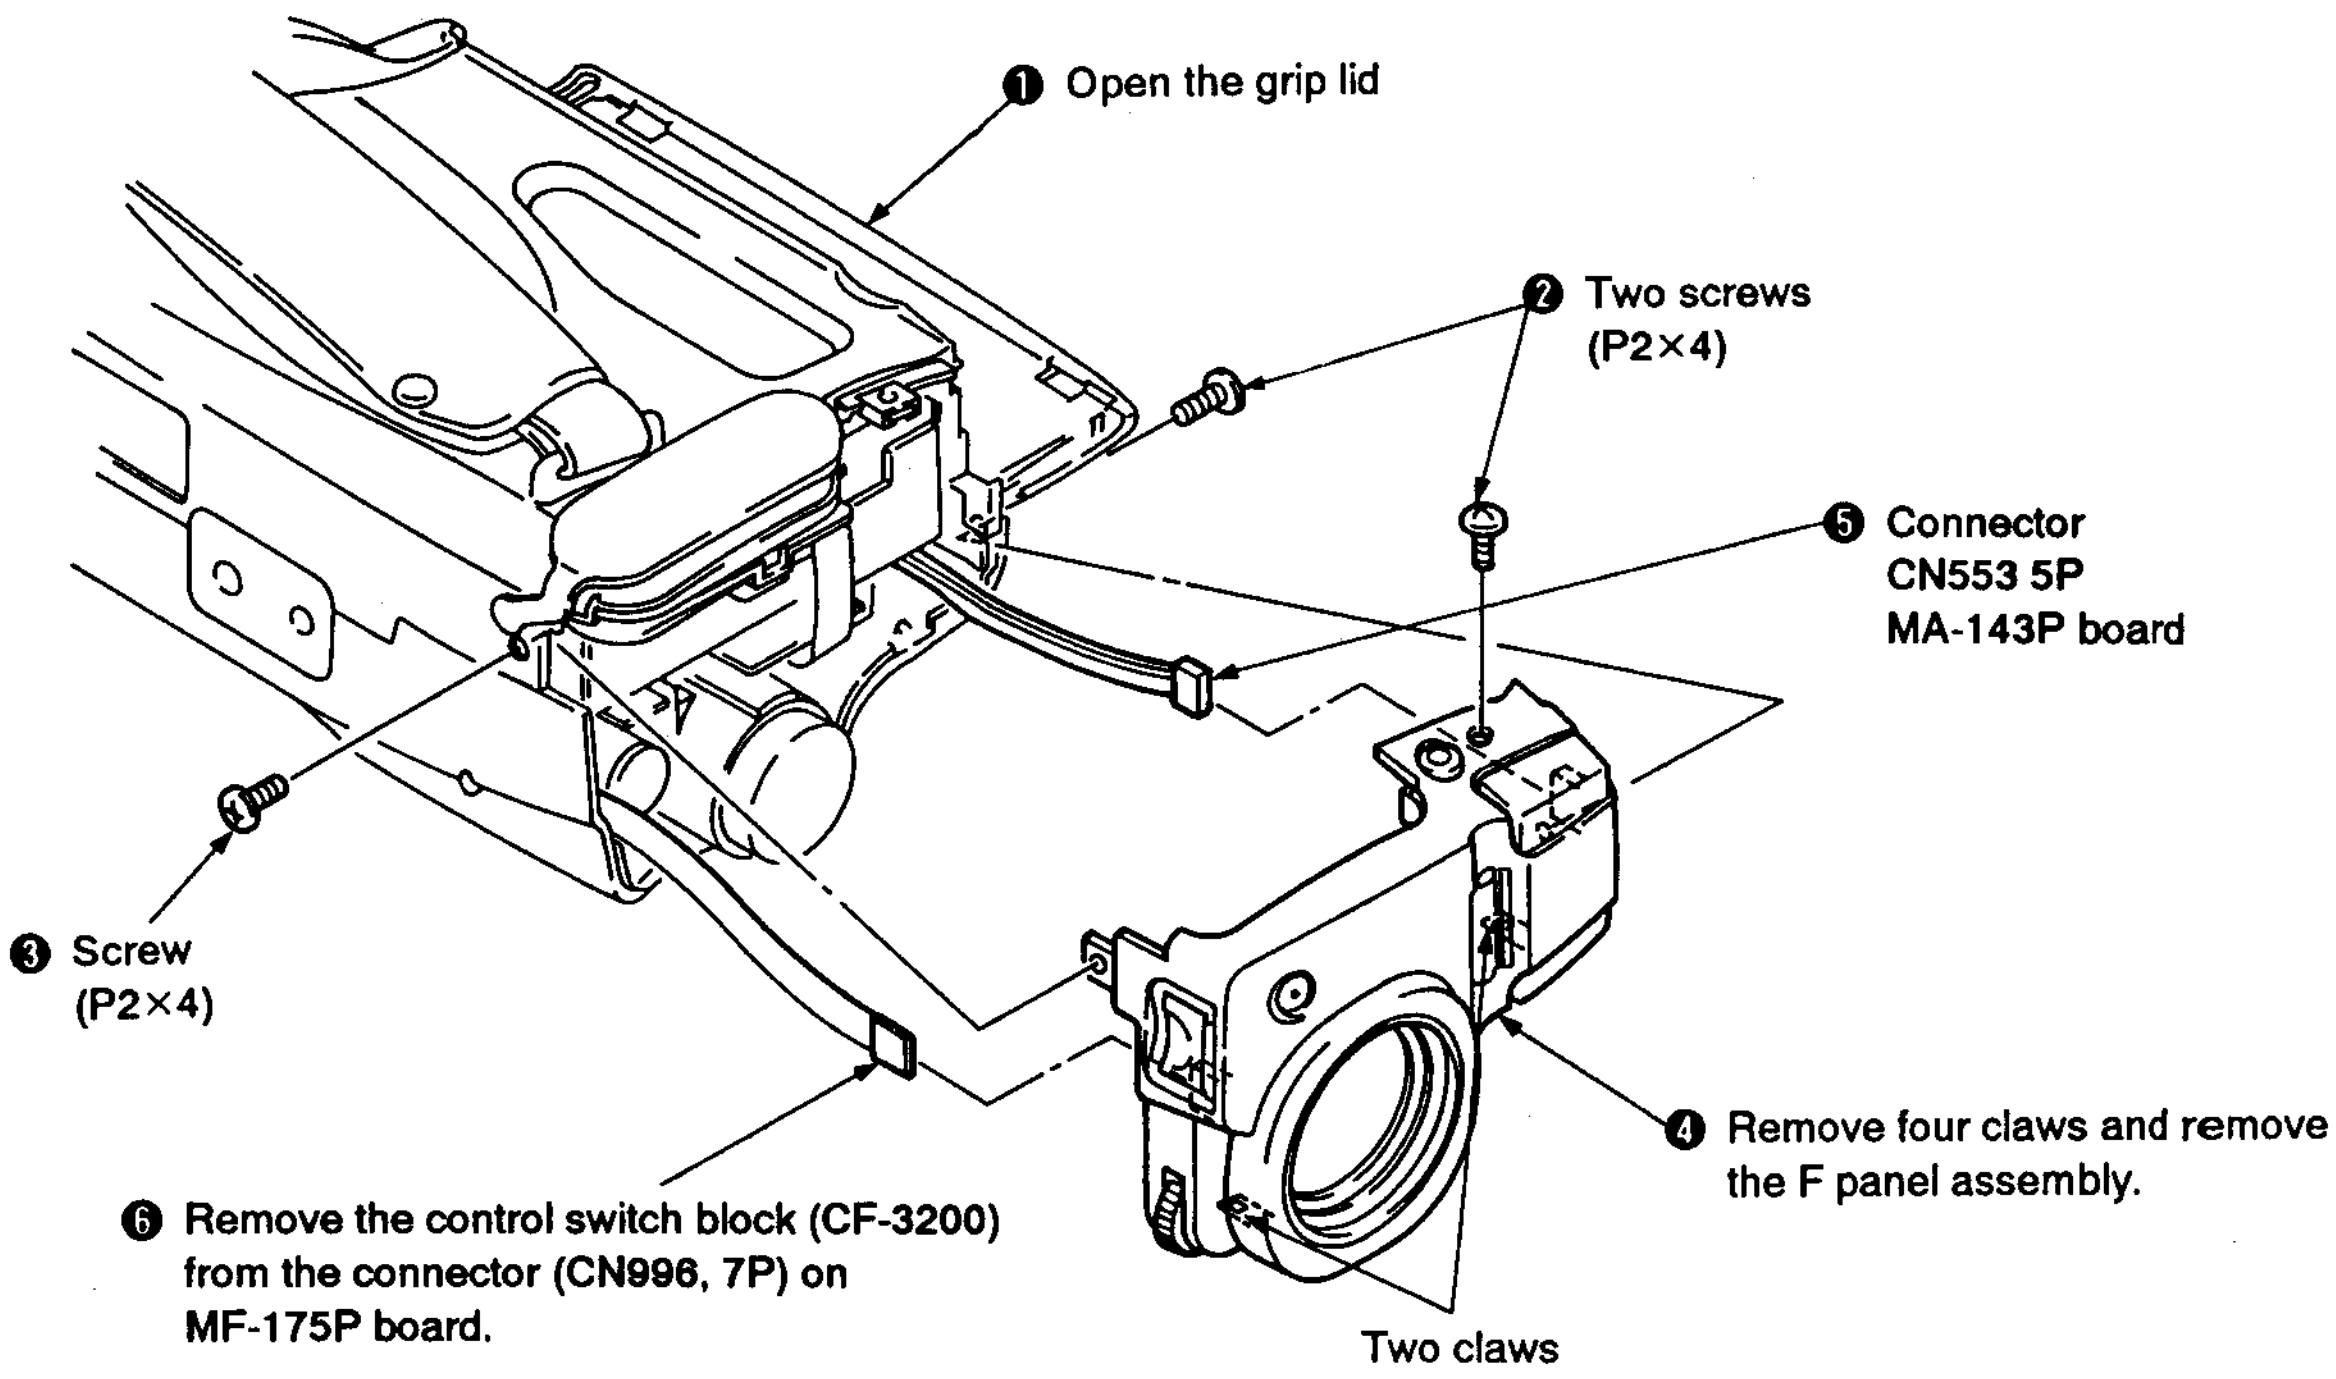
❶ Open the grip lid
❷ Two screws (P2×4)
❺ Connector CN553 5P MA-143P board
❸ Screw (P2×4)
❹ Remove four claws and remove the F panel assembly.
❻ Remove the control switch block (CF-3200) from the connector (CN996, 7P) on MF-175P board.
Two claws

2-2. REMOVAL OF CABINET (L) ASSEMBLY AND TERMINAL BOARD (JK-3100)

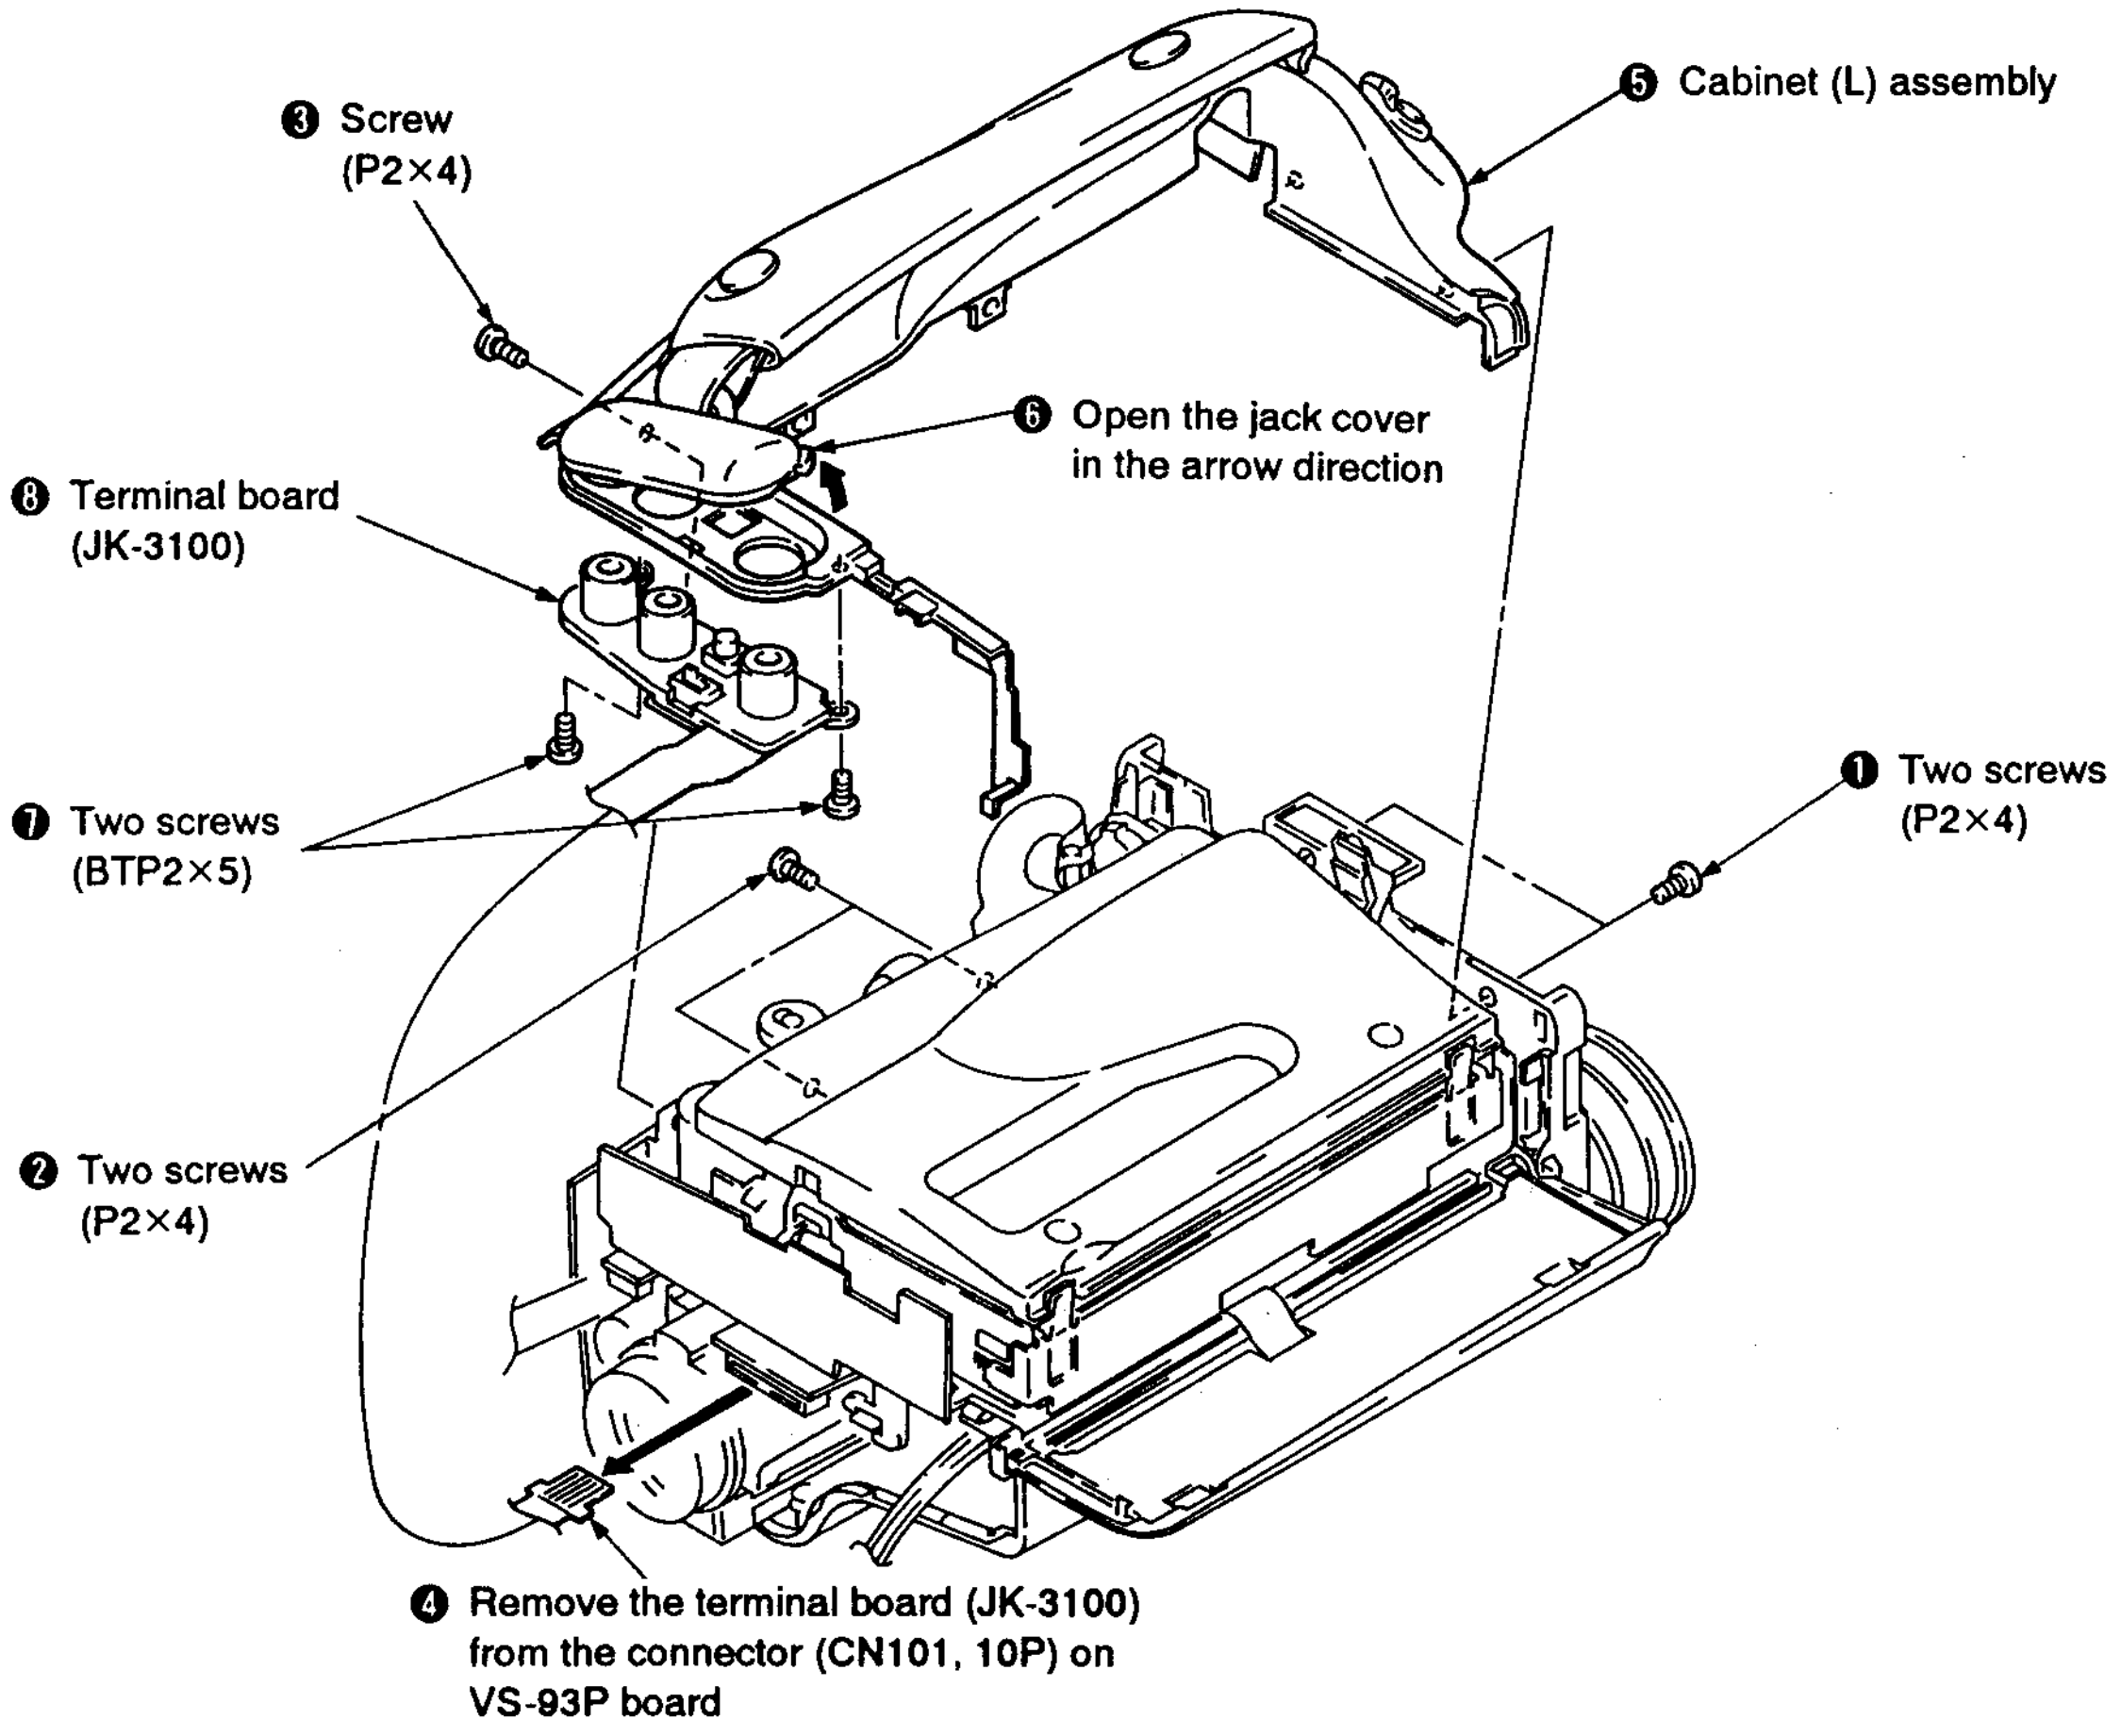
❸ Screw (P2×4)
❺ Cabinet (L) assembly
❻ Open the jack cover in the arrow direction
❽ Terminal board (JK-3100)
❶ Two screws (P2×4)
❼ Two screws (BTP2×5)
❷ Two screws (P2×4)
❹ Remove the terminal board (JK-3100) from the connector (CN101, 10P) on VS-93P board

2-3. REMOVAL OF CASSETTE LID ASSEMBLY

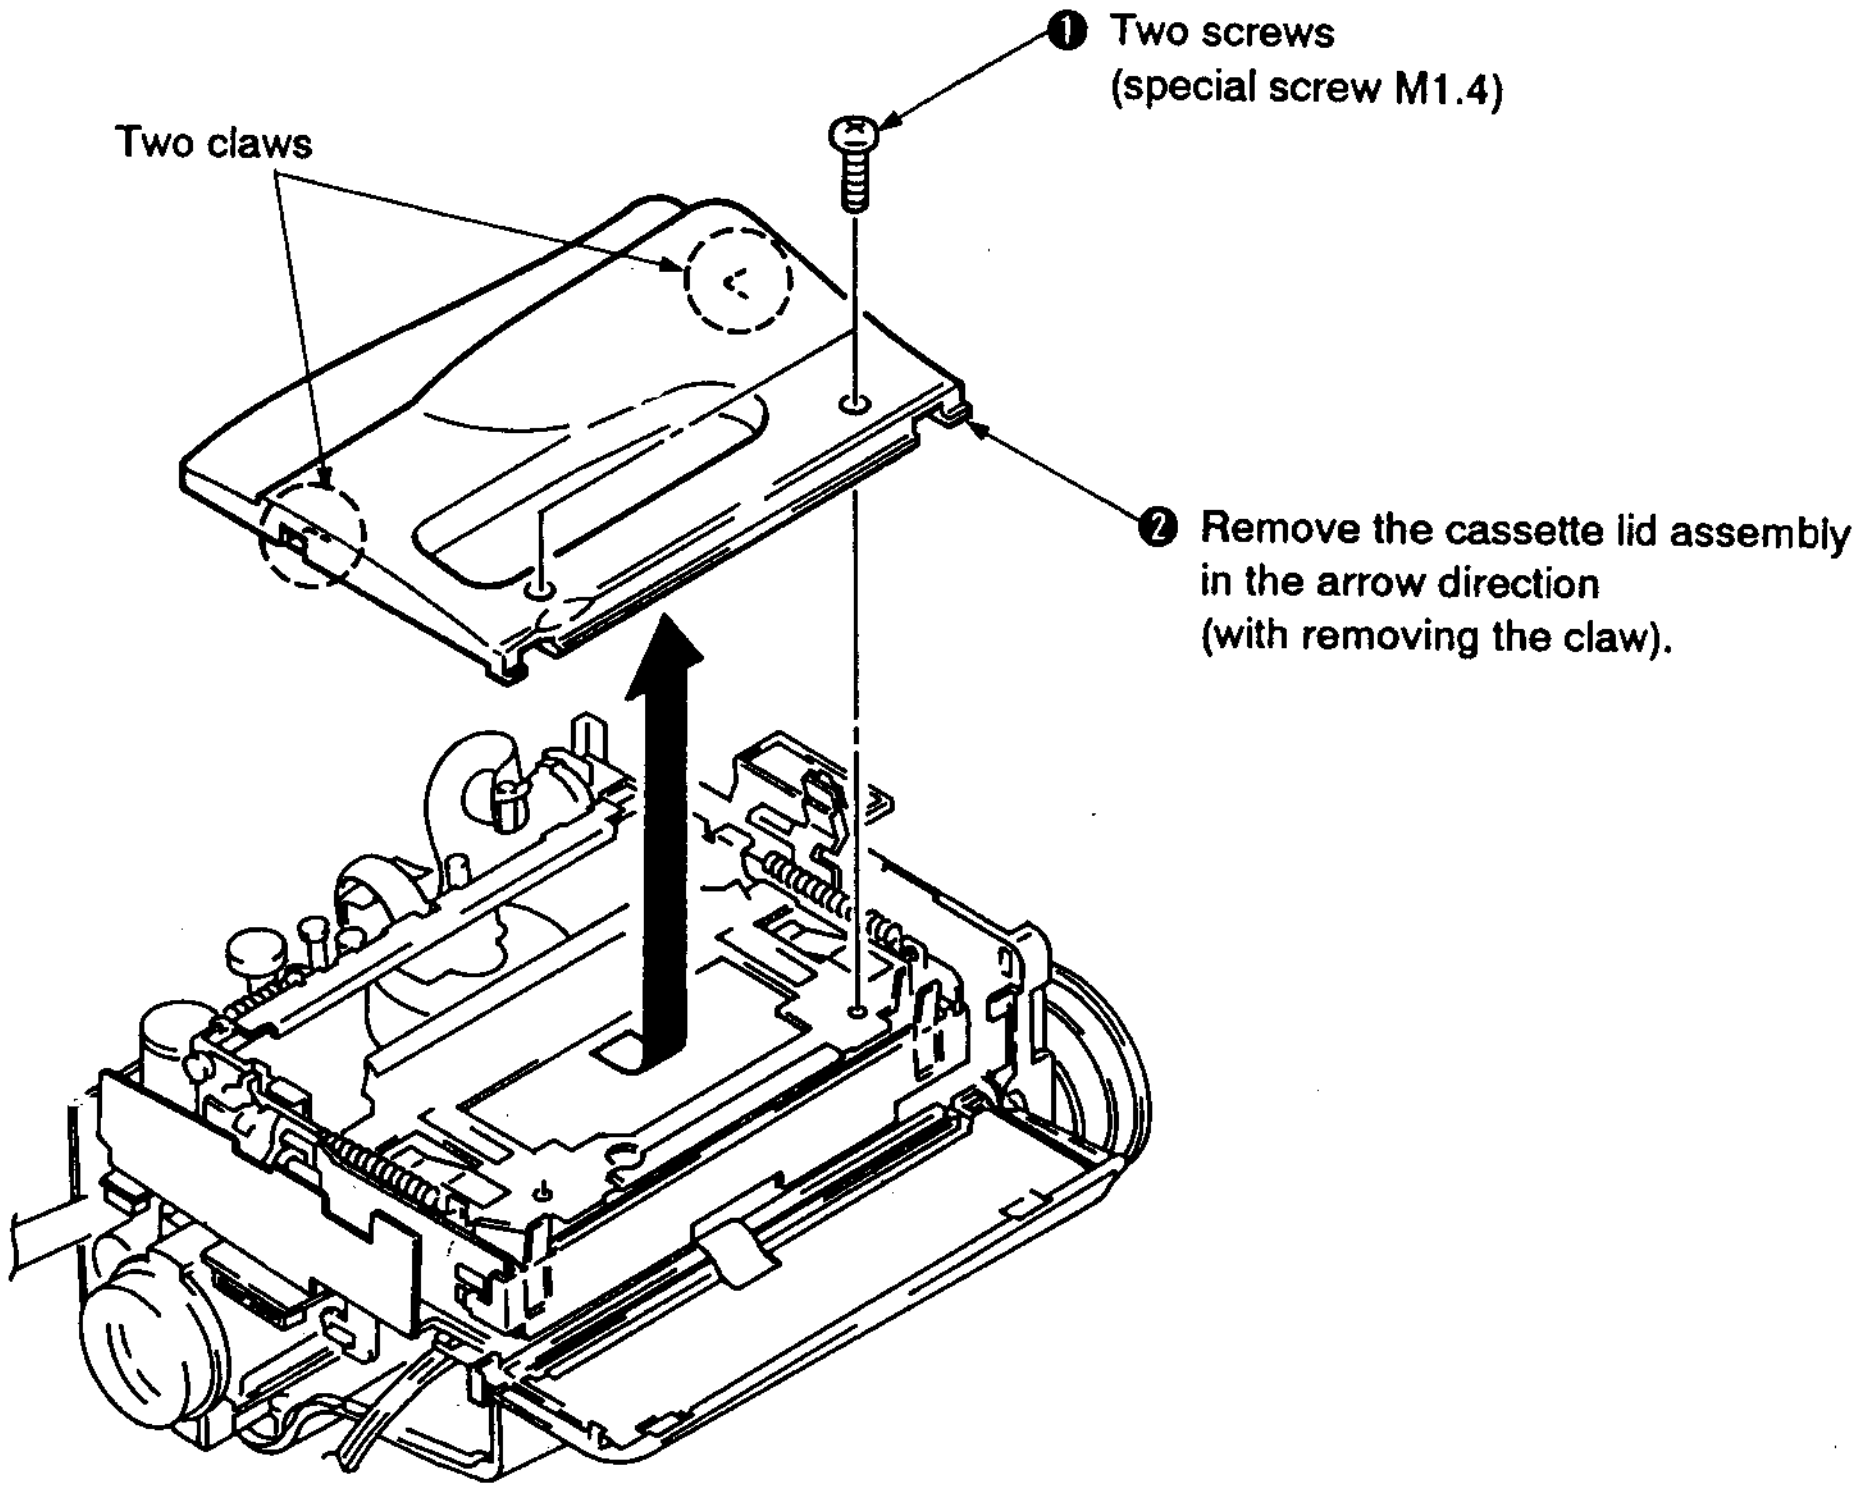
➊ Two screws
(special screw M1.4)
Two claws
➋ Remove the cassette lid assembly
in the arrow direction
(with removing the claw).

2-4. REMOVAL OF CABINET (R) ASSEMBLY

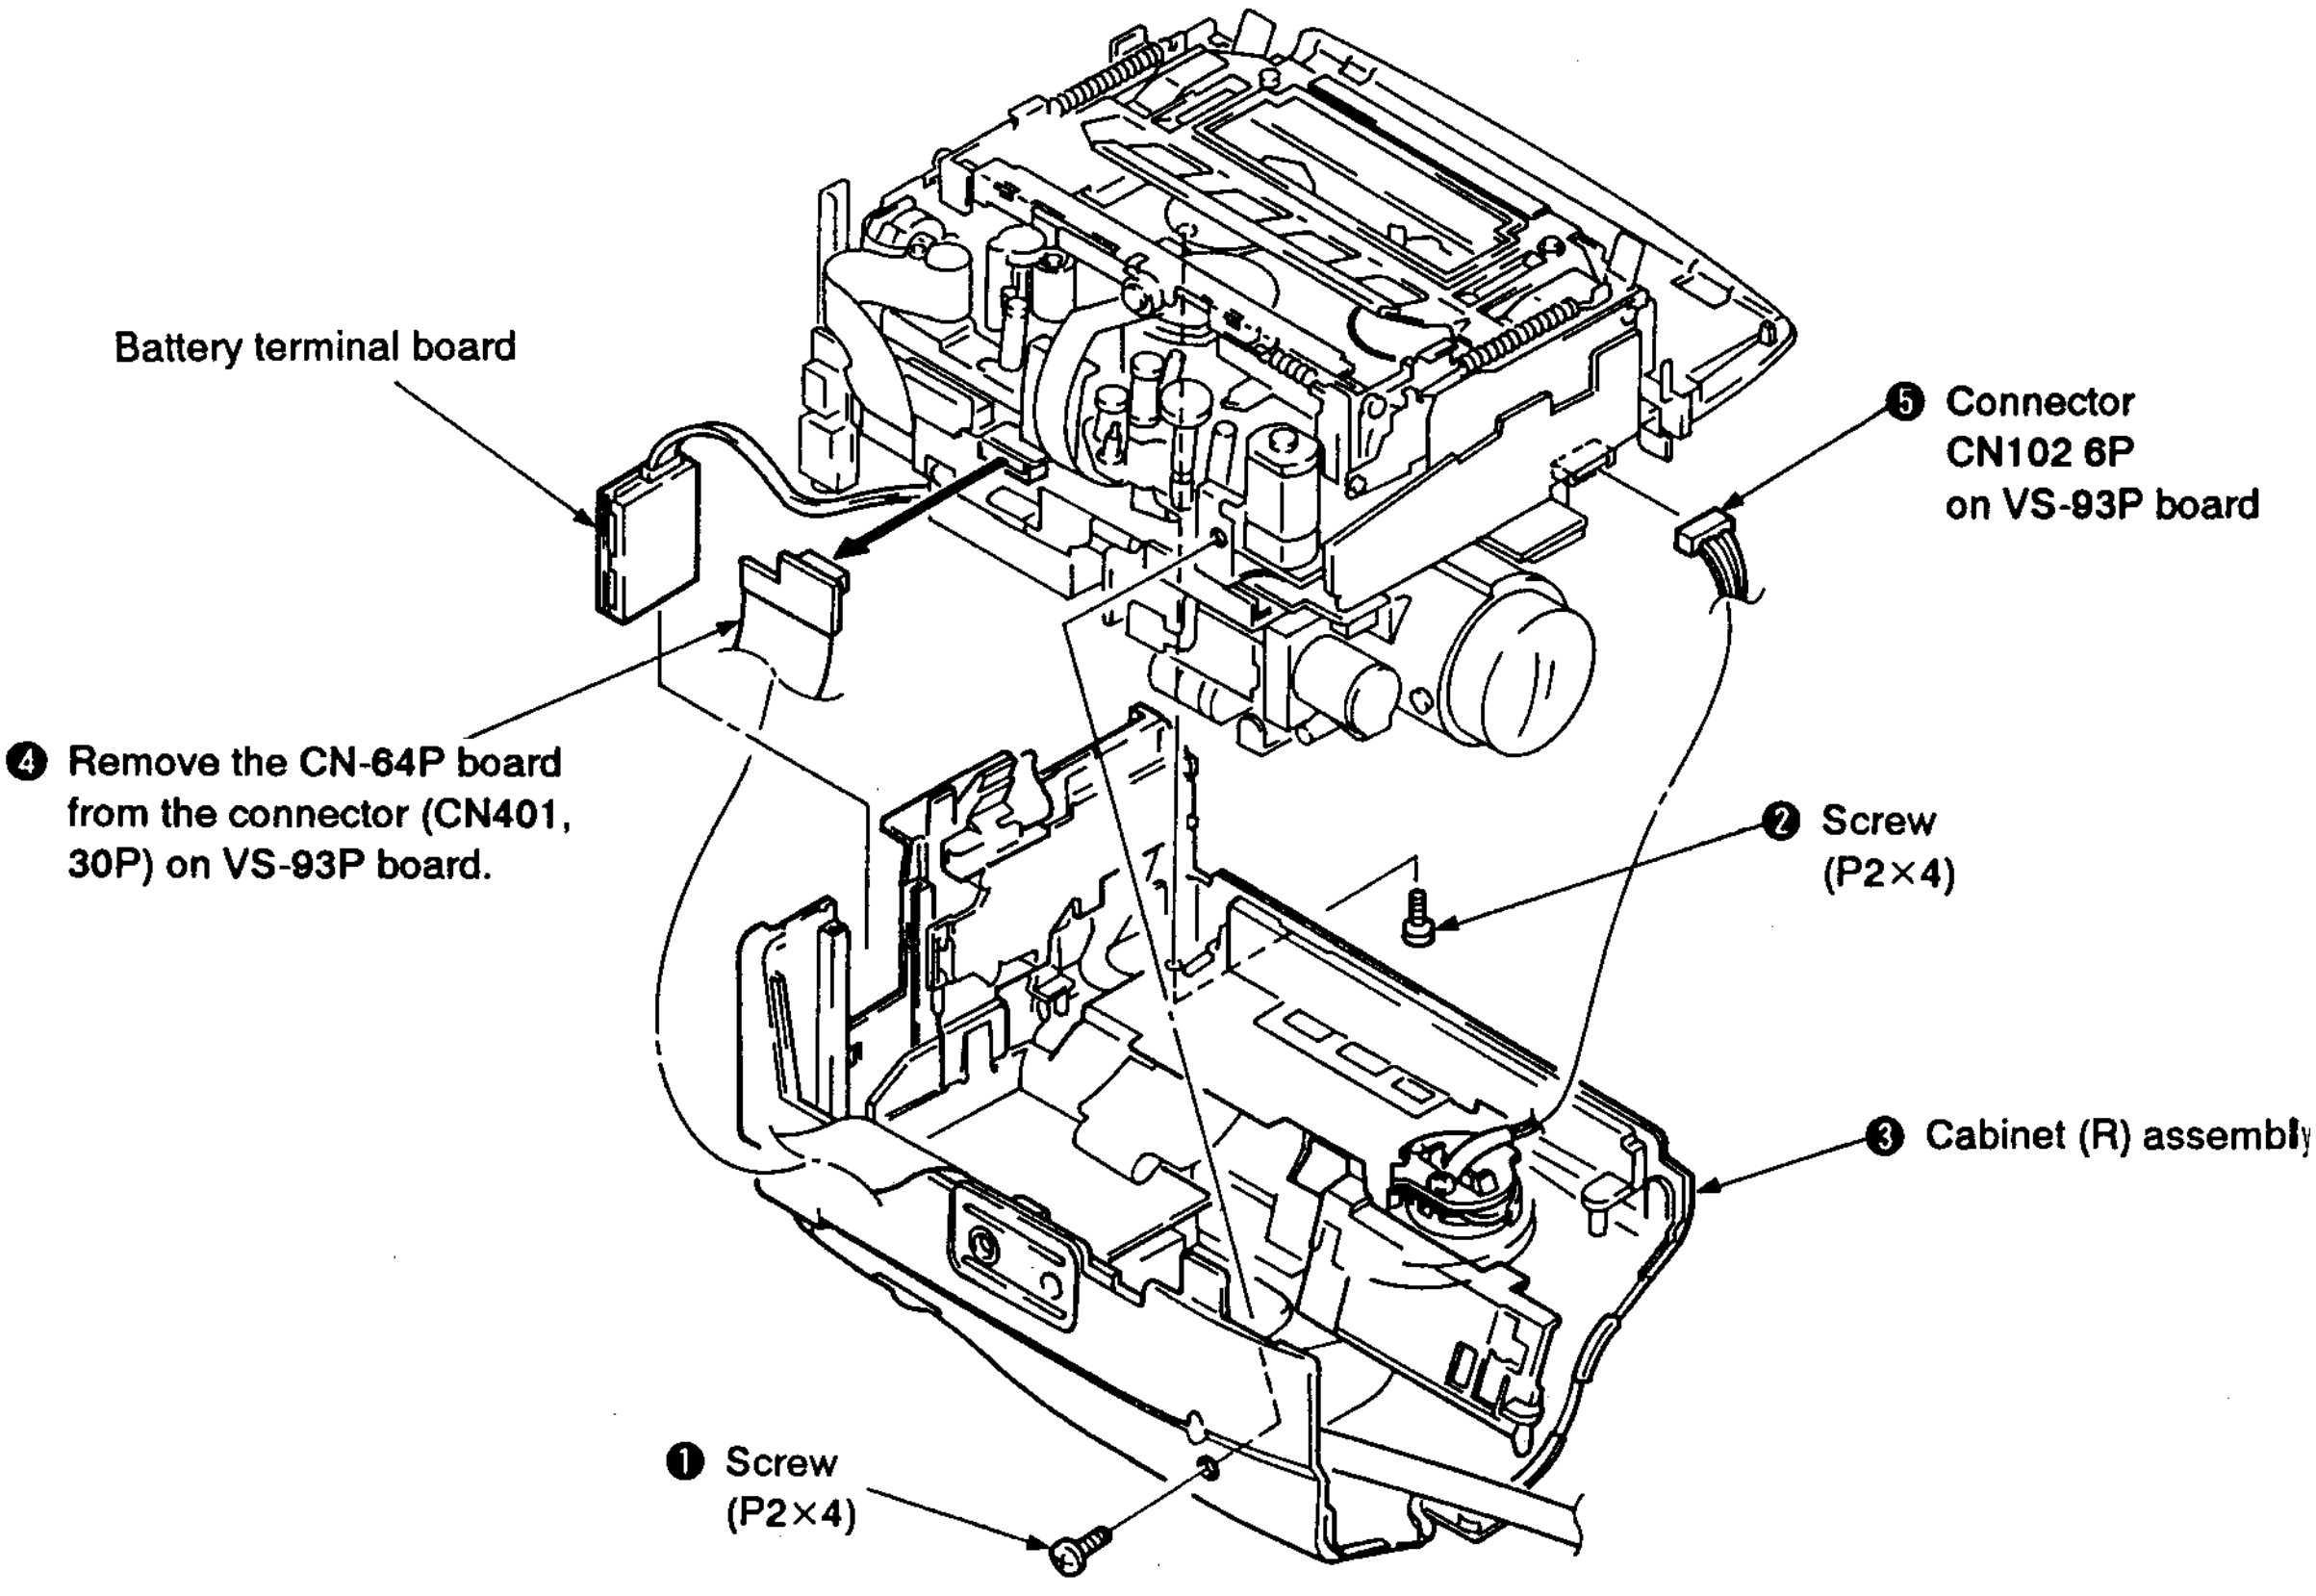
Battery terminal board
➎ Connector
CN102 6P
on VS-93P board
➍ Remove the CN-64P board
from the connector (CN401,
30P) on VS-93P board.
➋ Screw
(P2×4)
➌ Cabinet (R) assembl
➊ Screw
(P2×4)

2-5. REMOVAL OF CONTROL SWITCH BLOCK (CF-3200)

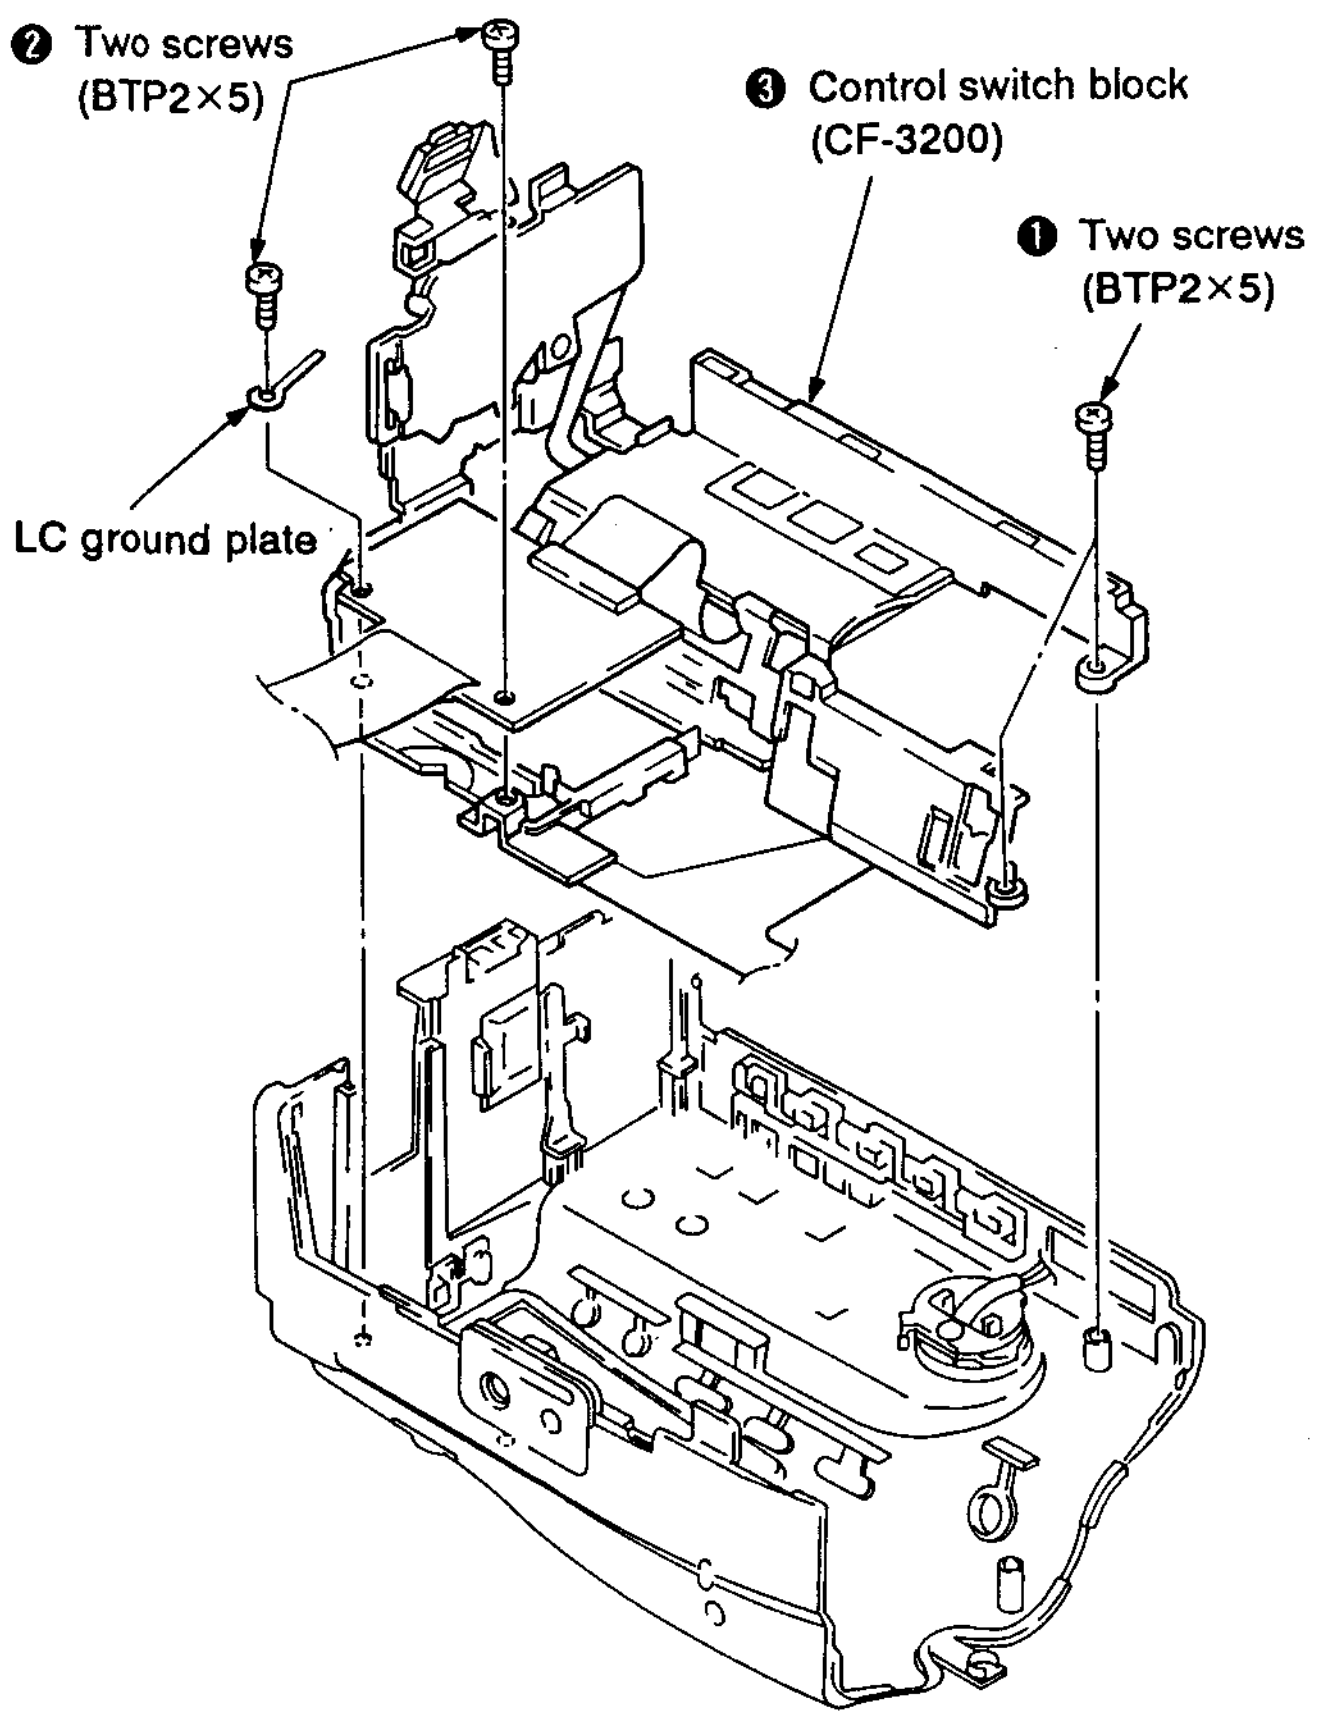
❷ Two screws
(BTP2×5)
❸ Control switch block
(CF-3200)
❶ Two screws
(BTP2×5)
LC ground plate

2-6. REMOVAL OF DD-47P BOARD (DC-DC CONVERTER UNIT)

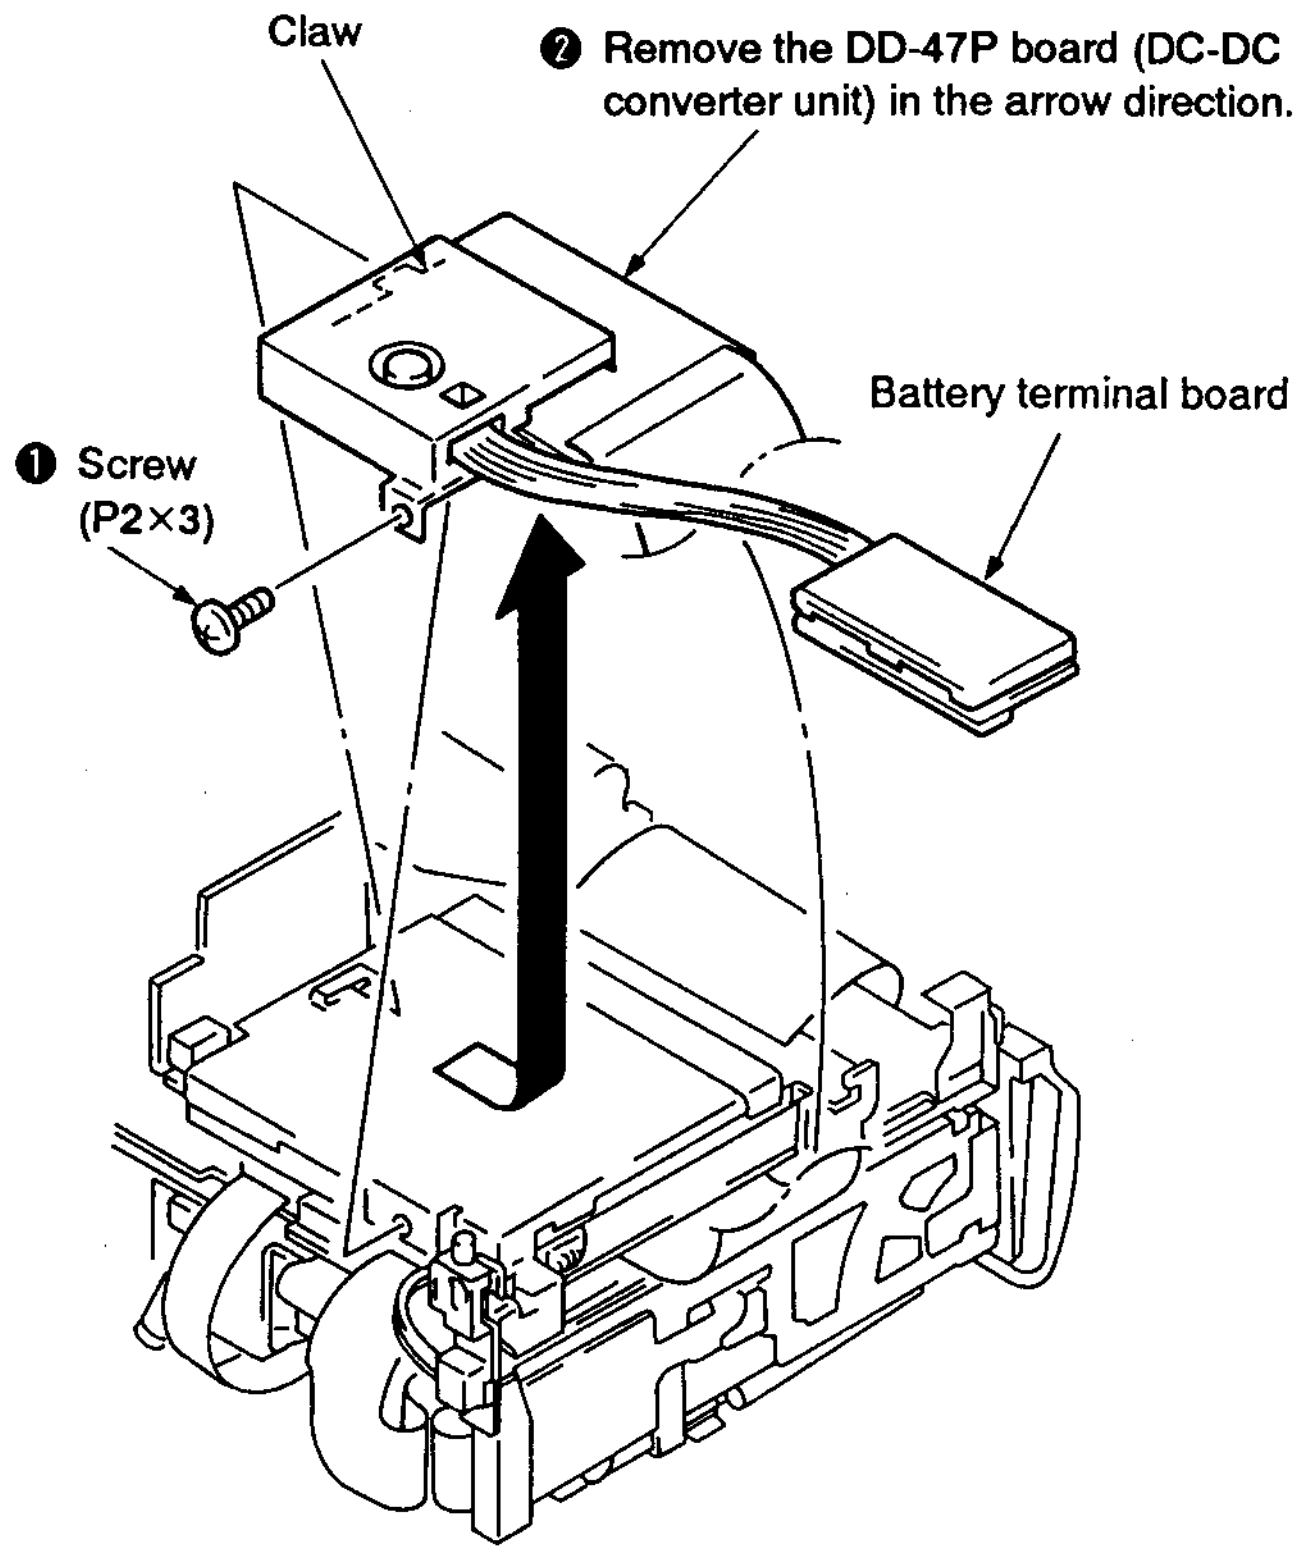
Claw
❷ Remove the DD-47P board (DC-DC converter unit) in the arrow direction.
Battery terminal board
❶ Screw
(P2×3)

2-7. REMOVAL OF CONTROL SWITCH BLOCK (ZM-3200)

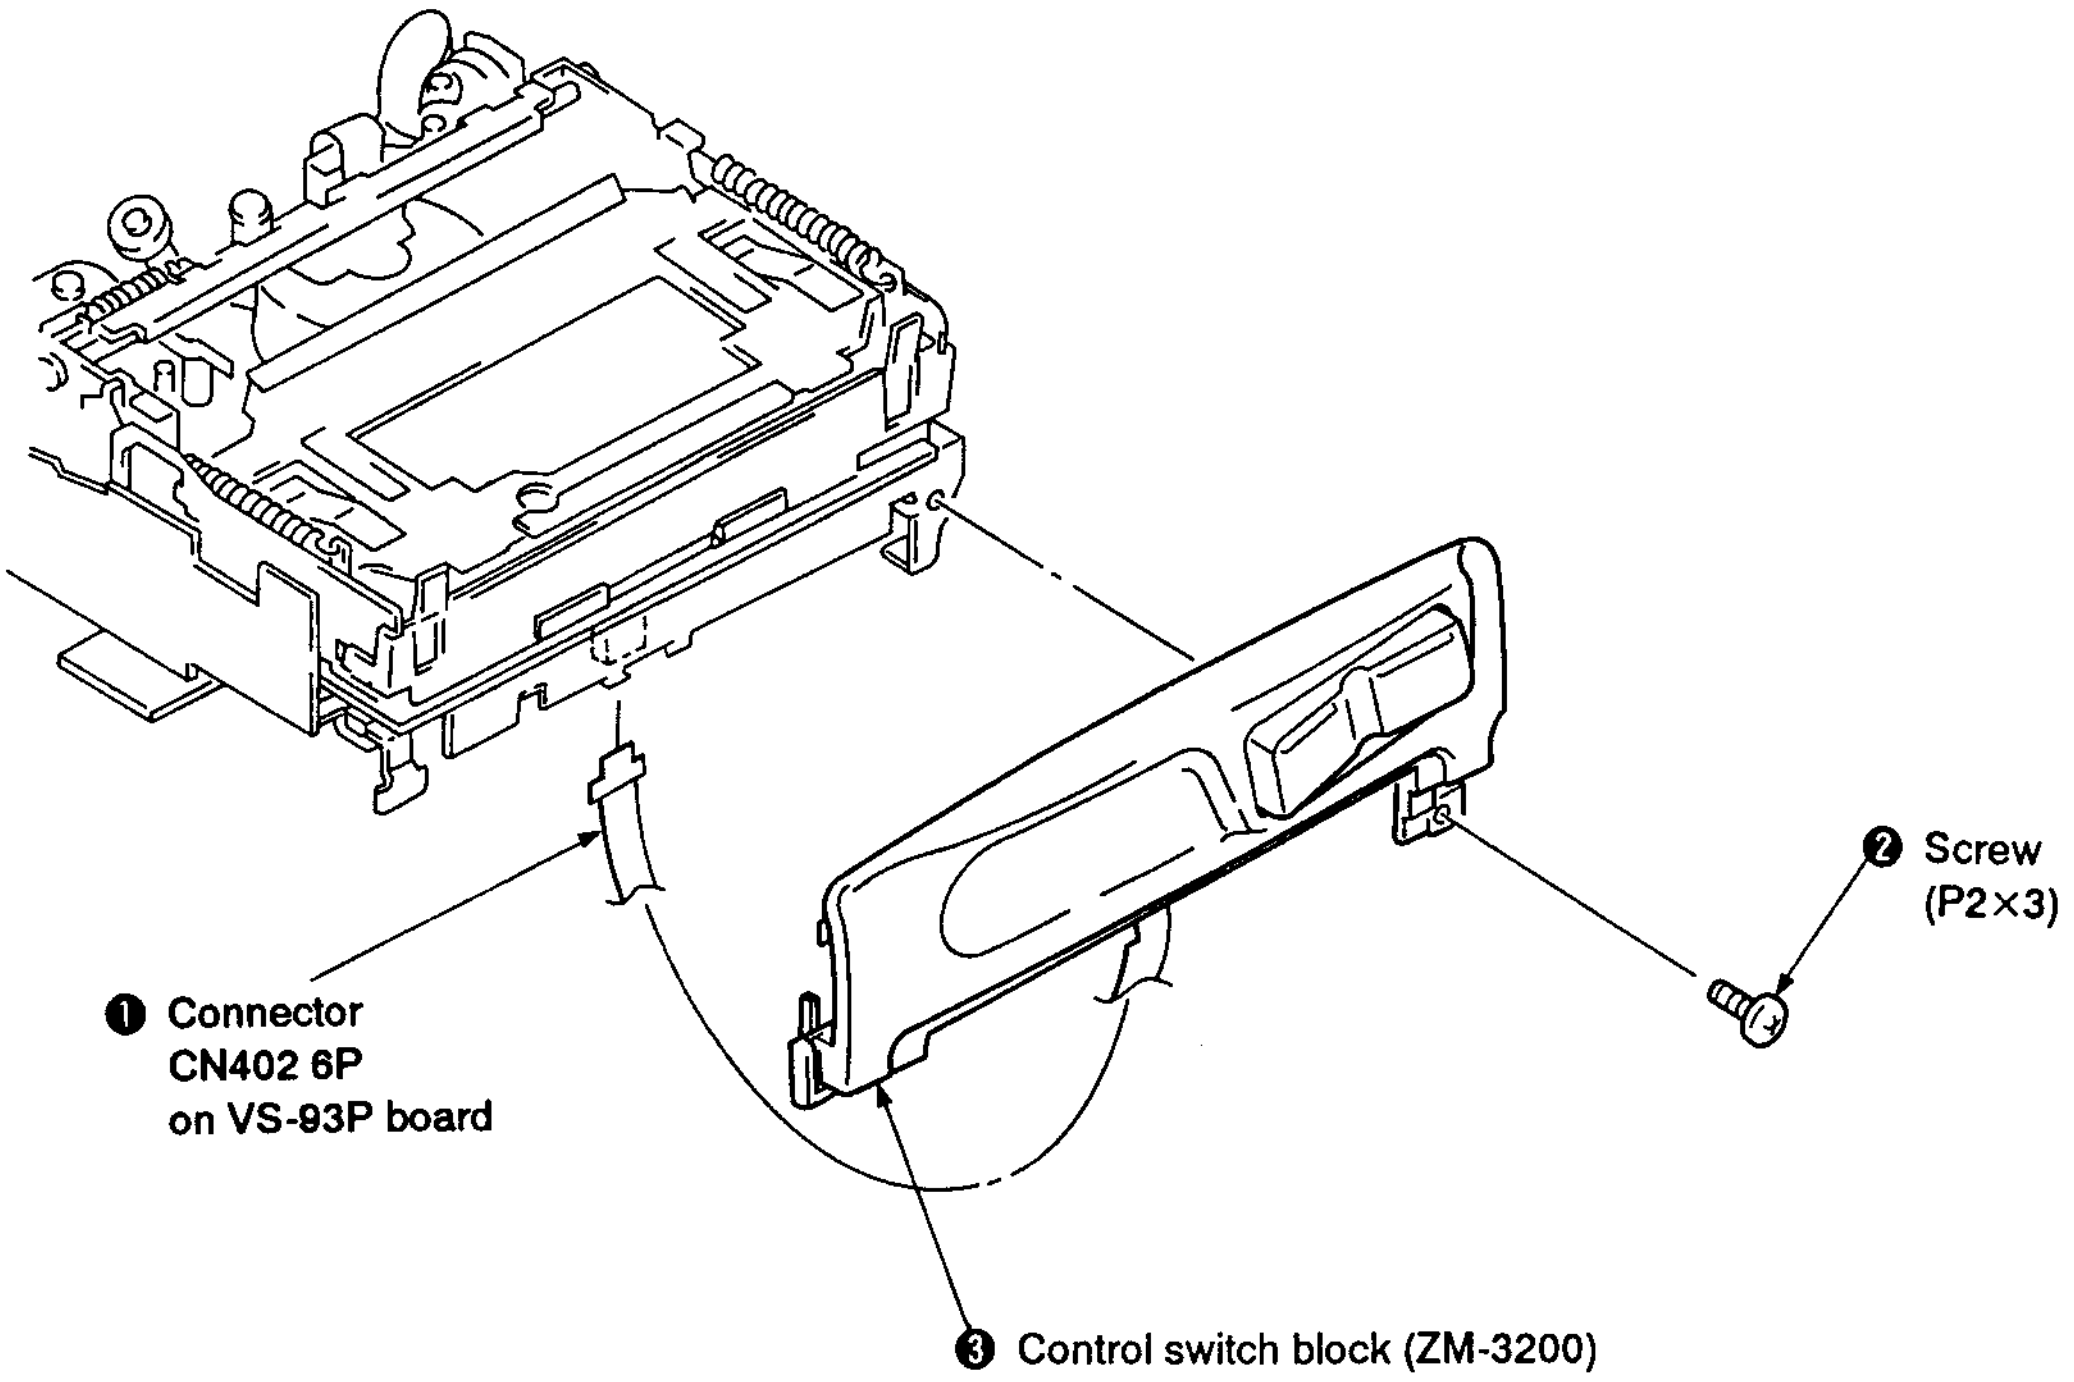
❷ Screw
(P2×3)
❶ Connector
CN402 6P
on VS-93P board
❸ Control switch block (ZM-3200)

2-8. REMOVAL OF LENS ASSEMBLY (CD-84P BOARD)

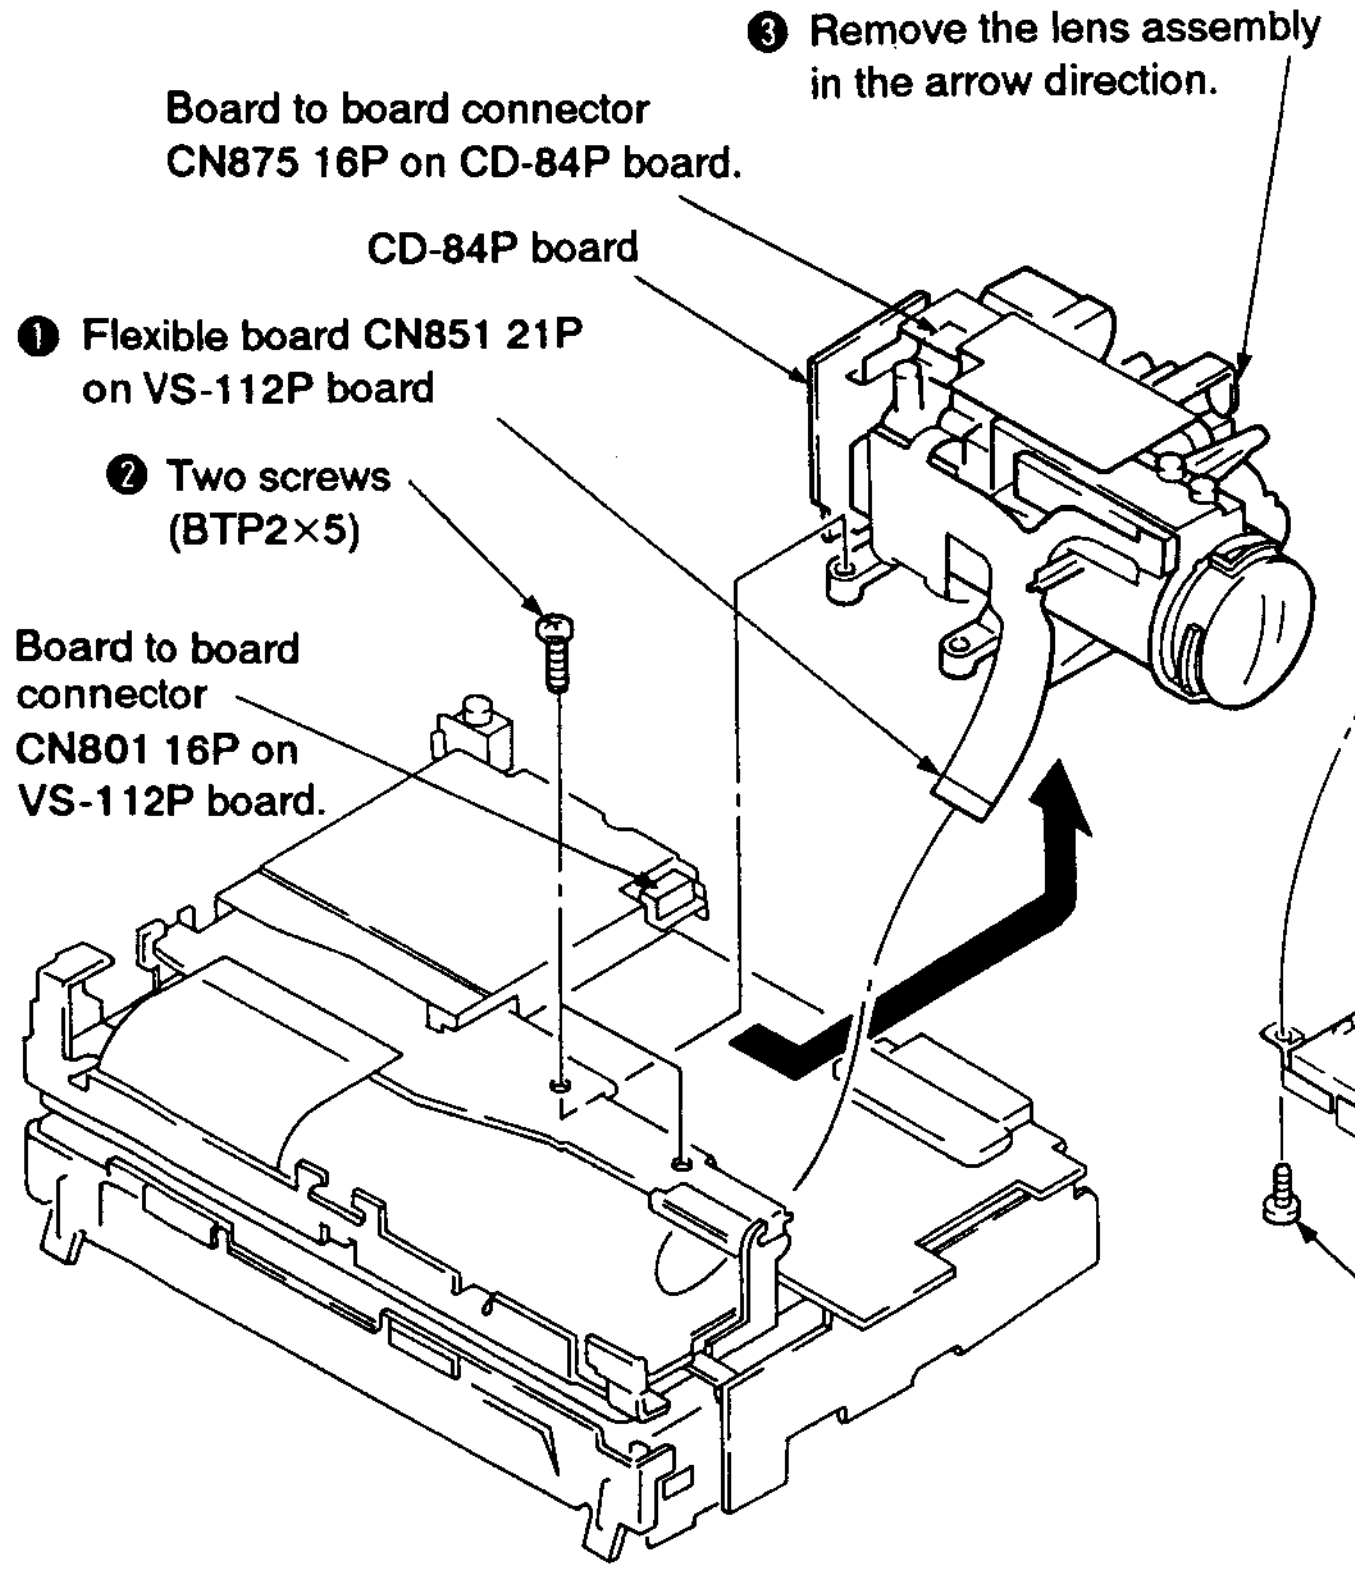
❸ Remove the lens assembly in the arrow direction.
Board to board connector CN875 16P on CD-84P board.
CD-84P board
❶ Flexible board CN851 21P on VS-112P board
❷ Two screws (BTP2×5)
Board to board connector CN801 16P on VS-112P board.

2-9. OPENING OF VC-112P BOARD

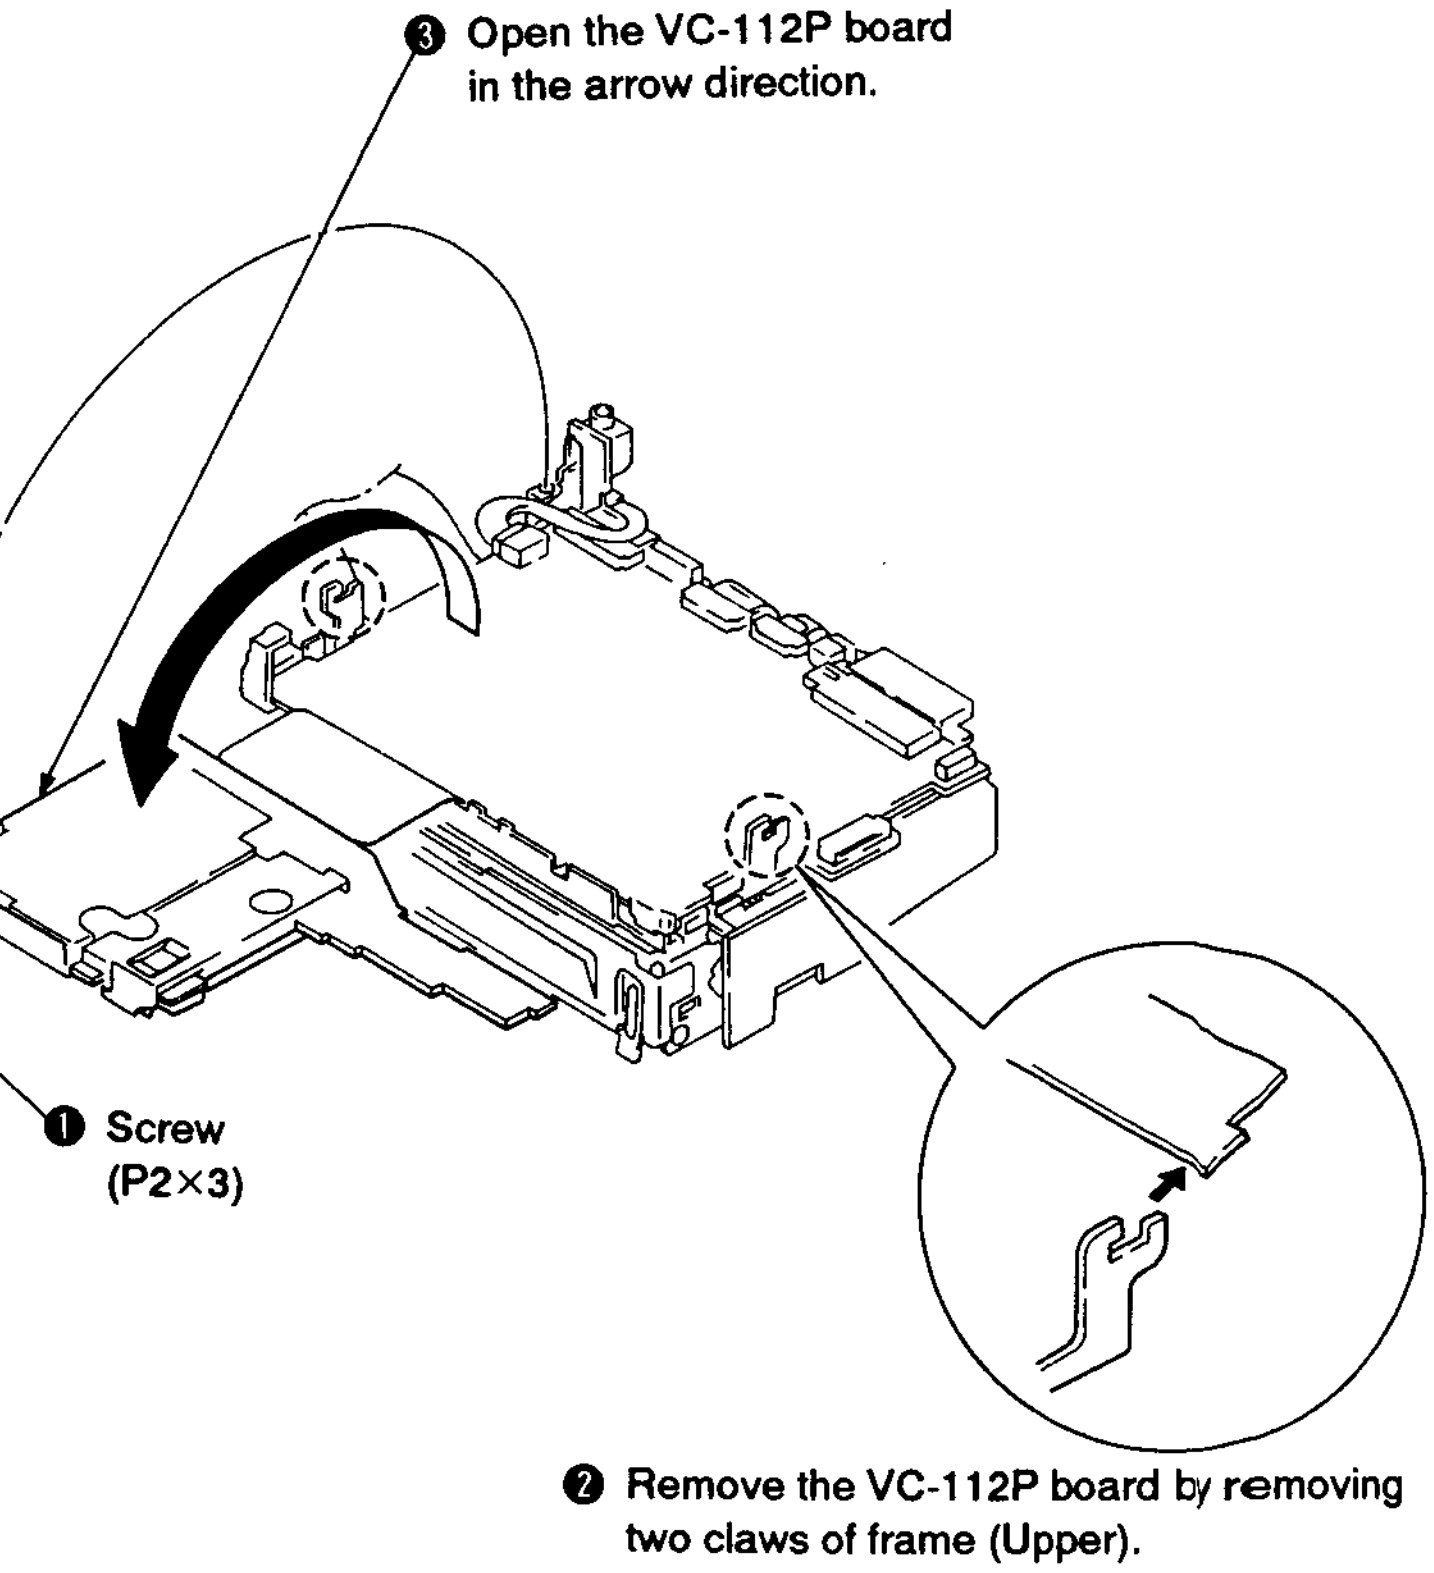
❸ Open the VC-112P board in the arrow direction.
❶ Screw (P2×3)
❷ Remove the VC-112P board by removing two claws of frame (Upper).

2-10. REMOVAL OF VS-93P BOARD

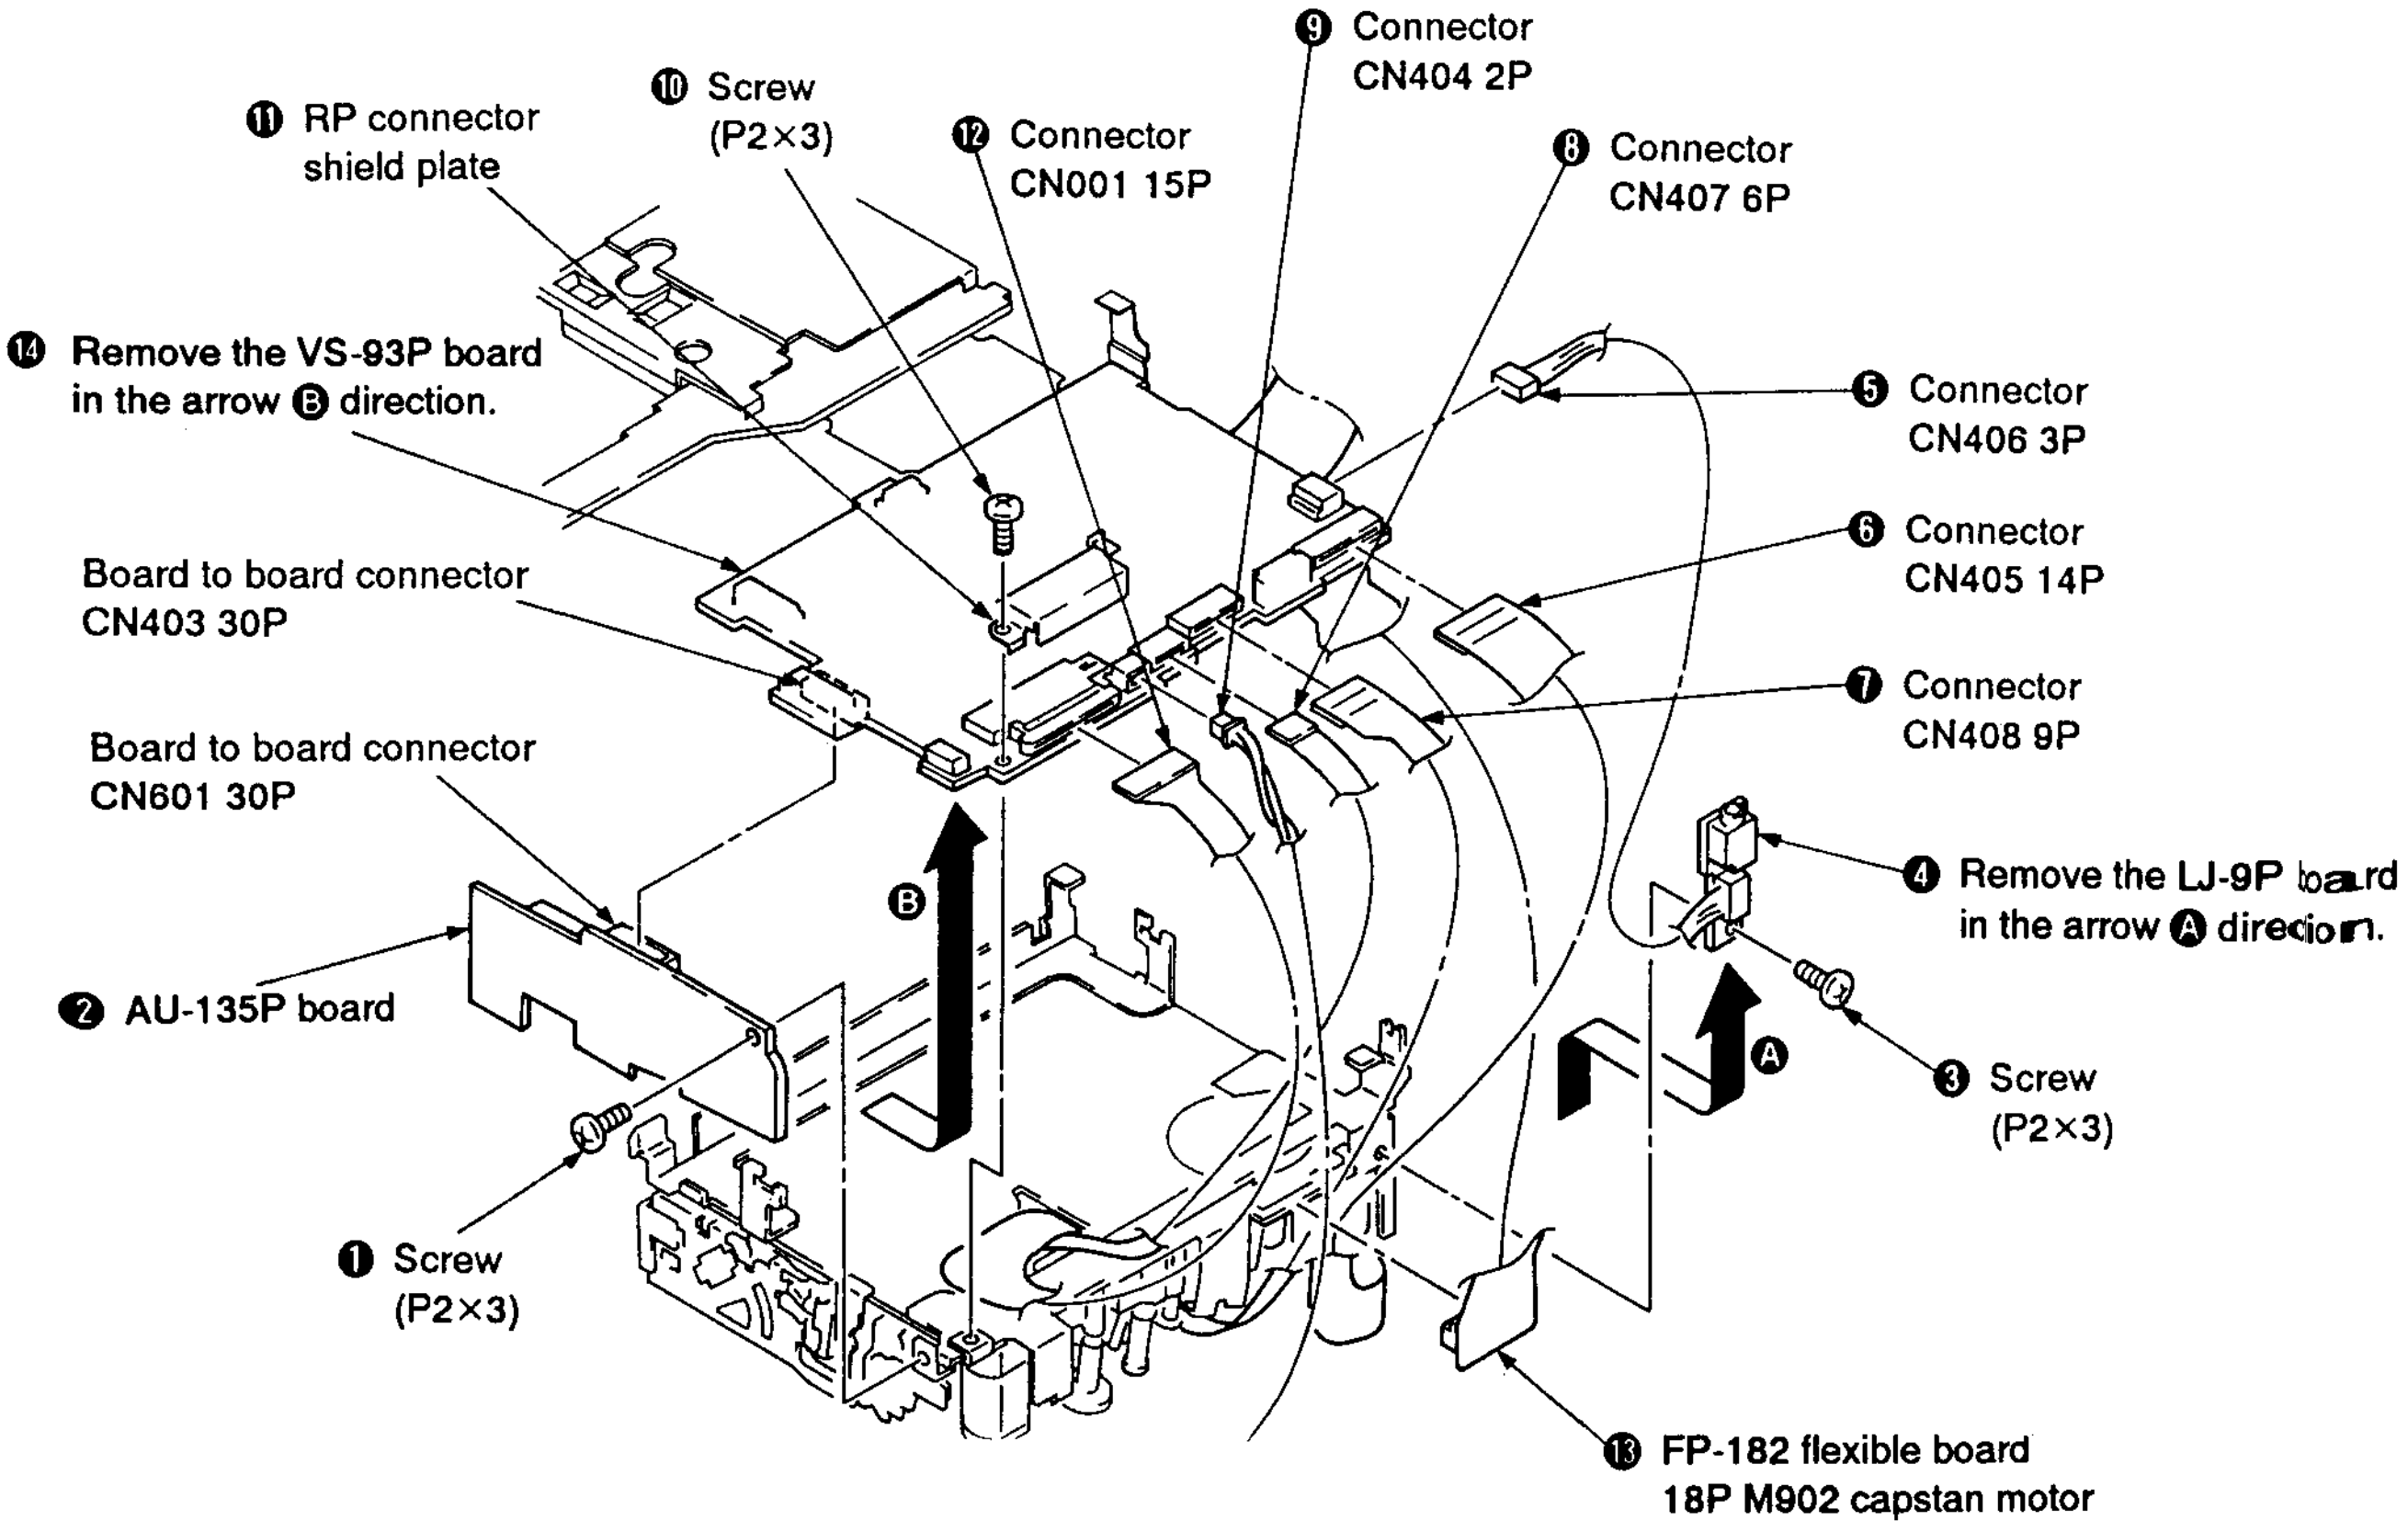
⓫ RP connector shield plate
❿ Screw (P2×3)
⓬ Connector CN001 15P
❾ Connector CN404 2P
❽ Connector CN407 6P
⓮ Remove the VS-93P board in the arrow Ⓑ direction.
❺ Connector CN406 3P
❻ Connector CN405 14P
Board to board connector CN403 30P
❼ Connector CN408 9P
Board to board connector CN601 30P
❹ Remove the LJ-9P board in the arrow Ⓐ direction.
Ⓑ
❷ AU-135P board
Ⓐ
❸ Screw (P2×3)
❶ Screw (P2×3)
⓭ FP-182 flexible board 18P M902 capstan motor

2-11. REMOVAL OF EVF ASSEMBLY (VF-42P BOARD)

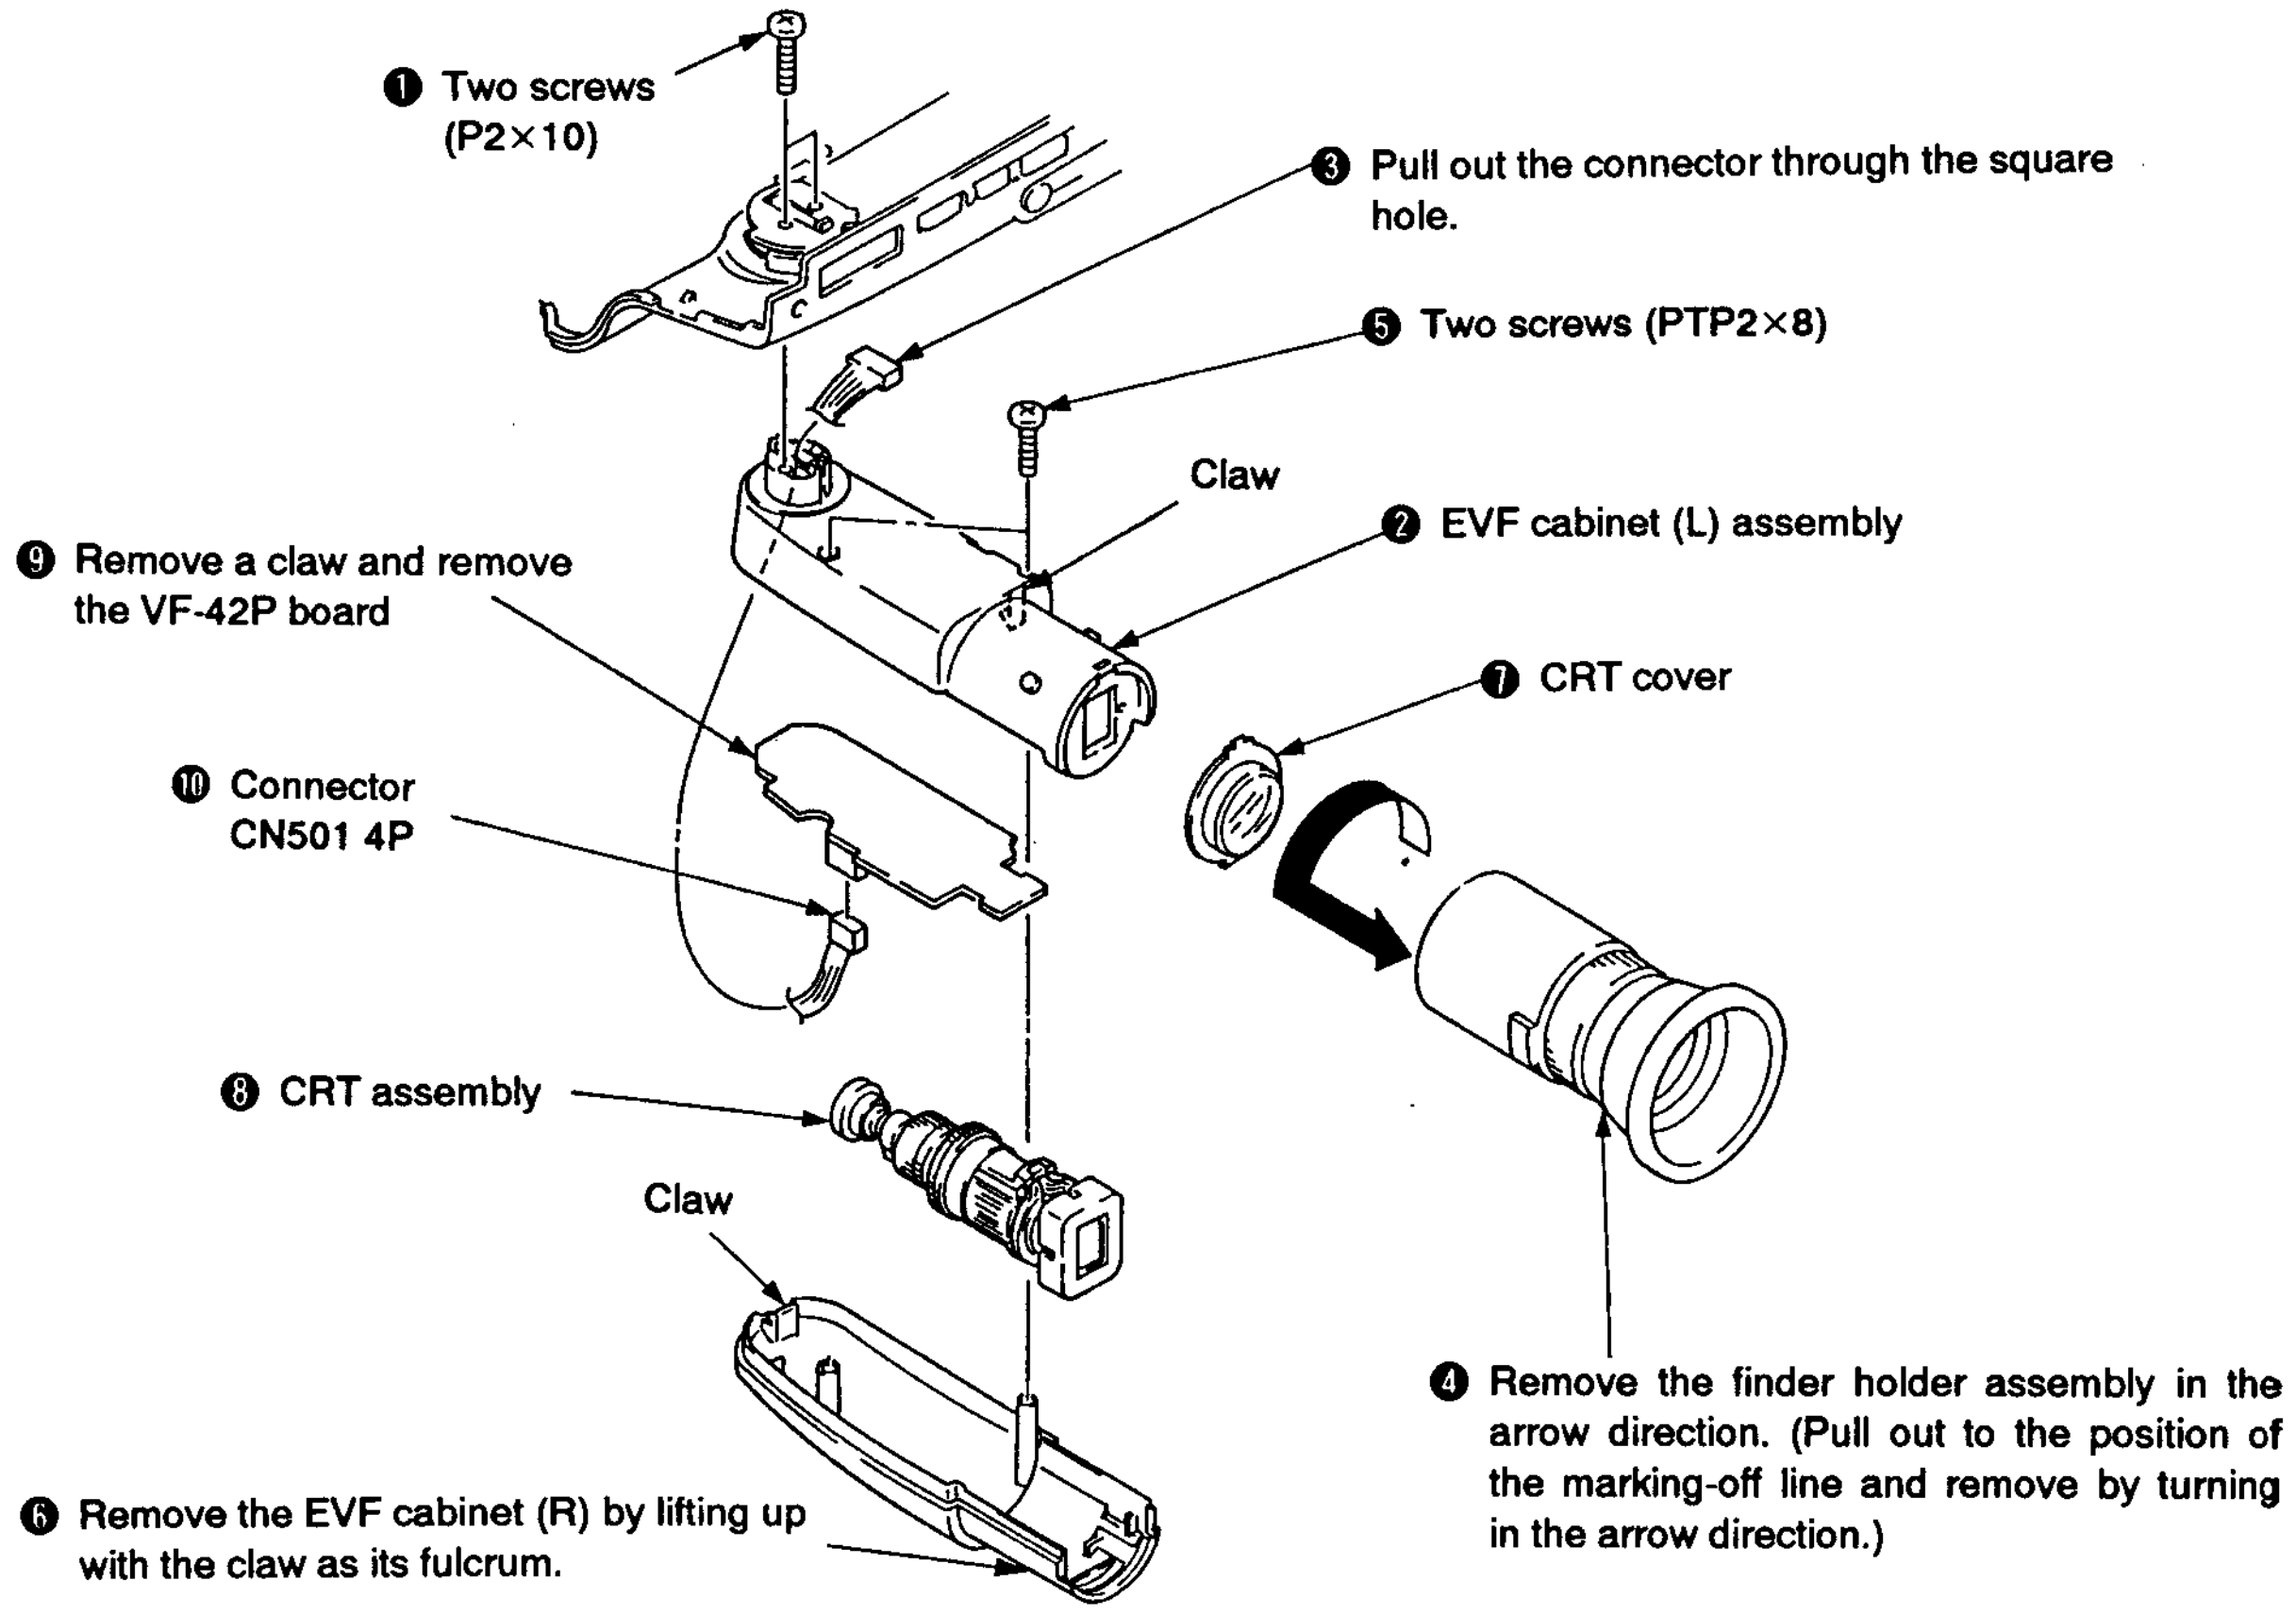
❶ Two screws (P2×10)

❷ EVF cabinet (L) assembly

❸ Pull out the connector through the square hole.

❹ Remove the finder holder assembly in the arrow direction. (Pull out to the position of the marking-off line and remove by turning in the arrow direction.)

❺ Two screws (PTP2×8)

❻ Remove the EVF cabinet (R) by lifting up with the claw as its fulcrum.

❼ CRT cover

❽ CRT assembly

❾ Remove a claw and remove the VF-42P board

❿ Connector CN501 4P

2-12. REMOVAL OF CASSETTE COMPARTMENT HOLDER ASSEMBLY

In the beginning, set to USE mode.

(When setting to USE mode, see "2-4. Handing of Mode Selector" in "8 mm video mechanical adjustment manual II FL Mechanism (Q mechanism).)

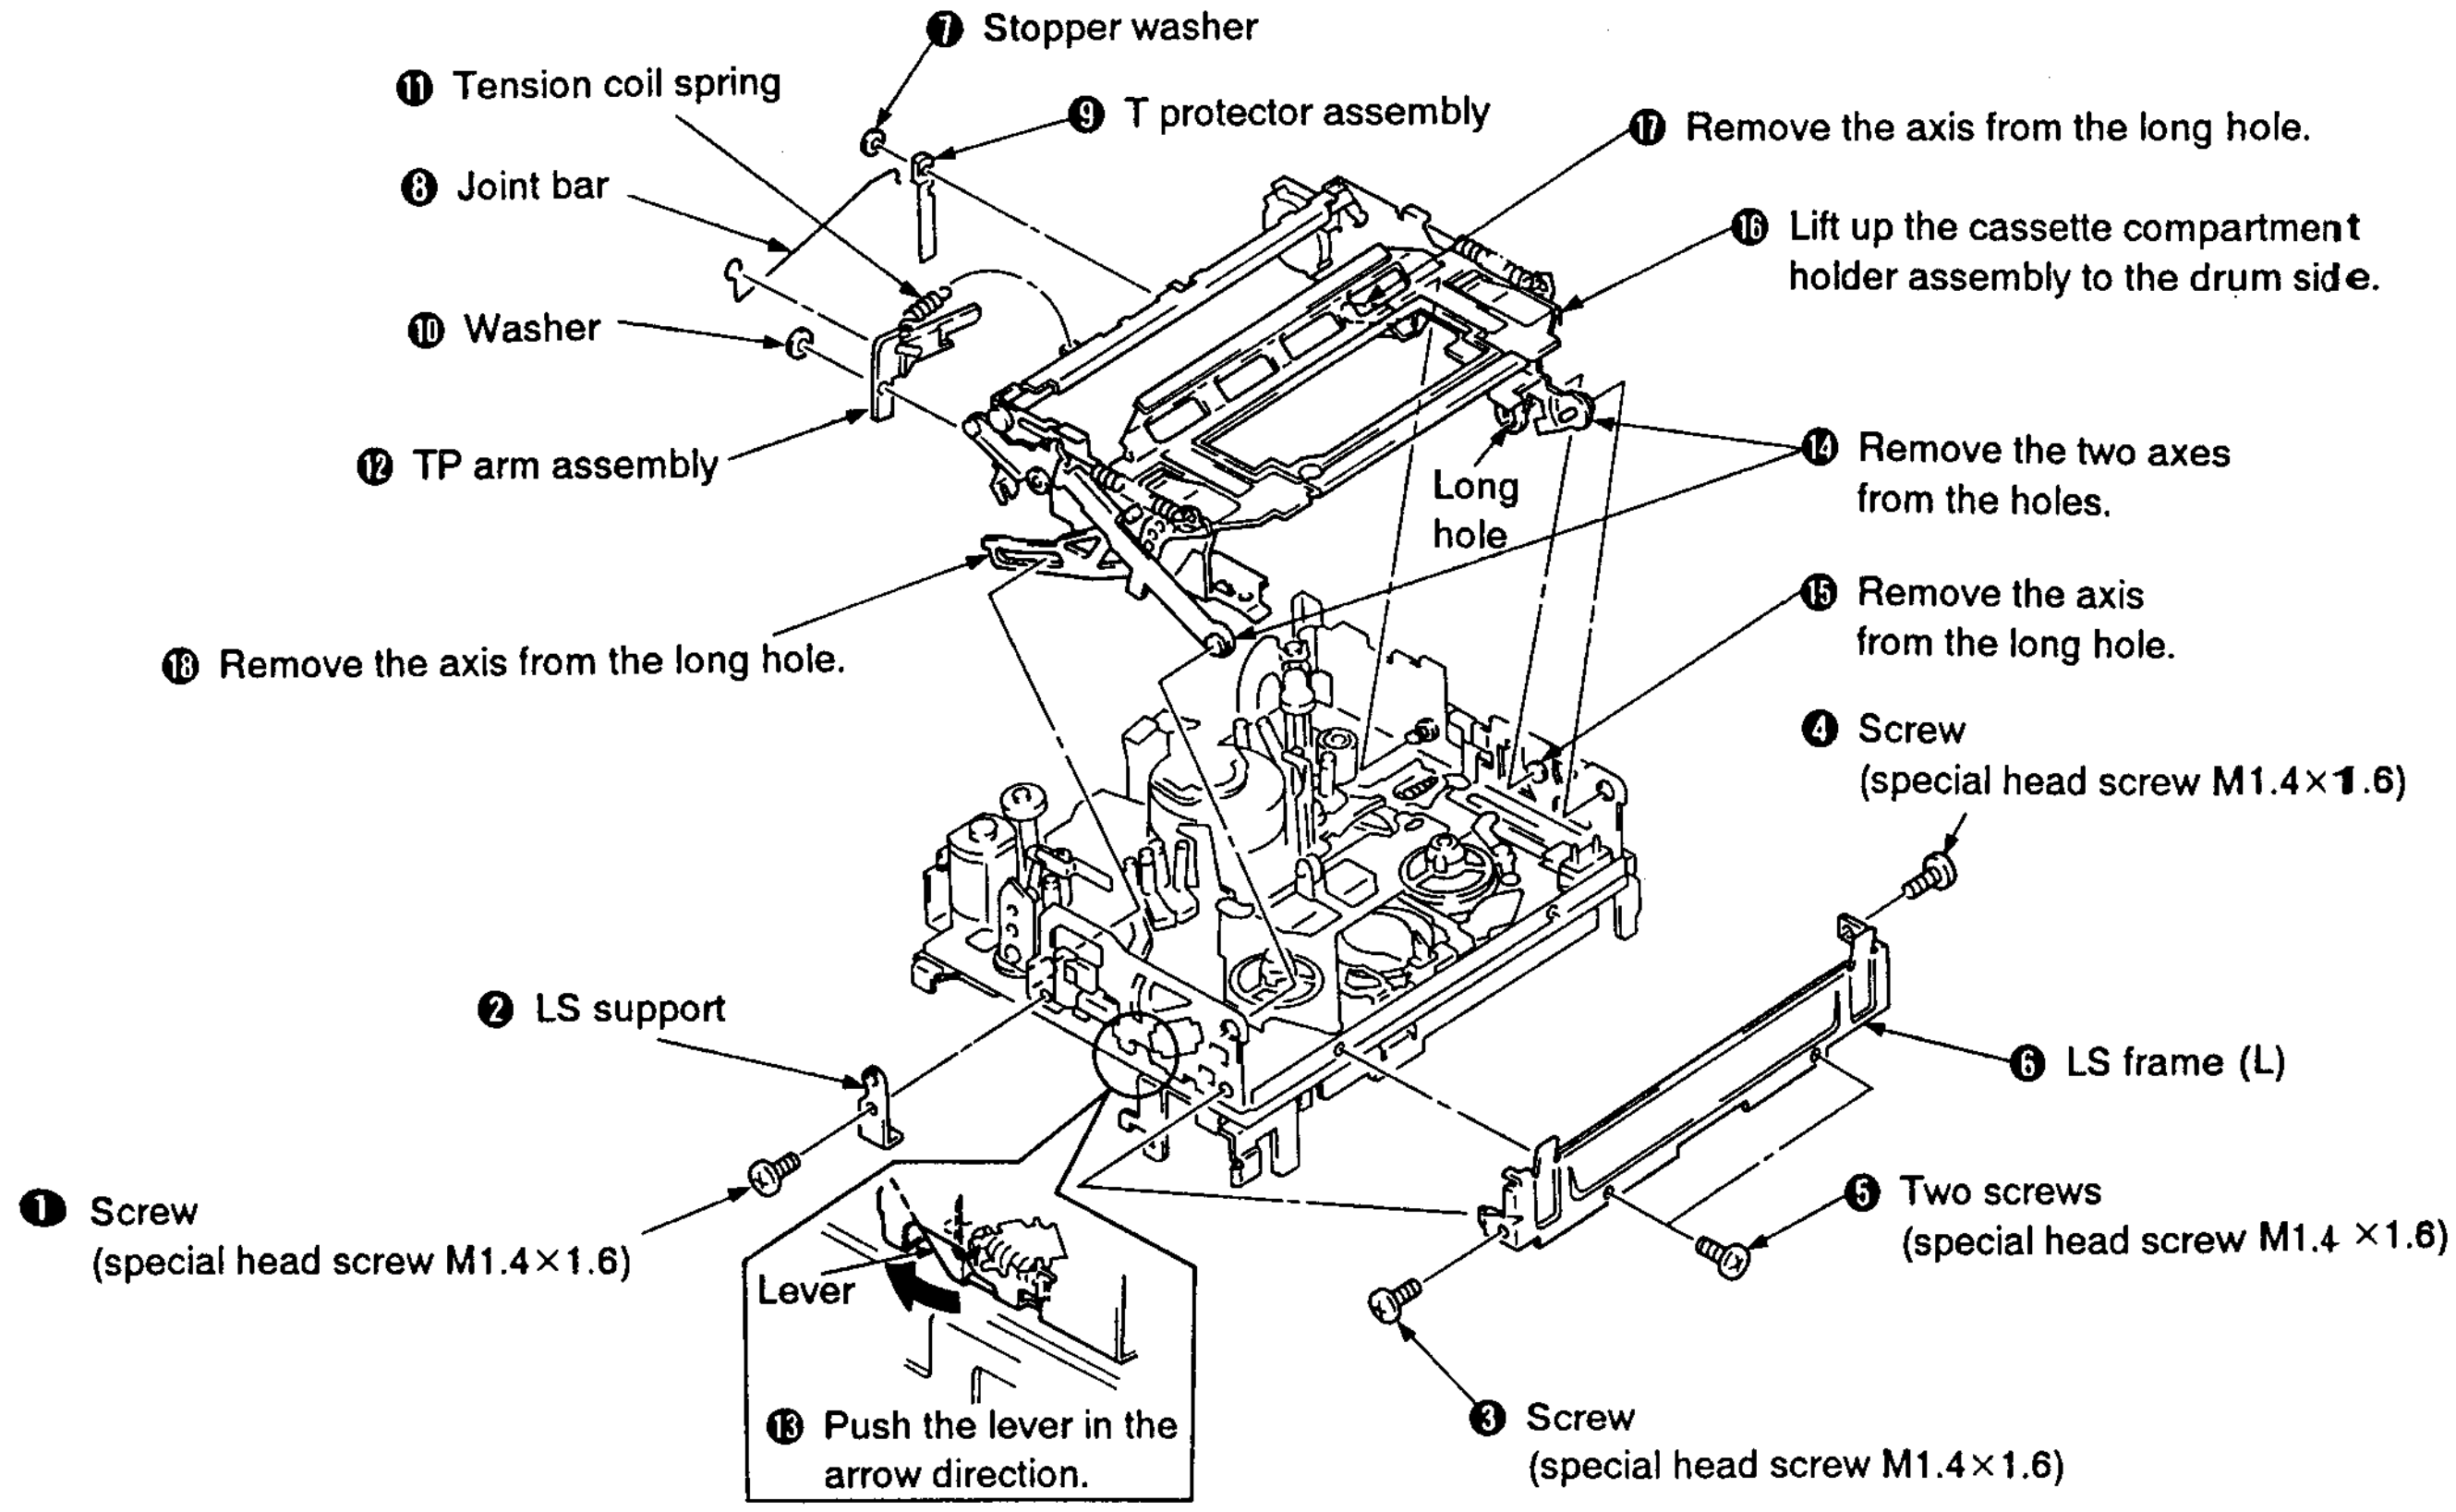
❶ Screw (special head screw M1.4×1.6)

❷ LS support

❸ Screw (special head screw M1.4×1.6)

❹ Screw (special head screw M1.4×1.6)

❺ Two screws (special head screw M1.4 ×1.6)

❻ LS frame (L)

❼ Stopper washer

❽ Joint bar

❾ T protector assembly

❿ Washer

⓫ Tension coil spring

⓬ TP arm assembly

⓭ Push the lever in the arrow direction.

⓮ Remove the two axes from the holes.

⓯ Remove the axis from the long hole.

⓰ Lift up the cassette compartment holder assembly to the drum side.

⓱ Remove the axis from the long hole.

⓲ Remove the axis from the long hole.

2-13. INTERNAL VIEWS

— Left side —

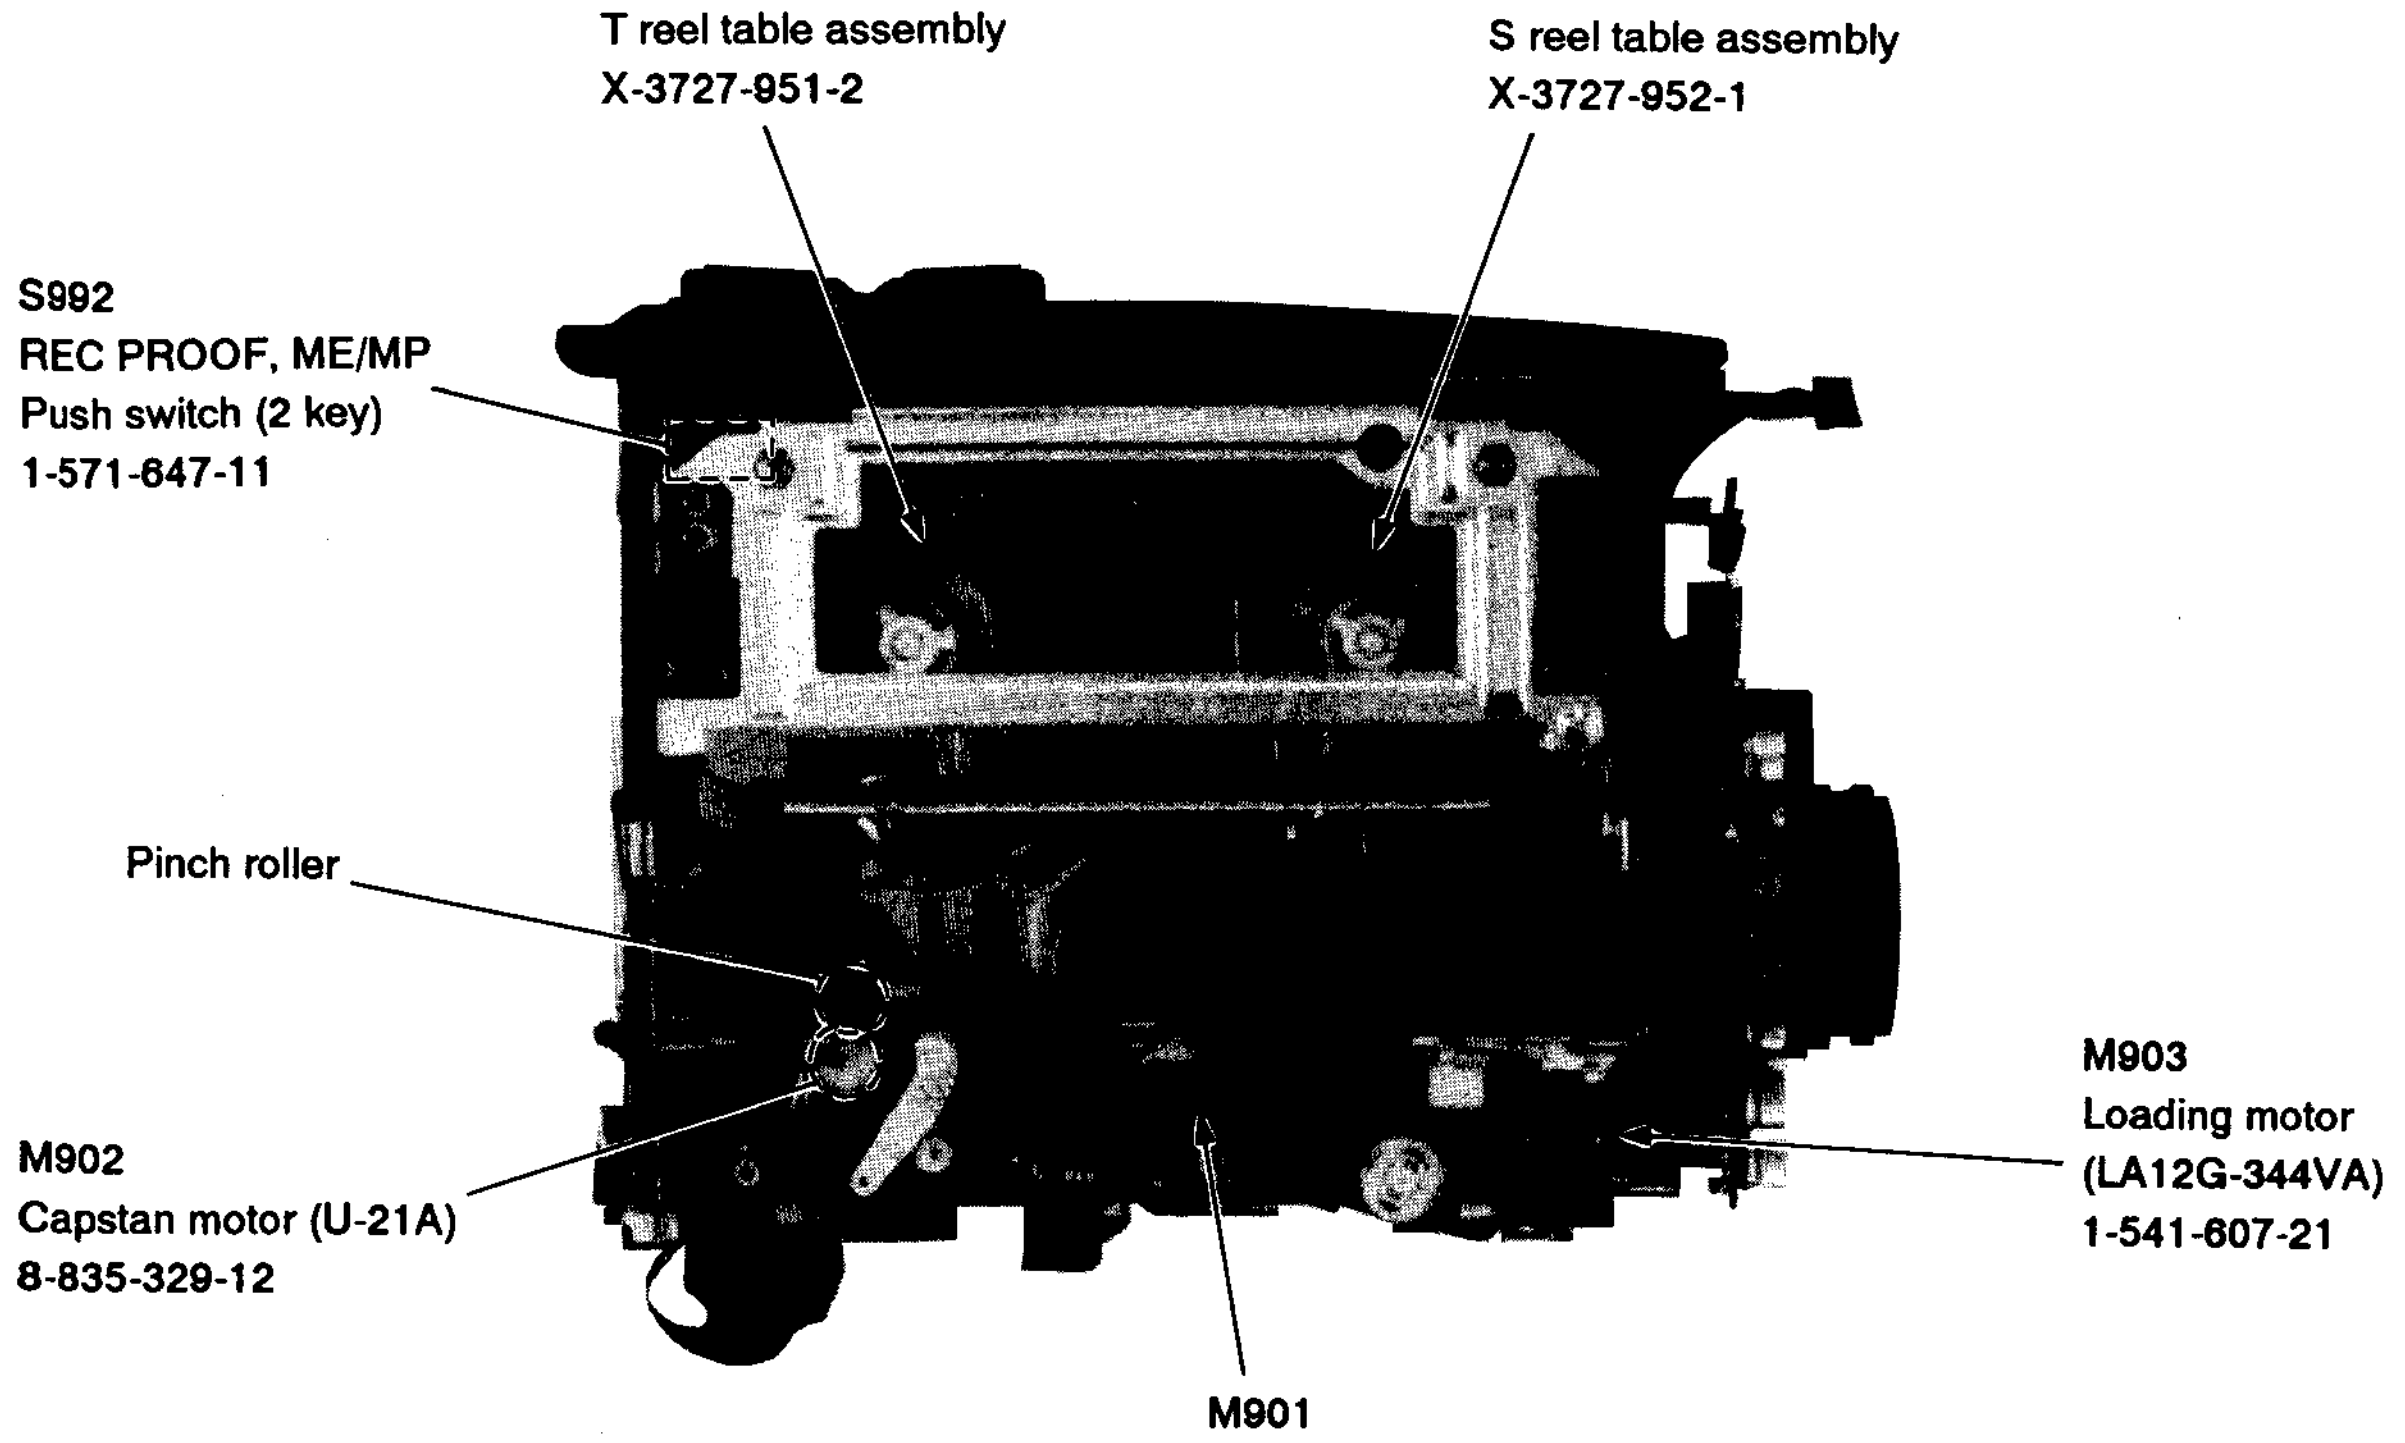
T reel table assembly
X-3727-951-2
S reel table assembly
X-3727-952-1
S992
REC PROOF, ME/MP
Push switch (2 key)
1-571-647-11
Pinch roller
M903
Loading motor
(LA12G-344VA)
1-541-607-21
M902
Capstan motor (U-21A)
8-835-329-12
M901

Drum assembly	A-7048-534-A (DGH-80A-R) (AEP, UK)
	A-7048-214-A (DGH-37A-R) (E, Australian, Tourist)
Rotary upper drum assembly	A-7049-461-A (DGR-80-R-(1)) (AEP, UK) (Color mark: Green, Green/Red, Black, Black/Red)
	A-7049-197-A (DGR-37-R-(1)) (E, Australian, Tourist) (Color mark: Green, Green/Red, Black, Black/Red)
	A-7049-464-A (DGR-80-R-(2)) (AEP, UK) (Color mark: Red, Red/Red, Blue, Blue/Red)
	A-7049-198-A (DGR-37-R-(2)) (E, Australian, Tourist) (Color mark: Red, Red/Red, Blue, Blue/Red)

— Lower side —

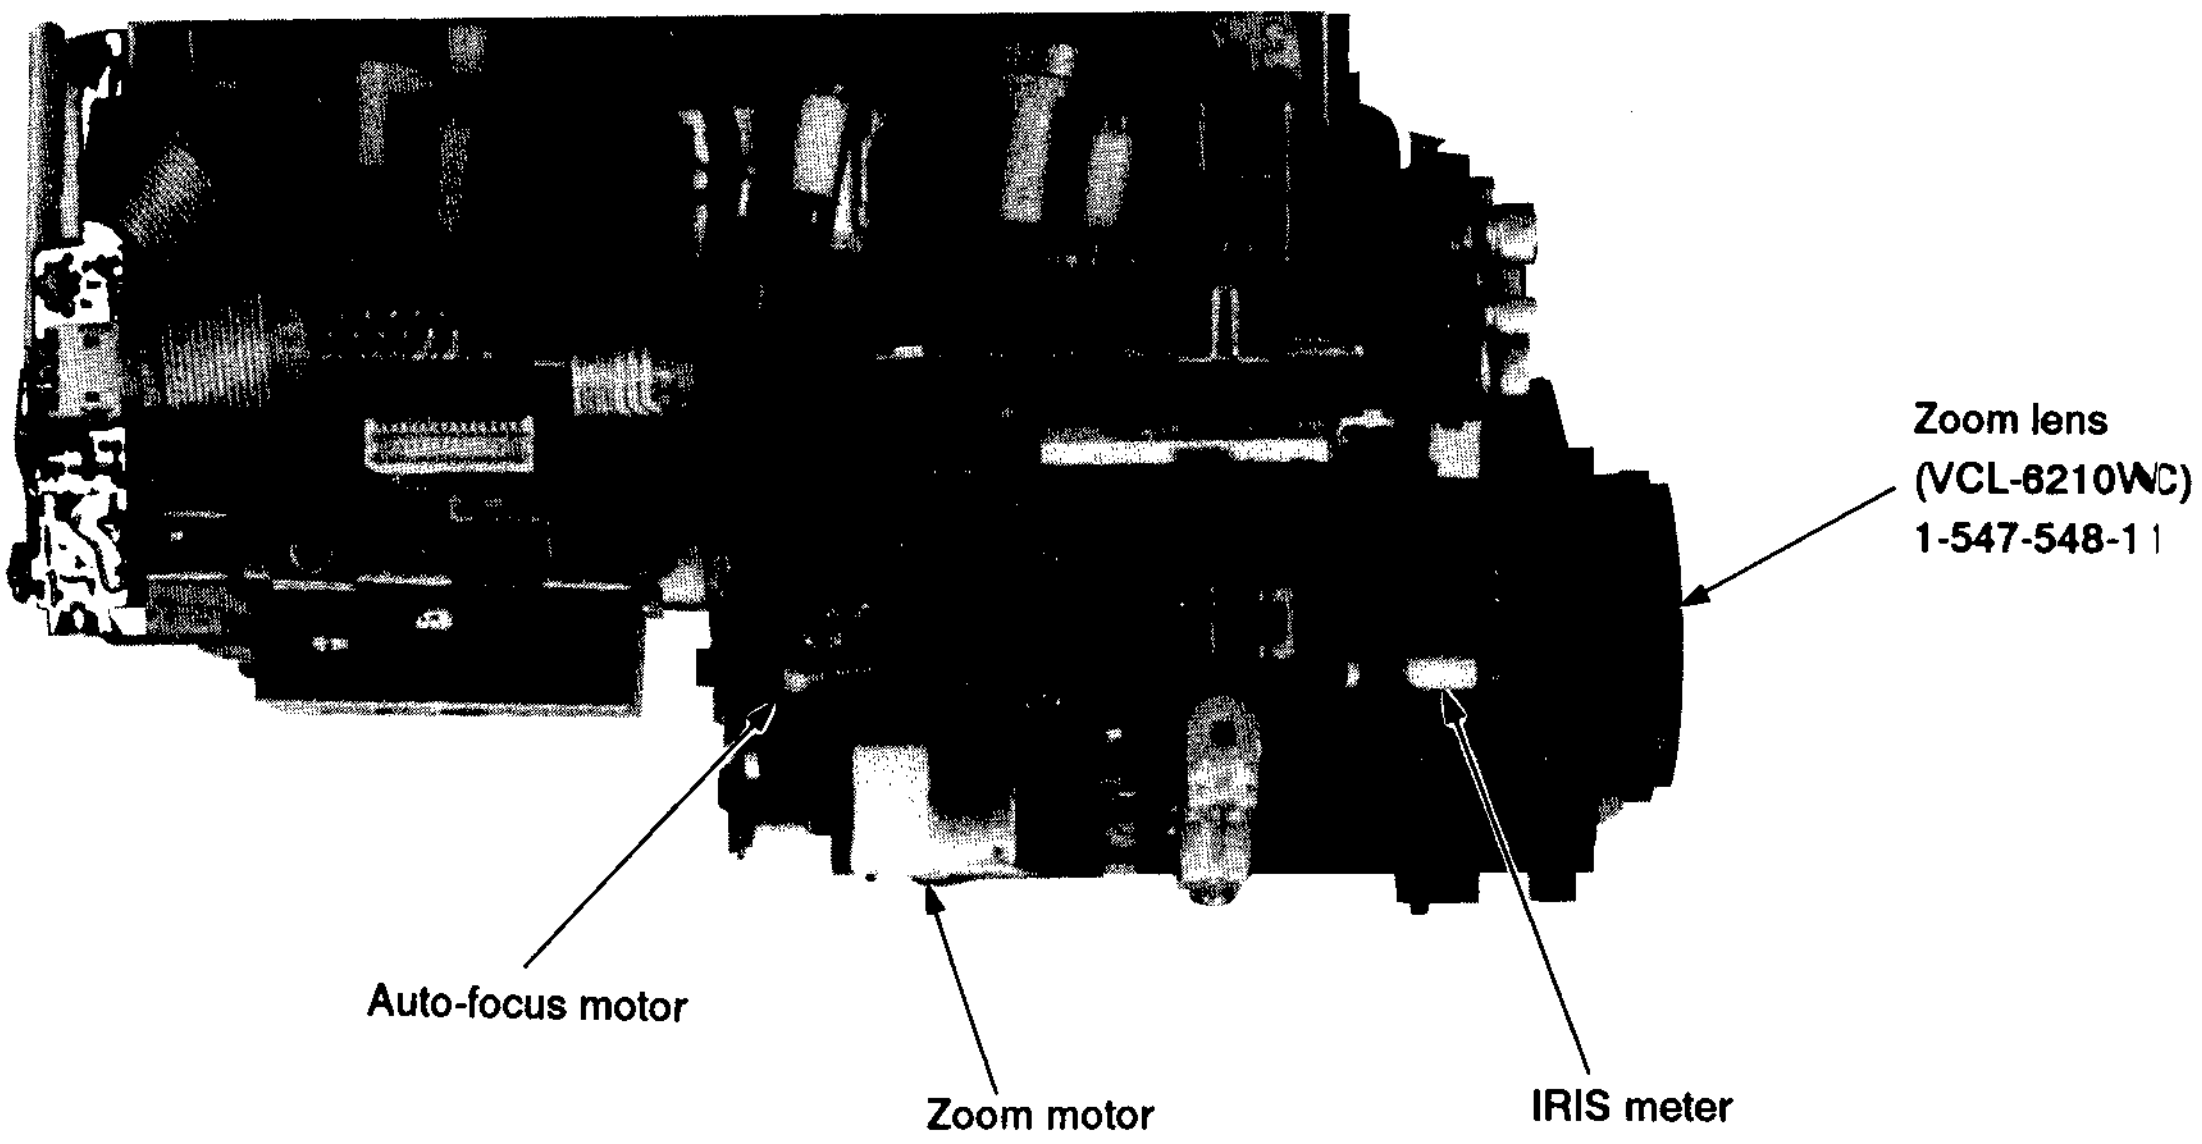
Zoom lens
(VCL-6210WC)
1-547-548-11
Auto-focus motor
Zoom motor
IRIS meter

SECTION 3
DIAGRAMS

3-1. CIRCUIT BOARDS LOCATION

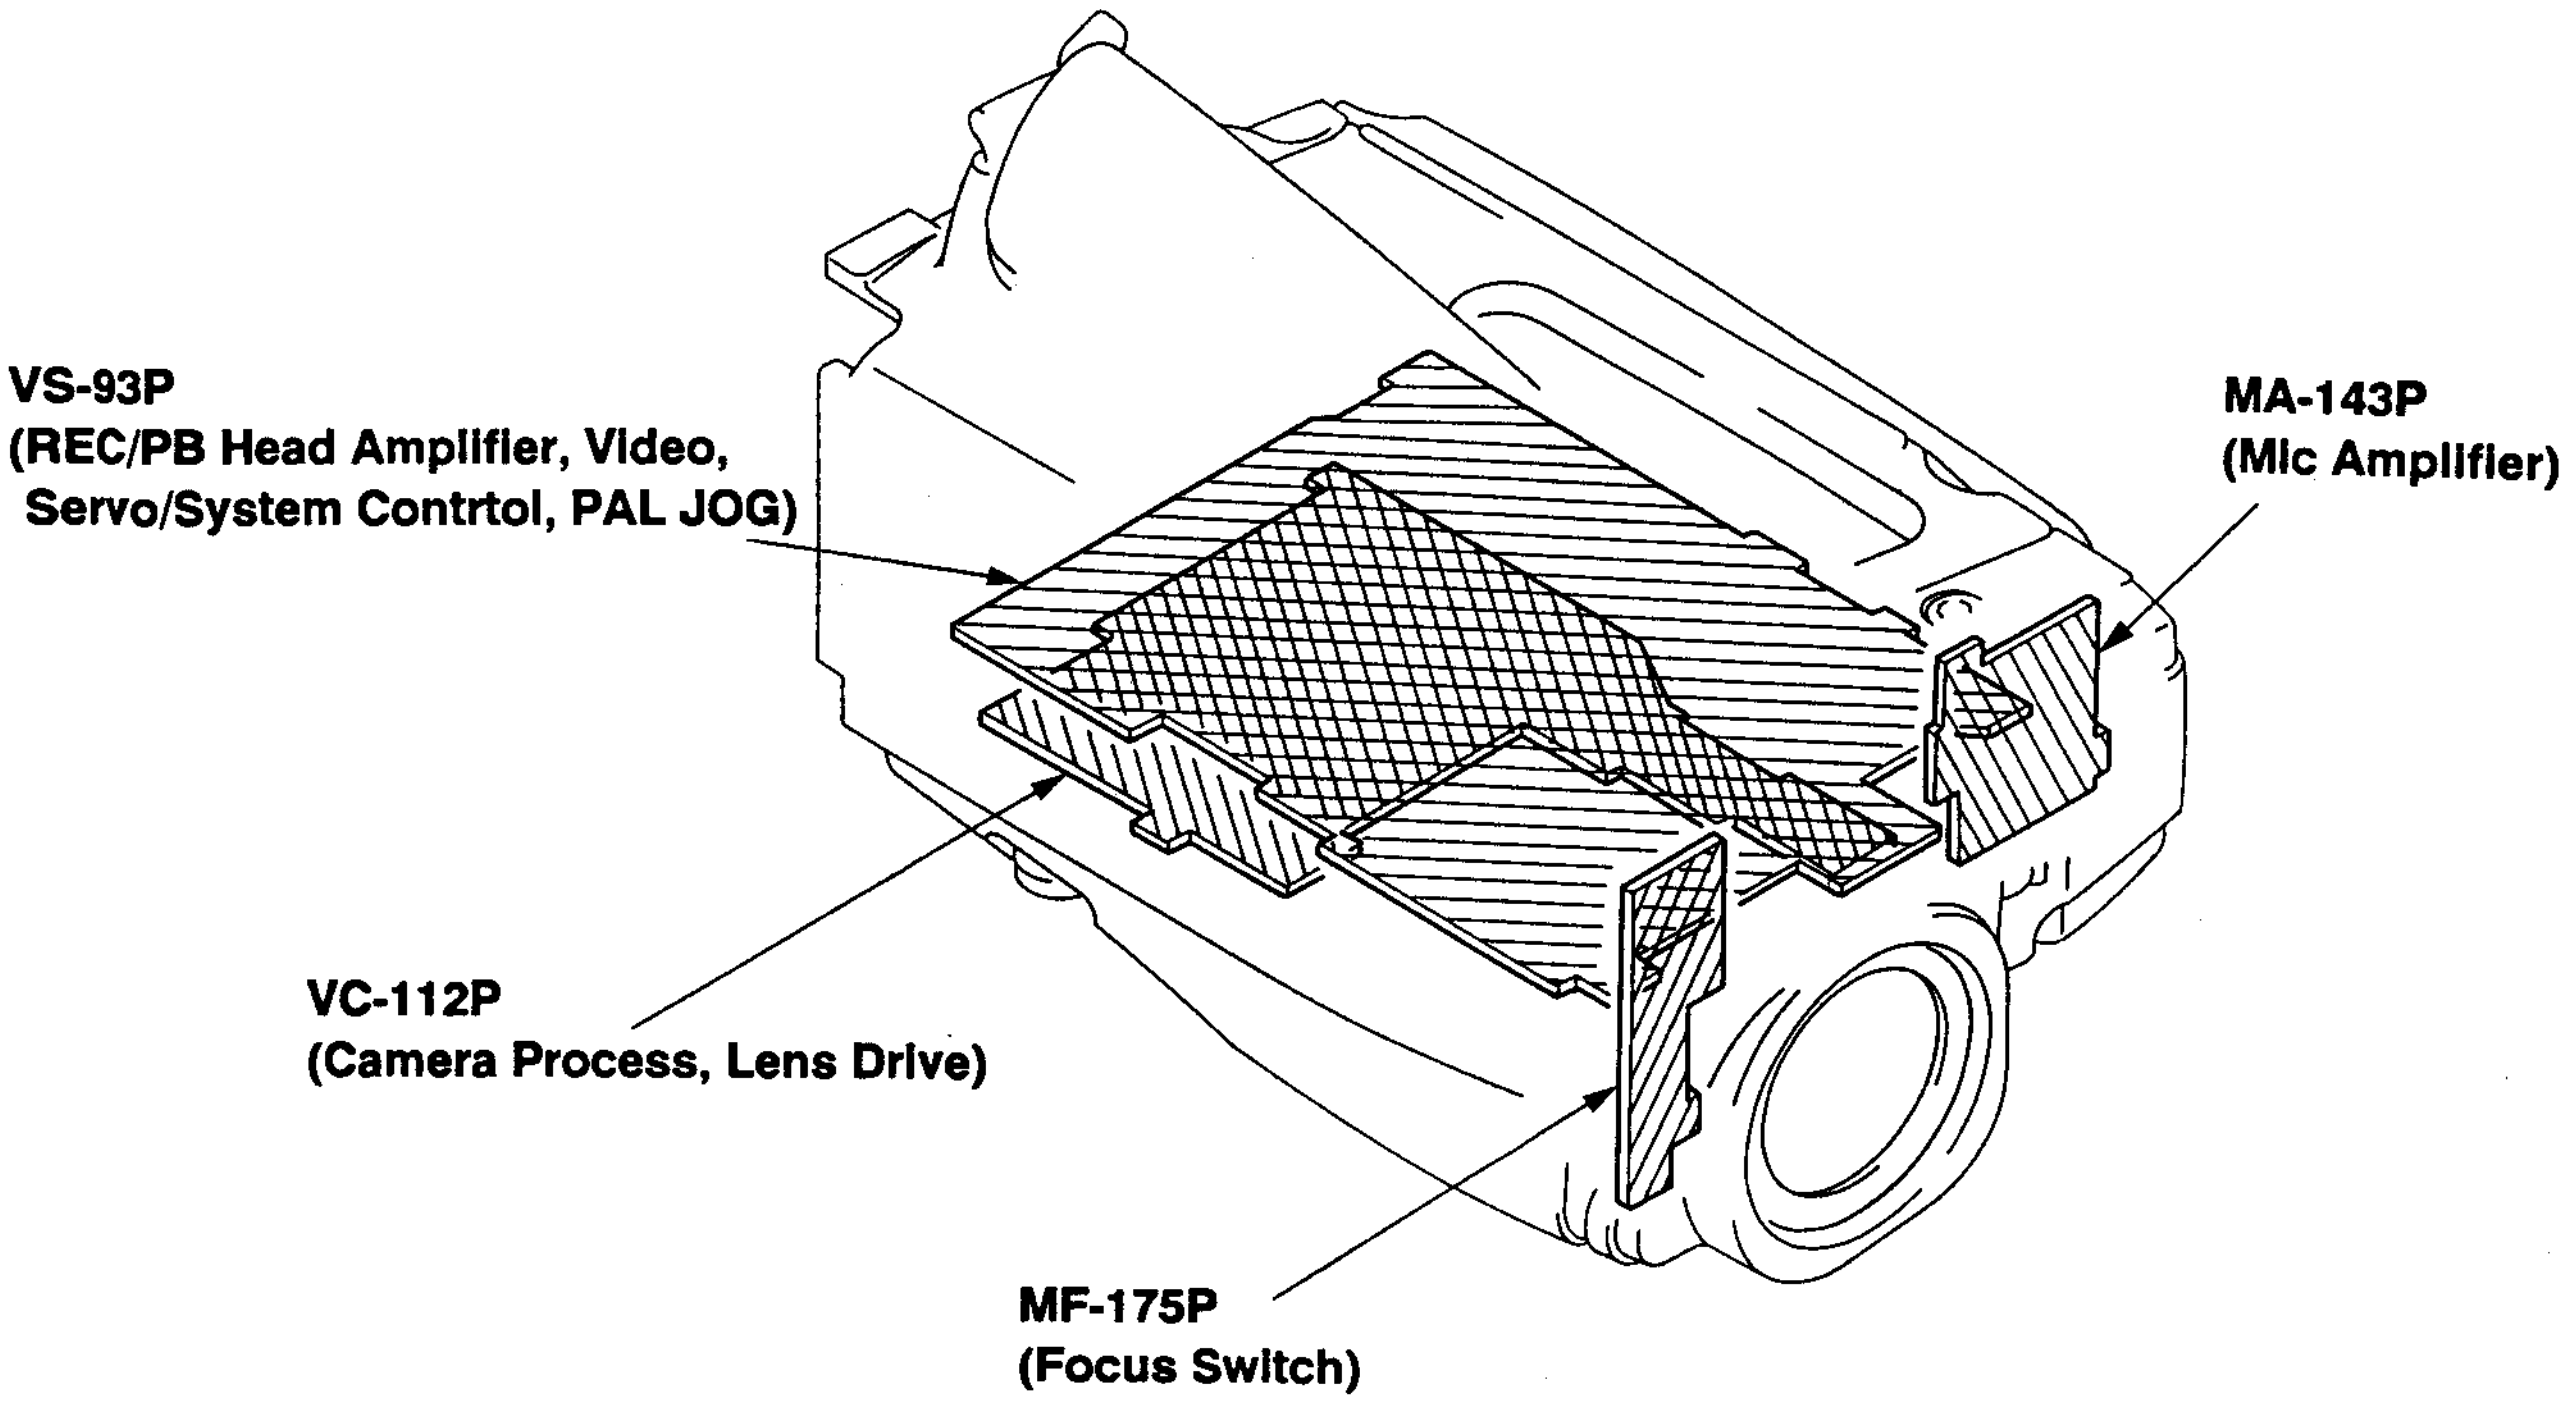
VS-93P
(REC/PB Head Amplifier, Video, Servo/System Contrtol, PAL JOG)
MA-143P
(Mic Amplifier)
VC-112P
(Camera Process, Lens Drive)
MF-175P
(Focus Switch)

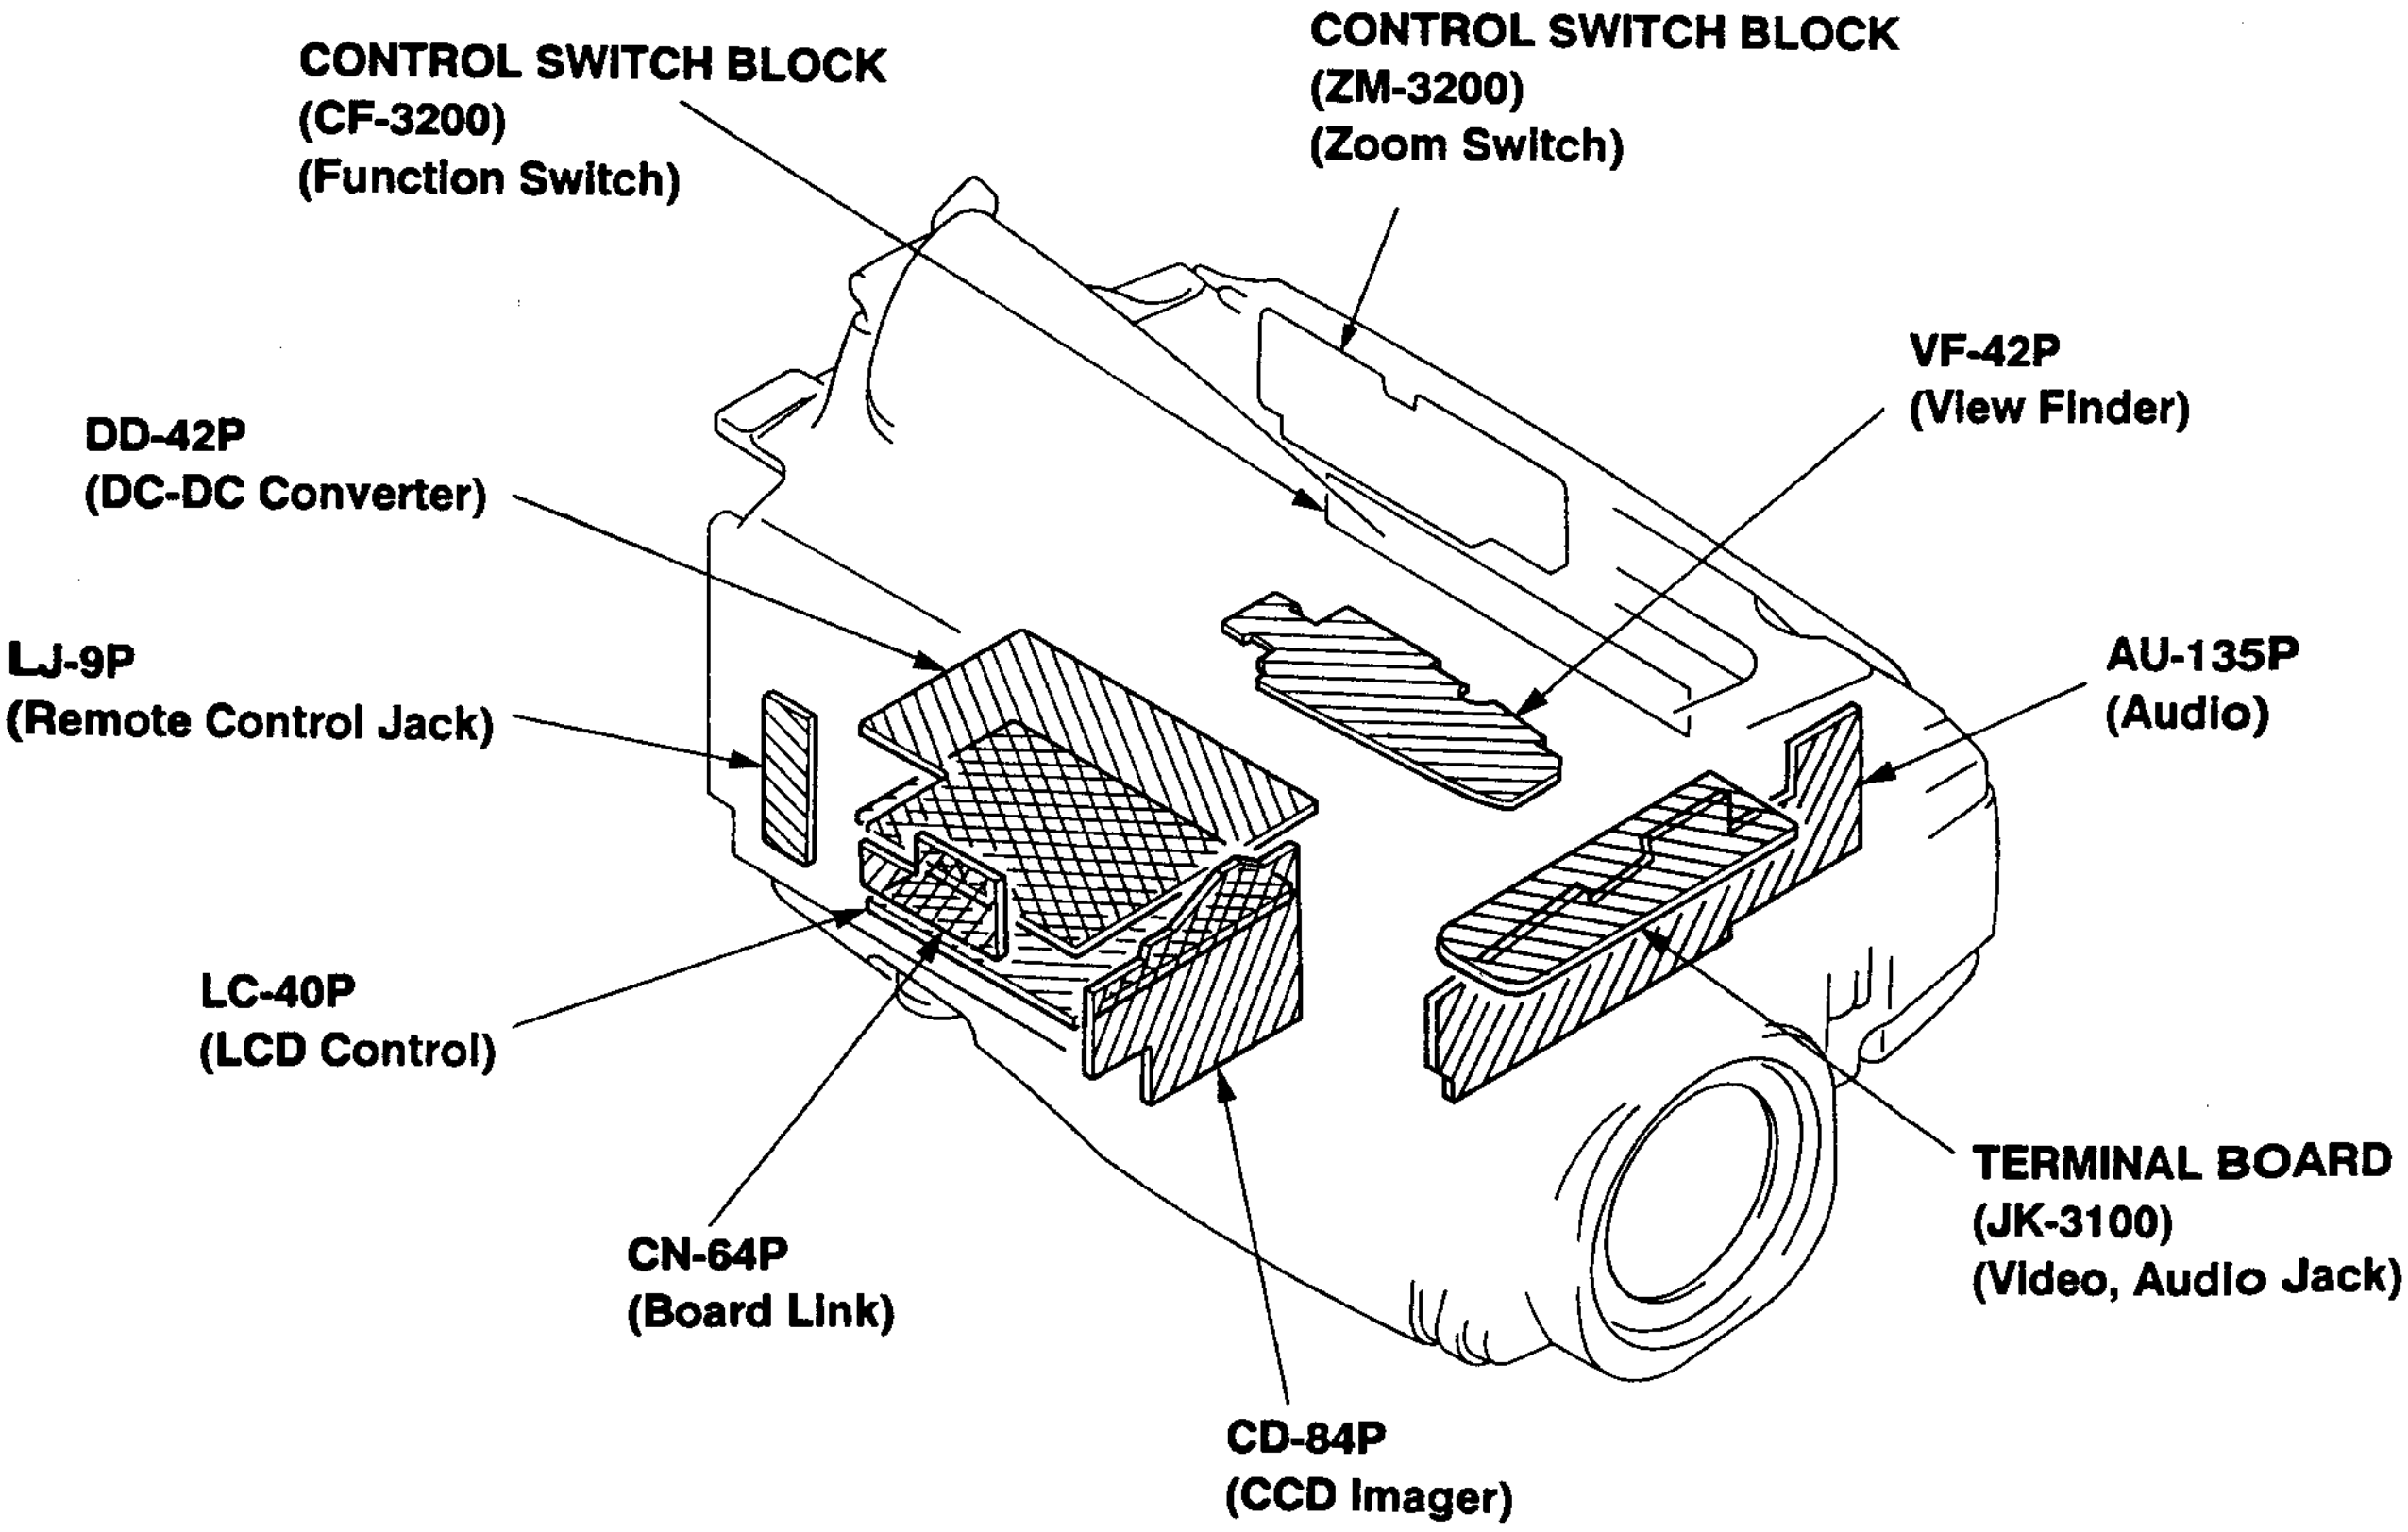
CONTROL SWITCH BLOCK
(CF-3200)
(Function Switch)
CONTROL SWITCH BLOCK
(ZM-3200)
(Zoom Switch)
VF-42P
(View Finder)
DD-42P
(DC-DC Converter)
LJ-9P
(Remote Control Jack)
AU-135P
(Audio)
LC-40P
(LCD Control)
TERMINAL BOARD
(JK-3100)
(Video, Audio Jack)
CN-64P
(Board Link)
CD-84P
(CCD Imager)

3-2. OVERALL BLOCK DIAGRAM

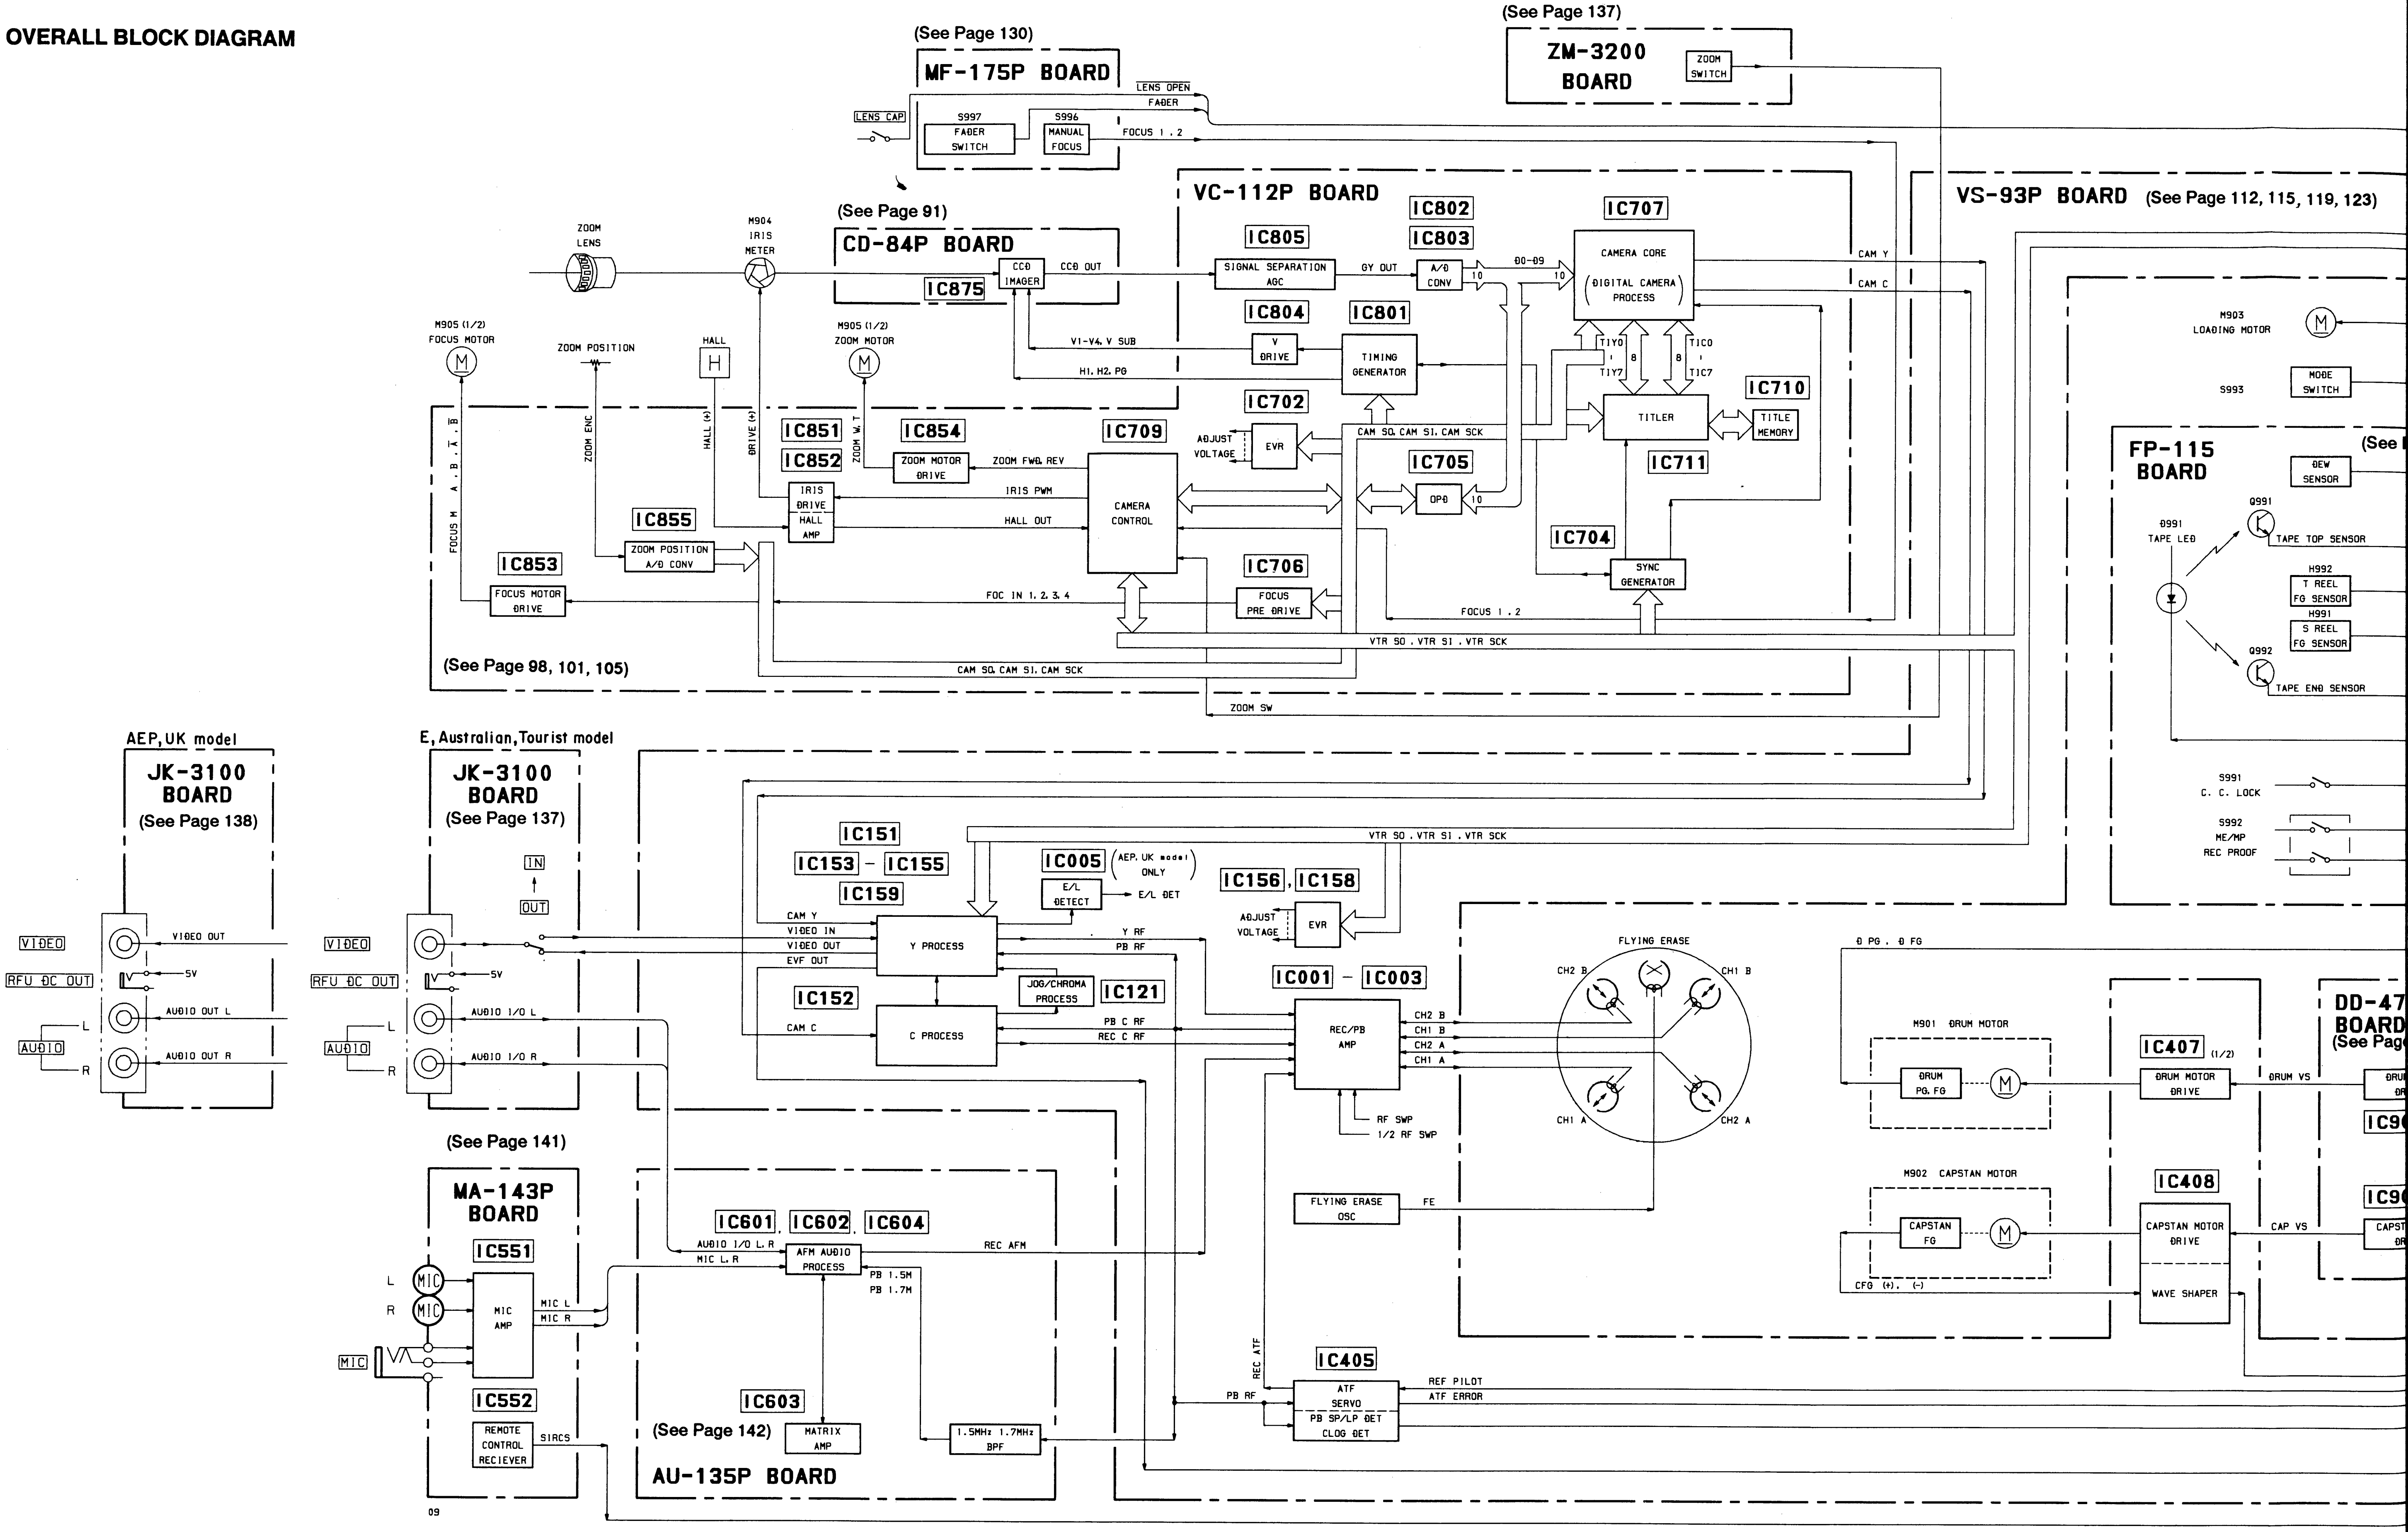
(See Page 130)
MF-175P BOARD
LENS CAP
S997
FADER SWITCH
S996
MANUAL FOCUS
LENS OPEN
FADER
FOCUS 1 . 2
(See Page 137)
ZM-3200 BOARD
ZOOM SWITCH
(See Page 91)
CD-84P BOARD
CCD IMAGER
CCD OUT
IC875
ZOOM LENS
M904 IRIS METER
M905 (1/2) FOCUS MOTOR
ZOOM POSITION
HALL
M905 (1/2) ZOOM MOTOR
VC-112P BOARD
IC805
SIGNAL SEPARATION AGC
GY OUT
IC802
IC803
A/D CONV
D0-D9
IC707
CAMERA CORE
(DIGITAL CAMERA PROCESS)
CAM Y
CAM C
IC804
V DRIVE
IC801
TIMING GENERATOR
V1-V4, V SUB
H1, H2, PG
TIY0
TIY7
TIC0
TIC7
IC710
TITLER
TITLE MEMORY
IC702
ADJUST VOLTAGE
EVR
CAM SO, CAM SI, CAM SCK
IC705
OPD
IC711
IC704
SYNC GENERATOR
IC851
IC852
IC854
ZOOM MOTOR DRIVE
ZOOM FWD, REV
IC709
IRIS DRIVE
HALL AMP
IRIS PWM
HALL OUT
CAMERA CONTROL
IC855
ZOOM POSITION A/D CONV
IC853
FOCUS MOTOR DRIVE
FOC IN 1, 2, 3, 4
IC706
FOCUS PRE DRIVE
FOCUS 1 . 2
VTR SO . VTR SI . VTR SCK
CAM SO, CAM SI, CAM SCK
ZOOM SW
FOCUS M A . B . A . B
ZOOM ENC
HALL (+)
DRIVE (+)
ZOOM W.T
(See Page 98, 101, 105)
VS-93P BOARD (See Page 112, 115, 119, 123)
M903 LOADING MOTOR
S993
MODE SWITCH
FP-115 BOARD
DEW SENSOR
Q991
TAPE TOP SENSOR
D991 TAPE LED
H992 T REEL FG SENSOR
H991 S REEL FG SENSOR
Q992
TAPE END SENSOR
S991 C. C. LOCK
S992 ME/MP REC PROOF
AEP, UK model
JK-3100 BOARD
(See Page 138)
VIDEO
RFU DC OUT
AUDIO
VIDEO OUT
5V
AUDIO OUT L
AUDIO OUT R
L
R
E, Australian, Tourist model
JK-3100 BOARD
(See Page 137)
IN
OUT
AUDIO I/O L
AUDIO I/O R
IC151
IC153 - IC155
IC159
CAM Y
VIDEO IN
VIDEO OUT
EVF OUT
Y PROCESS
IC152
CAM C
C PROCESS
IC005
(AEP, UK model ONLY)
E/L DETECT
E/L DET
Y RF
PB RF
JOG/CHROMA PROCESS
IC121
PB C RF
REC C RF
IC156, IC158
ADJUST VOLTAGE
EVR
IC001 - IC003
REC/PB AMP
CH2 B
CH1 B
CH2 A
CH1 A
RF SWP
1/2 RF SWP
FLYING ERASE
CH2 B
CH1 B
CH1 A
CH2 A
FLYING ERASE OSC
FE
D PG . D FG
M901 DRUM MOTOR
DRUM PG, FG
IC407 (1/2)
DRUM MOTOR DRIVE
DRUM VS
M902 CAPSTAN MOTOR
CAPSTAN FG
CFG (+), (-)
IC408
CAPSTAN MOTOR DRIVE
WAVE SHAPER
CAP VS
DD-47 BOARD
(See Page
IC9
IC9
CAPST
(See Page 141)
MA-143P BOARD
IC551
MIC
MIC AMP
MIC L
MIC R
IC552
REMOTE CONTROL RECIEVER
SIRCS
D9
IC601, IC602, IC604
AUDIO I/O L, R
MIC L, R
AFM AUDIO PROCESS
REC AFM
PB 1.5M
PB 1.7M
IC603
MATRIX AMP
1.5MHz 1.7MHz BPF
(See Page 142)
AU-135P BOARD
REC ATF
PB RF
IC405
ATF SERVO
PB SP/LP DET
CLOG DET
REF PILOT
ATF ERROR

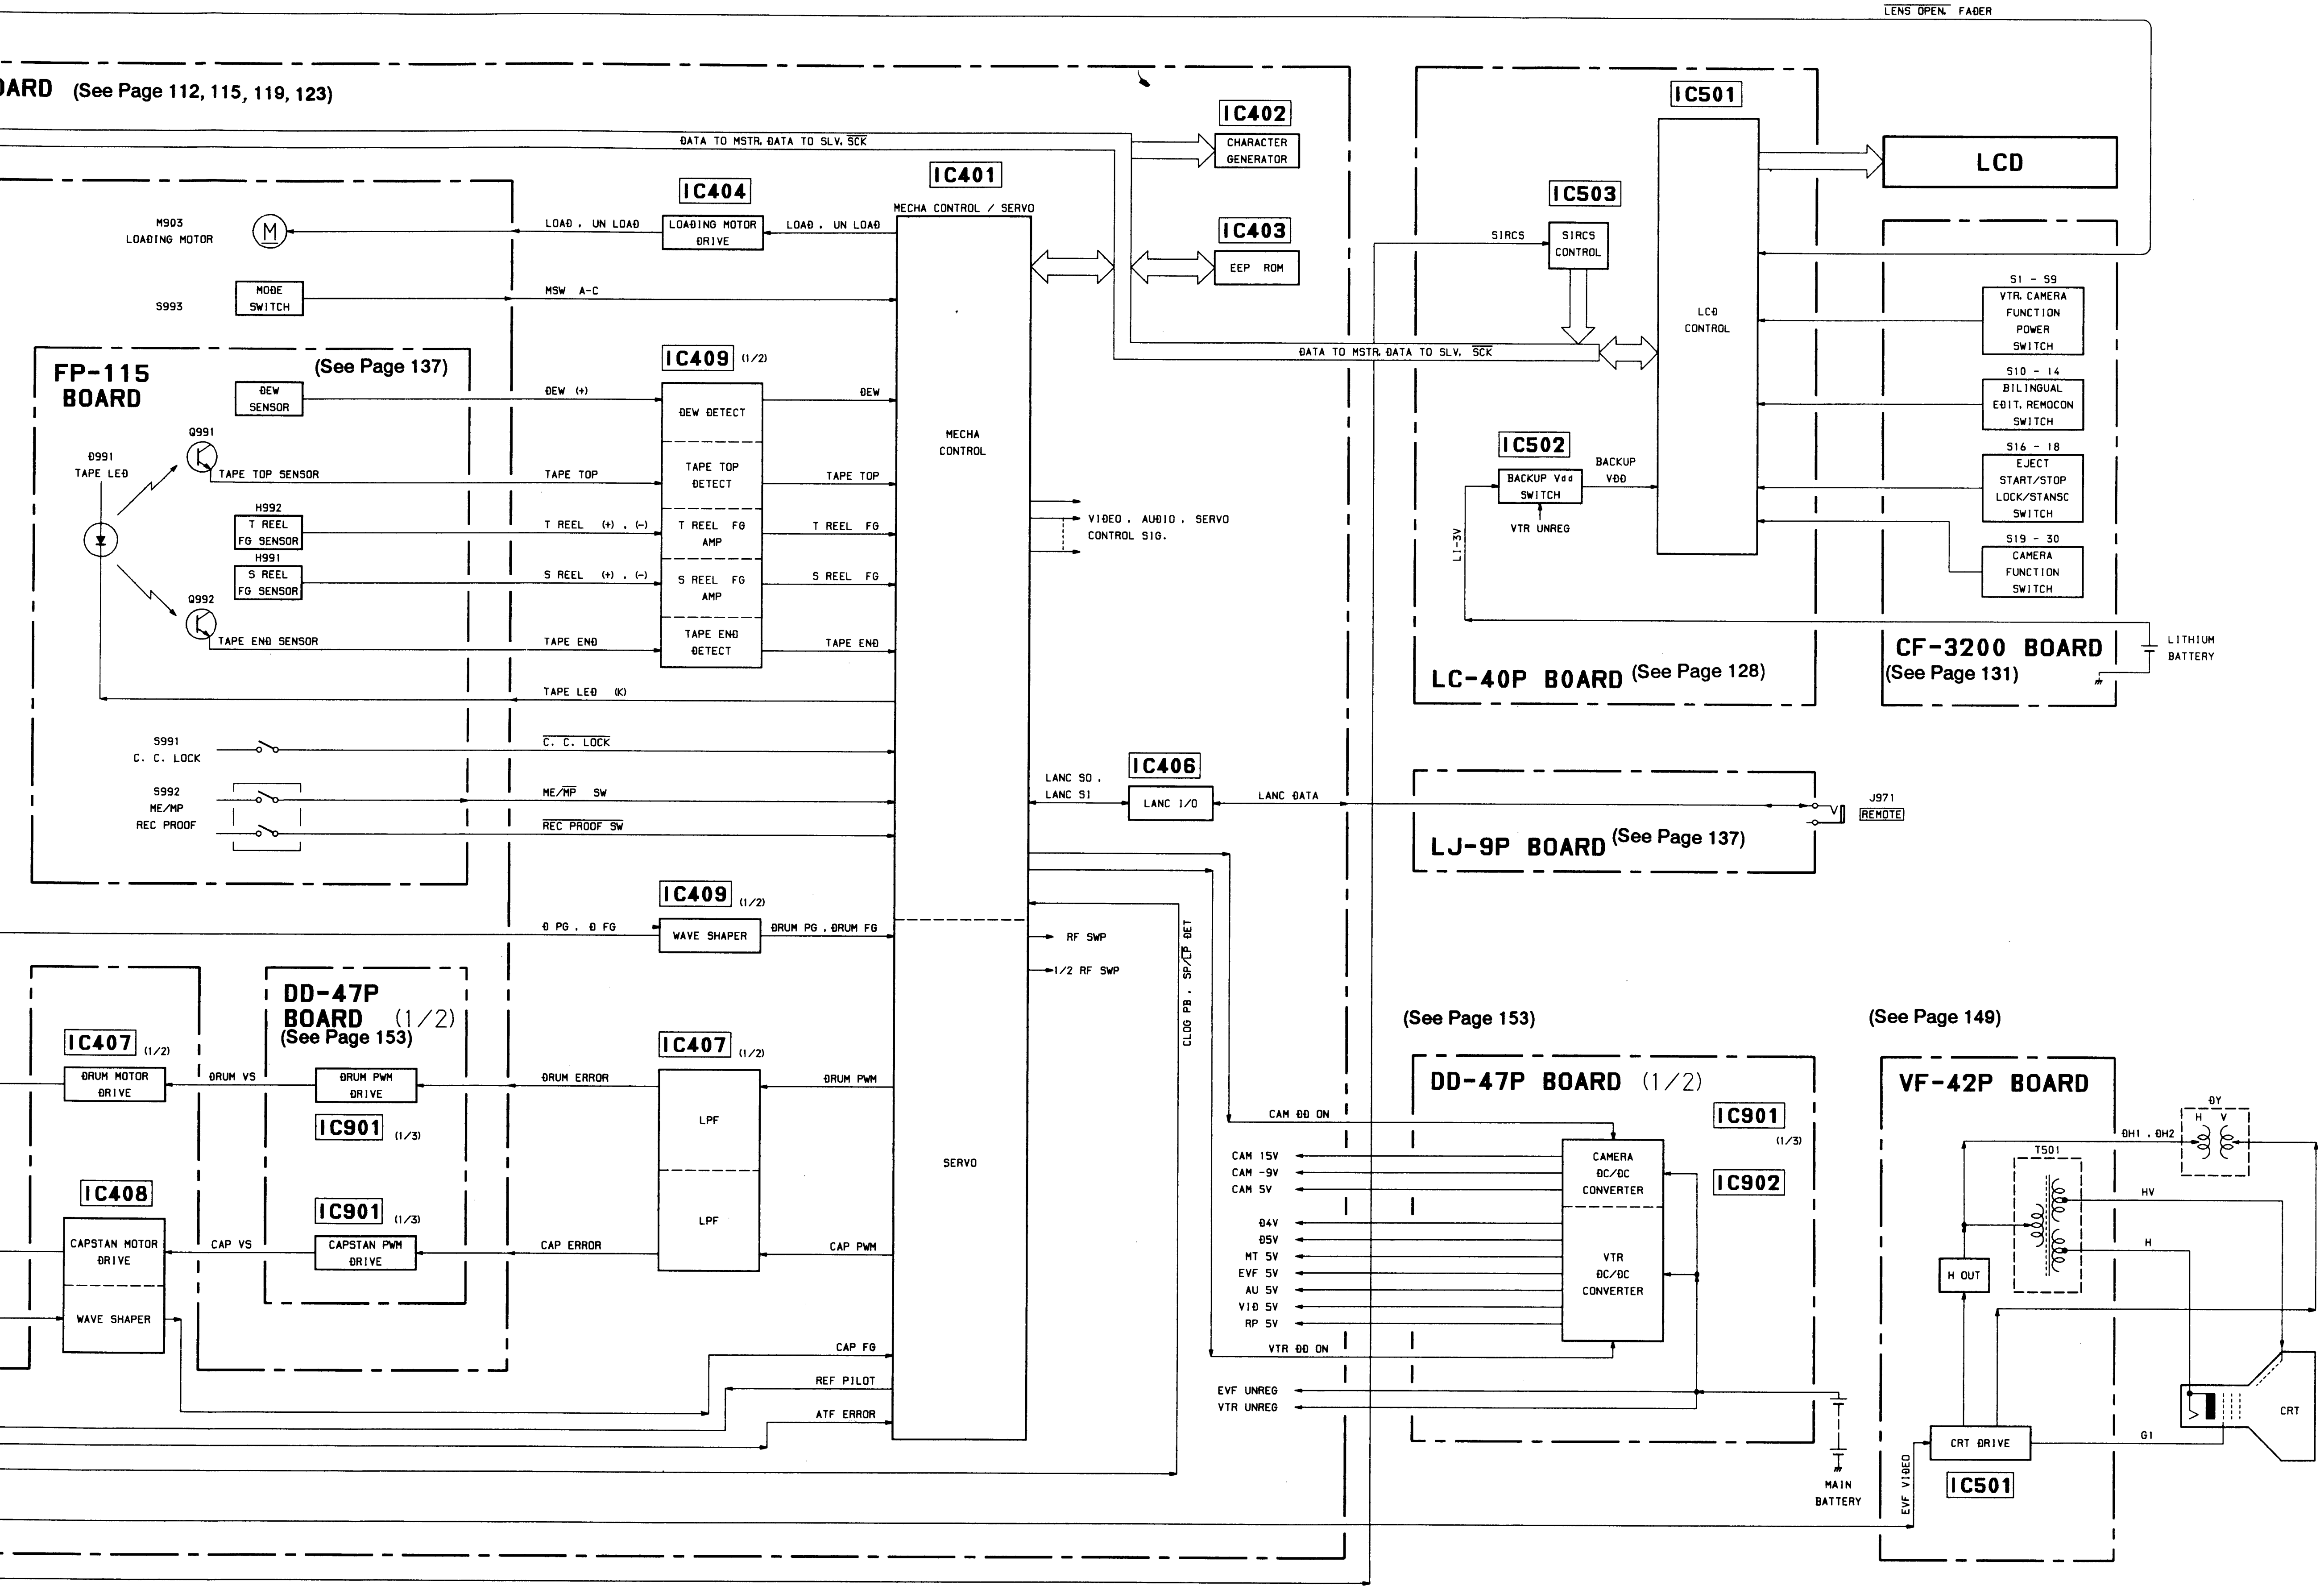
ARD (See Page 112, 115, 119, 123)
LENS OPEN FADER
DATA TO MSTR. DATA TO SLV. SCK
IC402
CHARACTER GENERATOR
IC403
EEP ROM
IC404
LOADING MOTOR DRIVE
LOAD . UN LOAD
IC401
MECHA CONTROL / SERVO
MECHA CONTROL
SERVO
M903
LOADING MOTOR
S993
MODE SWITCH
MSW A-C
FP-115 BOARD
(See Page 137)
DEW SENSOR
DEW (+)
DEW
IC409 (1/2)
DEW DETECT
Q991
D991
TAPE LED
TAPE TOP SENSOR
TAPE TOP
TAPE TOP DETECT
H992
T REEL FG SENSOR
T REEL (+) . (-)
T REEL FG AMP
T REEL FG
H991
S REEL FG SENSOR
S REEL (+) . (-)
S REEL FG AMP
S REEL FG
Q992
TAPE END SENSOR
TAPE END
TAPE END DETECT
TAPE LED (K)
S991
C. C. LOCK
S992
ME/MP
REC PROOF
ME/MP SW
REC PROOF SW
VIDEO . AUDIO . SERVO CONTROL SIG.
LANC SO .
LANC SI
IC406
LANC I/O
LANC DATA
IC409 (1/2)
WAVE SHAPER
D PG . D FG
DRUM PG . DRUM FG
RF SWP
1/2 RF SWP
CLOG PB . SP/LP DET
DD-47P BOARD (1/2)
(See Page 153)
IC407 (1/2)
DRUM MOTOR DRIVE
DRUM VS
DRUM PWM DRIVE
IC901 (1/3)
IC901 (1/3)
CAPSTAN PWM DRIVE
DRUM ERROR
IC407 (1/2)
LPF
LPF
DRUM PWM
IC408
CAPSTAN MOTOR DRIVE
WAVE SHAPER
CAP VS
CAP ERROR
CAP PWM
CAP FG
REF PILOT
ATF ERROR
IC501
LCD
LCD CONTROL
IC503
SIRCS
SIRCS CONTROL
DATA TO MSTR. DATA TO SLV. SCK
IC502
BACKUP Vdd SWITCH
BACKUP VDD
VTR UNREG
LI-3V
LC-40P BOARD (See Page 128)
S1 - S9
VTR, CAMERA FUNCTION POWER SWITCH
S10 - 14
BILINGUAL EDIT. REMOCON SWITCH
S16 - 18
EJECT START/STOP LOCK/STANSC SWITCH
S19 - 30
CAMERA FUNCTION SWITCH
CF-3200 BOARD
(See Page 131)
LITHIUM BATTERY
LJ-9P BOARD (See Page 137)
J971
REMOTE
(See Page 153)
DD-47P BOARD (1/2)
IC901 (1/3)
IC902
CAM DD ON
CAM 15V
CAM -9V
CAM 5V
D4V
D5V
MT 5V
EVF 5V
AU 5V
VID 5V
RP 5V
VTR DD ON
CAMERA DC/DC CONVERTER
VTR DC/DC CONVERTER
EVF UNREG
VTR UNREG
MAIN BATTERY
(See Page 149)
VF-42P BOARD
DY
H V
DH1 . DH2
T501
HV
H
H OUT
CRT
CRT DRIVE
G1
IC501
EVF VIDEO

3-3. CAMERA (1) BLOCK DIAGRAM

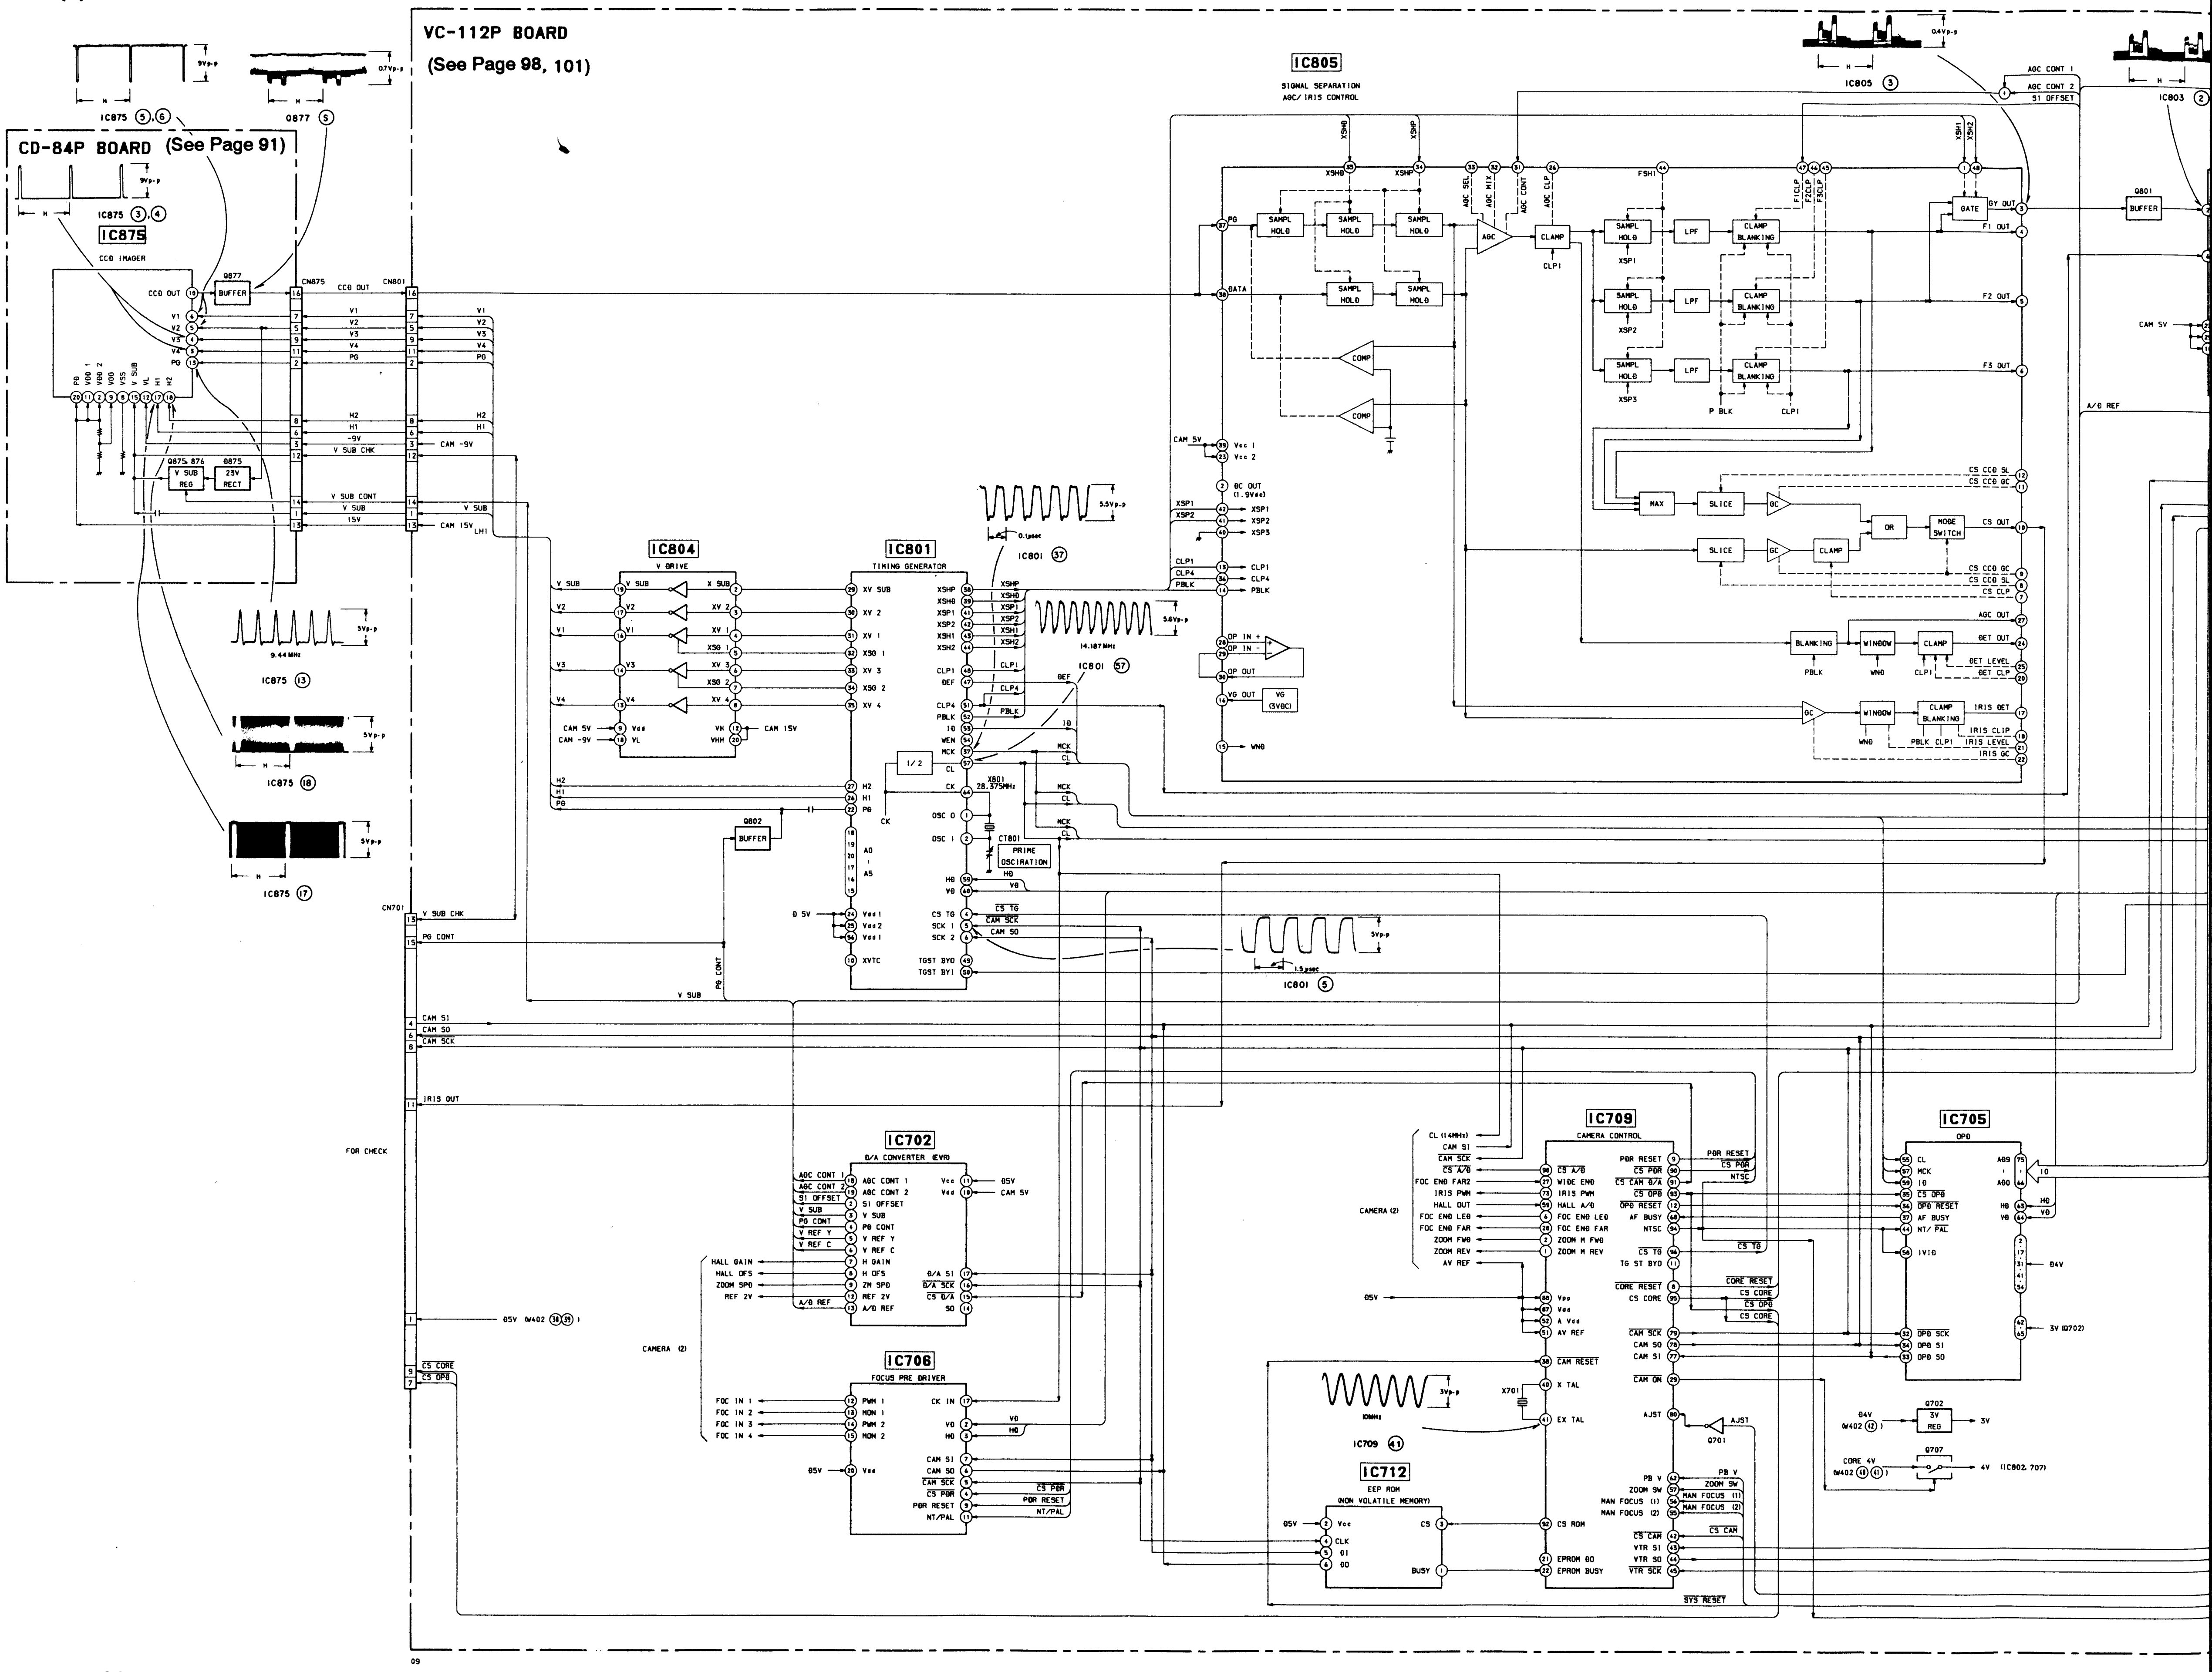
VC-112P BOARD
(See Page 98, 101)
CD-84P BOARD (See Page 91)
IC875
CCD IMAGER
IC875 ⑤,⑥
Q877 ⑤
IC875 ③,④
Q877 BUFFER
CN875
CN801
CCD OUT
V1
V2
V3
V4
PG
H2
H1
-9V
V SUB CHK
V SUB CONT
V SUB
15V
CAM -9V
CAM 15V
Q875, 876 V SUB REG
Q875 23V RECT
IC875 ⑬
9.44MHz
IC875 ⑱
IC875 ⑰
IC804
V DRIVE
IC801
TIMING GENERATOR
IC801 ㊲
14.187MHz
IC801 ㊼
IC801 ⑤
X801 28.375MHz
CT801 PRIME OSCIRATION
Q802 BUFFER
1/2
CN701
V SUB CHK
PG CONT
CAM SI
CAM SO
CAM SCK
IRIS OUT
FOR CHECK
CS CORE
CS OPD
D5V (M402 ㉚㉛)
IC805
SIGNAL SEPARATION
AGC/IRIS CONTROL
IC805 ③
IC803 ②
SAMPL HOLD
AGC
CLAMP
LPF
CLAMP BLANKING
COMP
MAX
SLICE
GC
OR
MODE SWITCH
BLANKING
WINDOW
GATE
Q801 BUFFER
GY OUT
F1 OUT
F2 OUT
F3 OUT
AGC CONT 1
AGC CONT 2
S1 OFFSET
CAM 5V
A/D REF
IC702
D/A CONVERTER (EVR)
HALL GAIN
HALL OFS
ZOOM SPD
REF 2V
CAMERA (2)
IC706
FOCUS PRE DRIVER
FOC IN 1
FOC IN 2
FOC IN 3
FOC IN 4
IC709
CAMERA CONTROL
X701
10MHz
IC709 ㊶
IC712
EEP ROM
(NON VOLATILE MEMORY)
IC705
OPD
Q701
Q702 3V REG
Q707
D4V (M402 ⑫)
CORE 4V (M402 ⑪)
3V
4V (IC802, 707)
3V (Q702)
SYS RESET

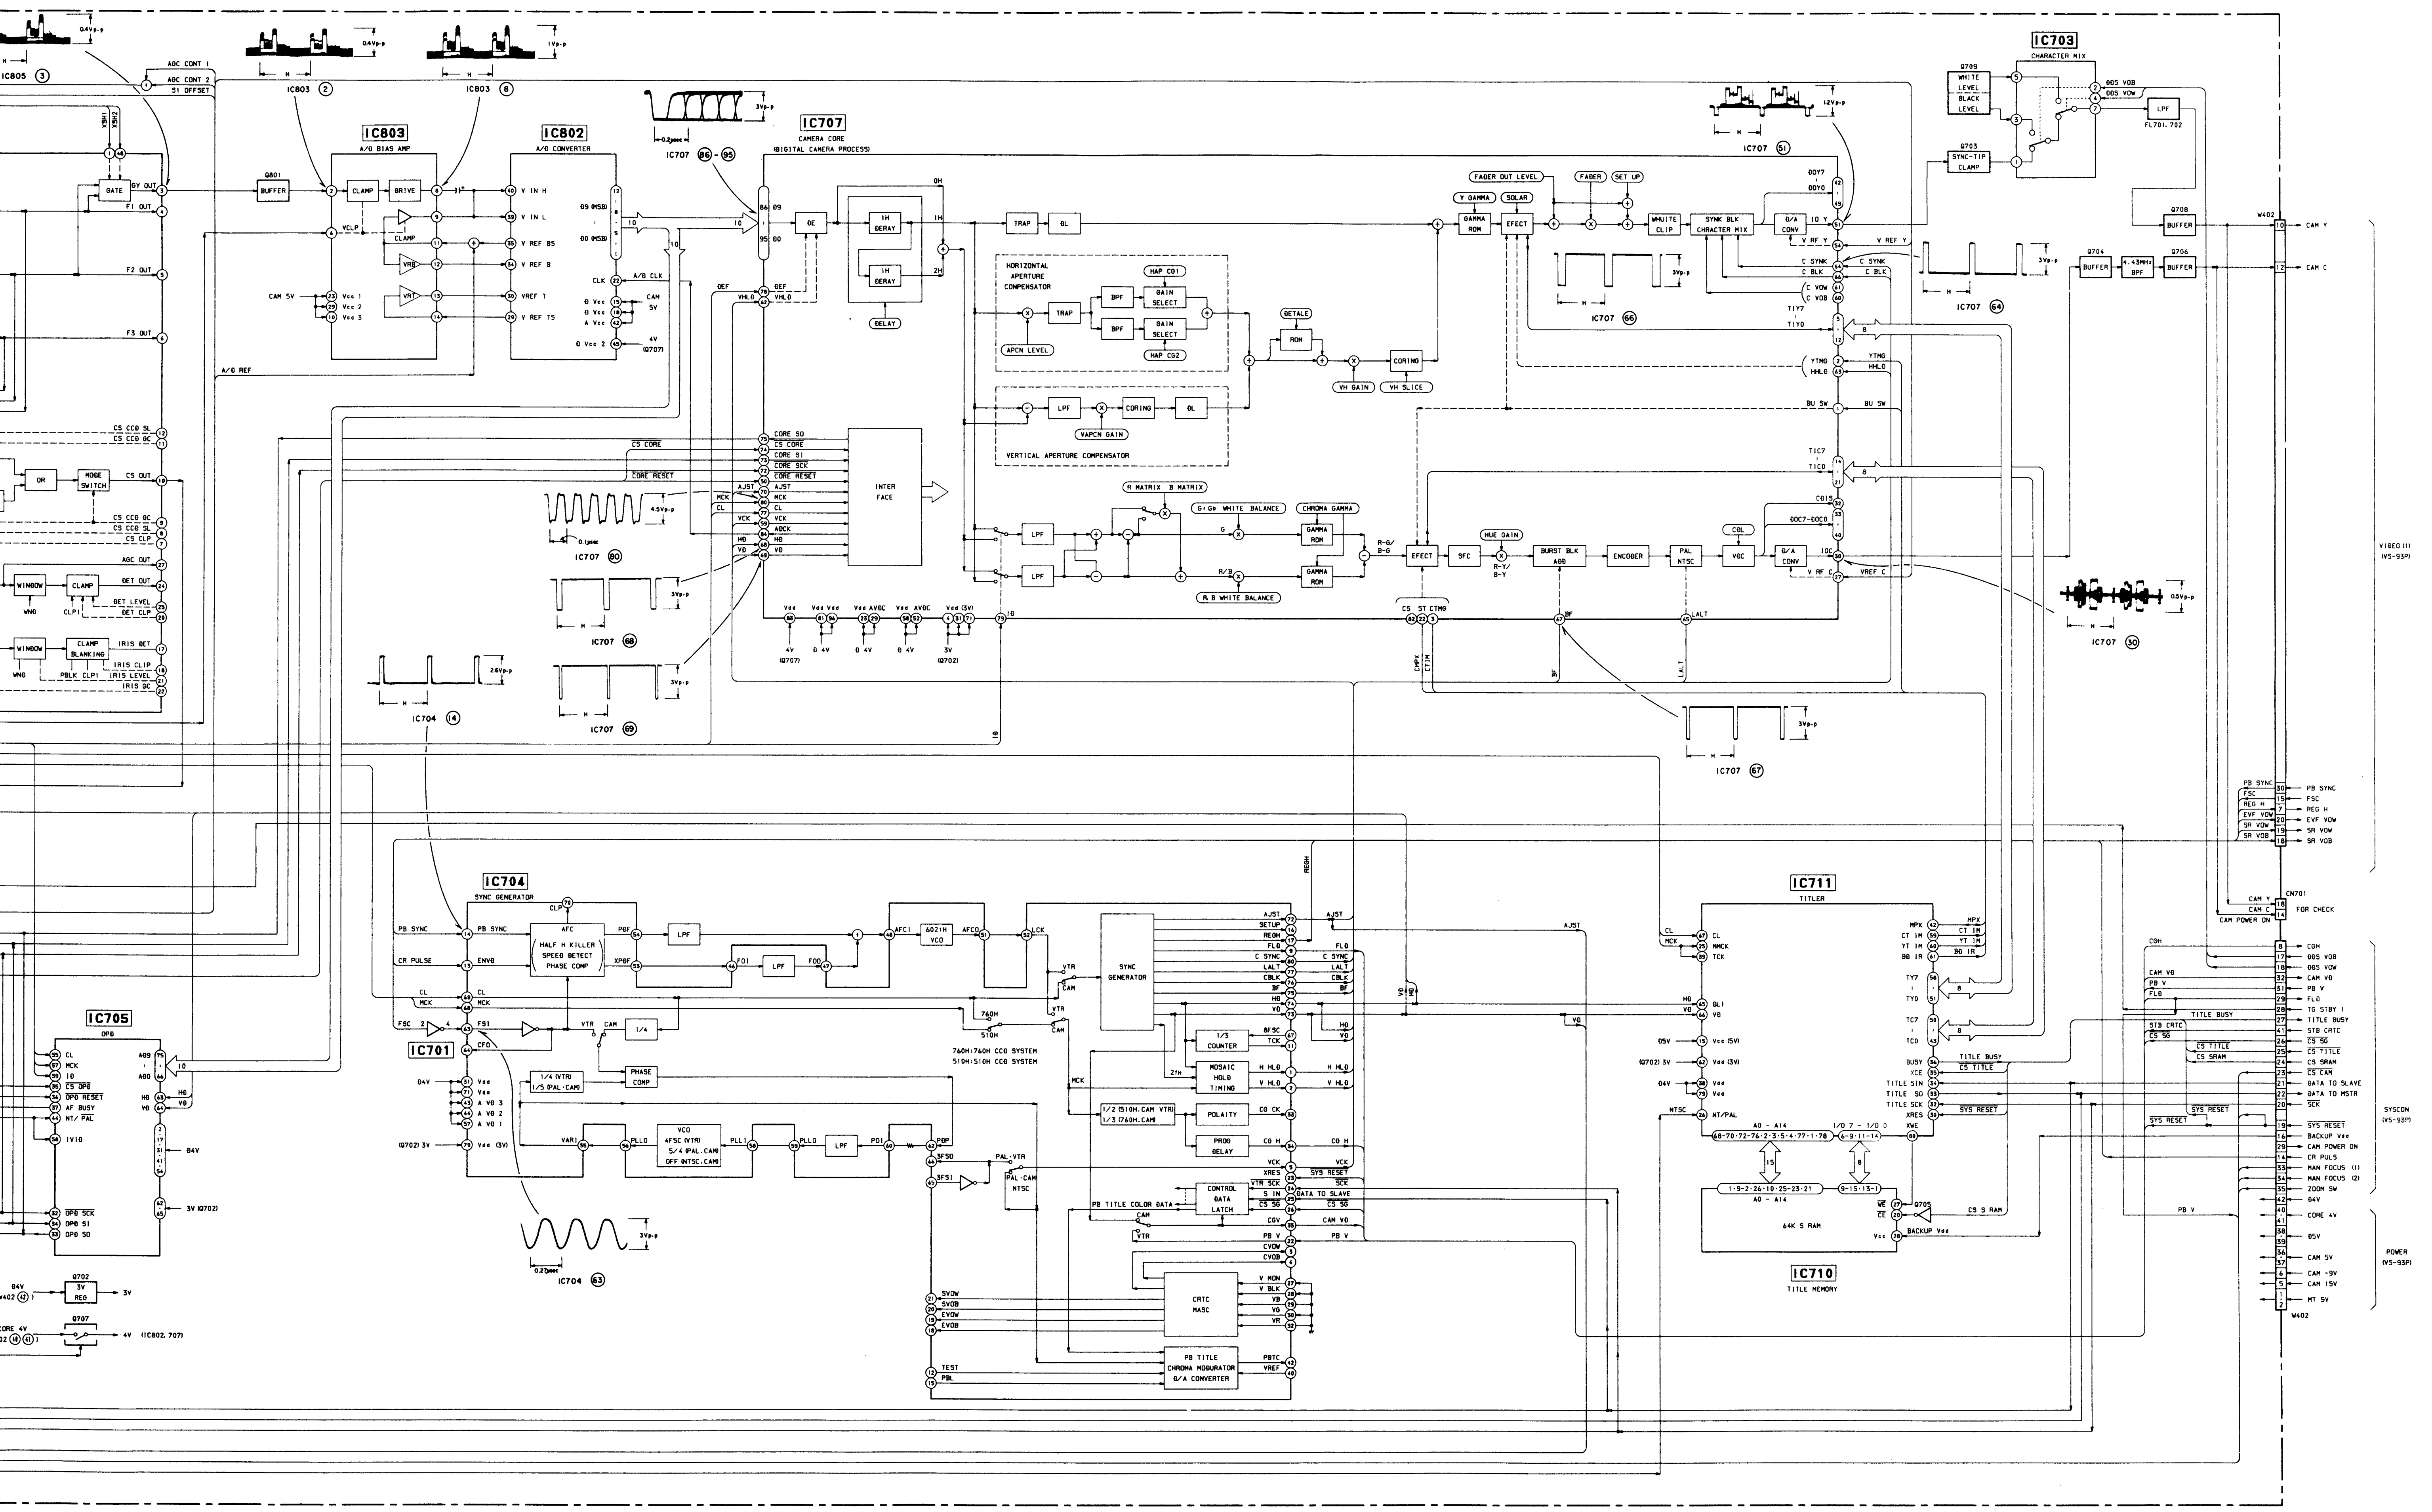
IC805 ③
IC803 ②
IC803 ⑧
IC803
A/D BIAS AMP
IC802
A/D CONVERTER
IC707 (86)-(95)
IC707
CAMERA CORE
(DIGITAL CAMERA PROCESS)
Q801
BUFFER
CLAMP
DRIVE
VCLP
CAM 5V
Vcc 1
Vcc 2
Vcc 3
V IN H
V IN L
V REF BS
V REF B
VREF T
V REF TS
A/D CLK
A/D REF
GATE
OY OUT
F1 OUT
F2 OUT
F3 OUT
ADC CONT 1
ADC CONT 2
S1 OFFSET
OR
MODE SWITCH
CS OUT
WINDOW
CLAMP
CLAMP BLANKING
DET OUT
DET LEVEL
DET CLP
IRIS DET
IRIS CLIP
IRIS LEVEL
DE
1H DELAY
DELAY
TRAP
DL
HORIZONTAL APERTURE COMPENSATOR
APCN LEVEL
BPF
GAIN SELECT
HAP CO1
HAP CO2
DETALE
ROM
CORING
VH GAIN
VH SLICE
LPF
VAPCN GAIN
VERTICAL APERTURE COMPENSATOR
INTER FACE
CORE SO
CS CORE
CORE SI
CORE SCK
CORE RESET
AJST
MCK
CL
VCK
ADCK
HD
VD
IC707 (80)
IC707 (68)
IC707 (69)
IC704 ⑭
R MATRIX B MATRIX
G+Go WHITE BALANCE
R,B WHITE BALANCE
CHROMA GAMMA
GAMMA ROM
R-G/B-G
EFECT
SFC
HUE GAIN
R-Y/B-Y
BURST BLK ADD
ENCODER
PAL NTSC
COL
VOC
D/A CONV
Y GAMMA
SOLAR
FADER OUT LEVEL
FADER
SET UP
WHITE CLIP
SYNK BLK CHARACTER MIX
IC707 (51)
IC707 (66)
IC707 (64)
IC707 (67)
IC707 (30)
IC703
CHARACTER MIX
Q709 WHITE LEVEL BLACK LEVEL
Q703 SYNC-TIP CLAMP
LPF
FL701, 702
Q708 BUFFER
Q704 BUFFER
4.43MHz BPF
Q706 BUFFER
W402
CAM Y
CAM C
VIDEO (1) (VS-93P)
PB SYNC
FSC
REG H
EVF VDW
SR VDW
SR VDB
CN701
FOR CHECK
CAM POWER ON
IC704
SYNC GENERATOR
HALF H KILLER SPEED DETECT PHASE COMP
AFC
PB SYNC
CR PULSE
ENVD
PDF
XPDF
FDI
FDO
AFCI
6021H VCO
AFCO
LCK
VTR
CAM
SYNC GENERATOR
760H:760H CCD SYSTEM
510H:510H CCD SYSTEM
1/4
PHASE COMP
1/4 (VTR)
1/5 (PAL-CAM)
VCO
4FSC (VTR)
5/4 (PAL.CAM)
OFF (NTSC.CAM)
VARI
PLLO
PLLI
POI
POP
PAL-VTR
PAL-CAM
NTSC
IC701
FSC
FSI
CFO
D4V
(Q702) 3V
Vdd (3V)
IC704 (63)
1/5 COUNTER
MOSAIC HOLD TIMING
1/2 (510H.CAM VTR)
1/3 (760H.CAM)
POLAITY
PROG DELAY
CONTROL DATA LATCH
PB TITLE COLOR DATA
CRTC MASC
SVDW
SVDB
EVDW
EVDB
PB TITLE CHROMA MODURATOR D/A CONVERTER
TEST
PBL
PBTC
VREF
IC705
DPD
DPD RESET
AF BUSY
NT/PAL
IVID
DPD SCK
DPD SI
DPD SO
3V (Q702)
Q702 3V REG
Q707
4V (IC802, 707)
CORE 4V
IC711
TITLER
MPX
CT IM
YT IM
BG IR
TITLE BUSY
TITLE SIN
TITLE SO
TITLE SCK
XRES
XWE
A0 - A14
I/O 7 - I/O 0
IC710
TITLE MEMORY
64K S RAM
Q705
CS S RAM
BACKUP Vdd
CDH
DDS VDB
DDS VDW
CAM VD
PB V
FLD
TG STBY 1
TITLE BUSY
STB CRTC
CS SG
CS TITLE
CS SRAM
CS CAM
DATA TO SLAVE
DATA TO MSTR
SCK
SYS RESET
BACKUP Vdd
CAM POWER ON
CR PULS
MAN FOCUS (1)
MAN FOCUS (2)
ZOOM SW
D4V
CORE 4V
D5V
CAM 5V
CAM -9V
CAM 15V
MT 5V
SYSCON (VS-93P)
POWER (VS-93P)

3-4. CAMERA MICROPROCESSOR PIN FUNCTION (IC709 ON VC-112P BOARD: CXP80624-285R/298R)

Pin No.	Signal	I/O	Function
1	ZOOM M REV	O	Zoom motor control signal. Normally "H". 20 msec period PWM signal when rotating to WIDE.
2	ZOOM M FWD	O	Zoom motor control signal. Normally "H". 20 msec period PWM signal when rotating to TELE.
3			Not used.
4			
5			
6	FOC END LED	O	Focus end sensor LED control signal. Normally "L".
7	RT05/D5		Not used.
8	CORE RESET	O	Camera core (IC707 on VC-112P board) reset signal. Normally "H". "L" when reset.
9	PDR RESET	O	Focus predriver (IC706 on VC-112P board) reset signal. Normally "H". "L" when reset.
10			Not used.
11	TG STBY0		
12	OPD RESET	O	OPD (IC705 on VC-112P board) reset signal. "H": camera mode. "L": VTR mode.
13			Not used.
14			
15			
16			
17			
18			
19			
20			
21	EPROM DO	O	Connected to +5V.
22	EPROM BUSY	I	BUSY signal from EEPROM. Normally "H". "L" pulse when data reading/writing.
23			Not used.
24			
25			Connected to +5V.
26			
27	WIDE END		Focus Zone sensor input. Normally "L".
28	FOC END FAR	I	Focus edge sensor input. Normally "L".
29	$\overline{\text{CAM ON}}$	O	Power supply control signal. Normally "L".
30			Not used.
31			
32			
33			
34			
35			
36			
37	MP		Connected to GND.
38	$\overline{\text{CAM RESET}}$	I	Reset signal input. Normally "H". "L" when reset.
39	VSS		GND
40	XTAL	O	10 MHz clock oscillation circuit.
41	EXTAL	I	
42	$\overline{\text{CS CAM}}$	I	Chip select signal from mode control microprocessor. (IC501 on LC-40P board)
43	VTR SI	I	Serial data input from mode control microprocessor.
44	VTR SO	O	Serial data output from mode control microprocessor.
45	VTR SCK	I	Serial data transfer clock.
46			Not used.
47			
48			
49			

Pin No.	Signal	I/O	Function
50	AVSS		GND
51	AVREF		Analog input port reference voltage (5V).
52	AVDD		Analog input port voltage (5V).
53			Connected to GND.
54			
55	MAN FOCUS (2)	I	Manual focus input. 0 to 5 Vdc.
56	MAN FOCUS (1)	I	Manual focus input. 0 to 5 Vdc.
57	ZOOM SW	I	Zoom key input. 0V: F. TELE, 0.8V: TELE and 1.4V: F. WIDE, 2.1V: WIDE and 5V: no input.
58		I	Not used.
59	HALL A/D	I	Hall voltage. approx. 1V (iris open) to approx. 3V (iris close).
60		I	Connected to GND.
61			Connected to 5V.
62	PB V	I	VD signal input from mecha controler (IC401 on VS-93P board).
63	PG5/SYNC1		Connected to +5V.
64	VTR SYNC		
65	PB CTL		
66	DPG		
67			
68	AF BUSY	I	AF busy signal.
69			Not used.
70			
71			
72			
73	IRIS PWM	O	Iris control signal. 25.5 µsec period PWM signal.
74			Not used.
75			
76			
77	CAM SI	I	Serial data input.
78	CAM SO	O	Serial data output.
79	$\overline{\text{CAM SCK}}$	O	Serial data transfer clock.
80	AJST	I	Adjustment timing pulse input. Normally "H".
81	PI/TO		Not used.
82	PI/PWM		
83	PI/PO		
84	PI O		Connected to +5V.
85	PKO		
86	GND		GND
87	VDD		+5V power supply.
88	VPP		
89			Not used.
90	$\overline{\text{CS PDR}}$	O	Chip select signal to focus predriver (IC706 on VC-112P board).
91	$\overline{\text{CS CAM D/A}}$	O	Chip select signal to camera EVR (IC702 on VC-112P board).
92	CS ROM	O	Chip select signal to EEPROM (IC712 on VC-112P board).
93	$\overline{\text{CS OPD}}$	O	Chip select signal to OPD (IC705 on VC-112P board).
94	$\overline{\text{NTSC}}$	O	NTSC: "L", PAL: "H".
95	$\overline{\text{CS CORE}}$	O	Chip select signal to camera core (IC707 on VC-112P board).
96	$\overline{\text{CS TG}}$	O	Chip select signal to timing generator (IC801 on VC-112P board).
97			Not used.
98	$\overline{\text{CS A/D}}$	O	Chip select signal to Zoom position A/D converter (IC855 on VC-112P board).
99			Not used.
100			

3-5. CAMER

Signal	I/O	Function
AVSS		GND
AVREF		Analog input port reference voltage (5V).
AVDD		Analog input port voltage (5V).
		Connected to GND.
MAN FOCUS (2)	I	Manual focus input. 0 to 5 Vdc.
MAN FOCUS (1)	I	Manual focus input. 0 to 5 Vdc.
ZOOM SW	I	Zoom key input. 0V: F. TELE, 0.8V: TELE and 1.4V: F. WIDE, 2.1V: WIDE and 5V: no input.
	I	Not used.
HALL A/D	I	Hall voltage. approx. 1V (iris open) to approx. 3V (iris close).
	I	Connected to GND.
		Connected to 5V.
PB V	I	VD signal input from mecha controler (IC401 on VS-93P board).
PG5/SYNC1		Connected to +5V.
VTR SYNC		
PB CTL		
DPG		
AF BUSY	I	AF busy signal.
		Not used.
IRIS PWM	O	Iris control signal. 25.5 μsec period PWM signal.
		Not used.
CAM SI	I	Serial data input.
CAM SO	O	Serial data output.
$\overline{\text{CAM SCK}}$	O	Serial data transfer clock.
AJST	I	Adjustment timing pulse input. Normally "H".
PI/TO		Not used.
PI/PWM		
PI/PO		
PI O		Connected to +5V.
PKO		
GND		GND
VDD		+5V power supply.
VPP		
		Not used.
$\overline{\text{CS PDR}}$	O	Chip select signal to focus predriver (IC706 on VC-112P board).
$\overline{\text{CS CAM D/A}}$	O	Chip select signal to camera EVR (IC702 on VC-112P board).
CS ROM	O	Chip select signal to EEPROM (IC712 on VC-112P board).
$\overline{\text{CS OPD}}$	O	Chip select signal to OPD (IC705 on VC-112P board).
$\overline{\text{NTSC}}$	O	NTSC: "L", PAL: "H".
$\overline{\text{CS CORE}}$	O	Chip select signal to camera core (IC707 on VC-112P board).
$\overline{\text{CS TG}}$	O	Chip select signal to timing generator (IC801 on VC-112P board).
		Not used.
$\overline{\text{CS A/D}}$	O	Chip select signal to Zoom position A/D converter (IC855 on VC-112P board).
		Not used.

3-5. CAMERA (2) BLOCK DIAGRAM

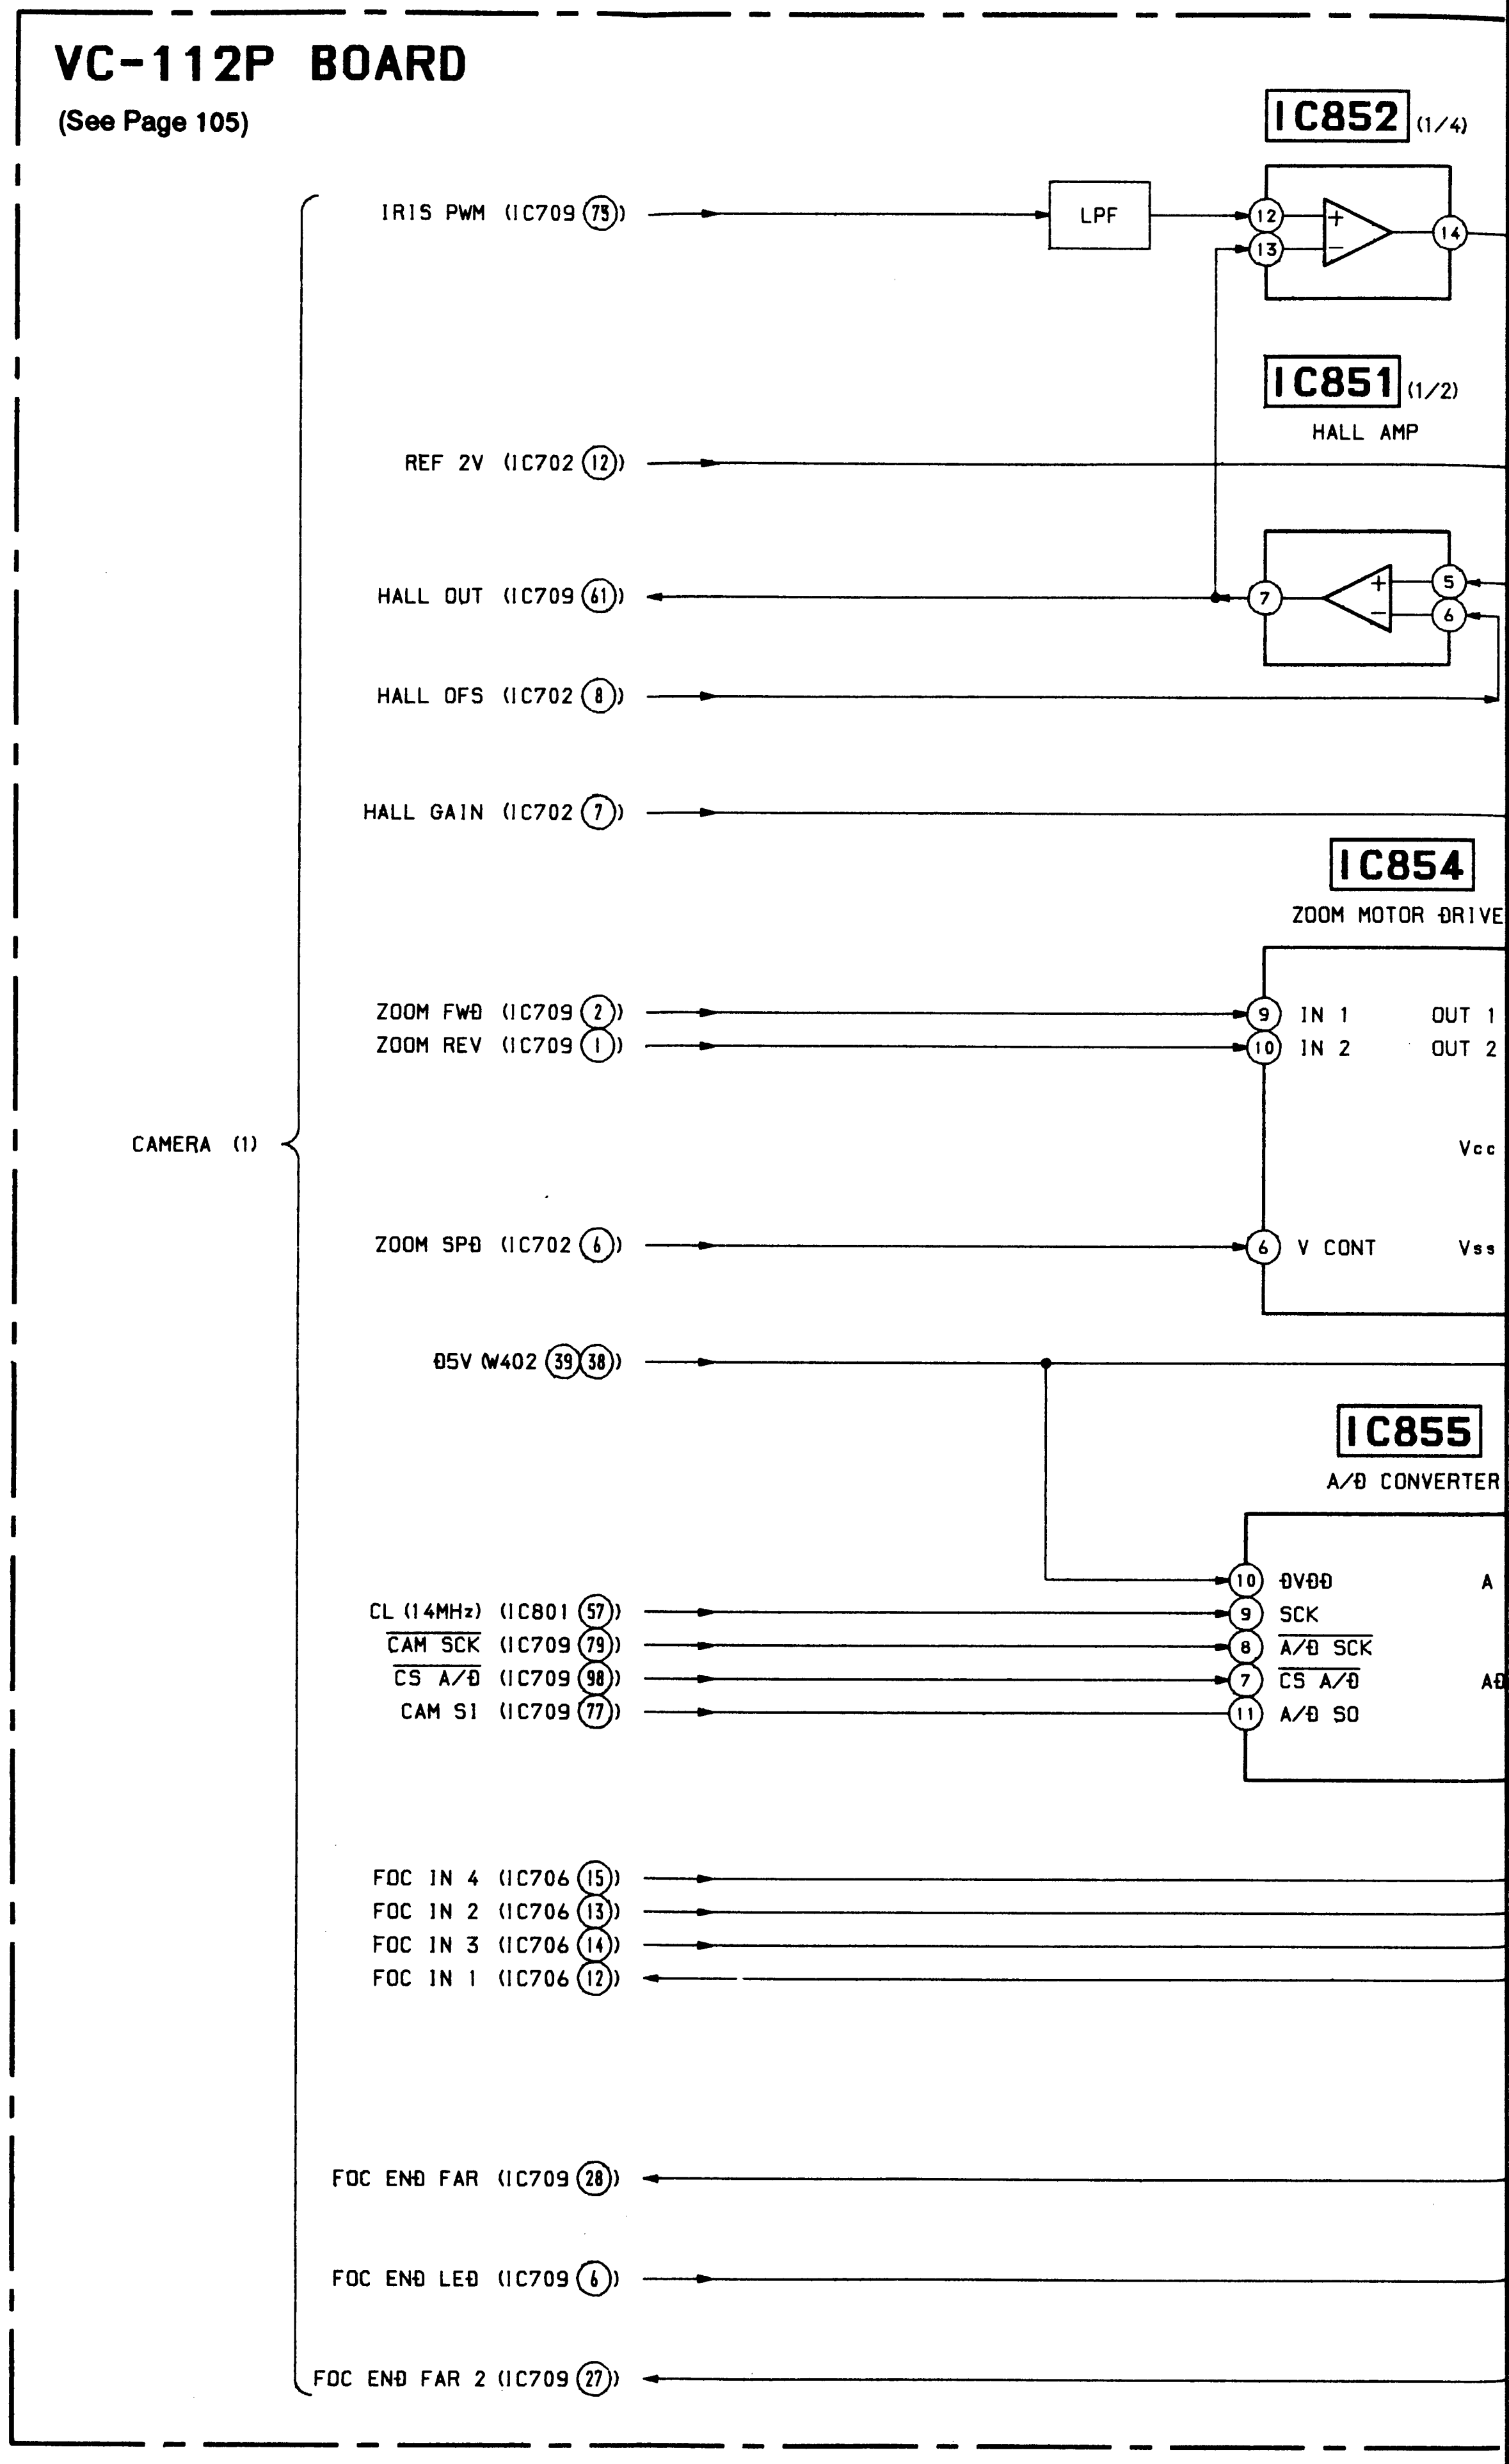
VC-112P BOARD
(See Page 105)
IC852 (1/4)
LPF
IRIS PWM (IC709 75)
IC851 (1/2)
HALL AMP
REF 2V (IC702 12)
HALL OUT (IC709 61)
HALL OFS (IC702 8)
HALL GAIN (IC702 7)
IC854
ZOOM MOTOR DRIVE
ZOOM FWD (IC709 2)
ZOOM REV (IC709 1)
IN 1
IN 2
OUT 1
OUT 2
Vcc
Vss
V CONT
CAMERA (1)
ZOOM SPD (IC702 6)
D5V (W402 39 38)
IC855
A/D CONVERTER
DVDD
SCK
A/D SCK
CS A/D
A/D SO
CL (14MHz) (IC801 57)
CAM SCK (IC709 79)
CS A/D (IC709 98)
CAM SI (IC709 77)
FOC IN 4 (IC706 15)
FOC IN 2 (IC706 13)
FOC IN 3 (IC706 14)
FOC IN 1 (IC706 12)
FOC END FAR (IC709 28)
FOC END LED (IC709 6)
FOC END FAR 2 (IC709 27)
09

VC-112P BOARD

(See Page 105)

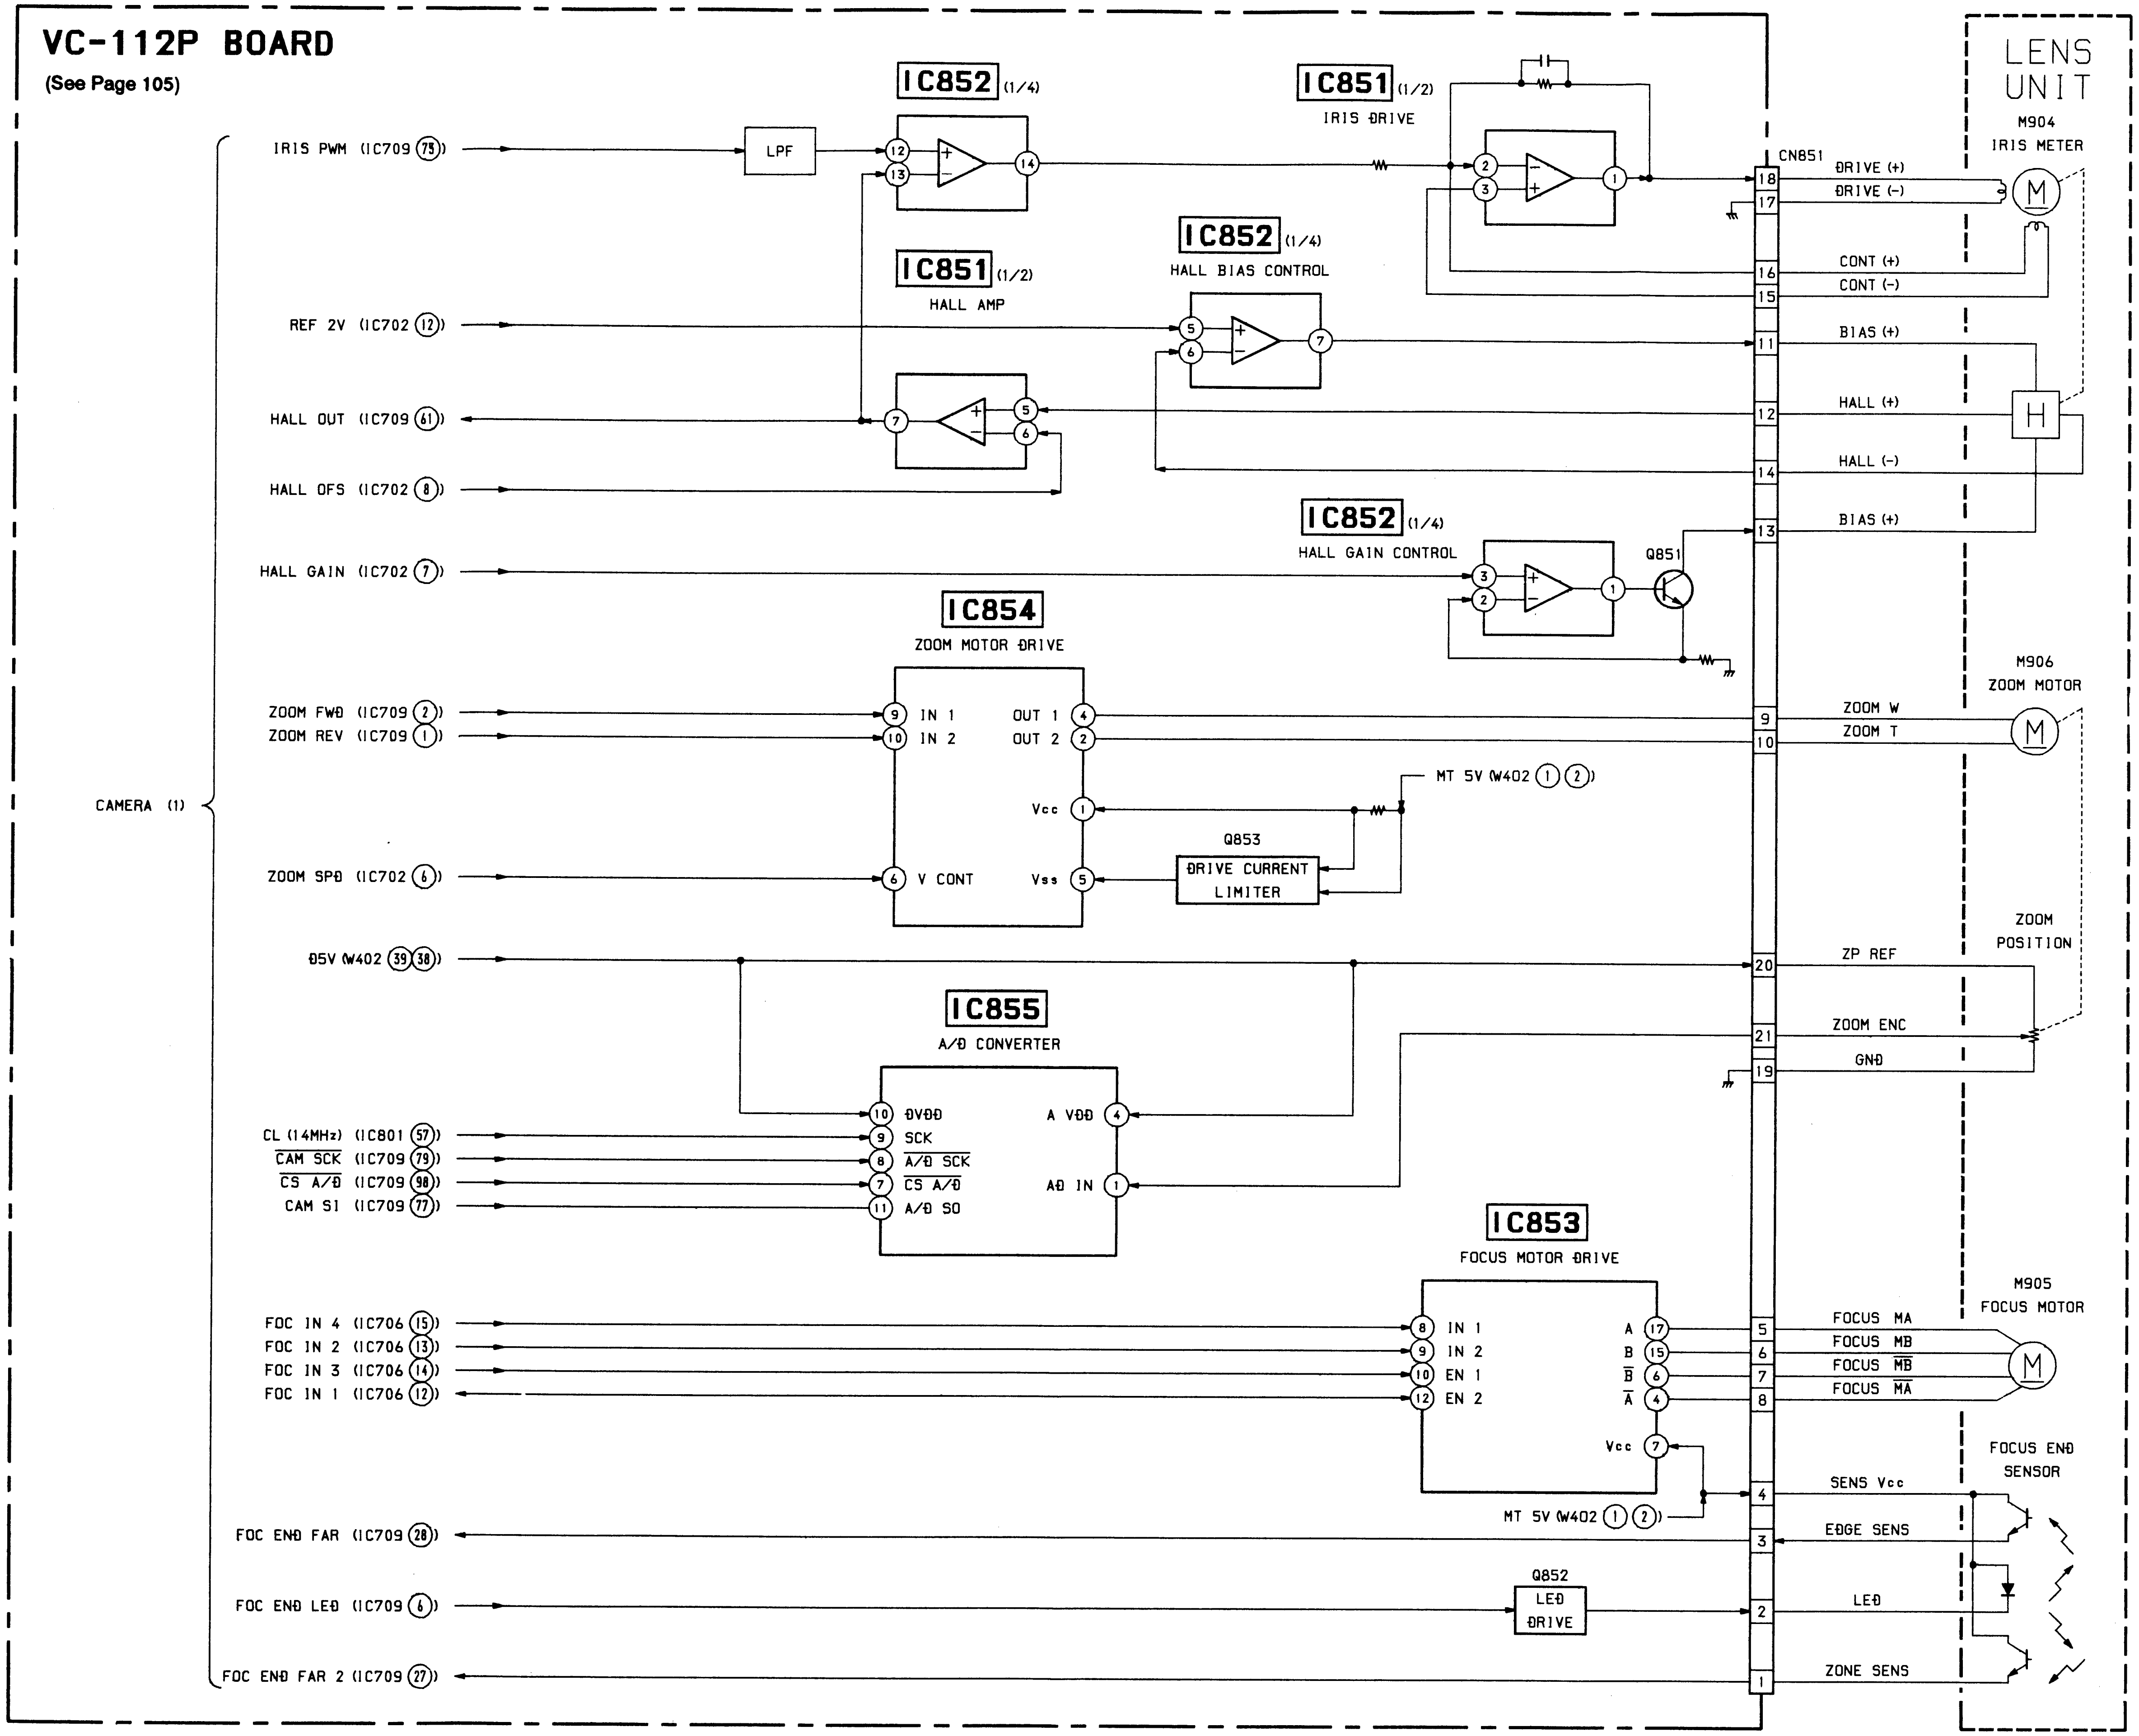

IC852 (1/4)
LPF
IC851 (1/2)
IRIS DRIVE
IC852 (1/4)
HALL BIAS CONTROL
IC851 (1/2)
HALL AMP
IC852 (1/4)
HALL GAIN CONTROL
Q851
IC854
ZOOM MOTOR DRIVE
IN 1
IN 2
OUT 1
OUT 2
Vcc
Vss
V CONT
MT 5V (W402 ① ②)
Q853
DRIVE CURRENT LIMITER
IC855
A/D CONVERTER
DVDD
SCK
A/D SCK
CS A/D
A/D SO
A VDD
AD IN
IC853
FOCUS MOTOR DRIVE
IN 1
IN 2
EN 1
EN 2
A
B
B̄
Ā
Vcc
MT 5V (W402 ① ②)
Q852
LED DRIVE
CAMERA (1)
IRIS PWM (IC709 (75))
REF 2V (IC702 ⑫)
HALL OUT (IC709 (61))
HALL OFS (IC702 ⑧)
HALL GAIN (IC702 ⑦)
ZOOM FWD (IC709 ②)
ZOOM REV (IC709 ①)
ZOOM SPD (IC702 ⑥)
D5V (W402 (39)(38))
CL (14MHz) (IC801 (57))
CAM SCK (IC709 (79))
CS A/D (IC709 (98))
CAM SI (IC709 (77))
FOC IN 4 (IC706 ⑮)
FOC IN 2 (IC706 ⑬)
FOC IN 3 (IC706 ⑭)
FOC IN 1 (IC706 ⑫)
FOC END FAR (IC709 (28))
FOC END LED (IC709 ⑥)
FOC END FAR 2 (IC709 (27))
CN851
DRIVE (+)
DRIVE (−)
CONT (+)
CONT (−)
BIAS (+)
HALL (+)
HALL (−)
BIAS (+)
ZOOM W
ZOOM T
ZP REF
ZOOM ENC
GND
FOCUS MA
FOCUS MB
FOCUS M̄B̄
FOCUS M̄Ā
SENS Vcc
EDGE SENS
LED
ZONE SENS
LENS UNIT
M904
IRIS METER
M
H
M906
ZOOM MOTOR
M
ZOOM POSITION
M905
FOCUS MOTOR
M
FOCUS END SENSOR

3-6. VIDEO (1) BLOCK DIAGRAM

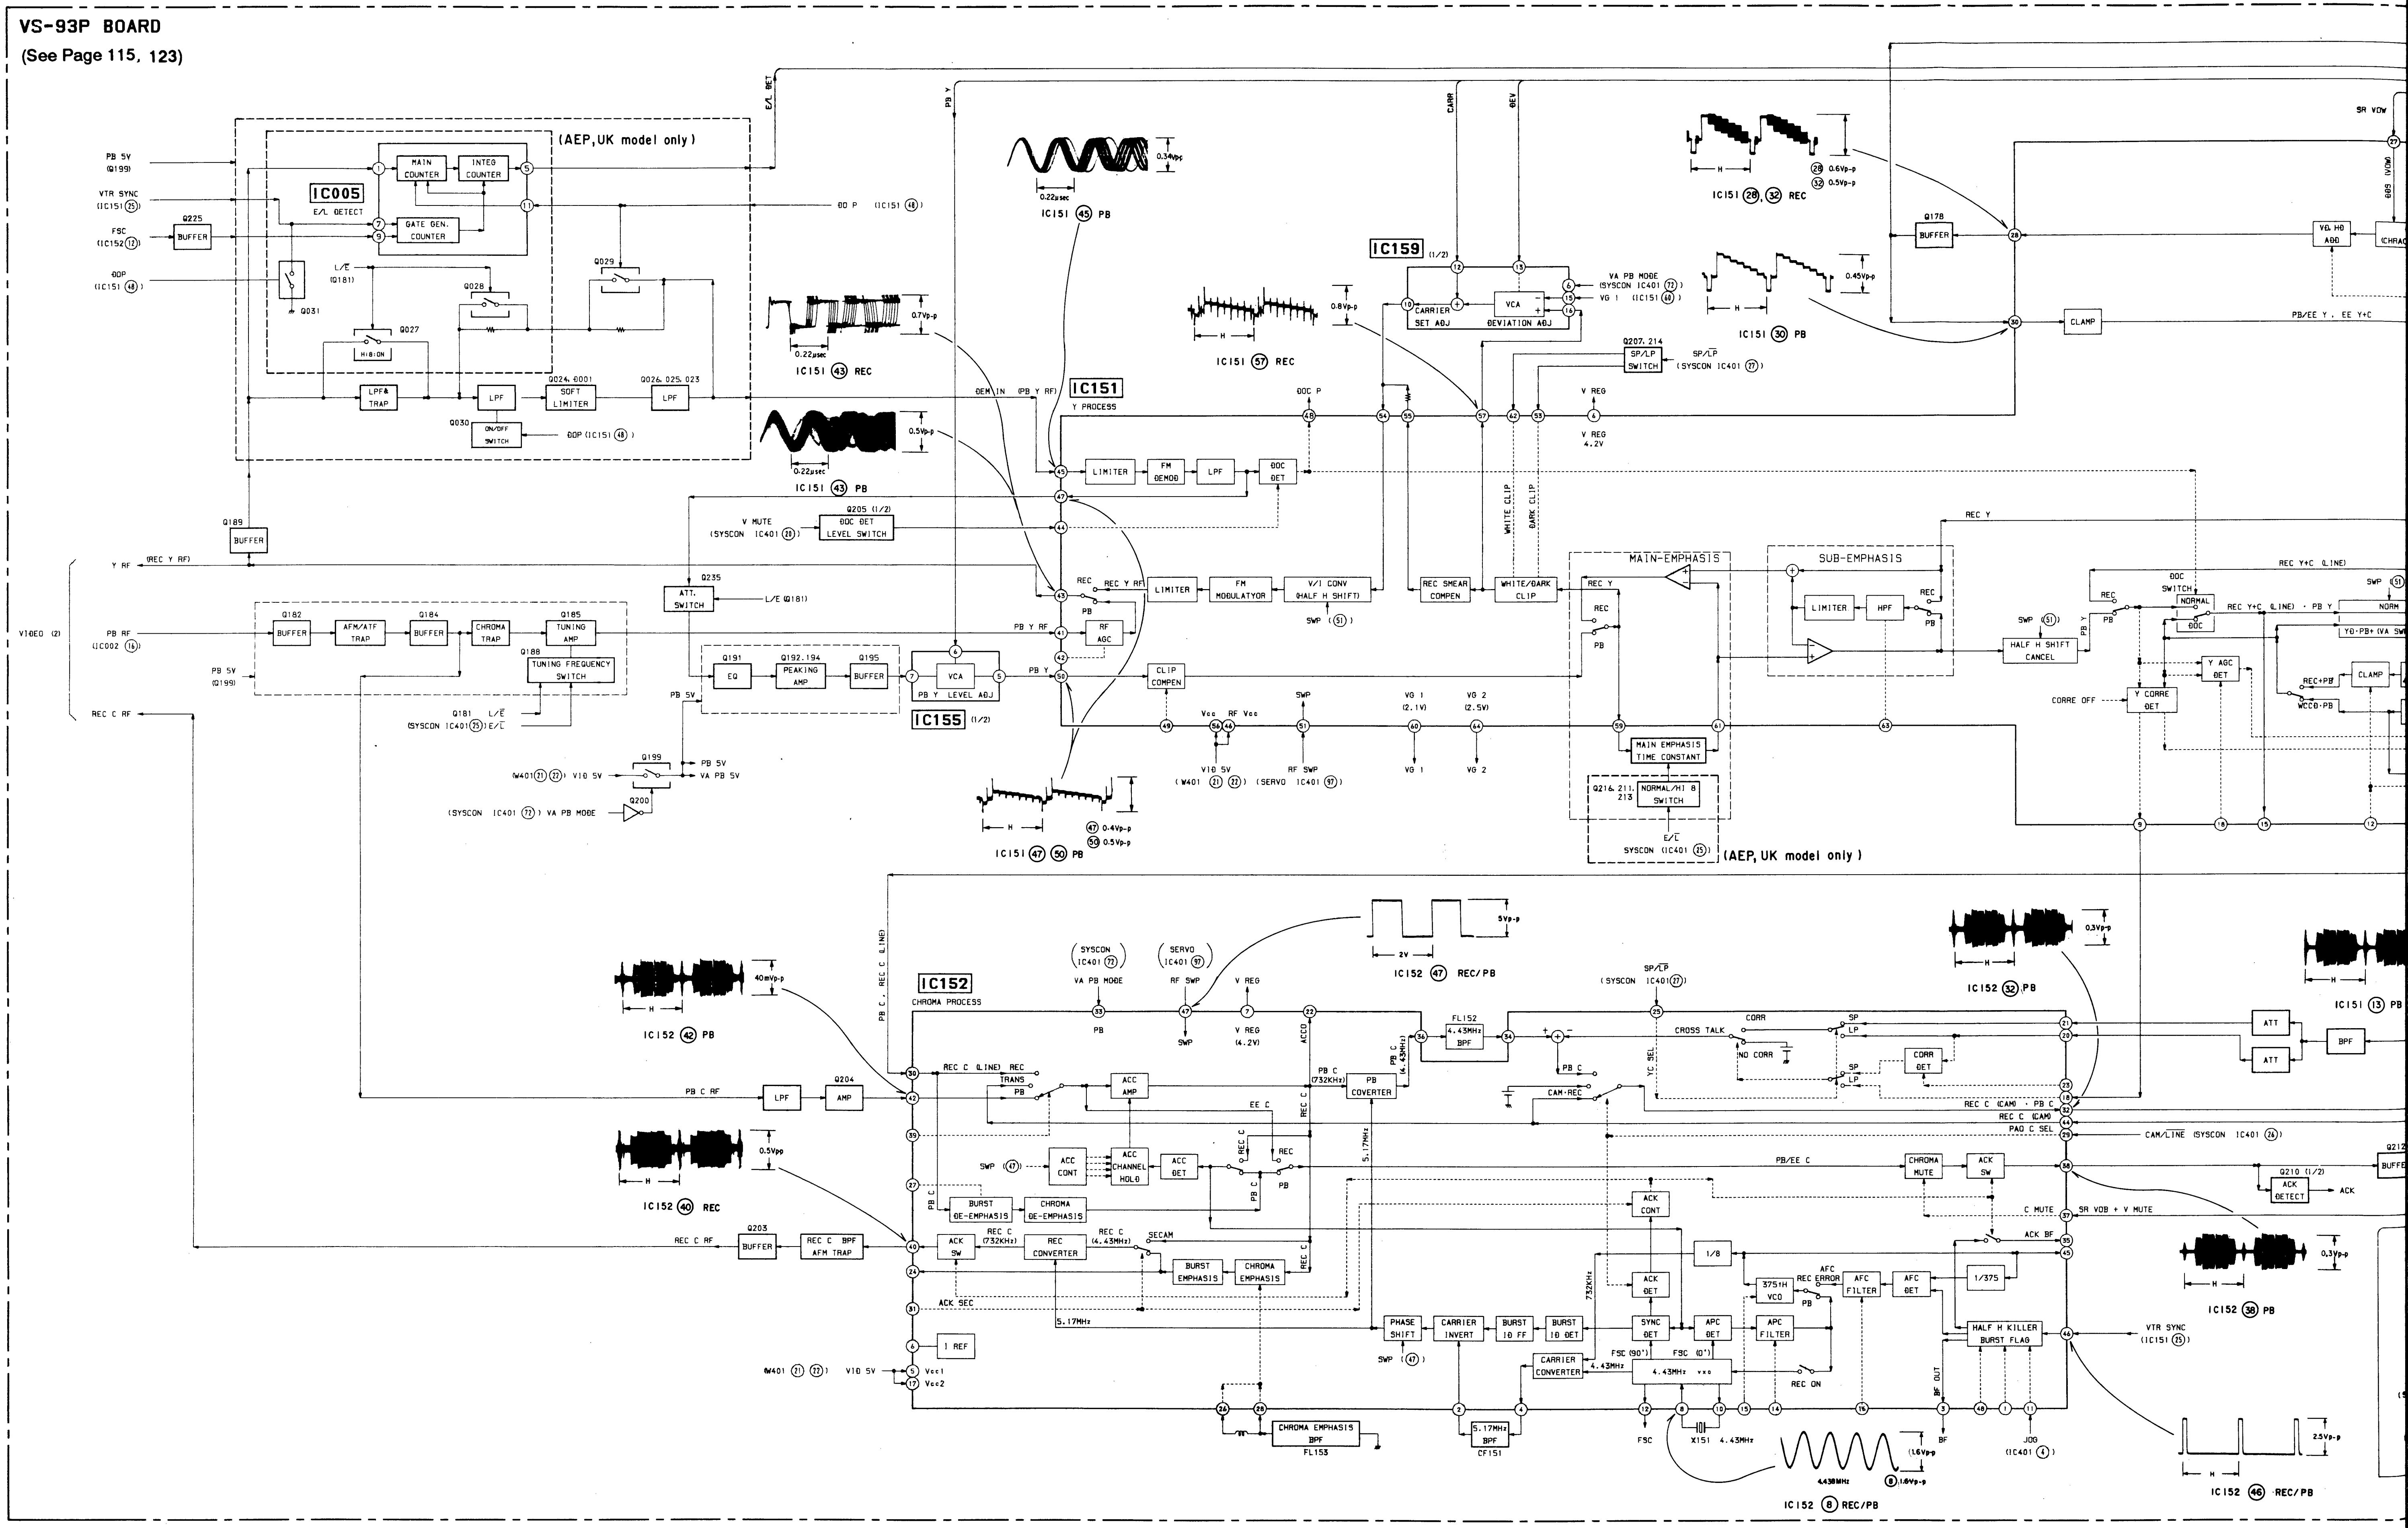
VS-93P BOARD
(See Page 115, 123)
(AEP, UK model only)
IC005
E/L DETECT
MAIN COUNTER
INTEG COUNTER
GATE GEN. COUNTER
PB 5V (Q199)
VTR SYNC (IC151 (35))
FSC (IC152 (12))
DDP (IC151 (48))
Q225
BUFFER
Q031
L/E (Q181)
Q028
Q027
Q029
H:8:ON
LPF& TRAP
LPF
SOFT LIMITER
Q024, Q001
Q026, 025, 023
Q030
ON/OFF SWITCH
DDP (IC151 (48))
DD P (IC151 (48))
E/L DET
PB Y
Q189
BUFFER
Y RF
(REC Y RF)
VIDEO (2)
PB RF (IC002 (16))
PB 5V (Q199)
REC C RF
Q182
BUFFER
AFM/ATF TRAP
Q184
BUFFER
CHROMA TRAP
Q185
TUNING AMP
Q188
TUNING FREQUENCY SWITCH
Q181 L/E
(SYSCON IC401 (25)) E/L
IC151 (45) PB
0.22μsec
0.34Vp-p
IC151 (43) REC
0.7Vp-p
IC151 (43) PB
0.5Vp-p
IC151
Y PROCESS
DEM IN (PB Y RF)
V MUTE (SYSCON IC401 (28))
Q205 (1/2)
DOC DET LEVEL SWITCH
Q235
ATT. SWITCH
L/E (Q181)
Q191
EQ
Q192, 194
PEAKING AMP
Q195
BUFFER
VCA
PB Y LEVEL ADJ
IC155 (1/2)
PB 5V
Q199
PB 5V
VA PB 5V
(M401 (21) (22)) VIO 5V
Q200
(SYSCON IC401 (72)) VA PB MODE
IC151 (47) (50) PB
(47) 0.4Vp-p
(50) 0.5Vp-p
LIMITER
FM DEMOD
LPF
DOC DET
REC Y RF
PB Y RF
RF AGC
PB Y
LIMITER
FM MODULATOR
V/I CONV (HALF H SHIFT)
SWP (51)
CLIP COMPEN
Vcc RF Vcc
VIO 5V (M401 (21) (22))
SWP
RF SWP (SERVO IC401 (97))
VG 1 (2.1V)
VG 2 (2.5V)
DOC P
V REG
V REG 4.2V
IC159 (1/2)
CARRIER SET ADJ
VCA
DEVIATION ADJ
CARR
DEV
VA PB MODE (SYSCON IC401 (72))
VG 1 (IC151 (60))
Q207, 214
SP/LP SWITCH
SP/LP (SYSCON IC401 (77))
IC151 (57) REC
0.8Vp-p
REC SMEAR COMPEN
WHITE/DARK CLIP
WHITE CLIP
DARK CLIP
MAIN-EMPHASIS
MAIN EMPHASIS TIME CONSTANT
Q216, 211, 213
NORMAL/HI 8 SWITCH
E/L SYSCON (IC401 (25))
(AEP, UK model only)
SUB-EMPHASIS
LIMITER
HPF
REC Y
IC151 (28),(32) REC
(28) 0.6Vp-p
(32) 0.5Vp-p
IC151 (30) PB
0.45Vp-p
Q178
BUFFER
CLAMP
SR VDW
VG HO ADD
PB/EE Y, EE Y+C
REC Y+C (LINE)
DOC SWITCH
NORMAL
DOC
REC Y+C (LINE) - PB Y
HALF H SHIFT CANCEL
SWP (51)
Y CORRE DET
CORRE OFF
Y AGC DET
REC+PB
CLAMP
IC152
CHROMA PROCESS
PB C, REC C (LINE)
(SYSCON IC401 (72))
VA PB MODE
(SERVO IC401 (97))
RF SWP
V REG (4.2V)
IC152 (42) PB
40mVp-p
IC152 (40) REC
0.5Vpp
REC C (LINE) REC
TRANS
ACC AMP
ACC CONT
ACC CHANNEL HOLD
ACC DET
BURST DE-EMPHASIS
CHROMA DE-EMPHASIS
ACK SW
REC CONVERTER
BURST EMPHASIS
CHROMA EMPHASIS
ACK SEC
I REF
(M401 (21) (22)) VIO 5V
Vcc1
Vcc2
PB C RF
LPF
Q204
AMP
Q203
BUFFER
REC C BPF AFM TRAP
EE C
PB C (732KHz)
PB COVERTER
5.17MHz
732KHz
FL152 4.43MHz BPF
IC152 (47) REC/PB
5Vp-p
2V
SP/LP (SYSCON IC401 (77))
CROSS TALK
CORR
NO CORR
CORR DET
YC SEL
CAM-REC
REC C (CAM) - PB C
REC C (CAM)
PAD C SEL
CAM/LINE (SYSCON IC401 (26))
PB/EE C
CHROMA MUTE
ACK SW
ACK CONT
C MUTE
SR VDB + V MUTE
ACK BF
1/8
ACK DET
3751H VCO
AFC ERROR
AFC FILTER
AFC DET
1/375
PHASE SHIFT
CARRIER INVERT
BURST 10 FF
BURST 10 DET
SYNC DET
APC DET
APC FILTER
CARRIER CONVERTER
4.43MHz VXO
FSC (90°)
FSC (0°)
REC ON
HALF H KILLER BURST FLAG
VTR SYNC (IC151 (35))
CHROMA EMPHASIS BPF FL153
5.17MHz BPF CF151
X151 4.43MHz
FSC
BF
JOG (IC401 (4))
IC152 (8) REC/PB
1.6Vp-p
4.43MHz
IC152 (32) PB
0.3Vp-p
IC151 (13) PB
ATT
BPF
Q210 (1/2)
ACK DETECT
ACK
BUFFER
IC152 (38) PB
0.3Vp-p
IC152 (46) REC/PB
2.5Vp-p

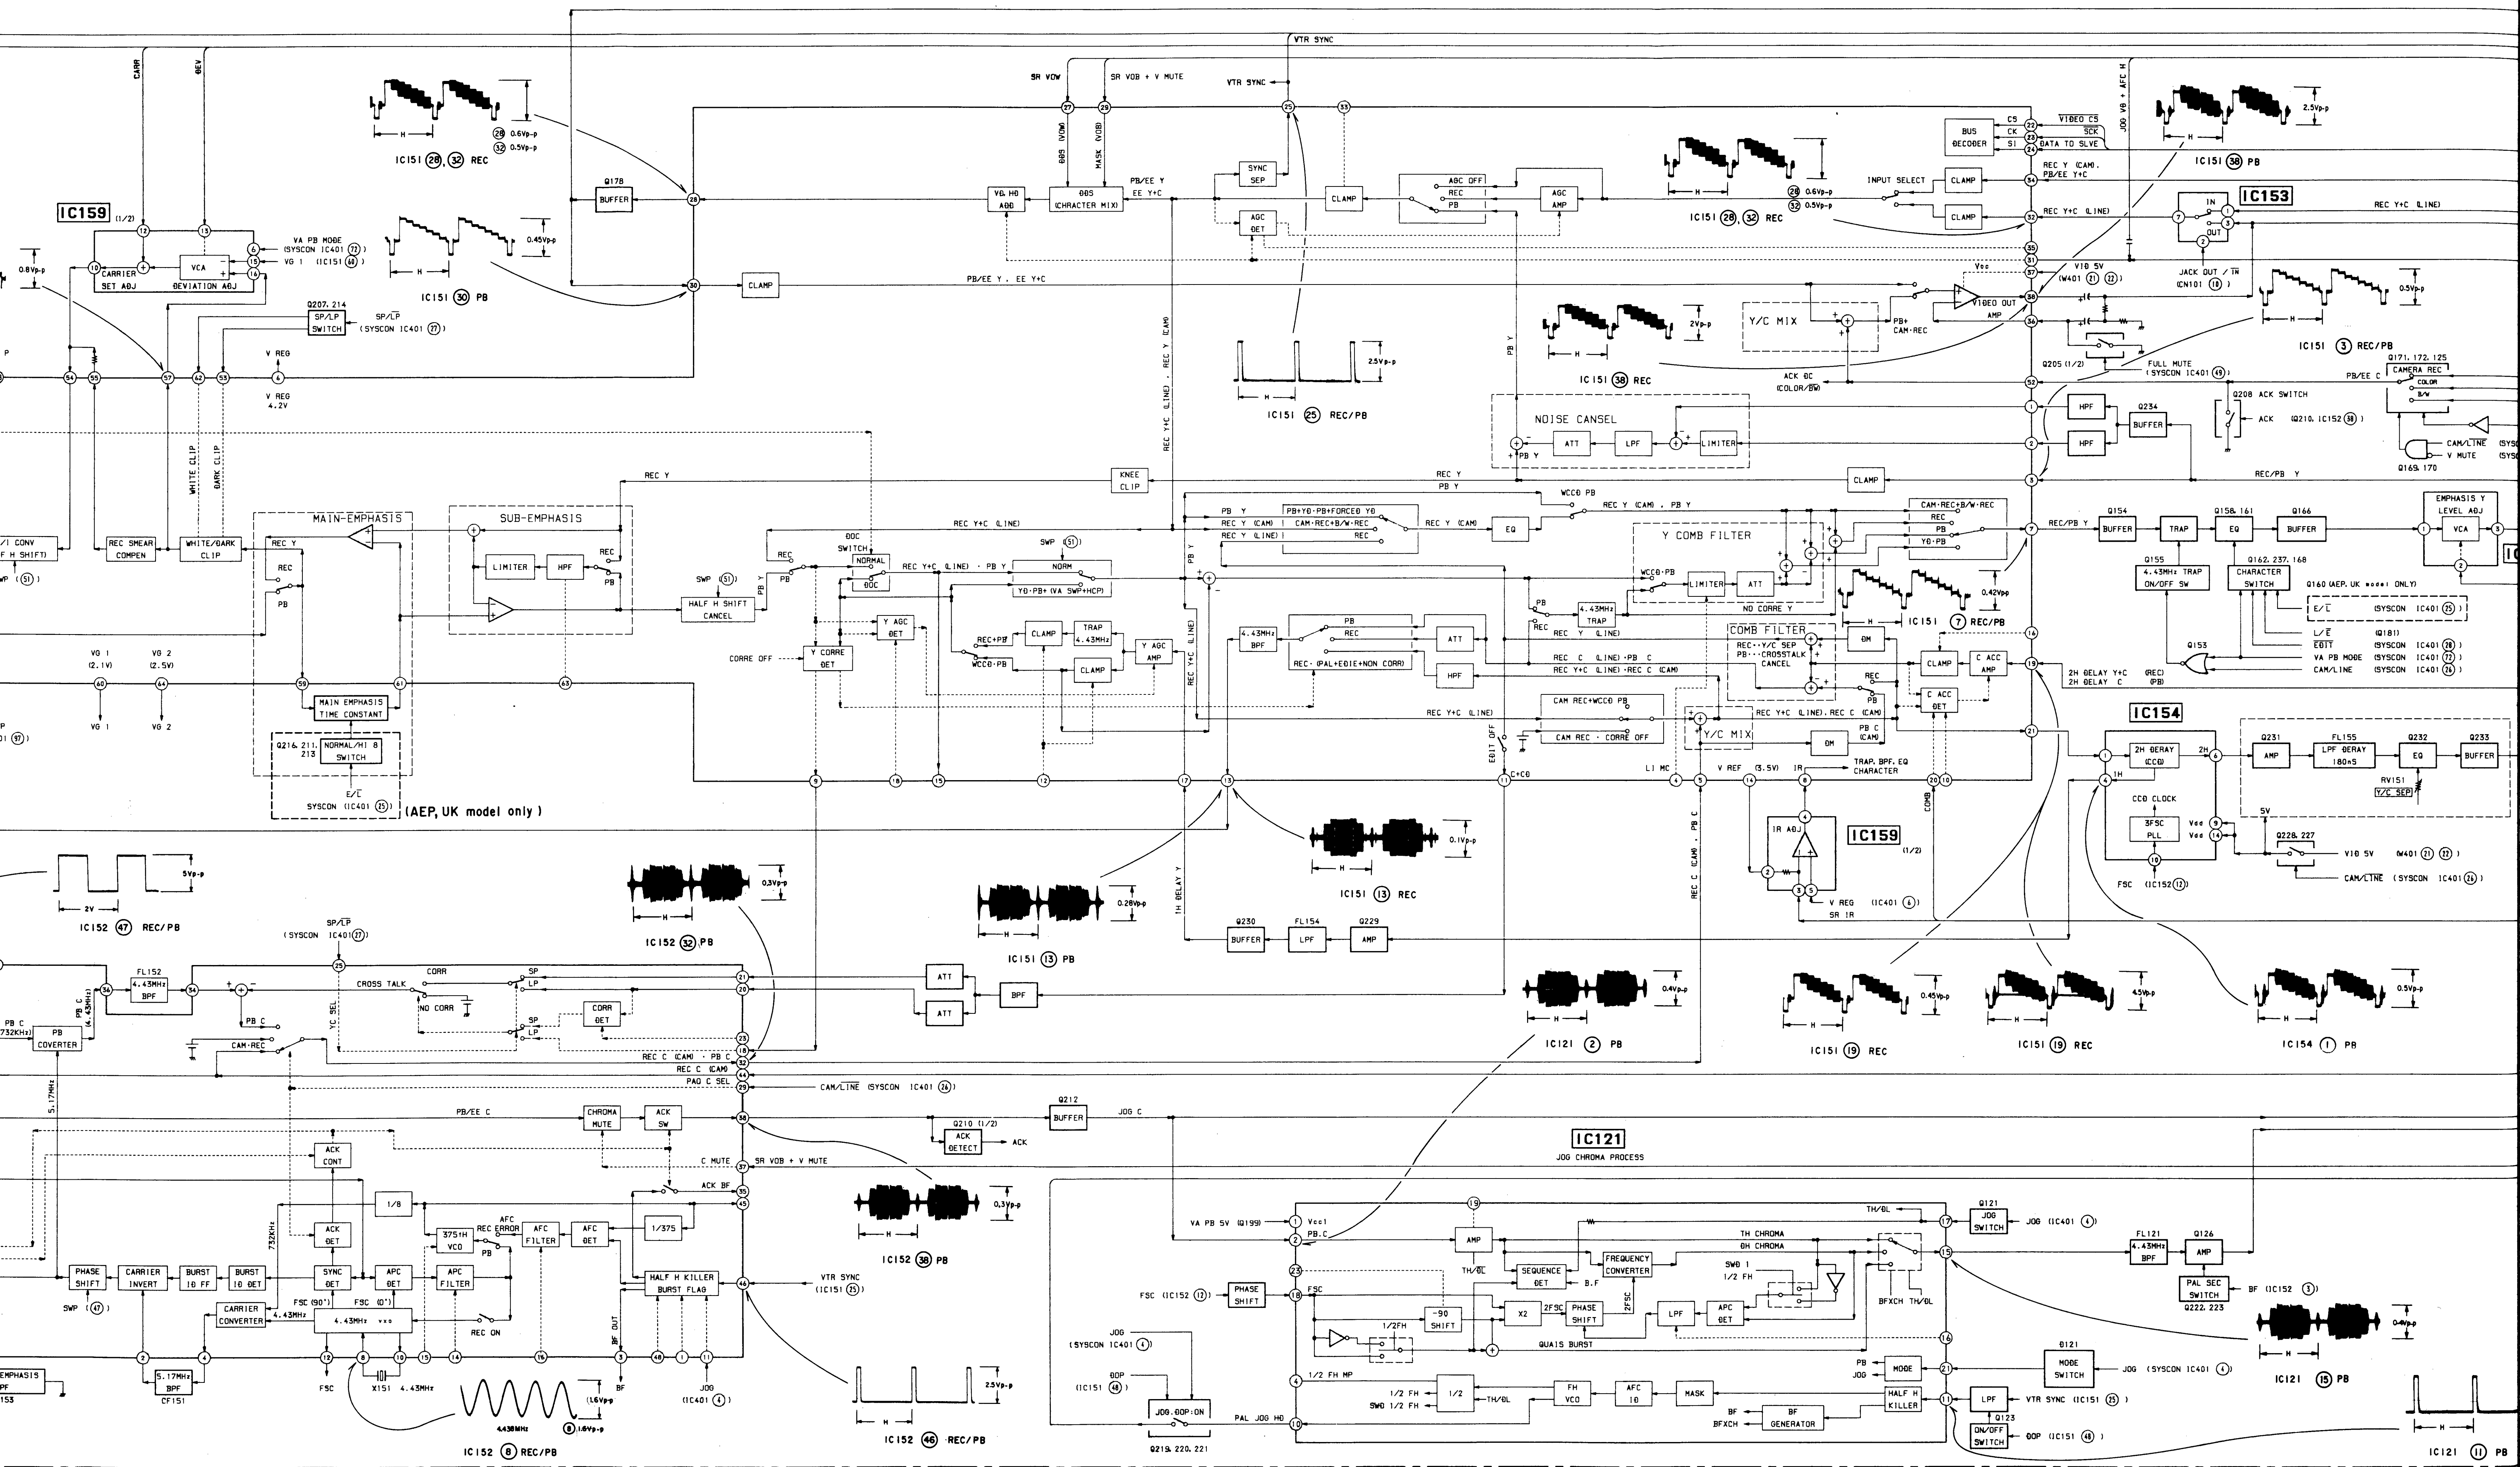
IC159 (1/2)
CARRIER SET ADJ
VCA
DEVIATION ADJ
VA PB MODE (SYSCON IC401 (72))
VD 1 (IC151 (44))
Q207, 214 SP/LP SWITCH
SP/LP (SYSCON IC401 (27))
V REG
V REG 4.2V
IC151 (28), (32) REC
(28) 0.6Vp-p
(32) 0.5Vp-p
IC151 (30) PB
0.45Vp-p
Q178 BUFFER
CLAMP
PB/EE Y , EE Y+C
SR VDW
SR VDB + V MUTE
VTR SYNC
VD HD ADD
DDS (CHRACTER MIX)
PB/EE Y EE Y+C
SYNC SEP
AGC DET
AGC AMP
AGC OFF
REC
PB
IC151 (25) REC/PB
2.5Vp-p
BUS DECODER
CS CK SI
VIDEO CS
SCK
DATA TO SLVE
INPUT SELECT
REC Y (CAM), PB/EE Y+C
REC Y+C (LINE)
IC153
IN OUT
JACK OUT / IN (CN101 (18))
IC151 (38) PB
IC151 (38) REC
Y/C MIX
VIDEO OUT AMP
VIO 5V (W401 (21) (22))
Q205 (1/2)
FULL MUTE (SYSCON IC401 (49))
ACK DC (COLOR/BW)
IC151 (3) REC/PB
Q171, 172, 125 CAMERA REC
COLOR B/W
NOISE CANSEL
ATT LPF LIMITER
HPF
Q234 BUFFER
Q208 ACK SWITCH
CAM/LINE
V MUTE
Q169, 170
REC SMEAR COMPEN
WHITE/DARK CLIP
WHITE CLIP
DARK CLIP
MAIN-EMPHASIS
SUB-EMPHASIS
LIMITER HPF
MAIN EMPHASIS TIME CONSTANT
Q214, 211, 213 NORMAL/HI 8 SWITCH
E/L SYSCON (IC401 (25))
(AEP, UK model only)
KNEE CLIP
REC Y
DOC SWITCH
NORMAL DOC
HALF H SHIFT CANCEL
SWP (51)
NORM
YD-PB+ (VA SWP+HCP)
Y AGC DET
Y CORRE DET
CORRE OFF
REC+PB
WCCD-PB
CLAMP
TRAP 4.43MHz
Y AGC AMP
PB+YD-PB+FORCED YD
CAM-REC+B/W-REC
EQ
WCCD PB
Y COMB FILTER
LIMITER ATT
4.43MHz TRAP
COMB FILTER
REC···Y/C SEP PB···CROSSTALK CANCEL
NO CORRE Y
IC151 (7) REC/PB
0.42Vpp
DM
4.43MHz BPF
REC · (PAL+EDIE+NON CORR)
ATT
HPF
CAM REC+WCCD PB
CAM REC · CORRE OFF
Y/C MIX
C ACC AMP
C ACC DET
2H DELAY Y+C (REC)
2H DELAY C (PB)
TRAP, BPF, EQ CHARACTER
IR ADJ
IC159 (1/2)
V REG (IC401 (4))
SR IR
Q154 BUFFER
TRAP
Q158, 161 EQ
Q166 BUFFER
EMPHASIS Y LEVEL ADJ
VCA
Q155 4.43MHz TRAP ON/OFF SW
Q162, 237, 168 CHARACTER SWITCH
Q160 (AEP, UK model ONLY)
E/L (SYSCON IC401 (25))
Q181
EDIT (SYSCON IC401 (28))
VA PB MODE (SYSCON IC401 (72))
CAM/LINE (SYSCON IC401 (26))
IC154
2H DERAY (CCD)
CCD CLOCK
3FSC PLL
FSC (IC152 (12))
Q231 AMP
FL155 LPF DERAY 180nS
Q232 EQ
Q233 BUFFER
RV151 Y/C SEP
Q228, 227
VIO 5V (W401 (21) (22))
CAM/LINE (SYSCON IC401 (26))
IC151 (13) REC
0.1Vp-p
IC151 (13) PB
0.28Vp-p
Q230 BUFFER
FL154 LPF
Q229 AMP
IC121 (2) PB
0.4Vp-p
IC151 (19) REC
0.45Vp-p
IC151 (19) REC
4.5Vp-p
IC154 (1) PB
0.5Vp-p
IC152 (47) REC/PB
5Vp-p
IC152 (32) PB
0.3Vp-p
SP/LP (SYSCON IC401 (27))
FL152 4.43MHz BPF
CROSS TALK
CORR
NO CORR
CORR DET
YC SEL
PB C (4.43MHz)
PB COVERTER
CAM·REC
ATT
BPF
REC C (CAM) · PB C
REC C (CAM)
PAD C SEL
CAM/LINE (SYSCON IC401 (26))
PB/EE C
CHROMA MUTE
ACK SW
Q210 (1/2) ACK DETECT
ACK
Q212 BUFFER
JOG C
ACK CONT
C MUTE
SR VDB + V MUTE
ACK BF
1/8
375fH VCO
AFC ERROR
AFC FILTER
AFC DET
1/375
HALF H KILLER BURST FLAG
VTR SYNC (IC151 (25))
PHASE SHIFT
CARRIER INVERT
BURST ID FF
BURST ID DET
SYNC DET
APC DET
APC FILTER
REC ON
CARRIER CONVERTER
4.43MHz VXO
FSC (90°) FSC (0°)
5.17MHz BPF CF151
X151 4.43MHz
IC152 (8) REC/PB
(8) 1.6Vp-p
IC152 (38) PB
IC152 (46) REC/PB
2.5Vp-p
IC121
JOG CHROMA PROCESS
VA PB 5V (Q199)
Vcc1
PB.C
AMP
TH/DL
SEQUENCE DET
FREQUENCY CONVERTER
TH CHROMA
DH CHROMA
SWD 1 1/2 FH
BFXCH TH/DL
Q121 JOG SWITCH
JOG (IC401 (4))
FL121 4.43MHz BPF
Q126 AMP
PAL SEC SWITCH Q222, 223
BF (IC152 (3))
IC121 (15) PB
FSC (IC152 (12))
PHASE SHIFT
-90 SHIFT
X2
2FSC
PHASE SHIFT
LPF
APC DET
1/2FH
QUAIS BURST
JOG (SYSCON IC401 (4))
DDP (IC151 (48))
JOG.DDP:ON Q215, 220, 221
1/2 FH MP
1/2 FH
SWD 1/2 FH
1/2
FH VCO
AFC 10
MASK
BF BFXCH
BF GENERATOR
PAL JOG HD
MODE
HALF H KILLER
PB JOG
Q121 MODE SWITCH
JOG (SYSCON IC401 (4))
LPF
VTR SYNC (IC151 (25))
Q123 ON/OFF SWITCH
DDP (IC151 (48))
IC121 (11) PB

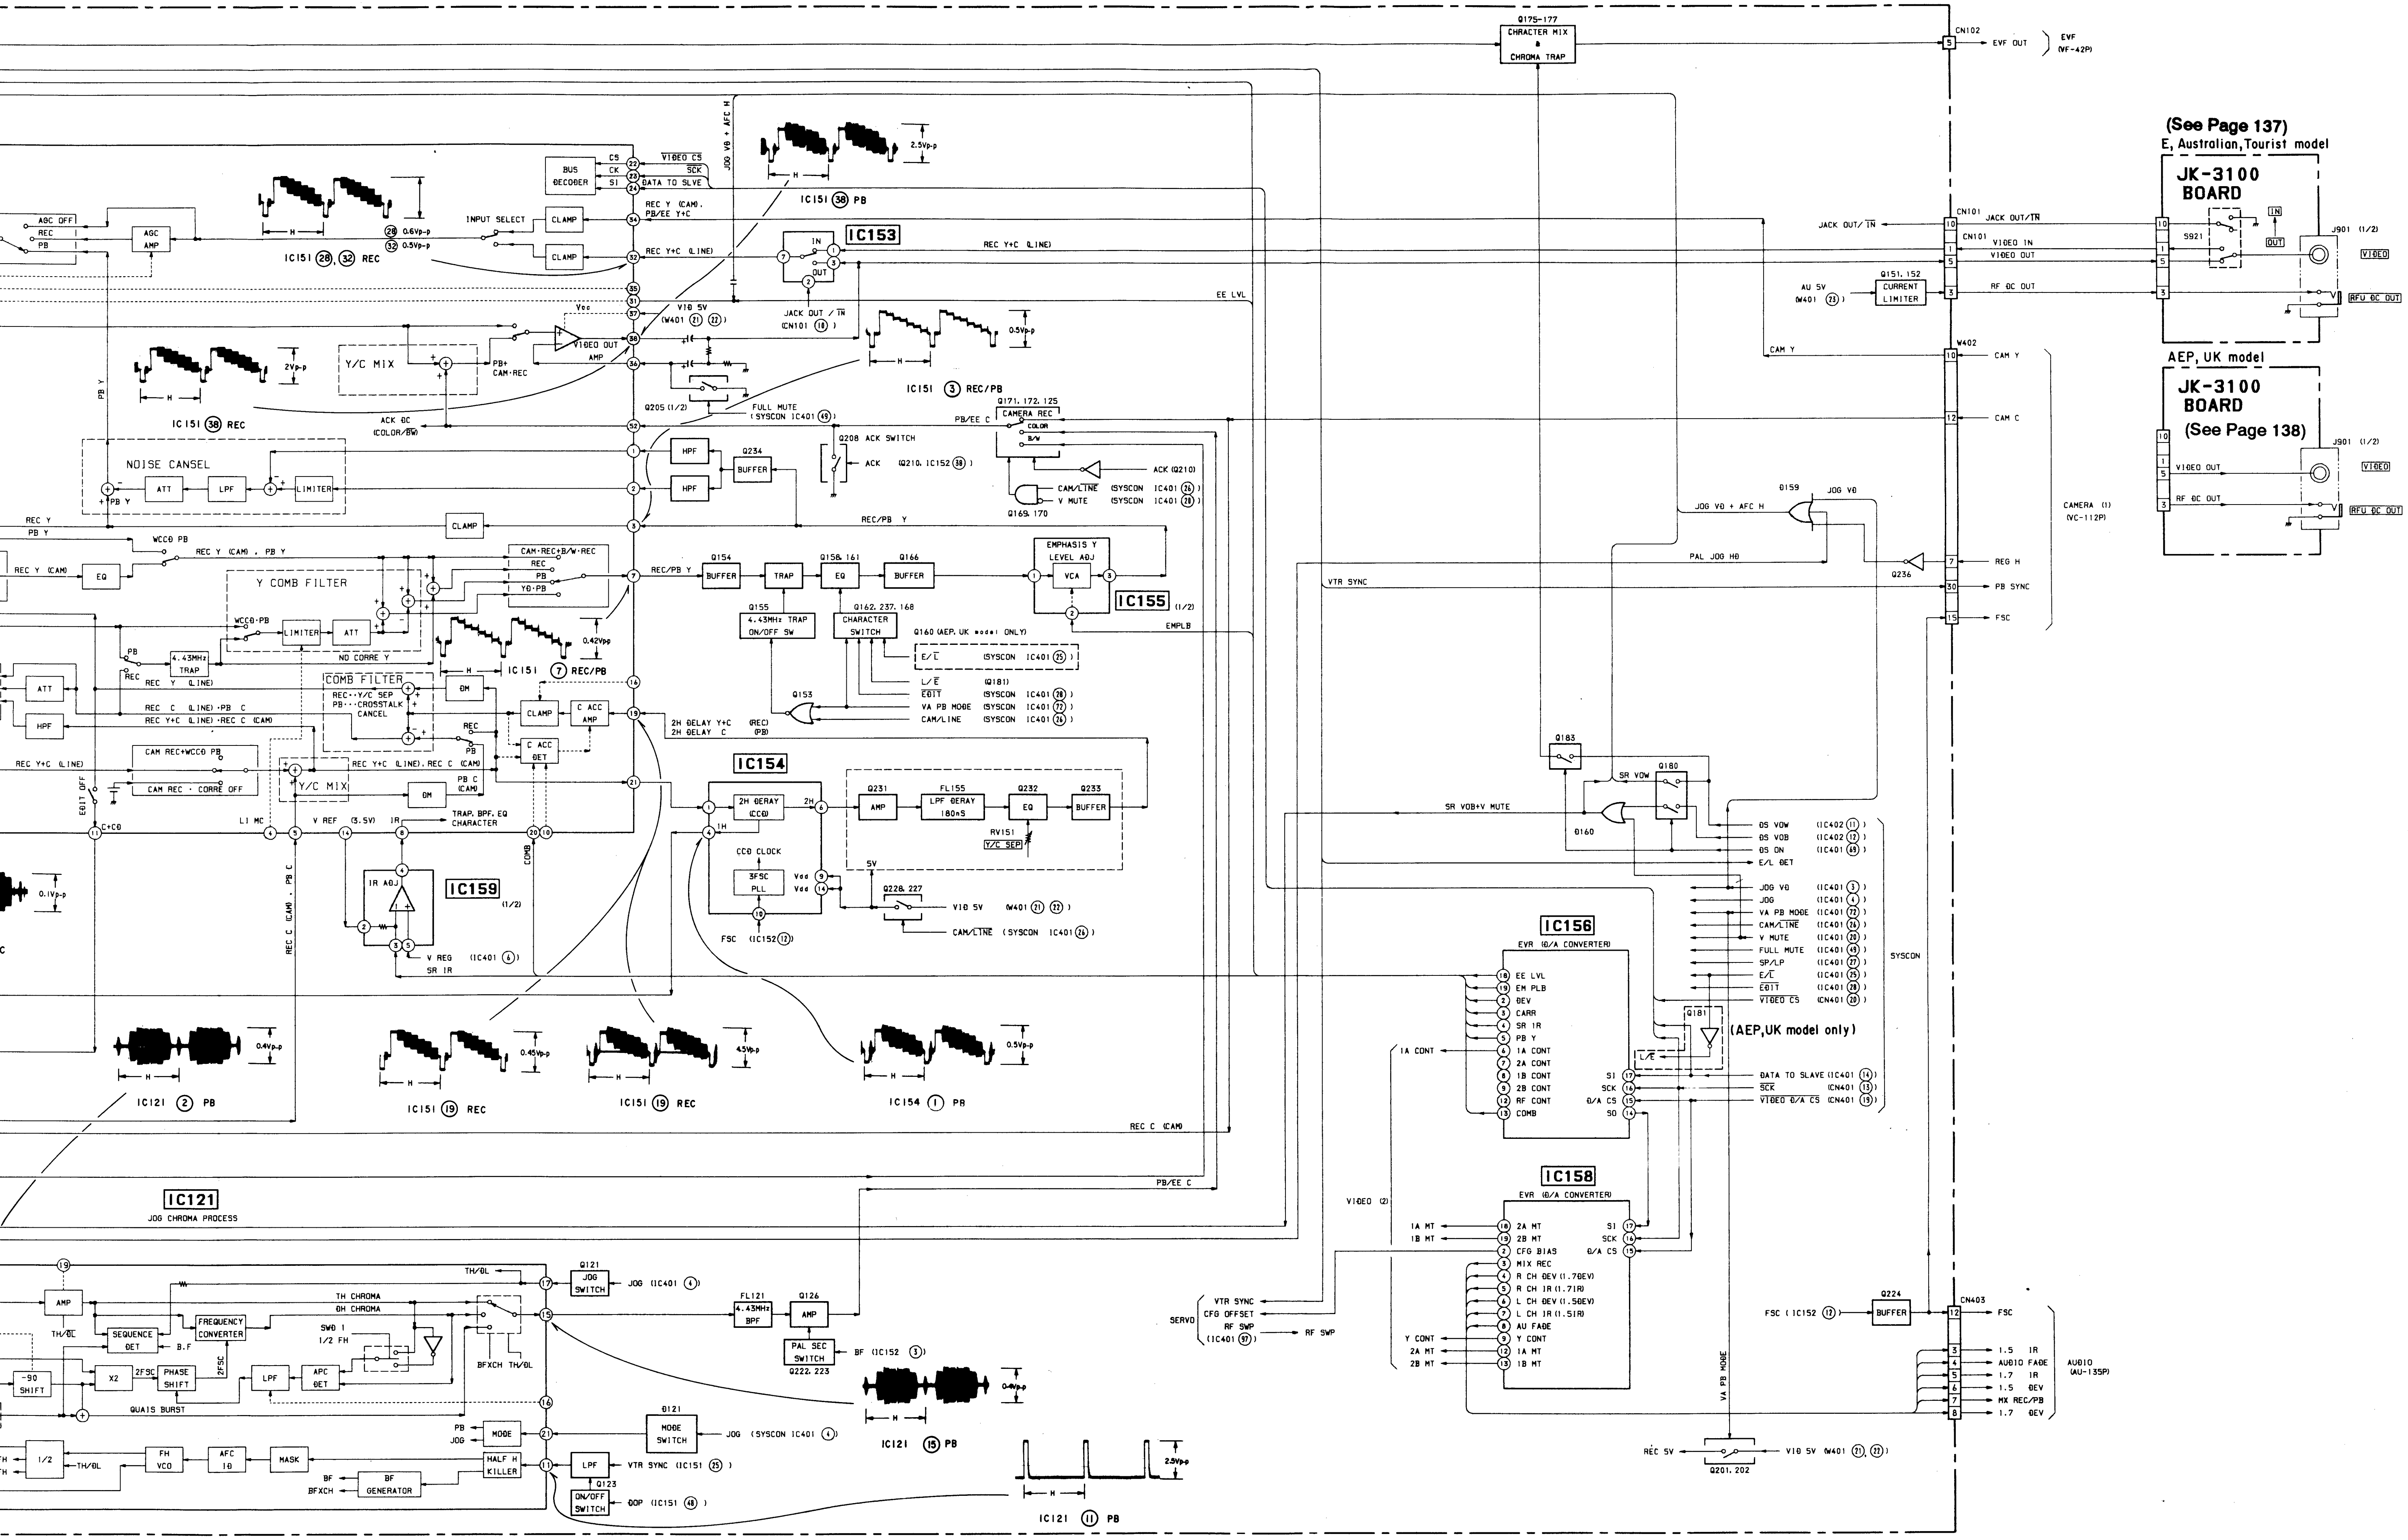
Q175-177
CHRACTER MIX & CHROMA TRAP
CN102
EVF OUT
EVF (VF-42P)
(See Page 137)
E, Australian,Tourist model
JK-3100 BOARD
JACK OUT/IN
CN101
VIDEO IN
VIDEO OUT
RF DC OUT
S921
J901 (1/2)
VIDEO
RFU DC OUT
AEP, UK model
JK-3100 BOARD
(See Page 138)
Q151, 152
CURRENT LIMITER
AU 5V
M402
CAM Y
CAM C
CAMERA (1) (VC-112P)
REG H
PB SYNC
FSC
BUS DECODER
CS
CK
SI
VIDEO CS
SCK
DATA TO SLVE
INPUT SELECT
CLAMP
AGC AMP
AGC OFF
REC
PB
IC151 ㉘, ㉜ REC
IC151 ㊳ PB
IC153
IN
OUT
JACK OUT / IN (CN101 ⑩)
REC Y+C (LINE)
EE LVL
V10 5V
VIDEO OUT AMP
Y/C MIX
PB+ CAM-REC
IC151 ③ REC/PB
IC151 ㊳ REC
Q205 (1/2)
FULL MUTE (SYSCON IC401 ㊾)
ACK DC (COLOR/BW)
Q171, 172, 125
CAMERA REC
COLOR
B/W
NOISE CANSEL
ATT
LPF
LIMITER
HPF
Q234
BUFFER
Q208 ACK SWITCH
ACK
CAM/LINE
V MUTE
Q169, 170
REC/PB Y
CLAMP
WCCO PB
REC Y (CAM) . PB Y
EQ
Y COMB FILTER
NO CORRE Y
CAM-REC+B/W-REC
YO-PB
Q154
BUFFER
TRAP
Q158, 161
EQ
Q166
BUFFER
EMPHASIS Y LEVEL ADJ
VCA
IC155 (1/2)
EMPLB
Q155
4.43MHz TRAP ON/OFF SW
Q162, 237, 168
CHARACTER SWITCH
Q160 (AEP, UK model ONLY)
E/L (SYSCON IC401 ㉕)
L/E (Q181)
EDIT (SYSCON IC401 ㉘)
VA PB MODE (SYSCON IC401 ㉒)
CAM/LINE (SYSCON IC401 ㉖)
Q153
4.43MHz TRAP
COMB FILTER
REC··Y/C SEP
PB···CROSSTALK CANCEL
DM
CLAMP
C ACC AMP
C ACC DET
IC151 ⑦ REC/PB
2H DELAY Y+C (REC)
2H DELAY C (PB)
IC154
2H DELAY (CCD)
CCD CLOCK
3FSC PLL
FSC (IC152 ⑫)
Q231 AMP
FL155 LPF DELAY 180nS
Q232 EQ
Q233 BUFFER
RV151 Y/C SEP
Q228, 227
V10 5V (M401 ㉑ ㉒)
CAM/LINE (SYSCON IC401 ㉖)
IR ADJ
IC159 (1/2)
V REG (IC401 ④)
SR IR
TRAP, BPF, EQ CHARACTER
V REF (3.5V)
L1 MC
C+C0
EDIT OFF
CAM REC+WCCO PB
CAM REC · CORRE OFF
Y/C MIX
REC Y+C (LINE), REC C (CAM)
PB C (CAM)
REC C (CAM) . PB C
COMB
IC121 ② PB
IC151 ⑲ REC
IC151 ⑲ REC
IC154 ① PB
REC C (CAM)
PB/EE C
IC121
JOG CHROMA PROCESS
Q159 JOG VD
JOG VD + AFC H
PAL JOG HD
Q236
VTR SYNC
Q183
SR VDW
Q180
Q160
SR VDB+V MUTE
DS VDW (IC402 ⑪)
DS VDB (IC402 ⑫)
DS ON (IC401 ㊸)
E/L DET
JOG VD (IC401 ③)
JOG (IC401 ④)
VA PB MODE (IC401 ㉒)
CAM/LINE (IC401 ㉖)
V MUTE (IC401 ⑳)
FULL MUTE (IC401 ㊾)
SP/LP (IC401 ㉗)
E/L (IC401 ㉕)
EDIT (IC401 ㉘)
VIDEO CS (CN401 ⑳)
SYSCON
IC156
EVR (D/A CONVERTER)
EE LVL
EM PLB
DEV
CARR
SR IR
PB Y
1A CONT
2A CONT
1B CONT
2B CONT
RF CONT
COMB
SI
SCK
D/A CS
SO
Q181
(AEP,UK model only)
DATA TO SLAVE (IC401 ⑭)
SCK (CN401 ⑬)
VIDEO D/A CS (CN401 ⑮)
IC158
EVR (D/A CONVERTER)
2A MT
2B MT
CFG BIAS
MIX REC
R CH DEV (1.7DEV)
R CH IR (1.7IR)
L CH DEV (1.5DEV)
L CH IR (1.5IR)
AU FADE
Y CONT
1A MT
1B MT
VIDEO (2)
SERVO
VTR SYNC
CFG OFFSET
RF SWP
(IC401 ㊼)
Q224 BUFFER
FSC (IC152 ⑫)
CN403
1.5 IR
AUDIO FADE
1.7 IR
1.5 DEV
MX REC/PB
1.7 DEV
AUDIO (AU-135P)
VA PB MODE
REC 5V
V10 5V (M401 ㉑, ㉒)
Q201, 202
TH/DL
AMP
SEQUENCE DET
FREQUENCY CONVERTER
TH CHROMA
DH CHROMA
SWD 1 1/2 FH
BFXCH TH/DL
X2
PHASE SHIFT
LPF
APC DET
-90 SHIFT
QUAIS BURST
1/2
FH VCO
AFC 10
MASK
BF GENERATOR
MODE
HALF H KILLER
Q121 JOG SWITCH
JOG (IC401 ④)
FL121 4.43MHz BPF
Q126 AMP
PAL SEC SWITCH
Q222, 223
BF (IC152 ③)
Q121 MODE SWITCH
JOG (SYSCON IC401 ④)
LPF
VTR SYNC (IC151 ㉕)
Q123 ON/OFF SWITCH
DOP (IC151 ㊽)
IC121 ⑮ PB
IC121 ⑪ PB
2.5Vp-p
0.6Vp-p
0.5Vp-p
2Vp-p
0.42Vp-p
0.1Vp-p
0.4Vp-p
0.45Vp-p
4.5Vp-p
H

3-7. VIDEO (2) BLOCK DIAGRAM

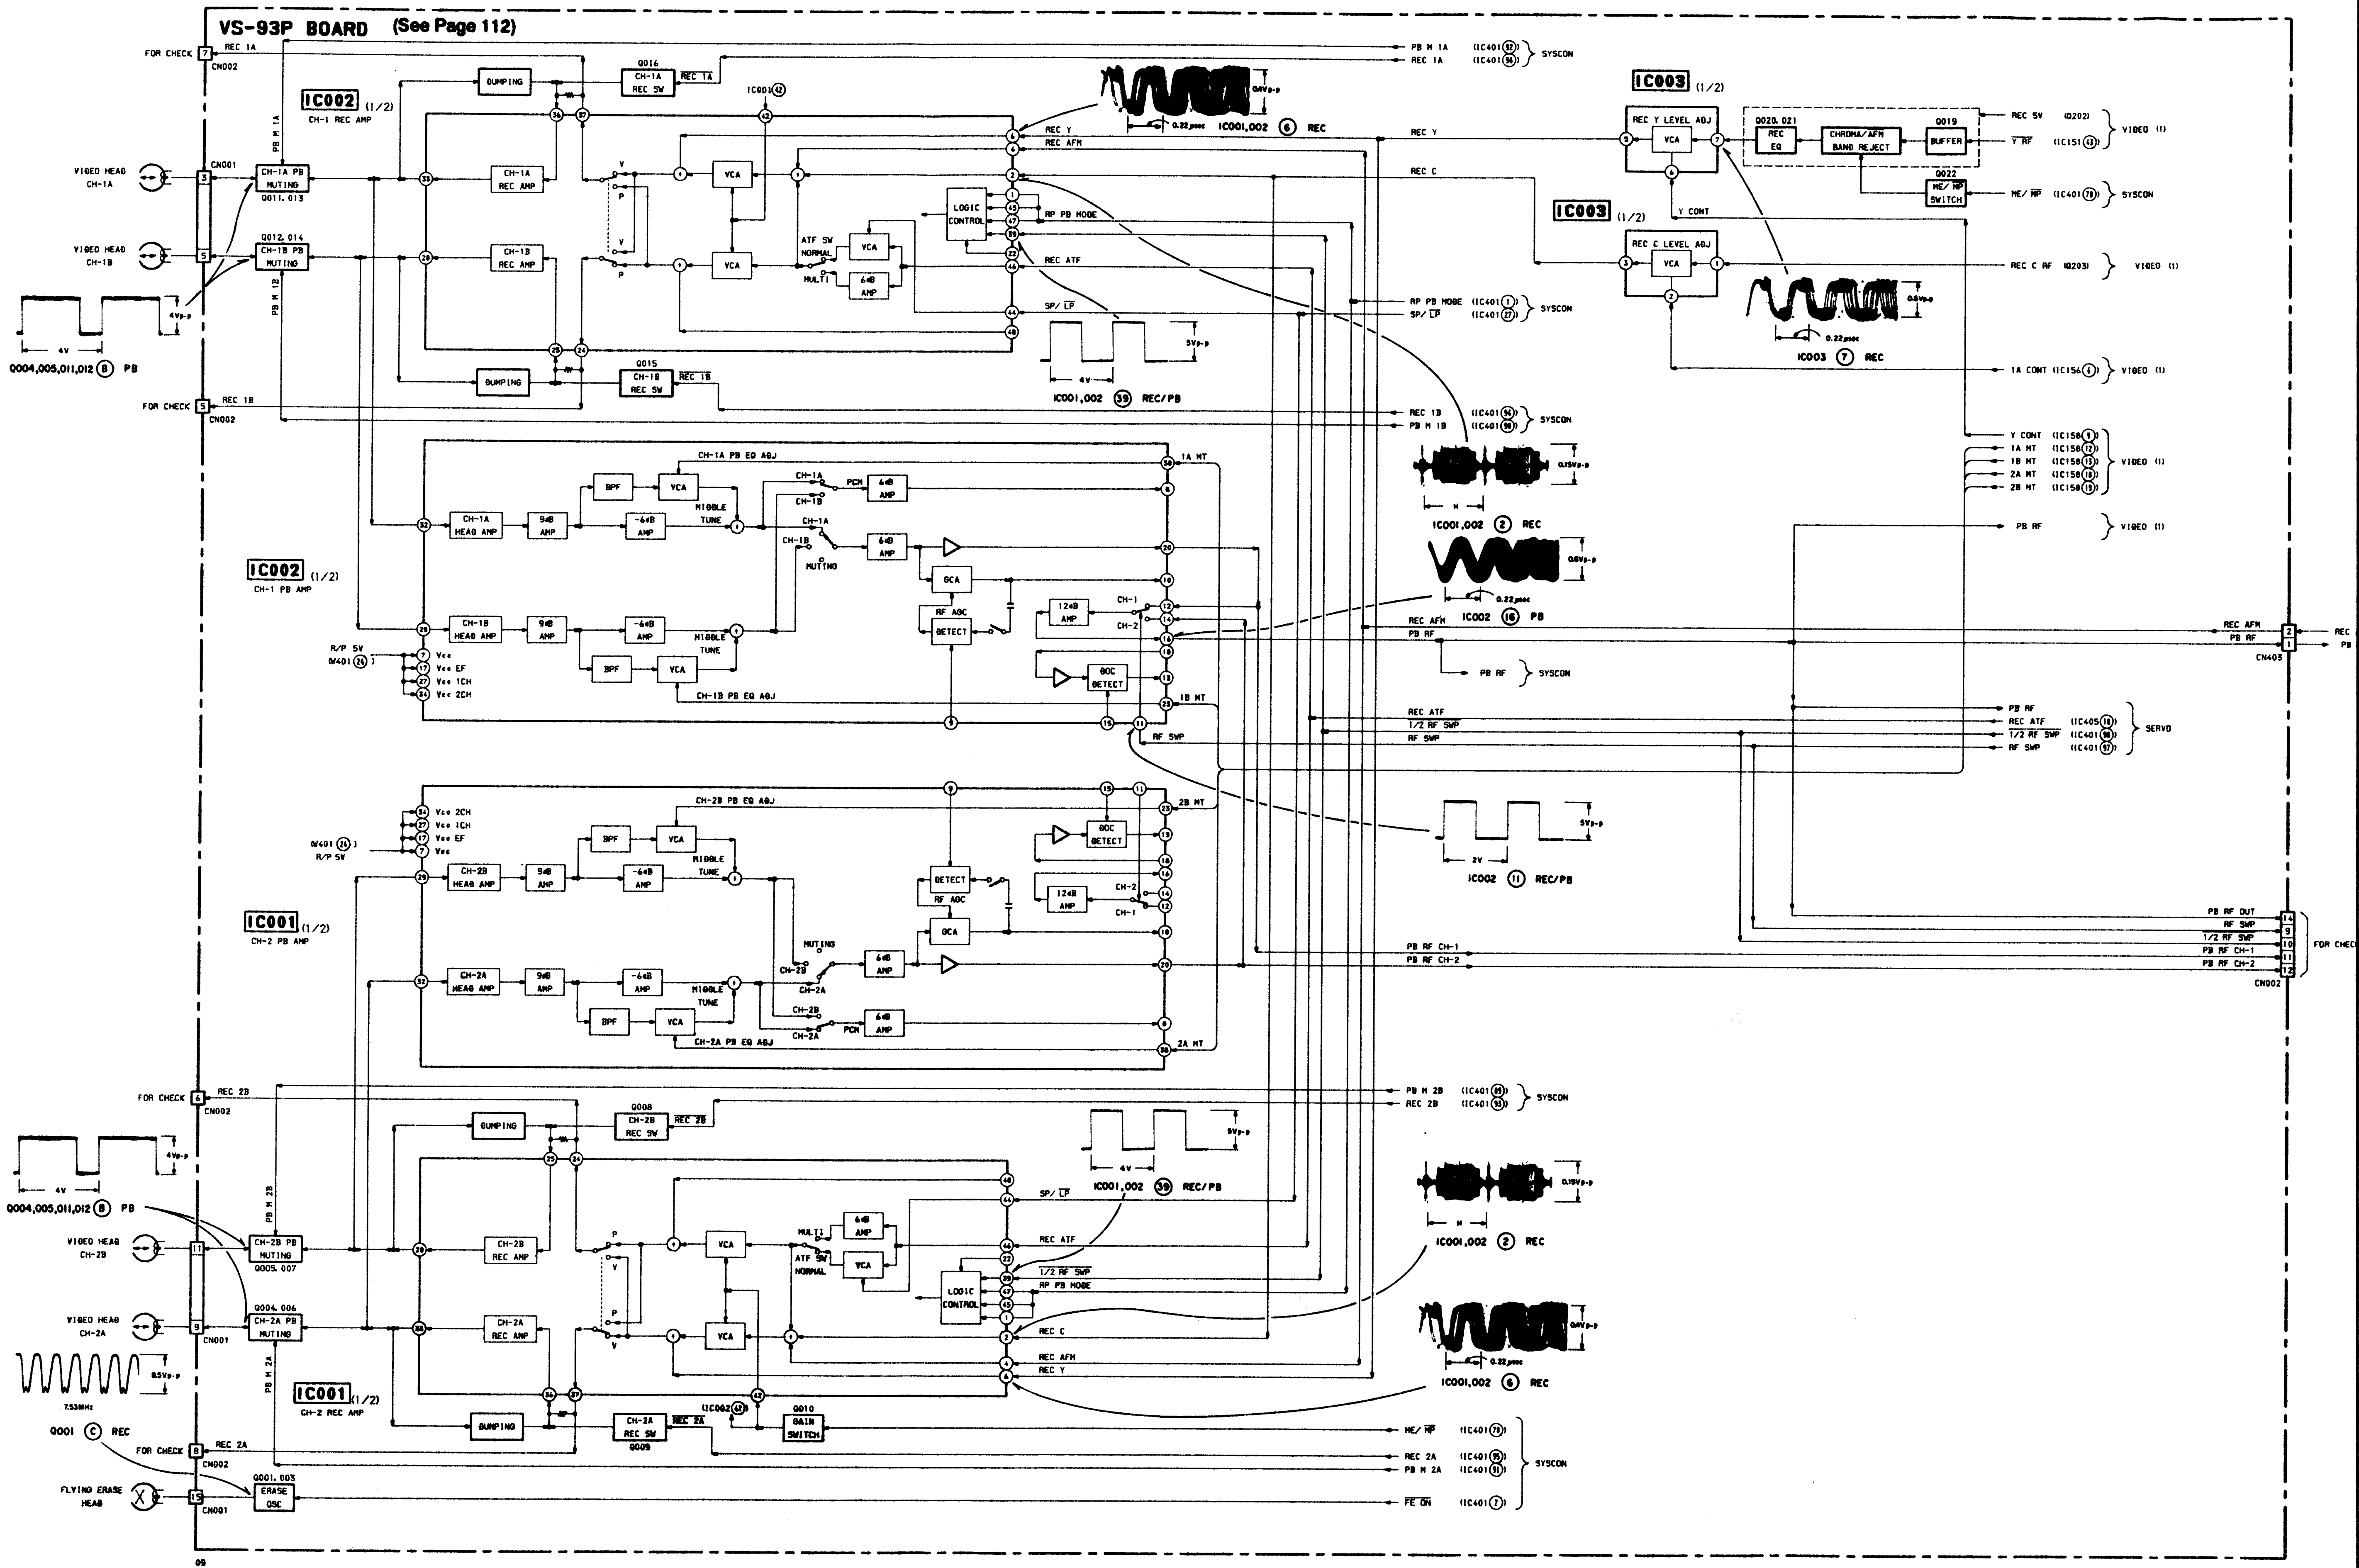
VS-93P BOARD (See Page 112)
IC002 (1/2)
CH-1 REC AMP
IC002 (1/2)
CH-1 PB AMP
IC001 (1/2)
CH-2 PB AMP
IC001 (1/2)
CH-2 REC AMP
IC003 (1/2)
IC003 (1/2)
FOR CHECK
CN002
CN001
REC 1A
REC 1B
REC 2B
REC 2A
VIDEO HEAD CH-1A
VIDEO HEAD CH-1B
VIDEO HEAD CH-2B
VIDEO HEAD CH-2A
FLYING ERASE HEAD
CH-1A PB MUTING
Q011, 013
Q012, 014
CH-1B PB MUTING
CH-2B PB MUTING
Q005, 007
Q004, 006
CH-2A PB MUTING
Q001, 003
ERASE OSC
PB M 1A
PB M 1B
PB M 2B
PB M 2A
DUMPING
Q016
CH-1A REC SW
Q015
CH-1B REC SW
Q008
CH-2B REC SW
CH-2A REC SW
Q009
Q010
GAIN SWITCH
(IC002 42)
IC001 42
CH-1A REC AMP
CH-1B REC AMP
CH-2B REC AMP
CH-2A REC AMP
V
P
VCA
ATF SW
NORMAL
MULTI
6dB AMP
LOGIC CONTROL
REC Y
REC AFM
REC C
RP PB MODE
REC ATF
SP/ $\overline{LP}$
$\overline{1/2\ RF\ SWP}$
4V
4Vp-p
Q004,005,011,012 (8) PB
5Vp-p
IC001,002 (39) REC/PB
CH-1A PB EQ ADJ
CH-1B PB EQ ADJ
CH-2B PB EQ ADJ
CH-2A PB EQ ADJ
CH-1A HEAD AMP
CH-1B HEAD AMP
CH-2B HEAD AMP
CH-2A HEAD AMP
9dB AMP
-6dB AMP
BPF
MIDDLE TUNE
CH-1A
CH-1B
CH-2A
CH-2B
PCM
MUTING
DCA
RF AGC
DETECT
12dB AMP
CH-1
CH-2
DOC DETECT
1A MT
1B MT
2B MT
2A MT
RF SWP
R/P 5V
(IC401 26)
Vcc
Vcc EF
Vcc 1CH
Vcc 2CH
2V
IC002 (11) REC/PB
0.6Vp-p
0.22μsec
IC001,002 (6) REC
0.15Vp-p
H
IC001,002 (2) REC
IC002 (16) PB
7.53MHz
0.5Vp-p
Q001 (C) REC
PB M 1A (IC401 92)
REC 1A (IC401 96)
SYSCON
REC Y LEVEL ADJ
REC C LEVEL ADJ
Y CONT
Q020, 021
REC EQ
CHROMA/AFM BAND REJECT
Q019
BUFFER
Q022
ME/ $\overline{MP}$ SWITCH
REC 5V (Q202)
$\overline{Y\ RF}$ (IC151 43)
VIDEO (1)
ME/ $\overline{MP}$ (IC401 78)
SYSCON
REC C RF (Q203)
VIDEO (1)
0.5Vp-p
0.22μsec
IC003 (7) REC
RP PB MODE (IC401 1)
SP/ $\overline{LP}$ (IC401 27)
SYSCON
1A CONT (IC156 6)
VIDEO (1)
REC 1B (IC401 96)
PB M 1B (IC401 90)
SYSCON
Y CONT (IC158 9)
1A MT (IC158 12)
1B MT (IC158 13)
2A MT (IC158 18)
2B MT (IC158 19)
VIDEO (1)
PB RF
VIDEO (1)
REC AFM
PB RF
PB RF
SYSCON
CN403
REC
PB
REC ATF
1/2 RF SWP
RF SWP
PB RF
REC ATF (IC405 18)
$\overline{1/2\ RF\ SWP}$ (IC401 98)
RF SWP (IC401 97)
SERVO
PB RF OUT
RF SWP
1/2 RF SWP
PB RF CH-1
PB RF CH-2
FOR CHECK
CN002
PB M 2B (IC401 89)
REC 2B (IC401 93)
SYSCON
ME/ $\overline{MP}$ (IC401 78)
REC 2A (IC401 95)
PB M 2A (IC401 91)
$\overline{FE\ ON}$ (IC401 2)
SYSCON

3-8. SERVO BLOCK DIAGRAM

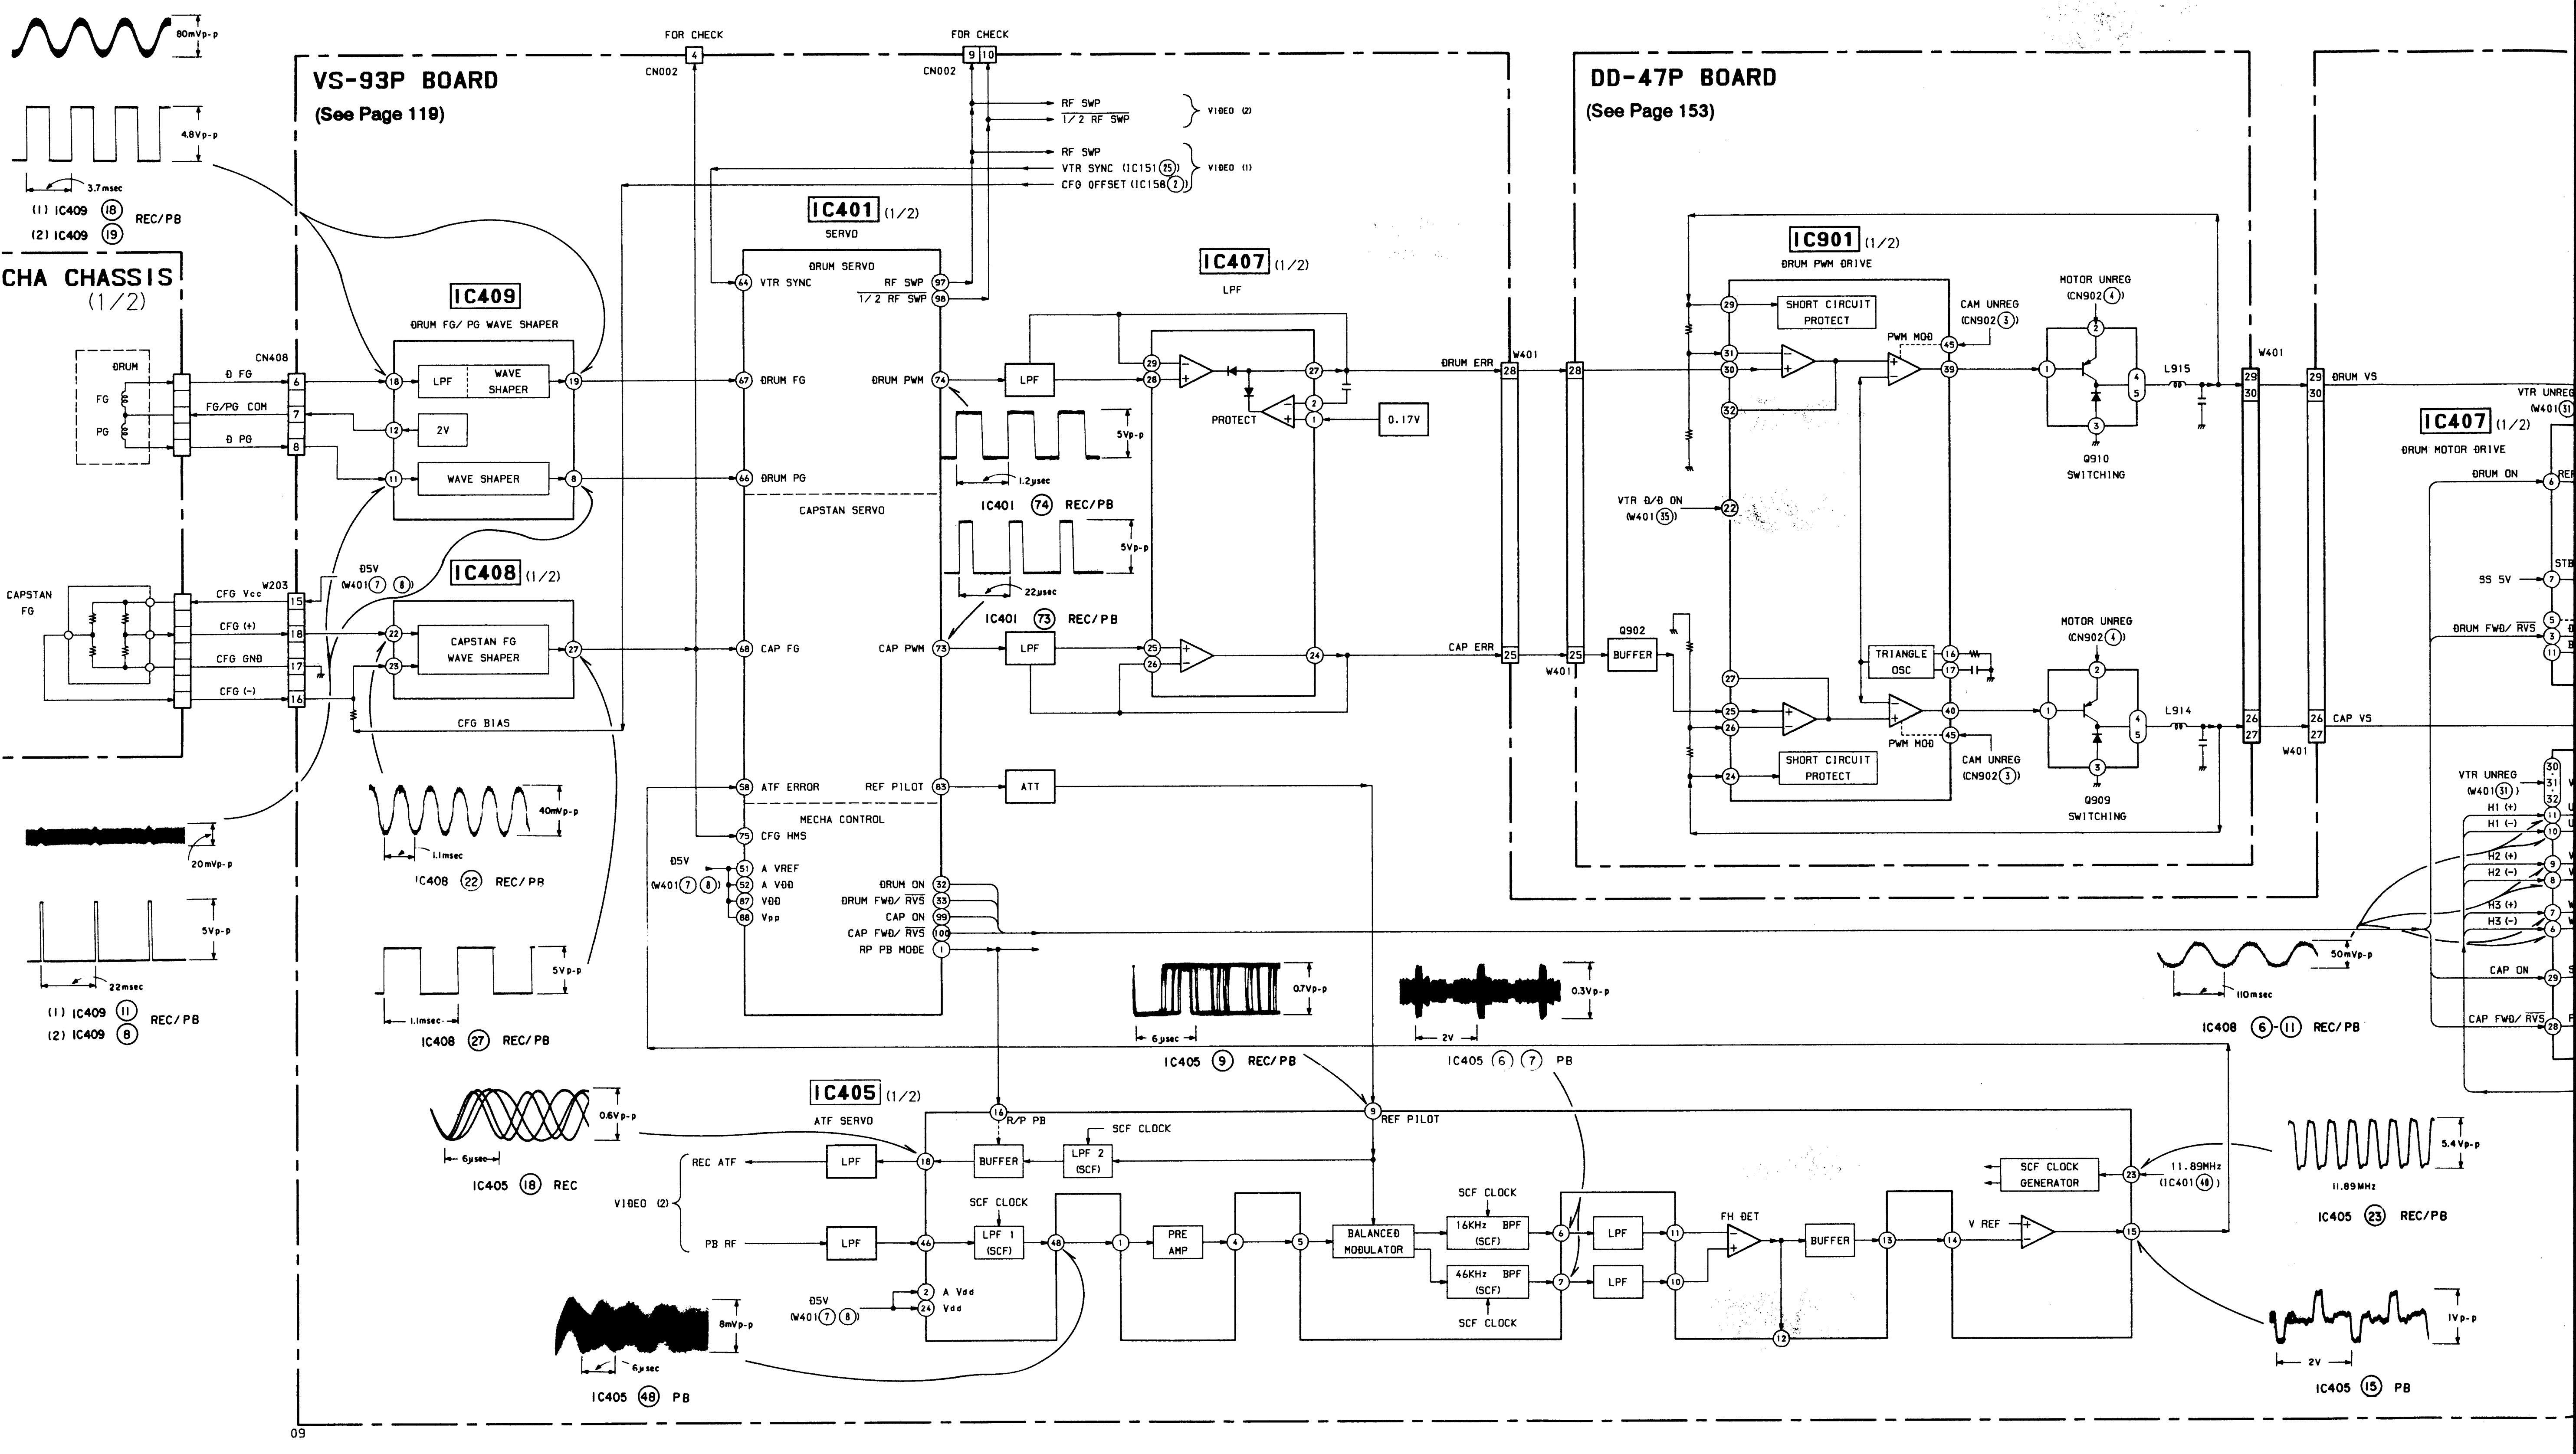

80mVp-p
4.8Vp-p
3.7msec
(1) IC409 ⑱
(2) IC409 ⑲
REC/PB
MECHA CHASSIS (1/2)
DRUM
FG
PG
CAPSTAN FG
CN408
D FG
FG/PG COM
D PG
W203
CFG Vcc
CFG (+)
CFG GND
CFG (−)
20mVp-p
5Vp-p
22msec
(1) IC409 ⑪
(2) IC409 ⑧
REC/PB
VS-93P BOARD
(See Page 119)
FOR CHECK
CN002
FOR CHECK
CN002
RF SWP
1/2 RF SWP
VIDEO (2)
RF SWP
VTR SYNC (IC151 ㉕)
CFG OFFSET (IC158 ②)
VIDEO (1)
IC401 (1/2)
SERVO
DRUM SERVO
VTR SYNC
RF SWP
1/2 RF SWP
DRUM FG
DRUM PWM
DRUM PG
CAPSTAN SERVO
CAP FG
CAP PWM
ATF ERROR
REF PILOT
MECHA CONTROL
CFG HMS
A VREF
A VDD
VDD
Vpp
DRUM ON
DRUM FWD/RVS
CAP ON
CAP FWD/RVS
RP PB MODE
IC409
DRUM FG/PG WAVE SHAPER
LPF
WAVE SHAPER
2V
WAVE SHAPER
D5V
(W401 ⑦ ⑧)
IC408 (1/2)
CAPSTAN FG WAVE SHAPER
CFG BIAS
40mVp-p
1.1msec
IC408 ㉒ REC/PB
5Vp-p
1.1msec
IC408 ㉗ REC/PB
IC407 (1/2)
LPF
LPF
LPF
PROTECT
0.17V
ATT
5Vp-p
1.2μsec
IC401 ㉔ REC/PB
5Vp-p
22μsec
IC401 ㉓ REC/PB
D5V
(W401 ⑦ ⑧)
DRUM ERR
CAP ERR
W401
0.7Vp-p
6μsec
IC405 ⑨ REC/PB
0.3Vp-p
2V
IC405 ⑥ ⑦ PB
IC405 (1/2)
ATF SERVO
R/P PB
REF PILOT
SCF CLOCK
BUFFER
LPF 2 (SCF)
REC ATF
LPF
VIDEO (2)
PB RF
LPF
SCF CLOCK
LPF 1 (SCF)
PRE AMP
BALANCED MODULATOR
SCF CLOCK
16KHz BPF (SCF)
46KHz BPF (SCF)
SCF CLOCK
LPF
LPF
FH DET
BUFFER
V REF
SCF CLOCK GENERATOR
11.89MHz
(IC401 ㊽)
A Vdd
Vdd
D5V
(W401 ⑦ ⑧)
0.6Vp-p
6μsec
IC405 ⑱ REC
8mVp-p
6μsec
IC405 ㊽ PB
5.4Vp-p
11.89MHz
IC405 ㉓ REC/PB
1Vp-p
2V
IC405 ⑮ PB
50mVp-p
110msec
IC408 ⑥-⑪ REC/PB
DD-47P BOARD
(See Page 153)
W401
IC901 (1/2)
DRUM PWM DRIVE
SHORT CIRCUIT PROTECT
PWM MOD
CAM UNREG
(CN902 ③)
MOTOR UNREG
(CN902 ④)
L915
Q910
SWITCHING
VTR D/D ON
(W401 ㉟)
Q902
BUFFER
TRIANGLE OSC
PWM MOD
SHORT CIRCUIT PROTECT
CAM UNREG
(CN902 ③)
MOTOR UNREG
(CN902 ④)
L914
Q909
SWITCHING
W401
DRUM VS
CAP VS
VTR UNREG
(W401 ㉛)
IC407 (1/2)
DRUM MOTOR DRIVE
DRUM ON
SS 5V
DRUM FWD/RVS
VTR UNREG
(W401 ㉛)
H1 (+)
H1 (−)
H2 (+)
H2 (−)
H3 (+)
H3 (−)
CAP ON
CAP FWD/RVS
09

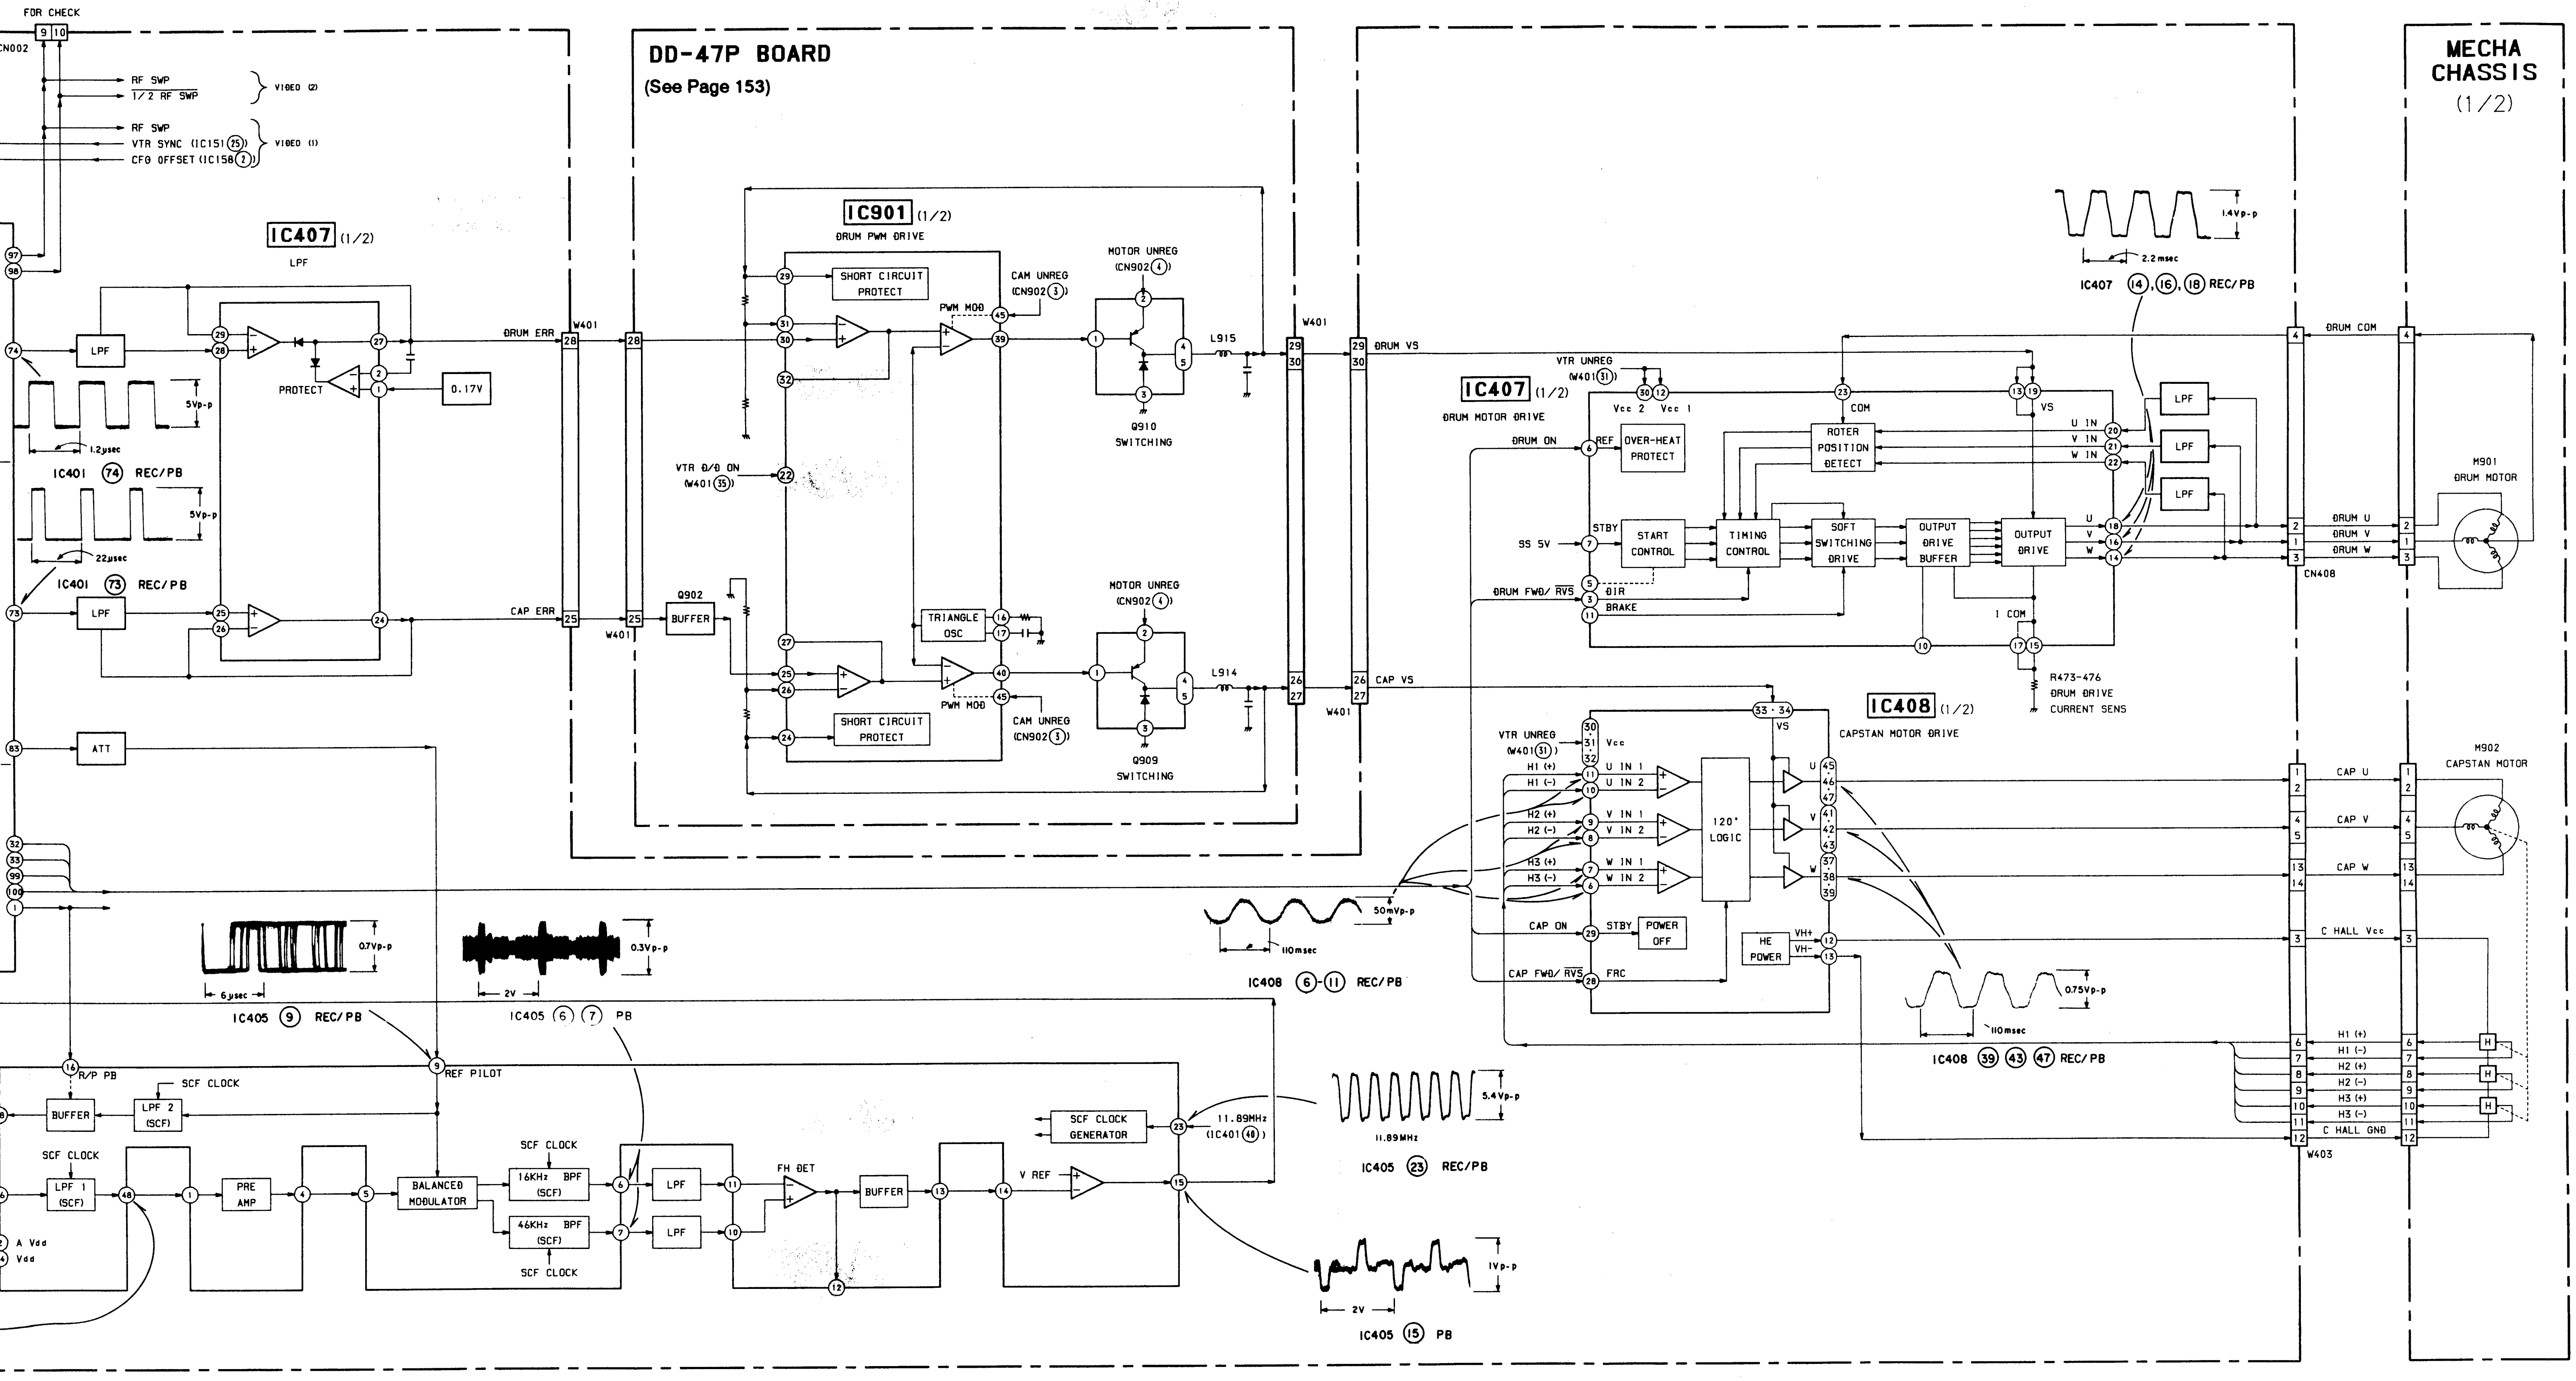
FOR CHECK
CN002
RF SWP
1/2 RF SWP
VIDEO (2)
RF SWP
VTR SYNC (IC151 ㉕)
CFO OFFSET (IC158 ②)
VIDEO (1)
IC407 (1/2)
LPF
PROTECT
0.17V
DRUM ERR
CAP ERR
W401
5Vp-p
1.2μsec
IC401 ㉔ REC/PB
22μsec
IC401 ㉓ REC/PB
ATT
DD-47P BOARD
(See Page 153)
IC901 (1/2)
DRUM PWM DRIVE
SHORT CIRCUIT PROTECT
PWM MOD
CAM UNREG (CN902 ③)
MOTOR UNREG (CN902 ④)
Q910 SWITCHING
L915
VTR D/D ON (W401 ㉟)
Q902
BUFFER
TRIANGLE OSC
Q909 SWITCHING
L914
DRUM VS
CAP VS
MECHA CHASSIS (1/2)
1.4Vp-p
2.2msec
IC407 ⑭, ⑯, ⑱ REC/PB
DRUM COM
IC407 (1/2)
DRUM MOTOR DRIVE
VTR UNREG (W401 ㉛)
Vcc 2
Vcc 1
COM
VS
DRUM ON
REF
OVER-HEAT PROTECT
ROTER POSITION DETECT
U IN
V IN
W IN
LPF
STBY
9S 5V
START CONTROL
TIMING CONTROL
SOFT SWITCHING DRIVE
OUTPUT DRIVE BUFFER
OUTPUT DRIVE
DRUM FWD/RVS
DIR
BRAKE
I COM
R473-476
DRUM DRIVE CURRENT SENS
M901
DRUM MOTOR
DRUM U
DRUM V
DRUM W
CN408
IC408 (1/2)
CAPSTAN MOTOR DRIVE
VTR UNREG (W401 ㉛)
Vcc
H1 (+)
H1 (-)
H2 (+)
H2 (-)
H3 (+)
H3 (-)
U IN 1
U IN 2
V IN 1
V IN 2
W IN 1
W IN 2
120° LOGIC
CAP ON
POWER OFF
HE POWER
VH+
VH-
CAP FWD/RVS
FRC
M902
CAPSTAN MOTOR
CAP U
CAP V
CAP W
C HALL Vcc
C HALL GND
W403
50mVp-p
110msec
IC408 ⑥-⑪ REC/PB
0.75Vp-p
110msec
IC408 ㊴ ㊸ ㊼ REC/PB
0.7Vp-p
6μsec
IC405 ⑨ REC/PB
0.3Vp-p
2V
IC405 ⑥ ⑦ PB
R/P PB
SCF CLOCK
BUFFER
LPF 2 (SCF)
REF PILOT
LPF 1 (SCF)
A Vdd
Vdd
PRE AMP
BALANCED MODULATOR
16KHz BPF (SCF)
46KHz BPF (SCF)
LPF
FH DET
BUFFER
V REF
SCF CLOCK GENERATOR
11.89MHz (IC401 ㊽)
5.4Vp-p
11.89MHz
IC405 ㉓ REC/PB
1Vp-p
2V
IC405 ⑮ PB

3-9. SYSTEM CONTROL BLOCK DIAGRAM

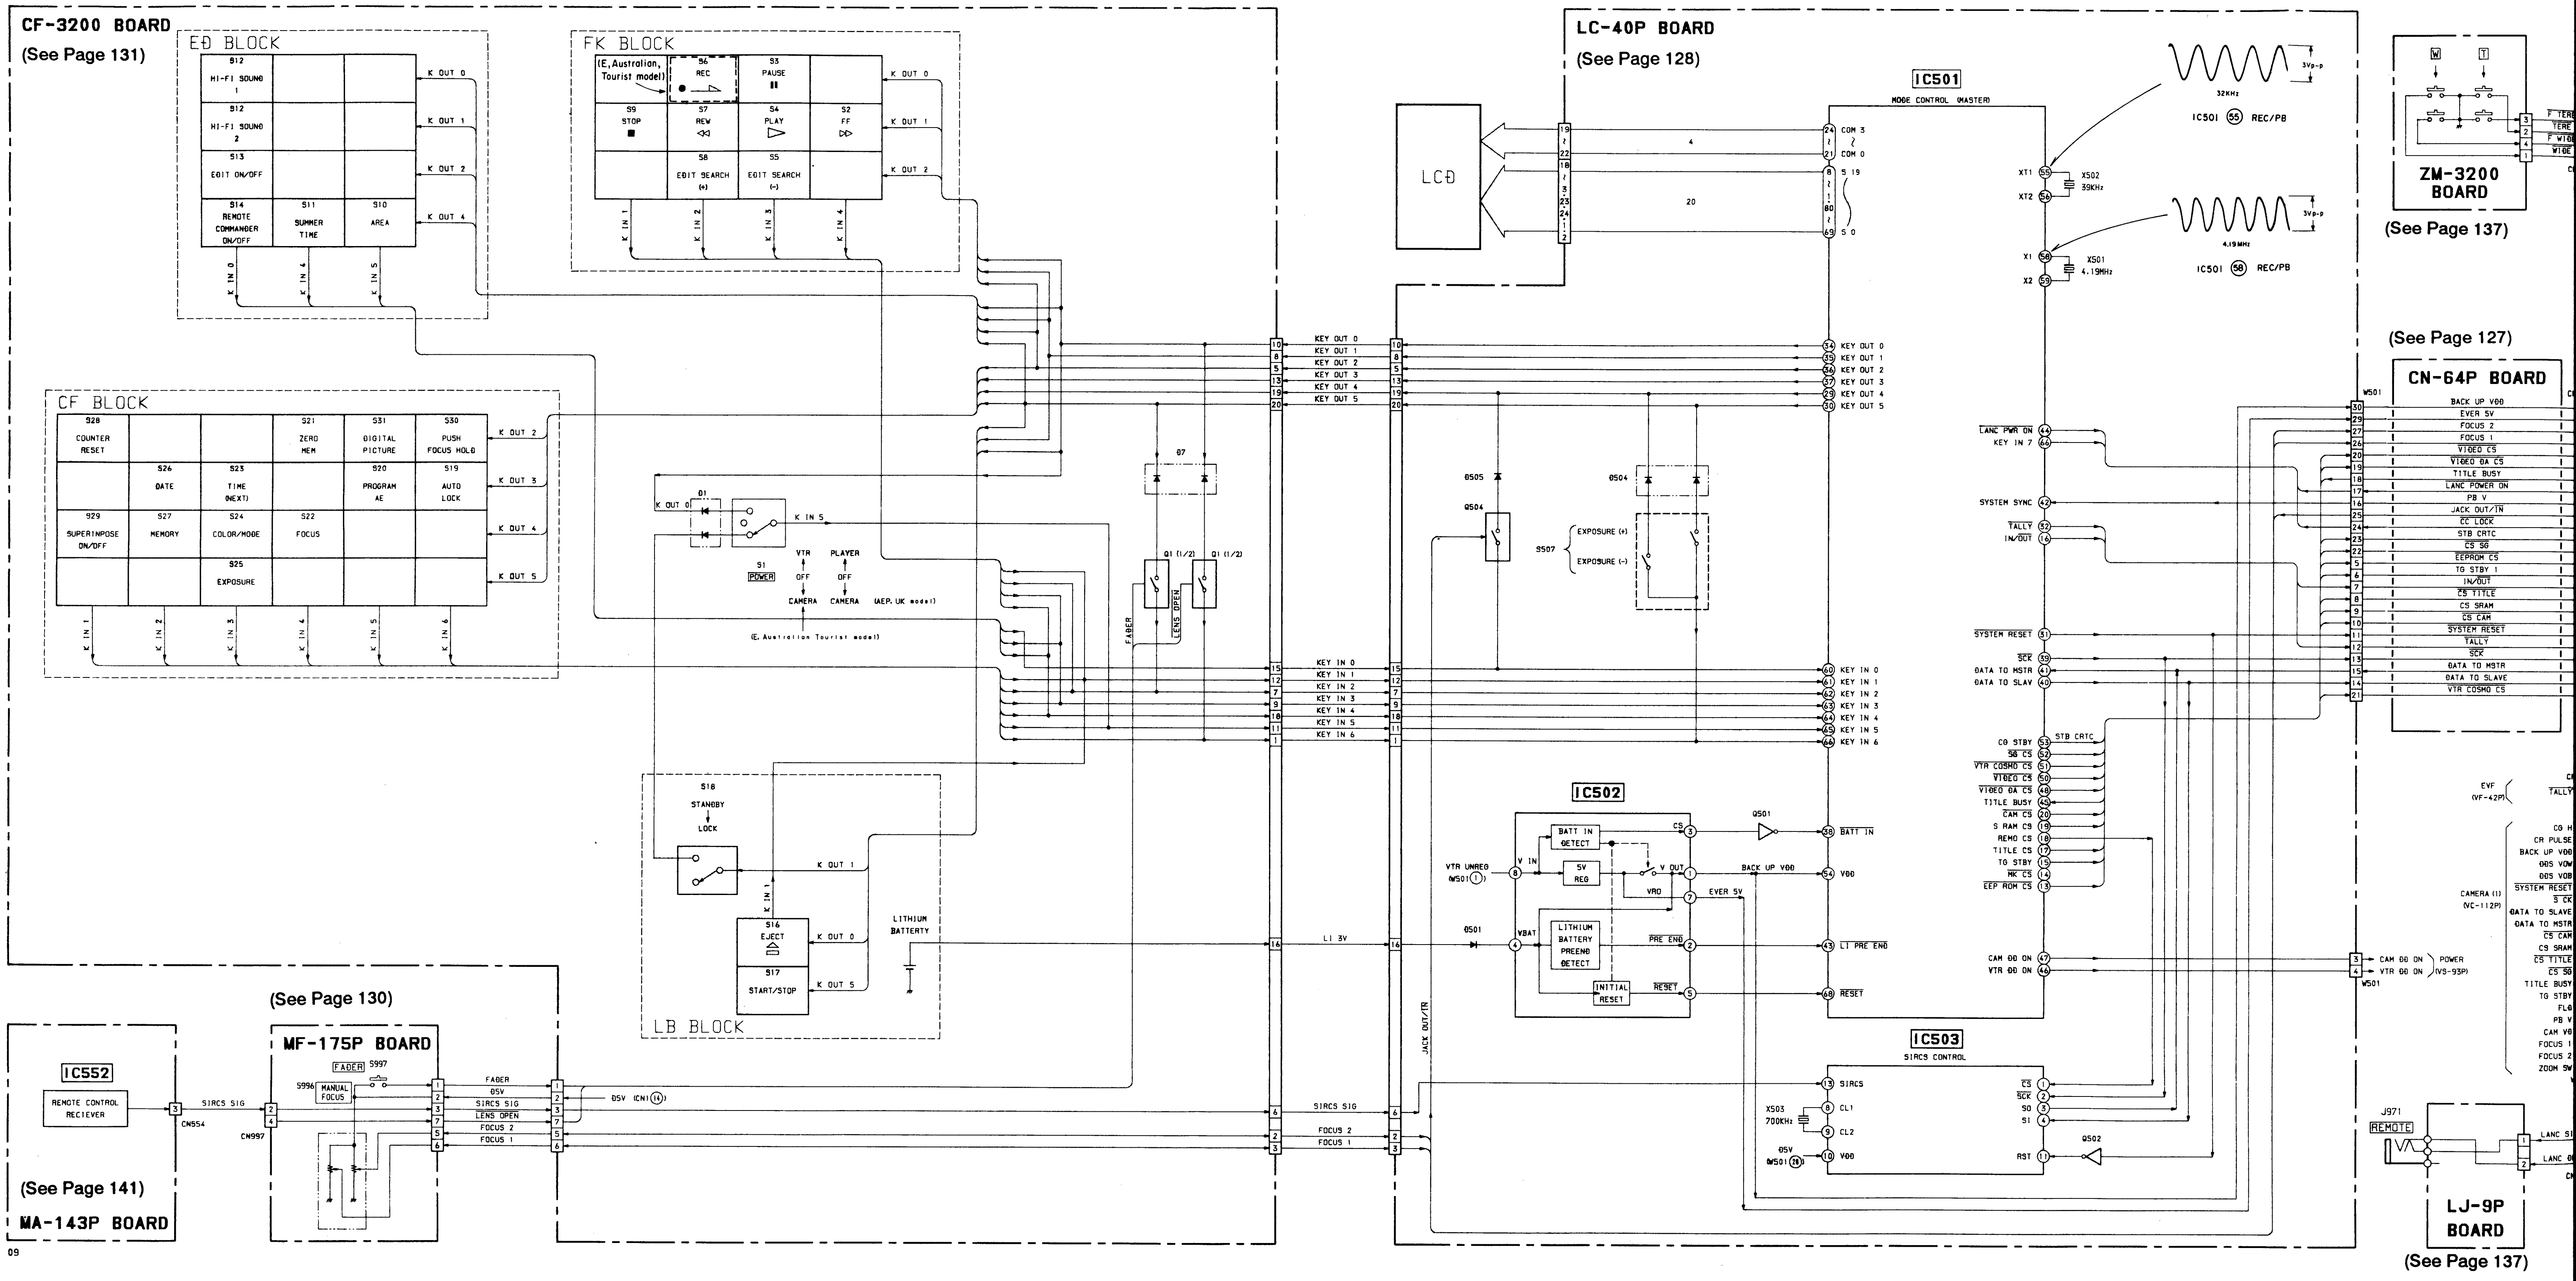
CF-3200 BOARD
(See Page 131)
ED BLOCK
S12 HI-FI SOUND 1
S12 HI-FI SOUND 2
S13 EDIT ON/OFF
S14 REMOTE COMMANDER ON/OFF
S11 SUMMER TIME
S10 AREA
K OUT 0
K OUT 1
K OUT 2
K OUT 4
FK BLOCK
(E,Australian, Tourist model)
S6 REC
S3 PAUSE
S9 STOP
S7 REW
S4 PLAY
S2 FF
S8 EDIT SEARCH (+)
S5 EDIT SEARCH (-)
CF BLOCK
S28 COUNTER RESET
S21 ZERO MEM
S31 DIGITAL PICTURE
S30 PUSH FOCUS HOLD
S26 DATE
S23 TIME (NEXT)
S20 PROGRAM AE
S19 AUTO LOCK
S29 SUPERIMPOSE ON/OFF
S27 MEMORY
S24 COLOR/MODE
S22 FOCUS
S25 EXPOSURE
K OUT 3
K OUT 5
K IN 0
K IN 1
K IN 2
K IN 3
K IN 4
K IN 5
K IN 6
D1
S1 POWER
VTR
PLAYER
OFF
CAMERA
(AEP, UK model)
(E, Australian Tourist model)
D7
Q1 (1/2)
FADER
LENS OPEN
LB BLOCK
S18 STANDBY LOCK
S16 EJECT
S17 START/STOP
LITHIUM BATTERY
KEY OUT 0
KEY OUT 1
KEY OUT 2
KEY OUT 3
KEY OUT 4
KEY OUT 5
KEY IN 0
KEY IN 1
KEY IN 2
KEY IN 3
KEY IN 4
KEY IN 5
KEY IN 6
LI 3V
SIRCS SIG
FOCUS 2
FOCUS 1
(See Page 130)
MF-175P BOARD
FADER S997
S996 MANUAL FOCUS
FADER
D5V
LENS OPEN
D5V (CN1 ⑭)
IC552
REMOTE CONTROL RECIEVER
CN554
CN997
(See Page 141)
MA-143P BOARD
LC-40P BOARD
(See Page 128)
LCD
IC501
MODE CONTROL (MASTER)
COM 3
COM 0
S 19
S 0
XT1
XT2
X502 32KHz
X1
X2
X501 4.19MHz
3Vp-p
IC501 ⑤⑤ REC/PB
IC501 ⑤⑧ REC/PB
LANC PWR ON
KEY IN 7
SYSTEM SYNC
TALLY
IN/OUT
SYSTEM RESET
SCK
DATA TO MSTR
DATA TO SLAV
STB CRTC
CG STBY
SG CS
VTR COSMO CS
VIDEO CS
VIDEO DA CS
TITLE BUSY
CAM CS
S RAM CS
REMO CS
TITLE CS
TG STBY
MK CS
EEP ROM CS
D505
D504
Q504
S507
EXPOSURE (+)
EXPOSURE (-)
IC502
BATT IN DETECT
5V REG
LITHIUM BATTERY PREEND DETECT
INITIAL RESET
VTR UNREG
D501
VBAT
V IN
V OUT
VRD
EVER 5V
BACK UP VDD
PRE END
RESET
Q501
BATT IN
VDD
LI PRE END
CAM DD ON
VTR DD ON
JACK OUT/IR
IC503
SIRCS CONTROL
SIRCS
X503 700KHz
CL1
CL2
D5V
RST
CS
SCK
SO
SI
Q502
ZM-3200 BOARD
(See Page 137)
(See Page 127)
CN-64P BOARD
W501
BACK UP VDD
EVER 5V
FOCUS 2
FOCUS 1
VIDEO CS
VIDEO DA CS
TITLE BUSY
LANC POWER ON
PB V
JACK OUT/IN
CC LOCK
STB CRTC
CS SG
EEPROM CS
TG STBY 1
IN/OUT
CS TITLE
CS SRAM
CS CAM
SYSTEM RESET
TALLY
SCK
DATA TO MSTR
DATA TO SLAVE
VTR COSMO CS
CAM DD ON
VTR DD ON
POWER (VS-93P)
EVF (VF-42P)
CAMERA (1) (VC-112P)
J971 REMOTE
LANC
LJ-9P BOARD
(See Page 137)

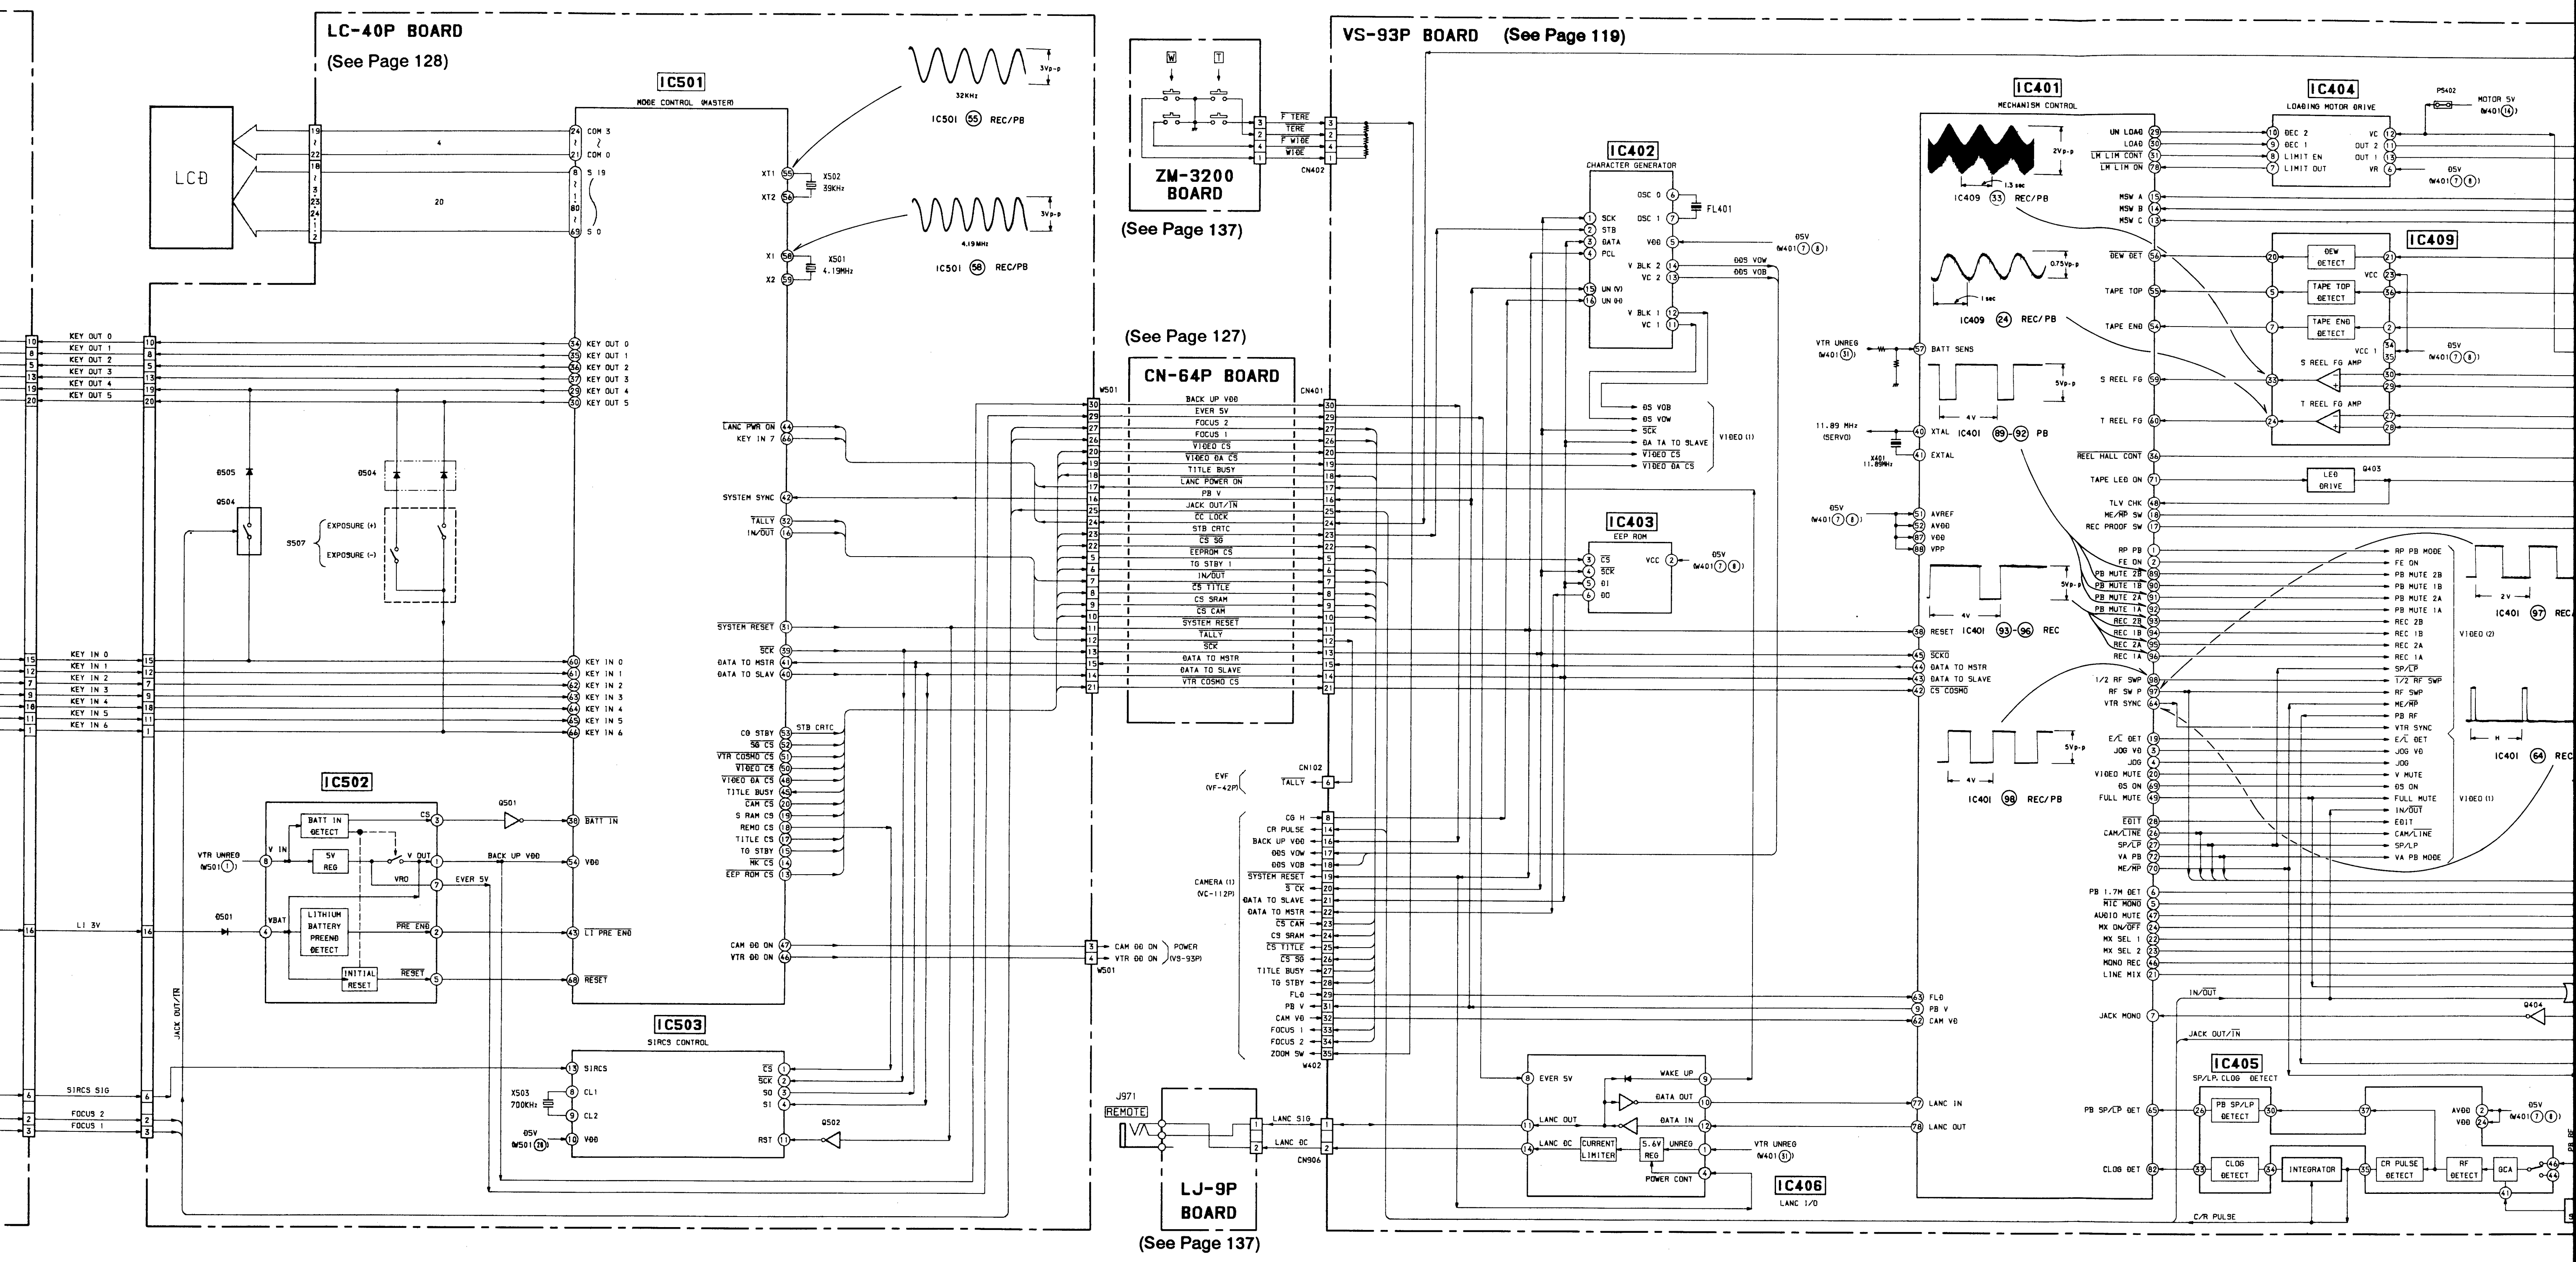
LC-40P BOARD
(See Page 128)
LCD
IC501
MODE CONTROL (MASTER)
COM 3
COM 0
S 19
S 0
XT1
XT2
X502 39KHz
X1
X2
X501 4.19MHz
32KHz
IC501 (55) REC/PB
3Vp-p
4.19MHz
IC501 (58) REC/PB
KEY OUT 0
KEY OUT 1
KEY OUT 2
KEY OUT 3
KEY OUT 4
KEY OUT 5
LANC PWR ON
KEY IN 7
SYSTEM SYNC
TALLY
IN/OUT
SYSTEM RESET
SCK
DATA TO MSTR
DATA TO SLAV
KEY IN 0
KEY IN 1
KEY IN 2
KEY IN 3
KEY IN 4
KEY IN 5
KEY IN 6
D505
D504
Q504
S507
EXPOSURE (+)
EXPOSURE (−)
CD STBY
SG CS
VTR COSMO CS
VIDEO CS
VIDEO DA CS
TITLE BUSY
CAM CS
S RAM CS
REMO CS
TITLE CS
TG STBY
MK CS
EEP ROM CS
STB CRTC
IC502
BATT IN DETECT
5V REG
LITHIUM BATTERY PREEND DETECT
INITIAL RESET
VTR UNREG
V IN
V OUT
VBAT
VRO
CS
PRE END
RESET
Q501
BATT IN
BACK UP VDD
EVER 5V
VDD
LI 3V
D501
LI PRE END
CAM DD ON
VTR DD ON
IC503
SIRCS CONTROL
SIRCS
CL1
CL2
X503 700KHz
DSV
W501
SO
SI
RST
Q502
JACK OUT/IN
SIRCS SIG
FOCUS 2
FOCUS 1
W
T
T TELE
TELE
T WIDE
WIDE
CN402
ZM-3200 BOARD
(See Page 137)
(See Page 127)
CN-64P BOARD
W501
CN401
BACK UP VDD
EVER 5V
FOCUS 2
FOCUS 1
VIDEO CS
VIDEO DA CS
TITLE BUSY
LANC POWER ON
PB V
JACK OUT/IN
CC LOCK
STB CRTC
CS SG
EEPROM CS
TG STBY 1
IN/OUT
CS TITLE
CS SRAM
CS CAM
SYSTEM RESET
TALLY
SCK
DATA TO MSTR
DATA TO SLAVE
VTR COSMO CS
CAM DD ON
VTR DD ON
POWER (VS-93P)
EVF (VF-42P)
CN102
CAMERA (1) (VC-112P)
CD H
CR PULSE
DDS VDW
DDS VDB
CS SG
CS CAM
CS SRAM
CS TITLE
TITLE BUSY
TG STBY
FLD
PB V
CAM VD
ZOOM SW
W402
J971
REMOTE
LANC SIG
LANC DC
CN906
LJ-9P BOARD
(See Page 137)
VS-93P BOARD
(See Page 119)
IC402
CHARACTER GENERATOR
SCK
STB
DATA
PCL
OSC 0
OSC 1
VDD
V BLK 2
VC 2
V BLK 1
VC 1
UN (V)
UN (H)
FL401
DSV
(W401 (7)(8))
DDS VDW
DDS VDB
DS VDB
DS VDW
DATA TO SLAVE
VIDEO CS
VIDEO DA CS
VIDEO (1)
IC403
EEP ROM
DI
DO
VCC
IC401
MECHANISM CONTROL
IC409 (33) REC/PB
1.3 sec
2Vp-p
0.75Vp-p
1 sec
IC409 (24) REC/PB
VTR UNREG (W401 (31))
BATT SENS
5Vp-p
4V
IC401 (89)-(92) PB
11.89 MHz (SERVO)
X401 11.89MHz
XTAL
EXTAL
AVREF
AVDD
VDD
VPP
RESET
IC401 (93)-(96) REC
SCKD
DATA TO MSTR
DATA TO SLAVE
CS COSMO
IC401 (98) REC/PB
FLD
PB V
CAM VD
LANC IN
LANC OUT
UN LOAD
LOAD
LM LIM CONT
LM LIM ON
MSW A
MSW B
MSW C
DEW DET
TAPE TOP
TAPE END
S REEL FG
T REEL FG
REEL HALL CONT
TAPE LED ON
TLV CHK
ME/MP SW
REC PROOF SW
RP PB
FE ON
PB MUTE 2B
PB MUTE 1B
PB MUTE 2A
PB MUTE 1A
REC 2B
REC 1B
REC 2A
REC 1A
1/2 RF SWP
RF SW P
VTR SYNC
E/C DET
JOG VD
JOG
VIDEO MUTE
DS ON
FULL MUTE
EDIT
CAM/LINE
SP/LP
VA PB
ME/MP
PB 1.7M DET
MIC MONO
AUDIO MUTE
MX ON/OFF
MX SEL 1
MX SEL 2
MONO REC
LINE MIX
JACK MONO
IN/OUT
JACK OUT/IN
Q404
PB SP/LP DET
CLOG DET
IC404
LOADING MOTOR DRIVE
DEC 2
DEC 1
LIMIT EN
LIMIT OUT
VC
OUT 2
OUT 1
VR
PS402
MOTOR 5V (W401 (14))
IC409
DEW DETECT
TAPE TOP DETECT
TAPE END DETECT
VCC
S REEL FG AMP
T REEL FG AMP
VCC 1
LED DRIVE
Q403
RP PB MODE
FE ON
PB MUTE 2B
PB MUTE 1B
PB MUTE 2A
PB MUTE 1A
REC 2B
REC 1B
REC 2A
REC 1A
SP/LP
1/2 RF SWP
RF SWP
ME/MP
PB RF
VTR SYNC
E/C DET
JOG VD
JOG
V MUTE
DS ON
FULL MUTE
IN/OUT
EDIT
CAM/LINE
SP/LP
VA PB MODE
VIDEO (2)
VIDEO (1)
IC401 (97) REC
IC401 (64) REC
2V
H
IC405
SP/LP, CLOG DETECT
PB SP/LP DETECT
CLOG DETECT
INTEGRATOR
CR PULSE DETECT
RF DETECT
GCA
AVDD
VDD
C/R PULSE
IC406
LANC I/O
EVER 5V
WAKE UP
DATA OUT
DATA IN
LANC OUT
LANC DC
CURRENT LIMITER
5.6V REG
UNREG
POWER CONT
VTR UNREG (W401 (31))

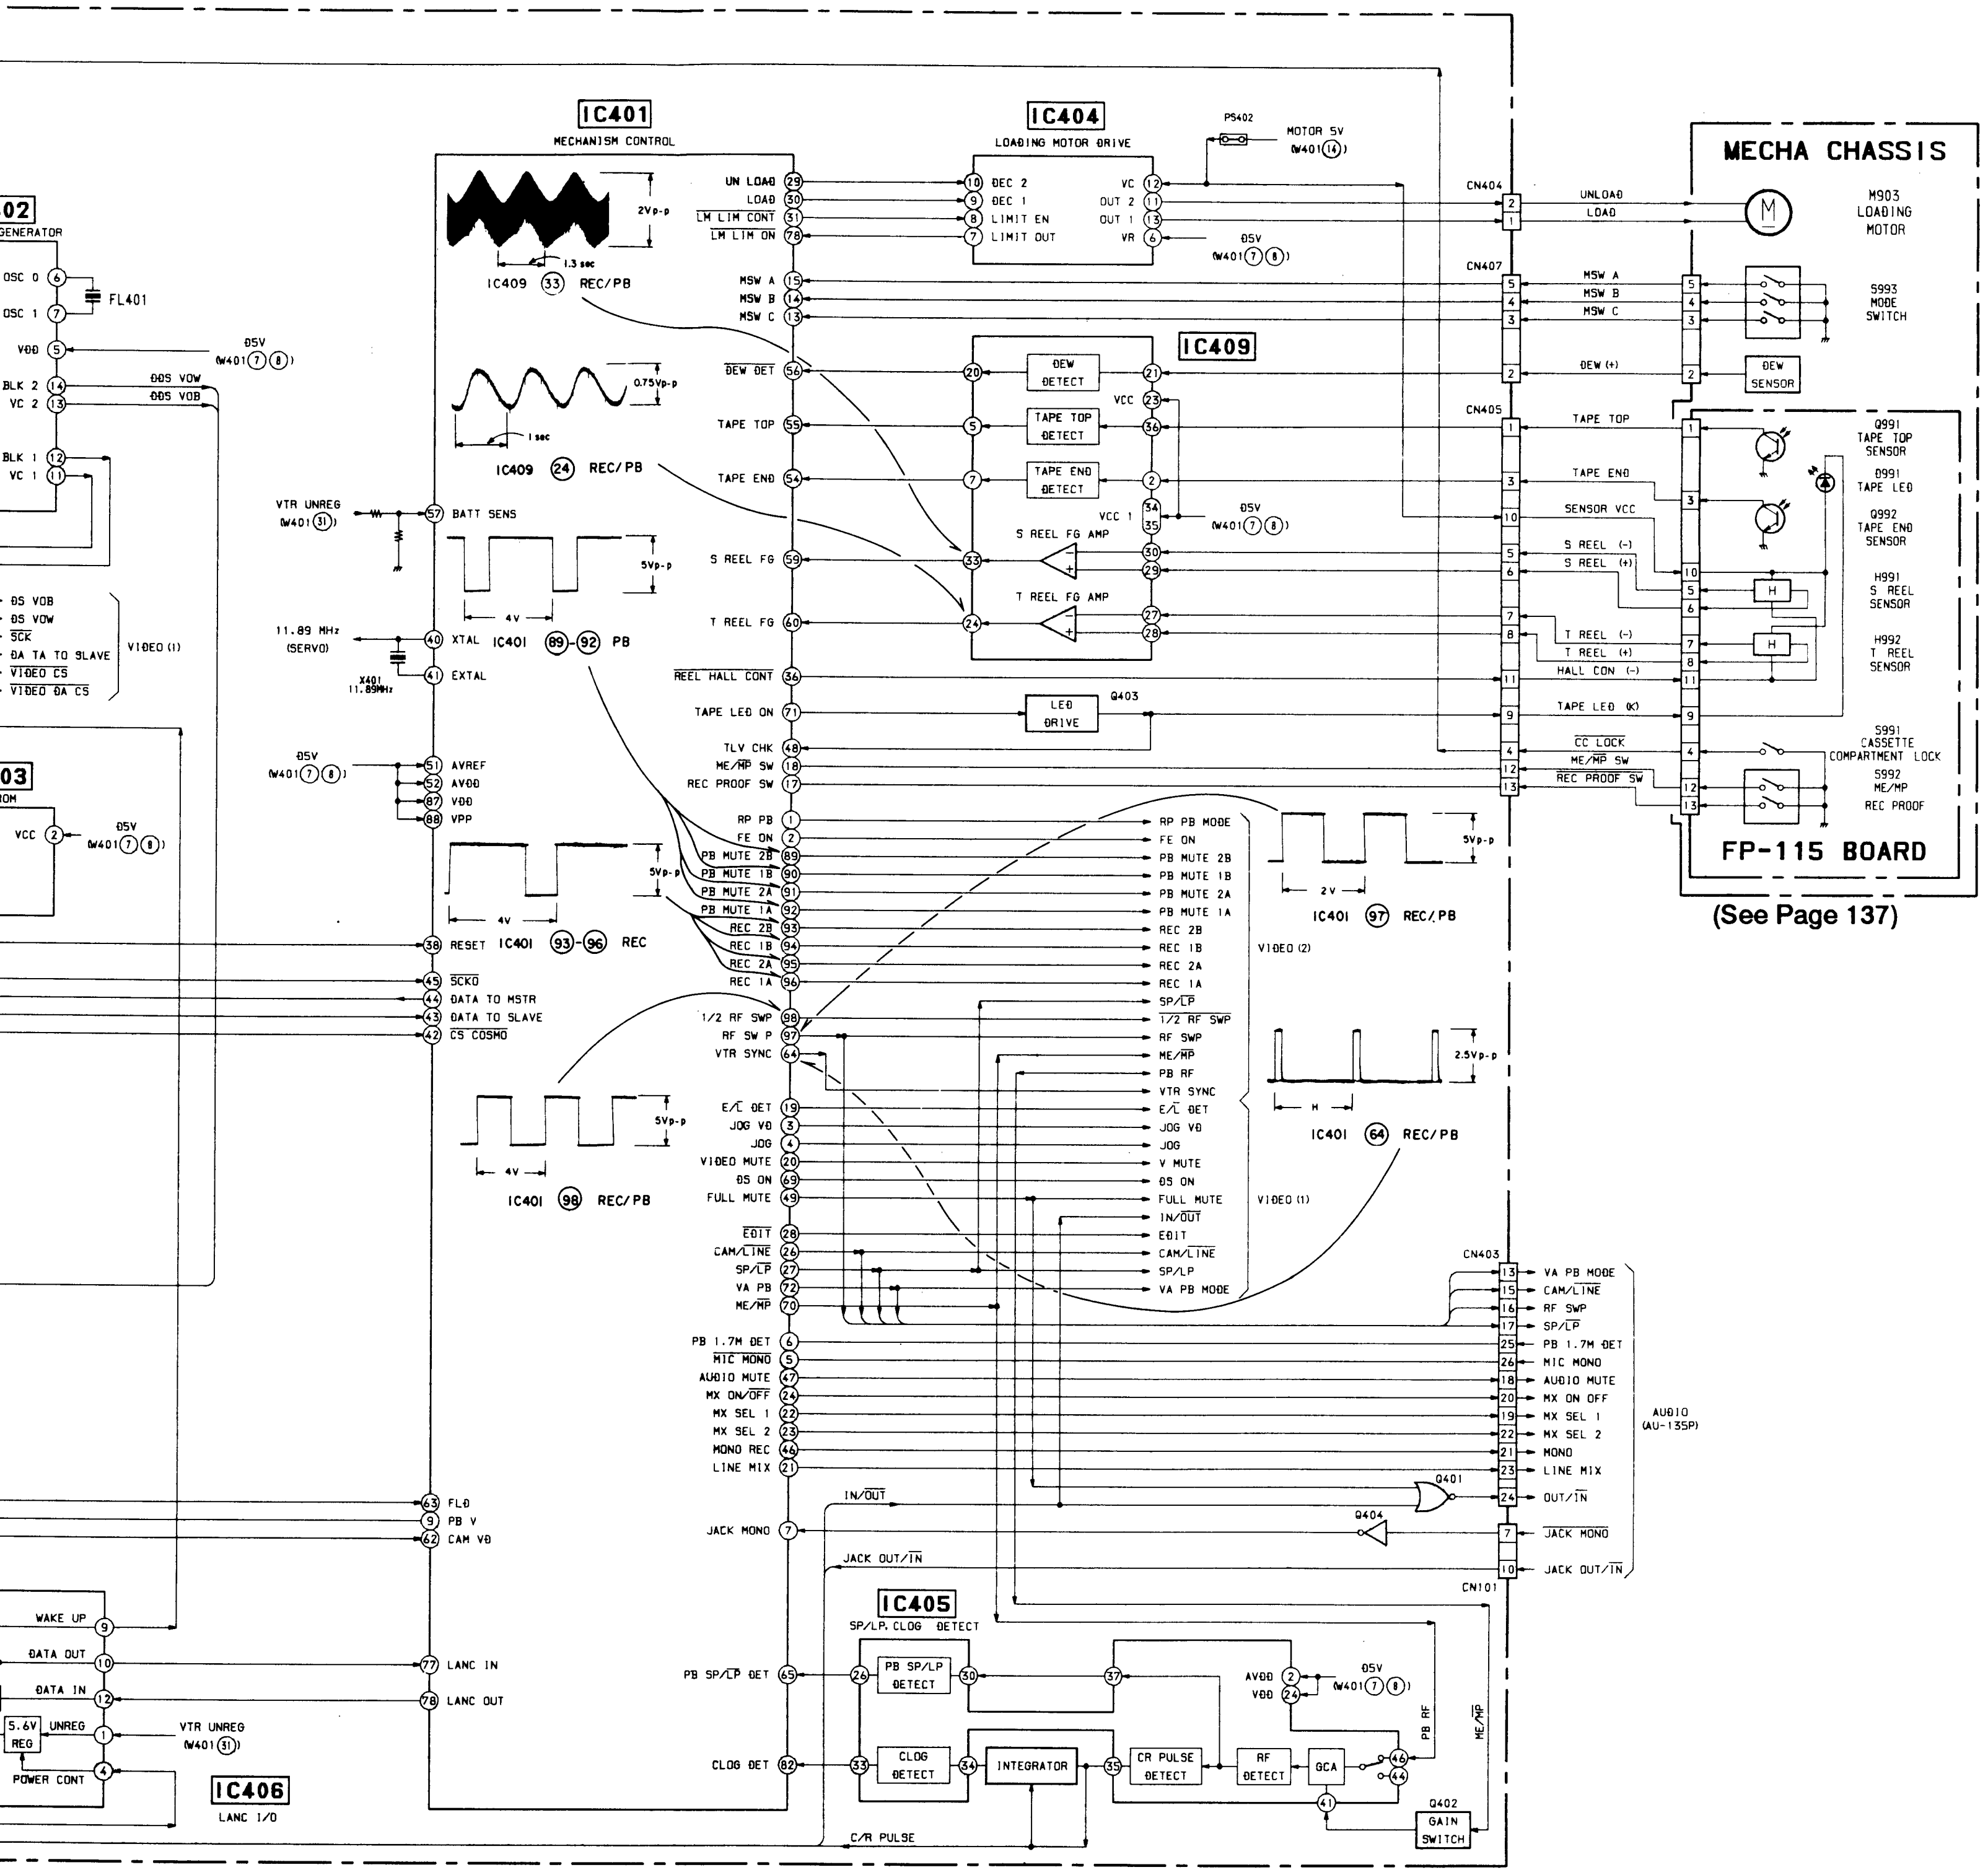
IC401
MECHANISM CONTROL
IC404
LOADING MOTOR DRIVE
IC409
IC405
SP/LP, CLOG DETECT
IC406
LANC I/O
MECHA CHASSIS
M903 LOADING MOTOR
S993 MODE SWITCH
FP-115 BOARD
(See Page 137)
CN404
CN407
CN405
CN403
CN101
AUDIO (AU-135P)
IC409 ㉝ REC/PB
IC409 ㉔ REC/PB
IC401 (89)-(92) PB
IC401 (93)-(96) REC
IC401 (97) REC/PB
IC401 (64) REC/PB
IC401 (98) REC/PB
VIDEO (2)
VIDEO (1)

3-10. MECHANISM CONTROL MICROPROCESSOR PIN FUNCTION (IC401 ON VS-93P BOARD: CXP80624)

Pin No.	Signal	I/O	Function
1	RP PB MODE	O	REC/PB select signal of REC/PB amplifier (IC001 and IC002 on VS-93P board) and ATF servo IC (IC405 on VS-93P board). "H": PB.
2	FE ON	O	Flying erase oscillation ON/OFF control signal. "L": oscillation.
3	JOG VD	O	False VD signal to be inserted into playback video signal during variable speed playback.
4	JOG	O	Variable speed/normal speed playback select signal of video circuit. "H" when variable speed playback.
5	MIC MONO	I	External microphone monaural/stereo discrimination input. "L" when monaural microphone used.
6	PB 1.7M DET	I	Normal/stereo discrimination input. "H" when AFM stereo tape playback.
7	JACK MONO	I	AUDIO IN/OUT jack monaural/stereo discrimination input. "H": monaural (No jack inserted in right terminal).
8	INT VD	O	Internal VD signal.
9	PBV	O	V sync as reference to character generator, communication and LANC period. Lock to CAM VD (Pin (62)) when CAM. Lock to VTR sync (Pin (64)) when VTR.
10	(PC2/PPO18)		Not used.
11	(PC1/PPO17)		
12	(PC0/PPO16)		
13	MSW C	I	MODE switch input. EJECT / USE / LS / GL / REC/PB / READY MSW A: L / H / L / L / H / H MSW B: L / H / H / H / L / L MSW C: H / L / H / L / H / L
14	MSW B	I	
15	MSW A	I	
16	N.C (OUT)	O	Not used.
17	REC PROOF SW	I	Erasure protection switch input. "L" when REC prohibit.
18	ME/MP SW	I	ME/MP switch input. "L": MP, "H": ME.
19	E/L DET	I	Normal/Hi8 discrimination input. "H" when Hi8 tape playback.
20	VIDEO MUTE	O	Video output mute signal. "H": mute.
21	LINE MIX	O	AUDIO OUT monaural/stereo select signal. "H": monaural.
22	MX SEL 1	O	Matrix select signal. STEREO / MAIN / SUB MX SEL 1: L / L / H MX SEL 2: L / H / L
23	MX SEL 2	O	
24	MX ON/OFF	O	Matrix on/off signal. "H" when matrix on (stereo).
25	E/L	O	Normal/Hi8 select signal. "H" when Hi8 tape playback.
26	CAM/LINE	O	Camera input/line input select signal. "H" when camera input.
27	SP/LP	O	SP/LP select signal. "L": LP.
28	EDIT	O	Video circuit EDIT/NORMAL switch signal. "L": EDIT.
29	UNLOAD	O	Loading motor control signal. "H" or "H" pulse when unloading.
30	LOAD	O	Loading motor control signal. "H" or "H" pulse when loading.
31	LM LIM CONT	O	Loading motor limiter control signal. Temporary "H" when loading.
32	DRUM ON	O	Drum motor ON/OFF signal. "H" (approx. 1.3V) when drum ON.
33	DRUM FWD/RVS	O	Drum rotating direction control signal. Normally "H".
34	(PH2)		Not used.
35	(PH1)		
36	REEL HALL CONT	O	Reel FG sensor (HALL element) power supply control signal.
37	MP		Connected to GND.
38	RESET	I	Reset signal. "L" when reset.
39	VSS		GND
40	XTAL	O	11.718 MHz clock oscillation circuit.
41	EXTAL	I	
42	CS COSMO	I	Chip select signal from mode control microprocessor (IC501 on LC-40P board).
43	DATA TO SLAVE	I	Serial data input from mode control microprocessor.

Pin No.	Signal	I/O	Function
44	DATA TO MASTER	O	Serial data output to mode control microprocessor.
45	$\overline{\text{SCK}}$	I	Serial clock input from mode control microprocessor.
46	MONO REC	O	1.7 MHz REC AFM carrier ON/OFF signal. "H": OFF (monaural recording).
47	AUDIO MUTE	O	Audio mute signal. "H": mute.
48	TLV CHC	I	Tape LED monitor signal.
49	FULL MUTE	O	Video and audio mute signal. "H": mute.
50	SVSS		GND
51	AVREF		Analog port reference voltage. Connected to +5V.
52	AVDD		Analog port power supply (5V).
53	NC (IN)		Connected to GND.
54	TAPE END	I	Tape end detection signal. Normally "L". "H" pulse: tape end.
55	TAPE TOP	I	Tape top detection signal. Normally "L", "H" pulse: tape top.
56	$\overline{\text{DEW DET}}$	I	Dew condensation detection signal. "L" when dew condensation.
57	BATT SENSE	I	Battery voltage input for battery end detection. 1/2 divided by RB409.
58	ATF ERROR	I	ATF error, ATF lock error input.
59	S REEL FG	I	S reel FG signal input.
60	T REEL FG	I	T reel FG signal input.
61	NC (IN)	I	Connected to GND.
62	CAM VD	I	VD signal from camera circuit sync generator. V period pulse.
63	FLD	I	FIELD signal from camera circuit sync generator. 2V period pulse.
64	VTR SYNC	I	Composite sync signal separated from REC/PB Y signal.
65	SP/$\overline{\text{LP}}$ DET	I	Discriminates PB tape REC mode when CUE/REVIEW/FF and REW. "L": LP.
66	DRUM PG	I	Drum PG signal input. For drum phase servo. 26.7 msec period "H" pulse.
67	DRUM FG	I	Drum FG signal input. For drum speed servo. 4.4 msec period pulse.
68	CAP FG	I	Capstan FG signal input. For capstan speed servo. Approx. 1145.5 Hz when REC/PB.
69	DS ON	O	Data screen ON/OFF signal. "H": ON.
70	ME/$\overline{\text{MP}}$	O	Video circuit MP/ME switch signal. "H" when ME type tape used.
71	TAPE LED ON	O	Tape LED ON/OFF signal. 200 msec period "H" pulse when REC/PB.
72	VA PB MODE	O	Video, audio circuit REC/PB switch signal. "H": PB.
73	CAP PWM	O	Capstan error signal output. 20.15 μsec PWM signal.
74	DRUM PWM	O	Drum error signal output. 20.15 μsec PWM signal.
75	CFG HMS	I	Capstan FG signal input. For tape counter.
76	$\overline{\text{S JACK IN}}$	I	Connected to +5V.
77	LANC IN	I	Control L serial data input.
78	LANC OUT	O	Control L serial data output.
79	$\overline{\text{LM LIM ON}}$	I	Loading motor limiter ON detection signal. Normally "H", "L" when limiter ON.
80	$\overline{\text{Hi8 MP SW}}$	I	Connected to +5V.
81	COMPOSITE REC	O	Not used.
82	CLOG DET	I	Head clog detection signal. "L" when no trouble.
83	REF PILOT	O	ATF servo reference pilot signal. Synchronized with drum rotation to output by selecting four frequencies. f1=101.0 kHz, f2=117.2 kHz, f3=162.8 kHz and f4=146.5 kHz.
84	(PIO/PCK)		Connected to GND.
85	(PKO)		
86	VSS		GND
87	VDD		+5 power supply.
88	VPP		+5 power supply.

Pin No.	Signal	I/O	Function
89	MUTE 2B	O	Control signal for protecting crosstalk from the other three heads during PB. 4V period pulse when PB/REC ("L": active head only during PB/REC). "L" when other cases.
90	MUTE 1B	O	
91	MUTE 2A	O	
92	MUTE 1A	O	
93	$\overline{\text{REC 2B}}$	O	REC head (1A, 1B, 2A and 2B) select control signal. 4V period pulse when REC ("L": head only during REC). "H" when other cases.
94	$\overline{\text{REC 1B}}$	O	
95	$\overline{\text{REC 2A}}$	O	
96	$\overline{\text{REC 1A}}$	O	
97	RF SWP	O	RF switching pulse signal. 25 Hz, 50% duty pulse.
98	1/2 RF SWP	O	1/2 RF switching pulse signal. 12.5 Hz, 50% duty pulse.
99	CAP ON	O	Capstan driver ON/OFF control signal. "H" when capstan ON.
100	CAP FWD/RVS	O	Capstan rotating direction control signal. "H": FWD, "L": RVS.

I/O	Function
O	Control signal for protecting crosstalk from the other three heads during PB. 4V period pulse when PB/REC ("L": active head only during PB/REC). "L" when other cases.
O	
O	
O	
O	REC head (1A, 1B, 2A and 2B) select control signal. 4V period pulse when REC ("L": head only during REC). "H" when other cases.
O	
O	
O	
O	RF switching pulse signal. 25 Hz, 50% duty pulse.
O	1/2 RF switching pulse signal. 12.5 Hz, 50% duty pulse.
O	Capstan driver ON/OFF control signal. "H" when capstan ON.
O	Capstan rotating direction control signal. "H": FWD, "L": RVS.

3-11. MODE CONTROL MICROPROCESSOR PIN FUNCTION (IC501 ON LC-40P BOA

Pin No.	Port Name	Signal	I/O	Connection	Function
1	S12	S12	O	LCD	Segment terminal drive signal to LCD. (Four value output of 0, 1.7, 3.3, 5V)
2	S13	S13	O	LCD	
3	S14	S14	O	LCD	
4	S15	S15	O	LCD	
5	S16	S16	O	LCD	
6	S17	S17	O	LCD	
7	S18	S18	O	LCD	
8	S19	S19	O	LCD	
9	S20	S20	O		Not used.
10	S21	S21	O		
11	S22	S22	O		
12	S23	S23	O		
13	S24/BP0	$\overline{\text{EEPROM CS}}$	O		Chip select signal to EEPROM (IC403 on VS- 1/2V period "L" pulse.
14	S25/BP1	$\overline{\text{MK CS}}$	O		Not used.
15	S26/BP2	TG STBY	O	CAM	Power save control signal to timing generator Normally "L".
16	S27/BP3	IN/$\overline{\text{OUT}}$	O	VA	Audio input/output control signal. "H": input.
17	S28/BP4	TITLE CS	O	CAM	Chip select signal to titler. (IC711 on VC-112
18	S29/BP5	REMO CS	O		Chip select signal to sircs remote controller (I 1V period "L" pulse.
19	S30/BP6	S RAM CS	O	CAM	Chip select signal to title memory (SRAM). (I "H" when superimpose ON.
20	S31/BP7	$\overline{\text{CAM CS}}$	O	CAM	Chip select signal to camera controller (IC709 1V period "L" pulse.
21	COM0	COM 0	O	LCD	Common terminal drive signal to LCD. (Four value output of 0, 1.7, 3.3, 5V)
22	COM1	COM 1	O	LCD	
23	COM2	COM 2	O	LCD	
24	COM3	COM 3	O	LCD	
25	BIAS	BIAS	O		Bias voltage output for voltage deviding resist
26	VLC0	VCC 0	I		Power source 0 input (5V).
27	VLC1	VCC 1	I		Power source 1 input (3.3V). Power source
28	VLC2	VCC 2	I		Power source 2 input (1.7V).
29	P40	K OUT 4	O	all	KEY matrix output. 1V period "L" pulse outp pressed. "L" when other cases.
30	P41	K OUT 5	O	all	
31	P42	$\overline{\text{SYSTEM RESET}}$	O	all	Output signal to reset each IC when power is t
32	P43	$\overline{\text{TALLY}}$	O	EVF	Tally LED ON/OFF signal. "L": ON.
33	VSS	VSS			GND
34	P50	K OUT 0	O	all	KEY matrix output. 1V period "L" pulse output when correspondin other cases.
35	P51	K OUT 1	O	all	
36	P52	K OUT 2	O	all	
37	P53	K OUT 3	O	all	
38	P00/INT4	$\overline{\text{BATT IN}}$	I		Clock select to 32 kHz when "L" and to 4.19 turned on. "L" is select.
39	P01/$\overline{\text{SCK}}$	$\overline{\text{SCK}}$	O	all	Serial clock output terminal, Serial clock (2 μ
40	P02/SO/SB0	DATA TO SLVE	O	all	Serial bus output terminal, Serial clock (2 μS)
41	P03/SI/SB1	DATA TO MSTR	I	all	Serial bus input terminal, Serial clock (2 μS)

3-11. MODE CONTROL MICROPROCESSOR PIN FUNCTION (IC501 ON LC-40P BOARD: µPD75316)

Pin No.	Port Name	Signal	I/O	Connection	Function
1	S12	S12	O	LCD	Segment terminal drive signal to LCD. (Four value output of 0, 1.7, 3.3, 5V)
2	S13	S13	O	LCD	
3	S14	S14	O	LCD	
4	S15	S15	O	LCD	
5	S16	S16	O	LCD	
6	S17	S17	O	LCD	
7	S18	S18	O	LCD	
8	S19	S19	O	LCD	
9	S20	S20	O		Not used.
10	S21	S21	O		
11	S22	S22	O		
12	S23	S23	O		
13	S24/BP0	$\overline{\text{EEPROM CS}}$	O		Chip select signal to EEPROM (IC403 on VS-93P board). 1/2V period "L" pulse.
14	S25/BP1	$\overline{\text{MK CS}}$	O		Not used.
15	S26/BP2	TG STBY	O	CAM	Power save control signal to timing generator (IC801 on VC-112P board). Normally "L".
16	S27/BP3	IN/$\overline{\text{OUT}}$	O	VA	Audio input/output control signal. "H": input. "L": output.
17	S28/BP4	TITLE CS	O	CAM	Chip select signal to titler. (IC711 on VC-112P board). 1V period "L" pulse.
18	S29/BP5	REMO CS	O		Chip select signal to sircs remote controller (IC503 on LC-40P board). 1V period "L" pulse.
19	S30/BP6	S RAM CS	O	CAM	Chip select signal to title memory (SRAM). (IC710 on VC-112P board). "H" when superimpose ON.
20	S31/BP7	$\overline{\text{CAM CS}}$	O	CAM	Chip select signal to camera controller (IC709 on VC-112P board). 1V period "L" pulse.
21	COM0	COM 0	O	LCD	Common terminal drive signal to LCD. (Four value output of 0, 1.7, 3.3, 5V)
22	COM1	COM 1	O	LCD	
23	COM2	COM 2	O	LCD	
24	COM3	COM 3	O	LCD	
25	BIAS	BIAS	O		Bias voltage output for voltage deviding resistor (5V).
26	VLC0	VCC 0	I		Power source 0 input (5V).
27	VLC1	VCC 1	I		Power source 1 input (3.3V). Power source for LCD dirve.
28	VLC2	VCC 2	I		Power source 2 input (1.7V).
29	P40	K OUT 4	O	all	KEY matrix output. 1V period "L" pulse output when corresponding key is pressed. "L" when other cases.
30	P41	K OUT 5	O	all	
31	P42	$\overline{\text{SYSTEM RESET}}$	O	all	Output signal to reset each IC when power is turned on. Normally "H".
32	P43	$\overline{\text{TALLY}}$	O	EVF	Tally LED ON/OFF signal. "L": ON.
33	VSS	VSS			GND
34	P50	K OUT 0	O	all	KEY matrix output. 1V period "L" pulse output when corresponding key is pressed. "L" when other cases.
35	P51	K OUT 1	O	all	
36	P52	K OUT 2	O	all	
37	P53	K OUT 3	O	all	
38	P00/INT4	$\overline{\text{BATT IN}}$	I		Clock select to 32 kHz when "L" and to 4.19 MHz with "H" when Battery is turned on. "L" is select.
39	P01/$\overline{\text{SCK}}$	$\overline{\text{SCK}}$	O	all	Serial clock output terminal, Serial clock (2 μS) communication.
40	P02/SO/SB0	DATA TO SLVE	O	all	Serial bus output terminal, Serial clock (2 μS) communication.
41	P03/SI/SB1	DATA TO MSTR	I	all	Serial bus input terminal, Serial clock (2 μS) communication.
42	P10/INT0	SYSTEM SYNC	I	all	(Edge detection vector interruption), System synchronization input port from CXP80624 (IC401 on VS-93P board).
43	P11/INT1	$\overline{\text{LI PRE END}}$	I		(Edge detection vector interruption), Lithium PRE END is selected with "L".
44	P12/INT2	$\overline{\text{LANC PWR ON}}$	I		Power on signal input from wired remote control. "L" when power switch pressed.
45	P13/TIO	TITLE BUSY	I	CAM	Titler IC (IC711 on VC-112P board) busy signal. Normally "L".
46	P20/PT00	VTR DD ON	O	PS	VTR power source (MOTOR 5V, VIDEO 5V, AUDIO 5V, EVF 5V, D5V, RP 5V, CORE 4V, D4V) control signal. "H" when power switch is in "VTR" or "CAMERA" position.
47	P21	CAM DD ON	O	PS	CAMERA power source (CAM 5V, +15V, –9V) control signal. "H" when power switch is in "CAMERA" position.
48	P22/PCL	$\overline{\text{VIDEO D/A CS}}$	O	VA	Serial data load signal to video circuit EVR (IC156, 158 on VS-93P board). 1V period "H" pulse.
49	P23/BUZ	AUTO LOCK LED	O		Not used.
50	P30/LCDCL	$\overline{\text{VIDEO CS}}$	O	VA	Chip select signal to Y process IC (IC151 on VS-93P board). 1V period "L" pulse.
51	P31/SYNC	$\overline{\text{VTR COSM CS}}$	O		Chip select signal to mechanism controller (IC401 on VS-93P board). 1V period "L" pulse.
52	P32	$\overline{\text{SG CS}}$	O	CAM	Chip select signal to sync generator (IC704 on VC-112P board). 1V period "L" pulse.
53	P33	$\overline{\text{CG STBY}}$	O		Standby signal for character generator (IC402 on VS-93P board). 1V period "H" pulse train.
54	VDD	VDD			VDD
55	XT1	XT1	I		SUB system clock. 32 kHz oscillation terminal.
56	XT2	XT2			
57	N.C.	N.C.			Connected to +5V.
58	X1	X1	I		Main system clock. 4.19 MHz oscillation terminal.
59	X2	X2	I		
60	P60/KK0	K IN 0	I	all	KEY matrix input. 1V period "L" pulse input when corresponding key is pressed. "H" when other case.
61	P61/KR1	K IN 1	I	all	
62	P62/KR2	K IN 2	I	all	
63	P63/KR3	K IN 3	I	all	
64	P70/KR4	K IN 4	I	all	
65	P71/KP5	K IN 5	I	all	
66	P72/KP6	K IN 6	I	all	
67	P73/KP7	$\overline{\text{CC DOWN}}$	I	MD	Cassette compartment lock switch input. "L": Lock.
68	$\overline{\text{RESET}}$	$\overline{\text{RESET}}$	I		System reset input. "L": Reset, Normally: "H".
69	S0	CLK CHK	O	LCD	Segment terminal drive signal to LCD. (Four value output of 0, 1.7, 3.3, 5V)
70	S1	S1	O	LCD	
71	S2	S2	O	LCD	
72	S3	S3	O	LCD	
73	S4	S4	O	LCD	
74	S5	S5	O	LCD	
75	S6	S6	O	LCD	
76	S7	S7	O	LCD	
77	S8	S8	O	LCD	
78	S9	S9	O	LCD	
79	S10	S10	O	LCD	
80	S11	S11	O	LCD	

3-12. INTERFACE

3-12-1. System Control – Video/Audio Block Interface (VS-93P Board)

NAME	I/O	No.	VTR MODE															CAMERA MODE					
			STOP	FF	REW	FR SEARCH		PB	PICTURE SEARCH		PB·PAUSE	FRAME	SLOW	SHUTTLE EDIT *17		REC *18	REC *18 PAUSE	STAND BY	REC	EDIT SEARCH		REC REVIEW	
						CUE	REVIEW		CUE	REVIEW				FWD	REV					FWD	RVS	FWD	RVS
SP/$\overline{\text{LP}}$	O	IC401 ㉗	*1	H	H	*2	*2	*2	*2	*2	*1	*1	*1	*2	*2	*19	H/L	H/L	*19	*2	*2	*2	*2
VA PB MODE	O	IC401 (72)	L	L	L	H	H	H	H	H	H	H	H	H	H	L	L	L	L	H	H	H	H
AUDIO MUTE *13	O	IC401 ㊼	L	L	L	H	H	L	H	H	H	H	H	H	H	L	L	L	L	H	H	L	H
VIDEO MUTE	O	IC401 ⑳	*14	*14	*14	*15	*15	*15	*15	*15	*15	*15	*15	*15	*15	*14	*14	L	L	*15	*15	*15	*15
CAM/$\overline{\text{LINE}}$	O	IC401 ㉖	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	H	H	L	L	L	L
JOG VD	O	IC401 ③	L	L	L	*5	*5	L	*5	*5	*5	*5	*5	L	*5	L	L	L	L	L	*5	L	*5
RP PB MODE	O	IC401 ①	H	H	H	H	H	H	H	H	H	H	H	H	H	L	H	H	L	H	H	H	H
$\overline{\text{FE ON}}$	O	IC401 ②	H	H	H	H	H	H	H	H	H	H	H	H	H	L	H	H	L	H	H	H	H
$\overline{\text{1/2 RF SWP}}$	O	IC401 (98)	H	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
RF SWP	O	IC401 (97)	L	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7
MUTE 2B	O	IC401 (89)	L	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	*8	*16	*16	*16	*16	*8	*8	*8	*8
MUTE 1B	O	IC401 (90)																					
MUTE 2A	O	IC401 (91)																					
MUTE 1A	O	IC401 (92)																					
FULL MUTE	O	IC401 ㊾	*20	*20	*20	L	L	*20	L	L	L	L	L	L	L	*20	*20	L	L	L	L	L	L

NAME	I/O	No.	VTR MODE															CAMERA MODE					
			STOP	FF	REW	FR SEARCH		PB	PICTURE SERACH		PB-PAUSE	FRAME	SLOW	SHUTTLE EDIT *17		REC *18	REC *18 PAUSE	STAND BY	REC	EDIT SEARCH		REC REVIEW	
						CUE	REVIEW		CUE	REVIEW				FWD	REV					FWD	RVS	FWD	RVS
$\overline{\text{REC2B}}$	O	IC401 (93)	H	H	H	H	H	H	H	H	H	H	H	H	H	*9	H	H	*9	H	H	H	H
$\overline{\text{REC1B}}$	O	IC401 (94)																					
$\overline{\text{REC2A}}$	O	IC401 (95)																					
$\overline{\text{REC1A}}$	O	IC401 (96)																					
SP/$\overline{\text{LP}}$ DET	I	IC401 (65)	L	*10	*10	*10	*10	L	*10	*10	*10			L	*10	H	H	H	H	L	*10	L	*10
CLOG DET	I	IC401 (82)	H	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	H	*11	*11	H	*11	*11	*11	*11
VTR SYNC	I	IC401 (64)	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12

*1. Outputs discrimination result of the mode just before. "H": SP mode, "L": LP mode.

*2. Outputs discrimination result of the playback tape. "H" : SP mode, "L": LP mode.

*5. False VD signal

*6. 12.5 Hz duty 50% pulse (synchronized with drum rotation)

*7. 25 Hz duty 50% pulse (synchronized with drum rotation)

*8. See time chart 1.

*9. See time chart 2.

*10. "H": SP recording area on tape. "L": LP recording area.

*11. "H": no recording area or drop out area on tape. Head clog detection input.

*12. Composite sync signal input separated from line input video signal, camera video signal or playback video signal. (polarity +)

*13. "H" during load/unload when camera mode.

*14. "L" when external input (video) present. "H" when other cases.

*15. "H" when tape no signal. "L" when other cases.

*16. See time chart 1.

*17. Edit search pressed when playback pause mode.

*18. E, Australian model only.

*19. By REC MODE switch. "H": SP mode, "L": LP mode.

*20. "H" when no video signal. "L" when other cases.

3-12-2. System Control – Servo Block Interface

NAME	I/O	No.	VTR MODE															CAMERA MODE					
			STOP	FF	REW	FR SEARCH		PB	PICTURE SEARCH		PB· PAUSE	FRAME	SLOW	SHUTTLE EDIT *13		REC *14	REC *14 PAUSE	STAND BY	REC	EDIT SEARCH		REC REVIEW	
						CUE	REVIEW		CUE	REVIEW				FWD	RVS					FWD	RVS	FWD	RVS
T.REEL FG	I	IC401 (60)	–	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	–	–	*1	*1	*1	*1	*1
S.REEL FG	I	IC401 (59)	–	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	–	–	*1	*1	*1	*1	*1
ATF ERROR	I	IC401 (58)	–	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2
DRUM PG	I	IC401 (66)	–	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3
DRUM FG	I	IC401 (67)	–	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
CAP FG/ CFG HMS	I	IC401 (68), (75)	–	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5
CAP ON	O	IC401 (99)	L	H	H	H	H	H	H	H	L	*8	*8	*15	*15	H	L	L	H	H	H	H	H
REF PILOT	O	IC401 (83)	*7	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
RP PB MODE	O	IC401 ①	H	H	H	H	H	H	H	H	H	H	H	H	H	L	H	H	L	H	H	H	H
DRUM FWD/$\overline{\text{RVS}}$ *10	O	IC401 ㉝	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H
CAP FWD/ $\overline{\text{RVS}}$	O	IC401 (100)	L	H	L	H	L	H	H	L	L	*8	*8	H	L	H	L	L	H	H	L	H	L
DRUM PWM	O	IC401 (74)	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9
CAP PWM	O	IC401 (73)	L	*9	*9	*9	*9	*9	*9	*9	L	*9	*9	*9	*9	*9	L	L	*9	*9	*9	*9	*9
$\overline{\text{LM LIM CONT}}$ *11	O	IC401 ㉛	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
DRUM ON *12	O	IC401 ㉜	L	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H

*1. Pulse input amplitude modulated by reel rotation. (200 msec period when REC/PB)
*2. ATF error voltage input
*3. One PG pulse input per one drum rotation, approx. 37.5 Hz.
*4. Six FG pulses input per one drum rotation, approx. 225 Hz.
*5. 360 FG pulses input per one capstan rotation. Approx. 1145.5 Hz when REC/PB (SP).
*6. Four frequencies output synchronized with drum rotation. f1=101.0 kHz, f2=117.2 kHz, f3=162.8 kHz and f4=146.5 kHz
*7. f2 (117.2 kHz) output
*8. "H" pulse when tape run.
*9. 21.5 μsec period PWM signal
*10. Normally "H". Temporary "L" when load/unload (drum reverse rotation).
*11. Temporary "H" when cassette loading (finger catch protection).
*12. "H": approx. 1.3 Vdc
*13. Edit search pressed when playback pause mode.
*14. E, Australian model only.

TR MODE								CAMERA MODE					
SEARCH	PB·PAUSE	FRAME	SLOW	SHUTTLE EDIT *13		REC *14	REC *14 PAUSE	STAND BY	REC	EDIT SEARCH		REC REVIEW	
REVIEW				FWD	RVS					FWD	RVS	FWD	RVS
*1	*1	*1	*1	*1	*1	*1	–	–	*1	*1	*1	*1	*1
*1	*1	*1	*1	*1	*1	*1	–	–	*1	*1	*1	*1	*1
*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2
*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3
*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5
H	L	*8	*8	*15	*15	H	L	L	H	H	H	H	H
*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
H	H	H	H	H	H	L	H	H	L	H	H	H	H
H	H	H	H	H	H	H	H	H	H	H	H	H	H
L	L	*8	*8	H	L	H	L	L	H	H	L	H	L
*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9
*9	L	*9	*9	*9	*9	*9	L	L	*9	*9	*9	*9	*9
L	L	L	L	L	L	L	L	L	L	L	L	L	L
H	H	H	H	H	H	H	H	H	H	H	H	H	H

*7. f2 (117.2 kHz) output
*8. "H" pulse when tape run.
*9. 21.5 μsec period PWM signal
*10. Normally "H". Temporary "L" when load/unload (drum reverse rotation).
*11. Temporary "H" when cassette loading (finger catch protection).
*12. "H": approx. 1.3 Vdc
*13. Edit search pressed when playback pause mode.
*14. E, Australian model only.

TIME CHART 1

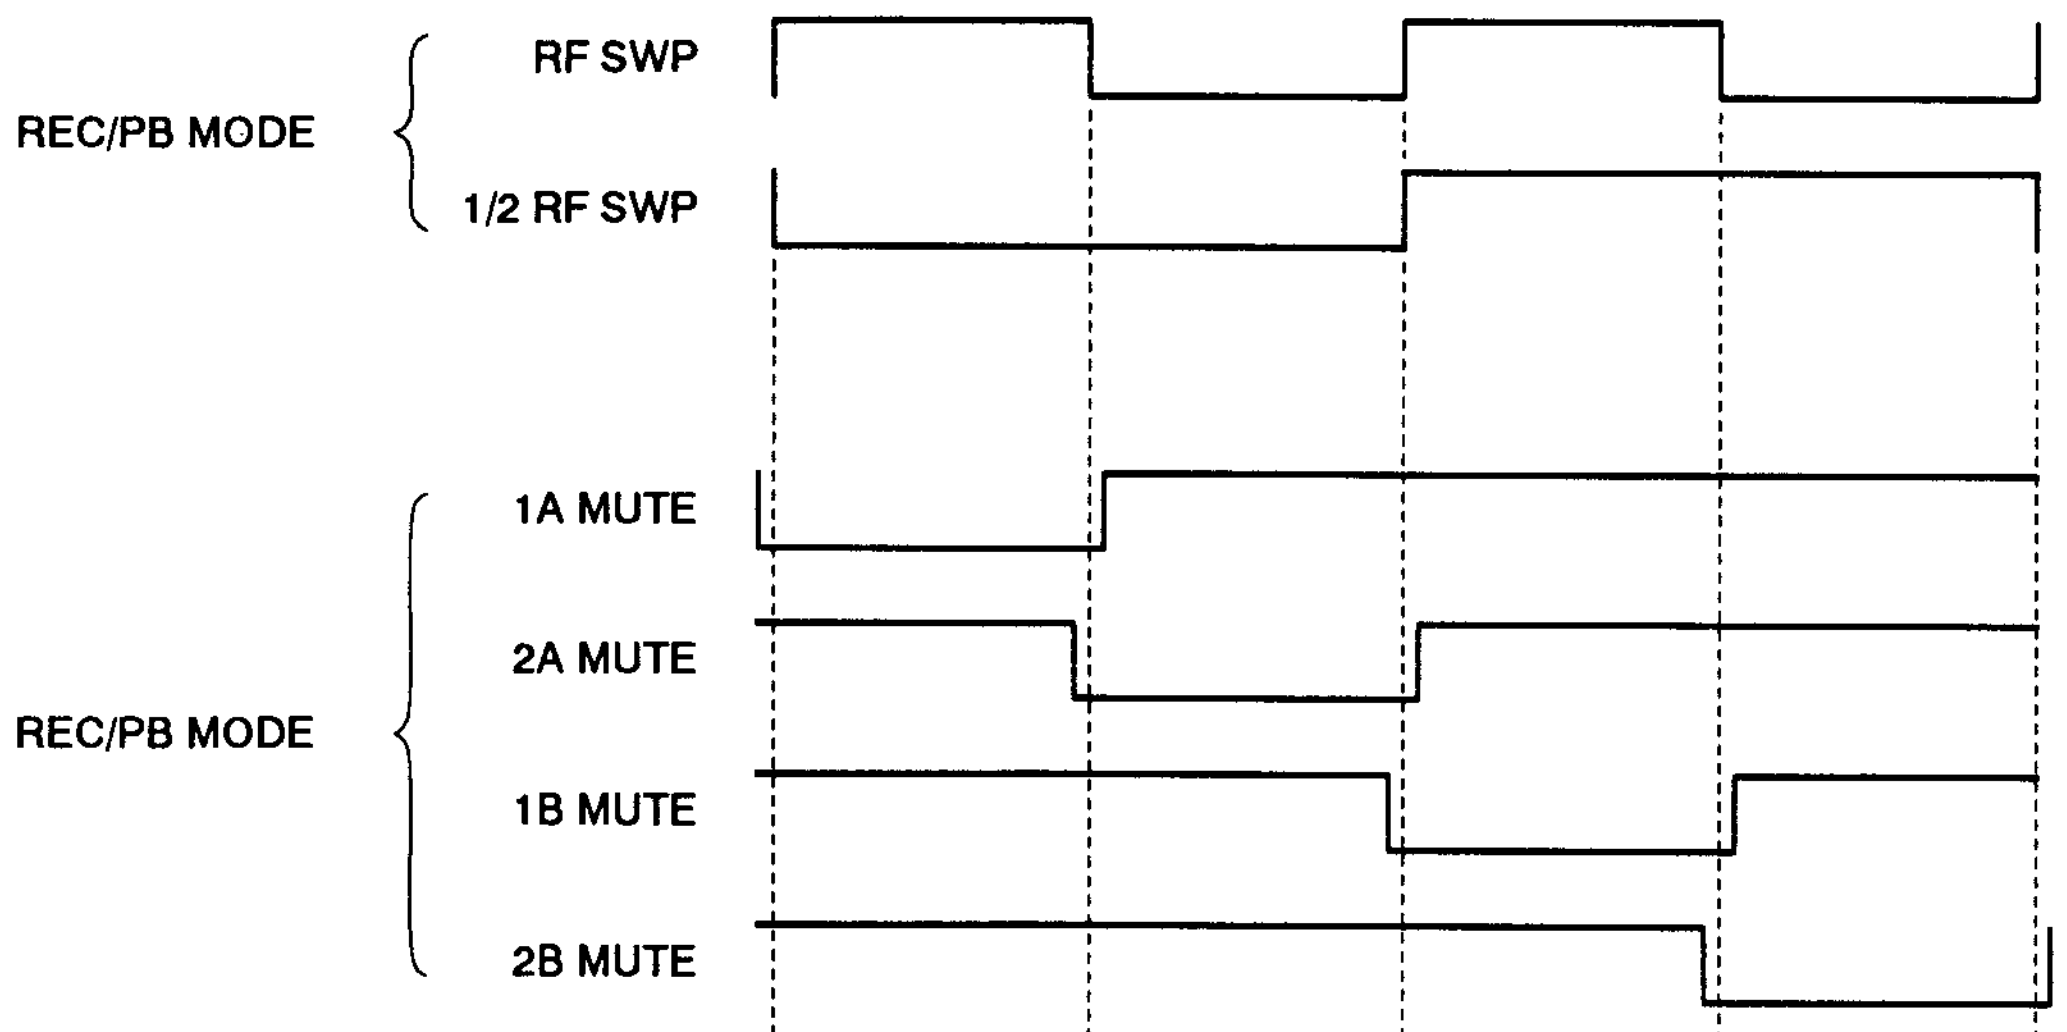
REC/PB MODE
RF SWP
1/2 RF SWP
REC/PB MODE
1A MUTE
2A MUTE
1B MUTE
2B MUTE

TIME CHART 2

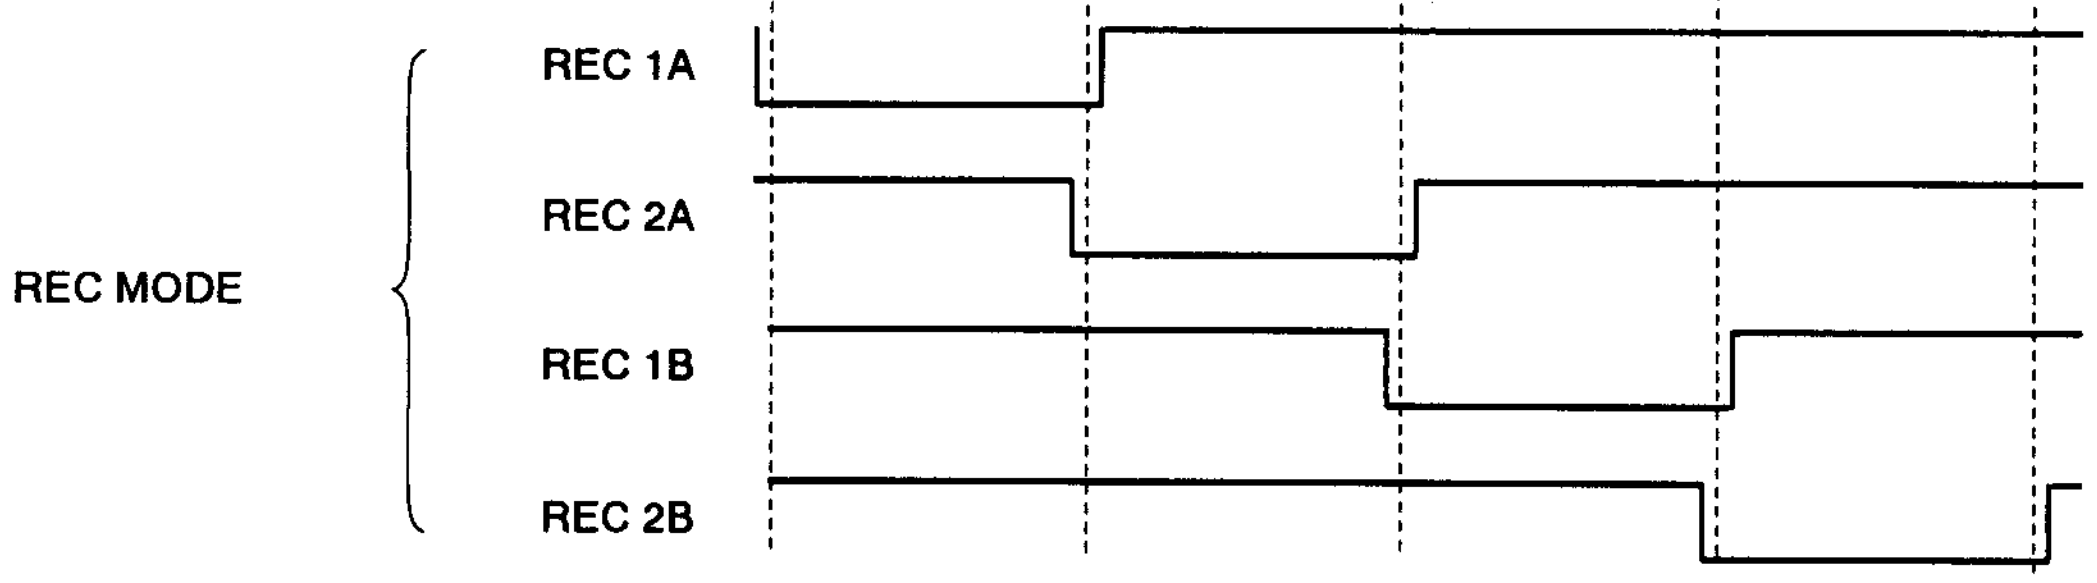
REC MODE
REC 1A
REC 2A
REC 1B
REC 2B

3-13. AUDIO BLOCK DIAGRAM

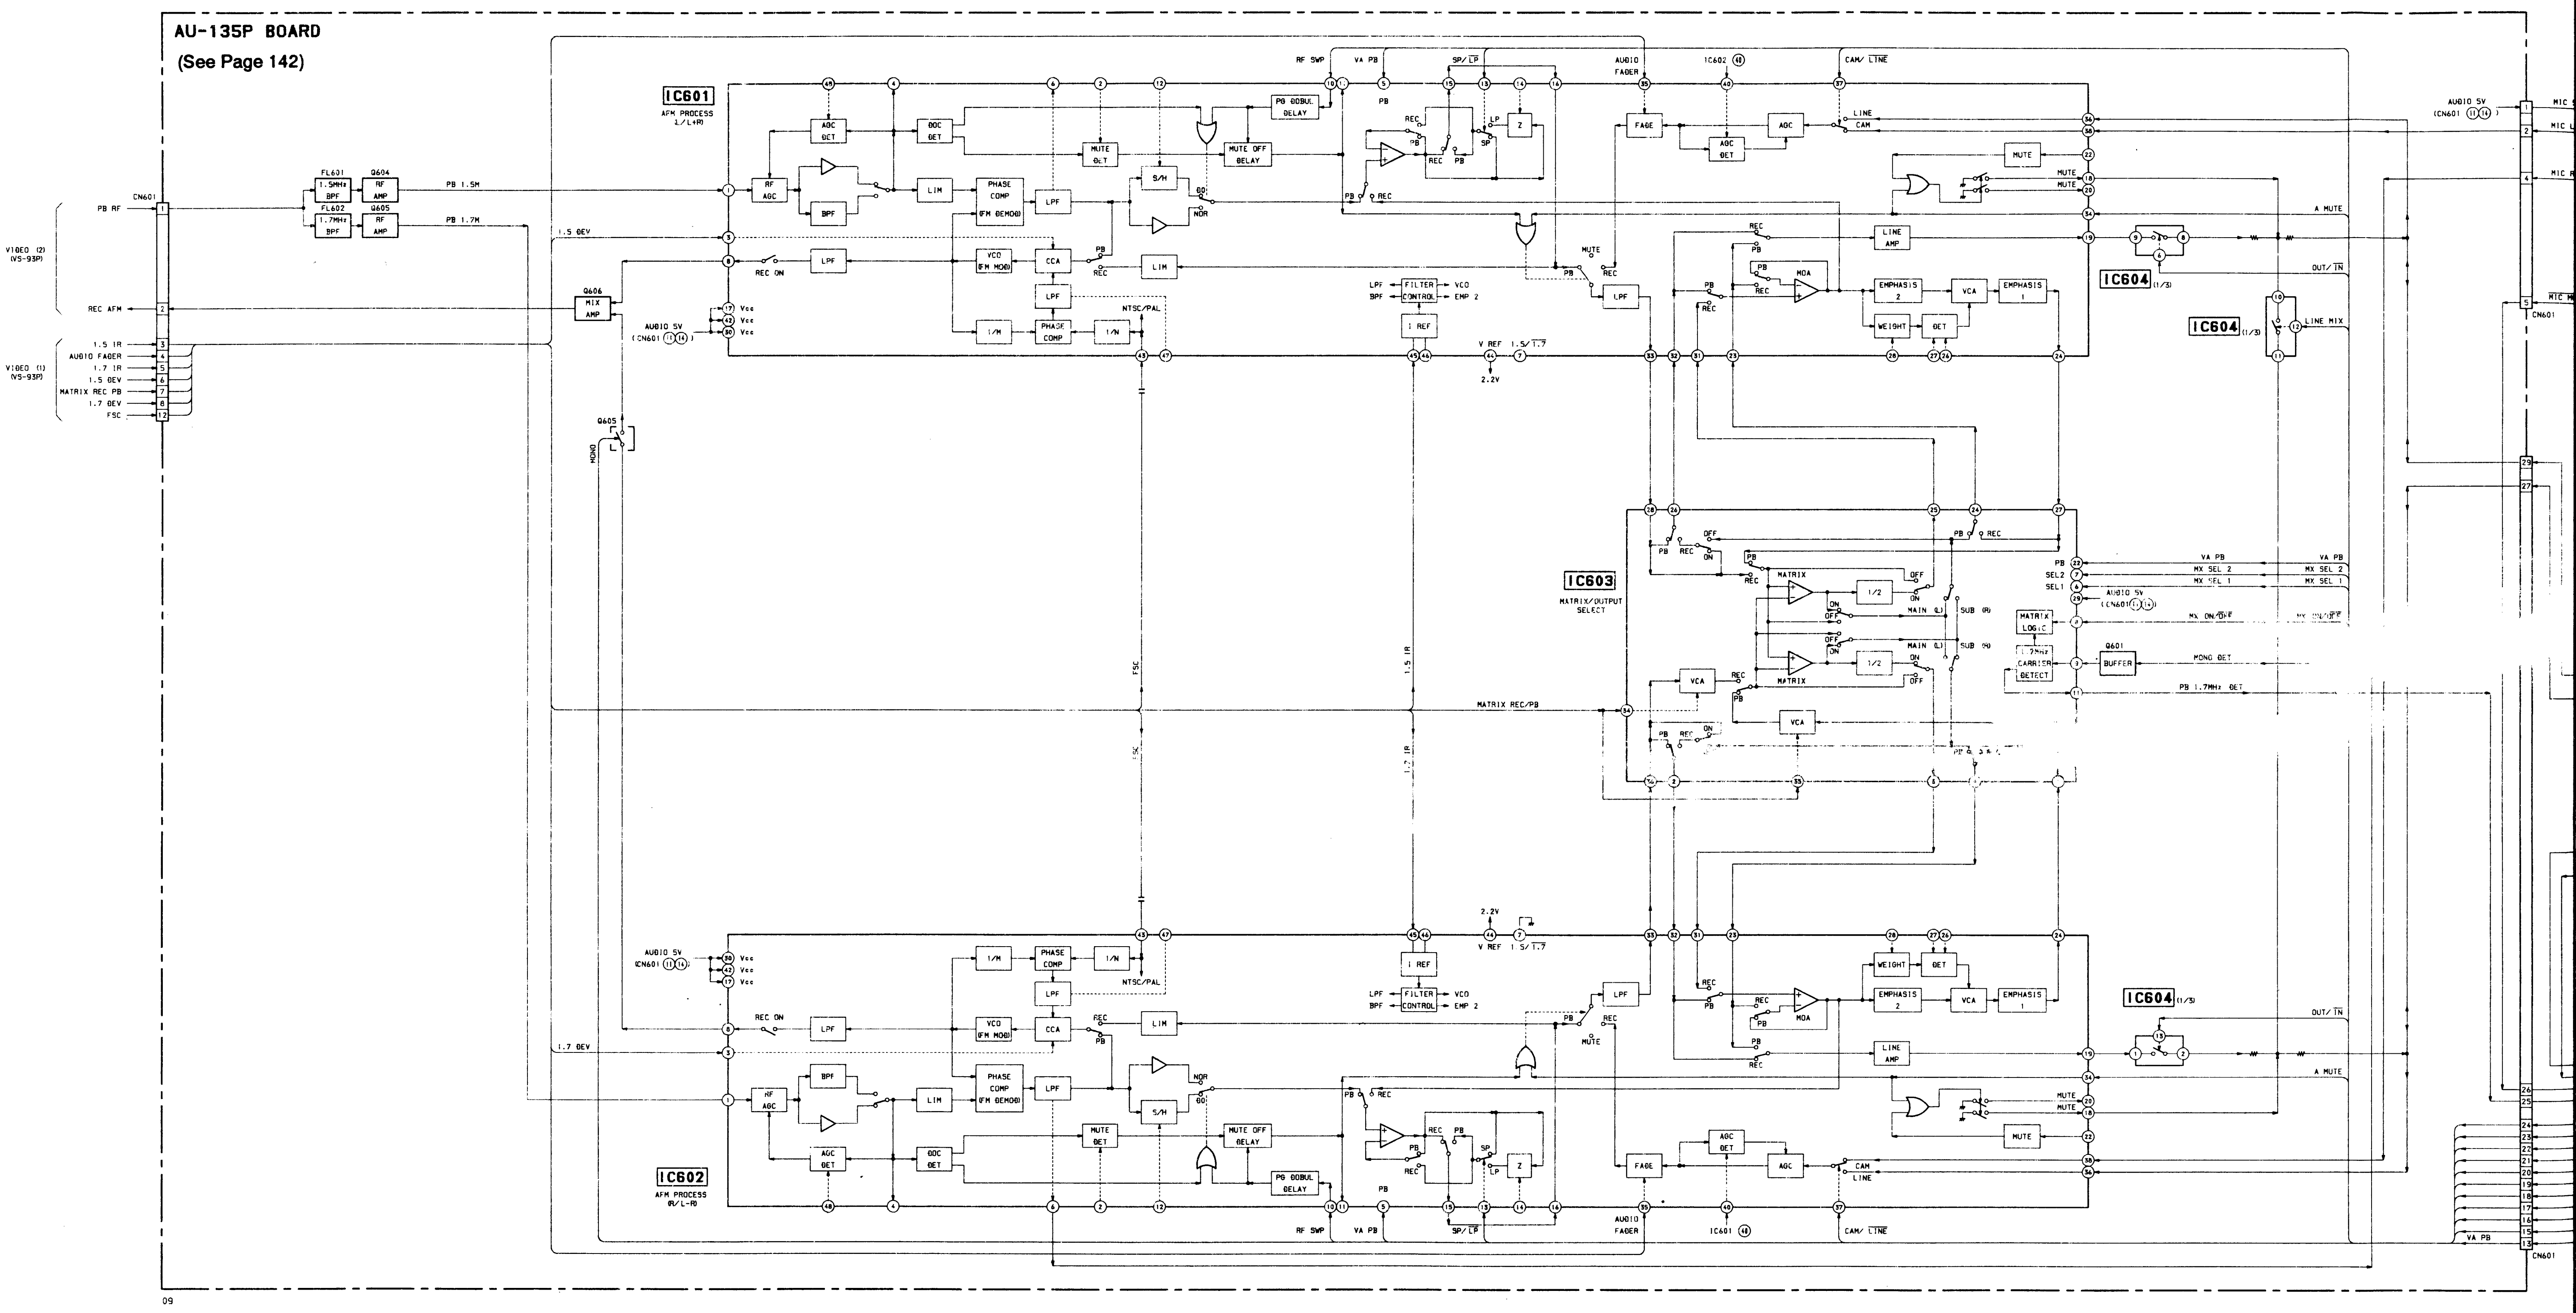
AU-135P BOARD
(See Page 142)
IC601
AFM PROCESS
1/L+R
IC602
AFM PROCESS
R/L-R
IC603
MATRIX/OUTPUT SELECT
IC604 (1/3)
IC604 (2/3)
IC604 (3/3)
CN601
PB RF
REC AFM
VIDEO (2) (VS-93P)
VIDEO (1) (VS-93P)
1.5 IR
AUDIO FADER
1.7 IR
1.5 DEV
MATRIX REC PB
1.7 DEV
FSC
FL601 1.5MHz BPF
FL602 1.7MHz BPF
Q604 RF AMP
Q605 RF AMP
PB 1.5M
PB 1.7M
1.5 DEV
1.7 DEV
Q606 MIX AMP
Q605
MONO
AUDIO 5V (CN601 ⑪⑭)
Vcc
RF AGC
AGC DET
BPF
DOC DET
LIM
PHASE COMP (FM DEMOD)
LPF
VCO (FM MOD)
CCA
I/N
PHASE COMP
NTSC/PAL
MUTE DET
S/H
NOR
MUTE OFF DELAY
PB DOBUL DELAY
REC ON
REC
PB
RF SWP
VA PB
SP/LP
Z
FILTER CONTROL
LPF
BPF
VCO
EMP 2
I REF
V REF 1.5/1.7
2.2V
AUDIO FADER
IC602 ㊶
IC601 ㊶
CAM/LINE
FADE
AGC
AGC DET
LINE
CAM
MUTE
LINE AMP
MOA
EMPHASIS 2
EMPHASIS 1
VCA
WEIGHT
DET
A MUTE
OUT/IN
LINE MIX
FSC
1.5 IR
1.7 IR
MATRIX REC/PB
MATRIX
1/2
ON
OFF
MAIN (L)
MAIN (R)
SUB (R)
SUB (L)
MATRIX LOGIC
1.7MHz CARRIER DETECT
Q601 BUFFER
MONO DET
PB 1.7MHz DET
SEL2
SEL1
VA PB
MX SEL 2
MX SEL 1
MX ON/OFF
AUDIO 5V (CN601 ⑪⑭)
MIC
09

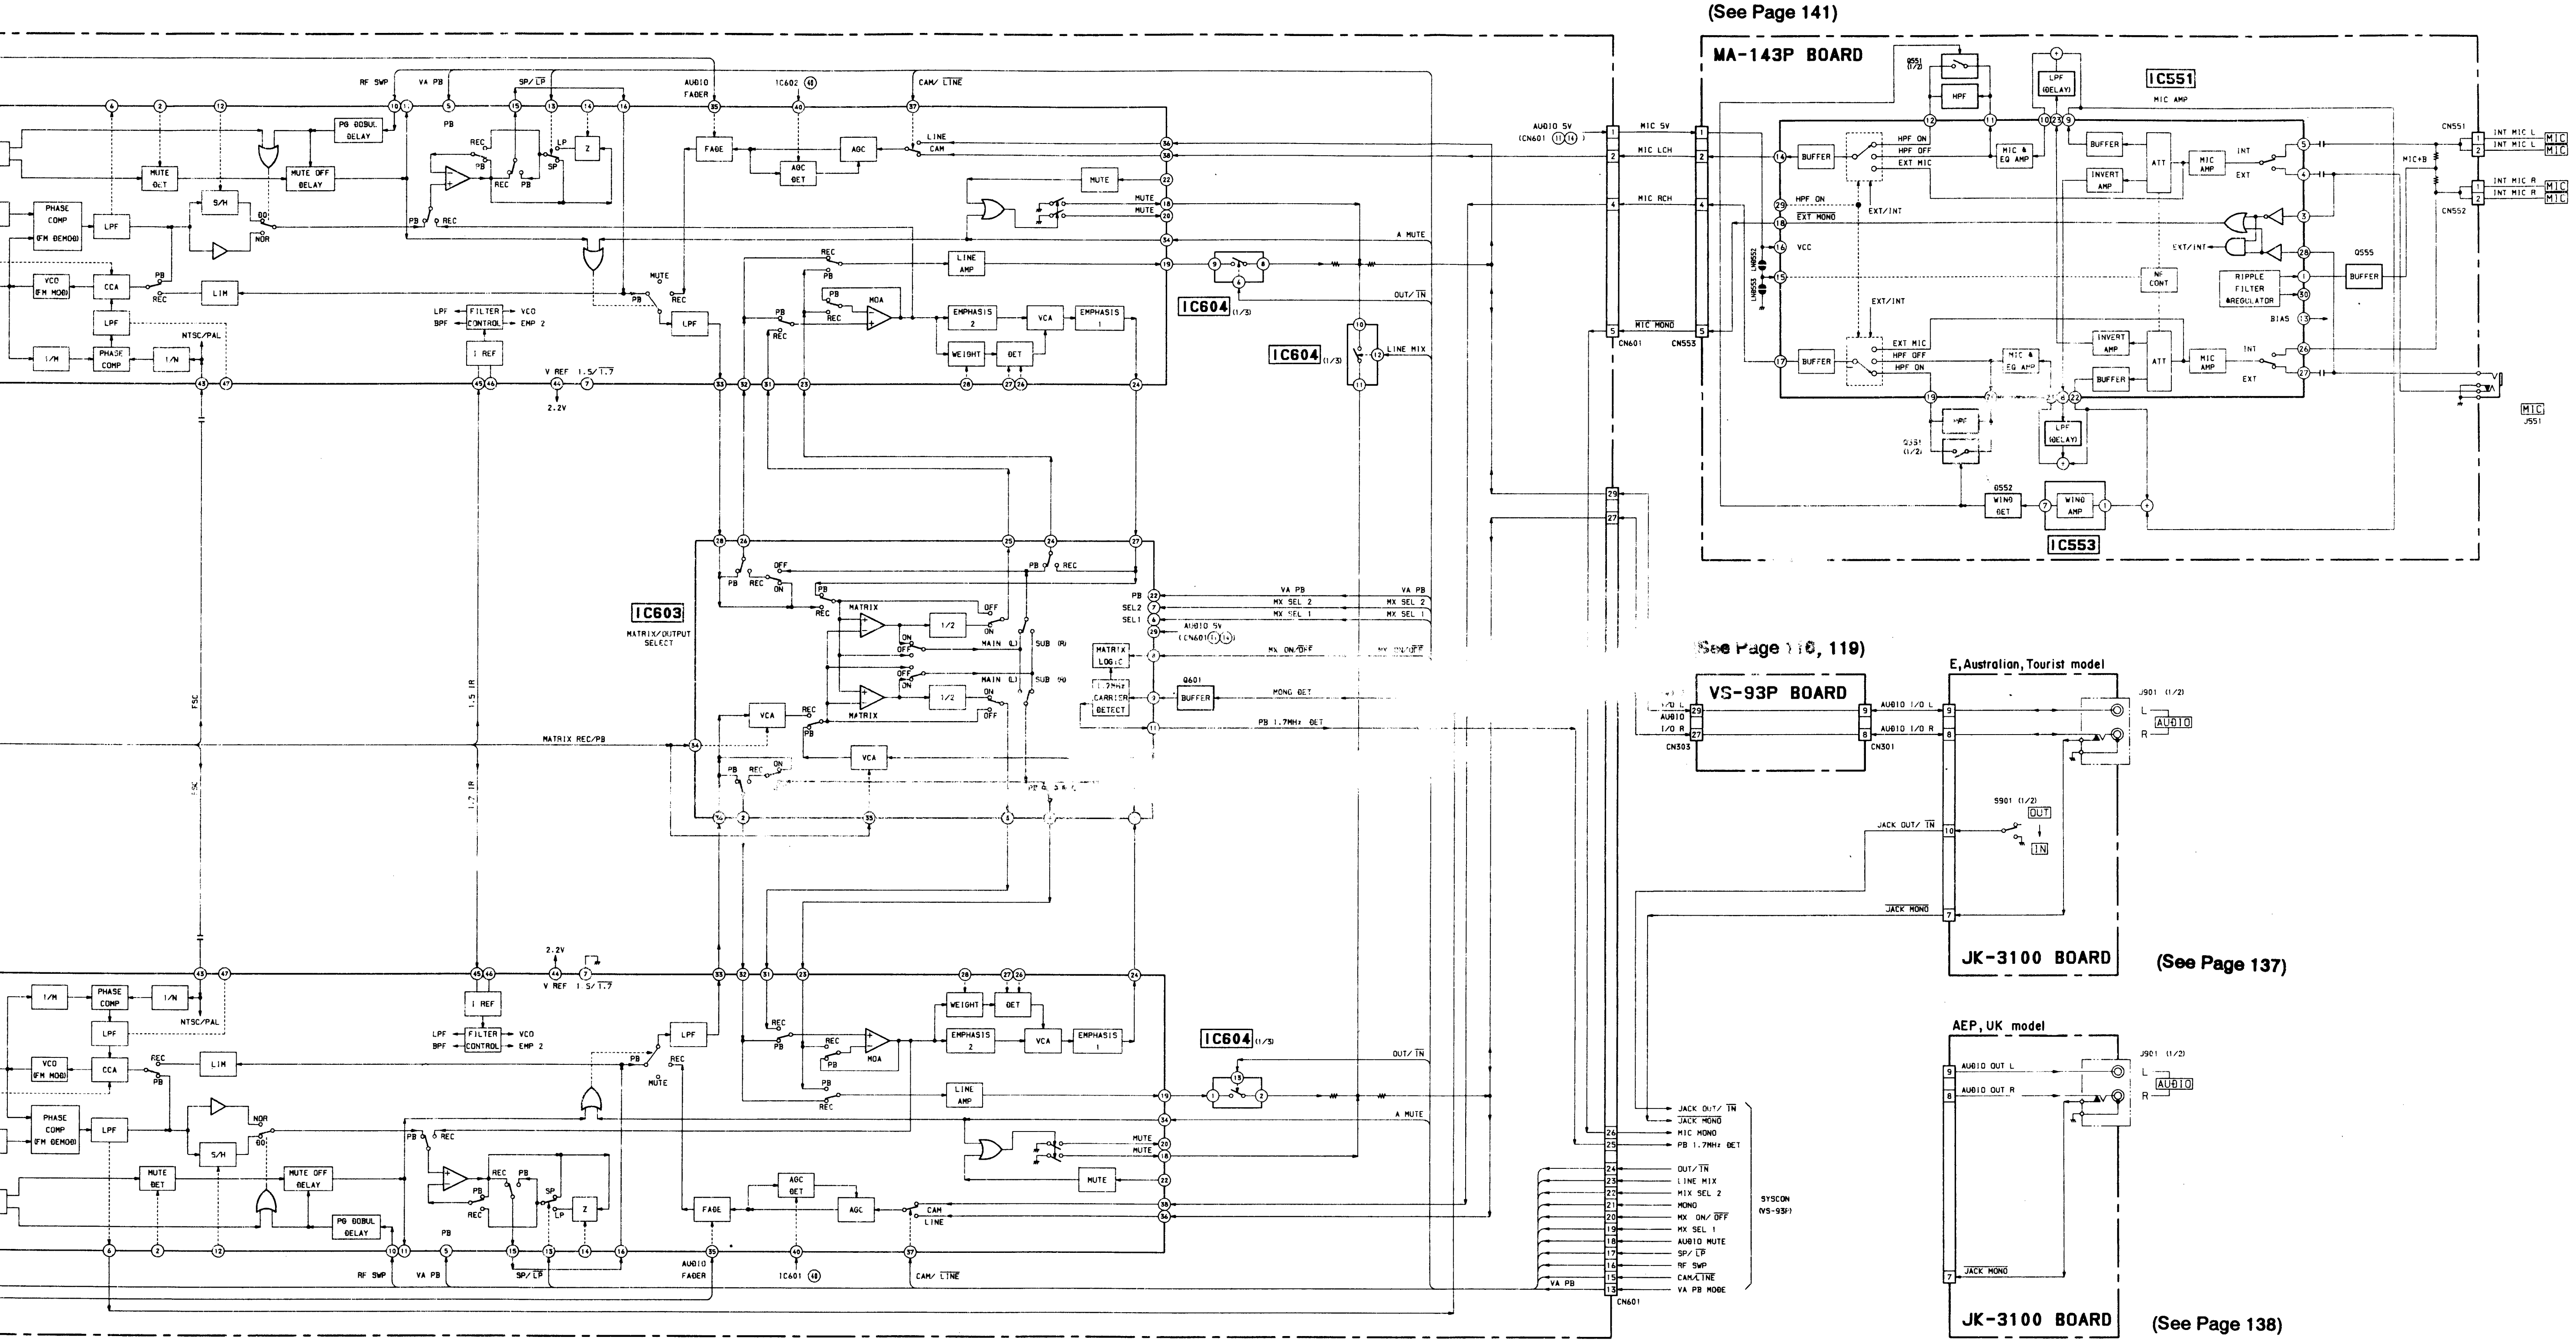
(See Page 141)
MA-143P BOARD
IC551
MIC AMP
IC553
WIND DET
WIND AMP
BUFFER
ATT
INVERT AMP
NF CONT
RIPPLE FILTER &REGULATOR
MIC & EQ AMP
HPF
LPF (DELAY)
CN551
CN552
INT MIC L
INT MIC R
MIC
J551
MIC 5V
MIC LCH
MIC RCH
MIC MONO
CN601
CN553
AUDIO 5V
IC603
MATRIX/OUTPUT SELECT
IC604
MATRIX LOGIC
CARRIER DETECT
Q601
FADE
AGC
AGC DET
MUTE
LINE AMP
EMPHASIS 1
EMPHASIS 2
VCA
WEIGHT
DET
NOA
LPF
LIM
CCA
VCO (FM MOD)
PHASE COMP (FM DEMOD)
S/H
MUTE DET
MUTE OFF DELAY
PB DOBUL DELAY
FILTER CONTROL
I REF
V REF
MATRIX REC/PB
A MUTE
OUT/IN
LINE MIX
VA PB
MX SEL 2
MX SEL 1
MX ON/OFF
MONO DET
PB 1.7MHz DET
RF SWP
SP/LP
AUDIO FADER
CAM/LINE
(See Page 118, 119)
VS-93P BOARD
AUDIO I/O L
AUDIO I/O R
CN303
CN301
E, Australian, Tourist model
J901 (1/2)
AUDIO
S901 (1/2)
OUT
IN
JACK OUT/IN
JACK MONO
JK-3100 BOARD
(See Page 137)
AEP, UK model
AUDIO OUT L
AUDIO OUT R
JK-3100 BOARD
(See Page 138)
SYSCON (VS-93P)
MIC MONO
MIX SEL 2
MONO
MX ON/OFF
MX SEL 1
AUDIO MUTE
VA PB MODE

3-14. EVF BLOCK DIAGRAM

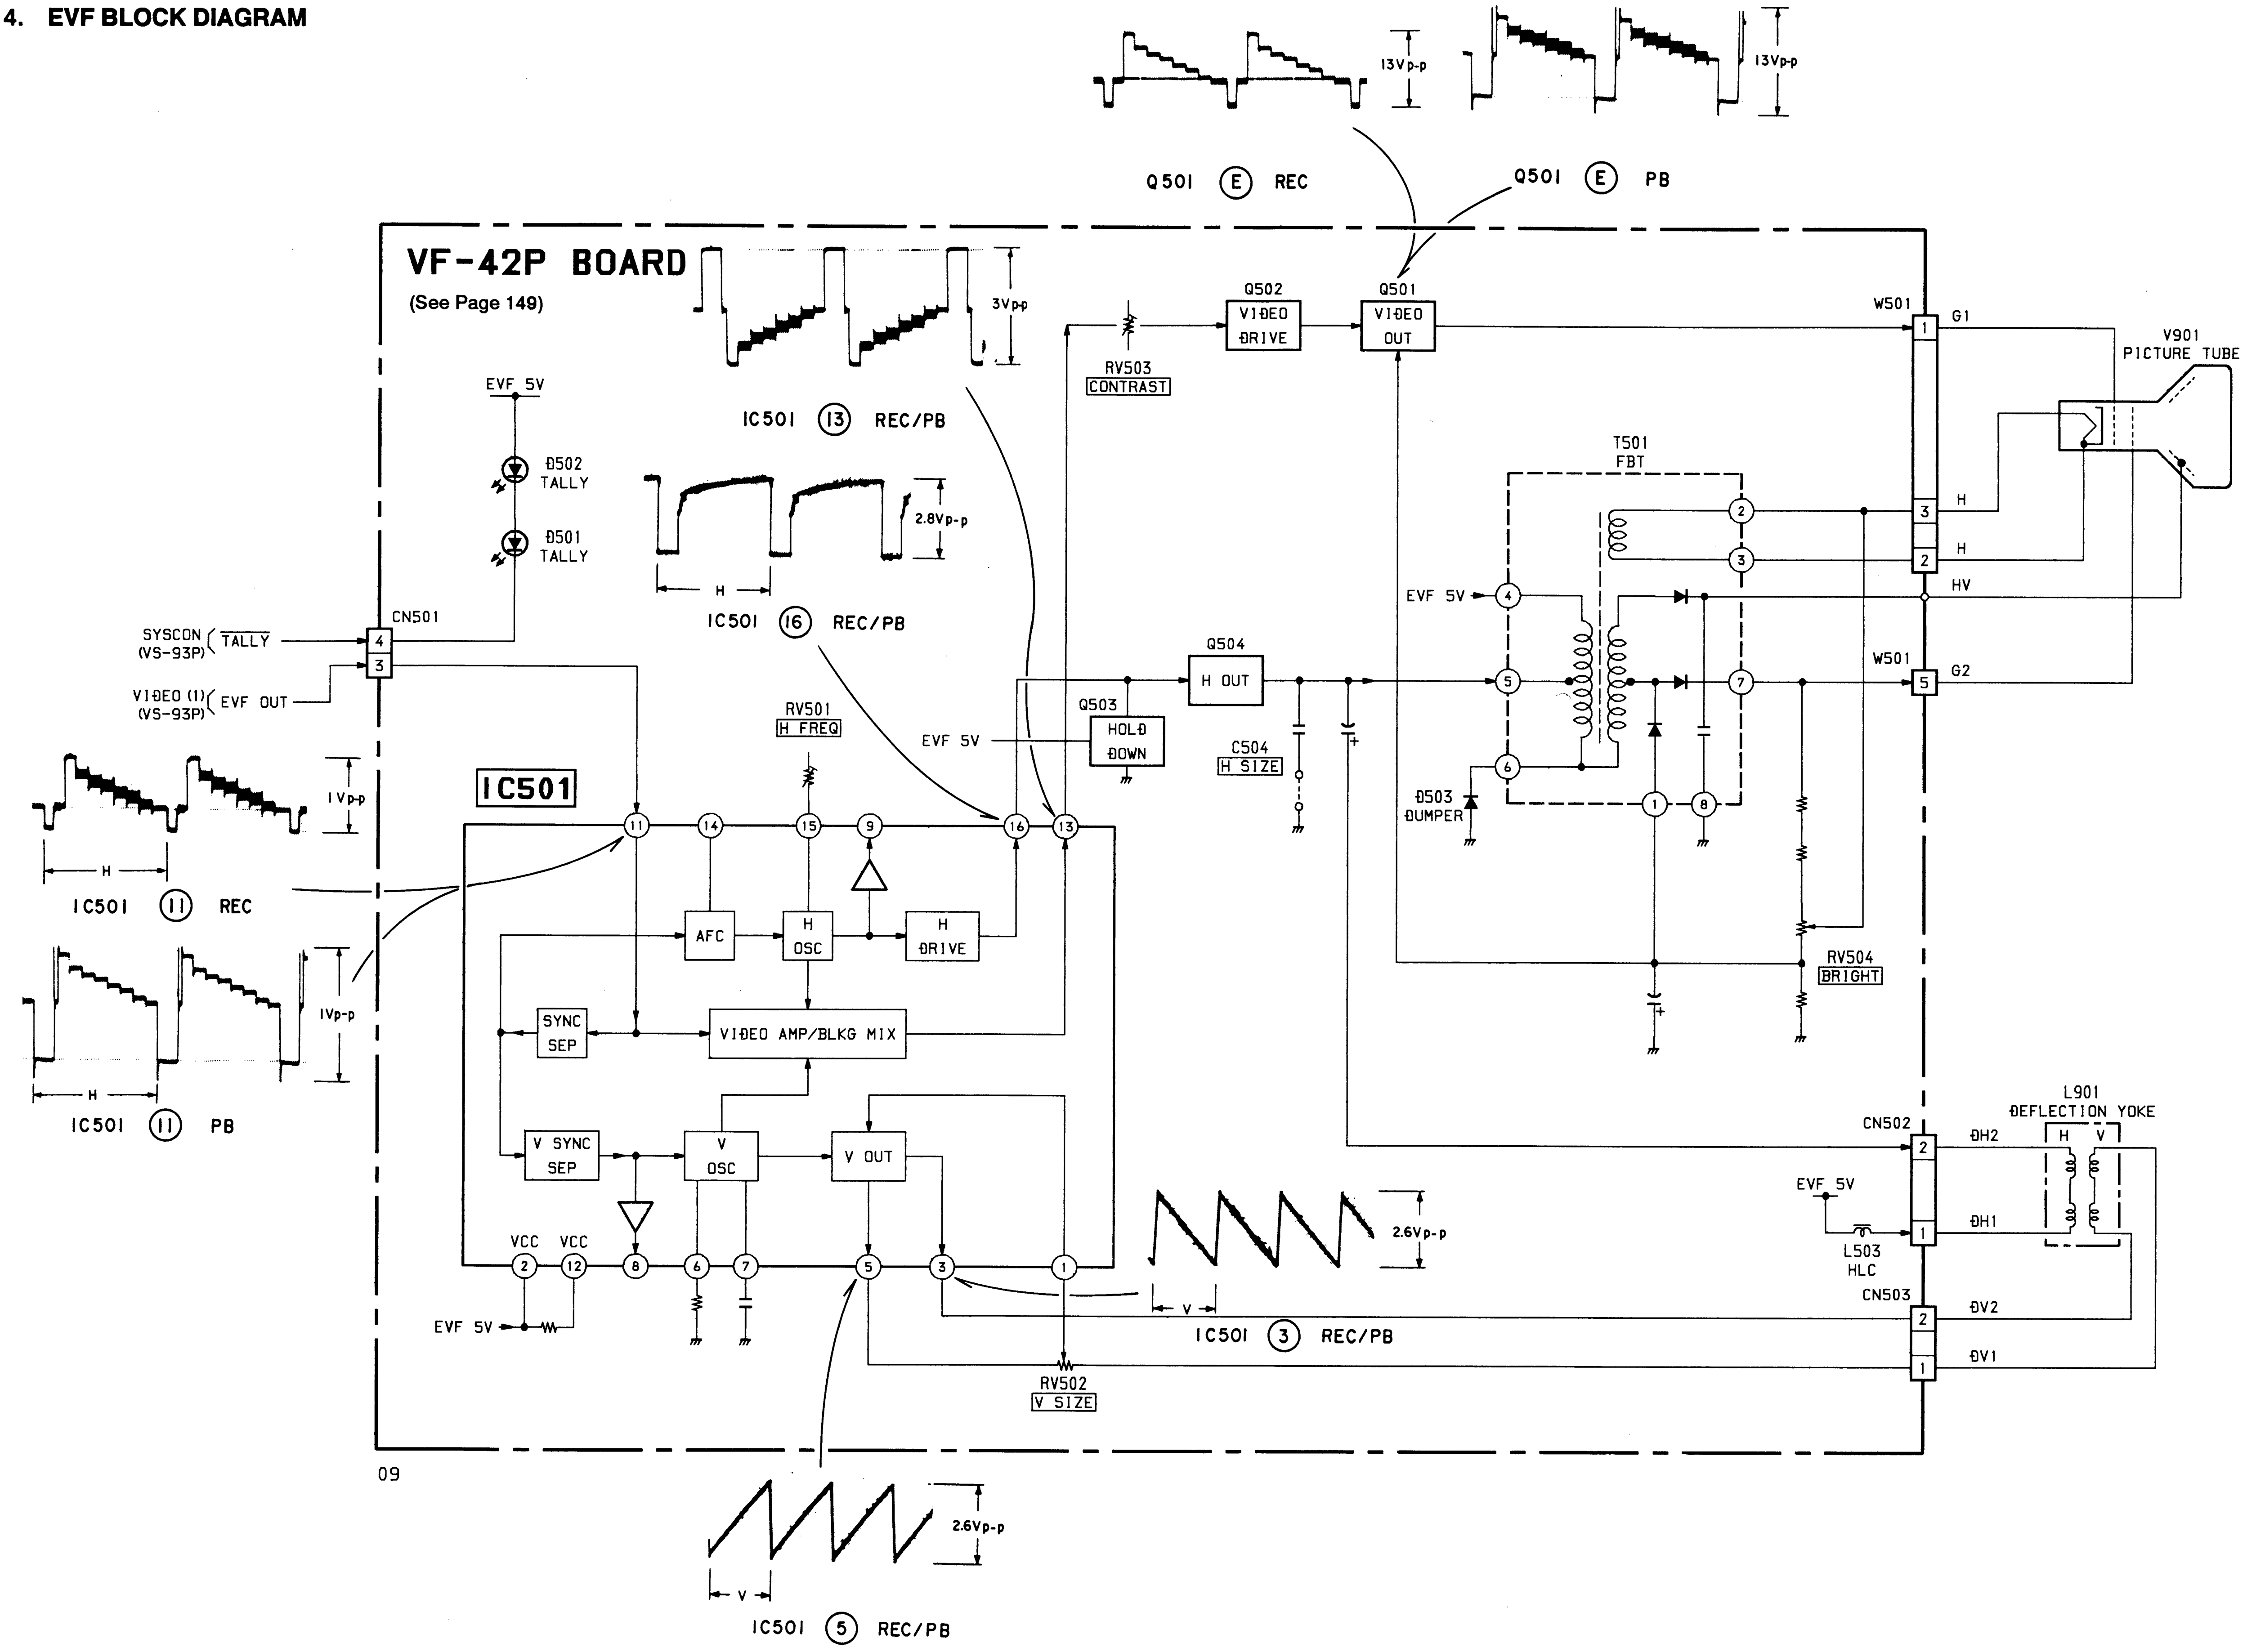

VF-42P BOARD
(See Page 149)
Q501 E REC
Q501 E PB
13Vp-p
13Vp-p
3Vp-p
IC501 13 REC/PB
2.8Vp-p
H
IC501 16 REC/PB
EVF 5V
D502 TALLY
D501 TALLY
CN501
SYSCON (VS-93P) TALLY
VIDEO (1) (VS-93P) EVF OUT
1Vp-p
H
IC501 11 REC
1Vp-p
H
IC501 11 PB
IC501
RV501 H FREQ
AFC
H OSC
H DRIVE
SYNC SEP
VIDEO AMP/BLKG MIX
V SYNC SEP
V OSC
V OUT
VCC
VCC
EVF 5V
RV503 CONTRAST
Q502 VIDEO DRIVE
Q501 VIDEO OUT
Q504 H OUT
Q503 HOLD DOWN
EVF 5V
C504 H SIZE
T501 FBT
EVF 5V
D503 DUMPER
RV504 BRIGHT
W501
G1
H
H
HV
W501
G2
V901 PICTURE TUBE
CN502
DH2
DH1
L901 DEFLECTION YOKE
H
V
EVF 5V
L503 HLC
CN503
DV2
DV1
2.6Vp-p
V
IC501 3 REC/PB
RV502 V SIZE
2.6Vp-p
V
IC501 5 REC/PB
09

3-15. POWER BLOCK DIAGRAM

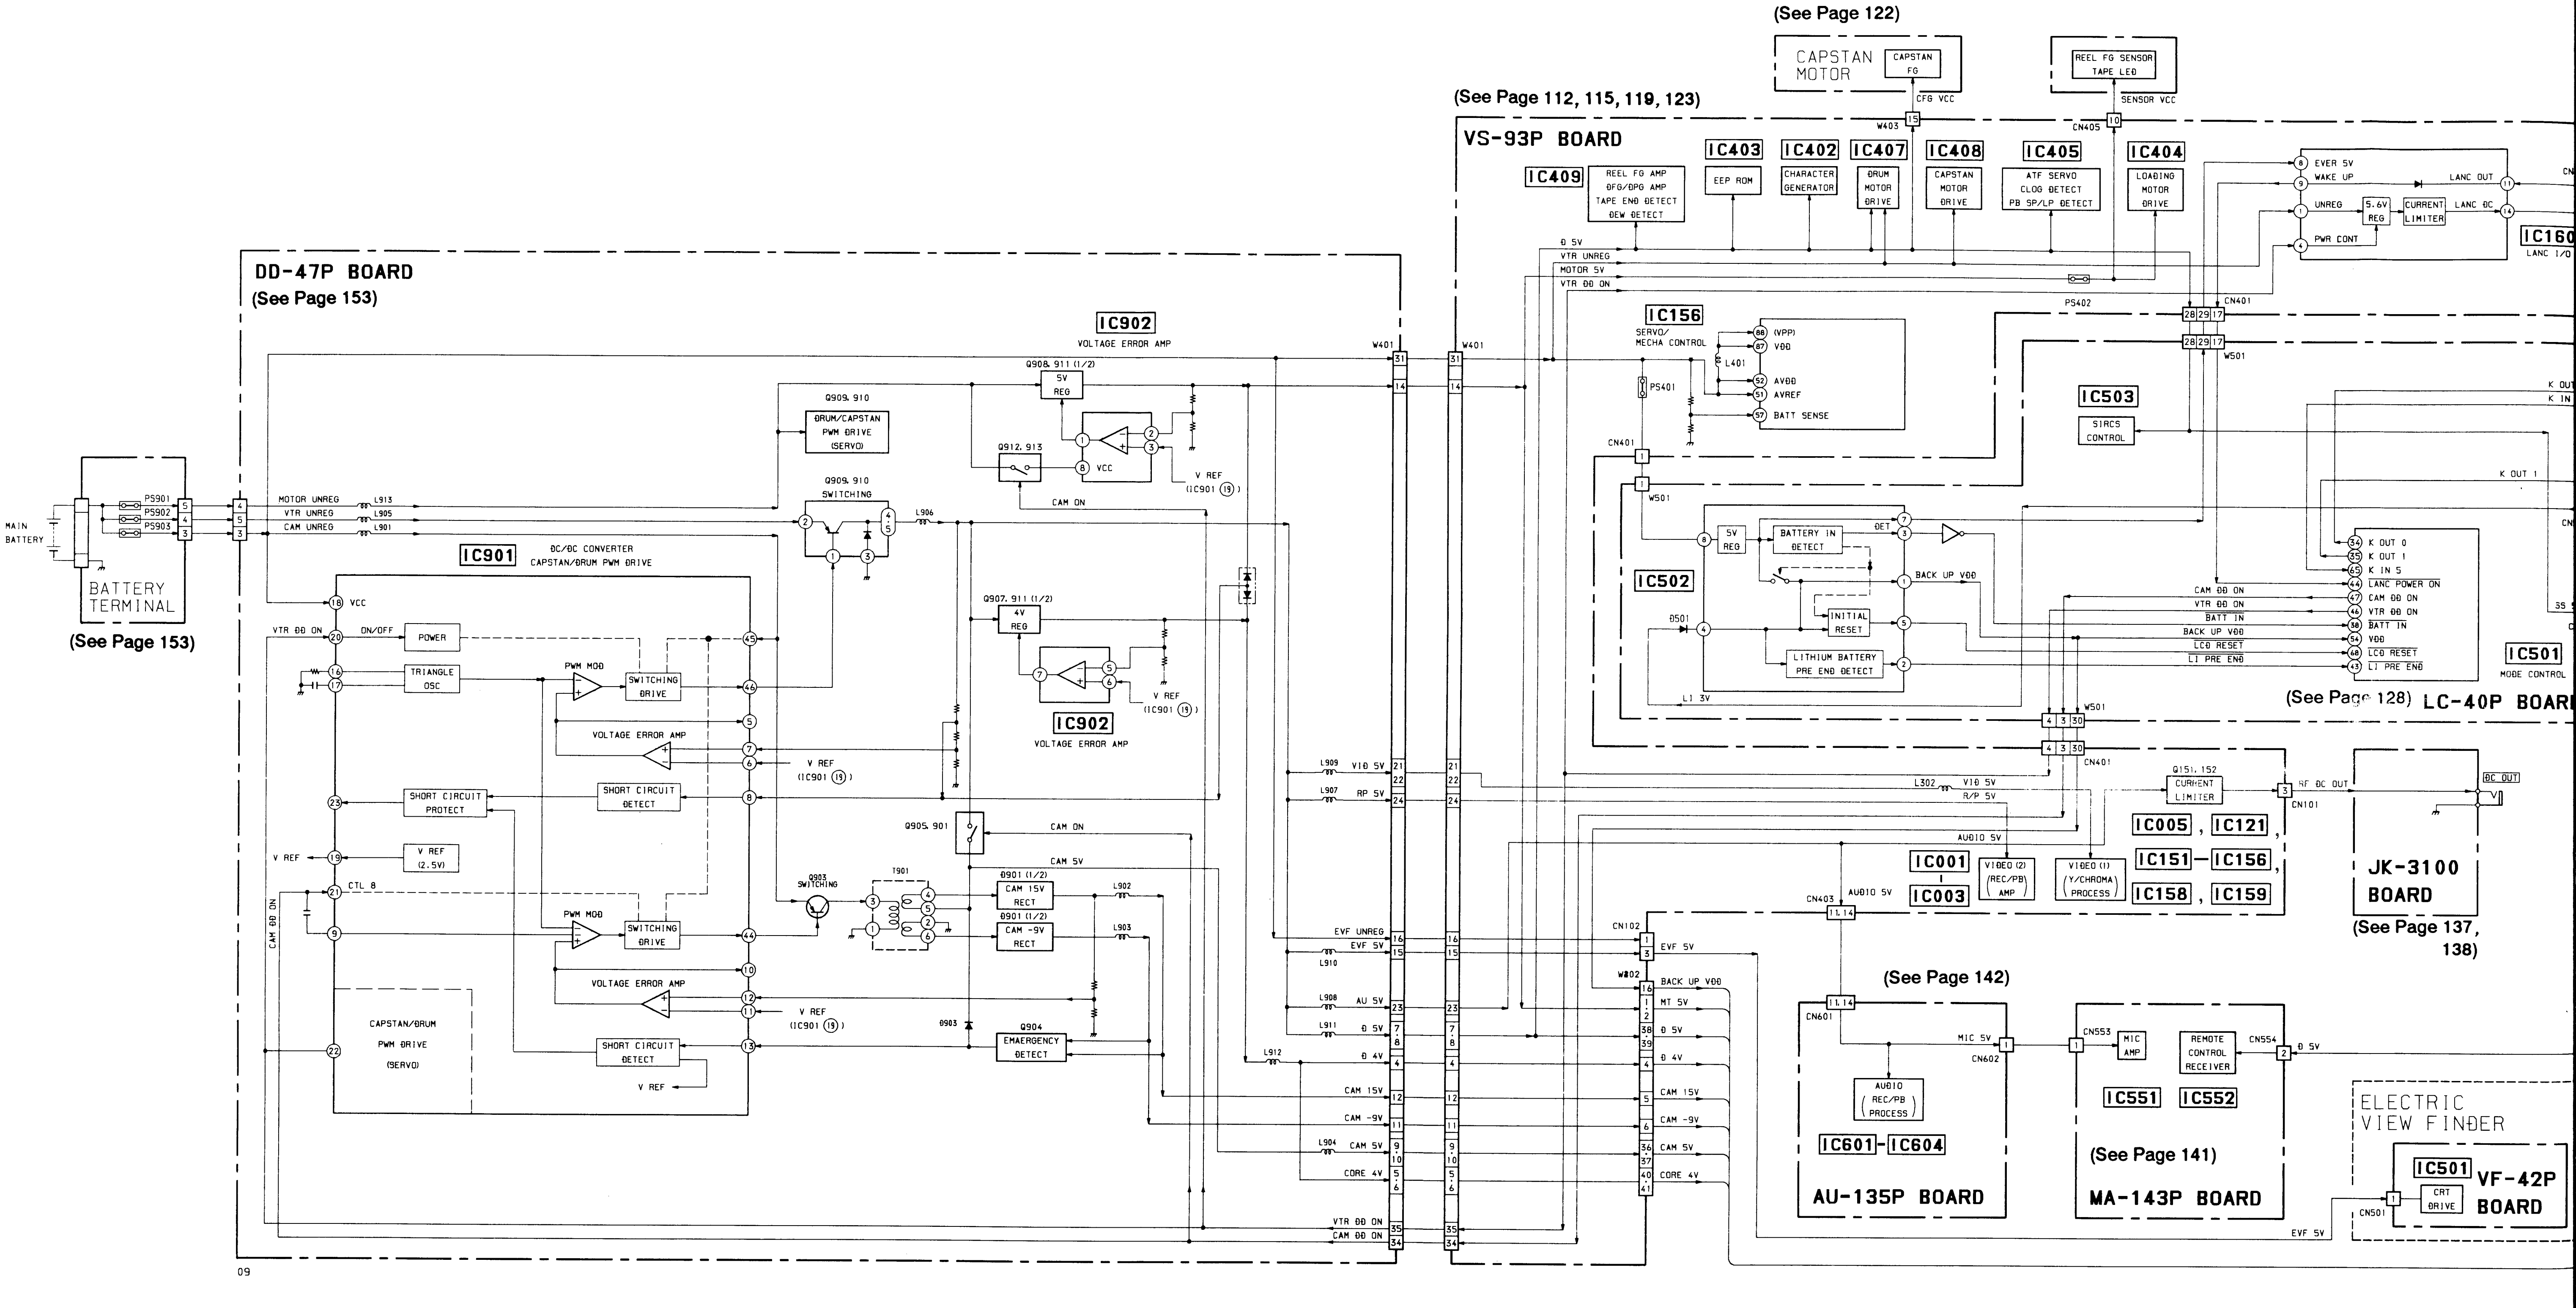
(See Page 122)
CAPSTAN MOTOR
CAPSTAN FG
CFG VCC
REEL FG SENSOR TAPE LED
SENSOR VCC
(See Page 112, 115, 119, 123)
VS-93P BOARD
IC409
REEL FG AMP DFG/DPG AMP TAPE END DETECT DEW DETECT
IC403
EEP ROM
IC402
CHARACTER GENERATOR
IC407
DRUM MOTOR DRIVE
IC408
CAPSTAN MOTOR DRIVE
IC405
ATF SERVO CLOG DETECT PB SP/LP DETECT
IC404
LOADING MOTOR DRIVE
EVER 5V
WAKE UP
UNREG
5.6V REG
CURRENT LIMITER
LANC OUT
LANC DC
PWR CONT
IC160
LANC I/O
D 5V
VTR UNREG
MOTOR 5V
VTR DD ON
PS402
CN401
W501
IC156
SERVO/ MECHA CONTROL
(VPP)
VDD
AVDD
AVREF
BATT SENSE
L401
PS401
IC503
SIRCS CONTROL
K OUT
K IN
K OUT 1
DD-47P BOARD
(See Page 153)
IC902
VOLTAGE ERROR AMP
W401
Q908, 911 (1/2)
5V REG
Q909, 910
DRUM/CAPSTAN PWM DRIVE (SERVO)
Q912, 913
VCC
V REF (IC901 ⑲)
CAM ON
Q909, 910 SWITCHING
L906
PS901
PS902
PS903
MAIN BATTERY
BATTERY TERMINAL
(See Page 153)
MOTOR UNREG
VTR UNREG
CAM UNREG
L913
L905
L901
IC901
DC/DC CONVERTER CAPSTAN/DRUM PWM DRIVE
VCC
VTR DD ON
ON/OFF
POWER
TRIANGLE OSC
PWM MOD
SWITCHING DRIVE
VOLTAGE ERROR AMP
V REF (IC901 ⑲)
SHORT CIRCUIT PROTECT
SHORT CIRCUIT DETECT
V REF
V REF (2.5V)
CTL 8
CAM DD ON
CAPSTAN/DRUM PWM DRIVE (SERVO)
Q907, 911 (1/2)
4V REG
IC902
VOLTAGE ERROR AMP
Q905, 901
CAM 5V
Q903 SWITCHING
T901
Q901 (1/2)
CAM 15V RECT
CAM -9V RECT
L902
L903
D903
Q904
EMERGENCY DETECT
L909 V10 5V
L907 RP 5V
EVF UNREG
EVF 5V
L910
L908 AU 5V
L911 D 5V
L912 D 4V
CAM 15V
CAM -9V
L904 CAM 5V
CORE 4V
VTR DD ON
CAM DD ON
09
5V REG
BATTERY IN DETECT
DET
BACK UP VDD
INITIAL RESET
LITHIUM BATTERY PRE END DETECT
IC502
D501
LI 3V
K OUT 0
K OUT 1
K IN 5
LANC POWER ON
CAM DD ON
VTR DD ON
BATT IN
BACK UP VDD
VDD
LCD RESET
LI PRE END
IC501
MODE CONTROL
(See Page 128) LC-40P BOARD
W501
CN401
Q151, 152 CURRENT LIMITER
L302 V10 5V
R/P 5V
AUDIO 5V
IC005, IC121,
IC151–IC156,
IC158, IC159
IC001 – IC003
VIDEO (2) (REC/PB) AMP
VIDEO (1) (Y/CHROMA) PROCESS
CN403
AUDIO 5V
CN101
RF DC OUT
DC OUT
JK-3100 BOARD
(See Page 137, 138)
CN102
EVF 5V
W802
BACK UP VDD
MT 5V
D 5V
D 4V
CAM 15V
CAM -9V
CAM 5V
CORE 4V
(See Page 142)
CN601
MIC 5V
CN602
AUDIO REC/PB PROCESS
IC601–IC604
AU-135P BOARD
CN553
MIC AMP
REMOTE CONTROL RECEIVER
CN554
D 5V
IC551
IC552
(See Page 141)
MA-143P BOARD
ELECTRIC VIEW FINDER
IC501
CRT DRIVE
VF-42P BOARD
CN501
EVF 5V

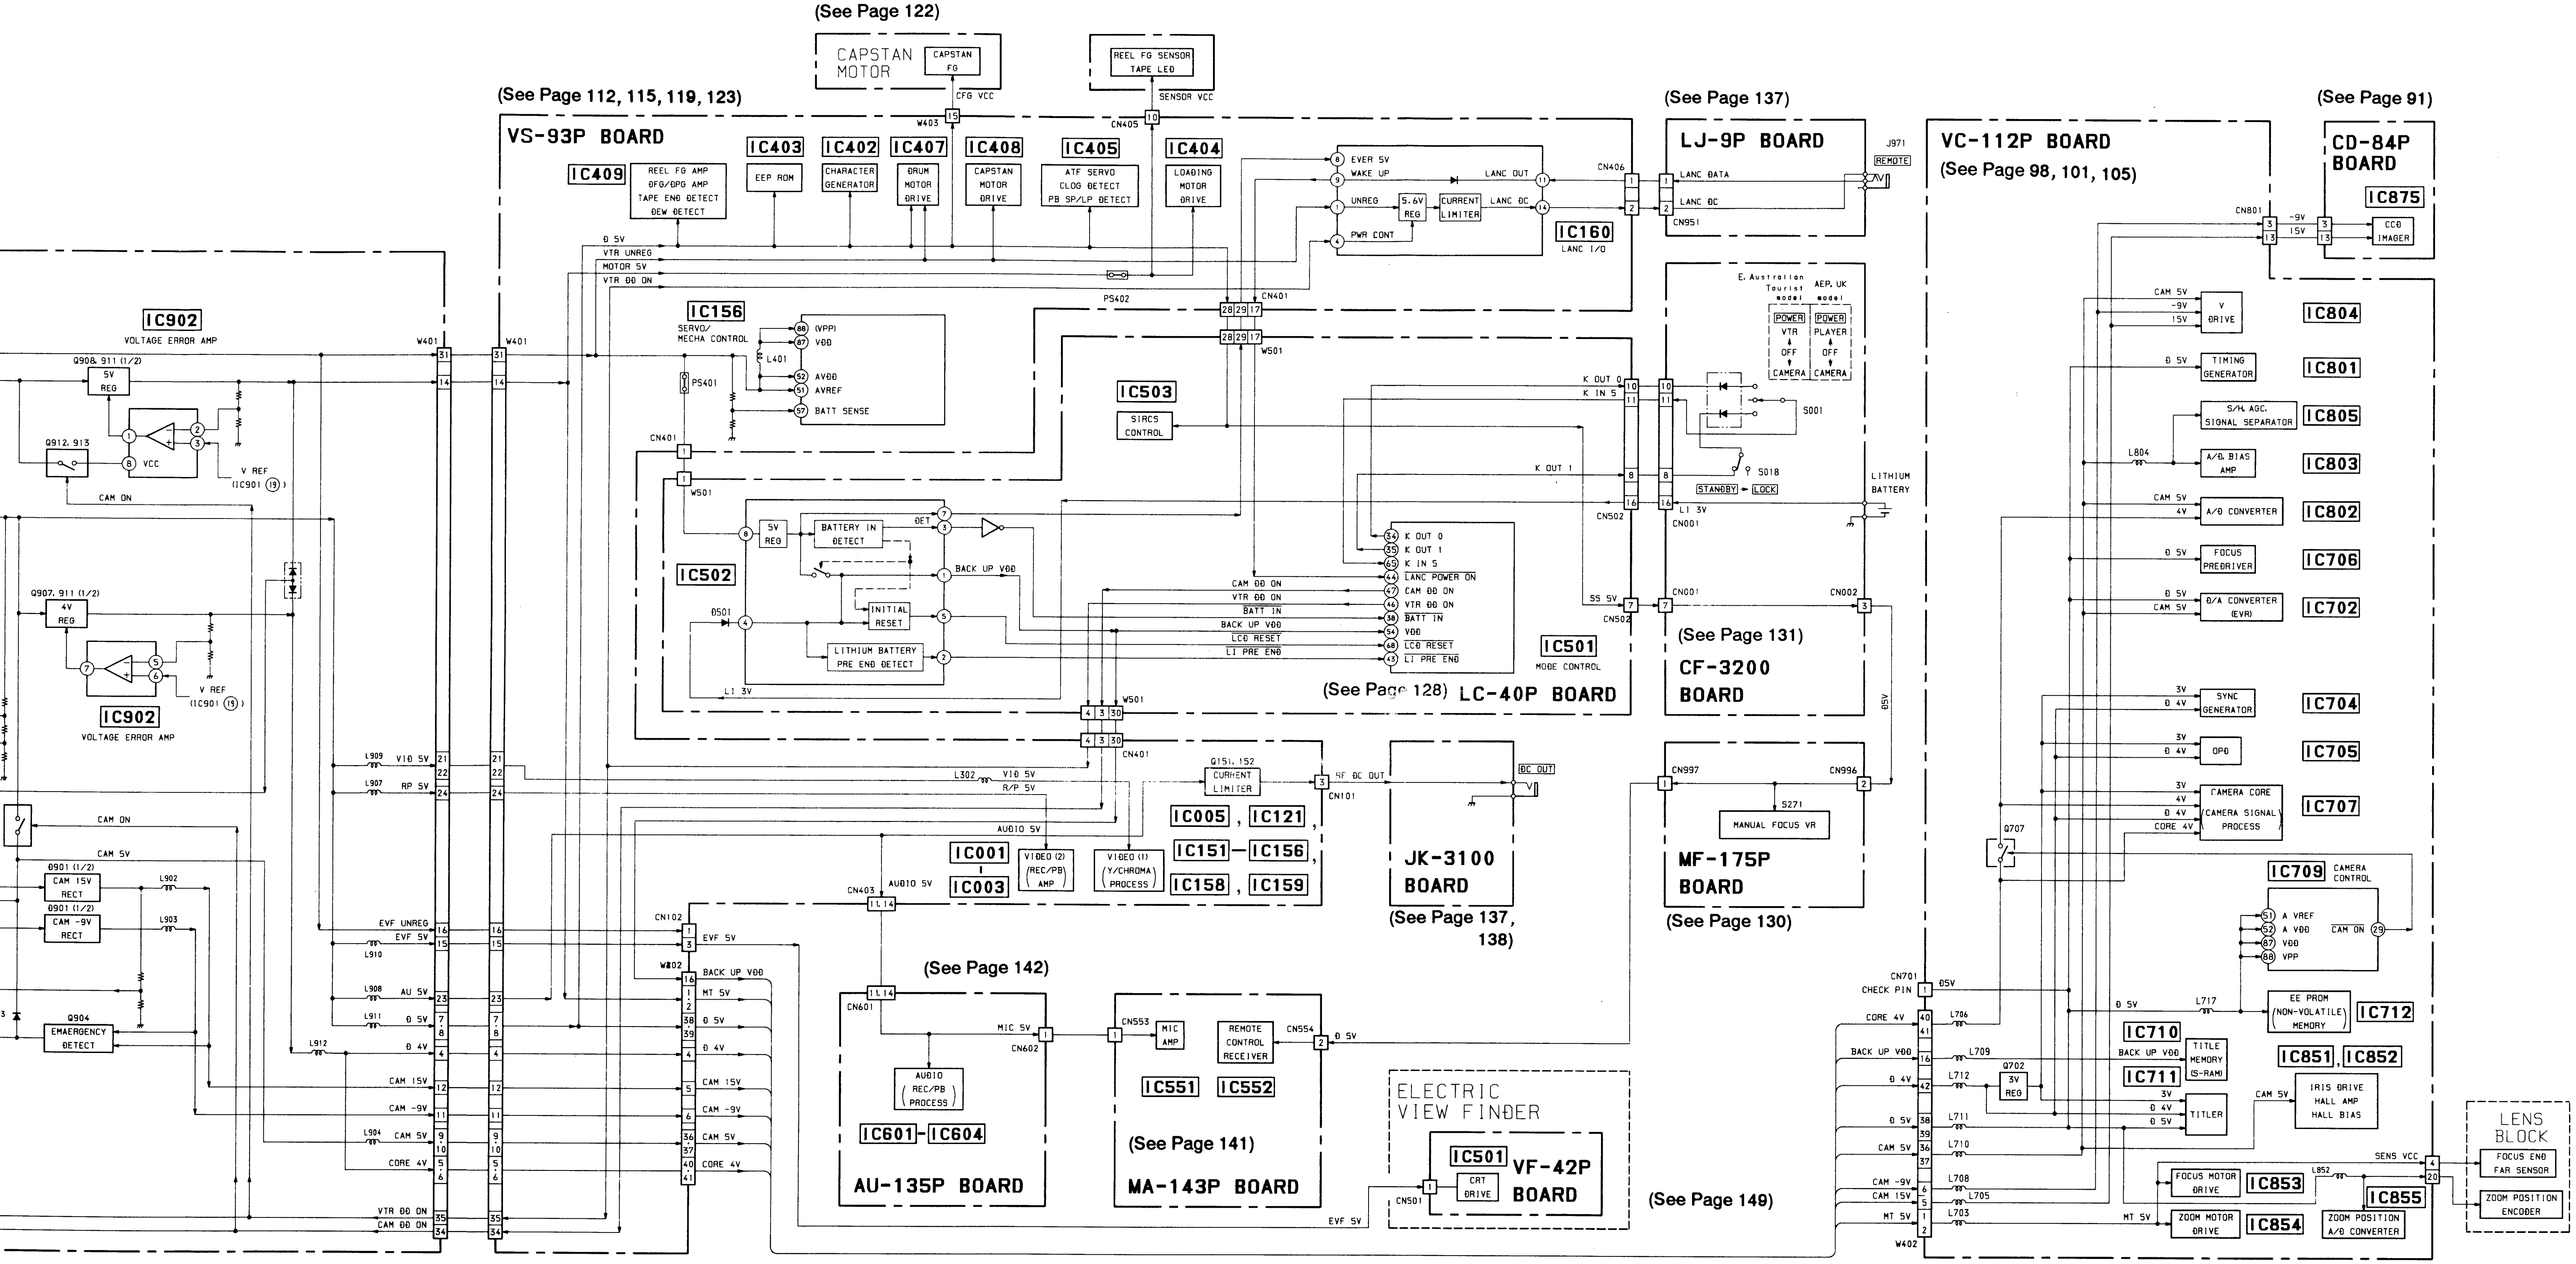
(See Page 122)
CAPSTAN MOTOR
CAPSTAN FG
CFG VCC
REEL FG SENSOR TAPE LED
SENSOR VCC
(See Page 112, 115, 119, 123)
VS-93P BOARD
IC409
REEL FG AMP
DFG/DPG AMP
TAPE END DETECT
DEW DETECT
IC403
EEP ROM
IC402
CHARACTER GENERATOR
IC407
DRUM MOTOR DRIVE
IC408
CAPSTAN MOTOR DRIVE
IC405
ATF SERVO
CLOG DETECT
PB SP/LP DETECT
IC404
LOADING MOTOR DRIVE
EVER 5V
WAKE UP
UNREG
PWR CONT
5.6V REG
CURRENT LIMITER
LANC OUT
LANC DC
IC160
LANC I/O
IC156
SERVO/MECHA CONTROL
IC503
SIRCS CONTROL
IC502
5V REG
BATTERY IN DETECT
INITIAL RESET
LITHIUM BATTERY PRE END DETECT
BACK UP VDD
IC501
MODE CONTROL
(See Page 128)
LC-40P BOARD
IC902
VOLTAGE ERROR AMP
V REF
CAM ON
CAM 15V RECT
CAM -9V RECT
EMAERGENCY DETECT
EVF UNREG
EVF 5V
AU 5V
VIO 5V
RP 5V
CAM 15V
CAM -9V
CAM 5V
CORE 4V
VTR DD ON
CAM DD ON
CURRENT LIMITER
RF DC OUT
IC005, IC121, IC151–IC156, IC158, IC159
IC001
IC003
VIDEO (2) (REC/PB) AMP
VIDEO (1) (Y/CHROMA) PROCESS
AUDIO 5V
JK-3100 BOARD
(See Page 137, 138)
(See Page 142)
AUDIO (REC/PB) PROCESS
IC601–IC604
AU-135P BOARD
MIC AMP
REMOTE CONTROL RECEIVER
IC551
IC552
(See Page 141)
MA-143P BOARD
ELECTRIC VIEW FINDER
IC501
CRT DRIVE
VF-42P BOARD
(See Page 149)
(See Page 137)
LJ-9P BOARD
LANC DATA
LANC DC
REMOTE
E, Australian Tourist model
AEP, UK model
POWER
VTR
OFF
CAMERA
PLAYER
S001
S018
STANDBY
LOCK
LITHIUM BATTERY
(See Page 131)
CF-3200 BOARD
MANUAL FOCUS VR
MF-175P BOARD
(See Page 130)
(See Page 91)
CD-84P BOARD
IC875
CCD IMAGER
VC-112P BOARD
(See Page 98, 101, 105)
V DRIVE
IC804
TIMING GENERATOR
IC801
S/H, AGC, SIGNAL SEPARATOR
IC805
A/G BIAS AMP
IC803
A/D CONVERTER
IC802
FOCUS PREDRIVER
IC706
D/A CONVERTER (EVR)
IC702
SYNC GENERATOR
IC704
DPD
IC705
CAMERA CORE
CAMERA SIGNAL PROCESS
IC707
IC709
CAMERA CONTROL
A VREF
A VDD
VDD
VPP
EE PROM (NON-VOLATILE) MEMORY
IC712
IC710
TITLE MEMORY (S-RAM)
IC711
TITLER
IC851, IC852
IRIS DRIVE
HALL AMP
HALL BIAS
FOCUS MOTOR DRIVE
IC853
ZOOM MOTOR DRIVE
IC854
IC855
ZOOM POSITION A/D CONVERTER
LENS BLOCK
FOCUS END FAR SENSOR
ZOOM POSITION ENCODER
CHECK PIN

SECTION 4

RINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

4-1. FRAME SCHEMATIC DIAGRAM

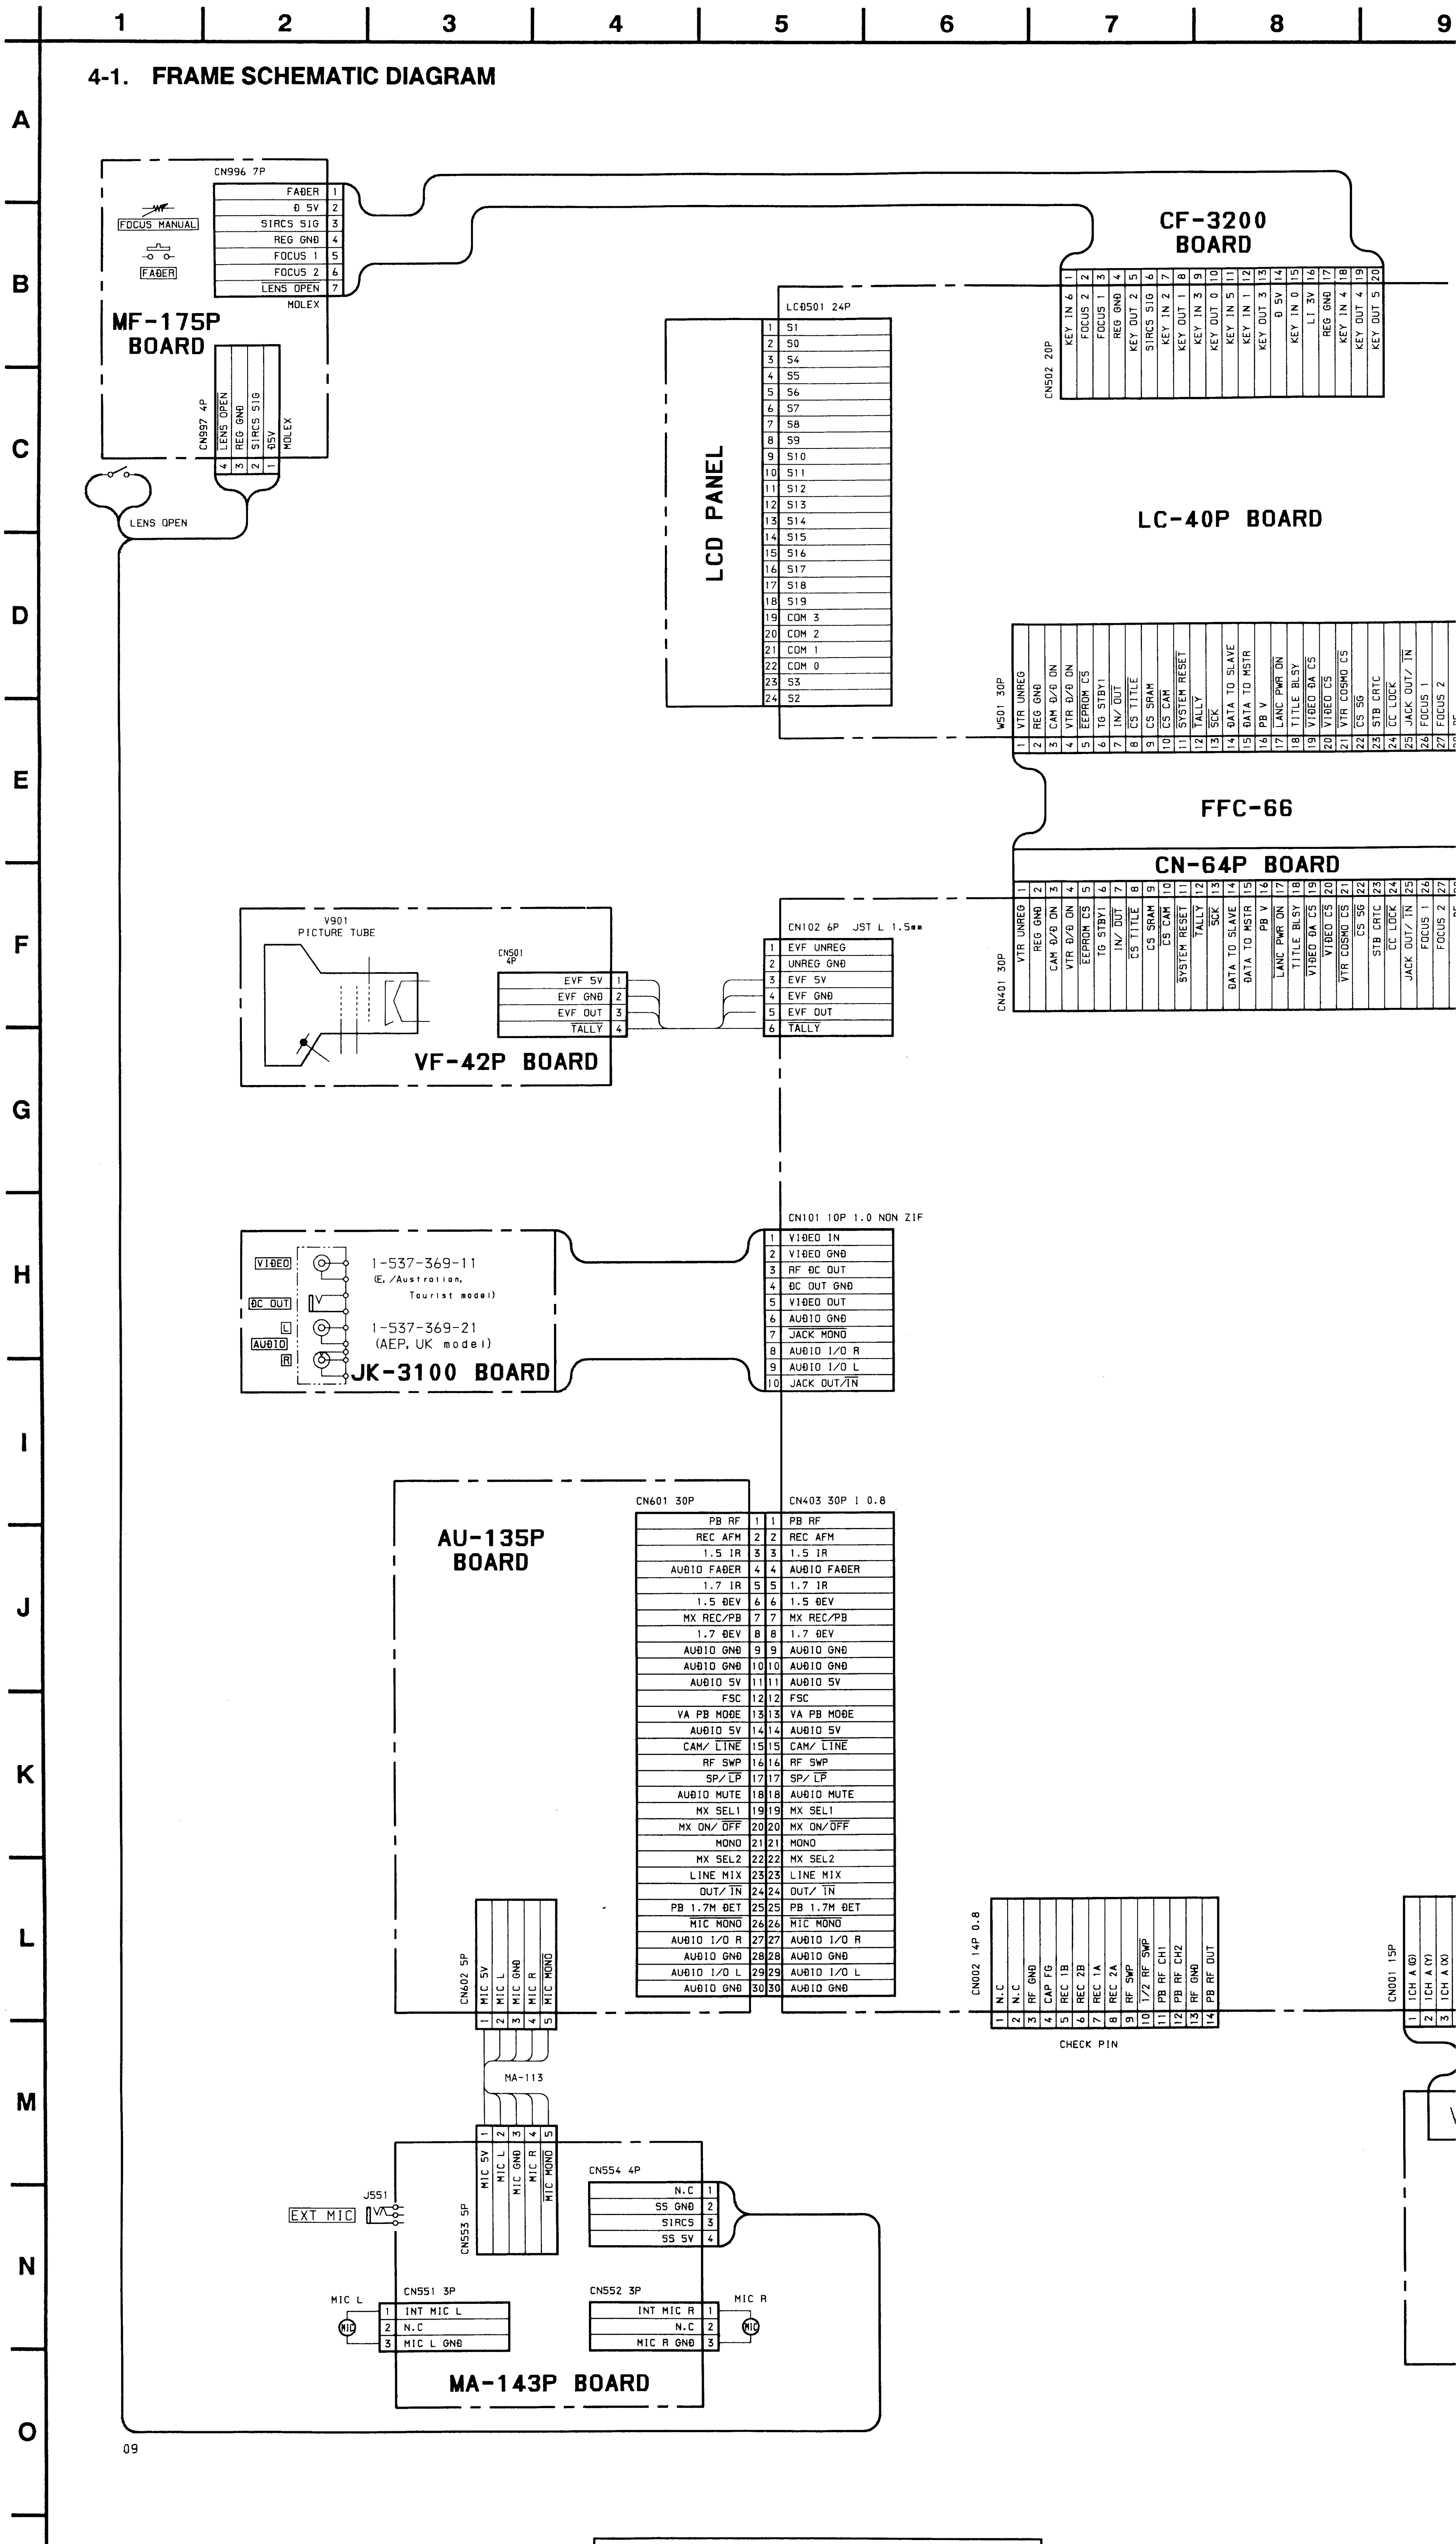

1
2
3
4
5
6
7
8
9
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
FOCUS MANUAL
FADER
CN996 7P
FADER 1
D 5V 2
SIRCS SIG 3
REG GND 4
FOCUS 1 5
FOCUS 2 6
LENS OPEN 7
MOLEX
MF-175P BOARD
CN997 4P
4 LENS OPEN
3 REG GND
2 SIRCS SIG
1 D5V
MOLEX
LENS OPEN
LCD PANEL
LCD501 24P
1 S1
2 S0
3 S4
4 S5
5 S6
6 S7
7 S8
8 S9
9 S10
10 S11
11 S12
12 S13
13 S14
14 S15
15 S16
16 S17
17 S18
18 S19
19 COM 3
20 COM 2
21 COM 1
22 COM 0
23 S3
24 S2
CF-3200 BOARD
CN502 20P
1 KEY IN 6
2 FOCUS 2
3 FOCUS 1
4 REG GND
5 KEY OUT 2
6 SIRCS SIG
7 KEY IN 2
8 KEY OUT 1
9 KEY IN 3
10 KEY OUT 0
11 KEY IN 5
12 KEY IN 1
13 KEY OUT 3
14 D 5V
15 KEY IN 0
16 LI 3V
17 REG GND
18 KEY IN 4
19 KEY OUT 4
20 KEY OUT 5
LC-40P BOARD
W501 30P
1 VTR UNREG
2 REG GND
3 CAM D/D ON
4 VTR D/D ON
5 EEPROM CS
6 TG STBY1
7 IN/OUT
8 CS TITLE
9 CS SRAM
10 CS CAM
11 SYSTEM RESET
12 TALLY
13 SCK
14 DATA TO SLAVE
15 DATA TO MSTR
16 PB V
17 LANC PWR ON
18 TITLE BLSY
19 VIDEO DA CS
20 VIDEO CS
21 VTR COSMO CS
22 CS SG
23 STB CRTC
24 CC LOCK
25 JACK OUT/IN
26 FOCUS 1
27 FOCUS 2
FFC-66
CN-64P BOARD
CN401 30P
VTR UNREG 1
REG GND 2
CAM D/D ON 3
VTR D/D ON 4
EEPROM CS 5
TG STBY1 6
IN/OUT 7
CS TITLE 8
CS SRAM 9
CS CAM 10
SYSTEM RESET 11
TALLY 12
SCK 13
DATA TO SLAVE 14
DATA TO MSTR 15
PB V 16
LANC PWR ON 17
TITLE BLSY 18
VIDEO DA CS 19
VIDEO CS 20
VTR COSMO CS 21
CS SG 22
STB CRTC 23
CC LOCK 24
JACK OUT/IN 25
FOCUS 1 26
FOCUS 2 27
V901 PICTURE TUBE
CN501 4P
EVF 5V 1
EVF GND 2
EVF OUT 3
TALLY 4
VF-42P BOARD
CN102 6P JST L 1.5mm
1 EVF UNREG
2 UNREG GND
3 EVF 5V
4 EVF GND
5 EVF OUT
6 TALLY
VIDEO
DC OUT
L
AUDIO
R
1-537-369-11
(E./Australian, Tourist model)
1-537-369-21
(AEP, UK model)
JK-3100 BOARD
CN101 10P 1.0 NON ZIF
1 VIDEO IN
2 VIDEO GND
3 RF DC OUT
4 DC OUT GND
5 VIDEO OUT
6 AUDIO GND
7 JACK MONO
8 AUDIO I/O R
9 AUDIO I/O L
10 JACK OUT/IN
AU-135P BOARD
CN601 30P
CN403 30P I 0.8
1 PB RF
2 REC AFM
3 1.5 IR
4 AUDIO FADER
5 1.7 IR
6 1.5 DEV
7 MX REC/PB
8 1.7 DEV
9 AUDIO GND
10 AUDIO GND
11 AUDIO 5V
12 FSC
13 VA PB MODE
14 AUDIO 5V
15 CAM/LINE
16 RF SWP
17 SP/LP
18 AUDIO MUTE
19 MX SEL1
20 MX ON/OFF
21 MONO
22 MX SEL2
23 LINE MIX
24 OUT/IN
25 PB 1.7M DET
26 MIC MONO
27 AUDIO I/O R
28 AUDIO GND
29 AUDIO I/O L
30 AUDIO GND
CN602 5P
1 MIC 5V
2 MIC L
3 MIC GND
4 MIC R
5 MIC MONO
MA-113
CN553 5P
1 MIC 5V
2 MIC L
3 MIC GND
4 MIC R
5 MIC MONO
J551
EXT MIC
CN554 4P
N.C 1
SS GND 2
SIRCS 3
SS 5V 4
MIC L
CN551 3P
1 INT MIC L
2 N.C
3 MIC L GND
CN552 3P
INT MIC R 1
N.C 2
MIC R GND 3
MIC R
MA-143P BOARD
CN002 14P 0.8
1 N.C
2 N.C
3 RF GND
4 CAP FG
5 REC 1B
6 REC 2B
7 REC 1A
8 REC 2A
9 RF SWP
10 1/2 RF SWP
11 PB RF CH1
12 PB RF CH2
13 RF GND
14 PB RF OUT
CHECK PIN
CN001 15P
1 1CH A (G)
2 1CH A (Y)
3 1CH A (X)
09

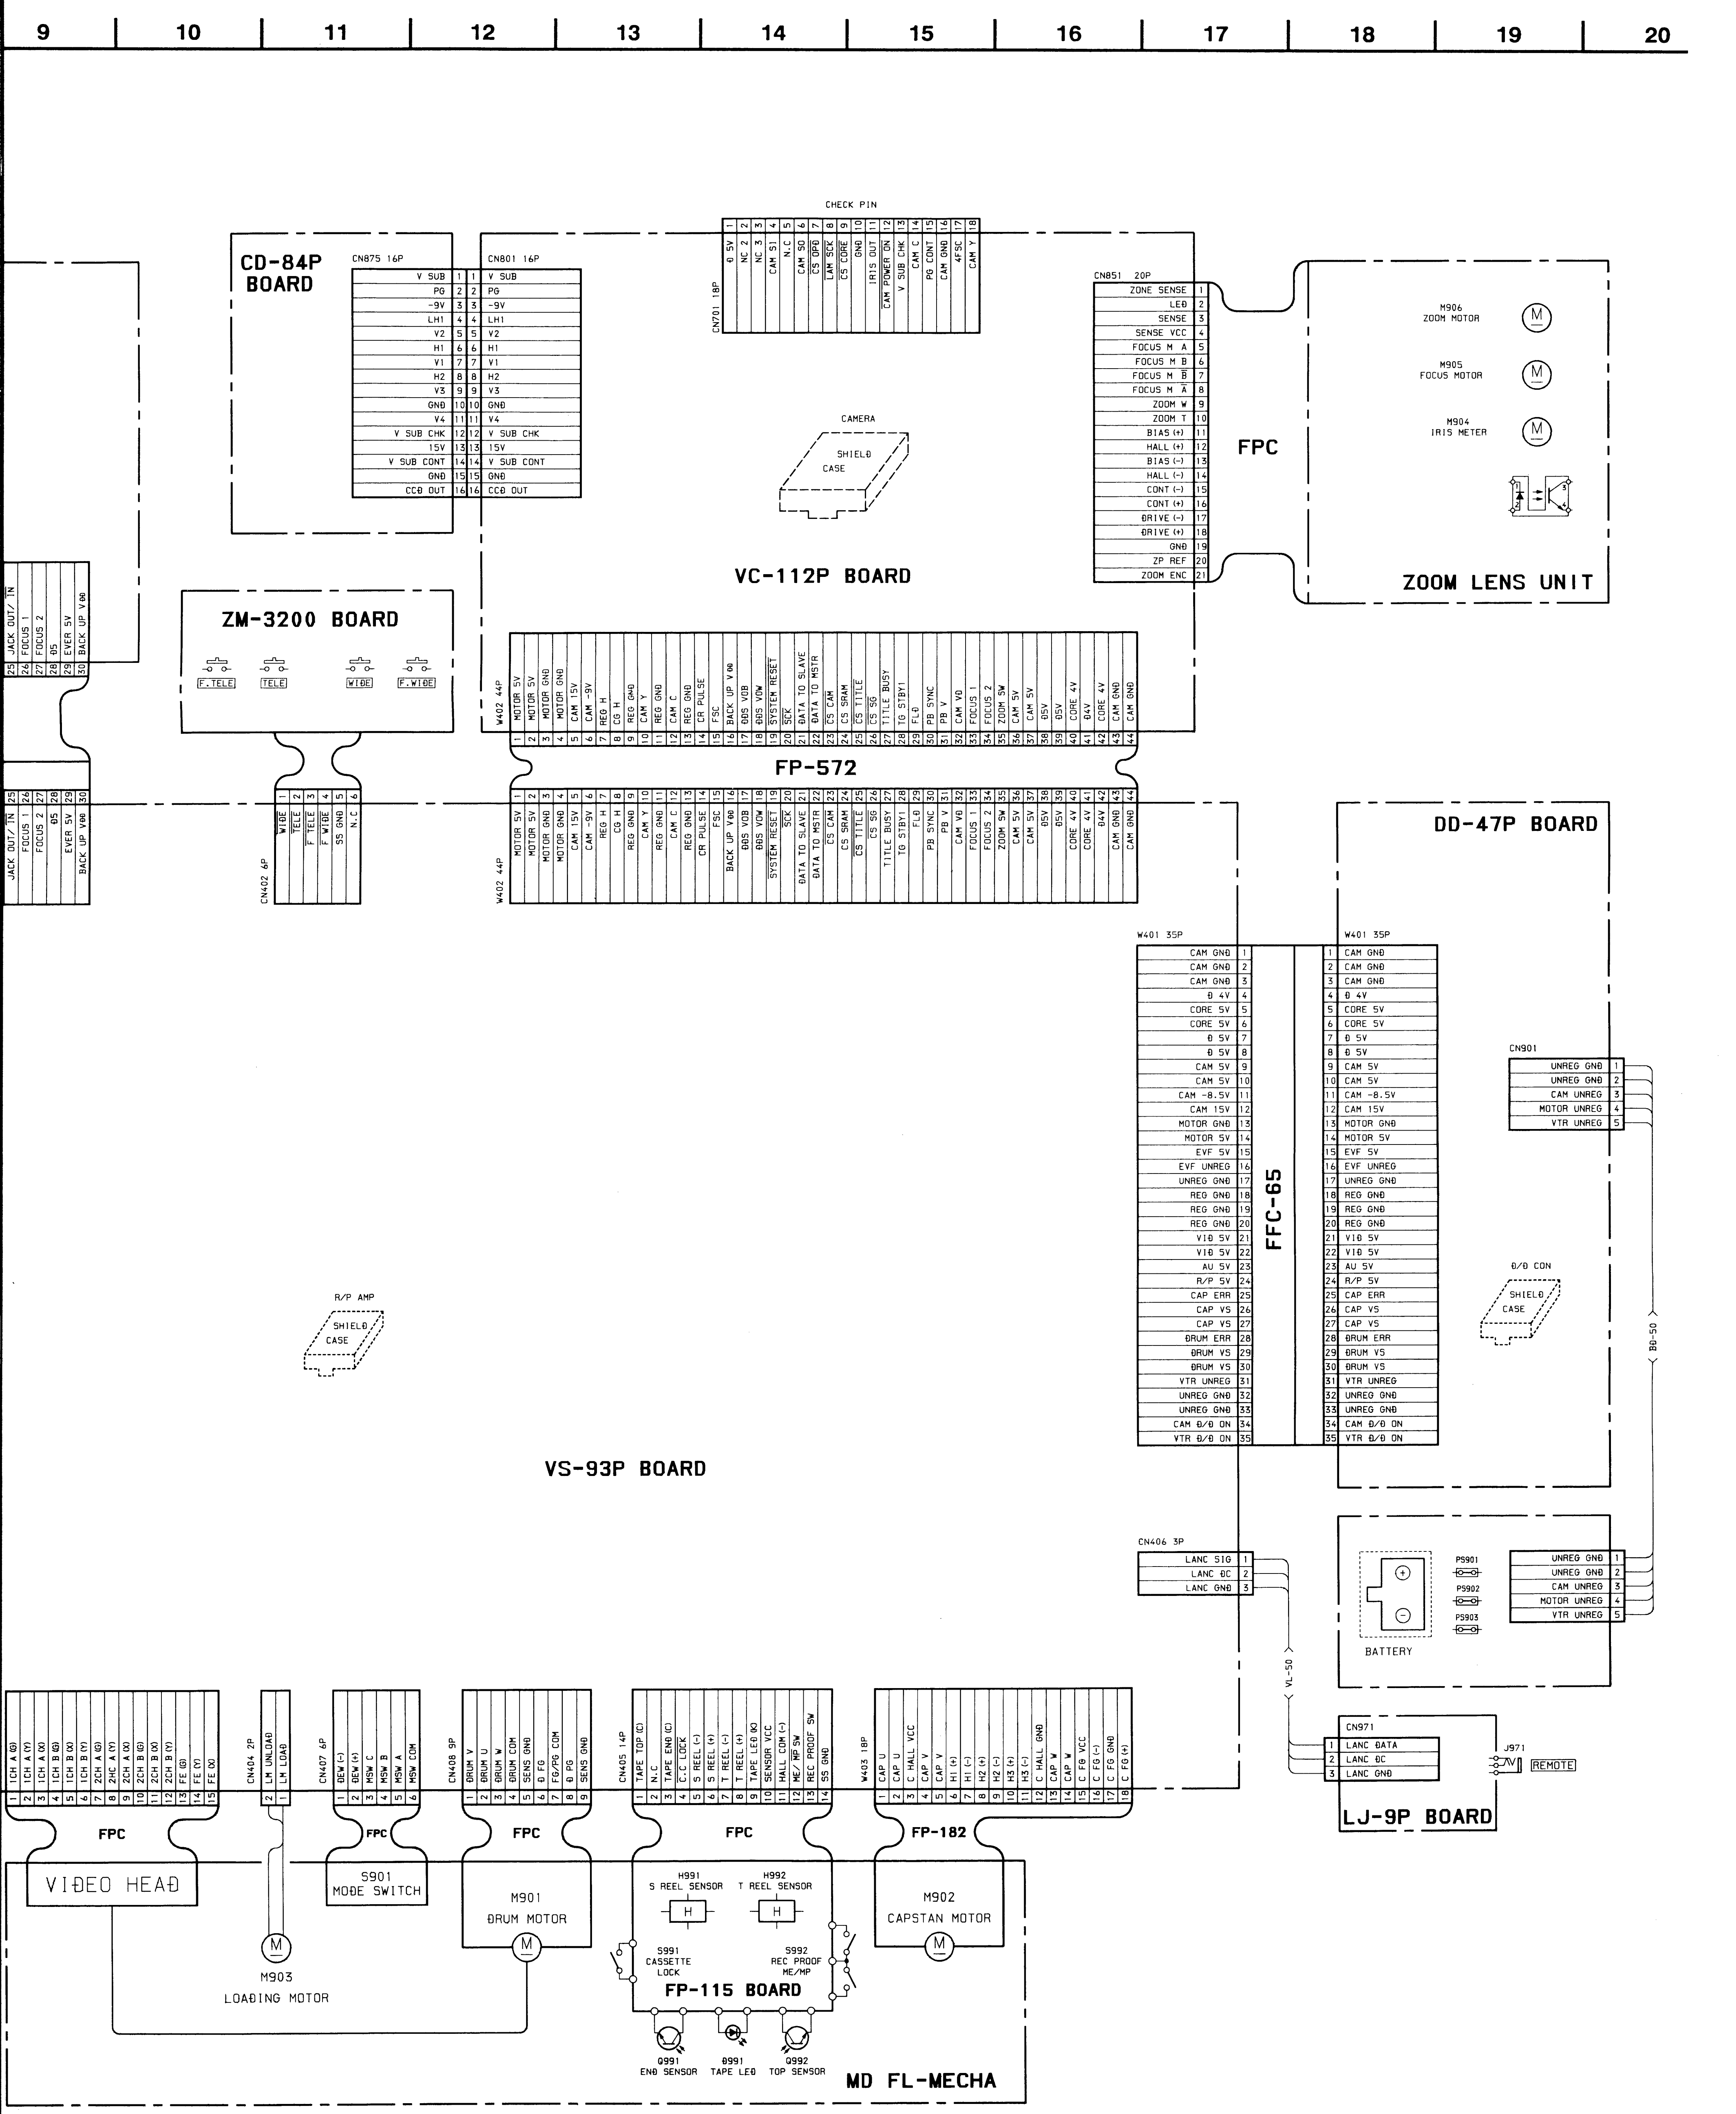
9
10
11
12
13
14
15
16
17
18
19
20
CD-84P BOARD
CN875 16P
CN801 16P
V SUB
PG
-9V
LH1
V2
H1
V1
H2
V3
GND
V4
V SUB CHK
15V
V SUB CONT
CCD OUT
CHECK PIN
CN701 18P
D 5V
NC 2
NC 3
CAM SI
N.C
CAM SO
CS DPD
CAM SCK
CS CORE
GND
IRIS OUT
CAM POWER ON
V SUB CHK
CAM C
PG CONT
CAM GND
4FSC
CAM Y
CAMERA
SHIELD CASE
VC-112P BOARD
CN851 20P
ZONE SENSE
LED
SENSE
SENSE VCC
FOCUS M A
FOCUS M B
ZOOM W
ZOOM T
BIAS (+)
HALL (+)
BIAS (-)
HALL (-)
CONT (-)
CONT (+)
DRIVE (-)
DRIVE (+)
ZP REF
ZOOM ENC
FPC
M906 ZOOM MOTOR
M905 FOCUS MOTOR
M904 IRIS METER
ZOOM LENS UNIT
ZM-3200 BOARD
F.TELE
TELE
WIDE
F.WIDE
JACK OUT/ IN
FOCUS 1
FOCUS 2
D5
EVER 5V
BACK UP VDD
W402 44P
MOTOR 5V
MOTOR GND
CAM 15V
CAM -9V
REG H
CG H
REG GND
CAM Y
CAM C
CR PULSE
FSC
BACK UP VDD
DDS VDB
DDS VDW
SYSTEM RESET
SCK
DATA TO SLAVE
DATA TO MSTR
CS CAM
CS SRAM
CS TITLE
CS SG
TITLE BUSY
TG STBY1
FLD
PB SYNC
PB V
CAM VD
ZOOM SW
CAM 5V
D5V
CORE 4V
D4V
CAM GND
FP-572
CN402 6P
SS GND
N.C
DD-47P BOARD
W401 35P
D 4V
CORE 5V
D 5V
CAM -8.5V
MOTOR GND
EVF 5V
EVF UNREG
UNREG GND
VID 5V
AU 5V
R/P 5V
CAP ERR
CAP VS
DRUM ERR
DRUM VS
VTR UNREG
CAM D/D ON
VTR D/D ON
FFC-65
CN901
UNREG GND
CAM UNREG
MOTOR UNREG
D/D CON
BD-50
R/P AMP
VS-93P BOARD
CN406 3P
LANC SIG
LANC DC
LANC GND
VL-50
BATTERY
PS901
PS902
PS903
CN971
LANC DATA
J971
REMOTE
LJ-9P BOARD
1CH A (G)
1CH A (Y)
1CH A (X)
1CH B (G)
1CH B (X)
2CH A (G)
2HC A (Y)
2CH A (X)
2CH B (G)
2CH B (X)
2CH B (Y)
FE (G)
FE (Y)
FE (X)
CN404 2P
LM UNLOAD
LM LOAD
CN407 6P
DEW (+)
DEW (-)
MSW C
MSW B
MSW A
MSW COM
CN408 9P
DRUM V
DRUM U
DRUM W
DRUM COM
SENS GND
D FG
FG/PG COM
D PG
SENS GND
CN405 14P
TAPE TOP (C)
TAPE END (C)
C.C LOCK
S REEL (-)
S REEL (+)
T REEL (-)
T REEL (+)
TAPE LED (K)
SENSOR VCC
HALL COM (-)
ME/MP SW
REC PROOF SW
SS GND
W403 18P
CAP U
C HALL VCC
CAP V
H1 (+)
H1 (-)
H2 (+)
H2 (-)
H3 (+)
H3 (-)
C HALL GND
CAP W
C FG VCC
C FG (-)
C FG GND
C FG (+)
FPC
FP-182
VIDEO HEAD
M903 LOADING MOTOR
S901 MODE SWITCH
M901 DRUM MOTOR
H991 S REEL SENSOR
H992 T REEL SENSOR
S991 CASSETTE LOCK
S992 REC PROOF ME/MP
FP-115 BOARD
Q991 END SENSOR
D991 TAPE LED
Q992 TOP SENSOR
M902 CAPSTAN MOTOR
MD FL-MECHA

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this , the necessary note is printed in each block.)

- **For printed wiring boards.**
- ○— : indicated a lead wire mounted on the component side.
- —— : indicated a lead wire mounted on the conductor side.
- ■ : Parts mounted on the conductor side.
- ▬ : Pattern from the side which enables seeing.
  (The other layers'patterns are not indicated.)
- (B) or (F), etc. of capacitors indicate the temperature characteristics.
- ● : Through hole.

- **For schematic diagrams.**
- Caution when replacing chip parts.
  New parts must be attached after removal of chip.
  Be careful not to heat the minuts side of tantalum capacitor, because it is damaged by the heat.
- All resistors are in ohms, 1/4W unless otherwise noted.
  Chip resistor are 1/10W unless otherwise noted.
  kΩ : 1000Ω , MΩ : 1000kΩ .
- All capacitors are in μF unless otherwise noted. pF: μμF.
  50V or less are not indicated except for electrolytics and tantalums.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- ▭ : nonflammable resistor.
- ▭ : fusible resistor.
- ☐ : panel designation.
- △ : internal component.

Note:
The components identi- fied by mark ⚠ or dotted line with mark ⚠ are critical for safty.
Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- **Measuring conditions voltage value and waveform.**

(CAMERA, DIGITAL TITLE block)

- The object is color bar chart of pattern box.

1. Connection

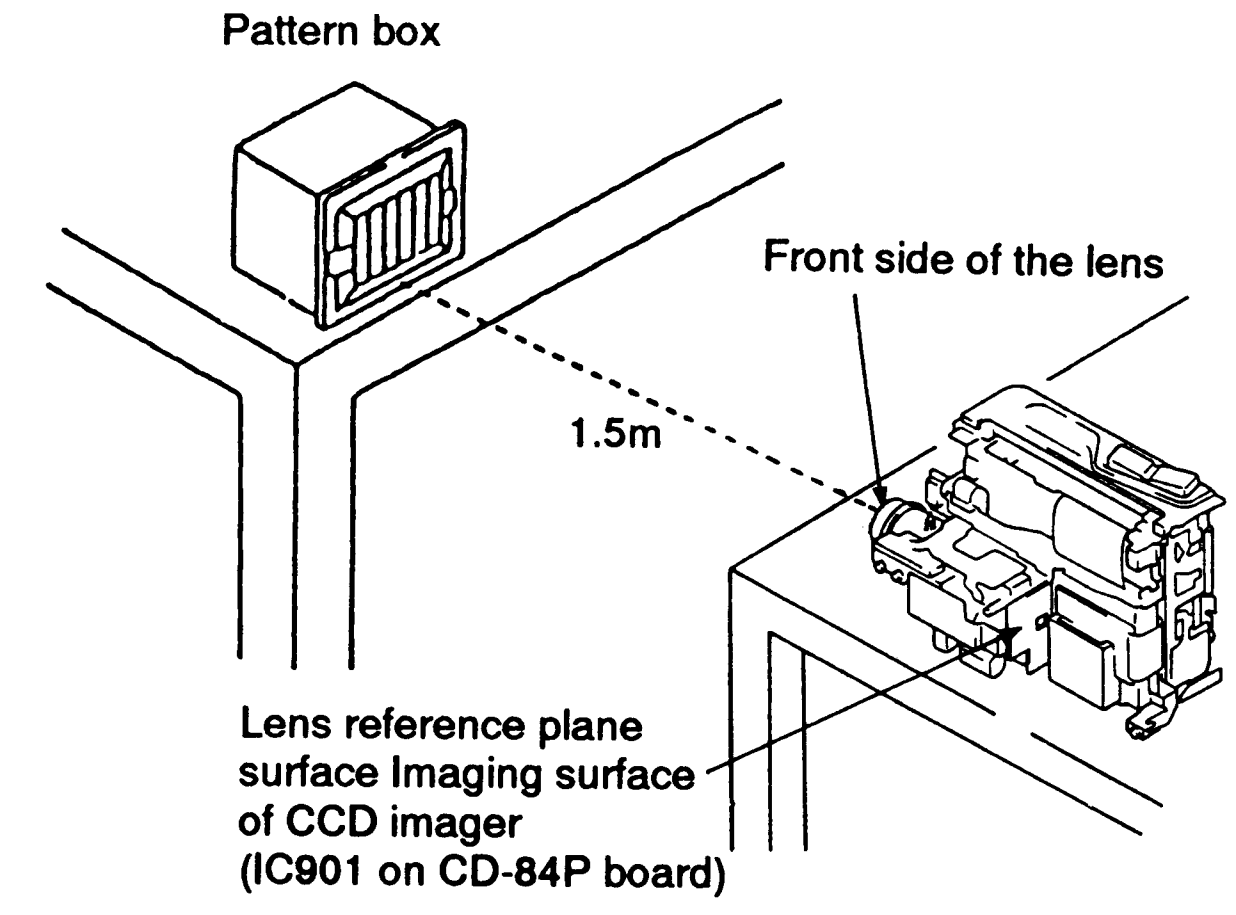
Pattern box
Front side of the lens
1.5m
Lens reference plane
surface Imaging surface
of CCD imager
(IC901 on CD-84P board)

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

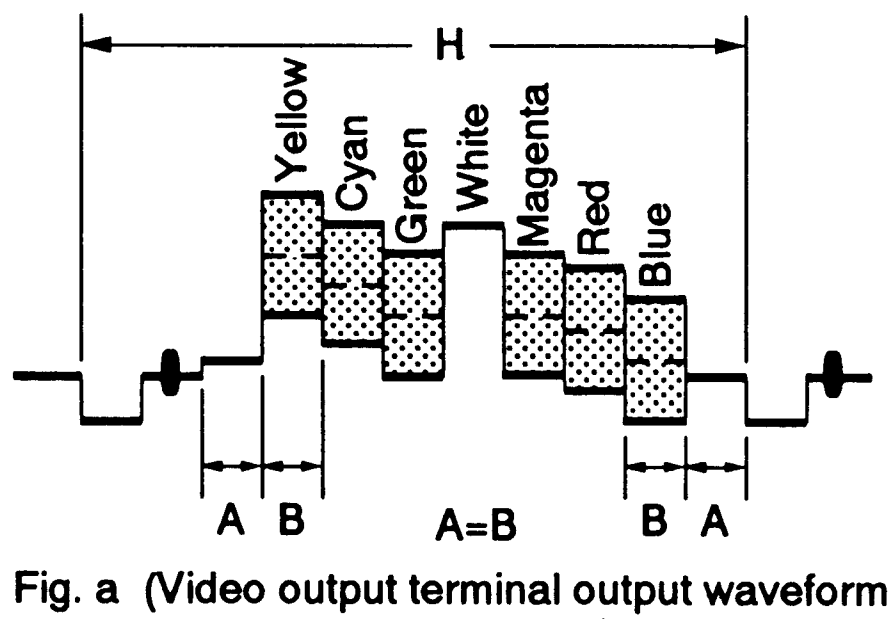
H
Yellow
Cyan
Green
White
Magenta
Red
Blue
A B
A=B
B A

Fig. a (Video output terminal output waveform)

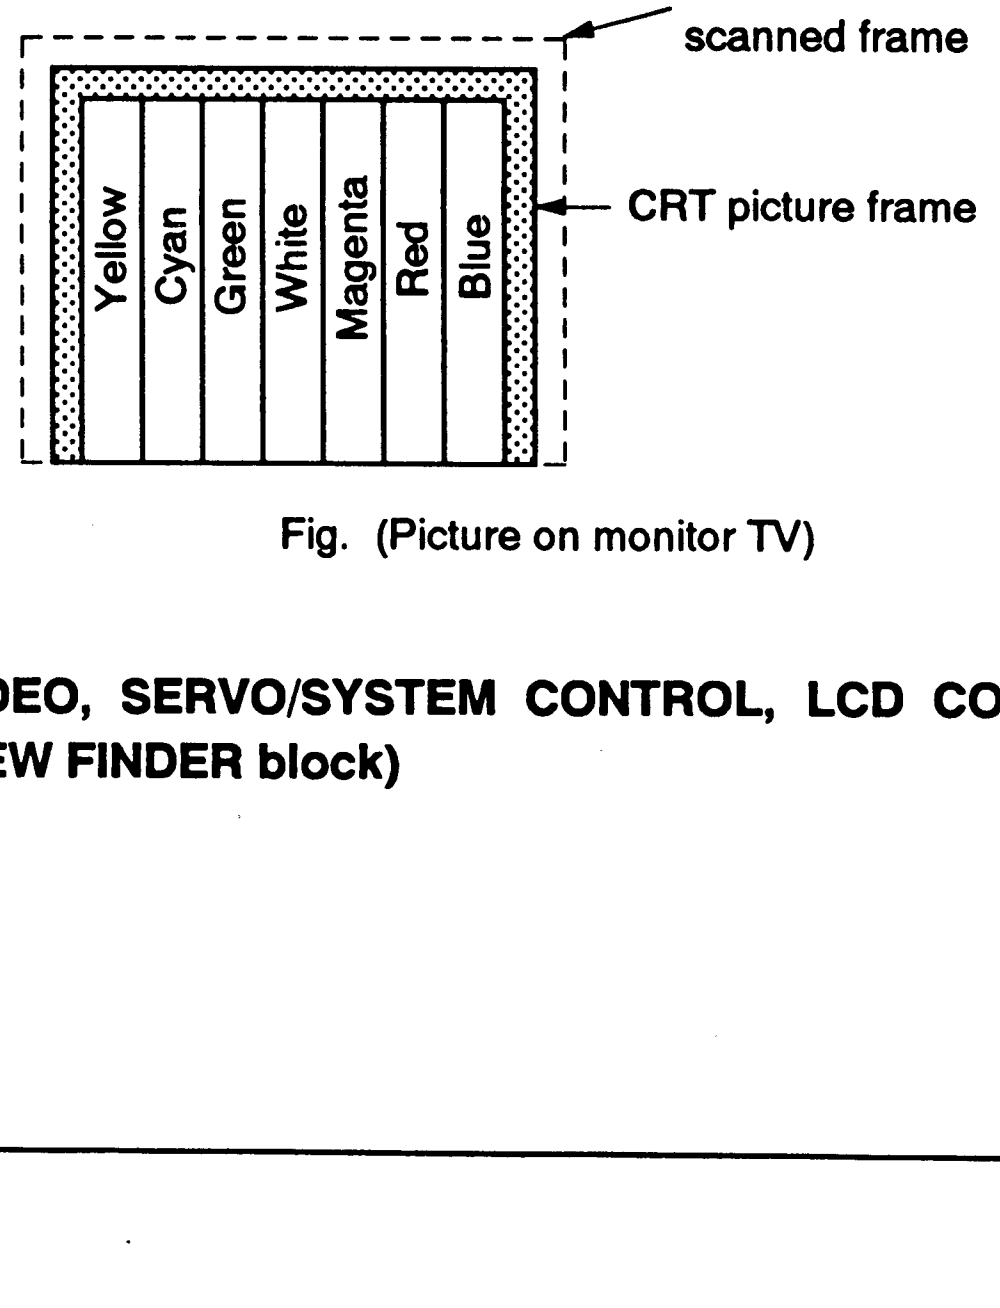
Electron beam
scanned frame
CRT picture frame
Yellow
Cyan
Green
White
Magenta
Red
Blue

Fig. (Picture on monitor TV)

(VIDEO, SERVO/SYSTEM CONTROL, LCD CONTROL, VIEW FINDER block)

< DIODE >

D875	8-719-800-76	DIODE	1SS226
D876	8-719-404-46	DIODE	MA110
D877	8-719-820-05	DIODE	1SS181
D878	8-719-404-46	DIODE	MA110

< TRANSISTOR >

Q875	8-729-927-XX	TRANSISTOR	2SC46
Q876	8-729-927-68	TRANSISTOR	UMW1
Q877	8-729-232-86	TRANSISTOR	2SK18

CD-84P (CCD IMAGER) PRINTED WIRING BOARD

— Ref. No. CD-84P BOARD: 1000 series —

26
0
81
0
>
2SC4617TL
UMW1
2SK1875

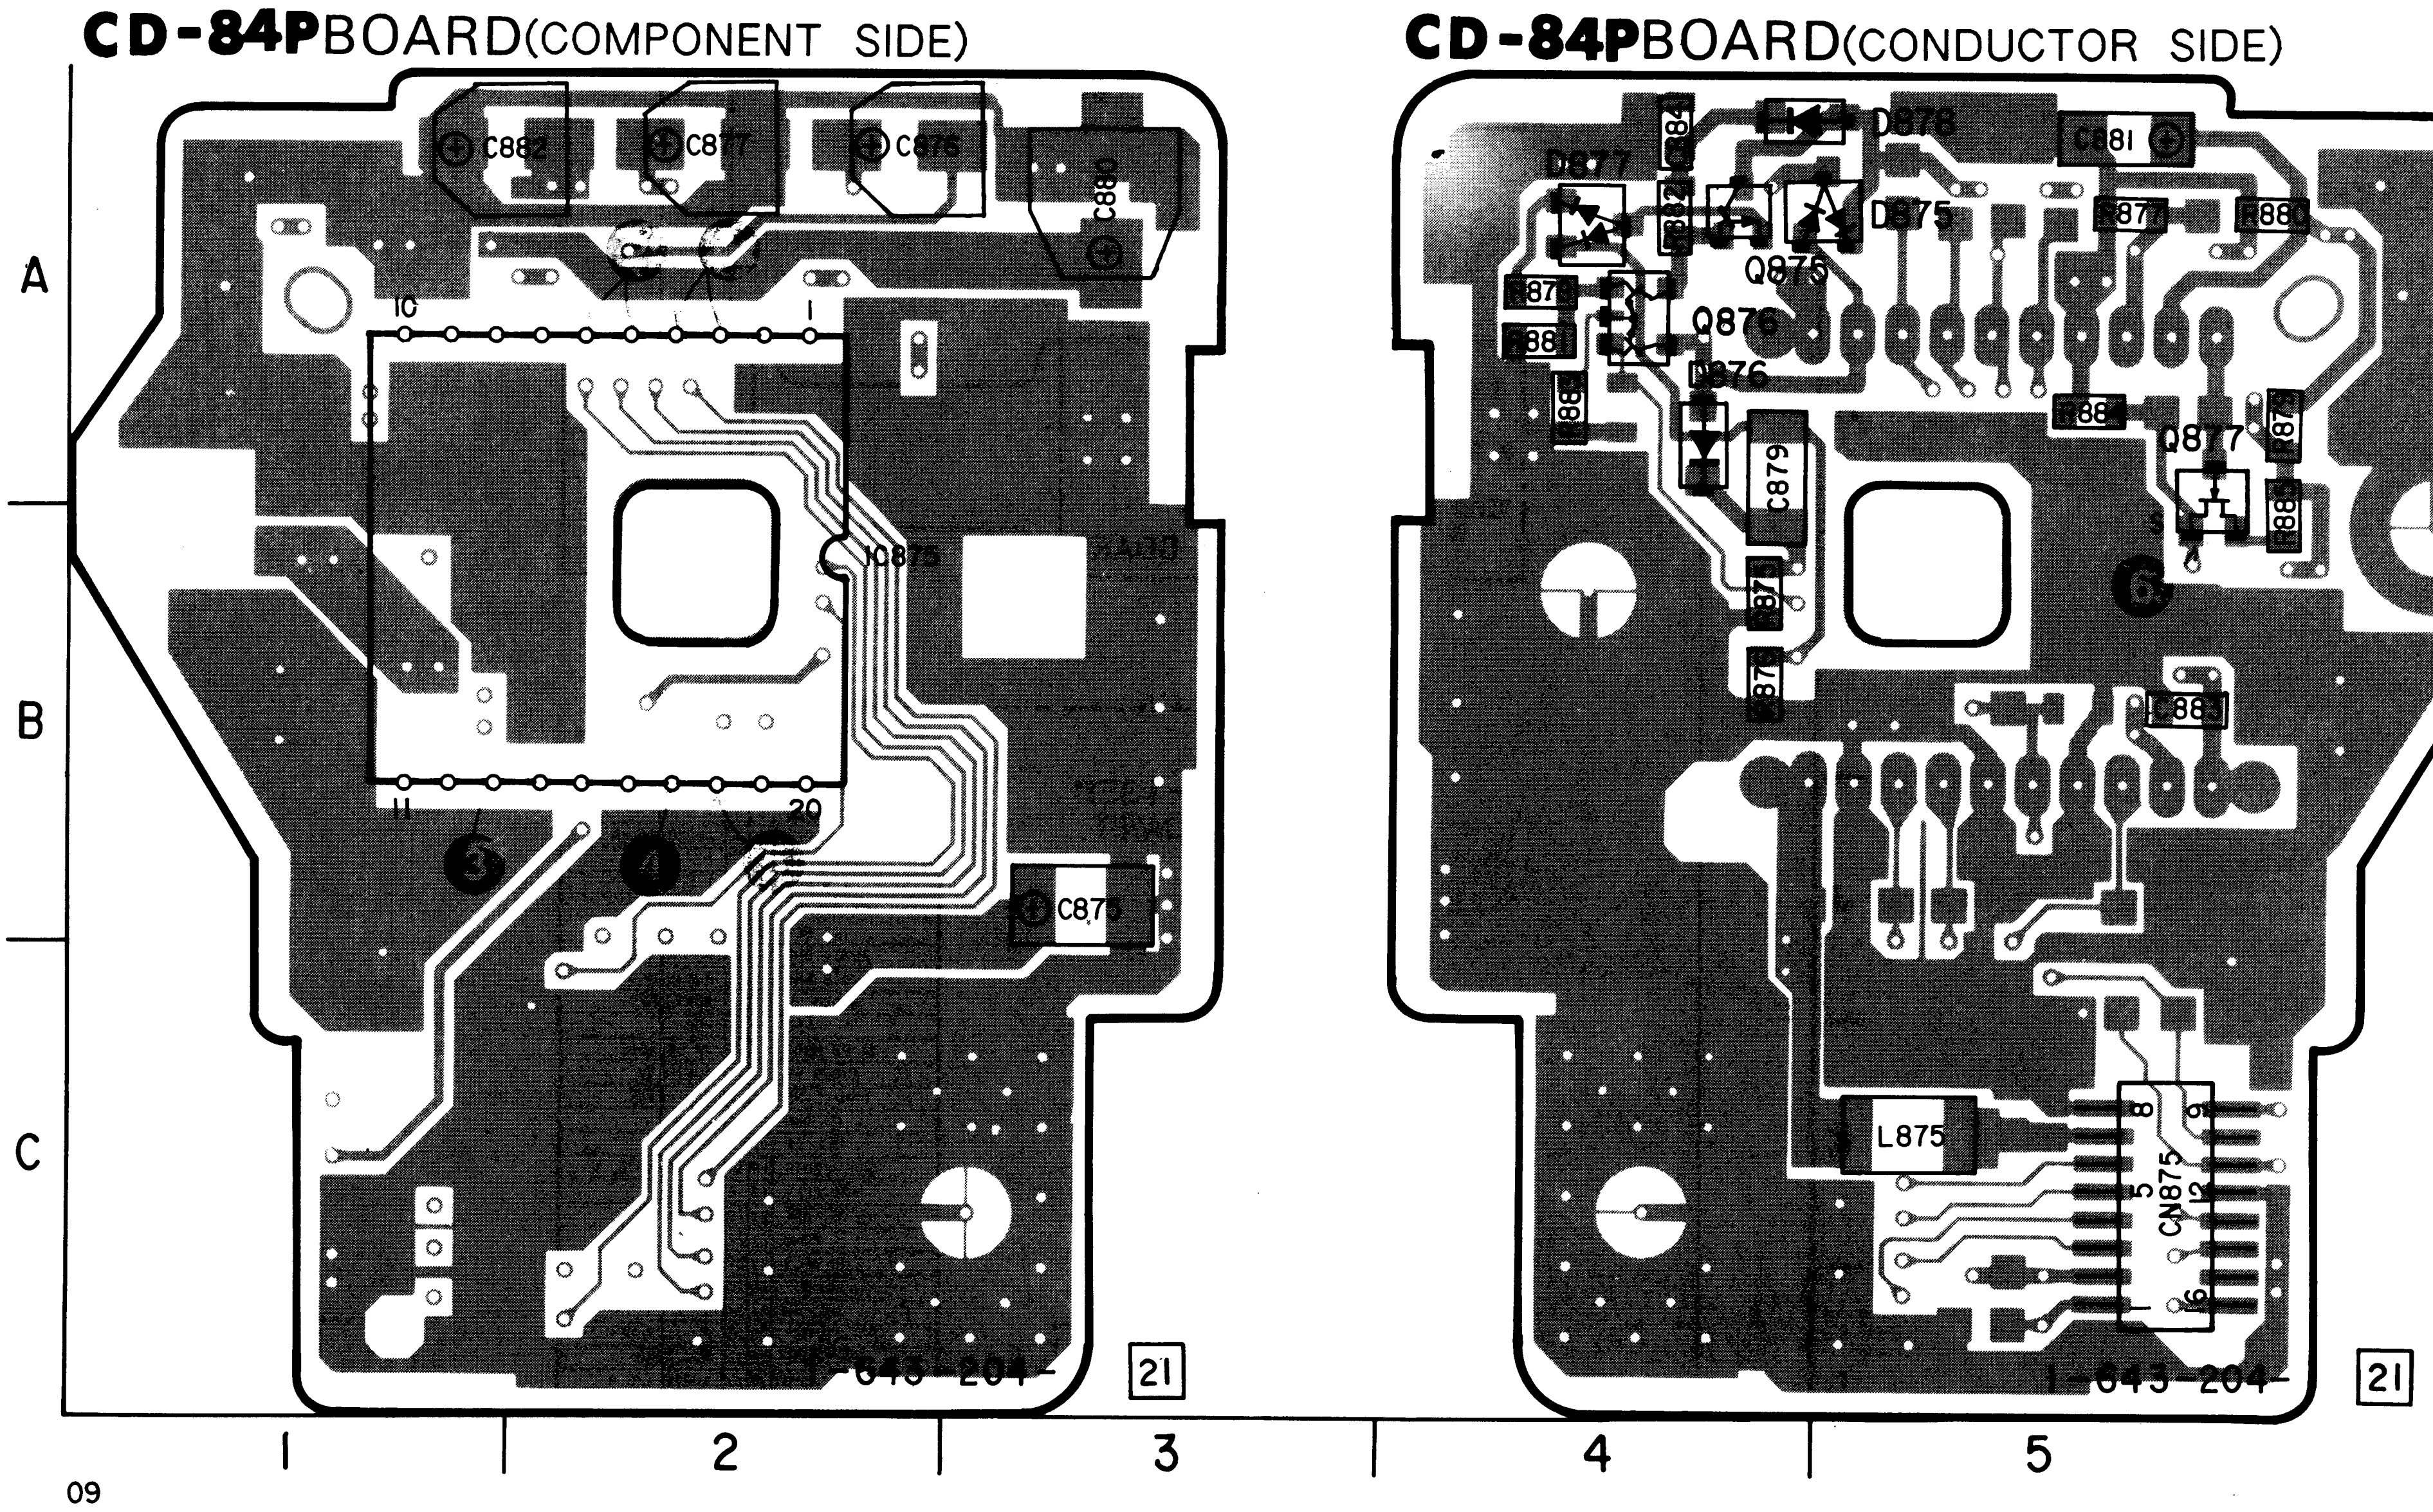
CD-84PBOARD(COMPONENT SIDE)
CD-84PBOARD(CONDUCTOR SIDE)
A
B
C
1
2
3
4
5
09
C882
C877
C876
C880
IC
I
IC875
II
20
3
4
C875
1-643-204-
21
D877
D878
D875
Q875
Q876
D876
C881
R877
R880
R876
R881
R883
C879
R884
Q877
R887
R885
6
R873
R875
R882
L875
CN875
8
9
5
12
1
16
1-643-204-
21

- **For printed wiring boards.**
- CD-84P board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

CD-84P (CCD IMAGER) SCHEMATIC DIAGRAM

— Ref. No. CD-84P BOARD: 1000 series —

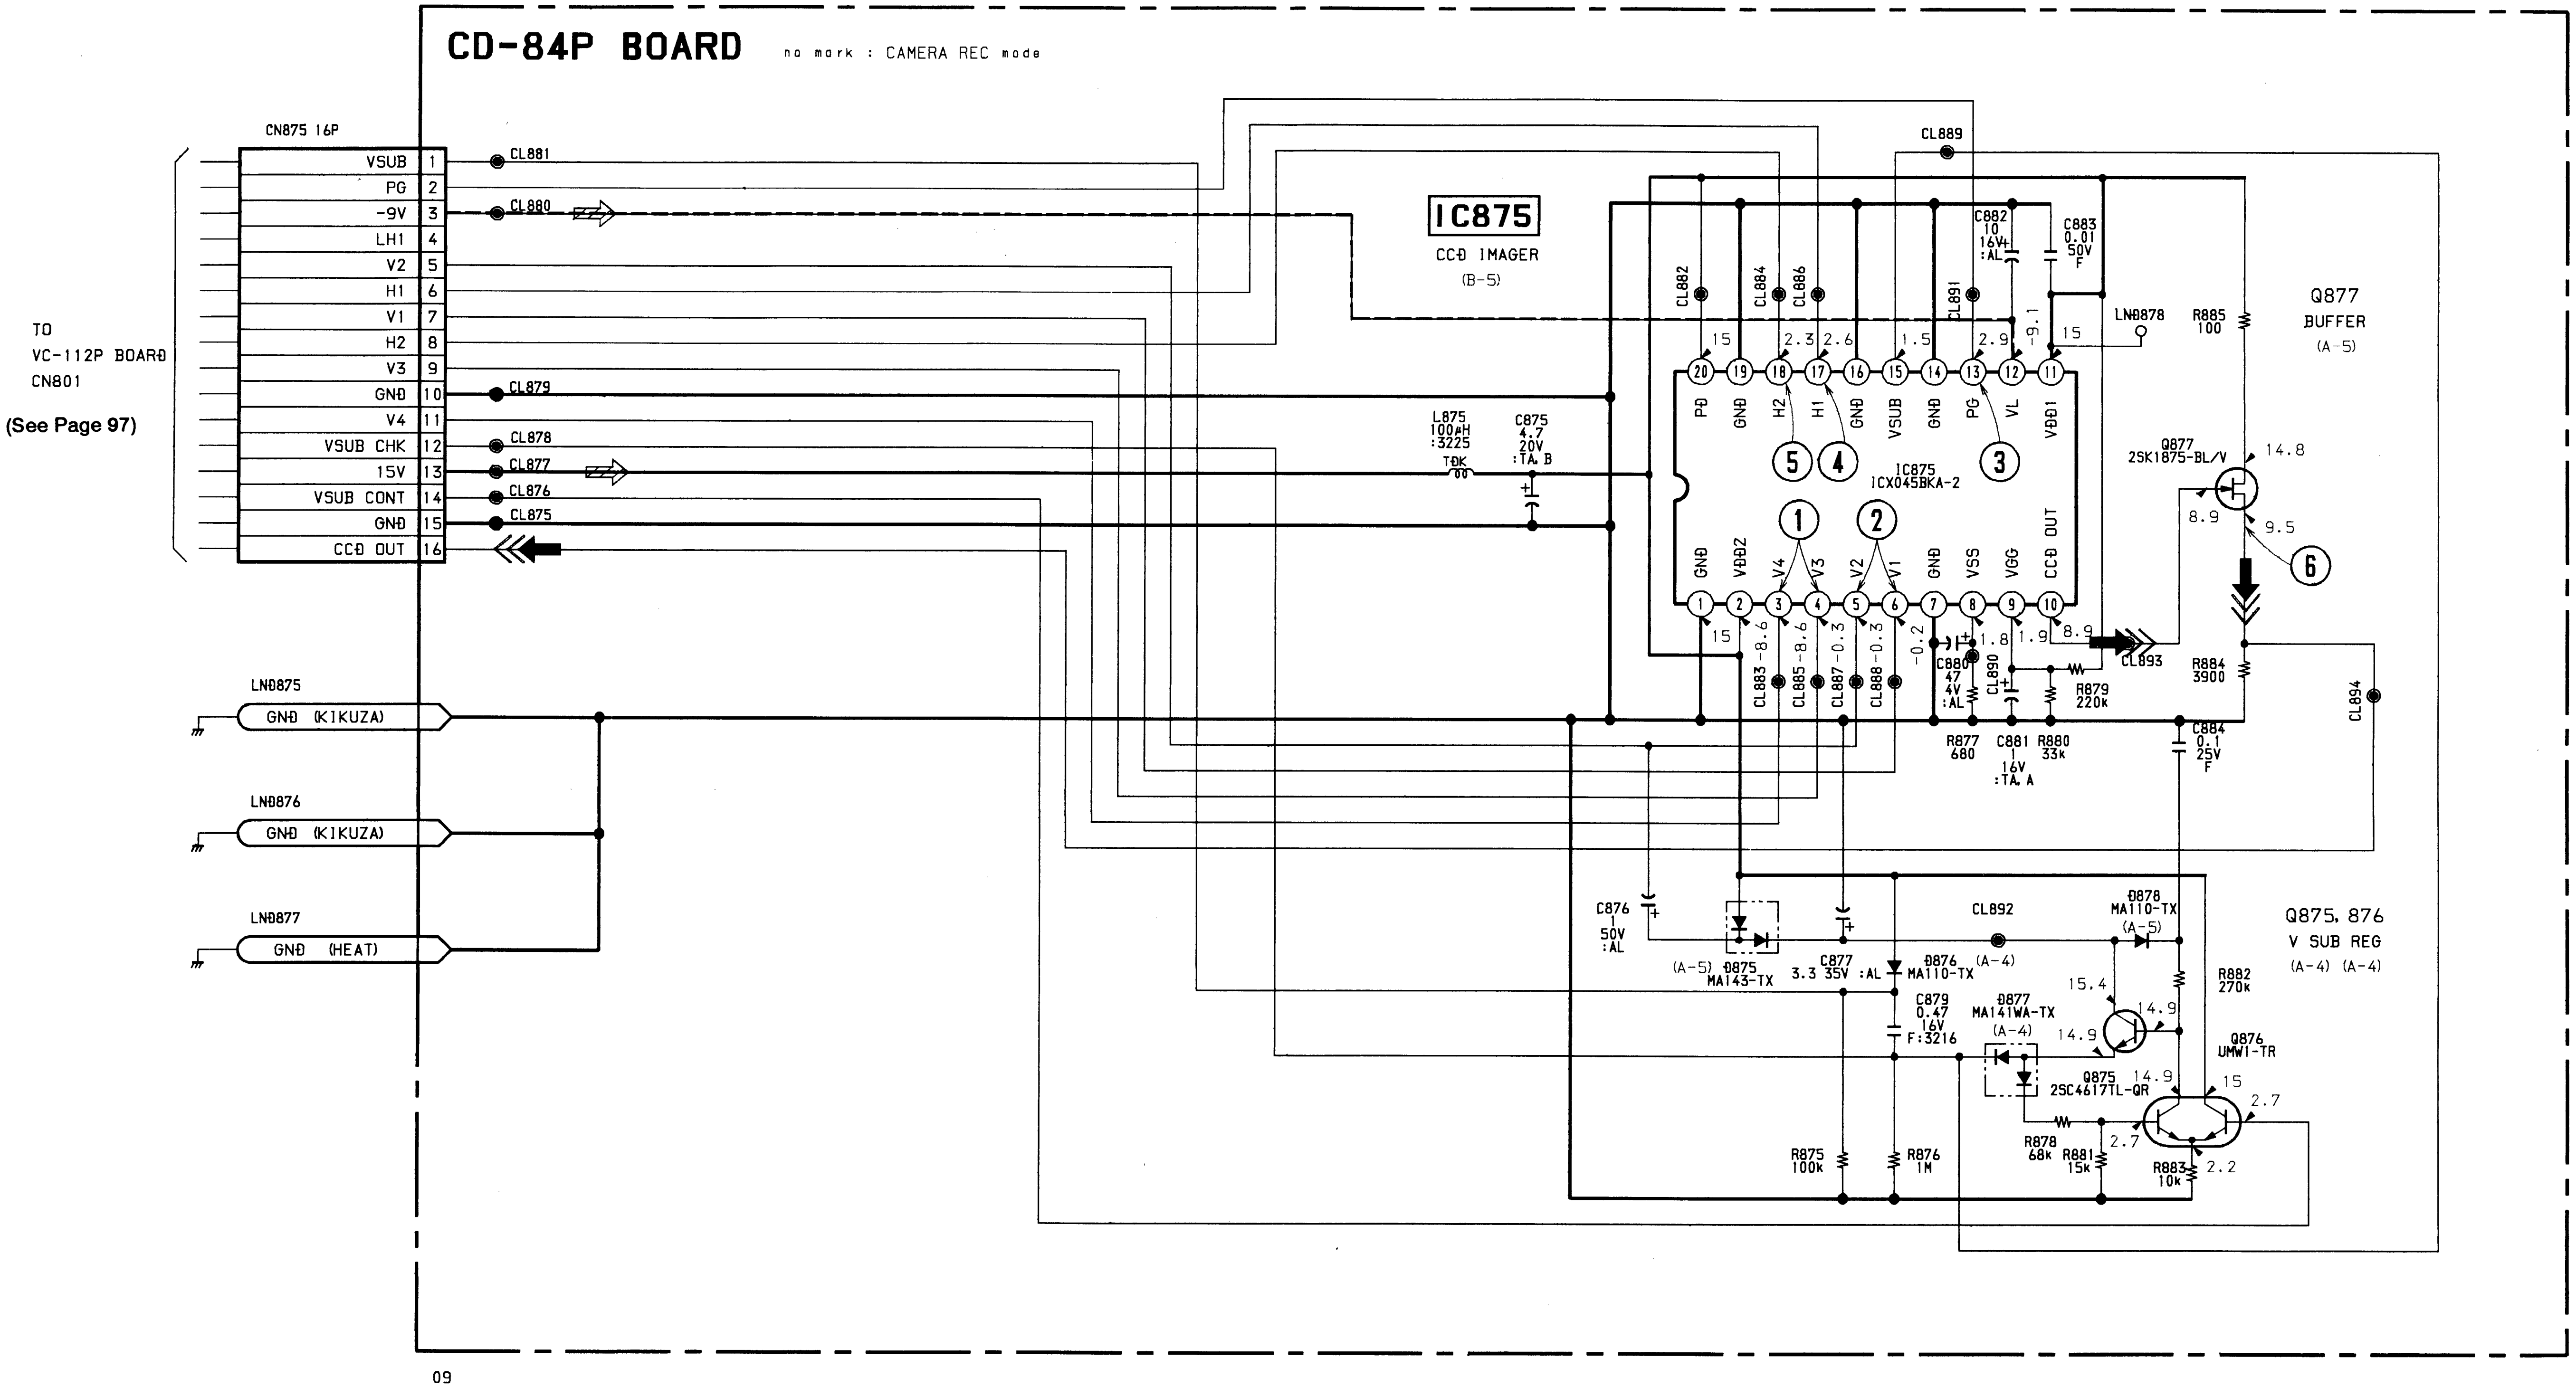
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
A
B
C
D
E
F
G
H
I
J
CD-84P BOARD
no mark : CAMERA REC mode
CN875 16P
VSUB 1
PG 2
-9V 3
LH1 4
V2 5
H1 6
V1 7
H2 8
V3 9
GND 10
V4 11
VSUB CHK 12
15V 13
VSUB CONT 14
GND 15
CCD OUT 16
TO
VC-112P BOARD
CN801
(See Page 97)
CL881
CL880
CL879
CL878
CL877
CL876
CL875
LND875
GND (KIKUZA)
LND876
GND (KIKUZA)
LND877
GND (HEAT)
IC875
CCD IMAGER
(B-5)
L875
100μH
:3225
TDK
C875
4.7
20V
:TA, B
CL882
CL884
CL886
CL891
CL889
C882
10
16V
:AL
C883
0.01
50V
F
LND878
R885
100
Q877
BUFFER
(A-5)
15
2.3
2.6
1.5
2.9
-9.1
15
PD
GND
H2
H1
GND
VSUB
GND
PG
VL
VDD1
IC875
ICX045BKA-2
⑤
④
③
①
②
GND
VDD2
V4
V3
V2
V1
GND
VSS
VGG
CCD OUT
15
-8.6
-8.6
-0.3
-0.3
-0.2
1.8
1.9
8.9
CL883
CL885
CL887
CL888
C880
47
4V
:AL
CL890
R879
220k
CL893
R877
680
C881
1
16V
:TA, A
R880
33k
Q877
2SK1875-BL/V
14.8
8.9
9.5
⑥
R884
3900
C884
0.1
25V
F
CL894
C876
1
50V
:AL
(A-5) D875
MA143-TX
C877
3.3 35V :AL
D876
MA110-TX
(A-4)
CL892
D878
MA110-TX
(A-5)
C879
0.47
16V
F:3216
D877
MA141WA-TX
(A-4)
15.4
14.9
14.9
Q875
2SC4617TL-QR
14.9
15
2.7
2.7
2.2
R882
270k
Q876
UMW1-TR
Q875, 876
V SUB REG
(A-4) (A-4)
R875
100k
R876
1M
R878
68k
R881
15k
R883
10k
09

Note on the CC

- Some of this
  imager (IC901
  The correction
  of the camera
  and also writte
  (upper) of the
  The correctio
  supplied for
  imager to whi
  data label and
  the camera mi
  for input meth
- The CCD ima
  CD-84P board
  When replacin
  from the old b
- Perform all ac
  imager has bee
- Handle the CC
  may be broken
  Also, prevent
  and strong ligh

- **SIGNAL PATH**

	CHROM
REC	
PB	

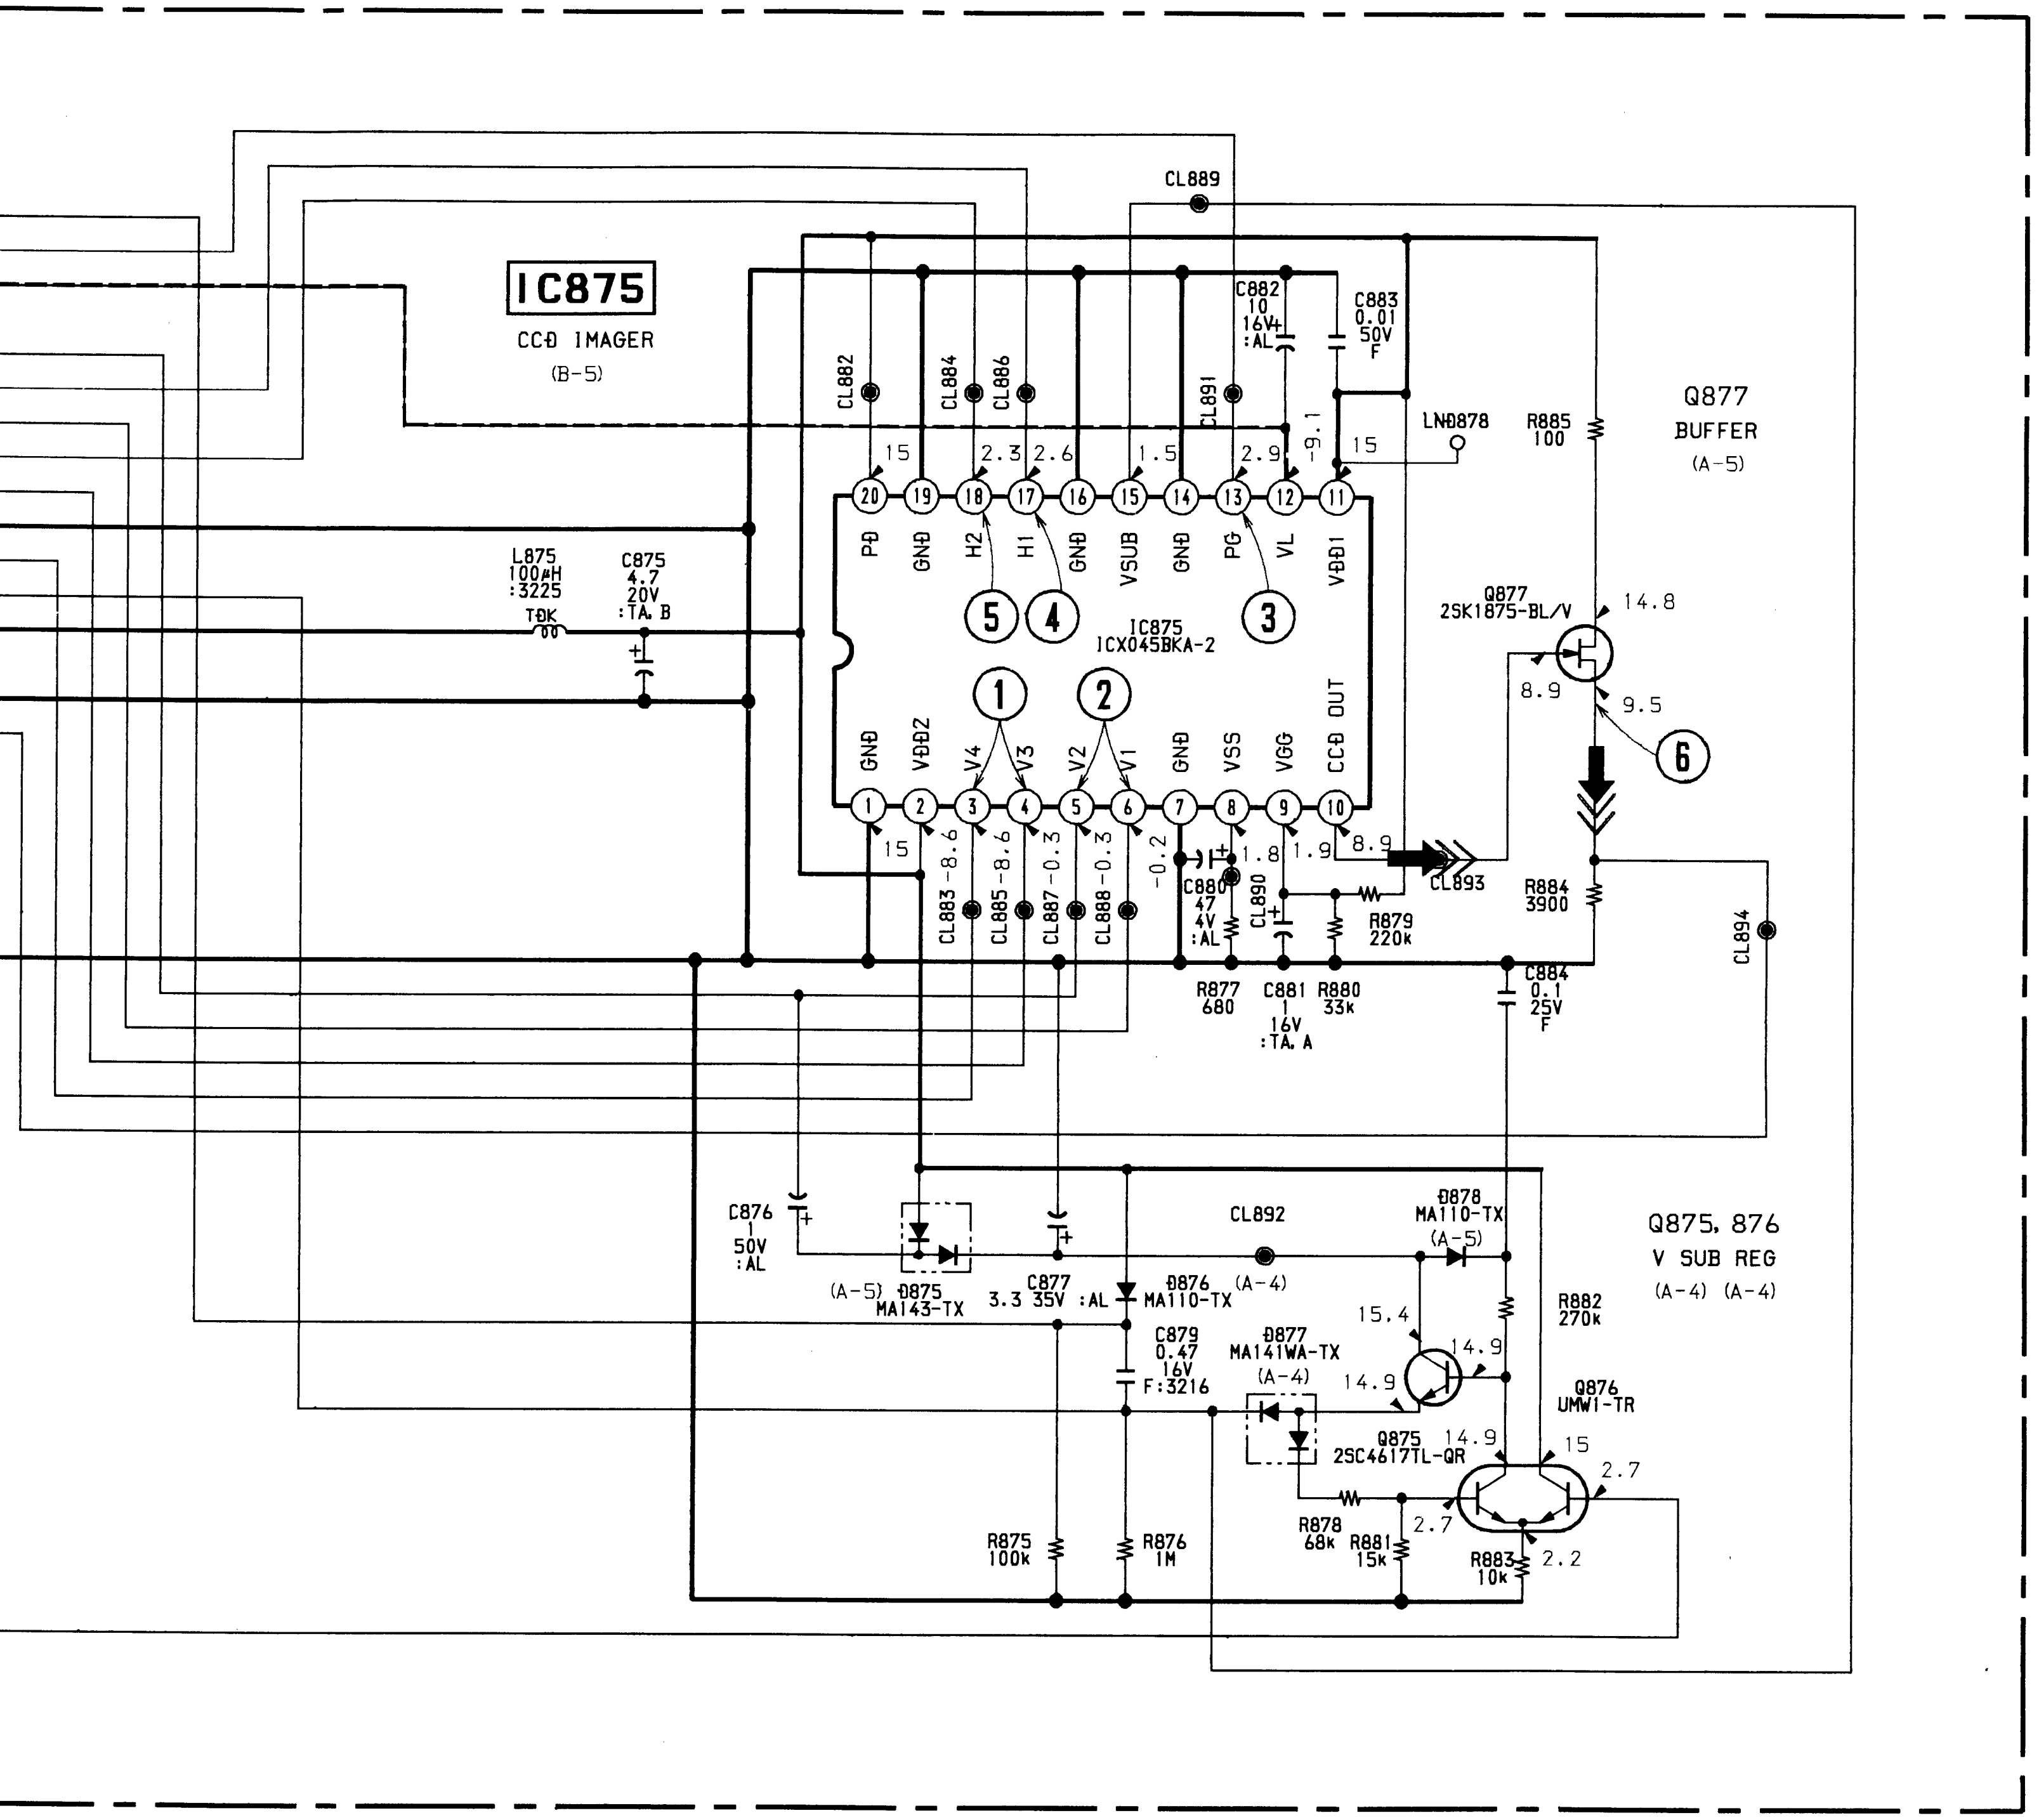
IC875
CCD IMAGER
(B-5)
IC875
ICX045BKA-2
Q877
BUFFER
(A-5)
Q877
2SK1875-BL/V
Q875, 876
V SUB REG
(A-4) (A-4)
PD
GND
H2
H1
GND
VSUB
GND
PG
VL
VDD1
GND
VDD2
V4
V3
V2
V1
GND
VSS
VGG
CCD OUT
CL889
CL882
CL884
CL886
CL891
CL883
CL885
CL887
CL888
CL890
CL892
CL893
CL894
C882 10 16V :AL
C883 0.01 50V F
LND878
R885 100
L875 100μH :3225 TDK
C875 4.7 20V :TA B
C880 47 4V :AL
R877 680
C881 1 16V :TA A
R880 33k
R879 220k
R884 3900
C884 0.1 25V F
C876 1 50V :AL
D875 MA143-TX (A-5)
C877 3.3 35V :AL
D876 MA110-TX (A-4)
D878 MA110-TX (A-5)
C879 0.47 16V F:3216
D877 MA141WA-TX (A-4)
Q875 2SC4617TL-QR
Q876 UMW1-TR
R882 270k
R878 68k
R881 15k
R883 10k
R875 100k
R876 1M
15
2.3
2.6
1.5
2.9
-9.1
15
14.8
8.9
9.5
15
-8.6
-8.6
-0.3
-0.3
-0.2
1.8
1.9
8.9
15.4
14.9
14.9
14.9
15
2.7
2.7
2.2

Note on the CCD Imager replacement

- Some of this units require the correction data by the CCD imager (IC901 on CD-84P board), some do not.
  The correction data is input in F page and addresses 1D to 2C of the camera micro processor (IC709 on VC-112P board), and also written on the CCD data label put on the shield case (upper) of the DD-47P board.
  The correction data is not required for the CCD imager supplied for repair. Therefore, when replacing the CCD imager to which the CCD data label is put, remove the CCD data label and input 00 to F page and addresses 1D to 2C of the camera micro processor. Refer to the camera adjustment for input method.
- The CCD imager is not mounted for the already mounted CD-84P board supplied as the repair parts.
  When replacing the CD-84P board, remove the CCD imager from the old board and install on the new board.
- Perform all adjustments of the camera block when the CCD imager has been replaced.
- Handle the CCD imager with attention such as MOS IC as it may be broken by static electricity in the structure.
  Also, prevent the receiving light section from dust attached and strong light.

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡	
PB				

CD-84P BOARD

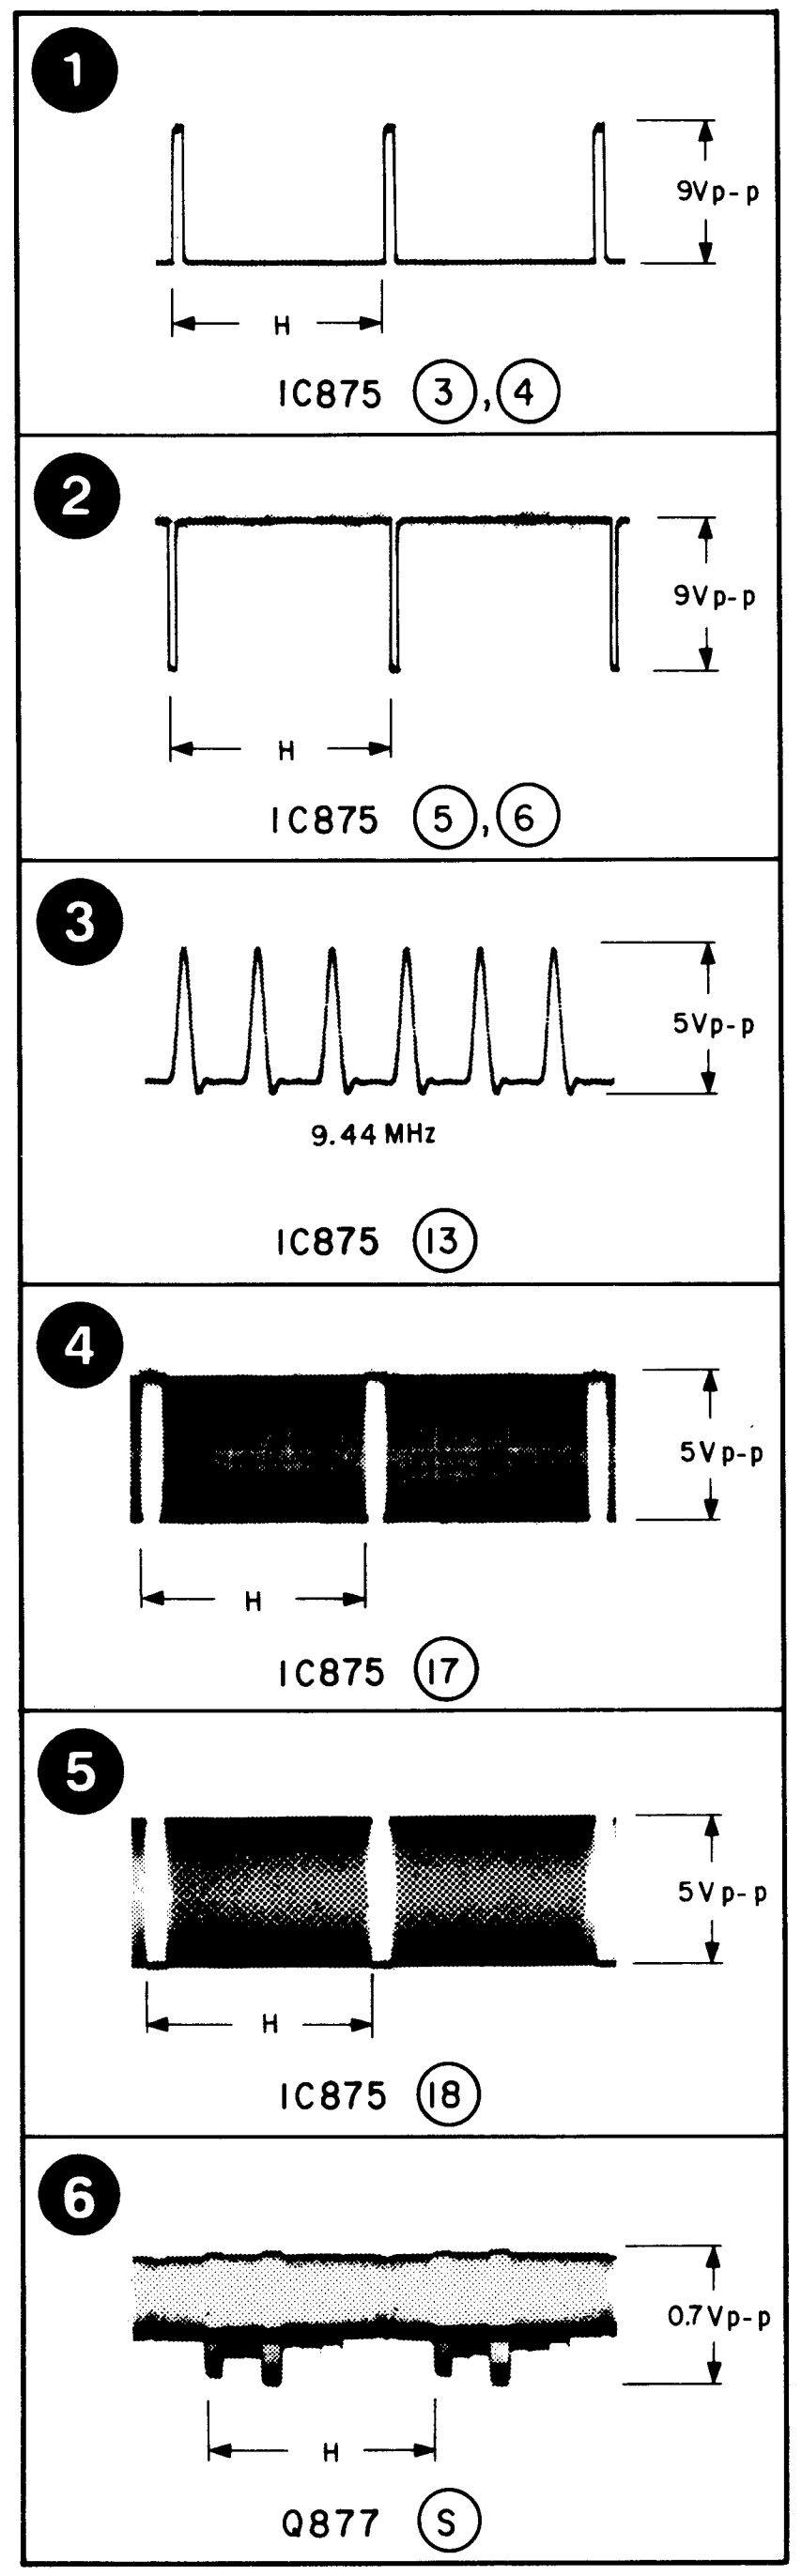

VC-112P (CAMERA PROCESS, LENS DRIVE) PRINTED WIRING BOARD

— Ref. No. VC-112P BOARD: 2000 series —

VC-112P BOARD (COMPONENT SIDE)

VC-112P BOARD (CONDUCTOR SIDE)

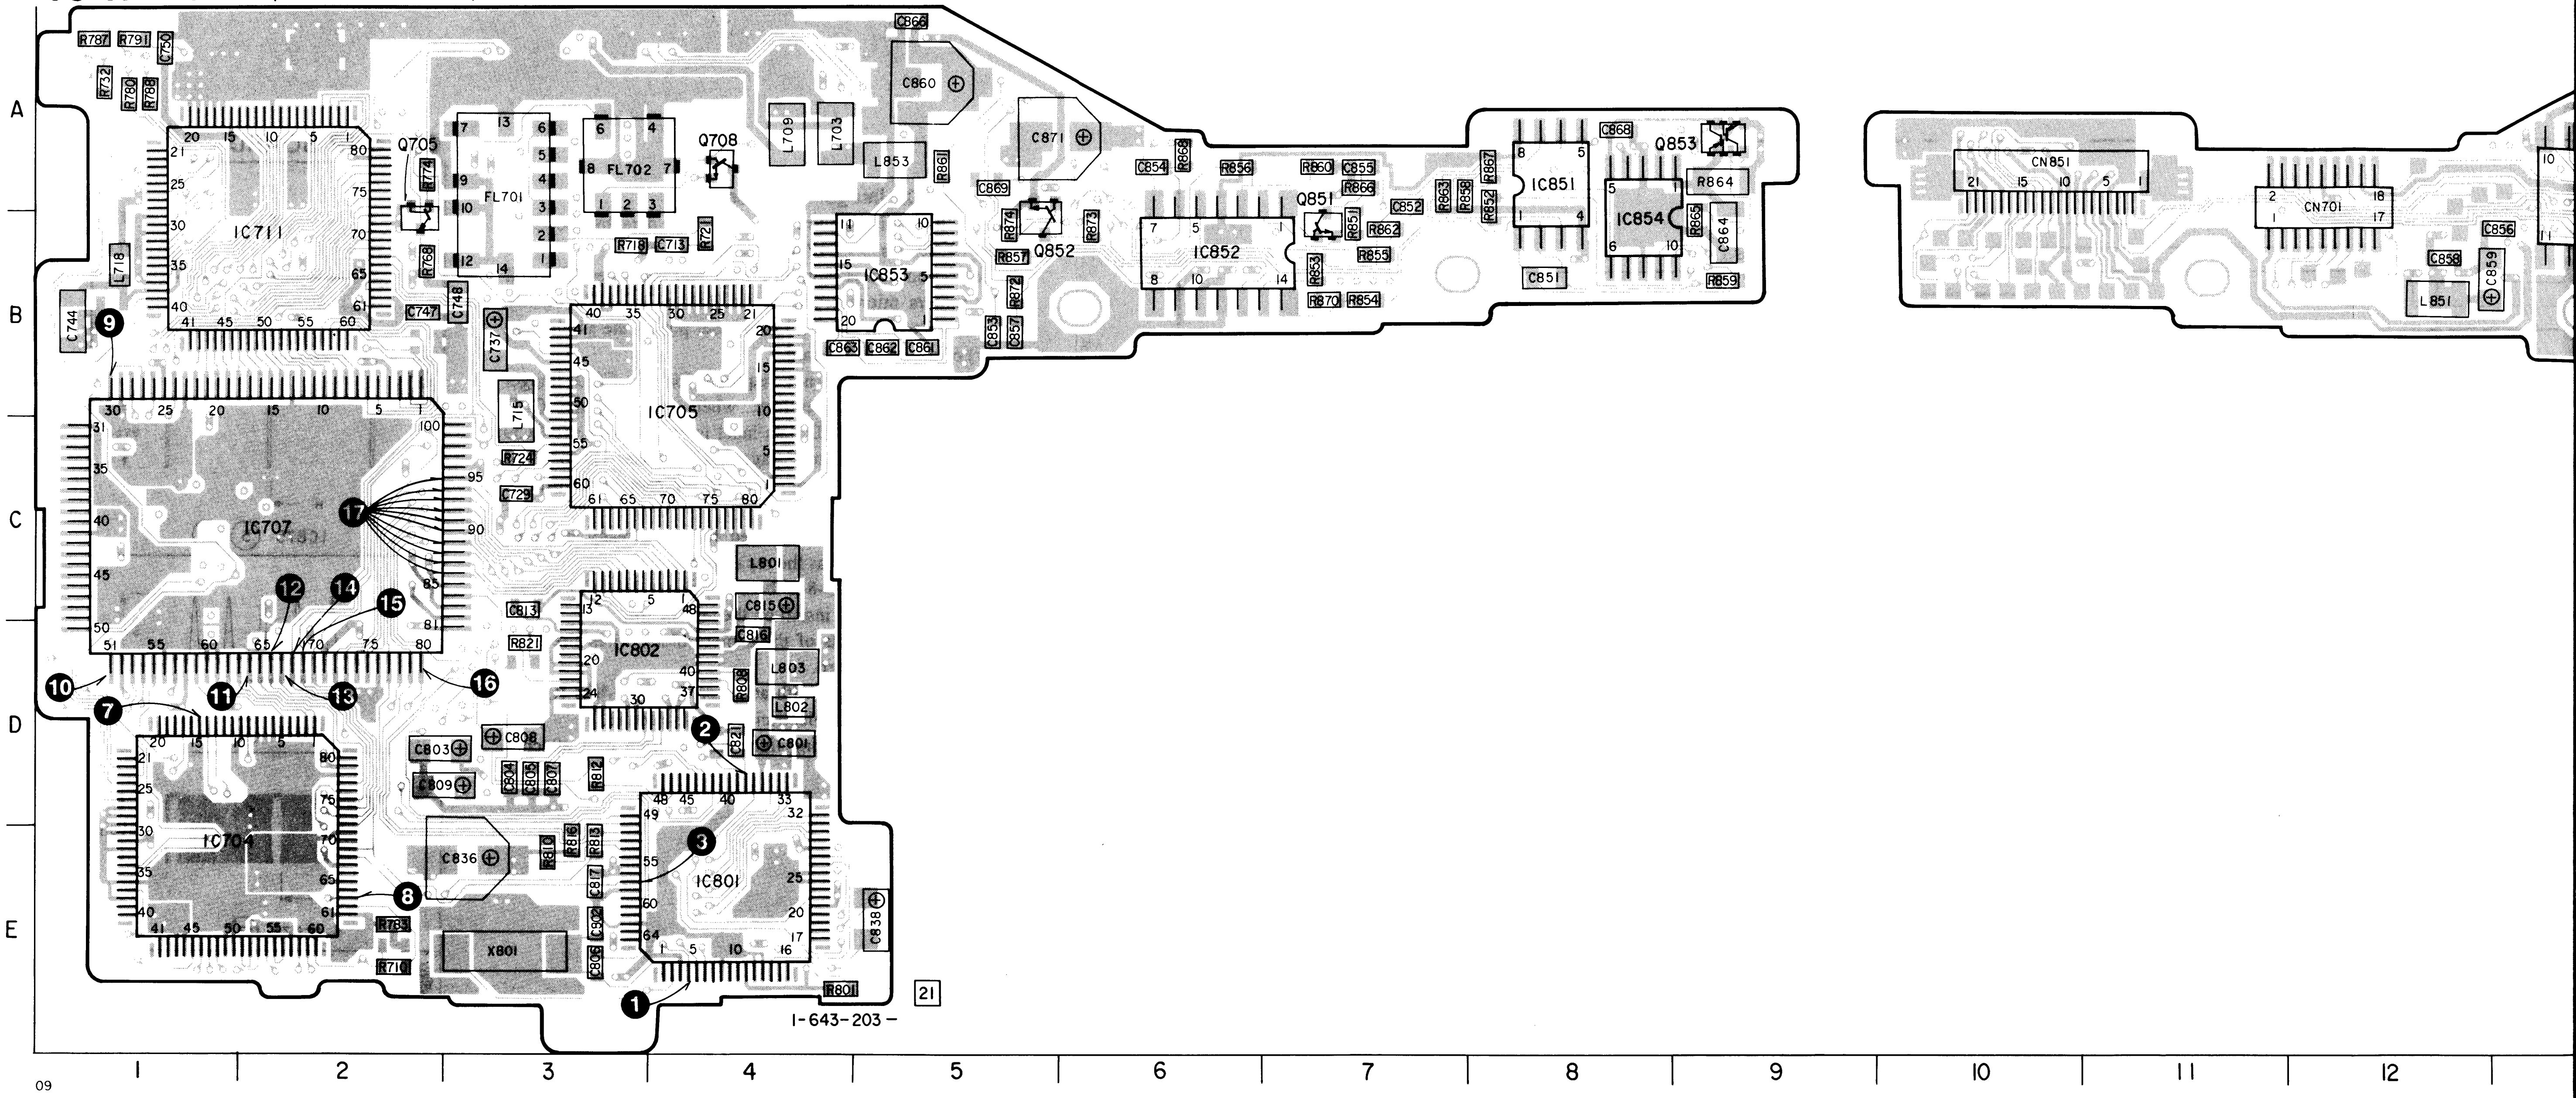
A
B
C
D
E
1
2
3
4
5
6
7
8
9
10
11
12
09
IC711
IC707
IC705
IC704
IC802
IC801
IC853
IC852
IC851
IC854
FL701
FL702
Q705
Q708
Q851
Q852
Q853
CN851
CN701
X801
L801
L802
L803
L853
L851
L709
L703
L715
L718
C860
C871
C836
C838
C801
C803
C808
C809
C815
C737
C744
C747
C748
C750
C866
C869
C851
C858
C859
C856
C864
R787
R791
R732
R790
R788
R774
R769
R718
C713
R721
R801
R710
R785
1
2
3
7
8
9
10
11
12
13
14
15
16
17
21
1-643-203-

- **For printed wiring boards.**
- VC-112P board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

< IC >

IC701	8-759-243-19	IC	TC7SU04F
IC702	8-759-064-36	IC	MB88346BPFV
IC703	8-759-710-07	IC	NJM2234M
IC704	8-752-348-92	IC	CXD2101AR
IC705	8-759-069-19	IC	CXD2103AR
IC706	8-752-337-36	IC	CXD2104N
IC707	8-752-344-53	IC	CXD2100Q
IC709	8-752-834-64	IC	CXP80624-281R
IC710	8-759-519-14	IC	MB8464-15LLPFTN
IC711	8-759-518-81	IC	CXD2112R
IC712	8-759-044-78	IC	AK6420F
IC801	8-752-337-34	IC	CXD1257R
IC802	8-752-056-39	IC	CXA1507BR
IC803	8-752-053-26	IC	CXA1399Q
IC804	8-752-327-48	IC	CXD1250N
IC805	8-752-054-61	IC	CXA1390AR
IC851	8-759-701-24	IC	NJM3414M
IC852	8-759-998-96	IC	LM324D
IC853	8-759-058-47	IC	MPC1724VMEL
IC854	8-759-823-51	IC	LB1830M
IC855	8-759-059-07	IC	LC78865M

< TRANSISTOR >

Q701	8-729-928-87	TRANSISTOR	DTC124EE
Q702	8-729-427-74	TRANSISTOR	XP4601
Q703	8-729-427-74	TRANSISTOR	XP4601
Q704	8-729-928-19	TRANSISTOR	2SA1774R
Q705	8-729-928-81	TRANSISTOR	DTC144EE
Q706	8-729-927-XX	TRANSISTOR	2SC4617TL
Q707	8-729-928-36	TRANSISTOR	DTA114EE
Q708	8-729-927-97	TRANSISTOR	2SC4617TL
Q709	8-729-427-72	TRANSISTOR	XP4501
Q801	8-729-927-XX	TRANSISTOR	2SC4617TL
Q802	8-729-427-70	TRANSISTOR	XP4401
Q851	8-729-927-XX	TRANSISTOR	2SC4617TL
Q852	8-729-907-00	TRANSISTOR	DTC114EU
Q853	8-729-427-70	TRANSISTOR	XP4401

VC-112P BOARD (CONDUCTOR SIDE)

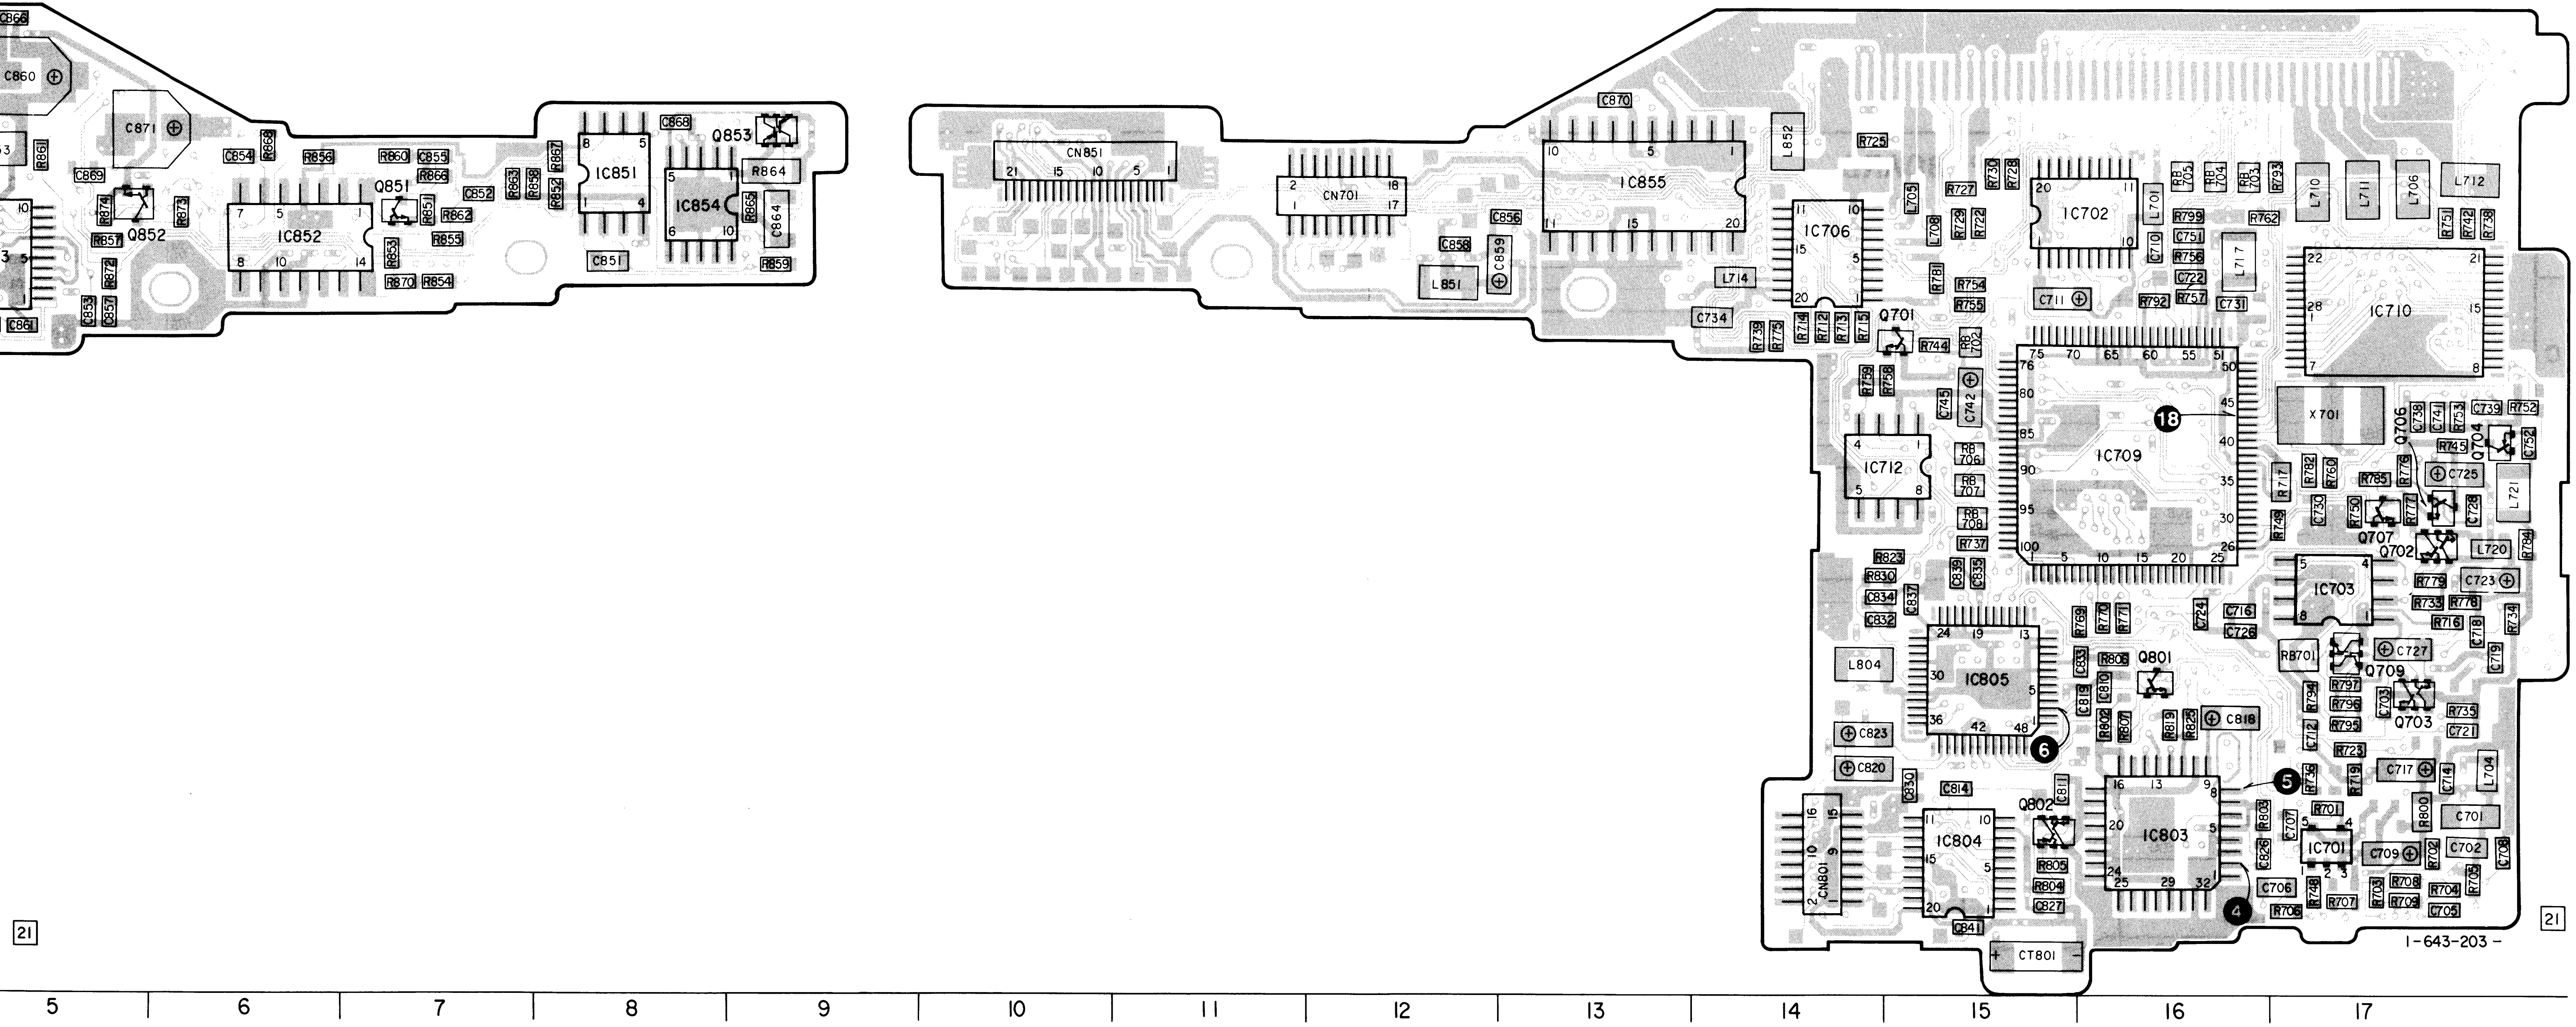
C866
C860
C871
C869
R861
R874
R857
Q852
R873
R872
C853
C857
C861
C854
R868
R856
R860
C855
R866
Q851
R851
R862
R853
R855
R870
R854
IC852
C852
R863
R858
R852
R867
IC851
C868
Q853
IC854
R864
R865
C864
C851
R859
CN851
CN701
C870
IC855
C856
C858
C859
L851
L852
L714
C734
IC706
R725
R727
R730
R728
R729
R722
IC702
L701
L708
R705
R781
R754
R755
C711
C710
R799
C751
R756
C722
R792
R757
C731
L717
R762
R793
L710
L711
L706
L712
R751
R742
R738
IC710
Q701
R744
R739
R775
R714
R712
R713
R715
RB 702
RB 705
RB 704
RB 703
R759
R758
C745
C742
IC709
RB 706
RB 707
RB 708
R737
IC712
X701
Q706
C738
C741
R753
C739
R752
Q704
R745
R785
R776
C725
R782
R760
R717
R749
C730
R750
R777
C728
L721
Q707
Q702
L720
R784
R823
R830
C834
C832
C837
C839
C835
IC703
R779
C723
R733
R778
R716
R734
C724
C716
C726
R769
R770
R771
RB701
C727
Q709
R797
R796
R795
R794
R735
C721
Q703
L804
IC805
C833
R806
Q801
C819
C810
R802
R807
R819
R829
C818
C823
C820
C830
C814
C811
Q802
R805
R804
C827
C841
IC804
CN801
IC803
R803
C826
C707
R701
C712
R736
R723
R719
C717
C714
L704
C701
R800
IC701
C709
R702
C702
C708
C706
R748
R703
R708
R709
R704
R705
C705
R706
R707
CT801
18
6
5
4
21
1-643-203-
5
6
7
8
9
10
11
12
13
14
15
16
17

>

TC7SU04F
MB88346BPFV
NJM2234M
CXD2101AR
CXD2103AR
CXD2104N
CXD2100Q
CXP80624-281R
MB8464-15LLPFTN
CXD2112R

IC712	8-759-044-78	IC	AK6420F
IC801	8-752-337-34	IC	CXD1257R
IC802	8-752-056-39	IC	CXA1507BR
IC803	8-752-053-26	IC	CXA1399Q
IC804	8-752-327-48	IC	CXD1250N
IC805	8-752-054-61	IC	CXA1390AR
IC851	8-759-701-24	IC	NJM3414M
IC852	8-759-998-96	IC	LM324D
IC853	8-759-058-47	IC	MPC1724VMEL
IC854	8-759-823-51	IC	LB1830M
IC855	8-759-059-07	IC	LC78865M

< TRANSISTOR >

Q701	8-729-928-87	TRANSISTOR	DTC124EE
Q702	8-729-427-74	TRANSISTOR	XP4601
Q703	8-729-427-74	TRANSISTOR	XP4601
Q704	8-729-928-19	TRANSISTOR	2SA1774R
Q705	8-729-928-81	TRANSISTOR	DTC144EE
Q706	8-729-927-XX	TRANSISTOR	2SC4617TL
Q707	8-729-928-36	TRANSISTOR	DTA114EE
Q708	8-729-927-97	TRANSISTOR	2SC4617TL
Q709	8-729-427-72	TRANSISTOR	XP4501
Q801	8-729-927-XX	TRANSISTOR	2SC4617TL
Q802	8-729-427-70	TRANSISTOR	XP4401
Q851	8-729-927-XX	TRANSISTOR	2SC4617TL
Q852	8-729-907-00	TRANSISTOR	DTC114EU
Q853	8-729-427-70	TRANSISTOR	XP4401

VC-112P (CAMERA PROCESS) SCHEMATIC DIAGRAM

• Refer to , 4 for Printed Wiring Board.

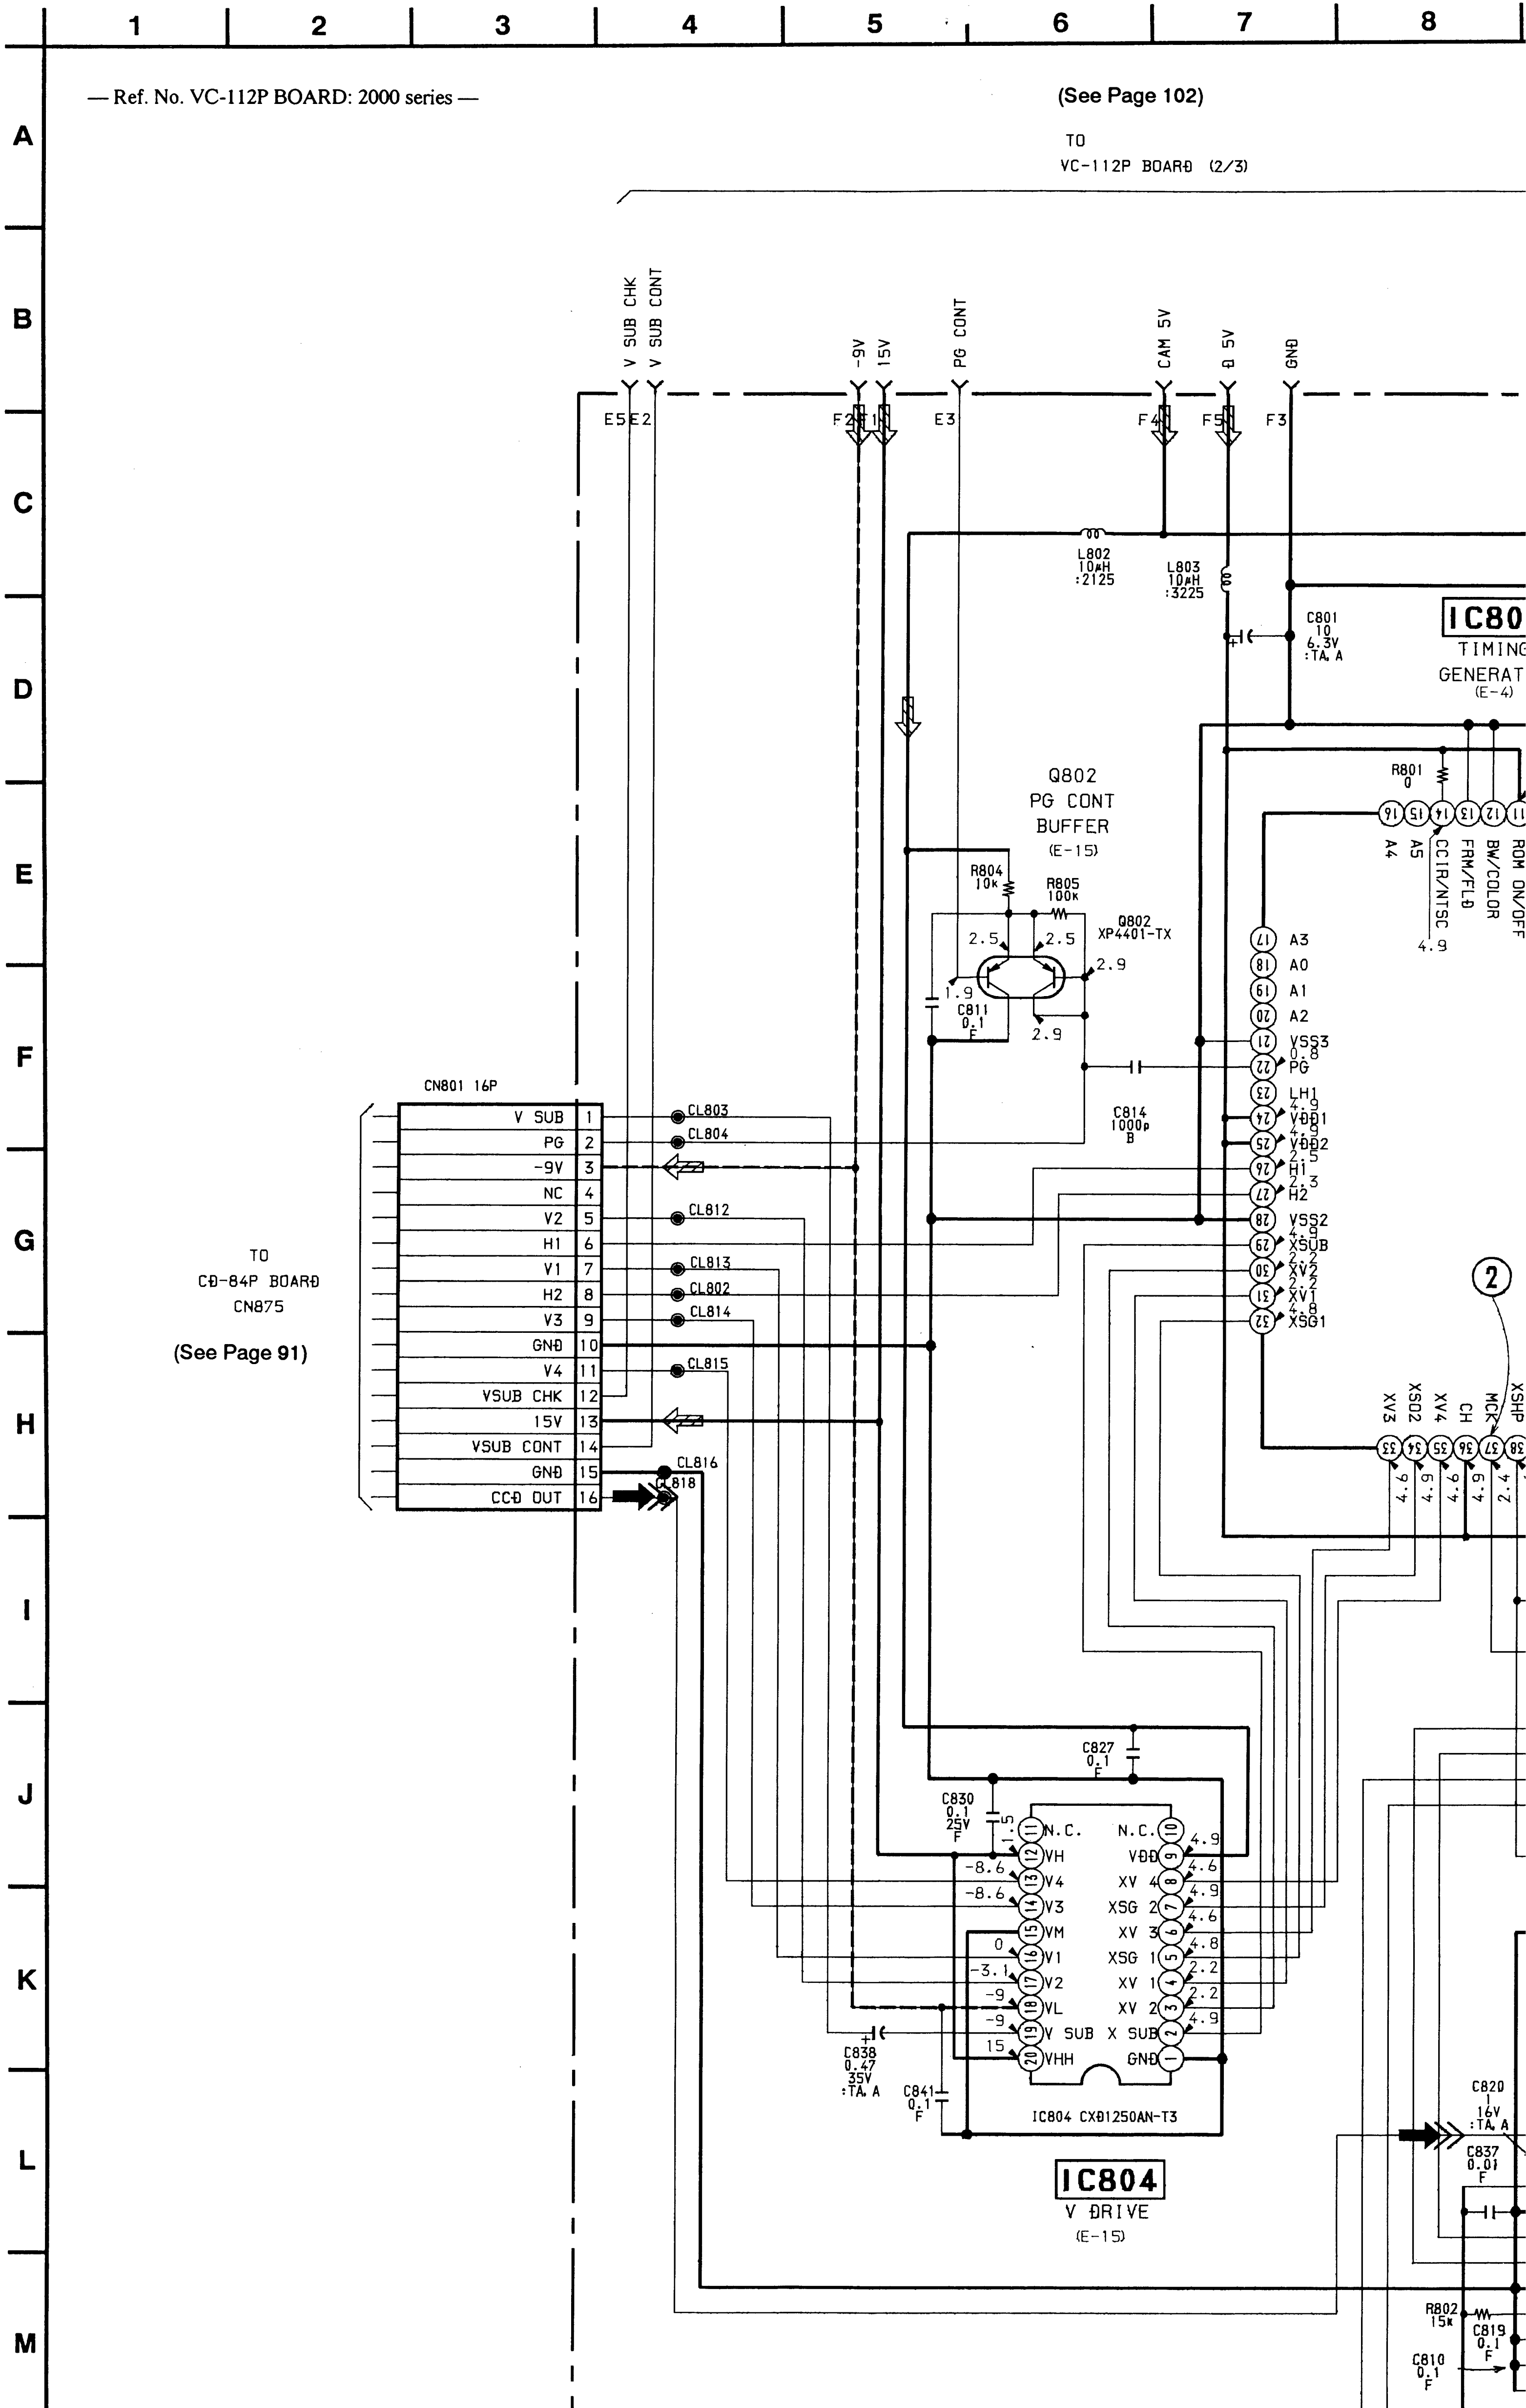
1
2
3
4
5
6
7
8
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
— Ref. No. VC-112P BOARD: 2000 series —
(See Page 102)
TO
VC-112P BOARD (2/3)
V SUB CHK
V SUB CONT
-9V
15V
PG CONT
CAM 5V
D 5V
GND
E5
E2
F2
F1
E3
F4
F5
F3
L802
10μH
:2125
L803
10μH
:3225
C801
10
6.3V
:TA A
IC80
TIMING
GENERAT
(E-4)
Q802
PG CONT
BUFFER
(E-15)
R804
10k
R805
100k
Q802
XP4401-TX
2.5
2.5
2.9
1.9
C811
0.1
F
2.9
C814
1000p
B
R801
0
A4
A5
CCIR/NTSC
FRM/FLD
BW/COLOR
ROM ON/OFF
4.9
A3
A0
A1
A2
VSS3
PG
LH1
VDD1
VDD2
H1
H2
VSS2
XSUB
XV2
XV1
XSG1
XV3
XSD2
XV4
CH
MCK
XSHP
②
CN801 16P
V SUB 1
PG 2
-9V 3
NC 4
V2 5
H1 6
V1 7
H2 8
V3 9
GND 10
V4 11
VSUB CHK 12
15V 13
VSUB CONT 14
GND 15
CCD OUT 16
CL803
CL804
CL812
CL813
CL802
CL814
CL815
CL816
CL818
TO
CD-84P BOARD
CN875
(See Page 91)
C827
0.1
F
C830
0.1
25V
F
N.C.
VH
V4
V3
VM
V1
V2
VL
V SUB
VHH
N.C.
VDD
XV 4
XSG 2
XV 3
XSG 1
XV 1
XV 2
X SUB
GND
-8.6
-8.6
0
-3.1
-9
-9
15
4.9
4.6
4.9
4.6
4.8
2.2
2.2
4.9
C838
0.47
35V
:TA A
C841
0.1
F
IC804 CXD1250AN-T3
IC804
V DRIVE
(E-15)
C820
1
16V
:TA A
C837
0.01
F
R802
15k
C819
0.1
F
C810
0.1
F

ard.

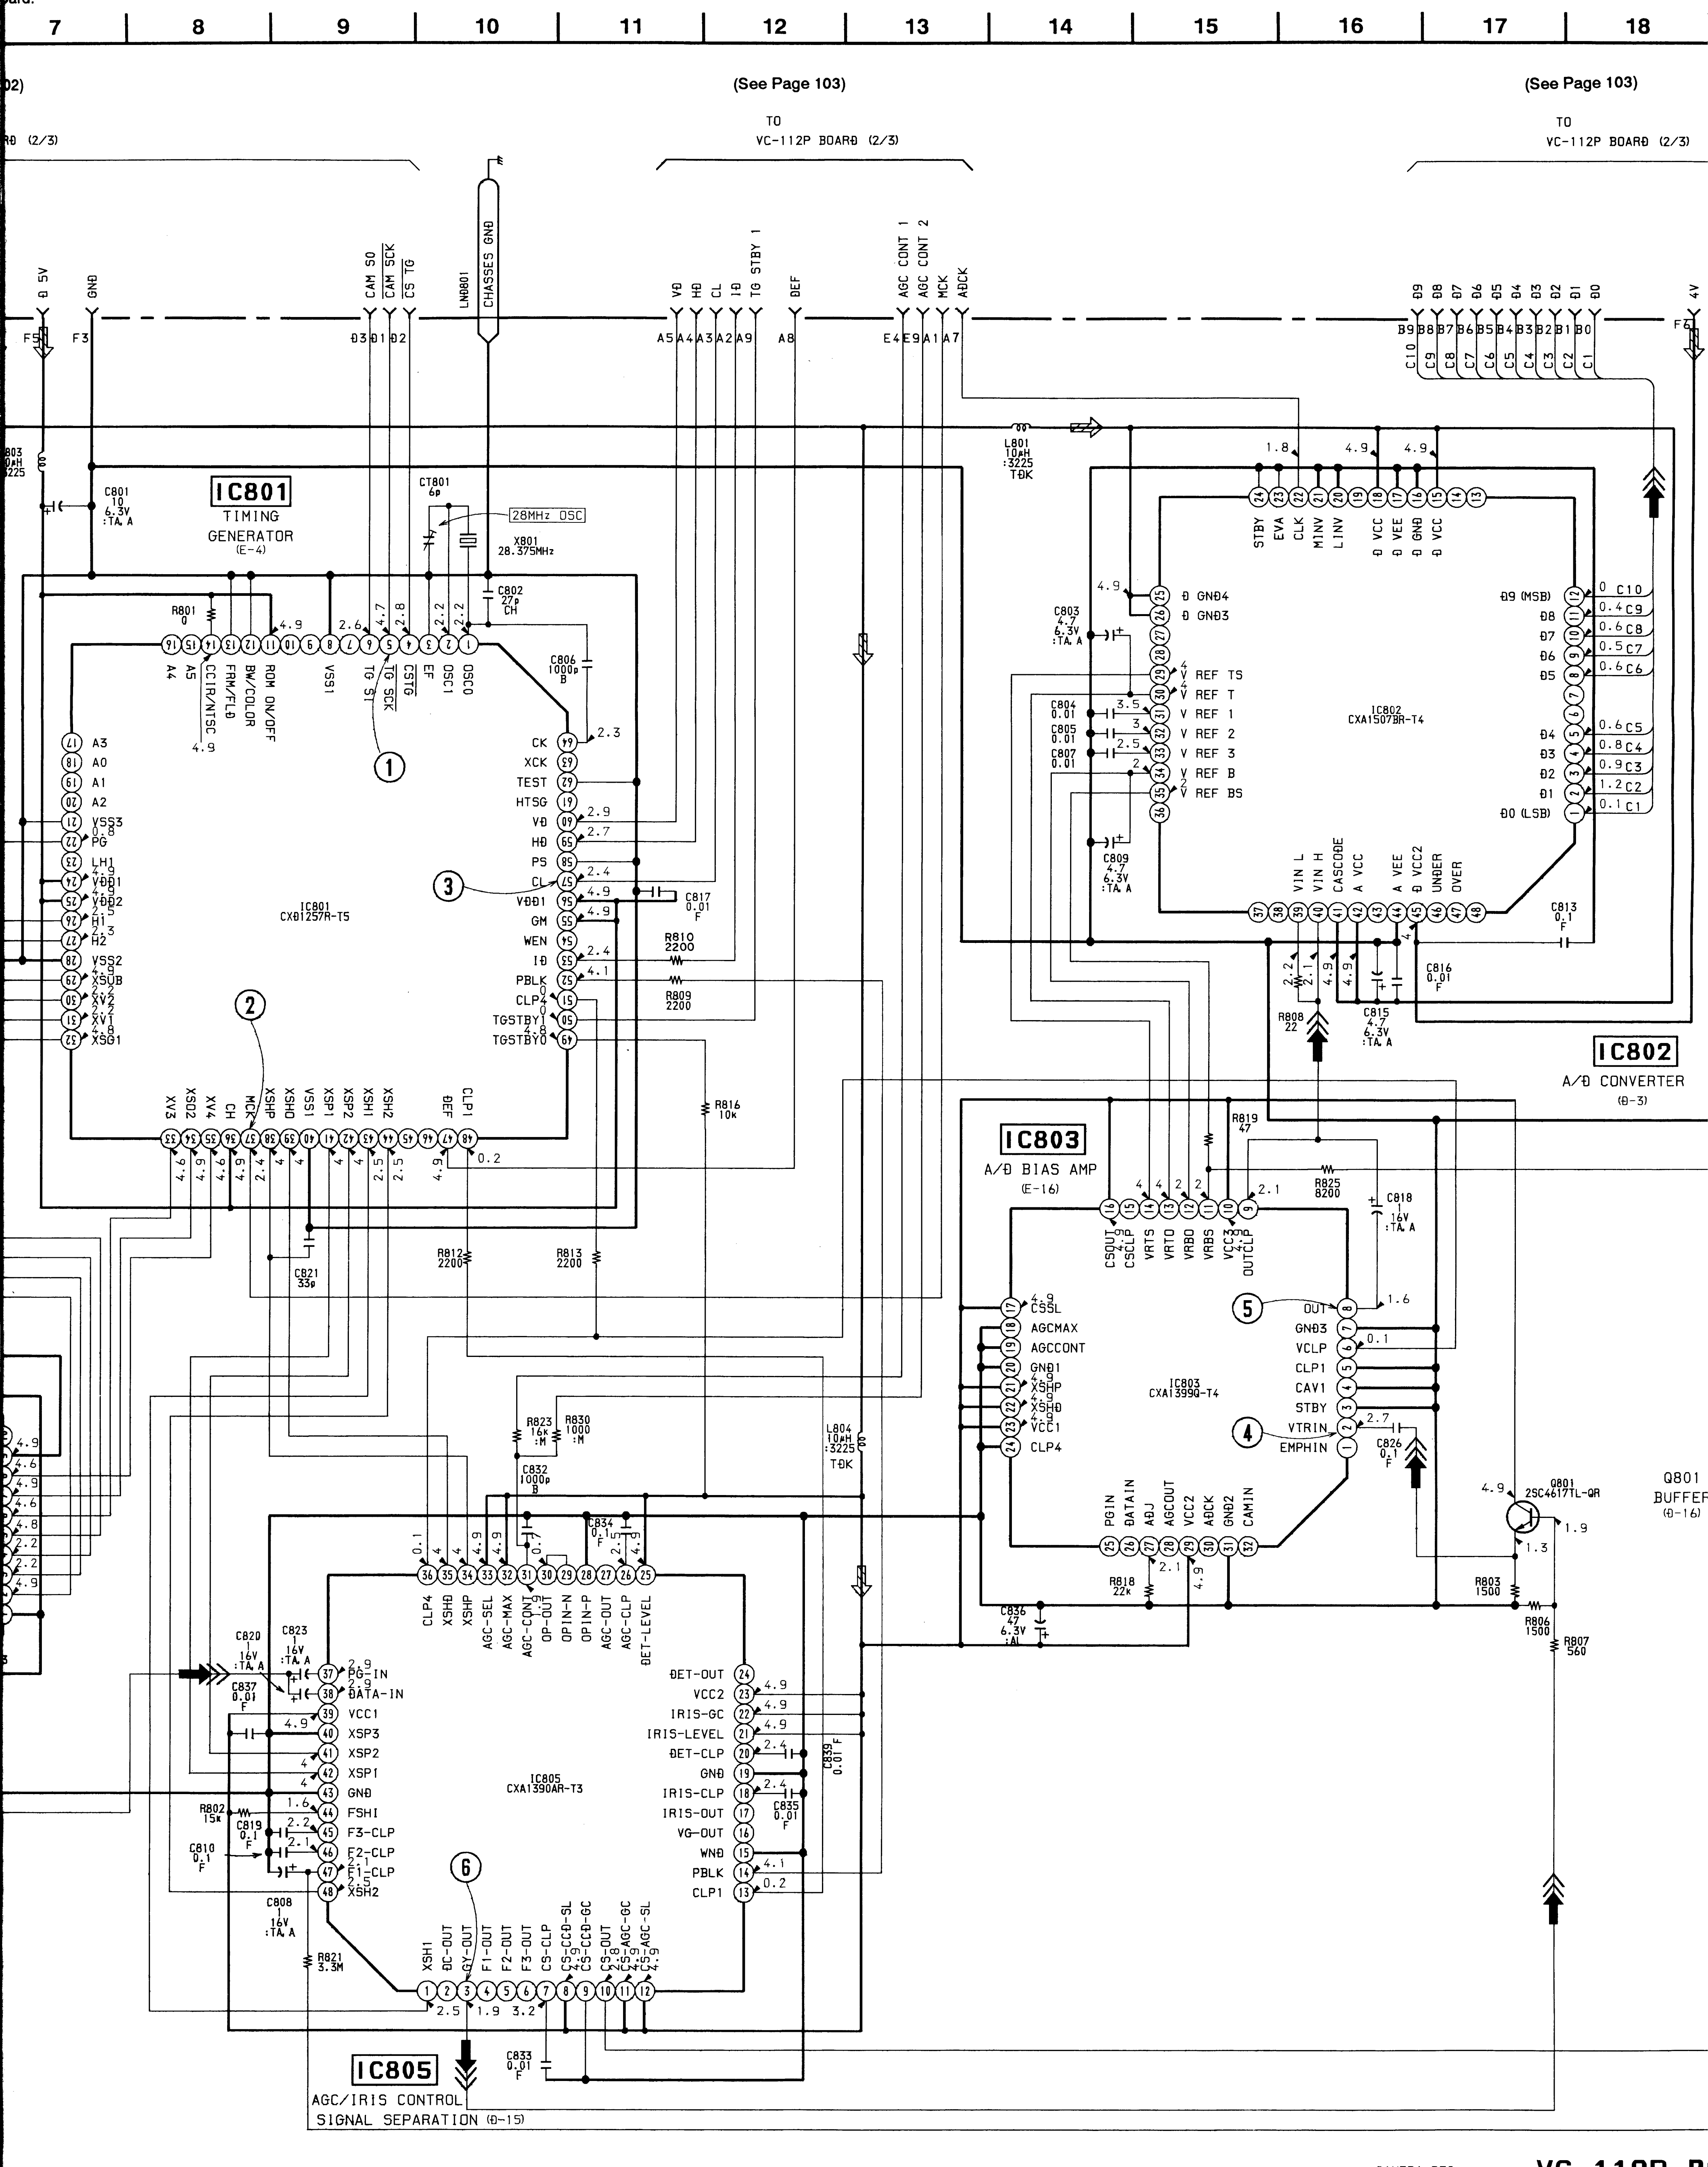
7
8
9
10
11
12
13
14
15
16
17
18
(See Page 103)
TO
VC-112P BOARD (2/3)
(See Page 103)
TO
VC-112P BOARD (2/3)
IC801
TIMING
GENERATOR
(E-4)
IC801
CXD1257R-T5
CT801
6p
28MHz OSC
X801
28.375MHz
C801
10
6.3V
:TA A
C802
27p
CH
C806
1000p
B
C817
0.01
F
R801
0
R810
2200
R809
2200
R816
10k
R812
2200
R813
2200
C821
33p
CAM SO
CAM SCK
CS TG
LND801
CHASSES GND
VD
HD
CL
ID
TG STBY 1
DEF
AGC CONT 1
AGC CONT 2
MCK
ADCK
D 5V
GND
L801
10μH
:3225
TDK
IC802
A/D CONVERTER
(D-3)
IC802
CXA1507BR-T4
STBY
EVA
CLK
MINV
LINV
D VCC
D VEE
D GND
D VCC
D GND4
D GND3
V REF TS
V REF T
V REF 1
V REF 2
V REF 3
V REF B
V REF BS
VIN L
VIN H
CASCODE
A VCC
A VEE
D VCC2
UNDER
OVER
D9 (MSB)
D8
D7
D6
D5
D4
D3
D2
D1
D0 (LSB)
C803
4.7
6.3V
:TA A
C804
0.01
C805
0.01
C807
0.01
C809
4.7
6.3V
:TA A
C813
0.1
F
C816
0.01
F
C815
4.7
6.3V
:TA A
R808
22
IC803
A/D BIAS AMP
(E-16)
IC803
CXA1399Q-T4
CSOUT
CSCLP
VRTS
VRTO
VRBO
VRBS
VCC3
OUTCLP
OUT
GND3
VCLP
CLP1
CAV1
STBY
VTRIN
EMPHIN
CSSL
AGCMAX
AGCCONT
GND1
XSHP
XSHD
VCC1
CLP4
PGIN
DATAIN
ADJ
AGCOUT
VCC2
ADCK
GND2
CAMIN
R819
47
R825
8200
C818
1
16V
:TA A
C826
0.1
F
R818
22k
C836
47
6.3V
:AL
Q801
2SC4617TL-QR
Q801
BUFFER
(D-16)
R803
1500
R806
1500
R807
560
L804
10μH
:3225
TDK
R823
16k
:M
R830
1000
:M
C832
1000p
B
C834
0.1
F
IC805
CXA1390AR-T3
IC805
AGC/IRIS CONTROL
SIGNAL SEPARATION (D-15)
CLP4
XSHD
XSHP
AGC-SEL
AGC-MAX
AGC-CONT
OP-OUT
OPIN-N
OPIN-P
AGC-OUT
AGC-CLP
DET-LEVEL
PG-IN
DATA-IN
VCC1
XSP3
XSP2
XSP1
GND
FSHI
F3-CLP
F2-CLP
F1-CLP
XSH2
DET-OUT
VCC2
IRIS-GC
IRIS-LEVEL
DET-CLP
GND
IRIS-CLP
IRIS-OUT
VG-OUT
WND
PBLK
CLP1
XSH1
DC-OUT
GY-OUT
F1-OUT
F2-OUT
F3-OUT
CS-CLP
CS-CCD-SL
CS-CCD-GC
CS-OUT
CS-AGC-GC
CS-AGC-SL
C820
1
16V
:TA A
C823
1
16V
:TA A
C837
0.01
F
R802
15k
C819
0.1
F
C810
0.1
F
C808
1
16V
:TA A
R821
3.3M
C833
0.01
F
C835
0.01
F
C839
0.01
F
①
②
③
④
⑤
⑥

no mark : CAMERA REC mode

VC-112P B

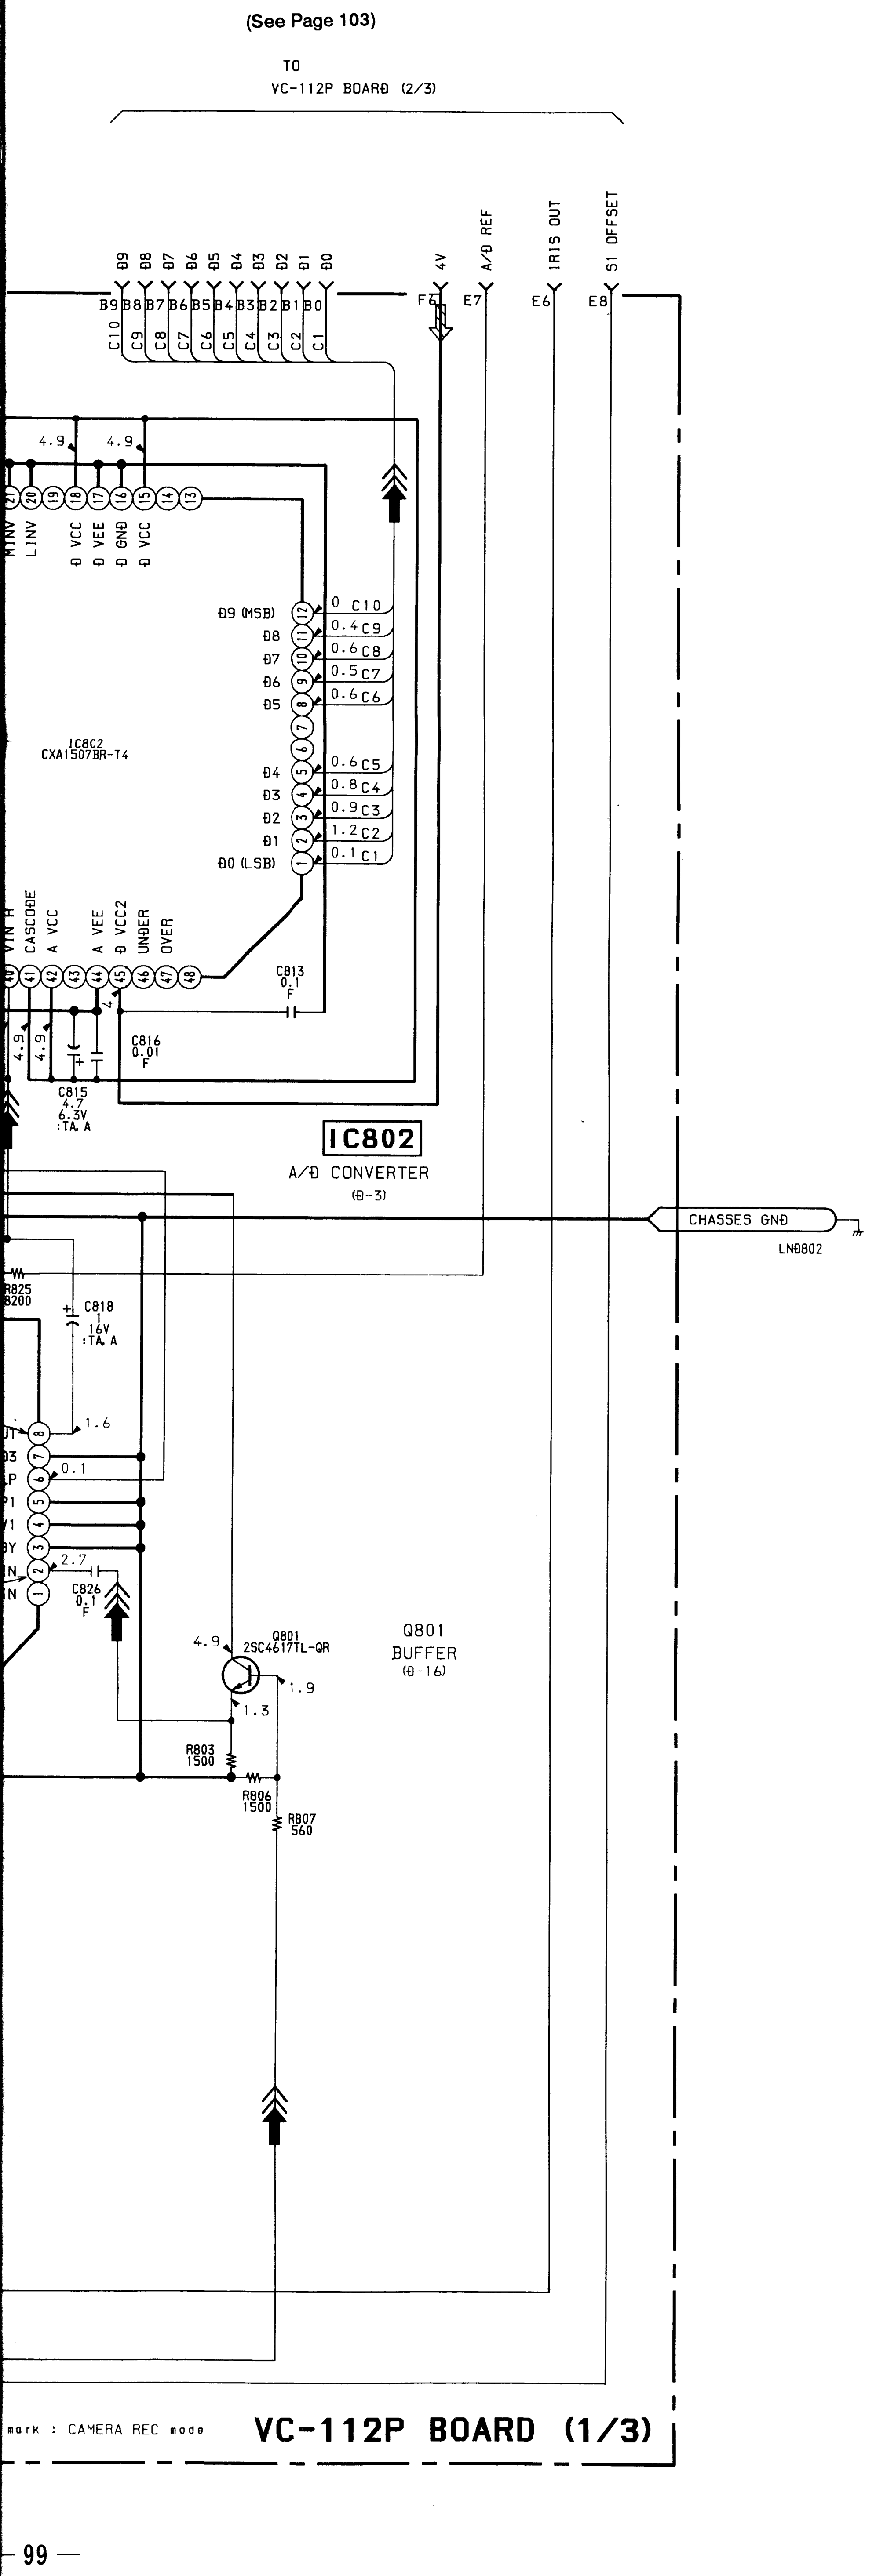
(See Page 103)
TO
VC-112P BOARD (2/3)
D9 D8 D7 D6 D5 D4 D3 D2 D1 D0
4V
A/D REF
IRIS OUT
S1 OFFSET
B9 B8 B7 B6 B5 B4 B3 B2 B1 B0
F7
E7
E6
E8
C10 C9 C8 C7 C6 C5 C4 C3 C2 C1
4.9
4.9
MINV
LINV
D VCC
D VEE
D GND
D VCC
D9 (MSB)
D8
D7
D6
D5
D4
D3
D2
D1
D0 (LSB)
0 C10
0.4 C9
0.6 C8
0.5 C7
0.6 C6
0.6 C5
0.8 C4
0.9 C3
1.2 C2
0.1 C1
IC802
CXA1507BR-T4
VIN H
CASCODE
A VCC
A VEE
D VCC2
UNDER
OVER
C813
0.1
F
C816
0.01
F
C815
4.7
6.3V
:TA A
IC802
A/D CONVERTER
(B-3)
CHASSES GND
LND802
R825
8200
C818
1
16V
:TA A
1.6
0.1
2.7
C826
0.1
F
4.9
Q801
2SC4617TL-QR
1.9
1.3
Q801
BUFFER
(B-16)
R803
1500
R806
1500
R807
560
mark : CAMERA REC mode
VC-112P BOARD (1/3)

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡»	
PB				

VC-112P BOARD (1/3)

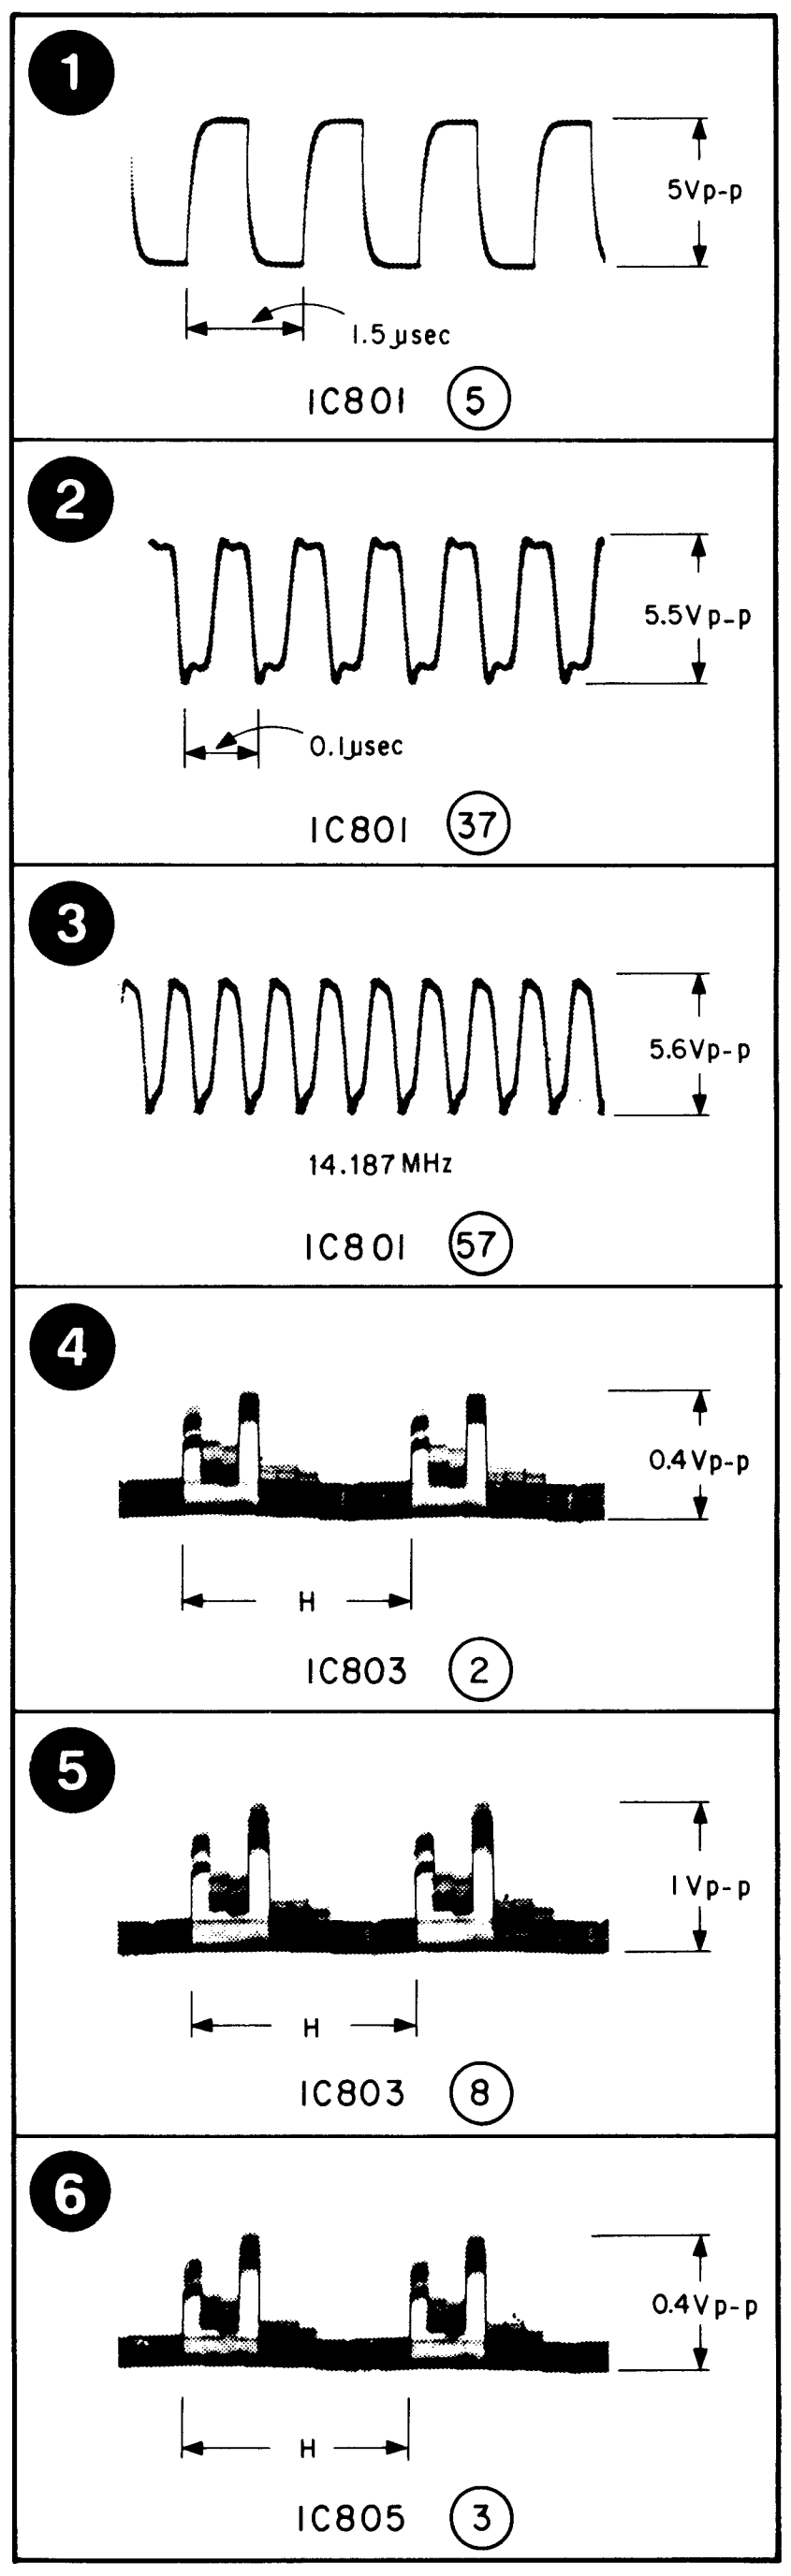

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	➡➡	➡➡➡	
PB				

VC-112P BOARD (2/3)

7
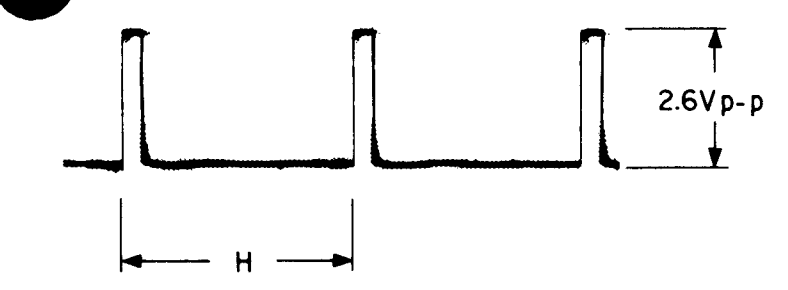

IC704 (14)

14
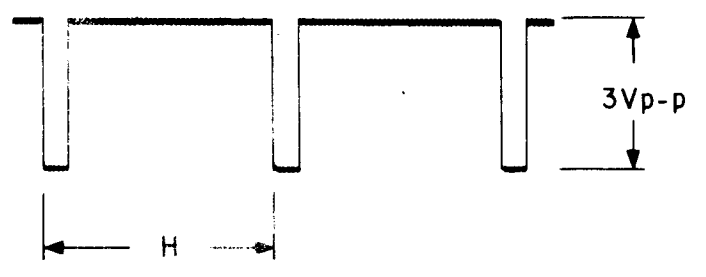

IC707 (68)

8
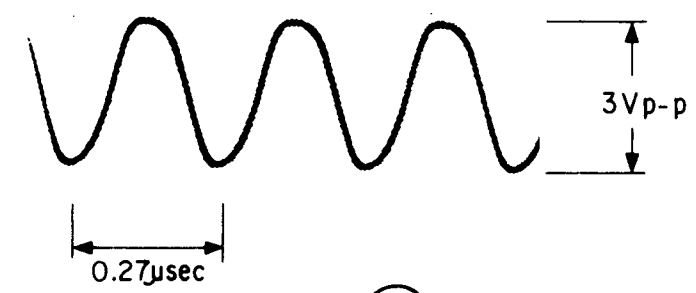

IC704 (63)

15
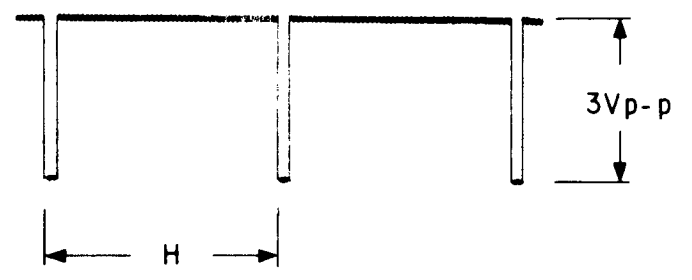

IC707 (69)

9
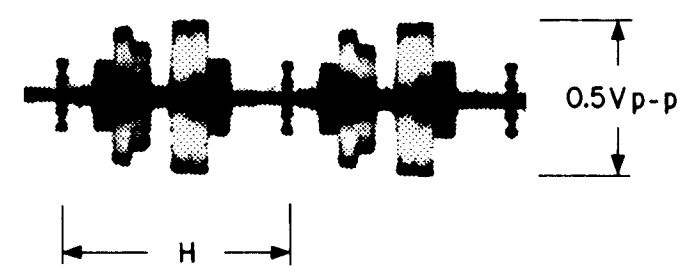

IC707 (30)

16
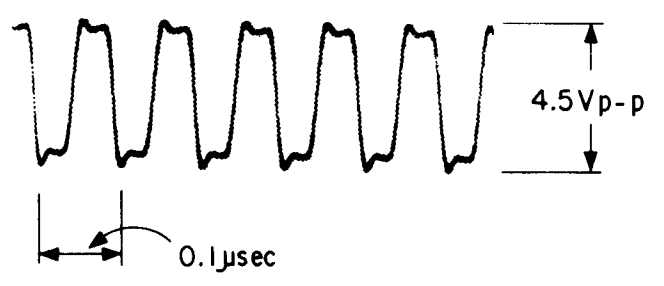

IC707 (80)

10
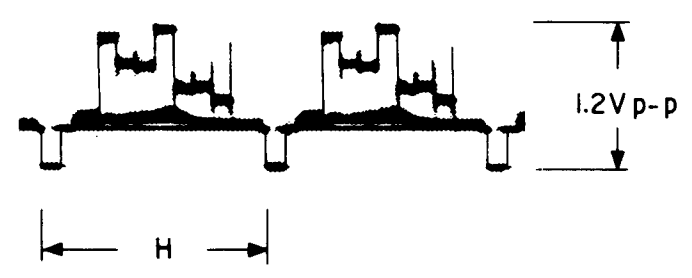

IC707 (51)

17
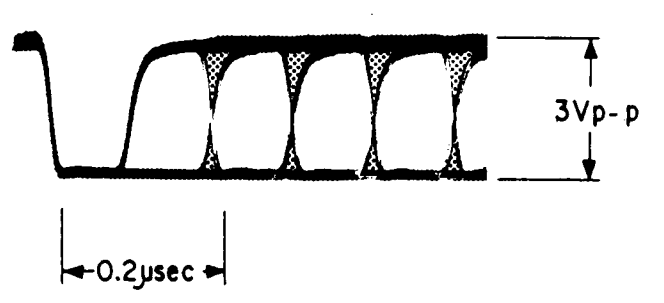

IC707 (86) - (95)

11
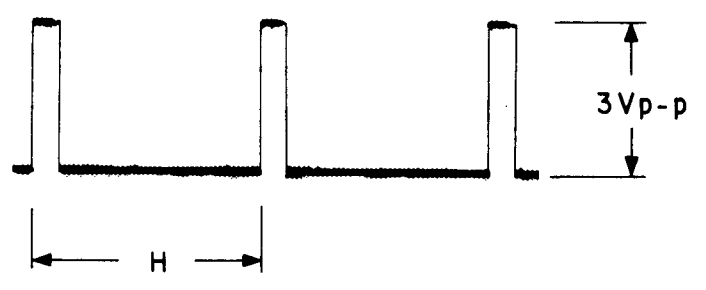

IC707 (64)

18
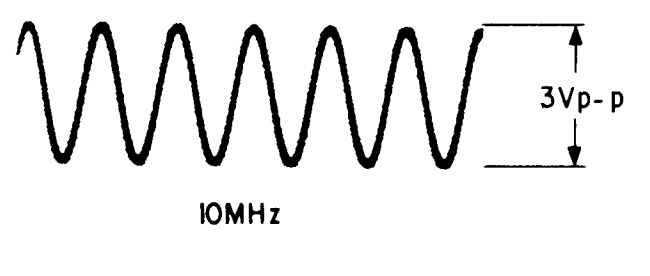

IC709 (41)

12
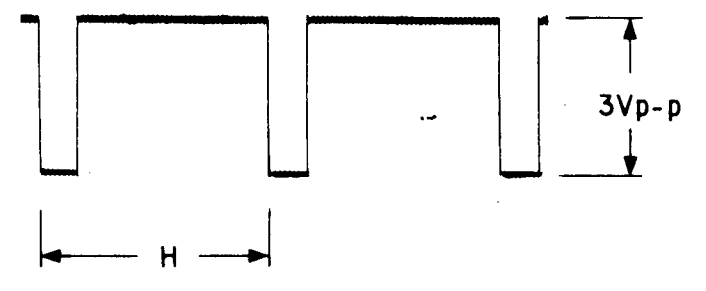

IC707 (66)

13
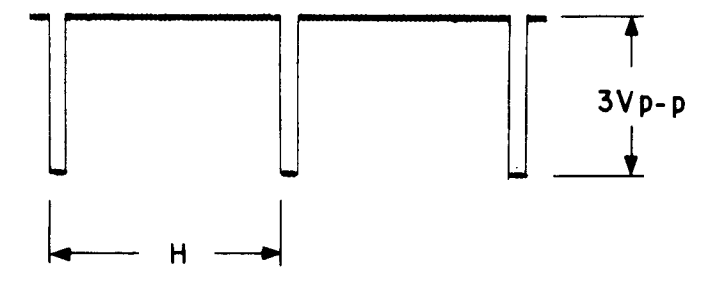

IC707 (67)

VC-112P (CAMERA PROCESS) SCHEMATIC DIAGRAM

• Refer to page 94 for Prin

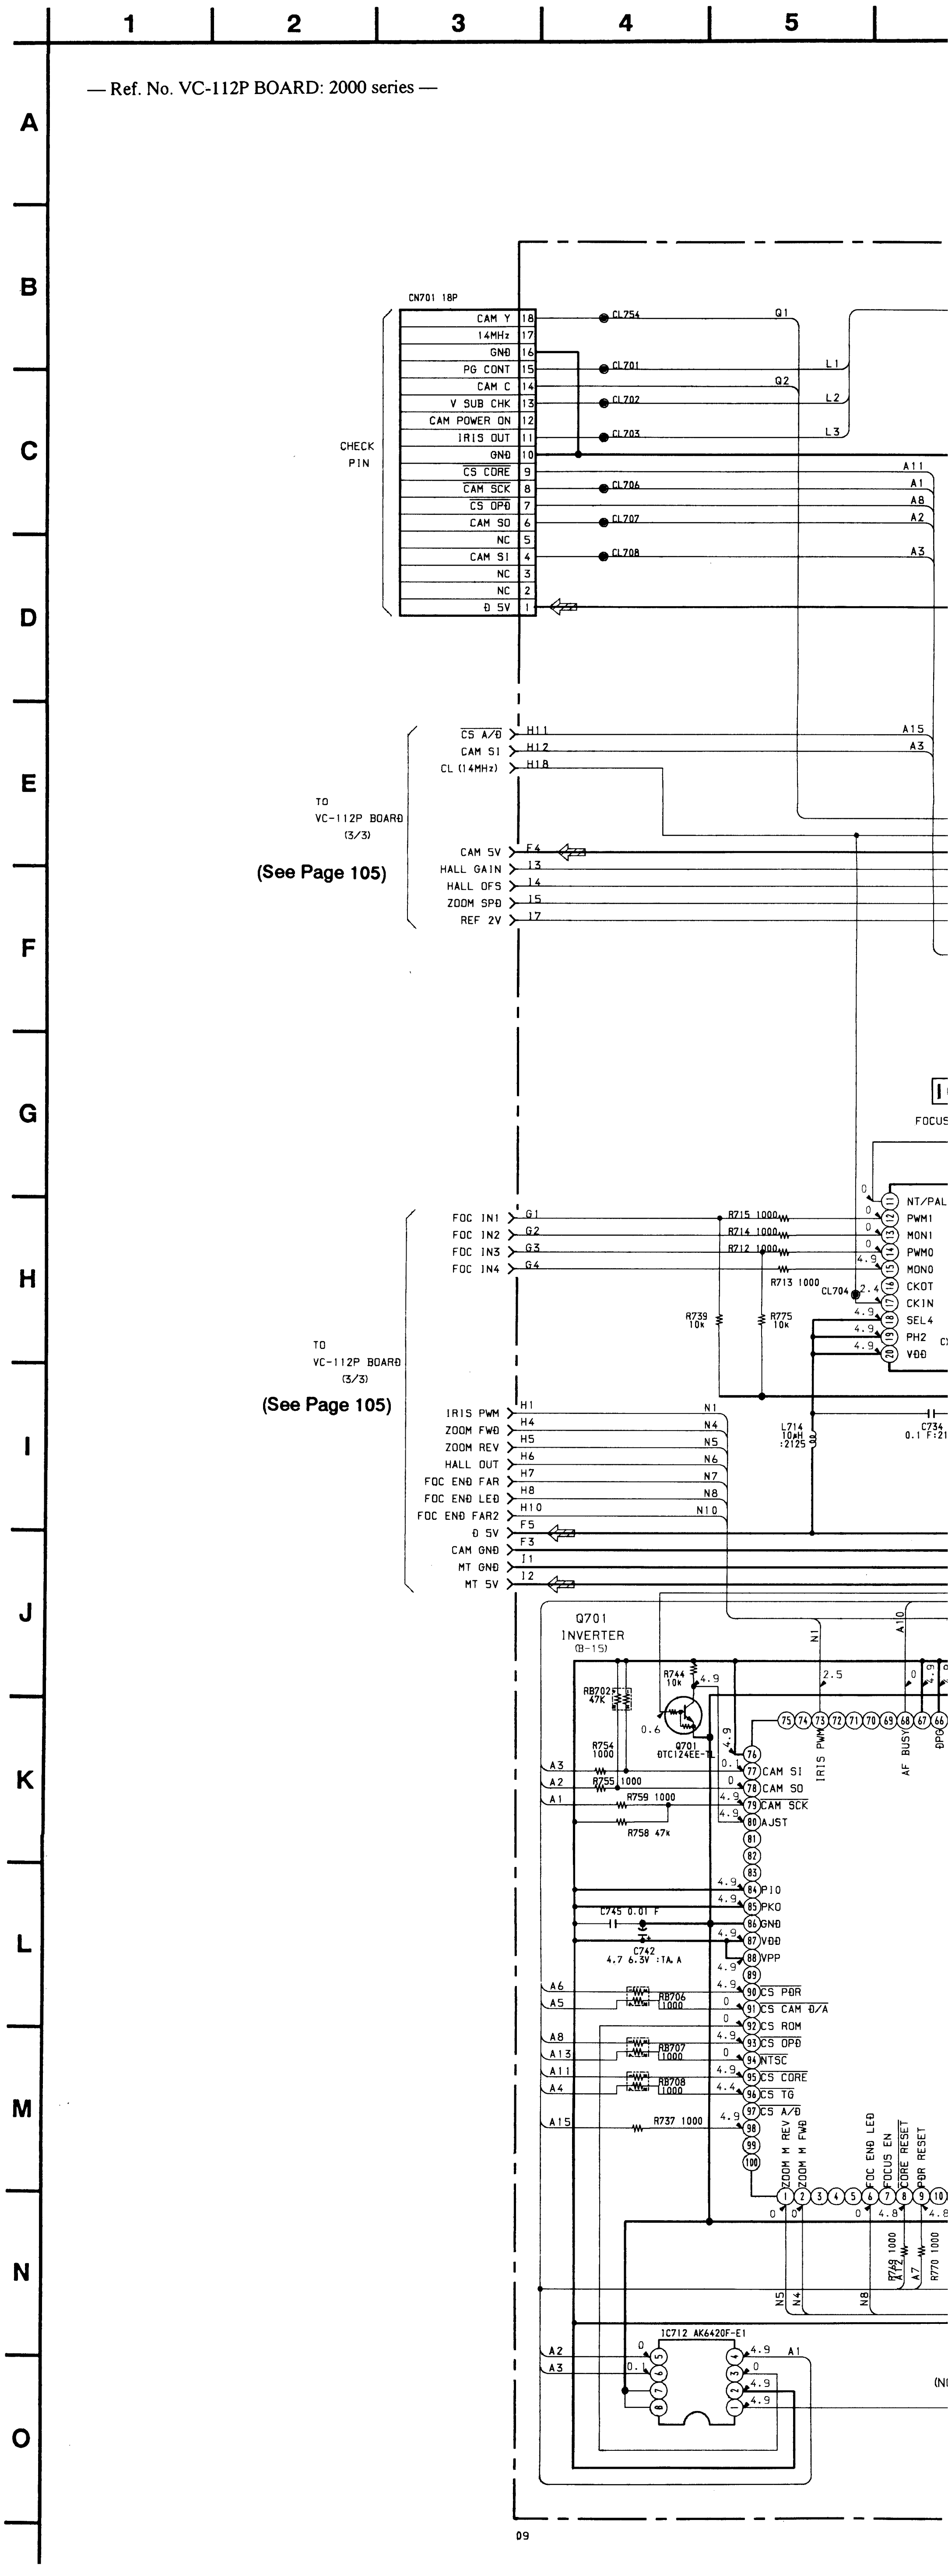
1
2
3
4
5
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
— Ref. No. VC-112P BOARD: 2000 series —
CN701 18P
CAM Y
14MHz
GND
PG CONT
CAM C
V SUB CHK
CAM POWER ON
IRIS OUT
GND
CS CORE
CAM SCK
CS OPD
CAM SO
NC
CAM SI
NC
NC
D 5V
CHECK PIN
CL754
CL701
CL702
CL703
CL706
CL707
CL708
Q1
Q2
L1
L2
L3
A11
A1
A8
A2
A3
CS A/D
CAM SI
CL (14MHz)
H11
H12
H18
A15
TO VC-112P BOARD (3/3)
(See Page 105)
CAM 5V
HALL GAIN
HALL OFS
ZOOM SPD
REF 2V
F4
I3
I4
I5
I7
FOCUS
FOC IN1
FOC IN2
FOC IN3
FOC IN4
G1
G2
G3
G4
R715 1000
R714 1000
R712 1000
R713 1000
R739 10k
R775 10k
CL704
NT/PAL
PWM1
MON1
PWM0
MON0
CKOT
CKIN
SEL4
PH2
VDD
IRIS PWM
ZOOM FWD
ZOOM REV
HALL OUT
FOC END FAR
FOC END LED
FOC END FAR2
D 5V
CAM GND
MT GND
MT 5V
H1
H4
H5
H6
H7
H8
H10
F5
F3
J1
J2
N1
N4
N5
N6
N7
N8
N10
L714 10μH
C734 0.1
Q701 INVERTER (B-15)
Q701 DTC124EE-TL
RB702 47K
R744 10k
R754 1000
R755 1000
R759 1000
R758 47k
C745 0.01 F
C742 4.7 6.3V :TA A
RB706 1000
RB707 1000
RB708 1000
R737 1000
CAM SI
CAM SO
CAM SCK
AJST
P10
PKO
GND
VDD
VPP
CS PDR
CS CAM D/A
CS ROM
CS OPD
NTSC
CS CORE
CS TG
CS A/D
ZOOM M REV
ZOOM M FWD
FOC END LED
FOCUS EN
CORE RESET
PDR RESET
IRIS PWM
AF BUSY
R769 1000
R770 1000
IC712 AK6420F-E1
A1
A2
A3
A4
A5
A6
A8
A11
A13
A15
09

CAMERA CAMERA

- Refer to page **94** for Printed Wiring Board.

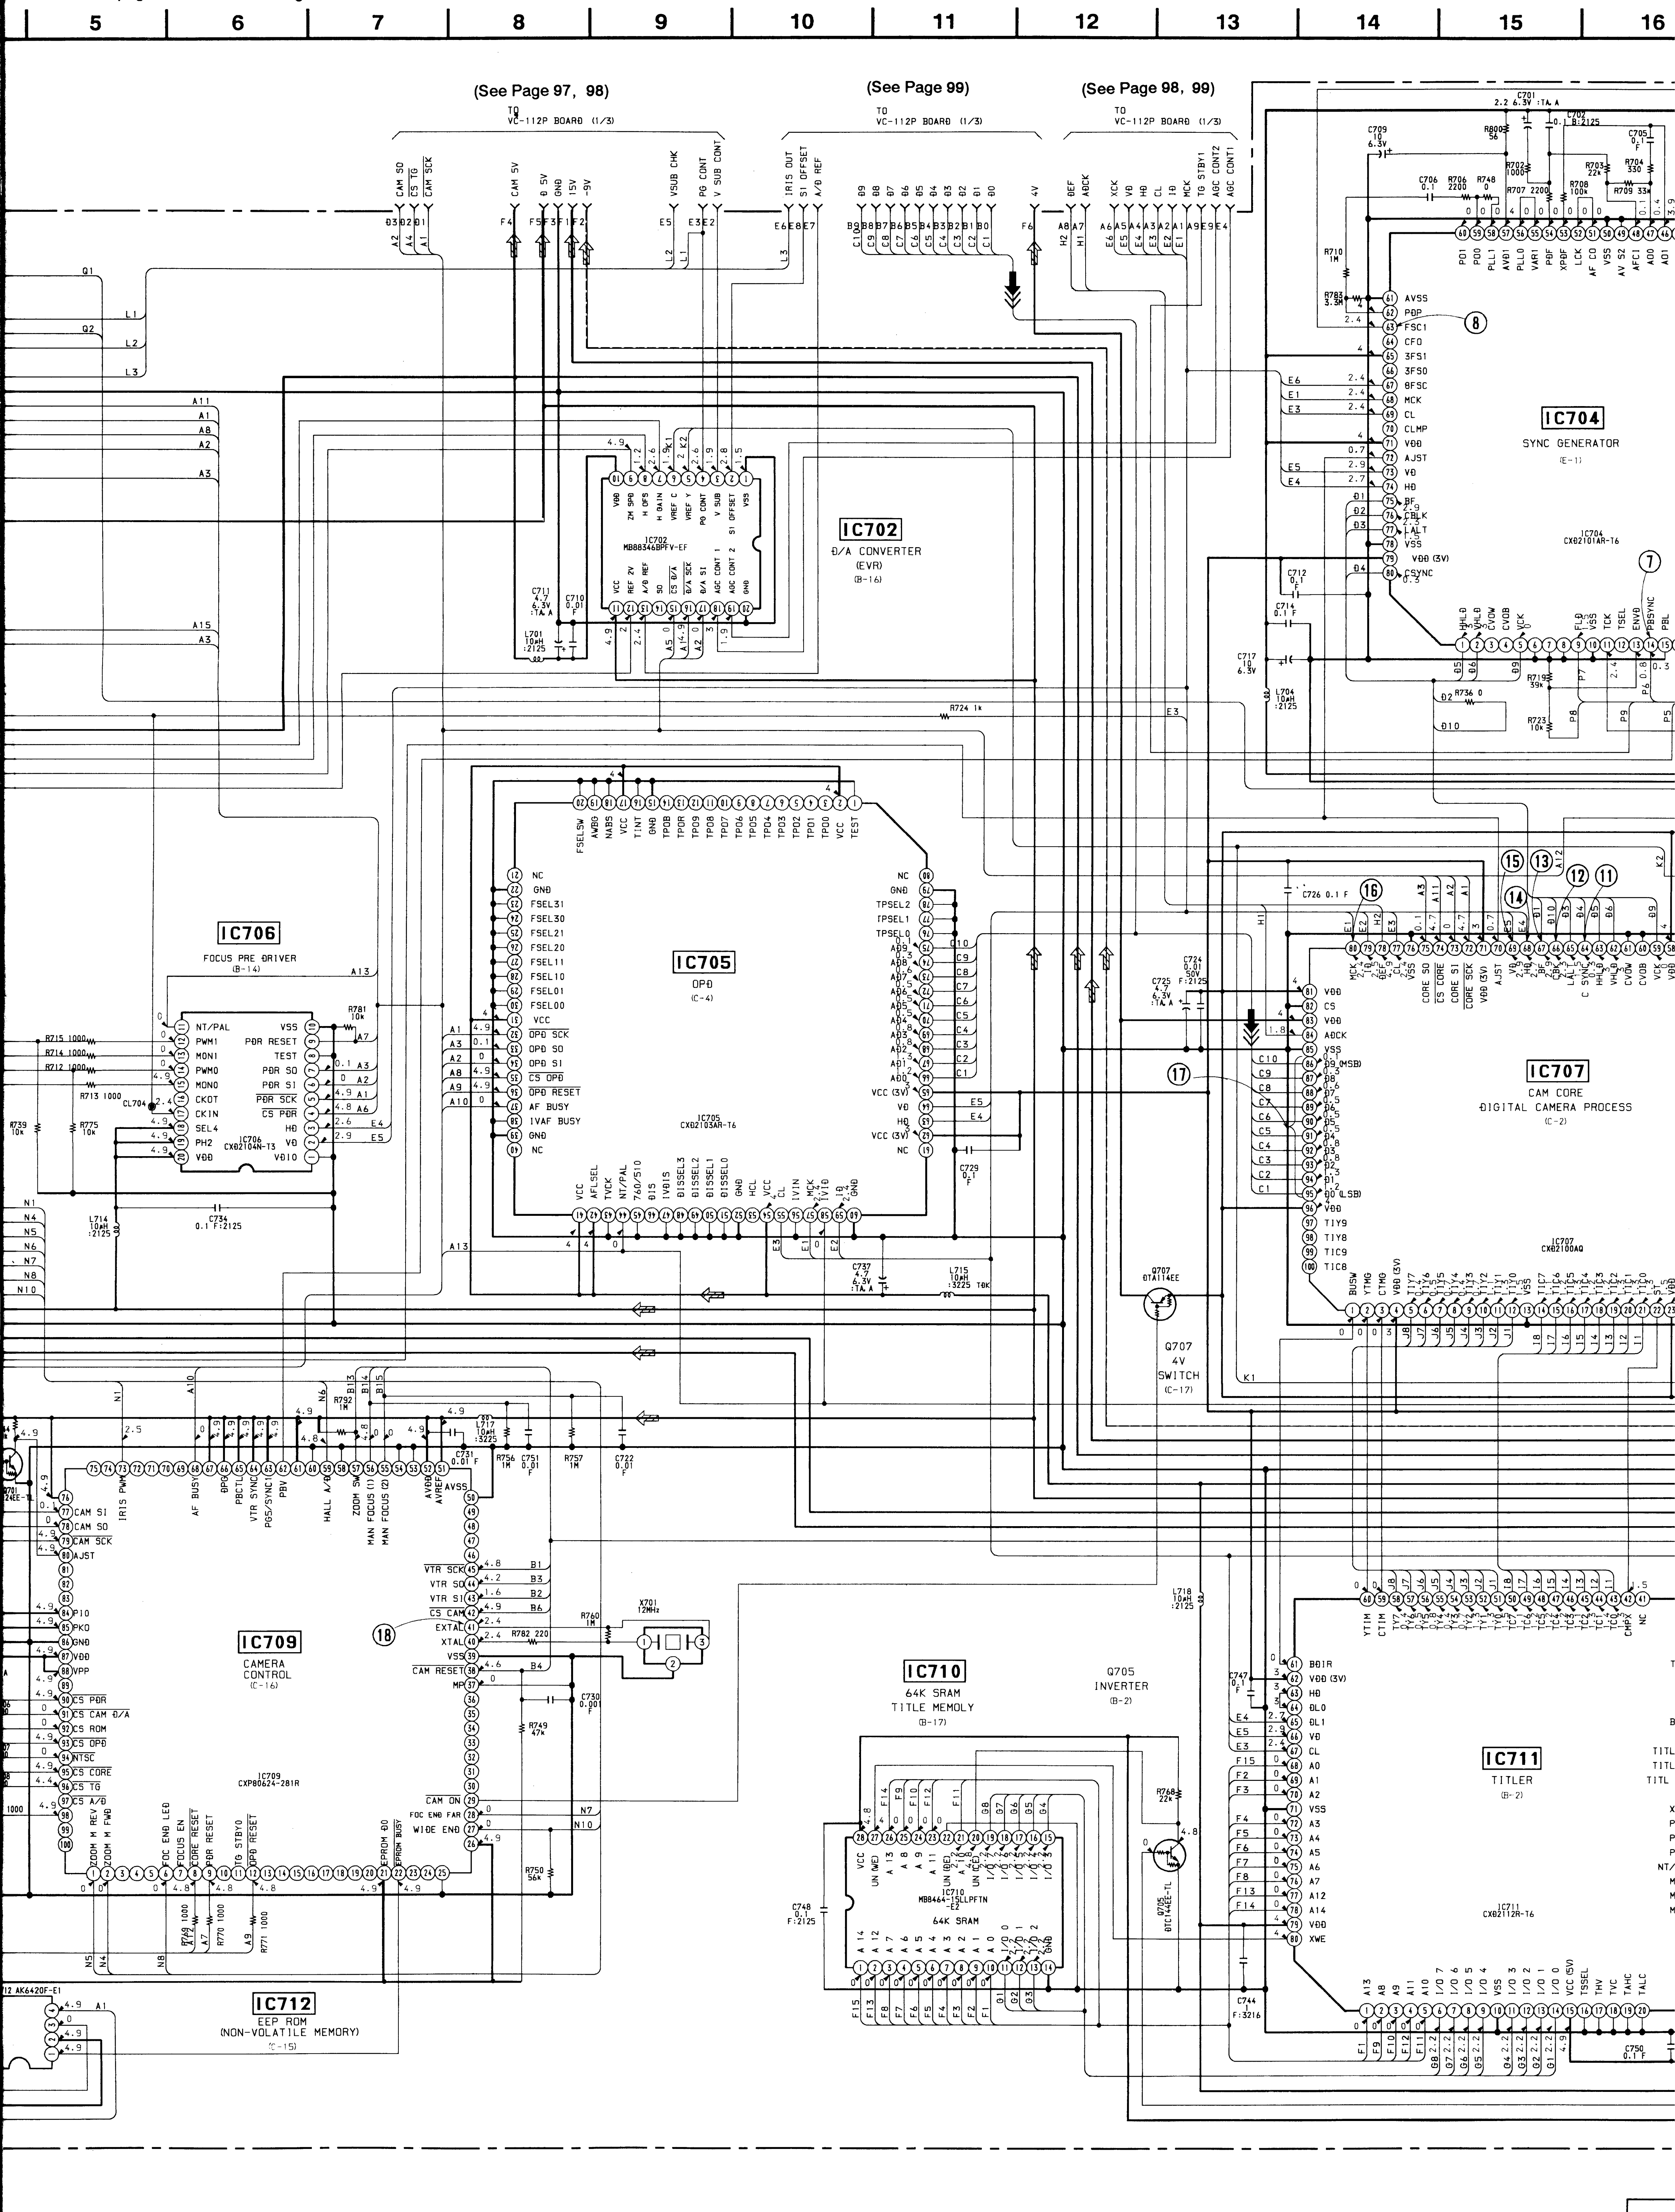
5
6
7
8
9
10
11
12
13
14
15
16
(See Page 97, 98)
TO VC-112P BOARD (1/3)
(See Page 99)
TO VC-112P BOARD (1/3)
(See Page 98, 99)
TO VC-112P BOARD (1/3)
CAM SO
CS TG
CAM SCK
CAM 5V
D 5V
GND
15V
-9V
VSUB CHK
PG CONT
V SUB CONT
IRIS OUT
S1 OFFSET
A/D REF
4V
DEF
ADCK
XCK
VD
HD
CL
ID
MCK
TG STBY1
AGC CONT2
AGC CONT1
IC702
D/A CONVERTER
(EVR)
(B-16)
IC702 MB88346BPFV-EF
IC704
SYNC GENERATOR
(E-1)
IC704 CXD2101AR-T6
IC705
OPD
(C-4)
IC705 CXD2103AR-T6
IC706
FOCUS PRE DRIVER
(B-14)
IC706 CXD2104N-T3
IC707
CAM CORE
DIGITAL CAMERA PROCESS
(C-2)
IC707 CXD2100AQ
Q707 DTA114EE
Q707
4V
SWITCH
(C-17)
IC709
CAMERA
CONTROL
(C-16)
IC709 CXP80624-281R
X701 12MHz
IC710
64K SRAM
TITLE MEMOLY
(B-17)
IC710 MB8464-15LLPFTN-E2
64K SRAM
Q705
INVERTER
(B-2)
Q705 DTC144EE-TL
IC711
TITLER
(B-2)
IC711 CXD2112R-T6
IC712
EEP ROM
(NON-VOLATILE MEMORY)
(C-15)
IC712 AK6420F-E1
⑦
⑧
⑪
⑫
⑬
⑭
⑮
⑯
⑰
⑱

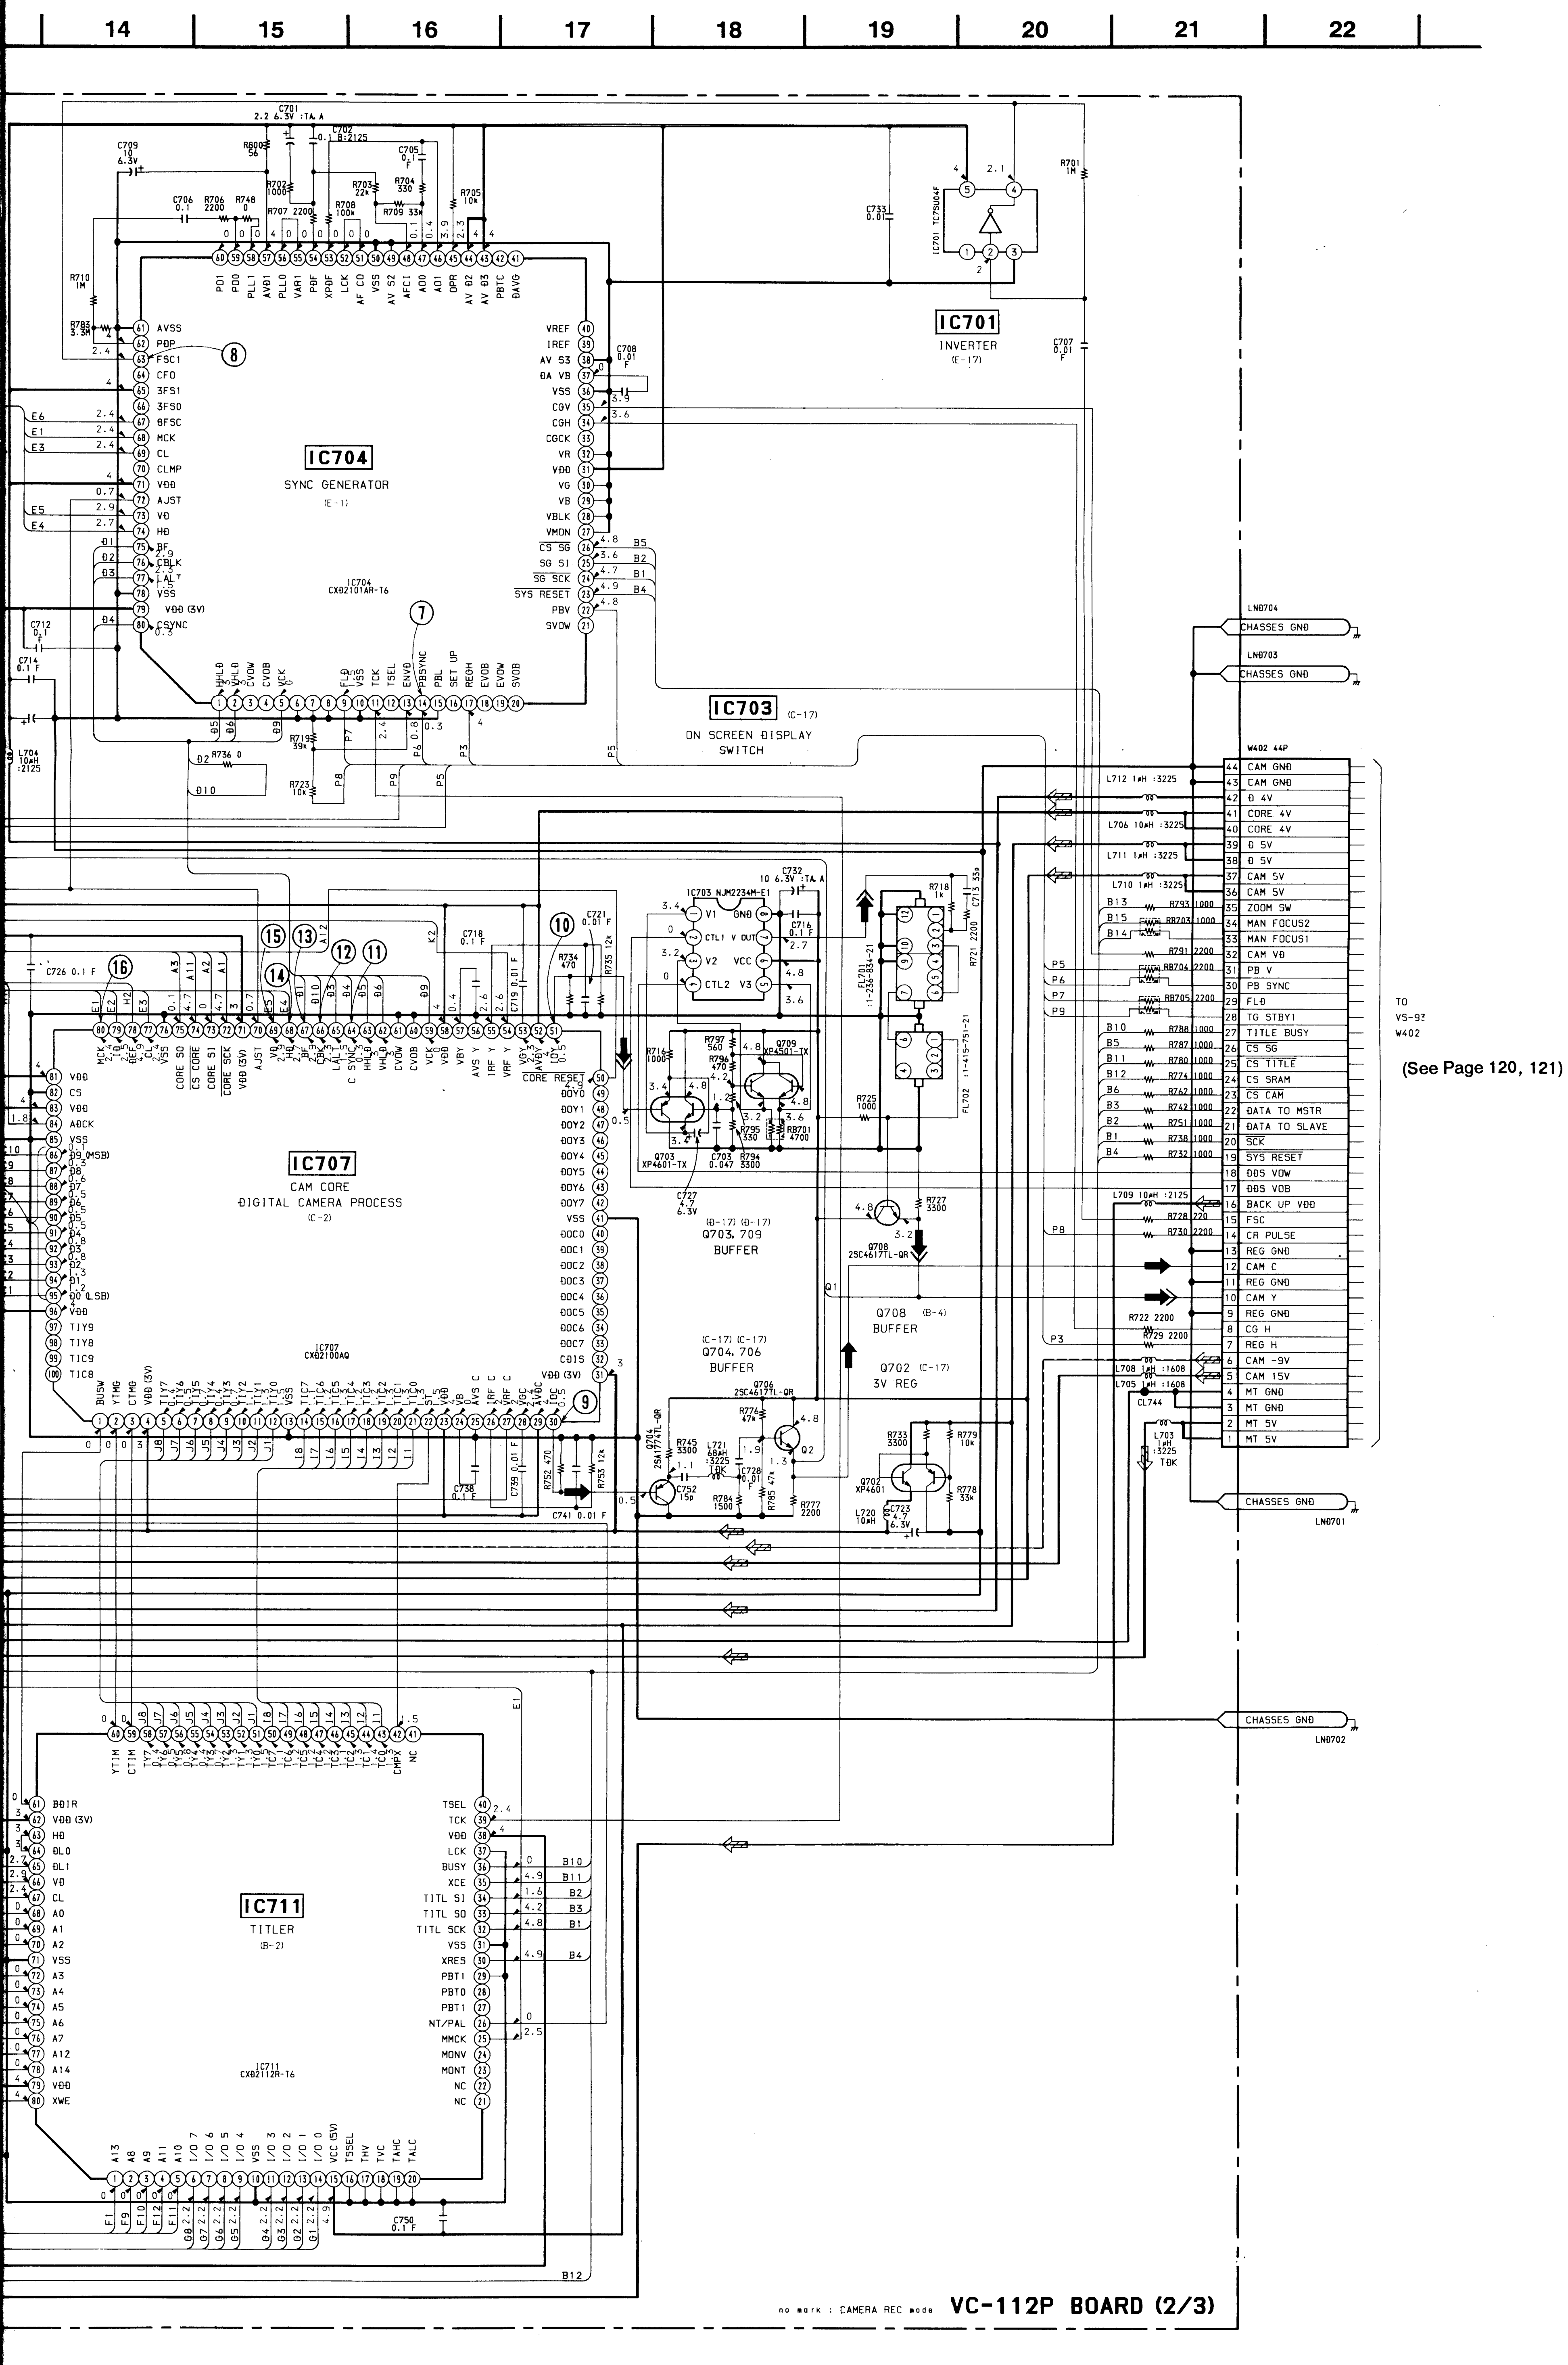

14
15
16
17
18
19
20
21
22
IC704
SYNC GENERATOR
(E-1)
IC704 CXD2101AR-T6
IC701
INVERTER
(E-17)
IC701 TC7SU04F
IC703
(C-17)
ON SCREEN DISPLAY SWITCH
IC703 NJM2234M-E1
IC707
CAM CORE
DIGITAL CAMERA PROCESS
(C-2)
IC707 CXD2100AQ
IC711
TITLER
(B-2)
IC711 CXD2112R-T6
(D-17) (D-17)
Q703, 709
BUFFER
Q703 XP4601-TX
Q709 XP4501-TX
(C-17) (C-17)
Q704, 706
BUFFER
Q704 2SA1774TL-QR
Q706 2SC4617TL-QR
Q708 (B-4)
BUFFER
Q708 2SC4617TL-QR
Q702 (C-17)
3V REG
Q702 XP4601
FL701 1-236-034-21
FL702 1-415-751-21
W402 44P
1 MT 5V
2 MT 5V
3 MT GND
4 MT GND
5 CAM 15V
6 CAM -9V
7 REG H
8 CG H
9 REG GND
10 CAM Y
11 REG GND
12 CAM C
13 REG GND
14 CR PULSE
15 FSC
16 BACK UP VDD
17 DDS VDB
18 DDS VDW
19 SYS RESET
20 SCK
21 DATA TO SLAVE
22 DATA TO MSTR
23 CS CAM
24 CS SRAM
25 CS TITLE
26 CS SG
27 TITLE BUSY
28 TG STBY1
29 FLD
30 PB SYNC
31 PB V
32 CAM VD
33 MAN FOCUS1
34 MAN FOCUS2
35 ZOOM SW
36 CAM 5V
37 CAM 5V
38 D 5V
39 D 5V
40 CORE 4V
41 CORE 4V
42 D 4V
43 CAM GND
44 CAM GND
LN0701 CHASSES GND
LN0702 CHASSES GND
LN0703 CHASSES GND
LN0704 CHASSES GND
TO VS-93 W402
(See Page 120, 121)
no mark : CAMERA REC mode
VC-112P BOARD (2/3)

VC-112P (LENS DRIVE) SCHEMATIC DIAGRAM

- Refer to page 94 for Printed Wiring Board.

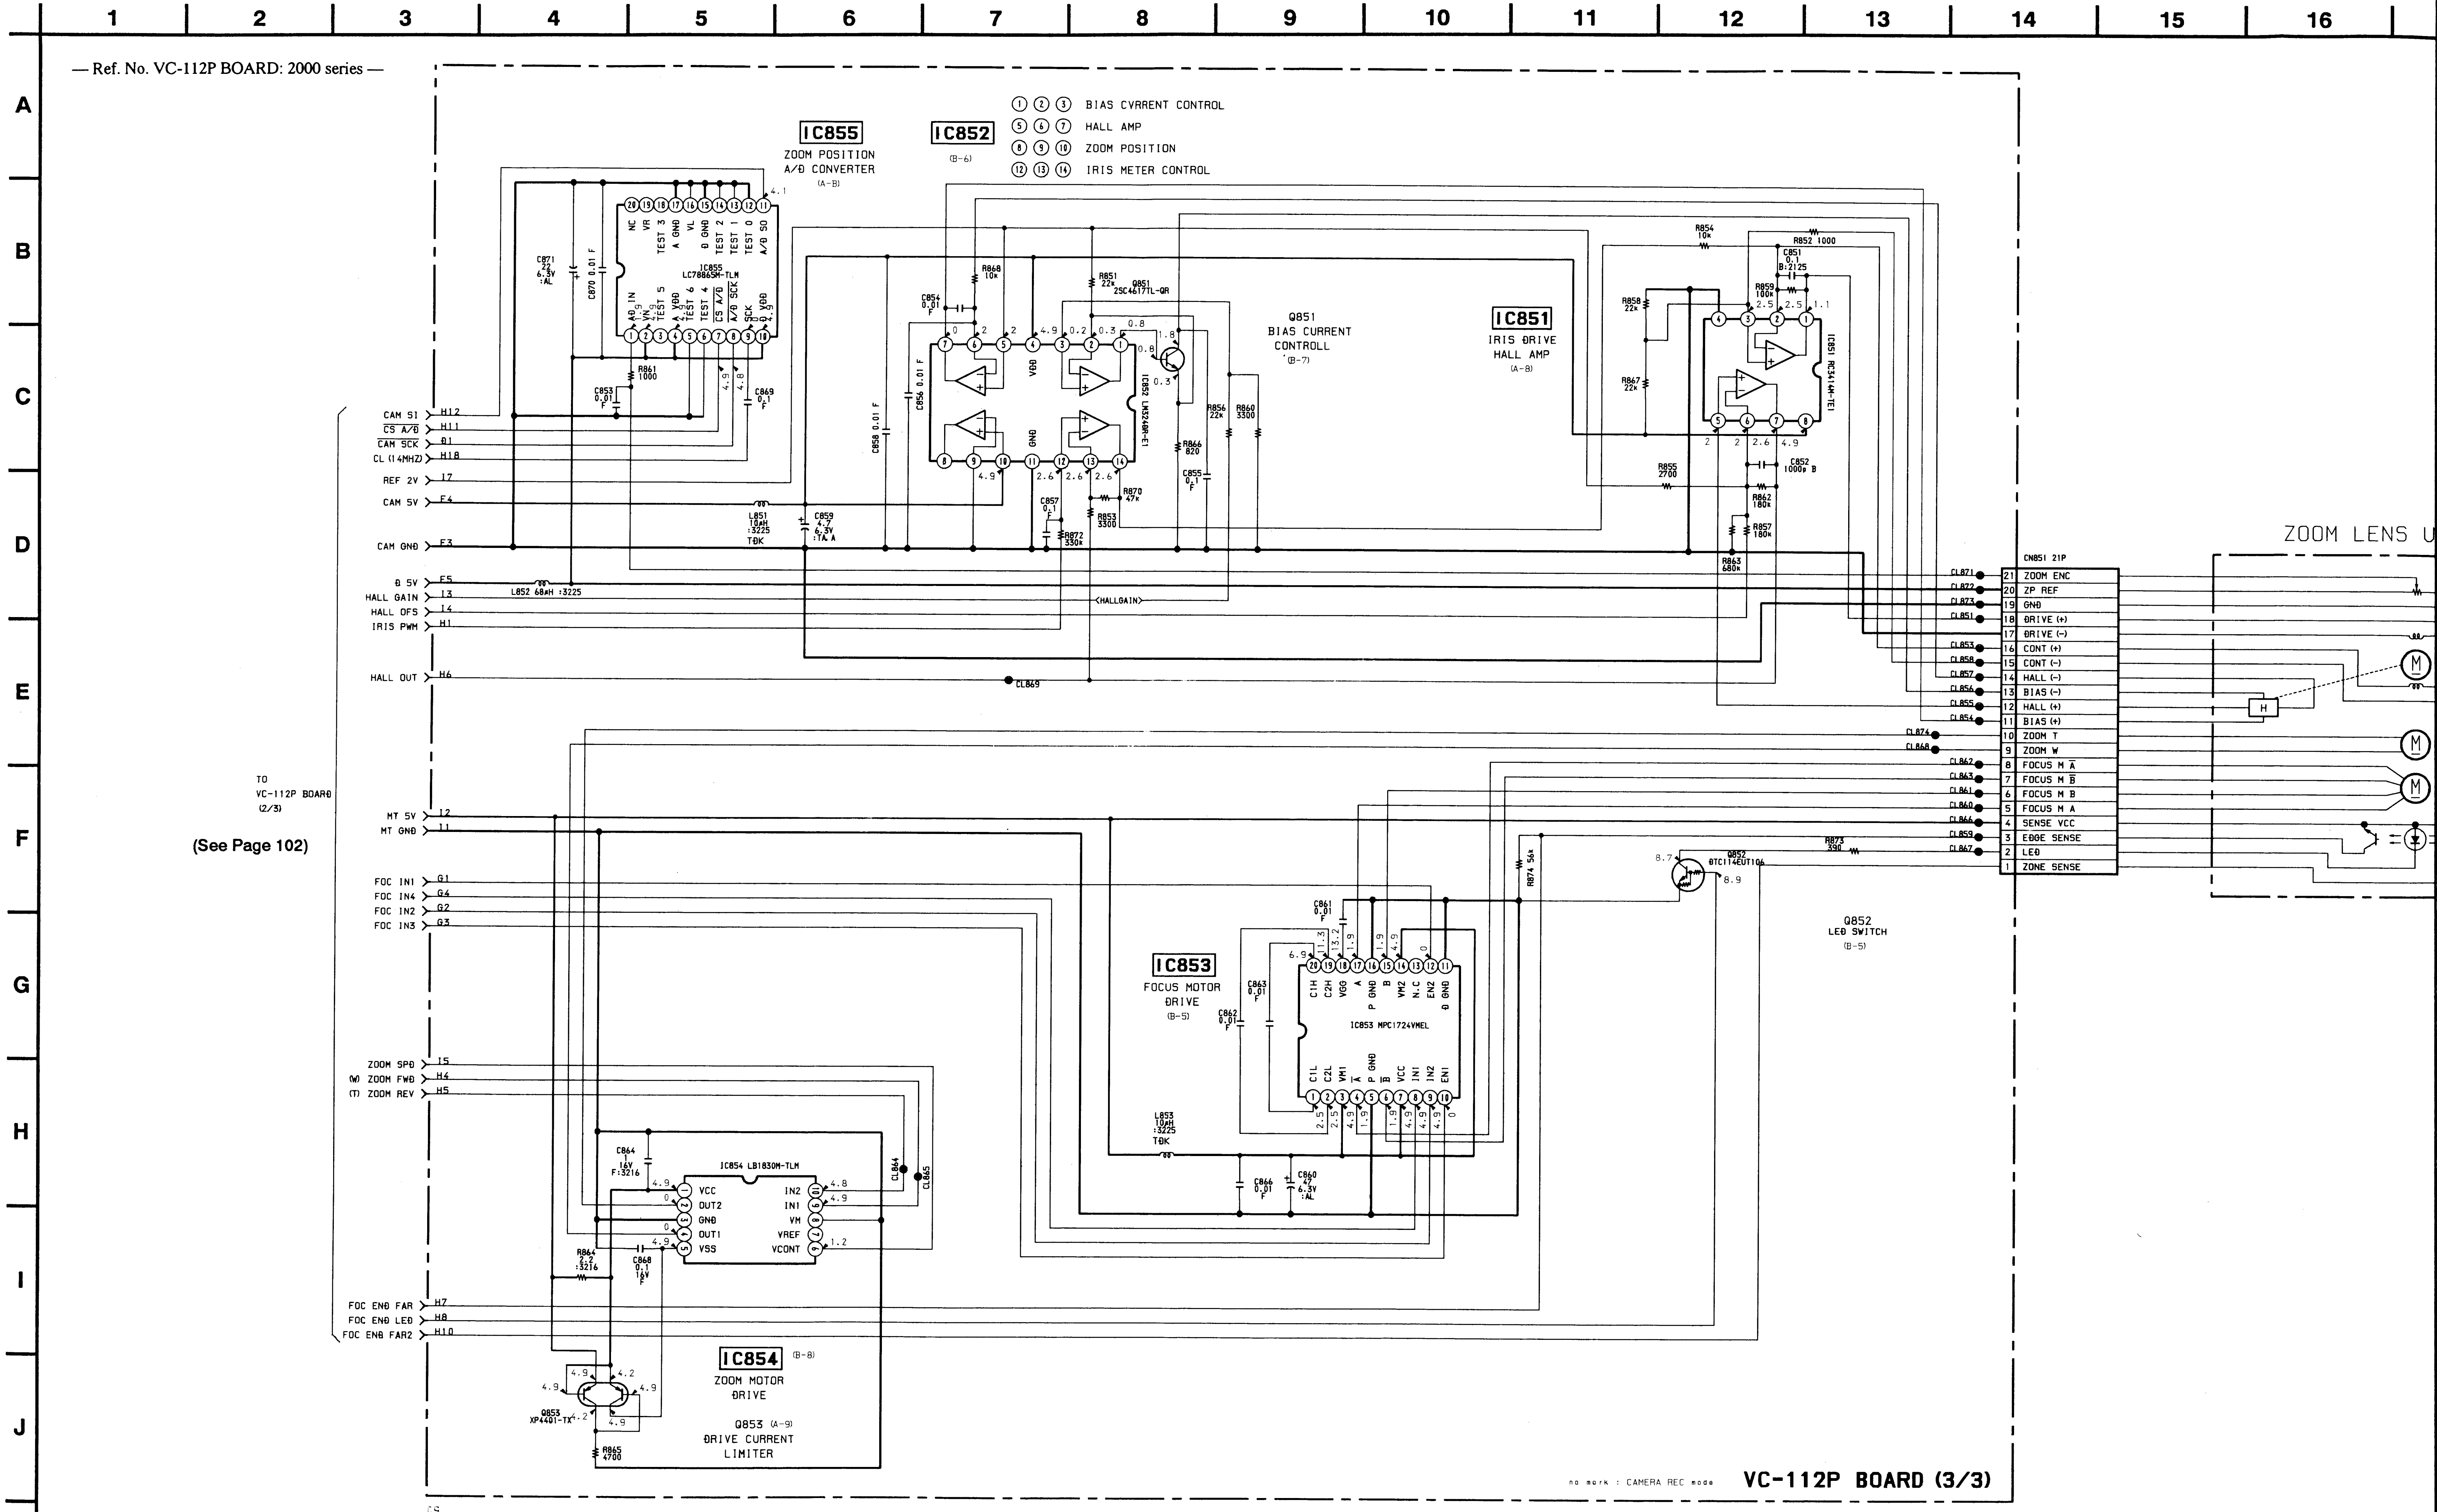
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
A
B
C
D
E
F
G
H
I
J
— Ref. No. VC-112P BOARD: 2000 series —
① ② ③ BIAS CVRRENT CONTROL
⑤ ⑥ ⑦ HALL AMP
⑧ ⑨ ⑩ ZOOM POSITION
⑫ ⑬ ⑭ IRIS METER CONTROL
IC855
ZOOM POSITION
A/D CONVERTER
(A-B)
IC852
(B-6)
IC855 LC78865M-TLM
IC852 LM324DR-E1
Q851 2SC4617TL-QR
Q851
BIAS CURRENT
CONTROLL
(B-7)
IC851
IRIS DRIVE
HALL AMP
(A-8)
IC851 RC3414M-TE1
CAM SI
CS A/D
CAM SCK
CL (14MHZ)
REF 2V
CAM 5V
CAM GND
D 5V
HALL GAIN
HALL OFS
IRIS PWM
HALL OUT
<HALLGAIN>
CL869
TO
VC-112P BOARD
(2/3)
(See Page 102)
MT 5V
MT GND
FOC IN1
FOC IN4
FOC IN2
FOC IN3
ZOOM SPD
(W) ZOOM FWD
(T) ZOOM REV
FOC ENG FAR
FOC ENG LED
FOC ENG FAR2
ZOOM LENS U
CN851 21P
21 ZOOM ENC
20 ZP REF
19 GND
18 DRIVE (+)
17 DRIVE (-)
16 CONT (+)
15 CONT (-)
14 HALL (-)
13 BIAS (-)
12 HALL (+)
11 BIAS (+)
10 ZOOM T
9 ZOOM W
8 FOCUS M A
7 FOCUS M B
6 FOCUS M B
5 FOCUS M A
4 SENSE VCC
3 EDGE SENSE
2 LED
1 ZONE SENSE
Q852 DTC114EUT106
Q852
LED SWITCH
(B-5)
IC853
FOCUS MOTOR
DRIVE
(B-5)
IC853 MPC1724VMEL
IC854 LB1830M-TLM
VCC
OUT2
GND
OUT1
VSS
IN2
IN1
VM
VREF
VCONT
IC854
(B-8)
ZOOM MOTOR
DRIVE
Q853 (A-9)
DRIVE CURRENT
LIMITER
Q853 XP4401-TX
no mark : CAMERA REC mode
VC-112P BOARD (3/3)

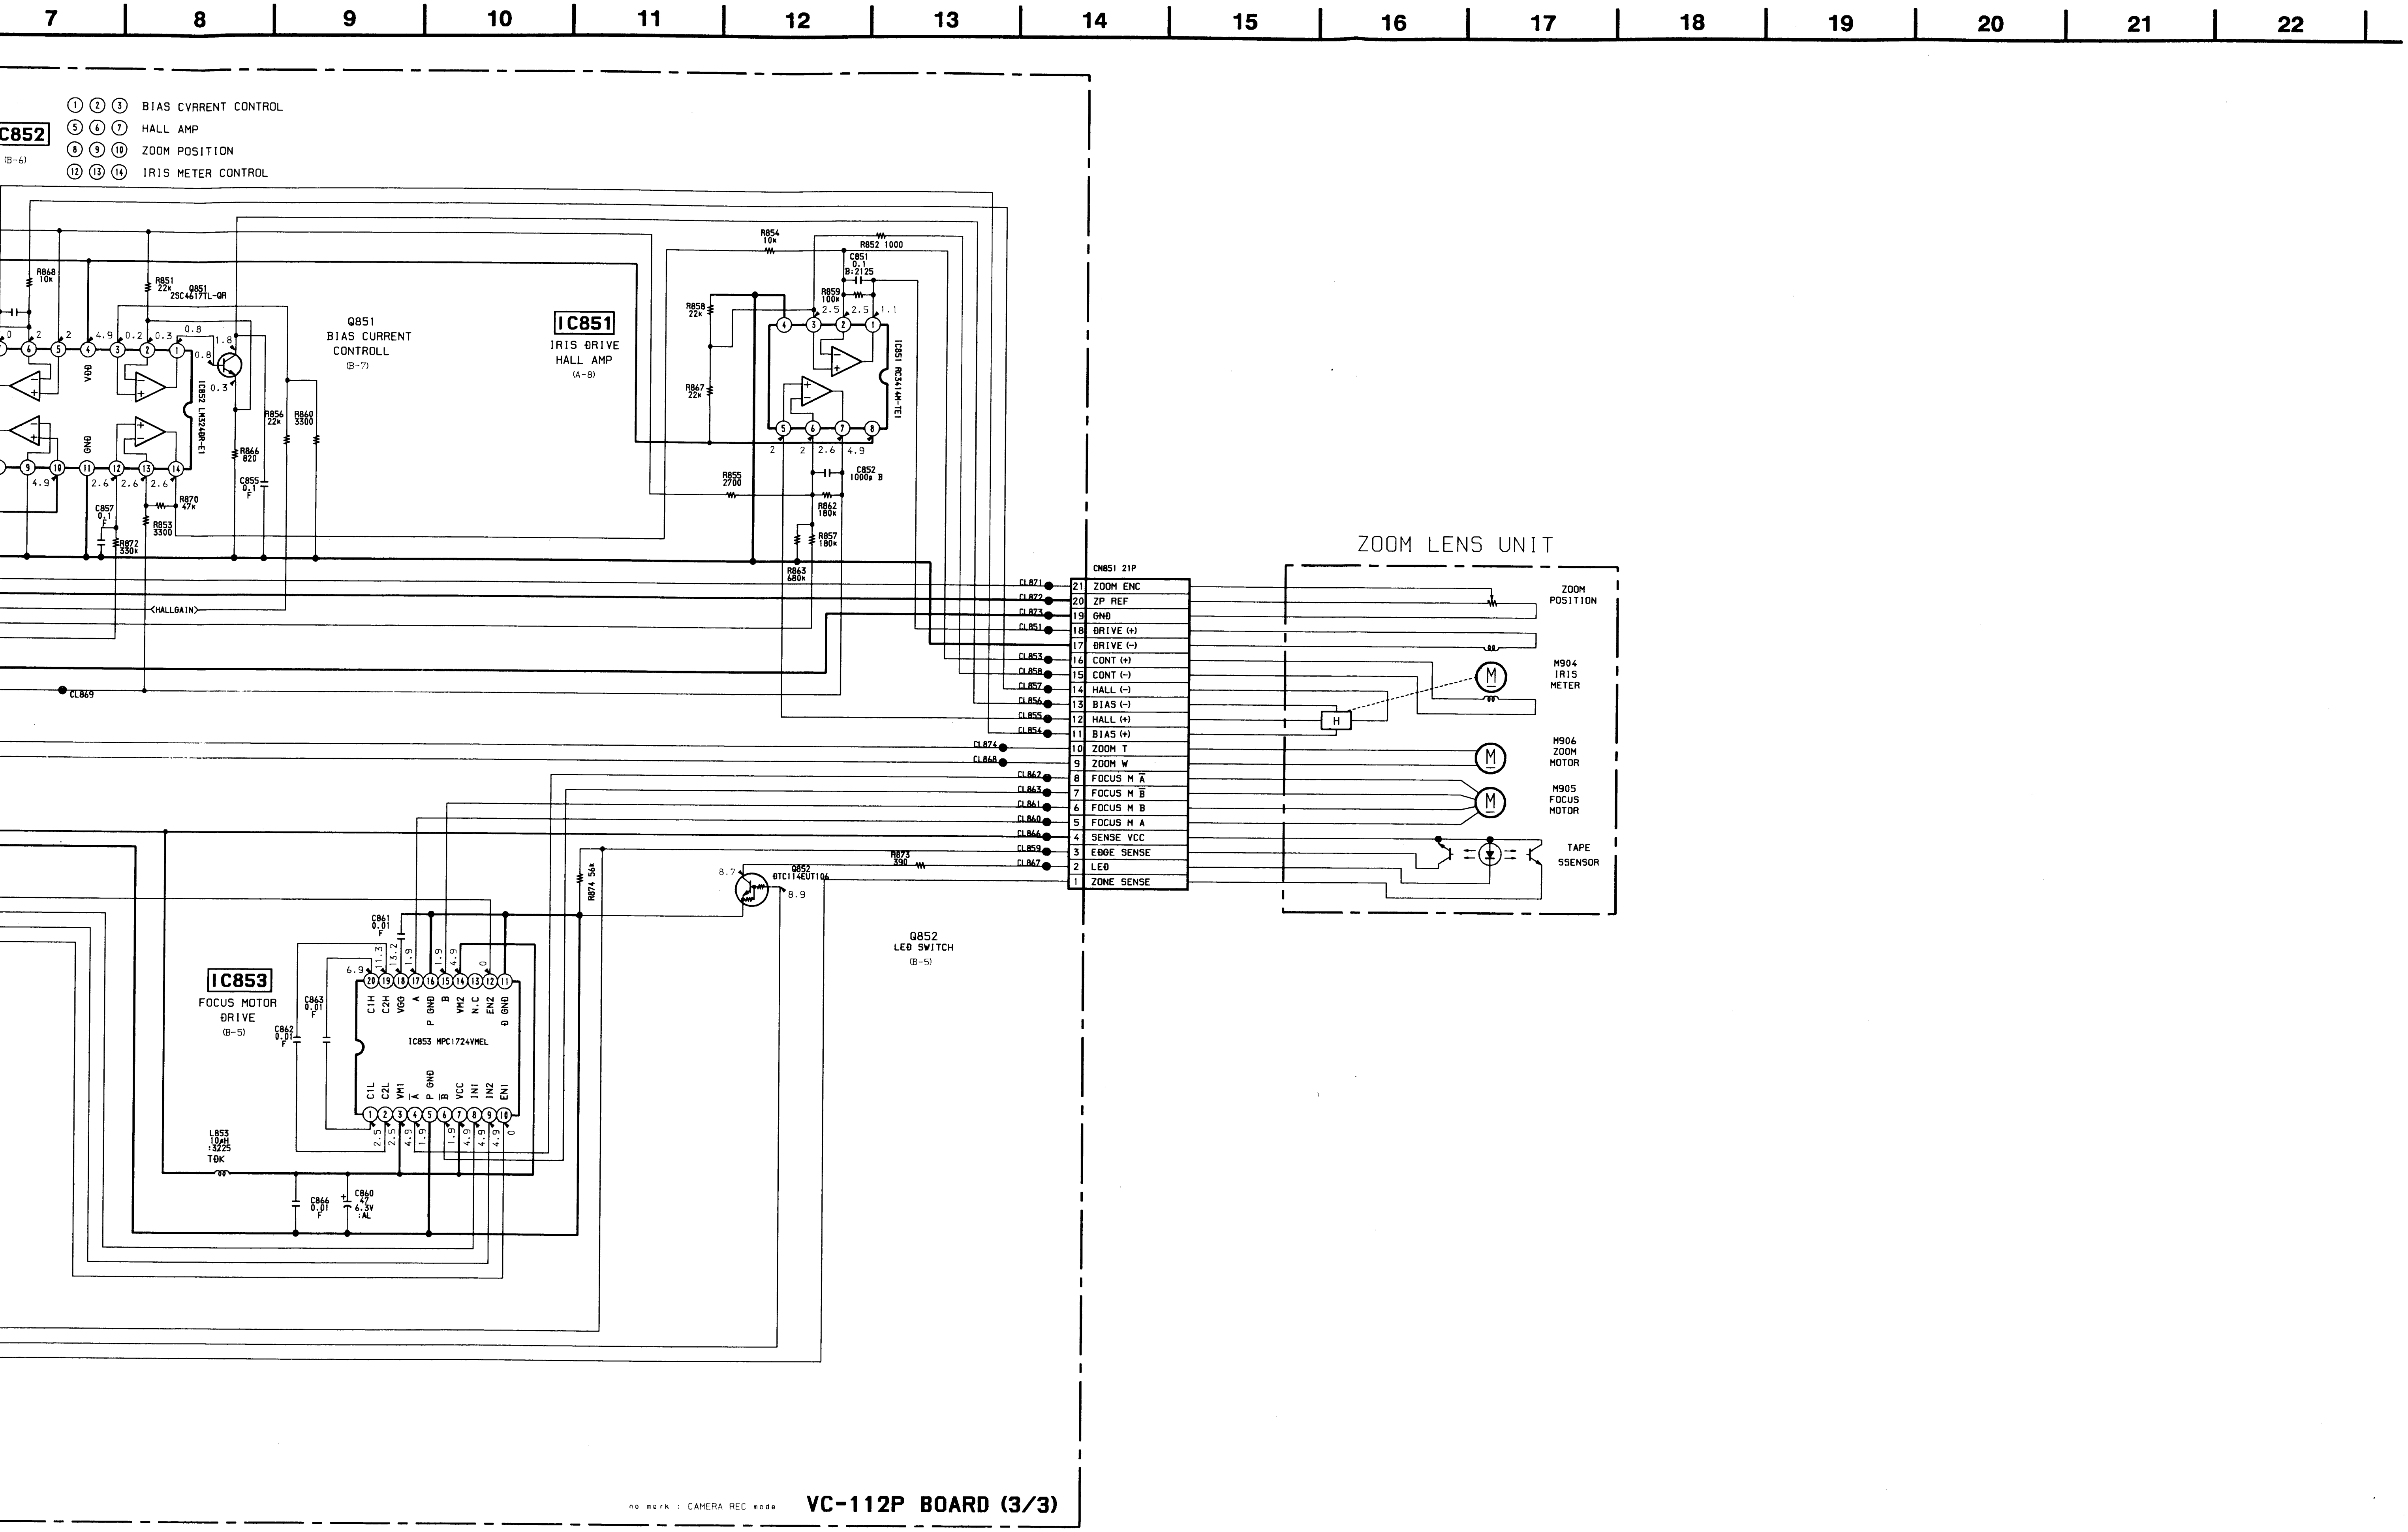
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
① ② ③ BIAS CVRRENT CONTROL
⑤ ⑥ ⑦ HALL AMP
⑧ ⑨ ⑩ ZOOM POSITION
⑫ ⑬ ⑭ IRIS METER CONTROL
C852
(B-6)
R868 10k
R851 22k
Q851 2SC4617TL-QR
VDD
GND
IC852 LM324DR-E1
R856 22k
R860 3300
R866 820
C855 0.1 F
C857 0.1 F
R872 330k
R853 3300
R870 47k
<HALLGAIN>
CL869
Q851
BIAS CURRENT
CONTROLL
(B-7)
IC851
IRIS DRIVE
HALL AMP
(A-8)
R854 10k
R852 1000
C851 0.1 B:2125
R859 100k
R858 22k
R867 22k
IC851 RC3414M-TE1
C852 1000p B
R855 2700
R862 180k
R857 180k
R863 680k
CN851 21P
CL871 21 ZOOM ENC
CL872 20 ZP REF
CL873 19 GND
CL851 18 DRIVE (+)
17 DRIVE (-)
CL853 16 CONT (+)
CL858 15 CONT (-)
CL857 14 HALL (-)
CL856 13 BIAS (-)
CL855 12 HALL (+)
CL854 11 BIAS (+)
CL874 10 ZOOM T
CL868 9 ZOOM W
CL862 8 FOCUS M $\overline{A}$
CL863 7 FOCUS M $\overline{B}$
CL861 6 FOCUS M B
CL860 5 FOCUS M A
CL866 4 SENSE VCC
CL859 3 EDGE SENSE
CL867 2 LED
1 ZONE SENSE
ZOOM LENS UNIT
ZOOM POSITION
M904 IRIS METER
H
M906 ZOOM MOTOR
M905 FOCUS MOTOR
TAPE SSENSOR
R873 390
Q852 DTC114EUT106
R874 56k
Q852
LED SWITCH
(B-5)
IC853
FOCUS MOTOR
DRIVE
(B-5)
C861 0.01 F
C863 0.01 F
C862 0.01 F
IC853 MPC1724VMEL
C1H C2H VGG A P GND B VM2 N.C EN2 D GND
C1L C2L VM1 $\overline{A}$ P GND $\overline{B}$ VCC IN1 IN2 EN1
L853 10μH :3225 TDK
C866 0.01 F
C860 47 6.3V :AL

no mark : CAMERA REC mode

VC-112P BOARD (3/3)

VS-93P (REC/PB HEAD AMP, VIDEO, SERVO/SYSTEM CONTROL, PAL JOG) PRINTED WIRING BOARD

— Ref. No. VS-93P BOARD: 3000 series —

- **For printed wiring boards.**
- VS-93P board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:

Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

VS-93P BOARD (COMPONENT SIDE)

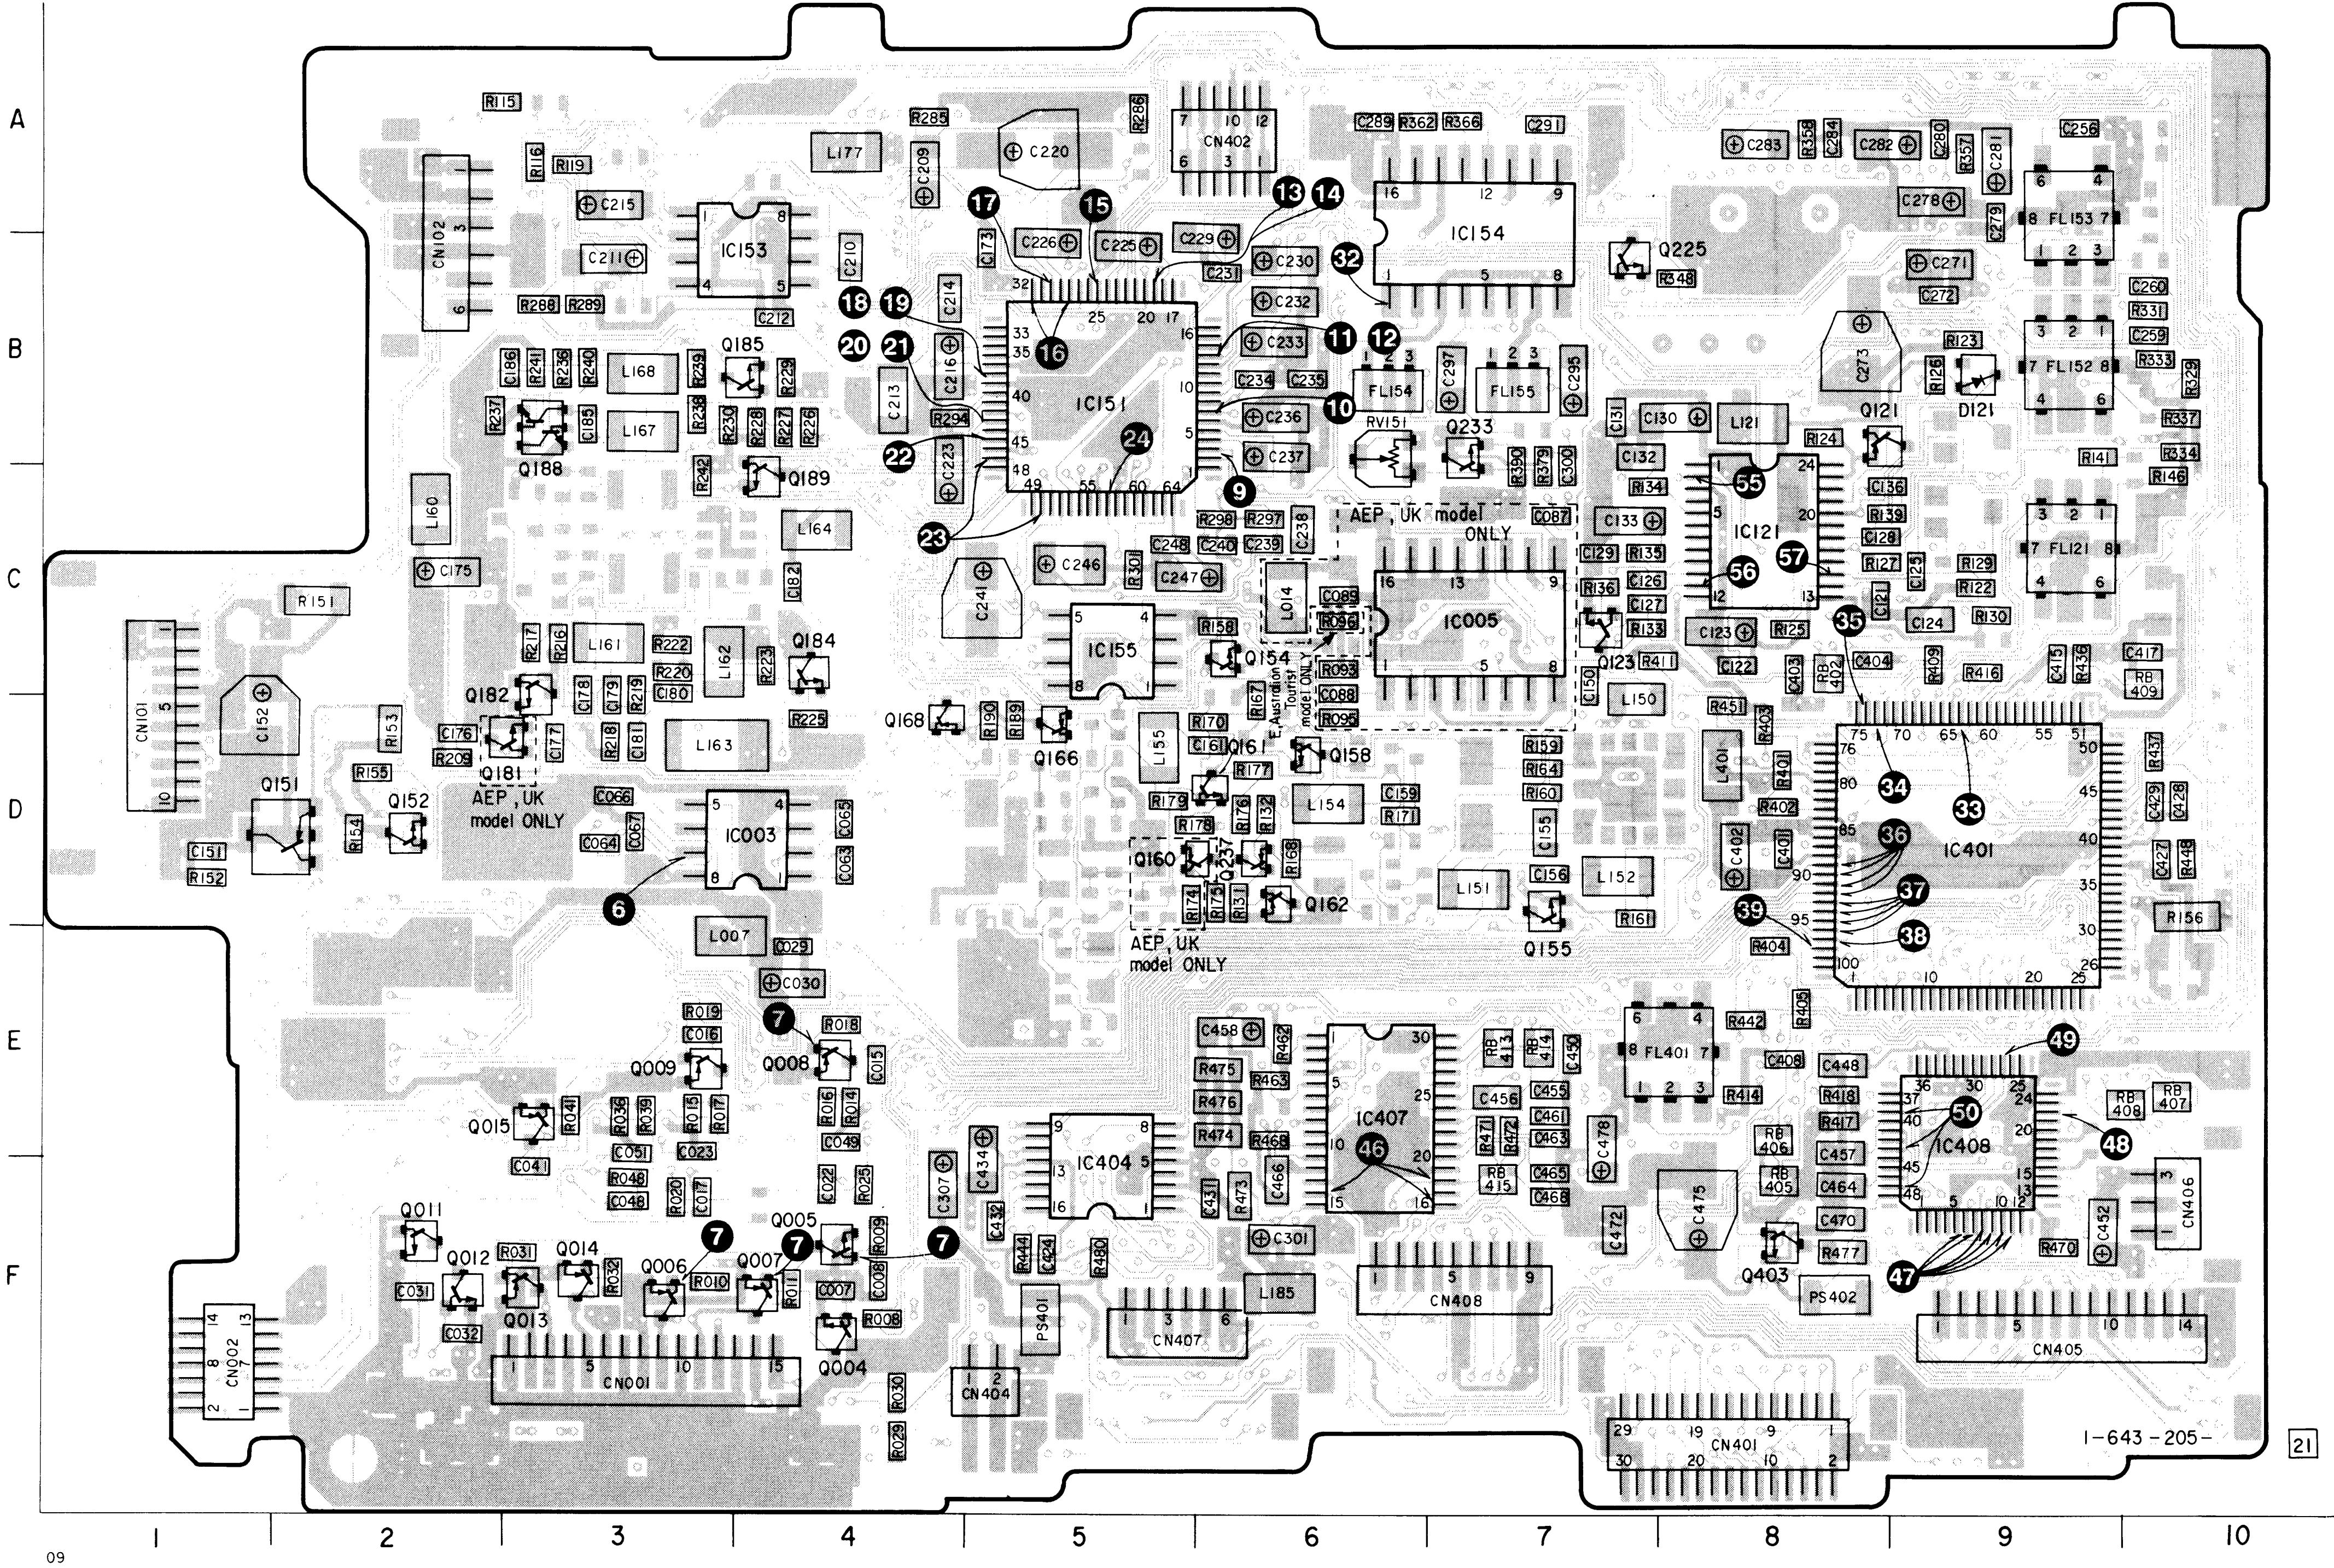
A
B
C
D
E
F
1
2
3
4
5
6
7
8
9
10
IC151
IC153
IC154
IC155
IC121
IC401
IC003
IC005
IC404
IC407
IC408
CN101
CN102
CN402
CN001
CN002
CN401
CN404
CN405
CN406
CN407
CN408
FL121
FL152
FL153
FL154
FL155
FL401
AEP, UK model ONLY
AEP, UK model ONLY
AEP, UK model ONLY
E,Australian Tourist model ONLY
1-643-205-
21
09

VS-93P BOARD (CONDUCTOR SIDE)

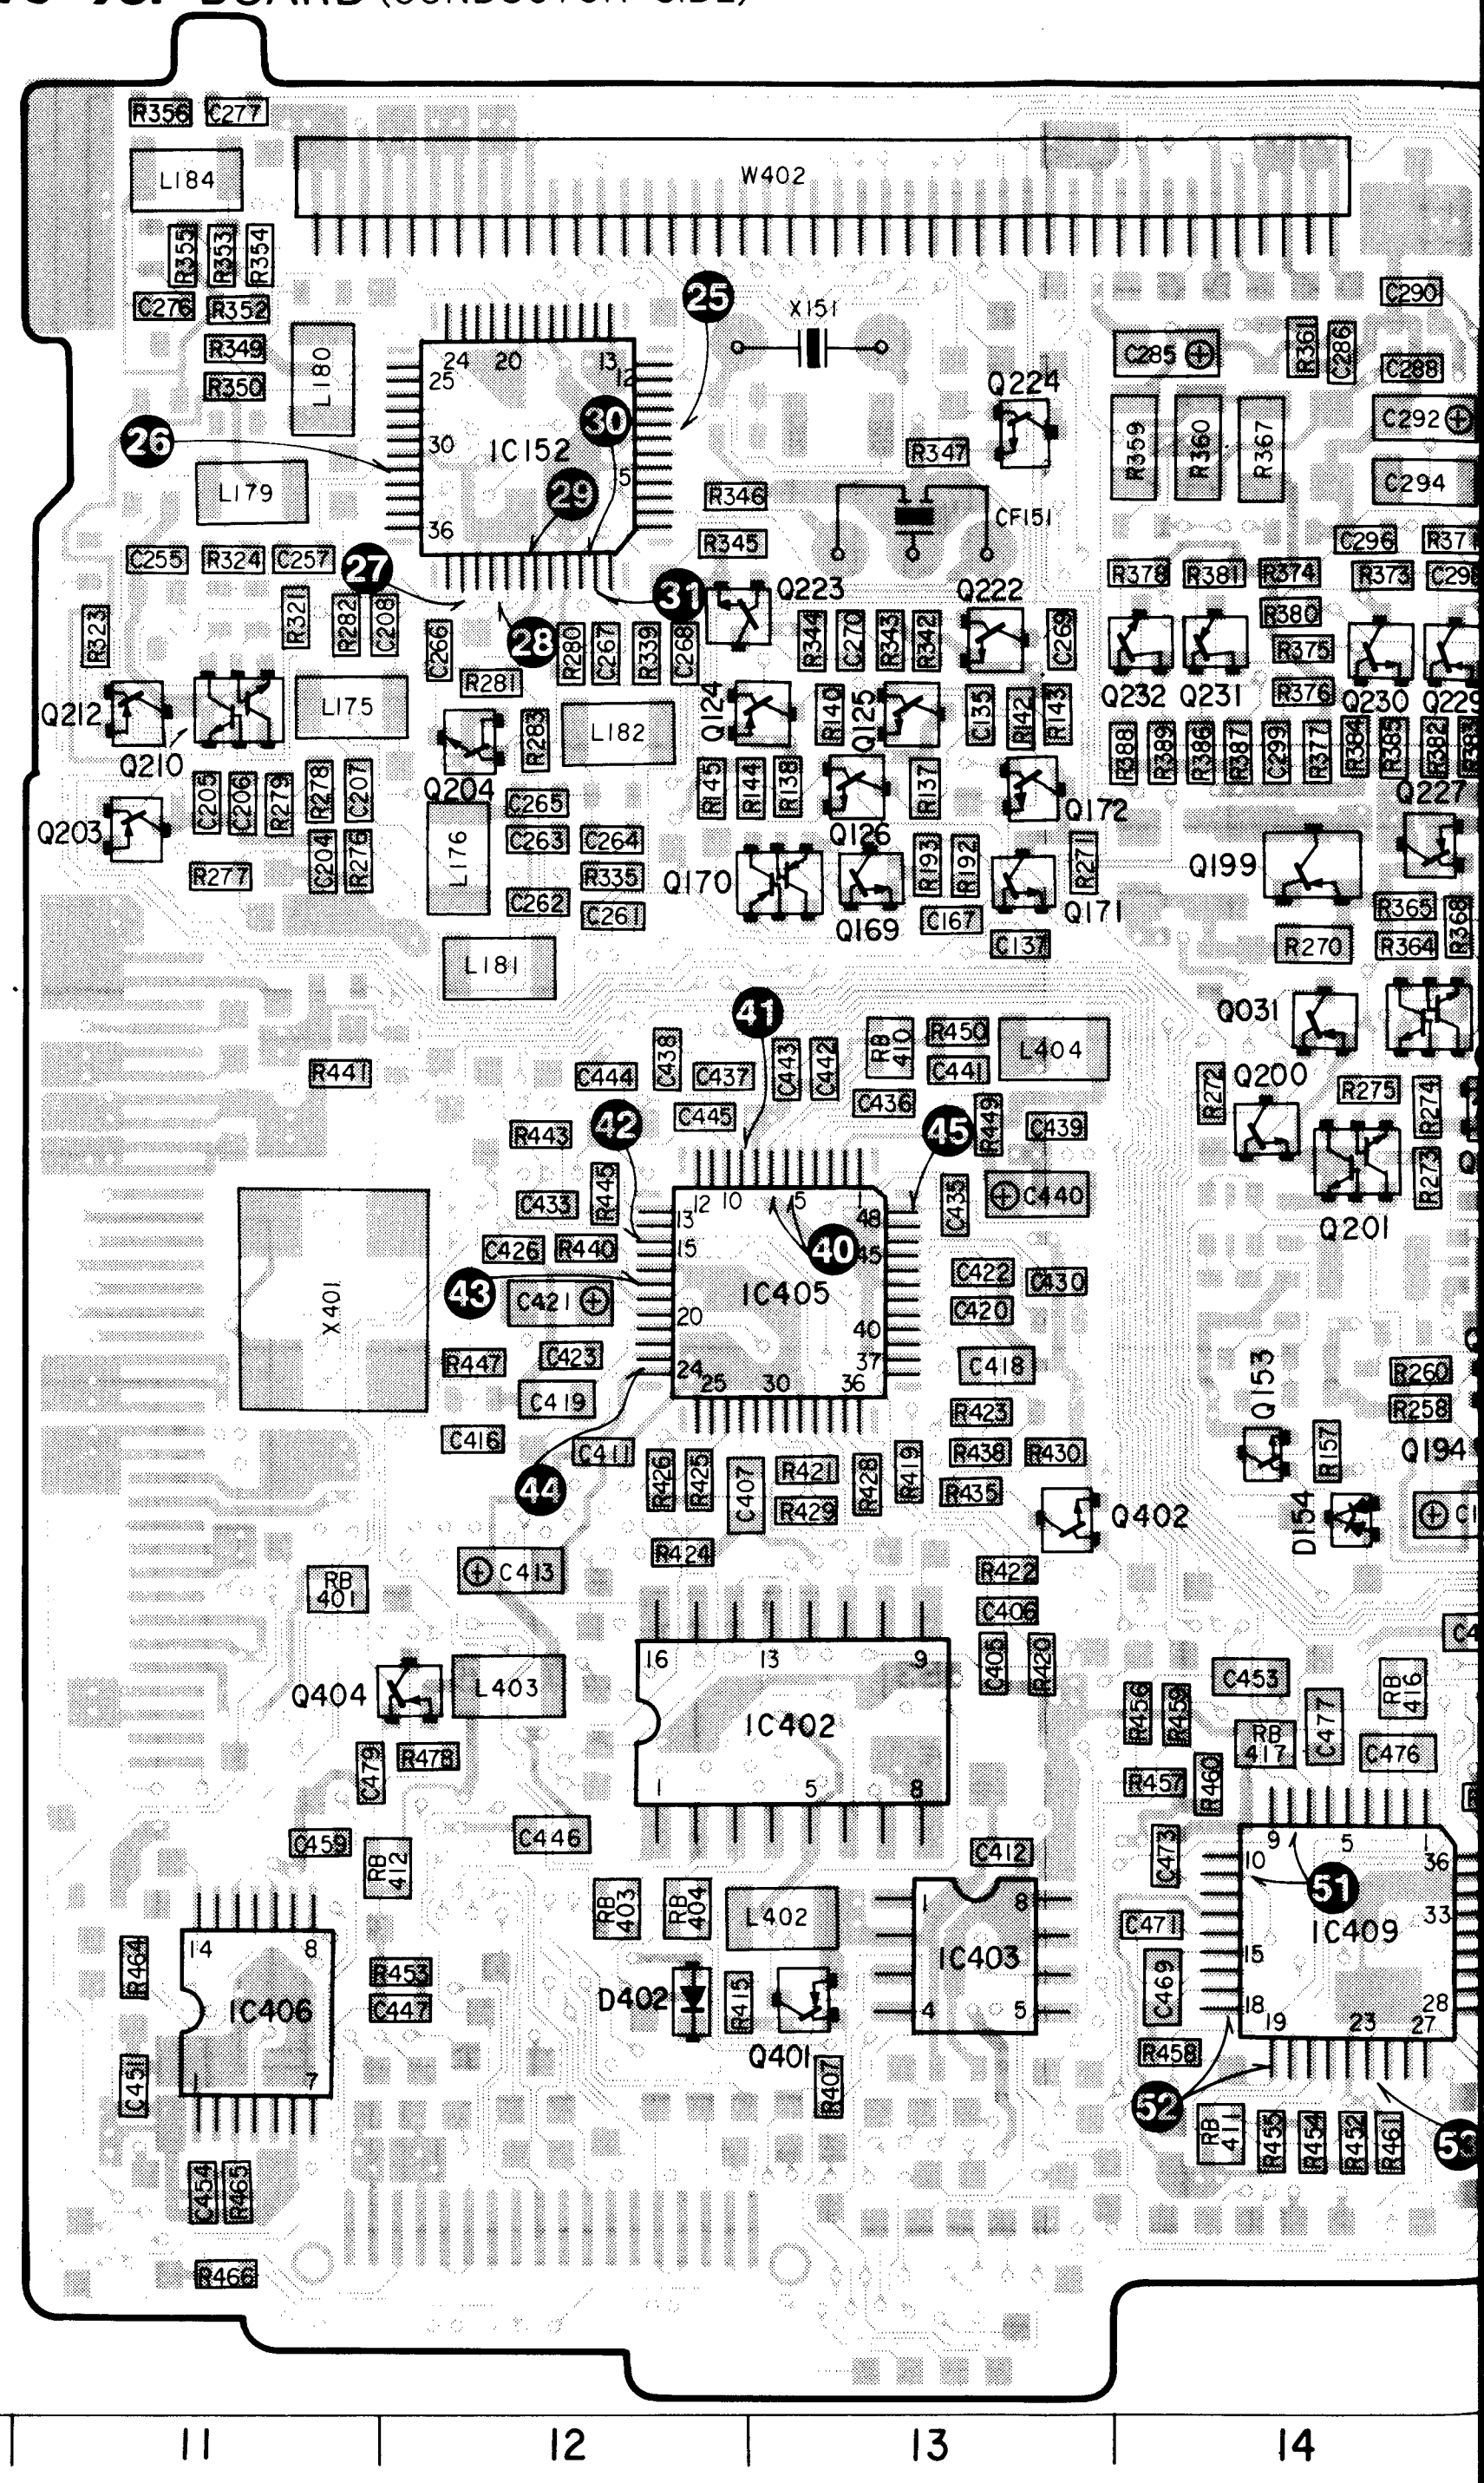
W402
X151
CF151
X401
IC152
IC402
IC403
IC405
IC406
IC409
11
12
13
14

OARD

- **For printed wiring boards.**
- VS-93P board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

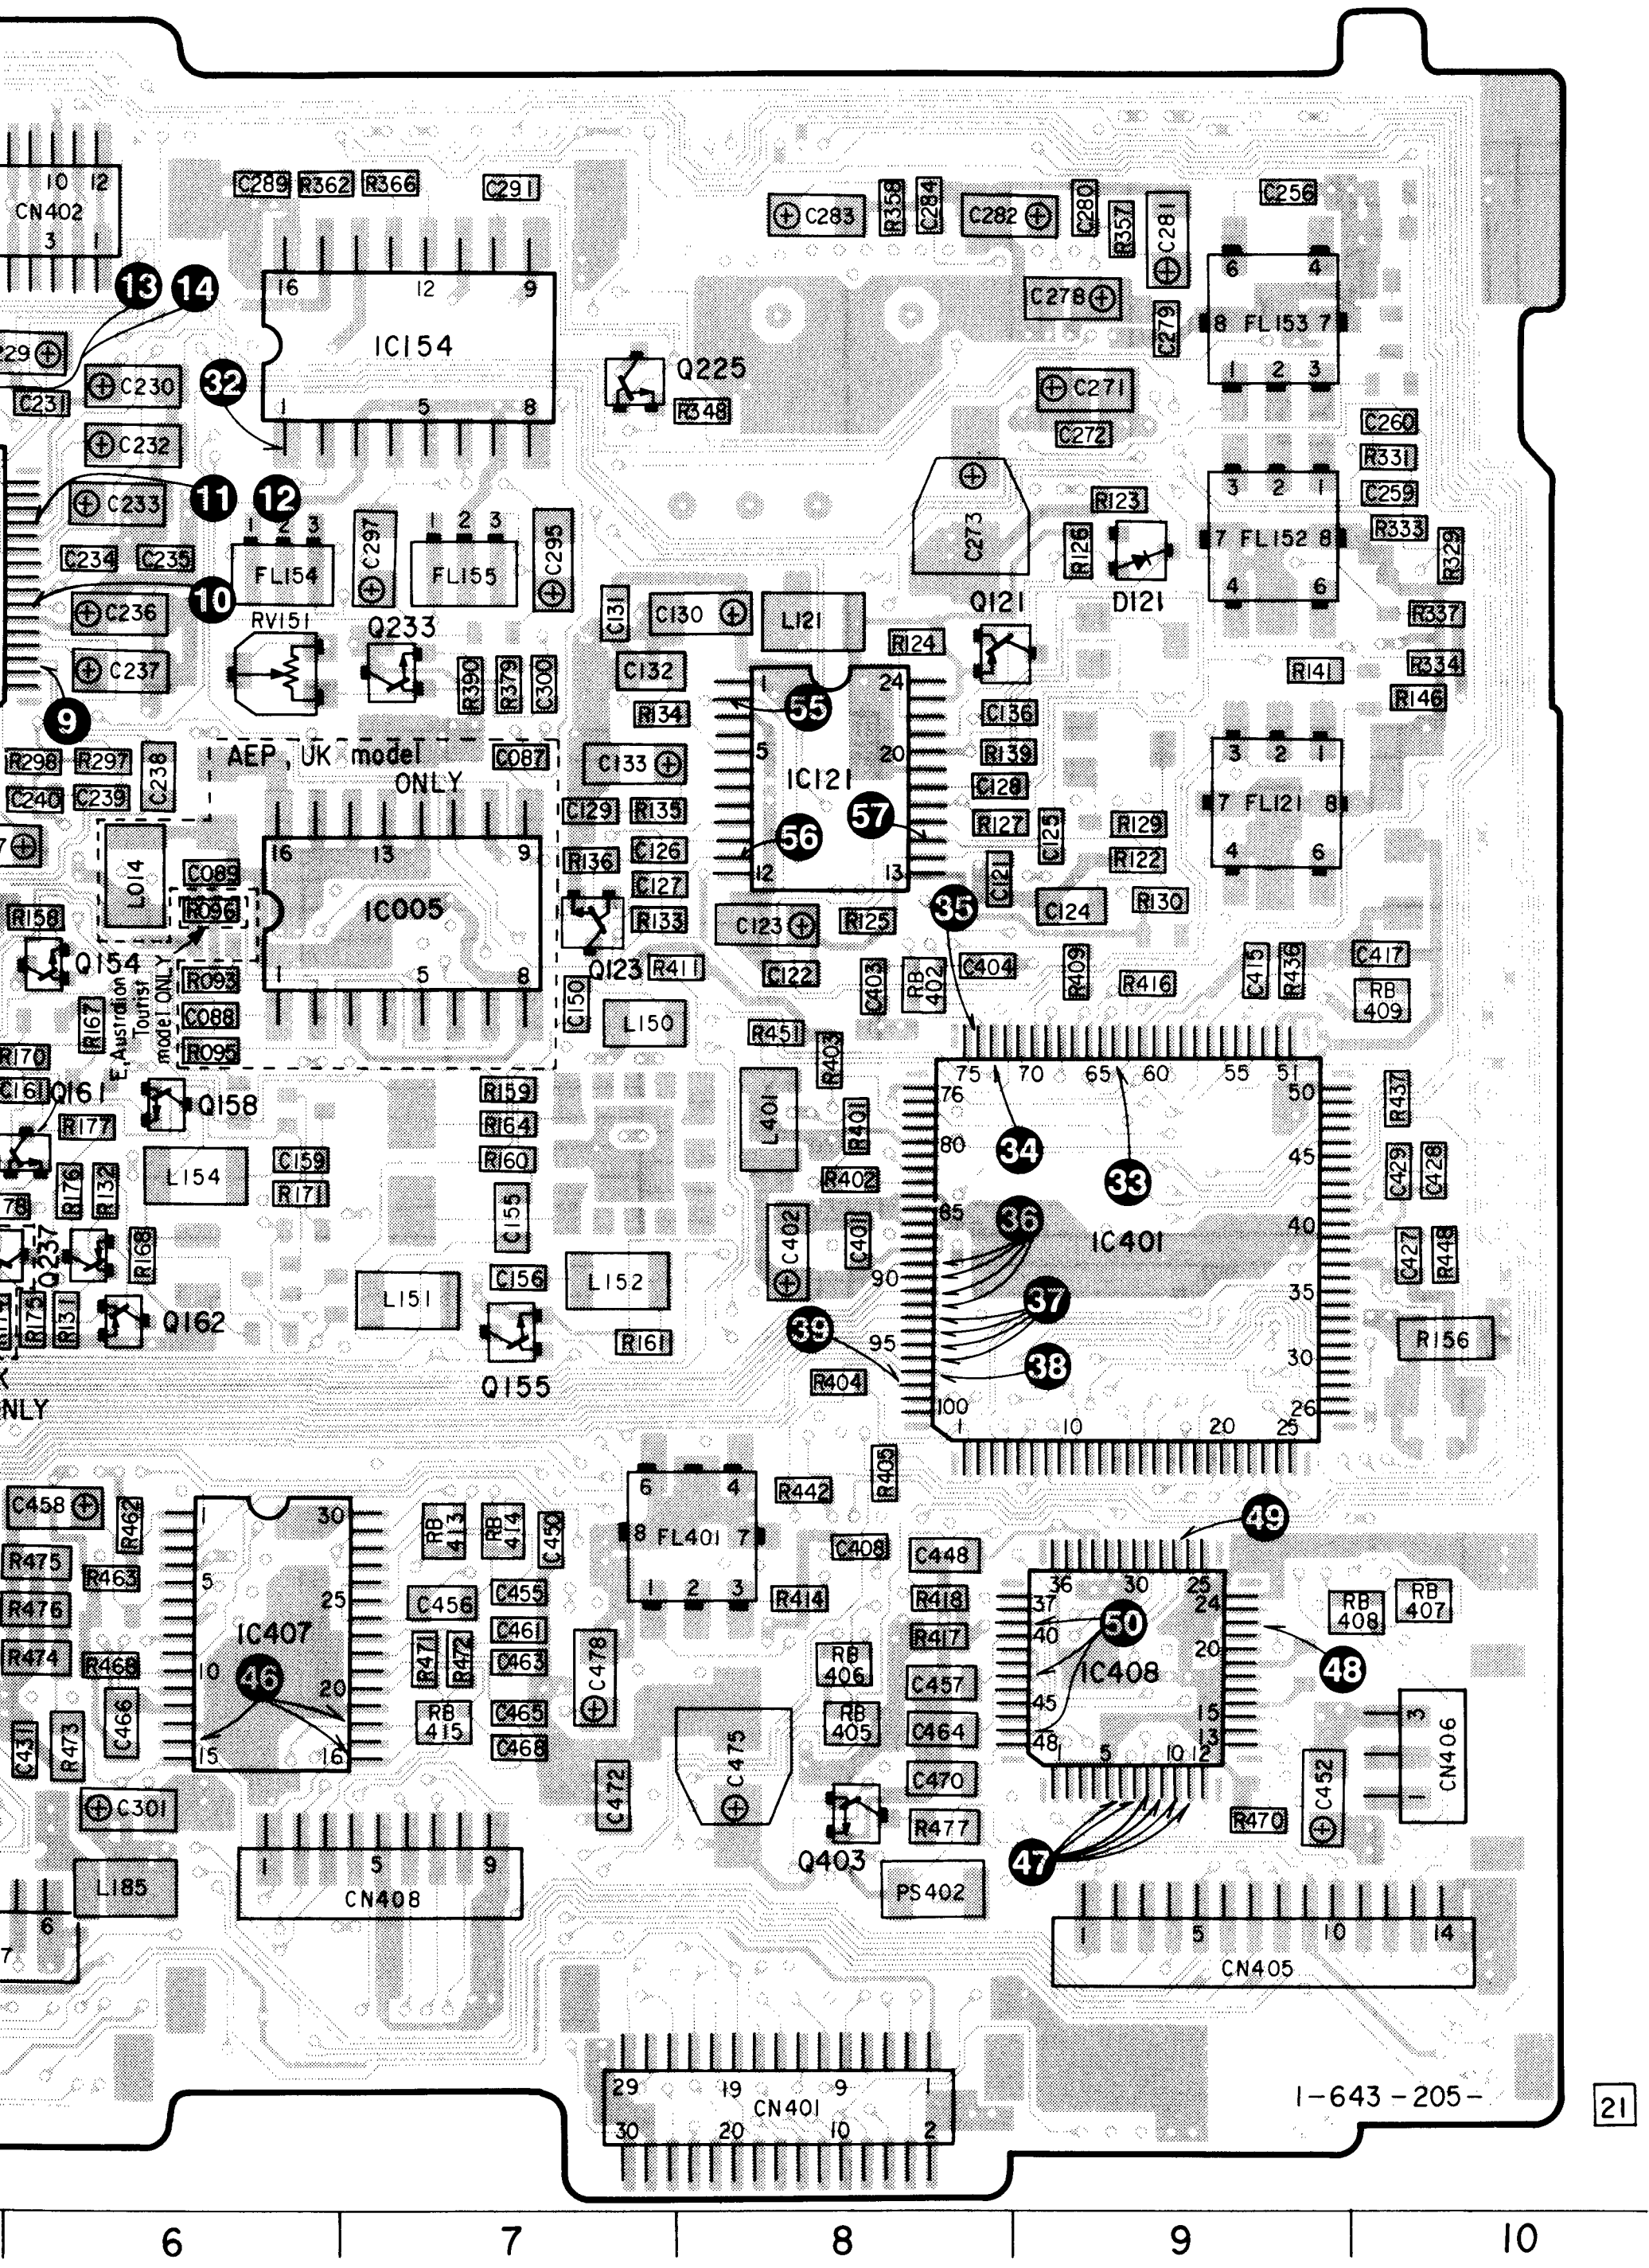
CN402
IC154
FL153
FL152
FL154
FL155
FL121
RV151
IC005
AEP, UK model ONLY
E. Australian Tourist model ONLY
IC121
IC401
IC407
FL401
IC408
CN406
CN408
CN401
CN405
PS402
1-643-205-
21
6
7
8
9
10

VS-93P BOARD (CONDUCTOR SIDE)

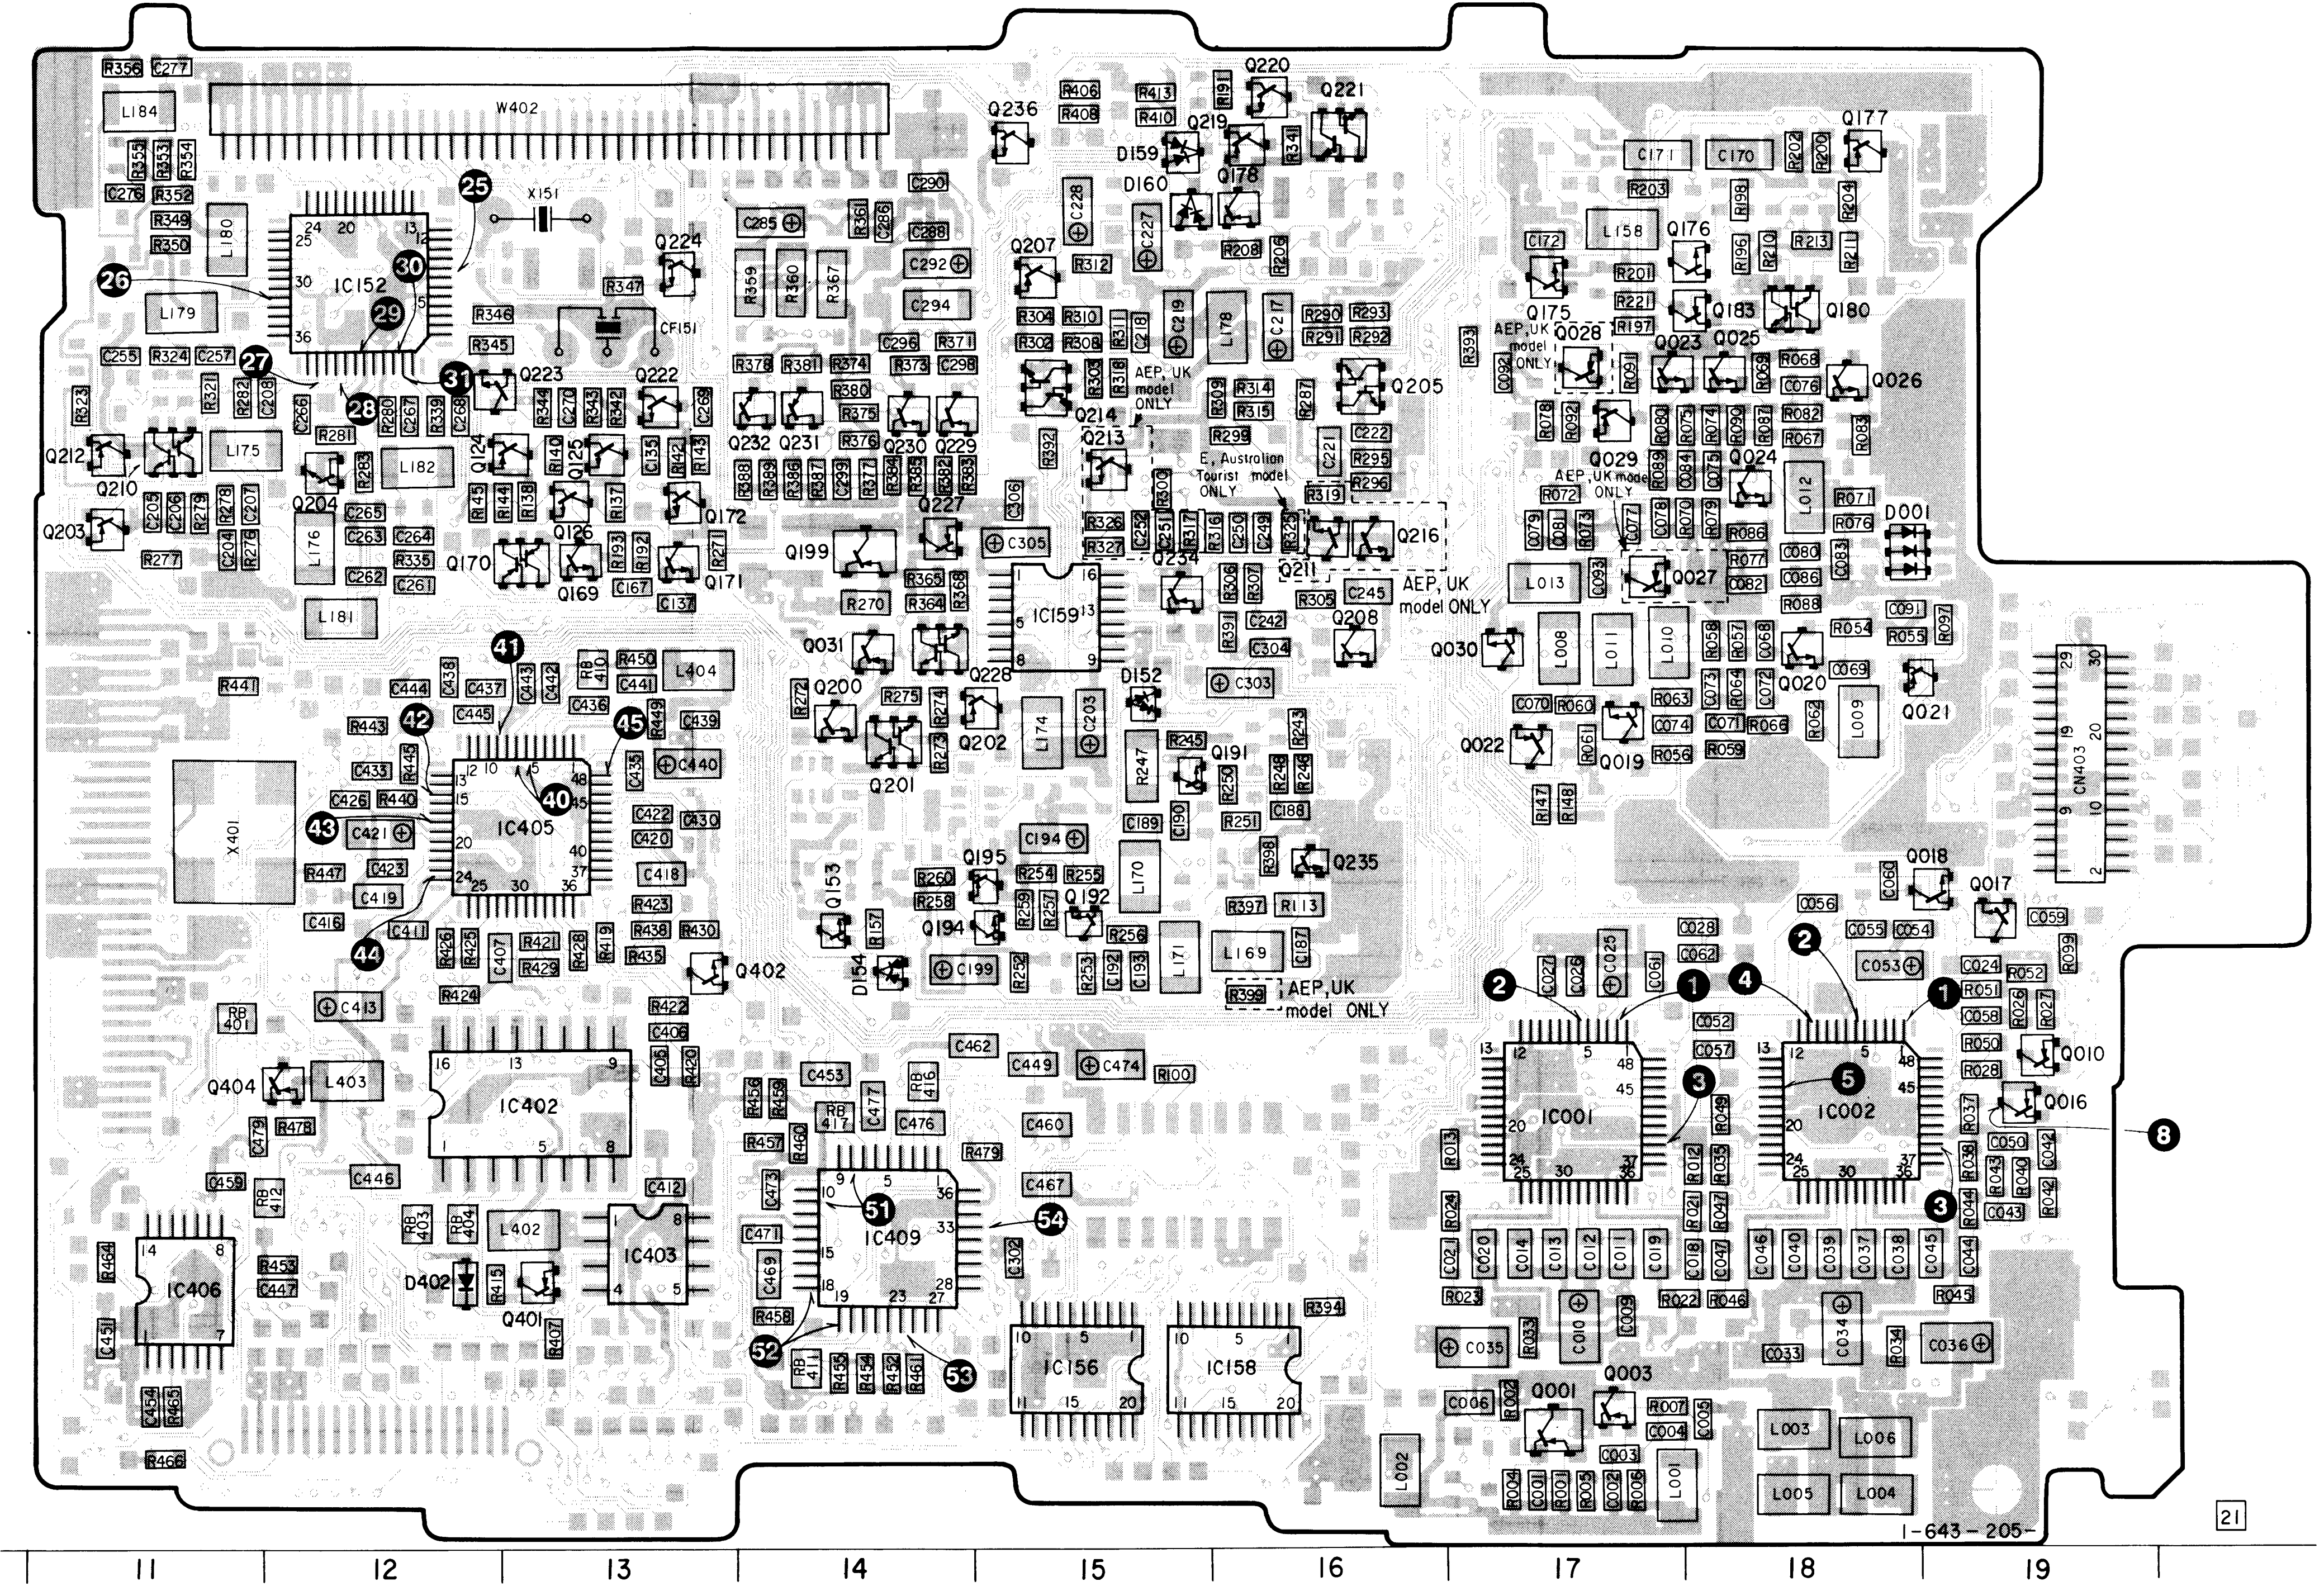
W402
X151
CF151
IC152
X401
IC405
IC402
IC403
IC406
IC409
IC159
IC156
IC158
IC001
IC002
CN403
AEP, UK model ONLY
E. Australian Tourist model ONLY
1-643-205-
21
11
12
13
14
15
16
17
18
19

< DIODE >

D001	8-719-951-22	IC	IMN10	
D121	8-719-941-86	DIODE	DAN202U	
D152	8-719-421-71	DIODE	MA132WA-TX	
D152	8-719-991-00	DIODE	DAP222-TL	
D154	8-719-989-03	DIODE	DAN222	
D159	8-719-941-86	DIODE	DAN202U	
D160	8-719-941-86	DIODE	DAN202U	
D402	8-719-404-46	DIODE	MA110	

< IC >

IC001	8-752-033-38	IC	CXA1202R	
IC002	8-752-033-38	IC	CXA1202R	
IC003	8-752-053-21	IC	CXA1211M	
IC005	8-759-998-32	IC	CXD-2107M	(AEP, UK model)
IC121	8-759-605-61	IC	CXA1203N	
IC151	8-752-036-19	IC	CXA1207R	
IC152	8-752-036-20	IC	CXA1208R	
IC153	8-759-710-29	IC	NJM2235M	
IC154	8-752-333-24	IC	CXL1506M	
IC155	8-752-053-21	IC	CXA1211M	
IC156	8-759-064-36	IC	MB88346BPFV-EF	
IC158	8-759-064-36	IC	MB88346BPFV-EF	
IC159	8-759-636-33	IC	CXA1452-E2	
IC401	8-752-834-39	IC	CXP80624-293R	
IC402	8-759-069-29	IC	uPD6456GS-618	
IC403	8-759-044-78	IC	AK6420F	
IC404	8-759-057-81	IC	MPC1727VMER	
IC405	8-759-059-42	IC	CXA1481AR	
IC406	8-759-999-02	IC	TL1596CDB	
IC407	8-759-057-77	IC	MCD004BN	
IC408	8-759-057-74	IC	MCD002AR-TLM	
IC409	8-759-823-90	IC	LB8110M	

< TRANSISTOR >

Q001	8-729-216-22	TRANSISTOR	2SA1162-G	
Q003	8-729-905-23	TRANSISTOR	2SA1576-R	
Q004	8-729-905-18	TRANSISTOR	DTC144EU	
Q005	8-729-905-18	TRANSISTOR	DTC144EU	
Q006	8-729-823-86	TRANSISTOR	2SA1745	
Q007	8-729-823-86	TRANSISTOR	2SA1745	
Q008	8-729-905-23	TRANSISTOR	2SA1576-R	
Q009	8-729-905-23	TRANSISTOR	2SA1576-R	
Q010	8-729-905-12	TRANSISTOR	DTA144EU	
Q011	8-729-905-18	TRANSISTOR	DTC144EU	
Q012	8-729-905-18	TRANSISTOR	DTC144EU	
Q013	8-729-823-86	TRANSISTOR	2SA1745	
Q014	8-729-823-86	TRANSISTOR	2SA1745	
Q015	8-729-905-23	TRANSISTOR	2SA1576-R	
Q016	8-729-905-23	TRANSISTOR	2SA1576-R	
Q017	8-729-905-12	TRANSISTOR	DTA144EU	
Q018	8-729-905-18	TRANSISTOR	DTC144EU	
Q019	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q020	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q021	8-729-905-23	TRANSISTOR	2SA1576-R	
Q022	8-729-905-23	TRANSISTOR	2SA1576	
Q023	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q024	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q025	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q026	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q027	8-729-905-96	TRANSISTOR	DTA114TU	(AEP, UK model)
Q028	8-729-905-96	TRANSISTOR	DTA114TU	(AEP, UK model)
Q029	8-729-905-96	TRANSISTOR	DTA114TU	
Q030	8-729-905-15	TRANSISTOR	DTC144WU	(AEP, UK model)
Q031	8-729-905-18	TRANSISTOR	DTC144EU	
Q121	8-729-905-12	TRANSISTOR	DTA144EU	
Q123	8-729-905-18	TRANSISTOR	DTC144EU	
Q124	8-729-905-12	TRANSISTOR	DTA144EU	
Q125	8-729-117-73	TRANSISTOR	2SC4178	
Q126	8-729-120-28	TRANSISTOR	2SC1623	
Q151	8-729-101-07	TRANSISTOR	2SB798-DL	
Q152	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q153	8-729-928-81	TRANSISTOR	DTC144EE	
Q154	8-729-927-XX	TRANSISTOR	2SC4617TL-QR	
Q155	8-729-823-16	TRANSISTOR	2SC4555-5. 6. 7	
Q158	8-729-927-XX	TRANSISTOR	2SC4617TL-QR	
Q160	8-729-928-19	TRANSISTOR	2SA1774R	(AEP, UK model)
Q161	8-729-927-XX	TRANSISTOR	2SC4617TL-QR	
Q162	8-729-928-27	TRANSISTOR	DTA144EE	
Q166	8-729-928-19	TRANSISTOR	2SA1774R	
Q168	8-729-928-27	TRANSISTOR	DTA144EE	
Q169	8-729-905-18	TRANSISTOR	DTC144EU	
Q170	8-729-925-47	TRANSISTOR	IMB2	
Q171	8-729-117-73	TRANSISTOR	2SC4178	
Q172	8-729-117-73	TRANSISTOR	2SC4178	
Q175	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q176	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q177	8-729-905-23	TRANSISTOR	2SA1576-R	
Q178	8-729-905-23	TRANSISTOR	2SA1576-R	
Q180	8-729-422-54	TRANSISTOR	XN4215	
Q181	8-729-905-18	TRANSISTOR	DTC144EU	(AEP, UK model)
Q182	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q183	8-729-921-58	TRANSISTOR	DTA144TU	
Q184	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q185	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q188	8-729-907-26	TRANSISTOR	IMX1	
Q189	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q191	8-729-927-XX	TRANSISTOR	2SC4617	
Q192	8-729-927-XX	TRANSISTOR	2SC4617TL-QR	
Q194	8-729-927-XX	TRANSISTOR	2SC4617TL-QR	
Q195	8-729-928-19	TRANSISTOR	2SA1774R	
Q199	8-729-807-87	TRANSISTOR	2SB1295-UL6	
Q200	8-729-905-18	TRANSISTOR	DTC144EU	
Q201	8-729-920-48	TRANSISTOR	IMH2	
Q202	8-729-117-16	TRANSISTOR	2SA1611-M6	
Q203	8-729-905-23	TRANSISTOR	2SA1576-R	
Q204	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q205	8-729-920-48	TRANSISTOR	IMH2	
Q207	8-729-905-12	TRANSISTOR	DTA144EU	
Q208	8-729-905-18	TRANSISTOR	DTC144EU	
Q210	8-729-920-48	TRANSISTOR	IMH2	
Q211	8-729-823-16	TRANSISTOR	2SC4555	(AEP, UK model)
Q212	8-729-905-23	TRANSISTOR	2SA1576-R	
Q213	8-729-823-16	TRANSISTOR	2SC4555	(AEP, UK model)
Q214	8-729-920-48	TRANSISTOR	IMH2	
Q216	8-729-905-18	TRANSISTOR	DTC144EU	(AEP, UK model)
Q219	8-729-905-12	TRANSISTOR	DTA144EU	
Q220	8-729-905-18	TRANSISTOR	DTC144EU	
Q221	8-729-920-48	TRANSISTOR	IMH2	
Q222	8-729-120-28	TRANSISTOR	2SC1623	
Q223	8-729-905-18	TRANSISTOR	DTC144EU	
Q224	8-729-120-28	TRANSISTOR	2SC1623	
Q225	8-729-120-28	TRANSISTOR	2SC1623	
Q227	8-729-117-16	TRANSISTOR	2SA1611-M6	
Q228	8-729-920-48	TRANSISTOR	IMH2	
Q229	8-729-905-23	TRANSISTOR	2SA1576	
Q230	8-729-120-28	TRANSISTOR	2SC1623	
Q231	8-729-905-23	TRANSISTOR	2SA1576-R	
Q232	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q233	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q234	8-729-905-23	TRANSISTOR	2SA1576-R	
Q235	8-729-928-81	TRANSISTOR	DTC144EE	
Q236	8-729-905-09	TRANSISTOR	DTA144WU	
Q237	8-729-928-19	TRANSISTOR	2SA1774R	
Q401	8-729-905-12	TRANSISTOR	DTA144EU	
Q402	8-729-905-18	TRANSISTOR	DTC144EU	
Q403	8-729-907-00	TRANSISTOR	DTC114EU	
Q404	8-729-905-23	TRANSISTOR	2SA1576-R	

VS-93P (REC/PB HEAD AMP) SCHEMATIC DIAGRAM

• Refer to page 108 for F

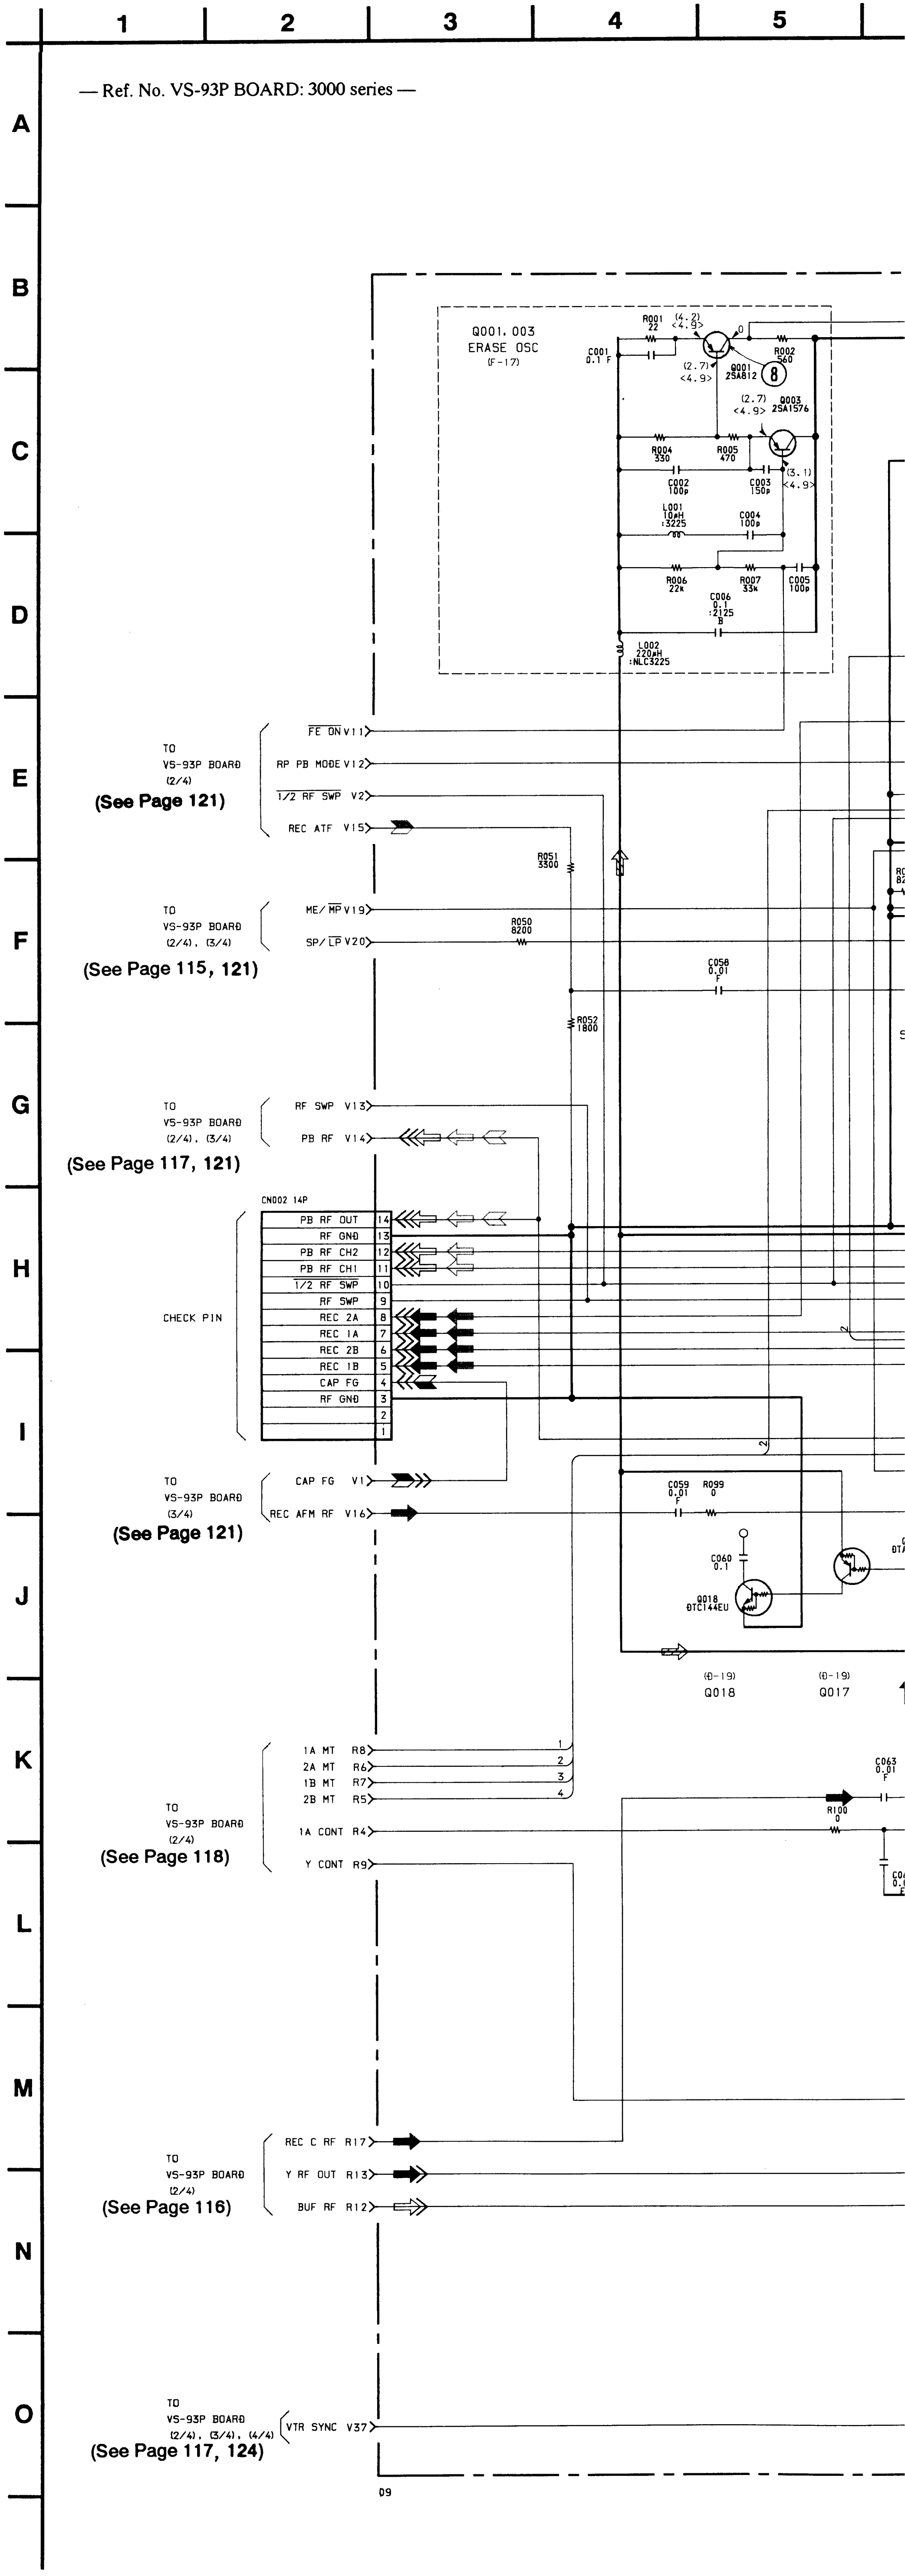
— Ref. No. VS-93P BOARD: 3000 series —
1
2
3
4
5
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
Q001, 003
ERASE OSC
(F-17)
R001 22
(4.2) <4.9>
0
C001 0.1 F
R002 560
(2.7) <4.9>
Q001 2SA812
8
(2.7) <4.9>
Q003 2SA1576
R004 330
R005 470
(3.1) <4.9>
C002 100p
C003 150p
L001 10μH :3225
C004 100p
R006 22k
R007 33k
C005 100p
C006 0.1 :2125 B
L002 220μH :NLC3225
TO VS-93P BOARD (2/4)
(See Page 121)
FE ON V11
RP PB MODE V12
1/2 RF SWP V2
REC ATF V15
R051 3300
TO VS-93P BOARD (2/4), (3/4)
(See Page 115, 121)
ME/MP V19
SP/LP V20
R050 8200
C058 0.01 F
R052 1800
TO VS-93P BOARD (2/4), (3/4)
(See Page 117, 121)
RF SWP V13
PB RF V14
CN002 14P
CHECK PIN
PB RF OUT 14
RF GND 13
PB RF CH2 12
PB RF CH1 11
1/2 RF SWP 10
RF SWP 9
REC 2A 8
REC 1A 7
REC 2B 6
REC 1B 5
CAP FG 4
RF GND 3
2
1
TO VS-93P BOARD (3/4)
(See Page 121)
CAP FG V1
REC AFM RF V16
C059 0.01 F
R099 0
C060 0.1
Q018 DTC144EU
(D-19) Q018
(D-19) Q017
TO VS-93P BOARD (2/4)
(See Page 118)
1A MT R8
2A MT R6
1B MT R7
2B MT R5
1A CONT R4
Y CONT R9
C063 0.01 F
R100 0
TO VS-93P BOARD (2/4)
(See Page 116)
REC C RF R17
Y RF OUT R13
BUF RF R12
TO VS-93P BOARD (2/4), (3/4), (4/4)
(See Page 117, 124)
VTR SYNC V37
09

• Refer to page 108 for Printed Wiring Board.

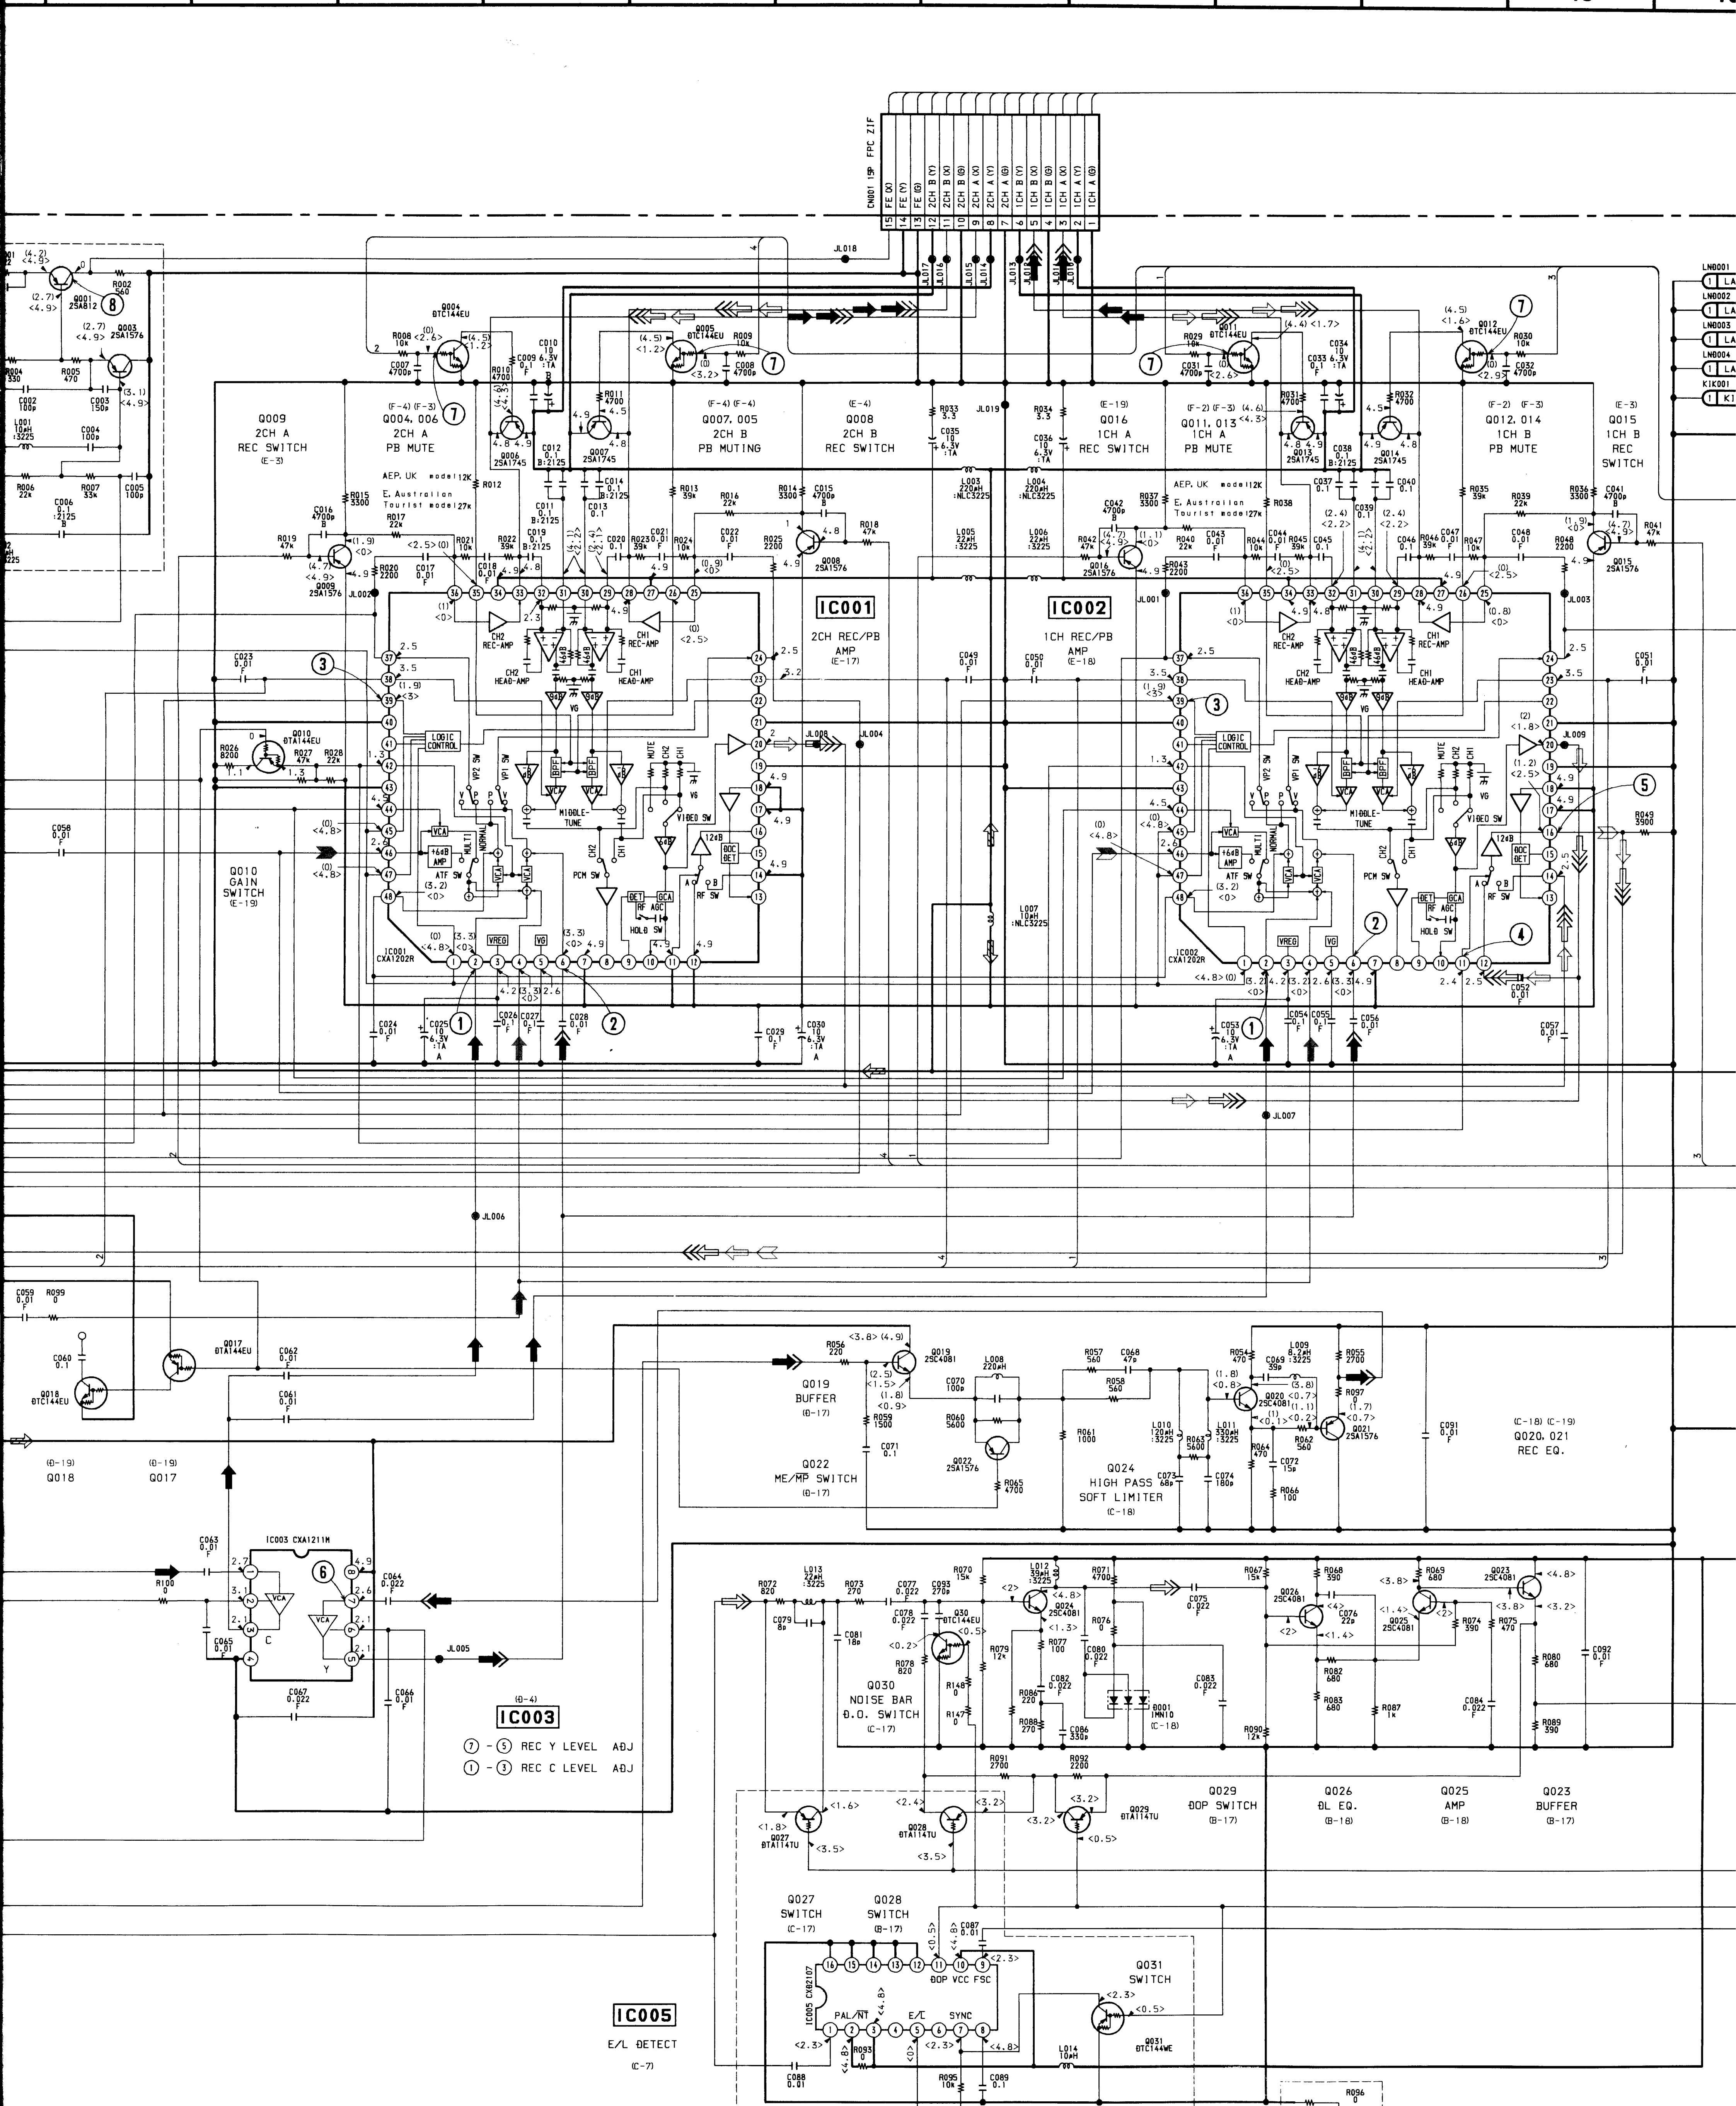
CN001 15P FPC ZIF
Q009 2CH A REC SWITCH (E-3)
Q004, 006 2CH A PB MUTE
Q007, 005 2CH B PB MUTING
Q008 2CH B REC SWITCH
Q016 1CH A REC SWITCH
Q011, 013 1CH A PB MUTE
Q012, 014 1CH B PB MUTE
Q015 1CH B REC SWITCH
IC001 2CH REC/PB AMP (E-17)
IC002 1CH REC/PB AMP (E-18)
IC001 CXA1202R
IC002 CXA1202R
Q010 GAIN SWITCH (E-19)
Q018
Q017
IC003 CXA1211M
IC003
⑦ - ⑤ REC Y LEVEL ADJ
① - ③ REC C LEVEL ADJ
Q019 BUFFER (B-17)
Q022 ME/MP SWITCH (B-17)
Q024 HIGH PASS SOFT LIMITER (C-18)
Q020, 021 REC EQ.
Q030 NOISE BAR D.O. SWITCH (C-17)
Q029 DOP SWITCH (B-17)
Q026 DL EQ. (B-18)
Q025 AMP (B-18)
Q023 BUFFER (B-17)
Q027 SWITCH (C-17)
Q028 SWITCH (B-17)
Q031 SWITCH
IC005 E/L DETECT (C-7)
IC005 CXB2107
PAL/NT E/L SYNC DOP VCC FSC
AEP, UK model ONLY
E, Australian, Tourist model ONLY

no mark : REC/PB mo
( ) : REC mode
< > : PB mode

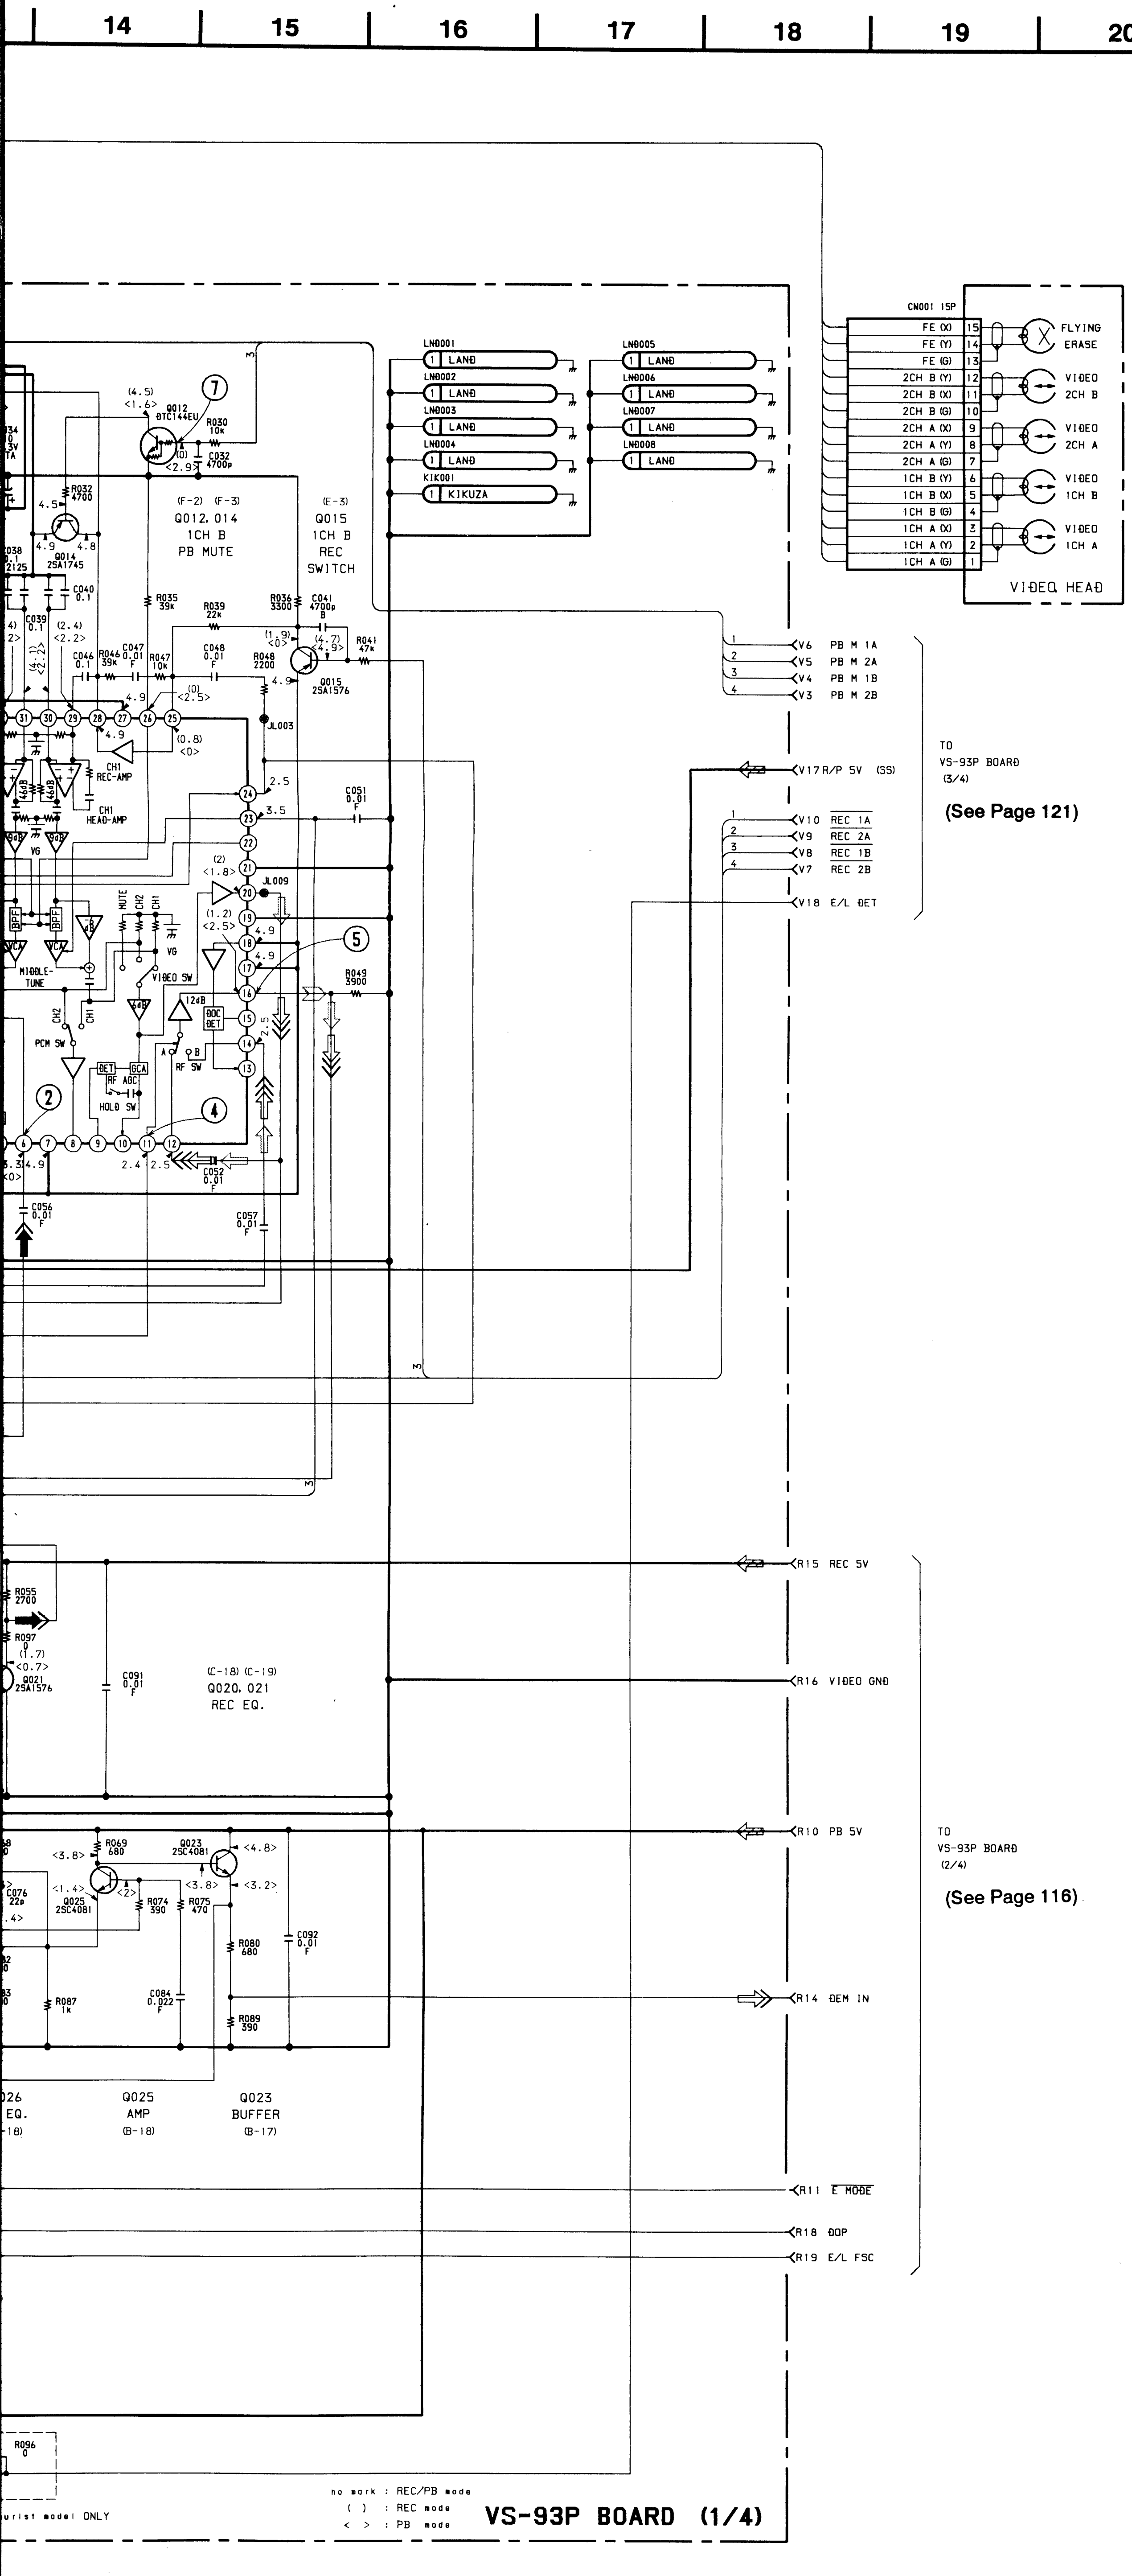
14
15
16
17
18
19
20
21
22
23
24
CN001 15P
FE (X) 15
FE (Y) 14
FE (G) 13
2CH B (Y) 12
2CH B (X) 11
2CH B (G) 10
2CH A (X) 9
2CH A (Y) 8
2CH A (G) 7
1CH B (Y) 6
1CH B (X) 5
1CH B (G) 4
1CH A (X) 3
1CH A (Y) 2
1CH A (G) 1
FLYING ERASE
VIDEO 2CH B
VIDEO 2CH A
VIDEO 1CH B
VIDEO 1CH A
VIDEO HEAD
LN0001
LN0002
LN0003
LN0004
KIK001
KIKUZA
LN0005
LN0006
LN0007
LN0008
LAND
Q012 DTC144EU
R030 10k
C032 4700p
R032 4700
Q014 2SA1745
(F-2) (F-3)
Q012, 014
1CH B
PB MUTE
(E-3)
Q015
1CH B
REC
SWITCH
R035 39k
R039 22k
R036 3300
C041 4700p
R041 47k
R048 2200
Q015 2SA1576
JL003
CH1 REC-AMP
CH1 HEAD-AMP
C051 0.01
JL009
MIDDLE-TUNE
PCM SW
VIDEO SW
RF SW
HOLD SW
RF AGC
DOC DET
R049 3900
C052 0.01
C056 0.01
C057 0.01
V6 PB M 1A
V5 PB M 2A
V4 PB M 1B
V3 PB M 2B
V17 R/P 5V (S5)
V10 REC 1A
V9 REC 2A
V8 REC 1B
V7 REC 2B
V18 E/L DET
TO
VS-93P BOARD
(3/4)
(See Page 121)
R15 REC 5V
R16 VIDEO GND
R10 PB 5V
R14 DEM IN
R11 E MODE
R18 DOP
R19 E/L FSC
TO
VS-93P BOARD
(2/4)
(See Page 116)
R055 2700
R097 0
Q021 2SA1576
C091 0.01
(C-18) (C-19)
Q020, 021
REC EQ.
R069 680
Q023 2SC4081
Q025 2SC4081
R074 390
R075 470
C076 22p
R080 680
C092 0.01
C084 0.022
R087 1k
R089 390
Q025
AMP
(B-18)
Q023
BUFFER
(B-17)
R096 0
urist model ONLY
no mark : REC/PB mode
( ) : REC mode
< > : PB mode
VS-93P BOARD (1/4)

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	➡»	➡»»	➡
PB			⇨»»	⇨

	REC	REC/PB	PB
Drum speed servo			
Drum phase servo			
Drum servo (speed and phase)			
Capstan speed servo			
Capstan phase servo			
Capstan servo (speed and phase)		➡»	
Ref. signal	➡		⇨

VS-93P BOARD(1/4)

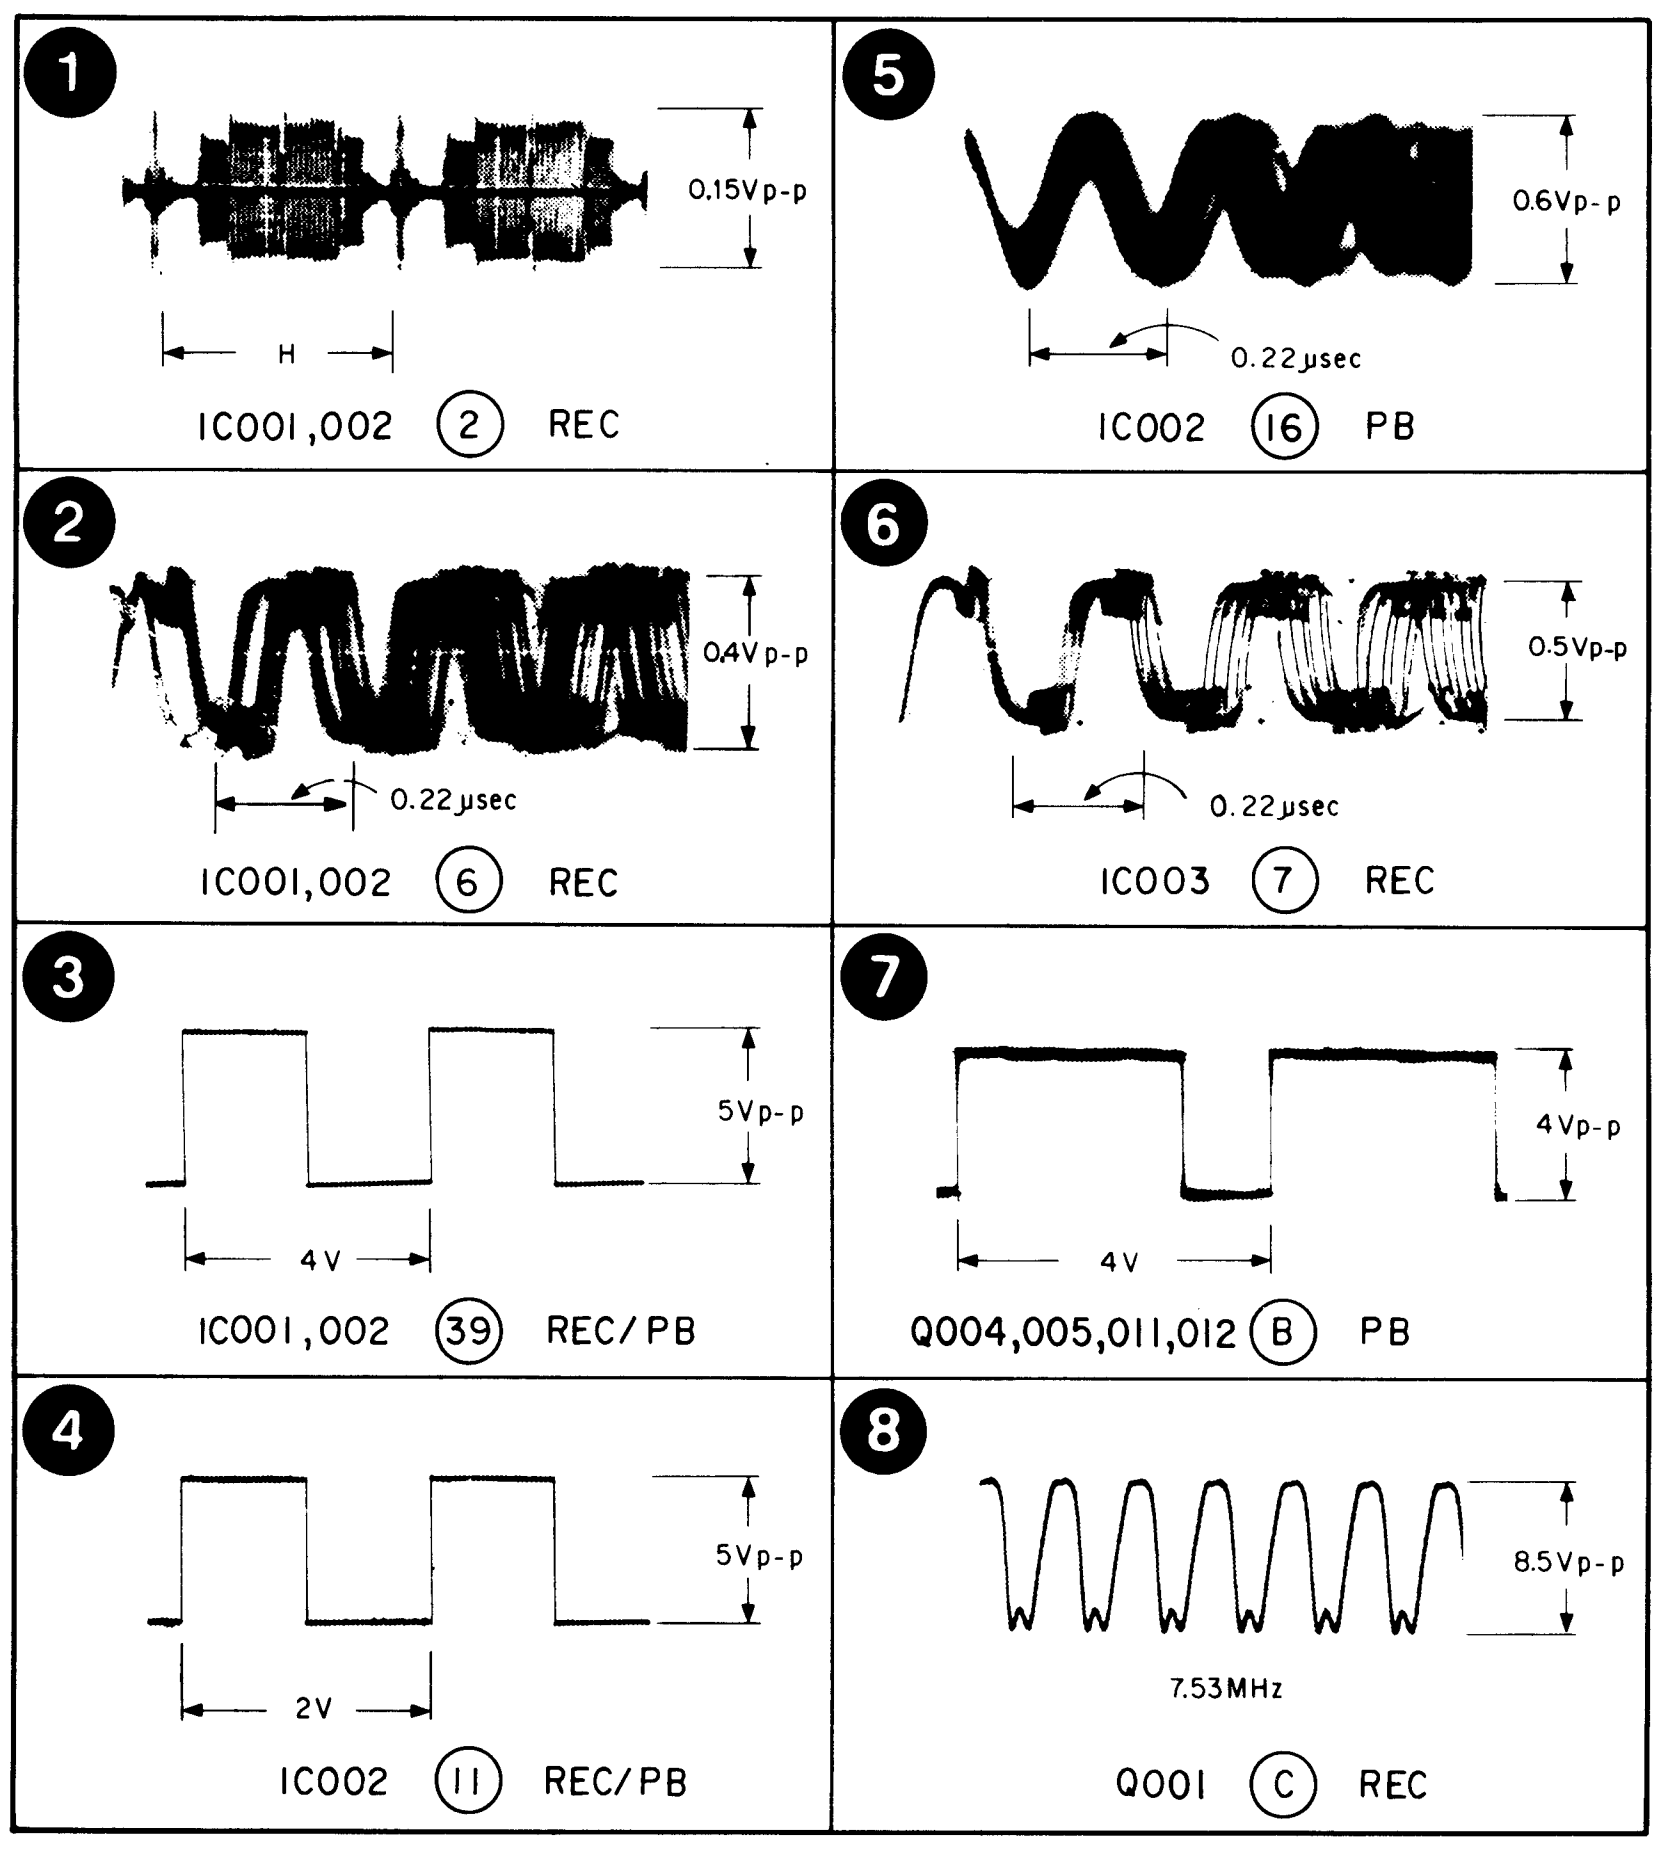

VS-93P (VIDEO) SCHEMATIC DIAGRAM

• Refer to page 108 for Printed Wiring Board.

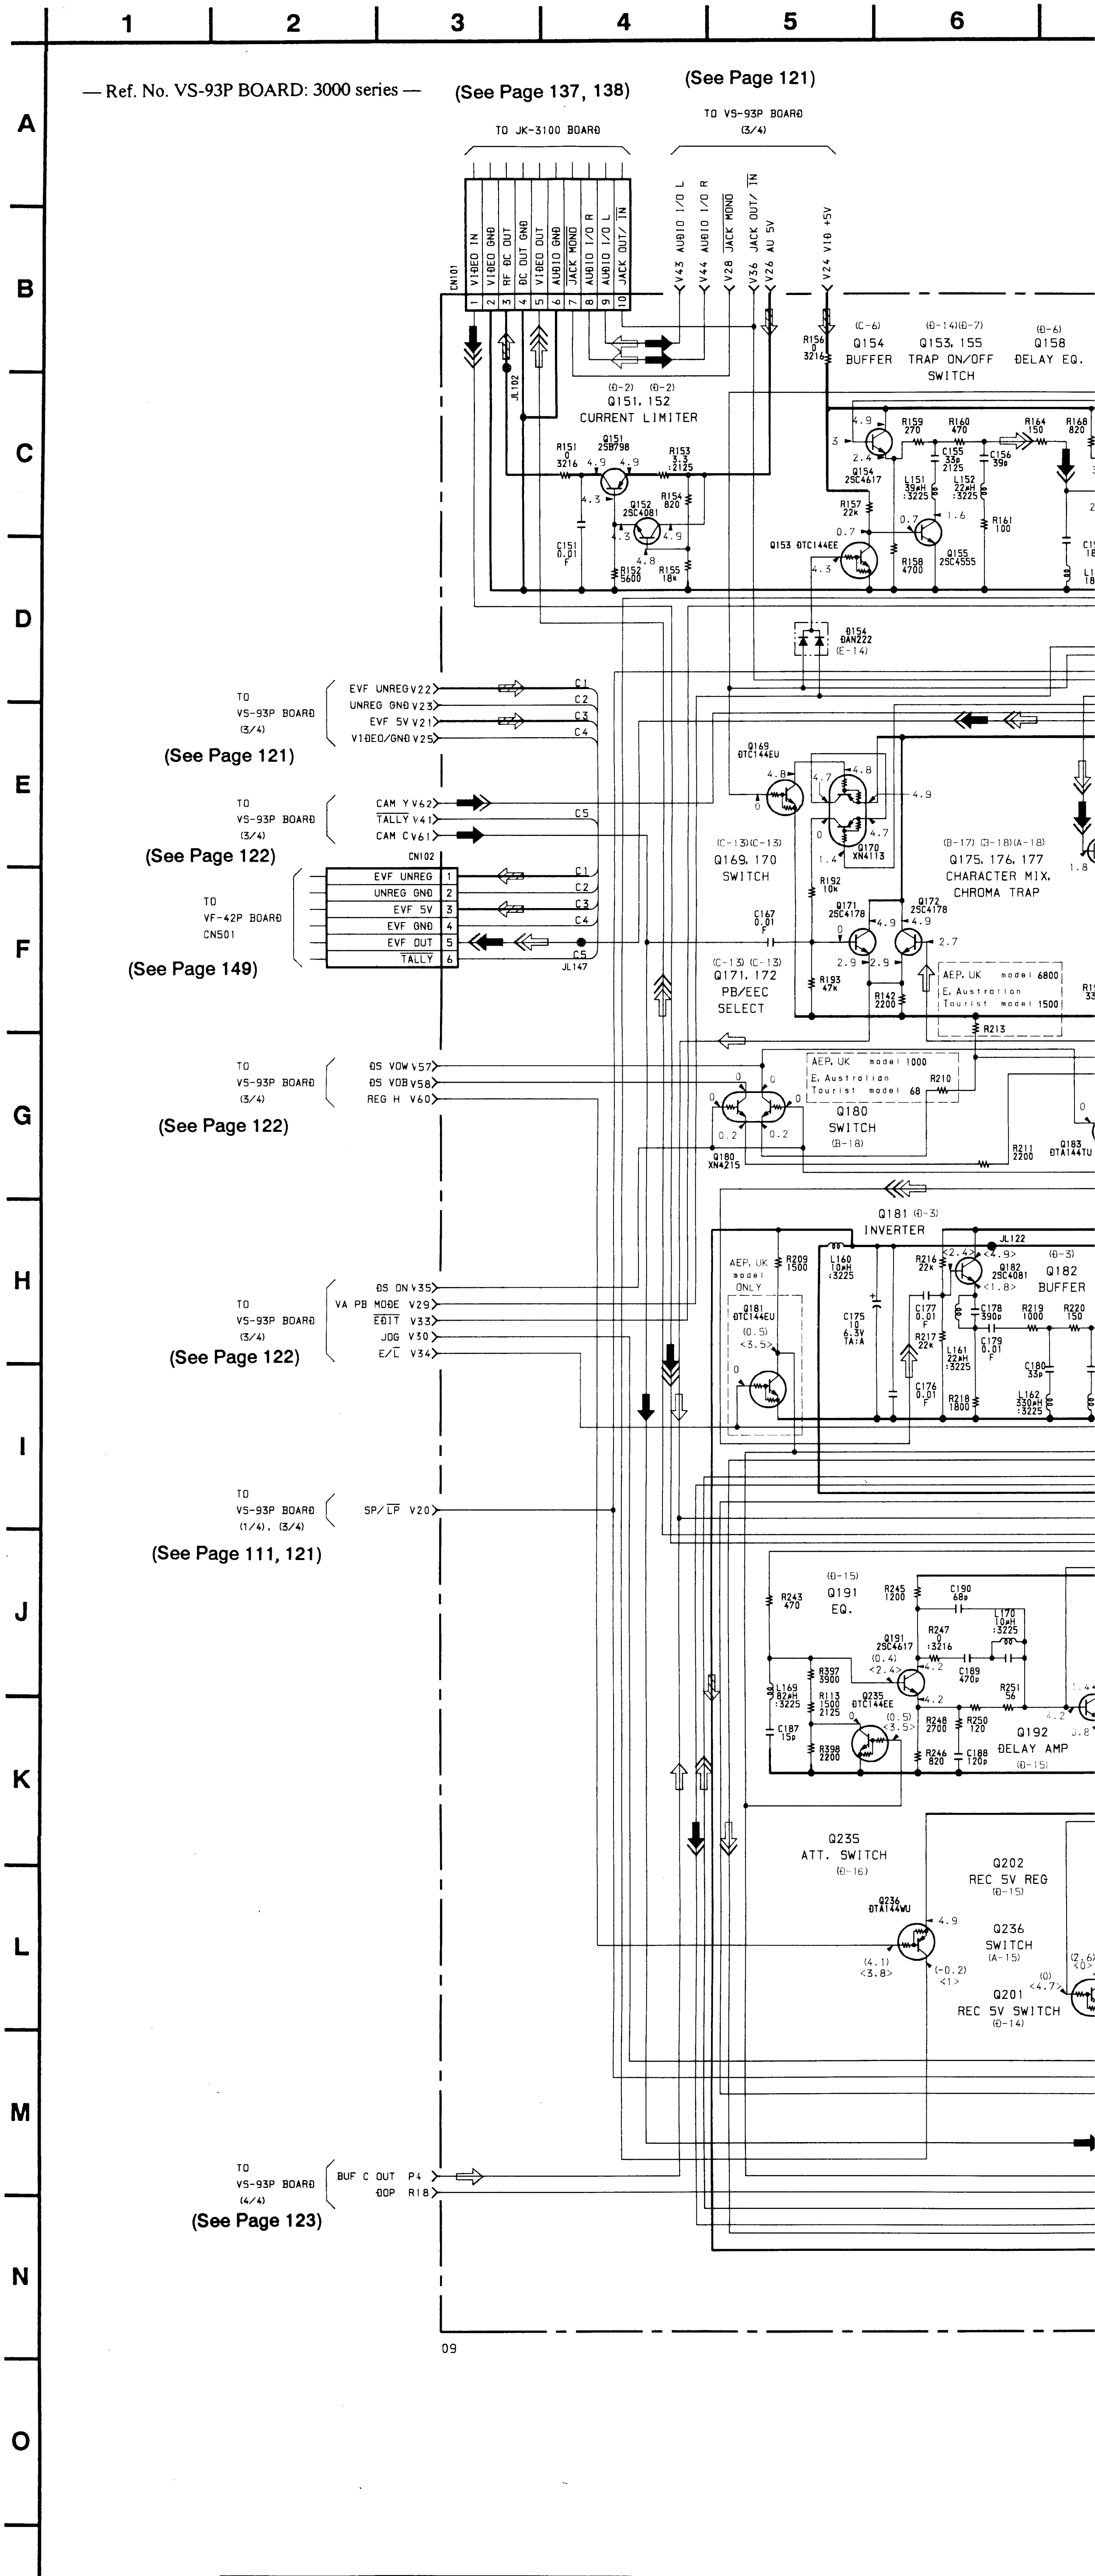
1
2
3
4
5
6
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
— Ref. No. VS-93P BOARD: 3000 series —
(See Page 137, 138)
TO JK-3100 BOARD
(See Page 121)
TO VS-93P BOARD (3/4)
CN101
1 VIDEO IN
2 VIDEO GND
3 RF BC OUT
4 BC OUT GND
5 VIDEO OUT
6 AUDIO GND
7 JACK MONO
8 AUDIO I/O R
9 AUDIO I/O L
10 JACK OUT/IN
V43 AUDIO I/O L
V44 AUDIO I/O R
V28 JACK MONO
V36 JACK OUT/IN
V26 AU 5V
V24 VIDEO +5V
Q151, 152 CURRENT LIMITER
Q154 BUFFER
Q153, 155 TRAP ON/OFF SWITCH
Q158 DELAY EQ.
TO VS-93P BOARD (3/4)
EVF UNREG V22
UNREG GND V23
EVF 5V V21
VIDEO/GND V25
(See Page 121)
TO VS-93P BOARD (3/4)
CAM Y V62
TALLY V41
CAM C V61
(See Page 122)
TO VF-42P BOARD CN501
CN102
EVF UNREG 1
UNREG GND 2
EVF 5V 3
EVF GND 4
EVF OUT 5
TALLY 6
(See Page 149)
Q169, 170 SWITCH
Q171, 172 PB/EEC SELECT
Q175, 176, 177 CHARACTER MIX, CHROMA TRAP
AEP, UK model 6800
E, Australian Tourist model 1500
TO VS-93P BOARD (3/4)
OS VOW V57
OS VOB V58
REG H V60
(See Page 122)
Q180 SWITCH
AEP, UK model 1000
E, Australian Tourist model 68
Q181 INVERTER
Q182 BUFFER
AEP, UK model ONLY
TO VS-93P BOARD (3/4)
OS ON V35
VA PB MODE V29
EDIT V33
JOG V30
E/L V34
(See Page 122)
TO VS-93P BOARD (1/4), (3/4)
SP/LP V20
(See Page 111, 121)
Q191 EQ.
Q192 DELAY AMP
Q235 ATT. SWITCH
Q202 REC 5V REG
Q236 SWITCH
Q201 REC 5V SWITCH
TO VS-93P BOARD (4/4)
BUF C OUT P4
DOP R18
(See Page 123)
09

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	➡»	➡»»	➡
PB	⇨	⇨»	⇨»»	⇨

VS-93P BOARD (3/4)

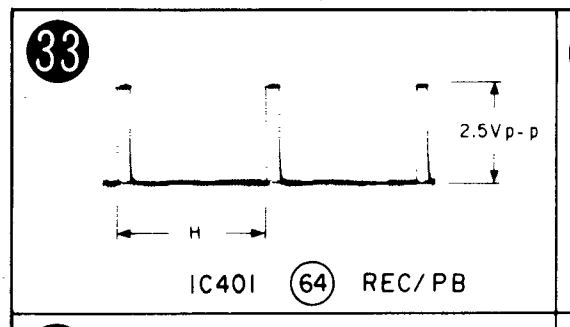

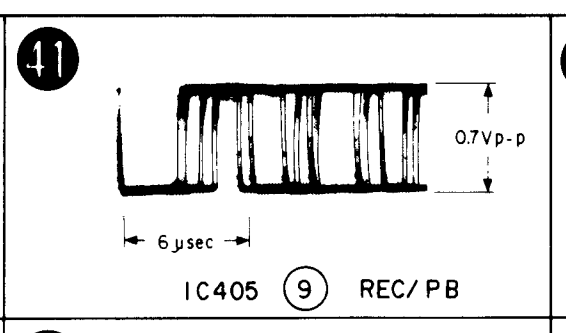

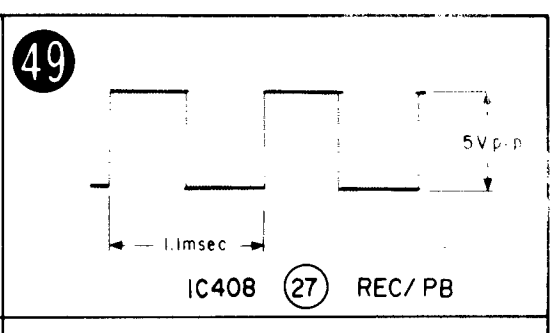

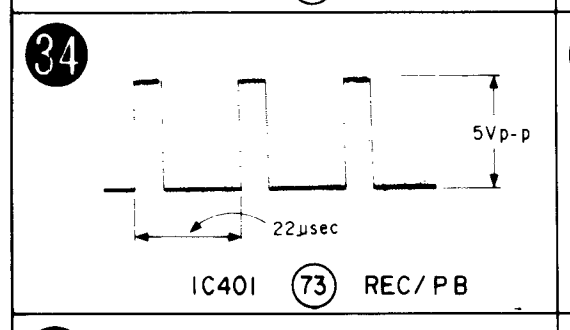

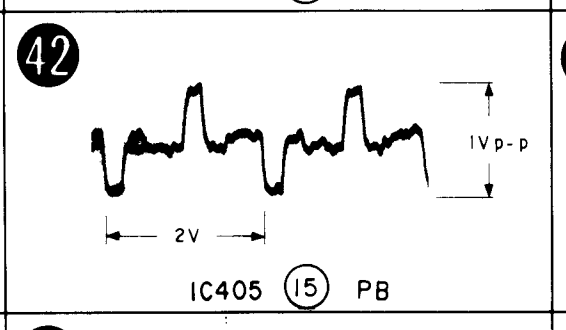

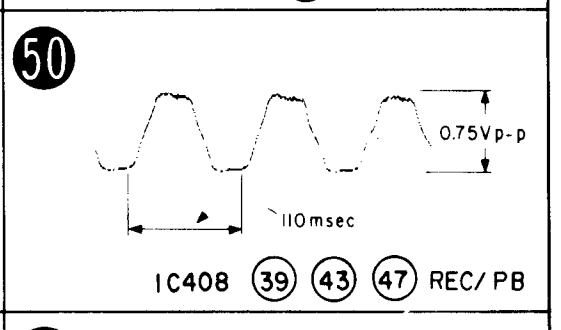

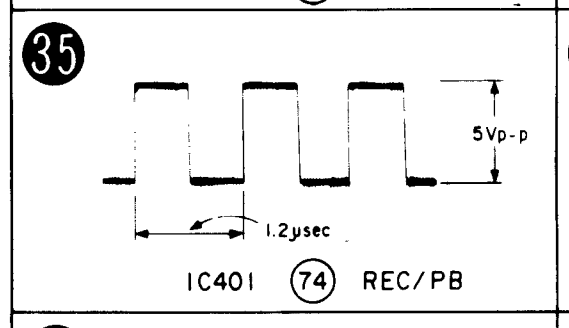

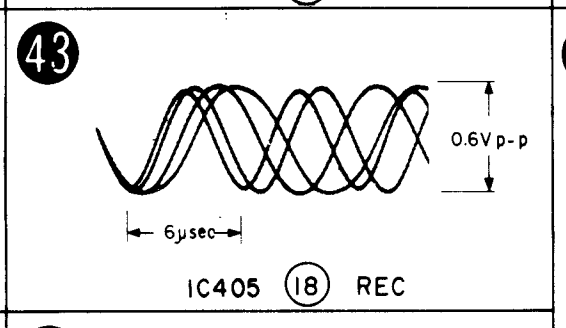

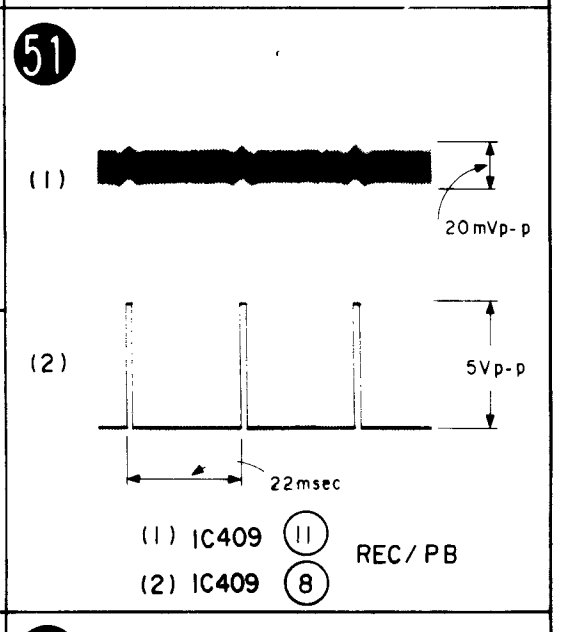

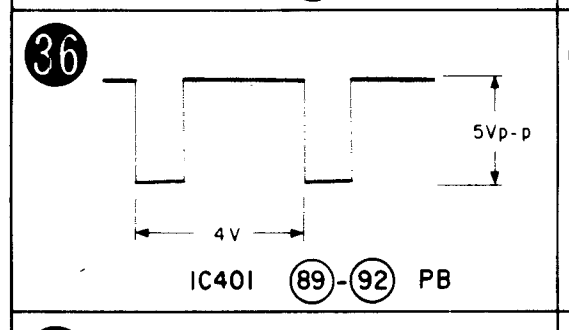

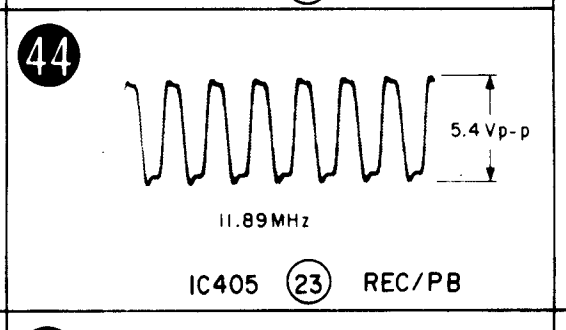

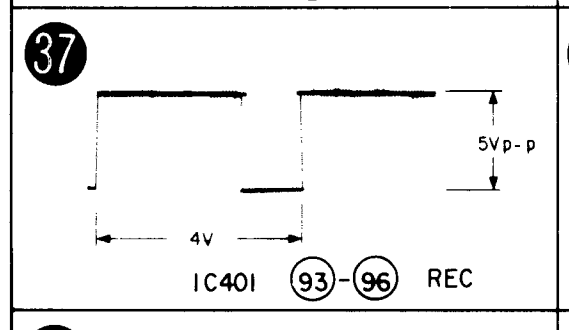

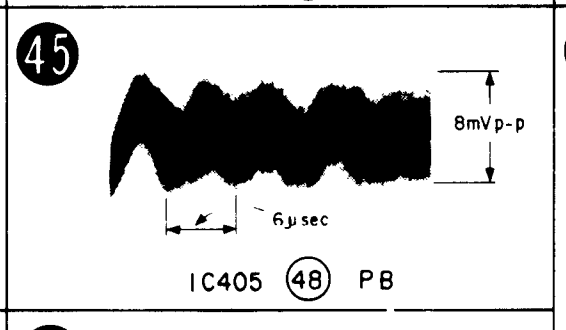

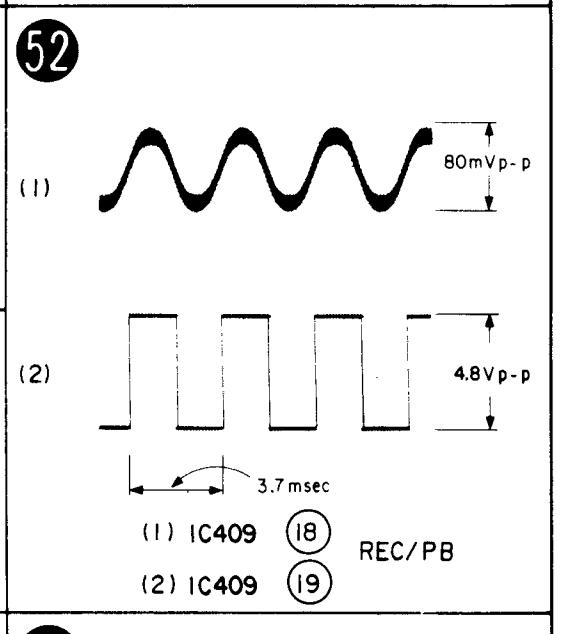

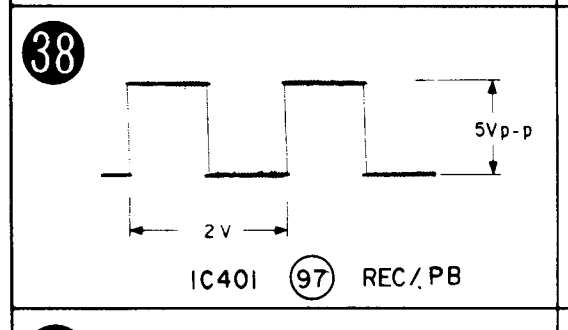

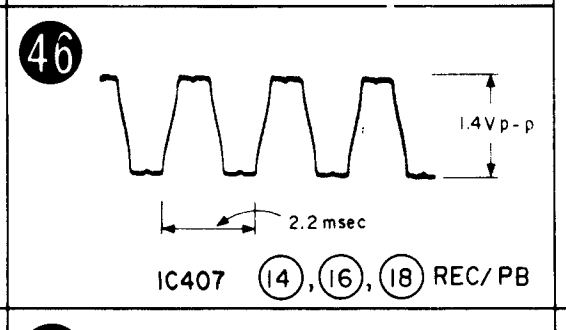

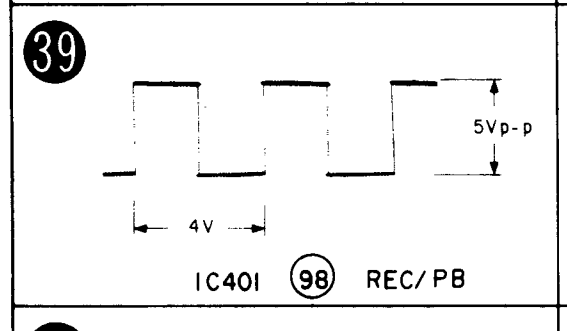

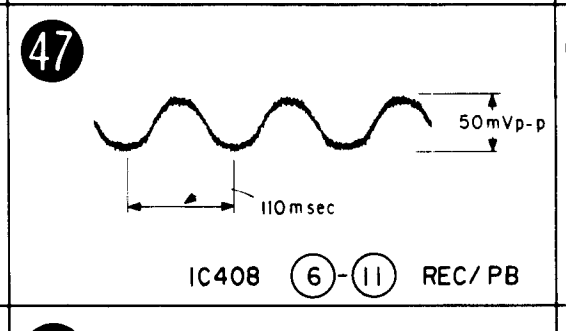

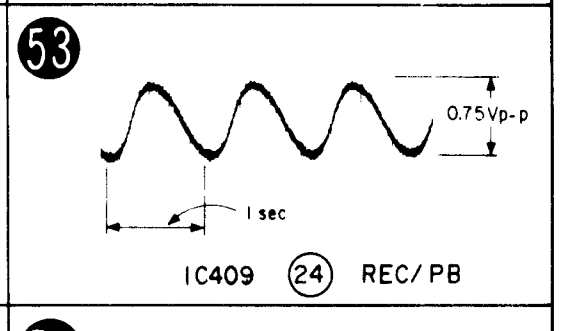

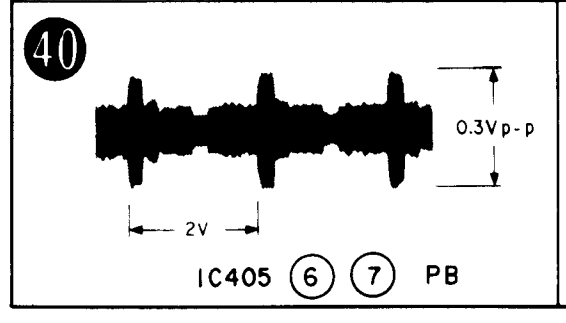

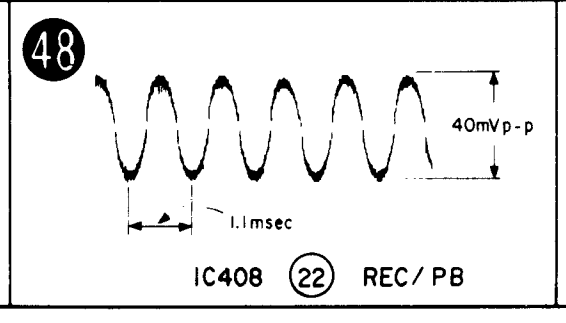

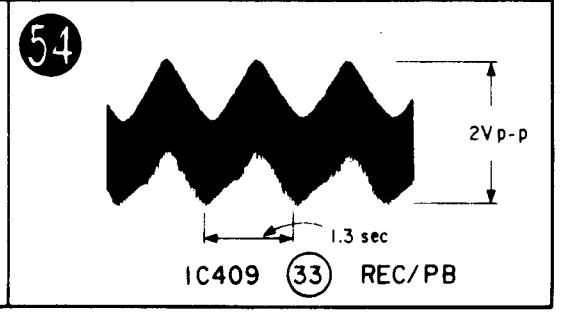

ard.

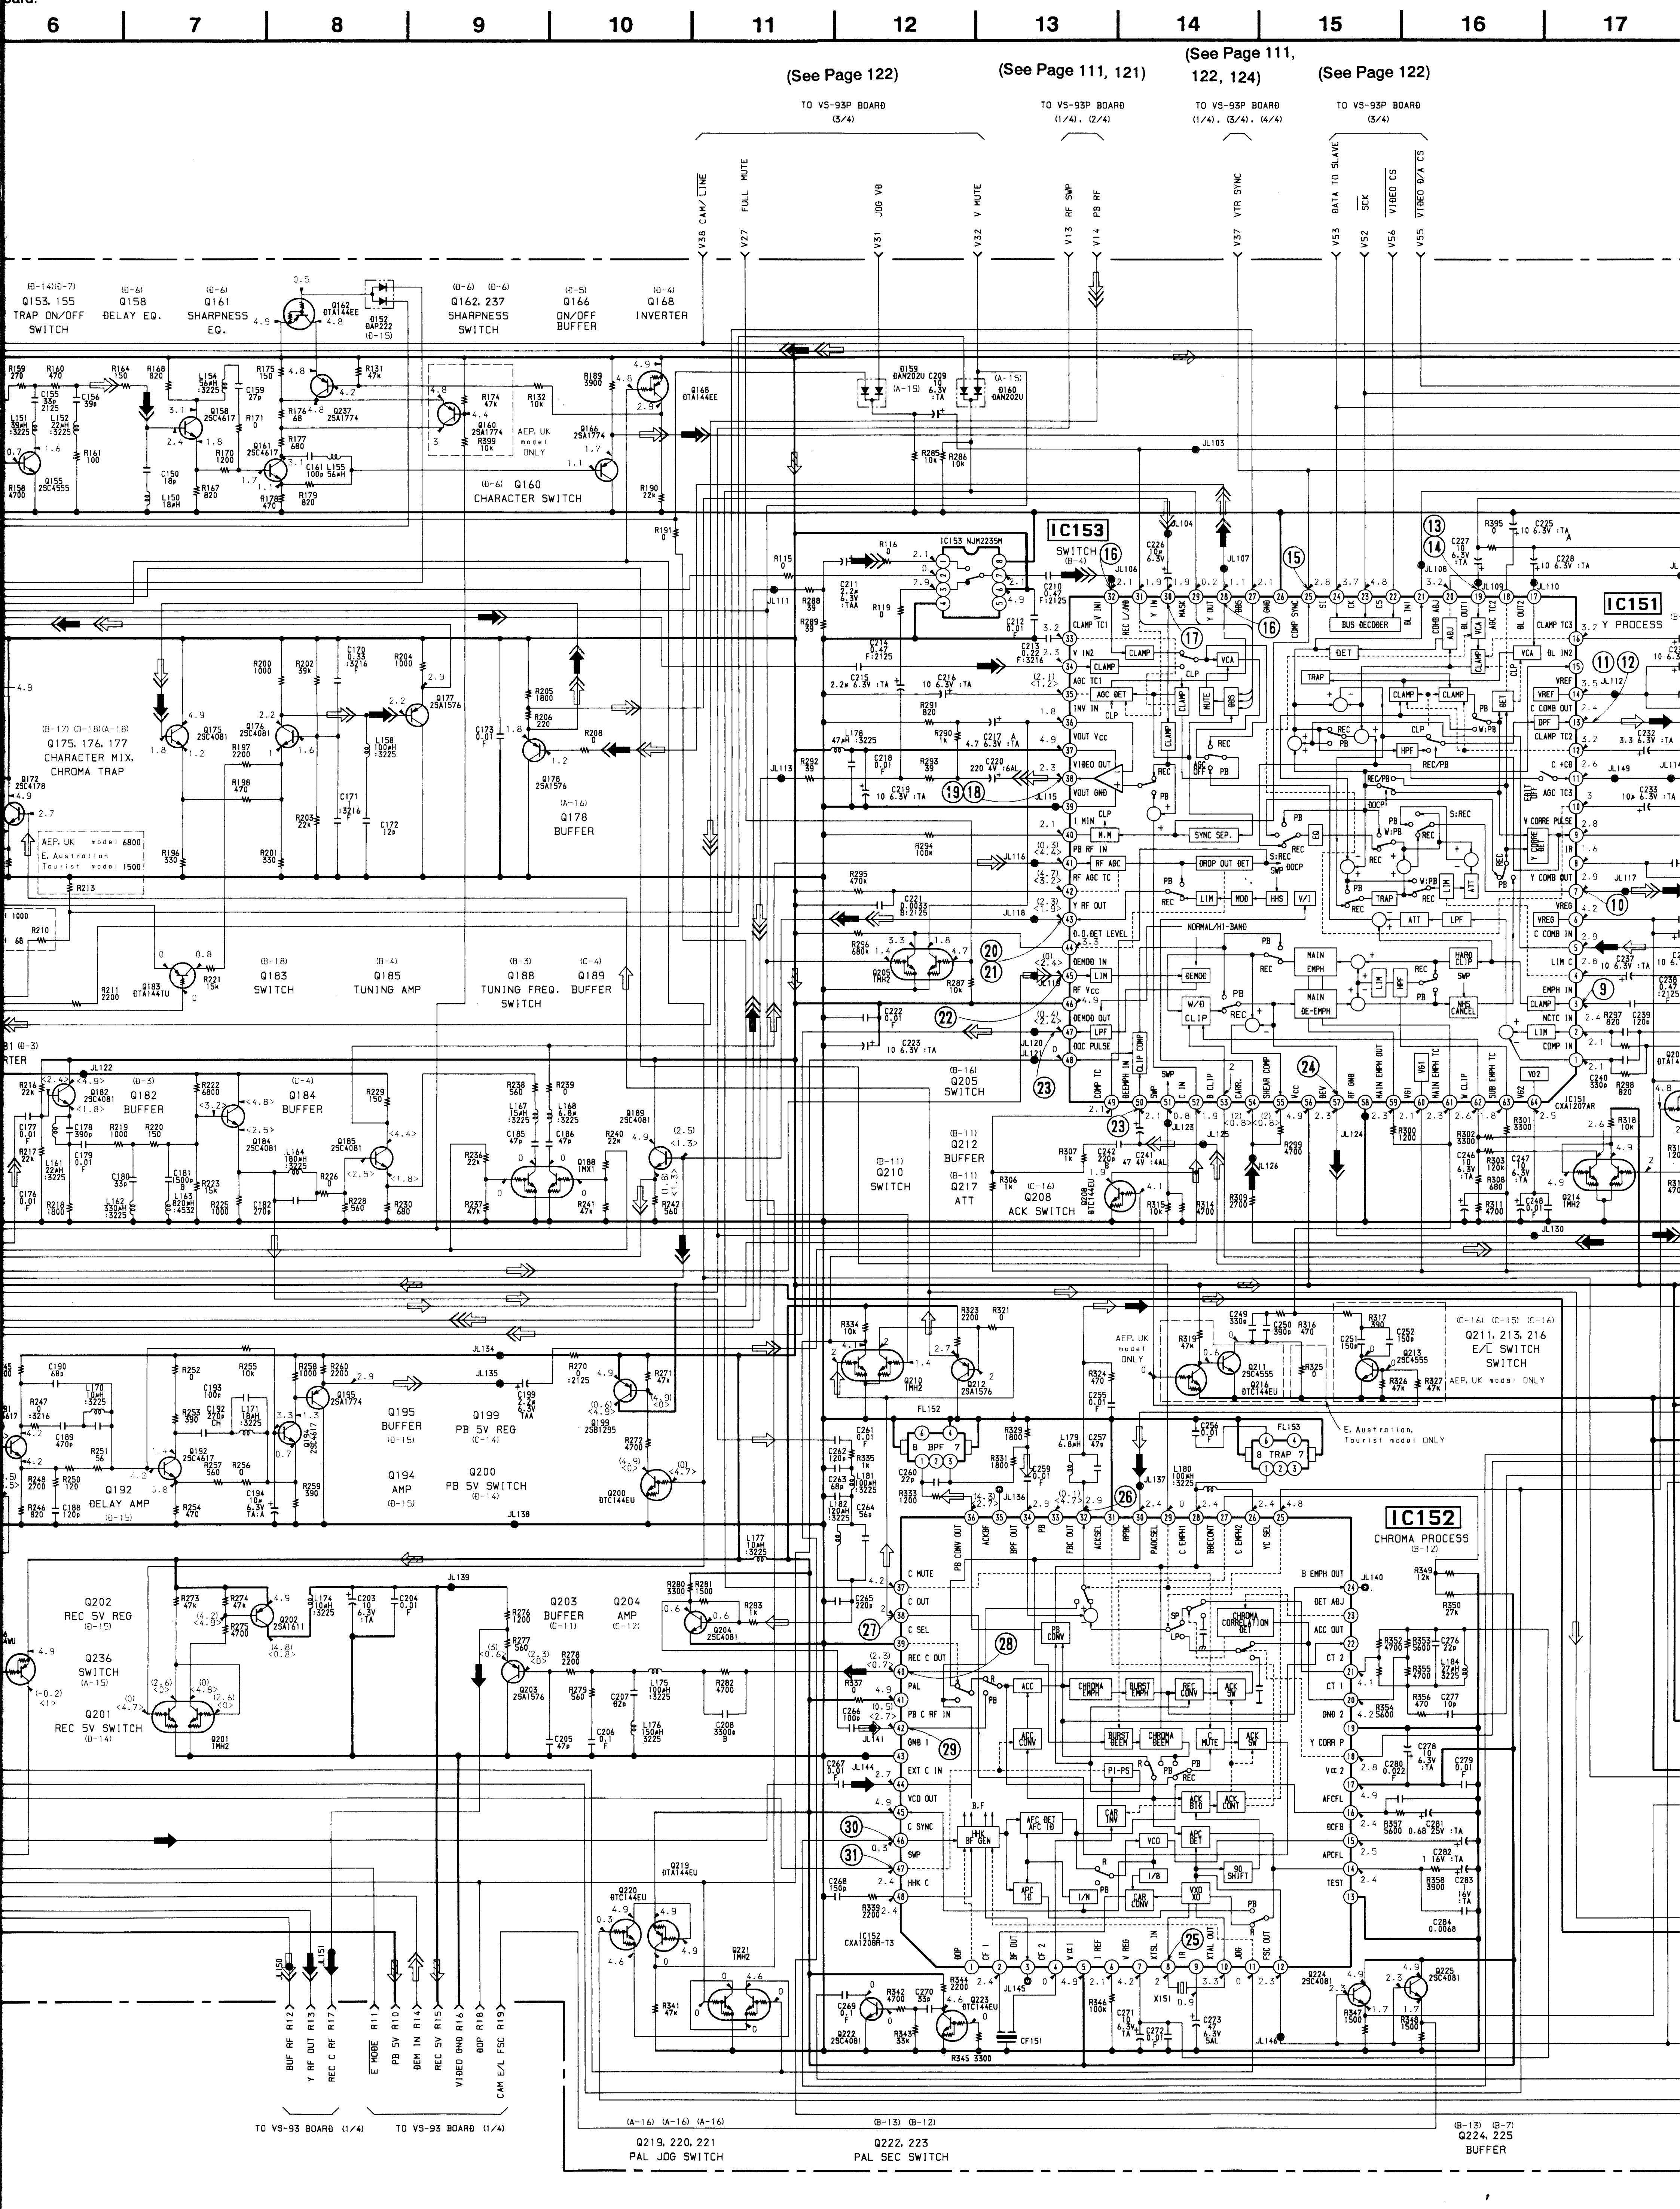
6
7
8
9
10
11
12
13
14
15
16
17
(See Page 122)
TO VS-93P BOARD (3/4)
(See Page 111, 121)
TO VS-93P BOARD (1/4), (2/4)
(See Page 111, 122, 124)
TO VS-93P BOARD (1/4), (3/4), (4/4)
(See Page 122)
TO VS-93P BOARD (3/4)
V38 CAM/LINE
V27 FULL MUTE
V31 JOG VD
V32 V MUTE
V13 RF SWP
V14 PB RF
V37 VTR SYNC
V53 DATA TO SLAVE
V52 SCK
V56 VIDEO CS
V55 VIDEO D/A CS
Q153, 155 TRAP ON/OFF SWITCH
Q158 DELAY EQ.
Q161 SHARPNESS EQ.
Q162, 237 SHARPNESS SWITCH
Q166 ON/OFF BUFFER
Q168 INVERTER
Q160 CHARACTER SWITCH
AEP, UK model ONLY
Q175, 176, 177 CHARACTER MIX, CHROMA TRAP
Q178 BUFFER
AEP, UK model 6800
E, Australian Tourist model 1500
Q183 SWITCH
Q185 TUNING AMP
Q188 TUNING FREQ. SWITCH
Q189 BUFFER
Q182 BUFFER
Q184 BUFFER
IC153
SWITCH
IC153 NJM2235M
IC151
Y PROCESS
IC151 CXA1207AR
Q205 SWITCH
Q210 SWITCH
Q212 BUFFER
Q217 ATT
Q208 ACK SWITCH
Q211, 213, 216 E/L SWITCH
AEP, UK model ONLY
E, Australian, Tourist model ONLY
Q195 BUFFER
Q199 PB 5V REG
Q194 AMP
Q200 PB 5V SWITCH
Q192 DELAY AMP
Q202 REC 5V REG
Q236 SWITCH
Q201 REC 5V SWITCH
Q203 BUFFER
Q204 AMP
IC152
CHROMA PROCESS
IC152 CXA1208R-T3
FL152 BPF
FL153 TRAP
BUF RF R12
Y RF OUT R13
REC C RF R17
E MODE R11
PB 5V R10
DEM IN R14
REC 5V R15
VIDEO GND R16
DOP R18
CAM E/L FSC R19
TO VS-93 BOARD (1/4)
TO VS-93 BOARD (1/4)
Q219, 220, 221 PAL JOG SWITCH
Q222, 223 PAL SEC SWITCH
Q224, 225 BUFFER

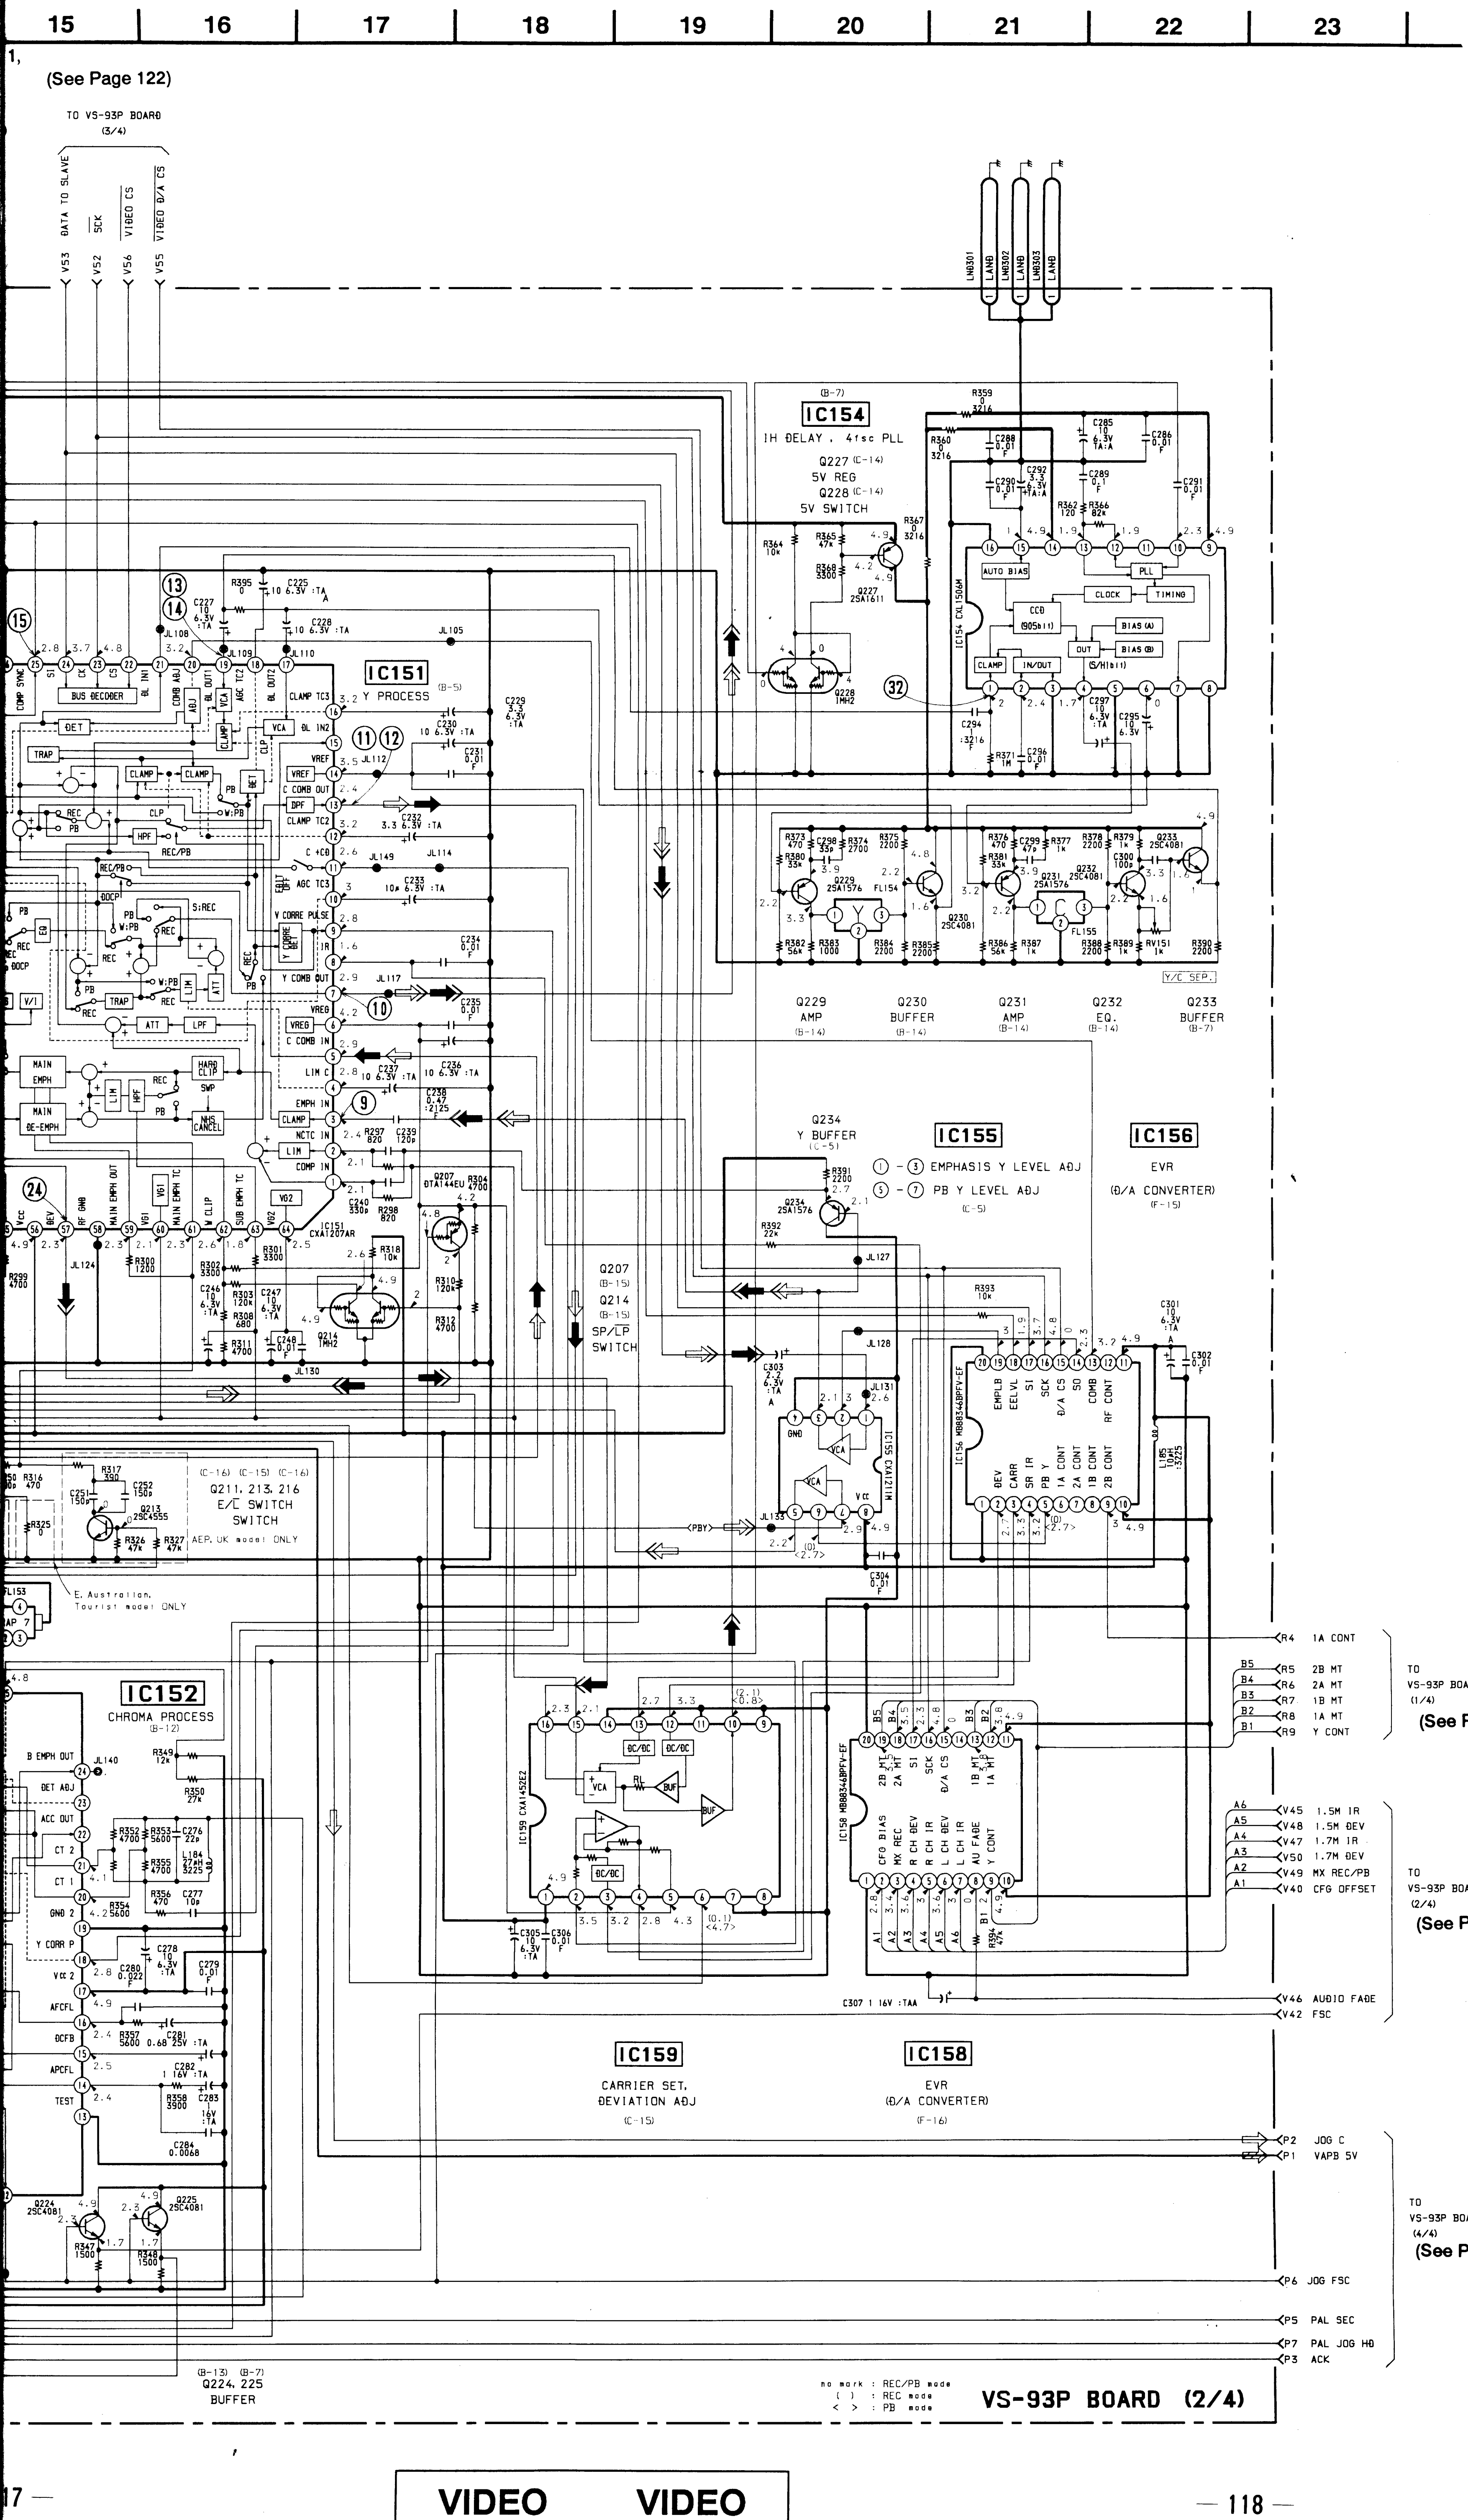
15 16 17 18 19 20 21 22 23
(See Page 122)
TO VS-93P BOARD (3/4)
DATA TO SLAVE
SCK
VIDEO CS
VIDEO D/A CS
VS53 VS52 VS56 VS55
LND301 LAND LND302 LAND LND303 LAND
IC154
IH DELAY, 4fsc PLL
Q227 5V REG
Q228 5V SWITCH
IC154 CXL1506M
AUTO BIAS
PLL
CLOCK
TIMING
CCD (905bit)
BIAS (A)
BIAS (B)
CLAMP
IN/OUT
OUT
(S/H)(bit)
IC151
Y PROCESS
IC151 CXA1207AR
BUS DECODER
COMP SYNC
TRAP
CLAMP
HPF
REC/PB
VREF
C COMB OUT
BPF
CLAMP TC2
AGC TC3
Y CORRE PULSE
Y COMB OUT
VREG
C COMB IN
LIM C
EMPH IN
NCTC IN
COMP IN
MAIN EMPH
MAIN DE-EMPH
HARD CLIP
SWP
NMS CANCEL
LIM
ATT
LPF
Q229 AMP
Q230 BUFFER
Q231 AMP
Q232 EQ.
Q233 BUFFER
Y/C SEP.
FL154
FL155
Q234 Y BUFFER
IC155
① - ③ EMPHASIS Y LEVEL ADJ
⑤ - ⑦ PB Y LEVEL ADJ
IC155 CXA1211M
VCA
Q207 Q214 SP/LP SWITCH
IC156
EVR (D/A CONVERTER)
IC156 MB88346BPFV-EF
Q211, 213, 216 E/C SWITCH SWITCH
AEP, UK model ONLY
E. Australian, Tourist model ONLY
IC152
CHROMA PROCESS
B EMPH OUT
DET ADJ
ACC OUT
CT 2
CT 1
GND 2
Y CORR P
Vcc 2
AFCFL
DCFB
APCFL
TEST
Q224, 225 BUFFER
IC159 CXA1452E2
DC/DC
BUF
IC159
CARRIER SET. DEVIATION ADJ
IC158 MB88346BPFV-EF
IC158
EVR (D/A CONVERTER)
R4 1A CONT
R5 2B MT
R6 2A MT
R7 1B MT
R8 1A MT
R9 Y CONT
TO VS-93P BOARD (1/4)
(See Page 111)
V45 1.5M IR
V48 1.5M DEV
V47 1.7M IR
V50 1.7M DEV
V49 MX REC/PB
V40 CFG OFFSET
TO VS-93P BOARD (2/4)
(See Page 122)
V46 AUDIO FADE
V42 FSC
P2 JOG C
P1 VAPB 5V
TO VS-93P BOARD (4/4)
(See Page 123)
P6 JOG FSC
P5 PAL SEC
P7 PAL JOG HD
P3 ACK
no mark : REC/PB mode
( ) : REC mode
< > : PB mode
VS-93P BOARD (2/4)

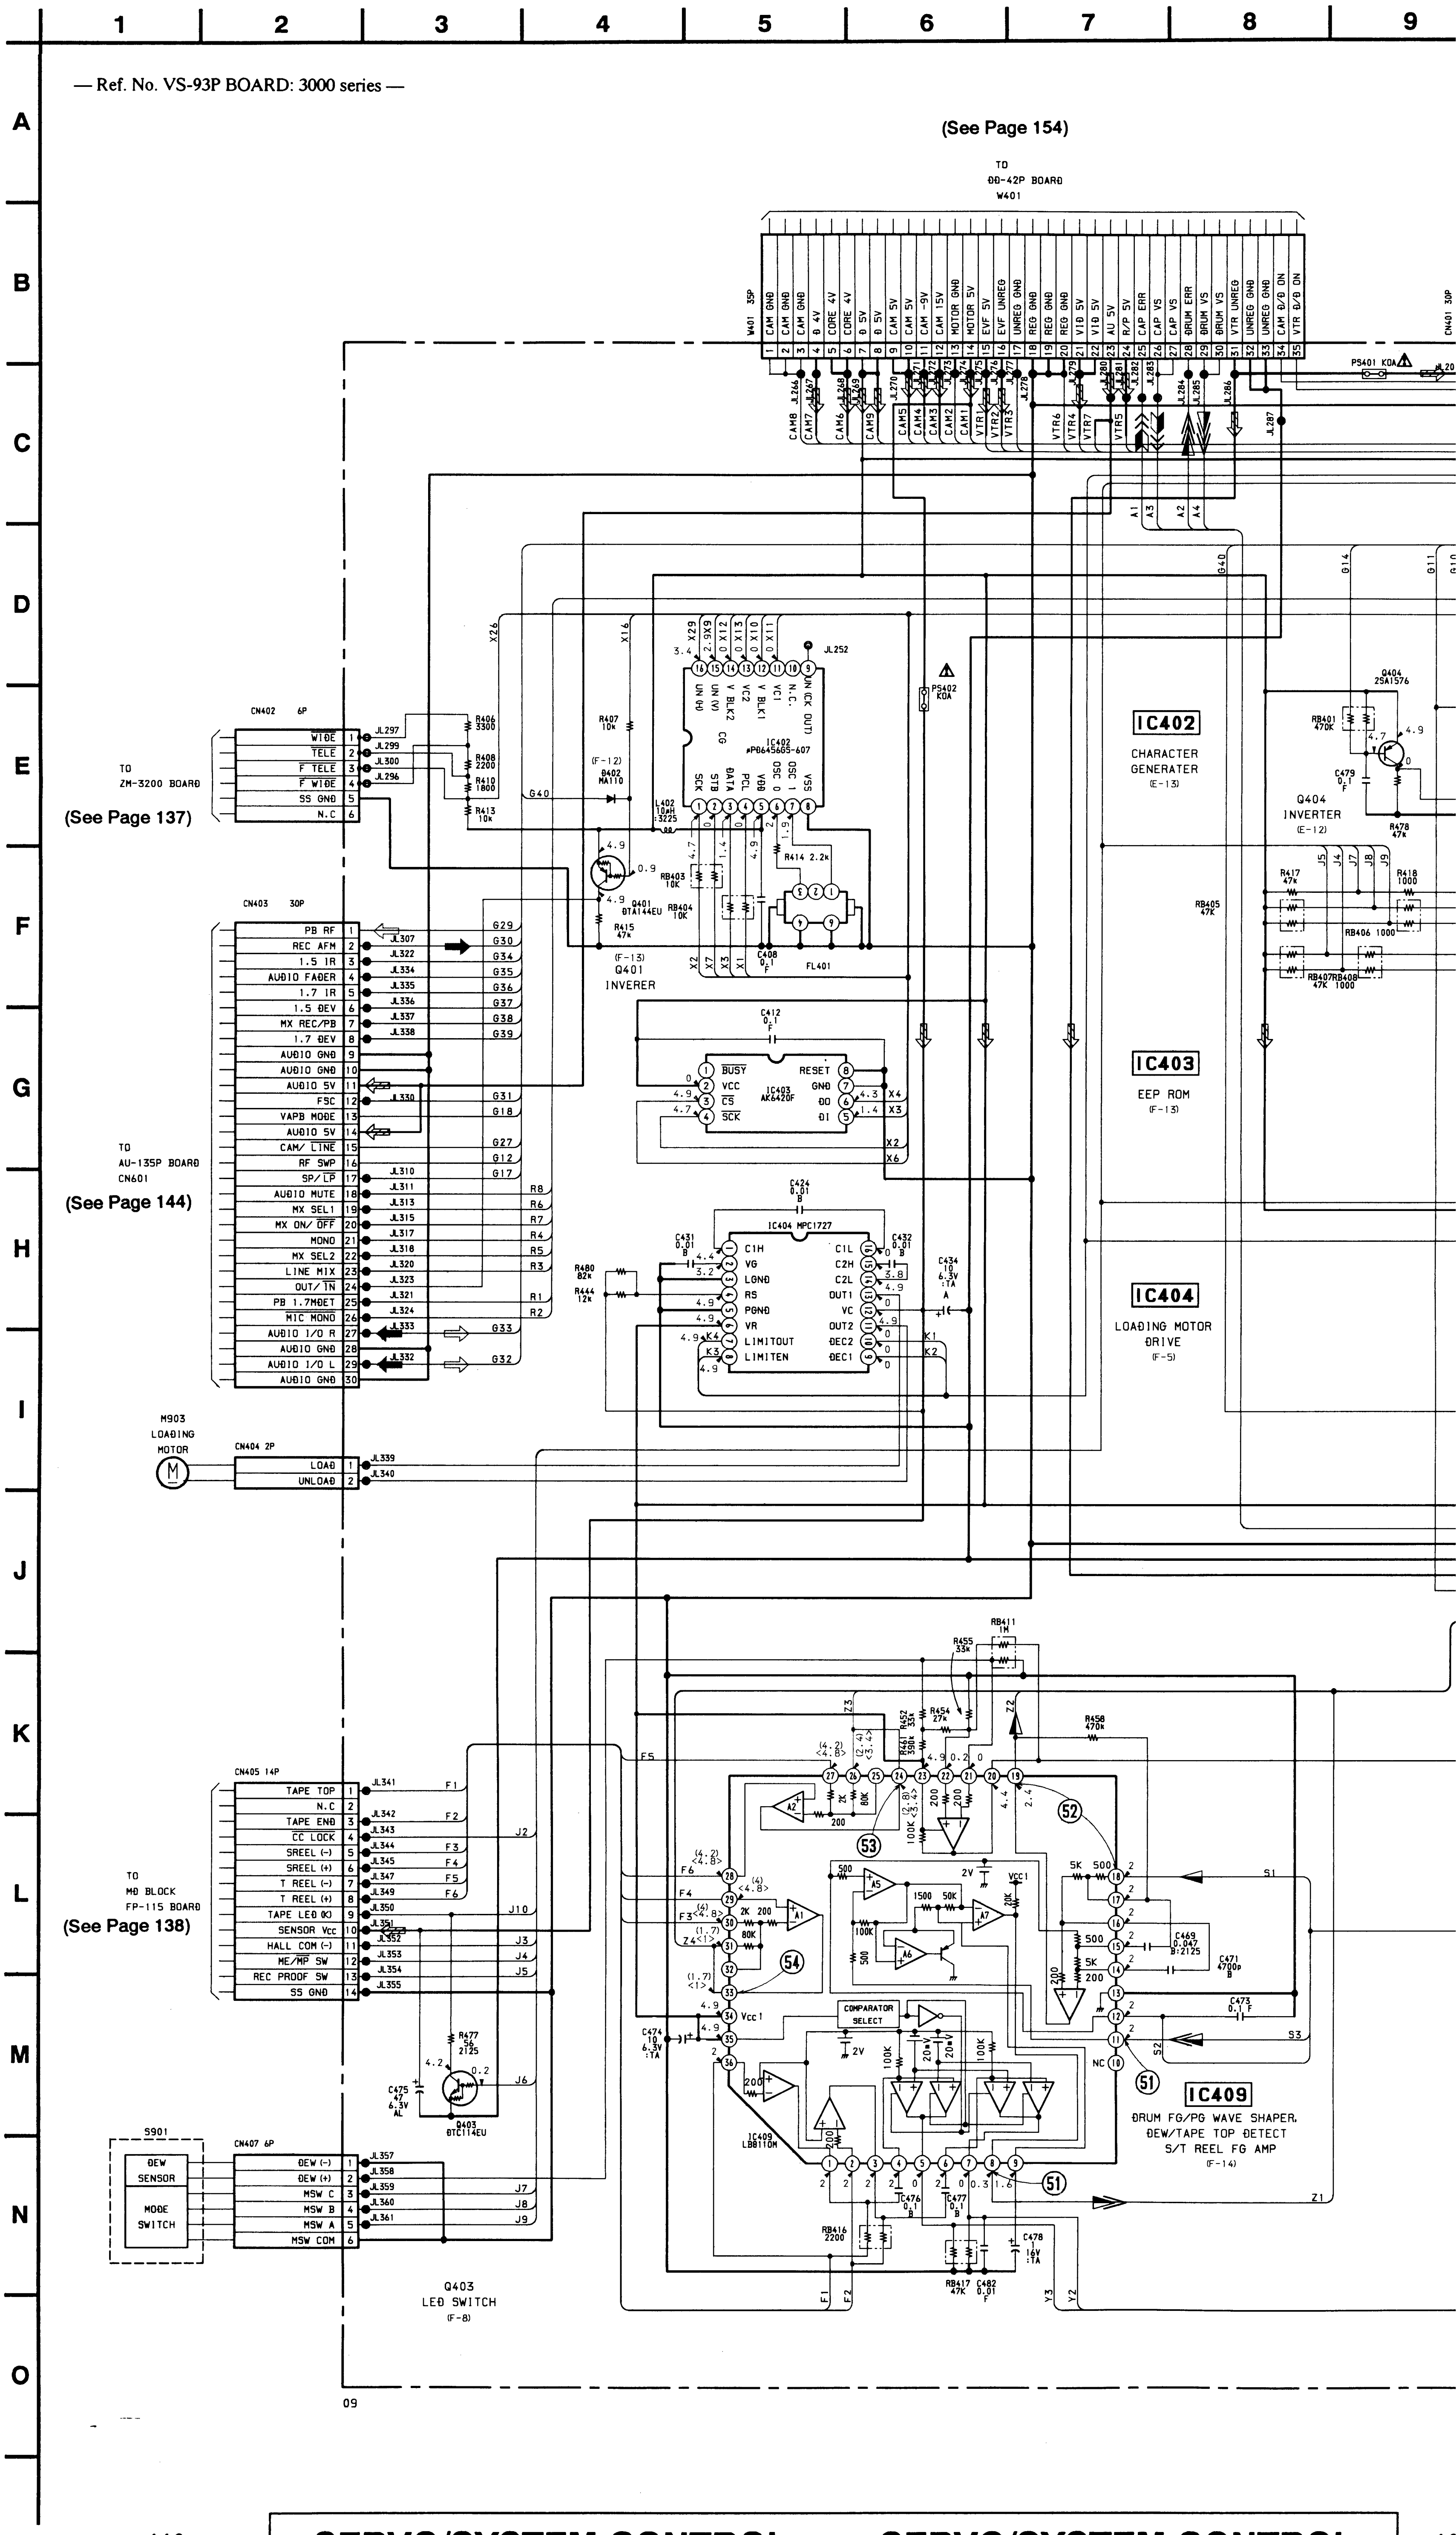
1
2
3
4
5
6
7
8
9
A
B
C
D
E
F
G
H
I
J
K
L
M
N
O
— Ref. No. VS-93P BOARD: 3000 series —
(See Page 154)
TO DD-42P BOARD W401
W401 35P
CAM GND
CORE 4V
D 4V
D 5V
CAM 5V
CAM -9V
CAM 15V
MOTOR GND
MOTOR 5V
EVF 5V
EVF UNREG
UNREG GND
REG GND
V10 5V
AU 5V
R/P 5V
CAP ERR
CAP VS
DRUM ERR
DRUM VS
VTR UNREG
CAM D/D ON
VTR D/D ON
CN401 35P
PS401 KOA
PS402 KOA
CN402 6P
WIDE
TELE
F TELE
F WIDE
SS GND
N.C
TO ZM-3200 BOARD
(See Page 137)
CN403 30P
PB RF
REC AFM
1.5 IR
AUDIO FADER
1.7 IR
1.5 DEV
MX REC/PB
1.7 DEV
AUDIO GND
AUDIO 5V
FSC
VAPB MODE
CAM/ LINE
RF SWP
SP/ LP
AUDIO MUTE
MX SEL1
MX ON/ OFF
MONO
MX SEL2
LINE MIX
OUT/ IN
PB 1.7MDET
MIC MONO
AUDIO I/O R
AUDIO I/O L
TO AU-135P BOARD CN601
(See Page 144)
M903 LOADING MOTOR
CN404 2P
LOAD
UNLOAD
CN405 14P
TAPE TOP
N.C
TAPE END
CC LOCK
SREEL (-)
SREEL (+)
T REEL (-)
T REEL (+)
TAPE LED (K)
SENSOR Vcc
HALL COM (-)
ME/MP SW
REC PROOF SW
SS GND
TO MD BLOCK FP-115 BOARD
(See Page 138)
S901
DEW SENSOR
MODE SWITCH
CN407 6P
DEW (-)
DEW (+)
MSW C
MSW B
MSW A
MSW COM
IC402 μPD6456G5-607
IC402 CHARACTER GENERATER (E-13)
Q401 DTA144EU
(F-13) Q401 INVERER
D402 MA110
L402 10μH
FL401
IC403 AK6420F
BUSY
VCC
CS
SCK
RESET
GND
DO
DI
IC403 EEP ROM (F-13)
IC404 MPC1727
C1H
VG
LGND
RS
PGND
VR
LIMITOUT
LIMITEN
C1L
C2H
C2L
OUT1
VC
OUT2
DEC2
DEC1
IC404 LOADING MOTOR DRIVE (F-5)
Q404 2SA1576
Q404 INVERTER (E-12)
Q403 DTC114EU
Q403 LED SWITCH (F-8)
IC409 LB8110M
COMPARATOR SELECT
IC409 DRUM FG/PG WAVE SHAPER, DEW/TAPE TOP DETECT S/T REEL FG AMP (F-14)
(51)
(52)
(53)
(54)
09

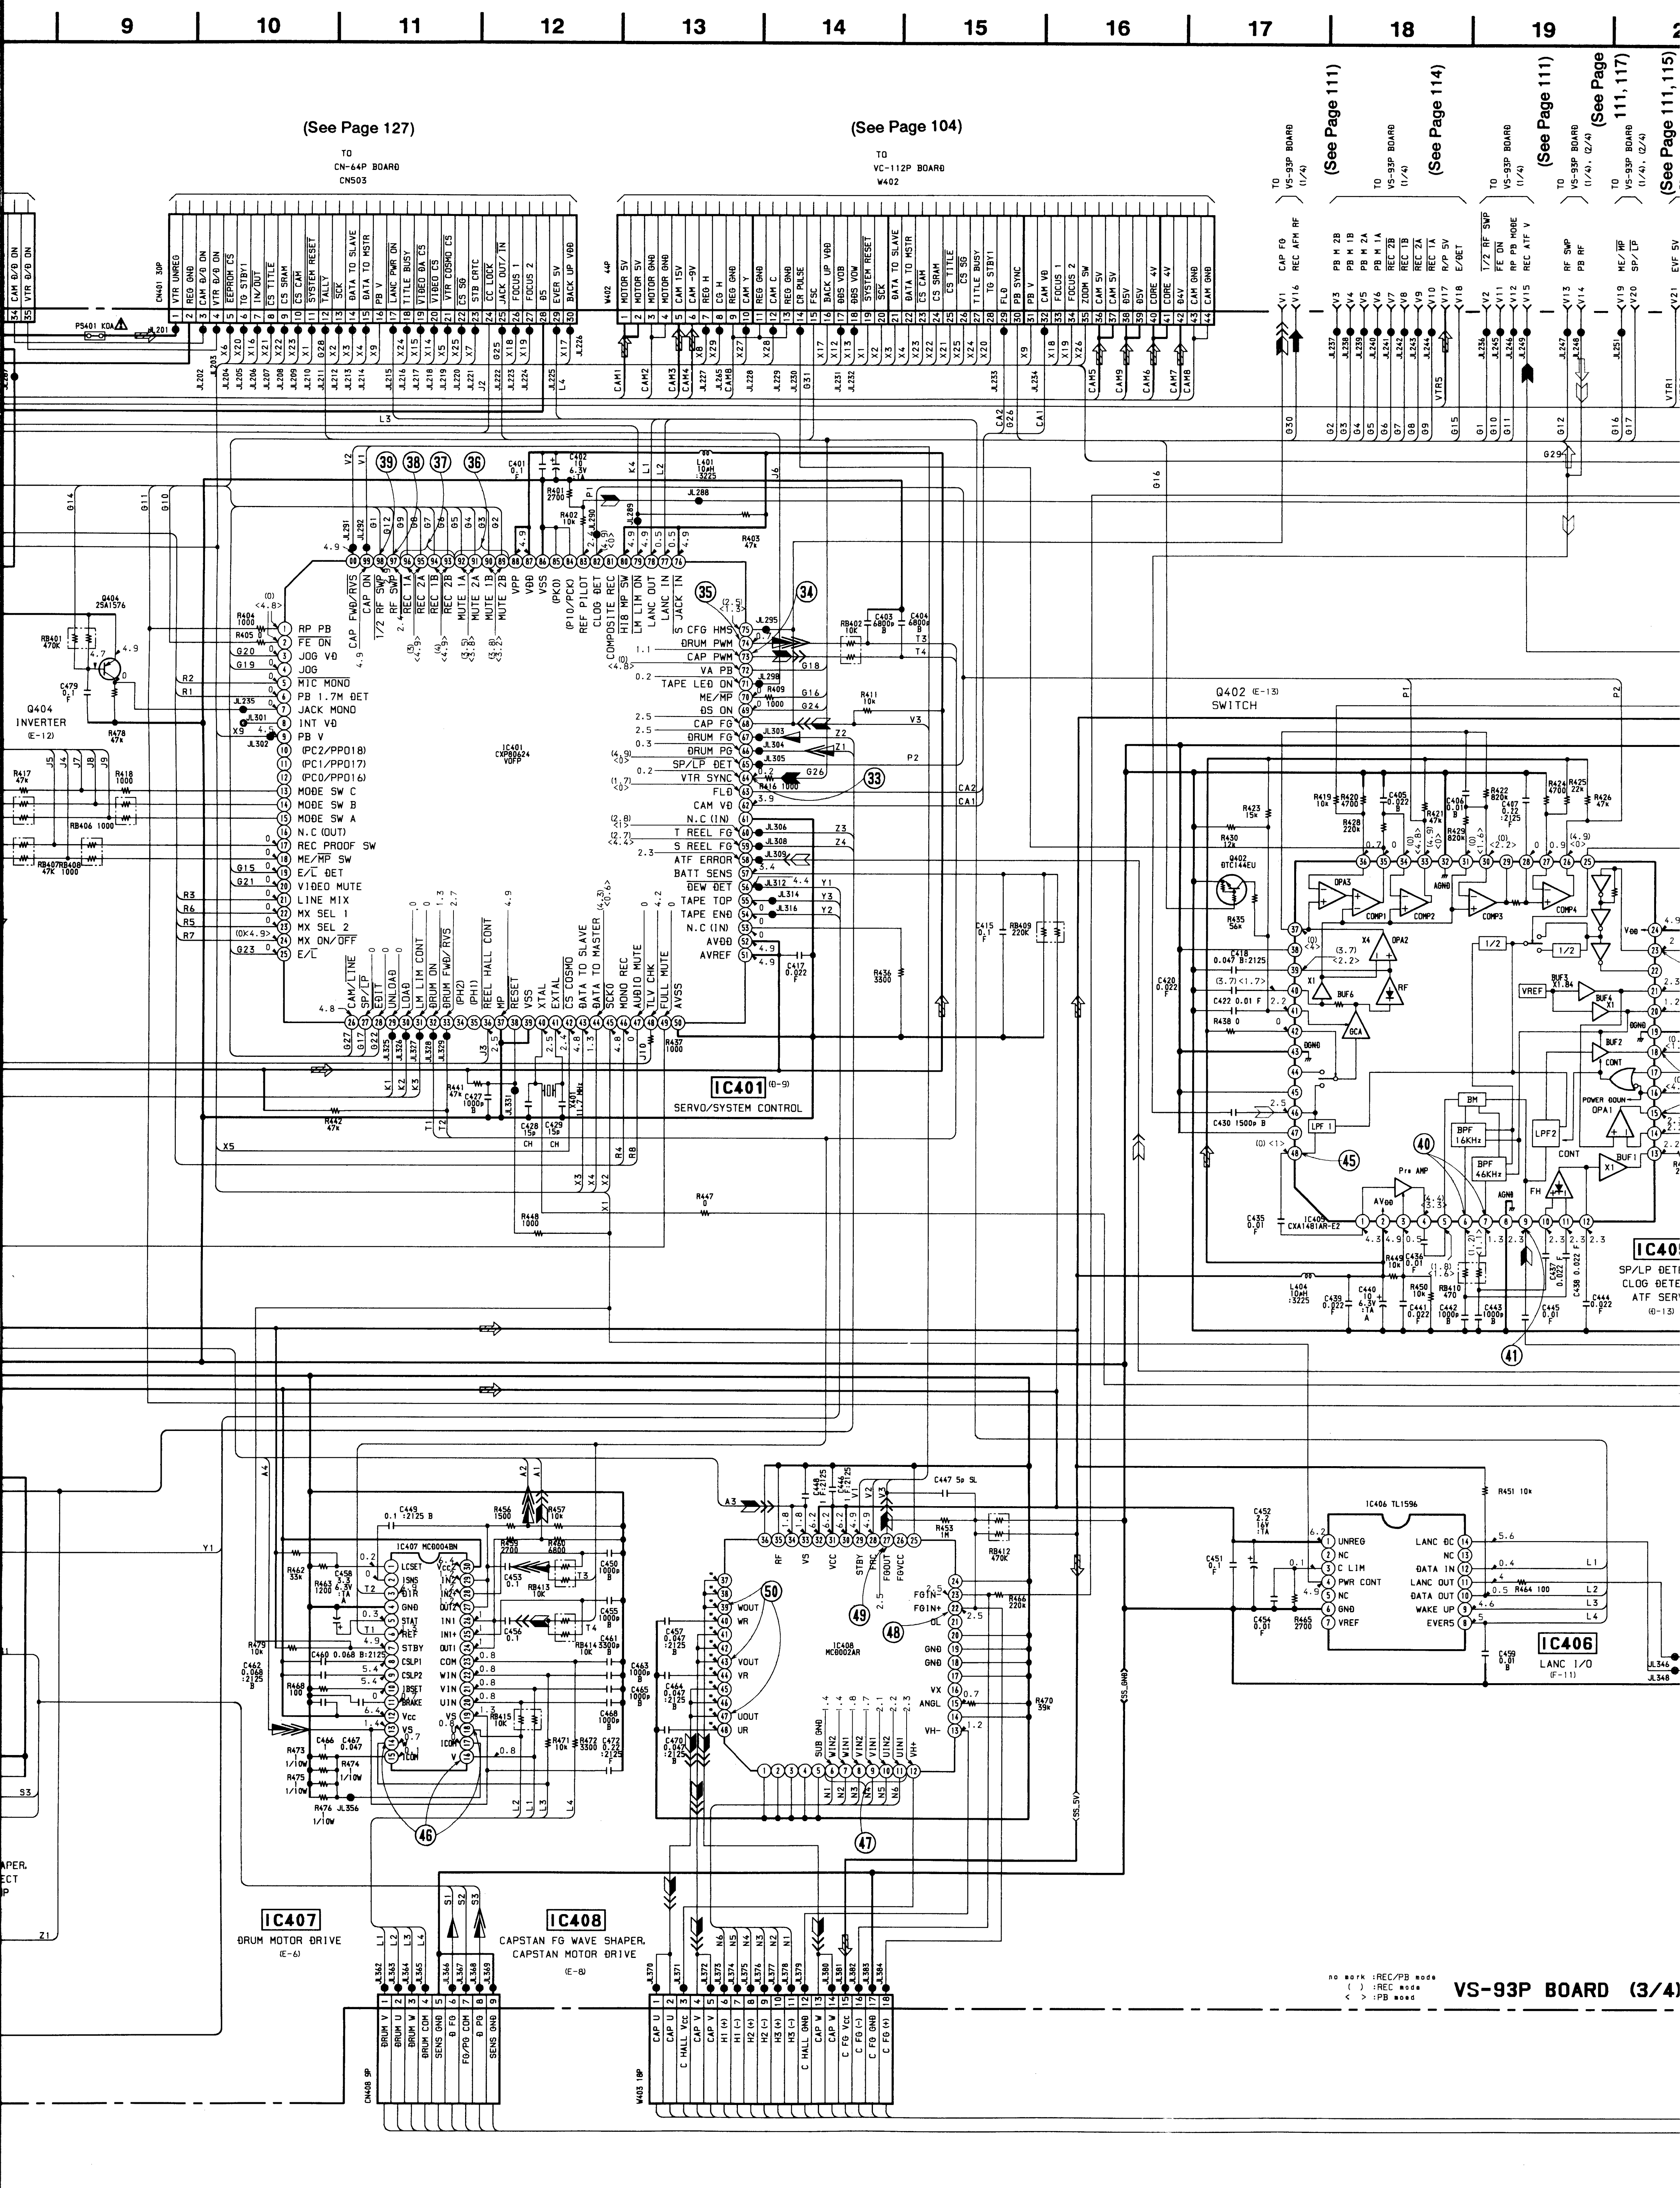
9
10
11
12
13
14
15
16
17
18
19
(See Page 127)
TO CN-64P BOARD CN503
(See Page 104)
TO VC-112P BOARD W402
TO VS-93P BOARD (1/4)
(See Page 111)
(See Page 114)
(See Page 111, 117)
(See Page 111, 115)
CN401 30P
W402 44P
Q404 INVERTER
Q402 SWITCH
IC401 SERVO/SYSTEM CONTROL
IC401 CXP80624 VDFP
IC405 CXA1481AR-E2
IC405 SP/LP DETECT CLOG DETECT ATF SERVO
IC406 TL1596
IC406 LANC I/O
IC407 MC0004BN
IC407 DRUM MOTOR DRIVE
IC408 MC0002AR
IC408 CAPSTAN FG WAVE SHAPER, CAPSTAN MOTOR DRIVE
CN408 9P
W403 18P
DRUM V
DRUM U
DRUM W
DRUM COM
SENS GND
D PG
FG/PG COM
D FG
SENS GND
CAP U
CAP U
C HALL Vcc
CAP V
CAP V
H1 (+)
H1 (-)
H2 (-)
H2 (+)
H3 (-)
H3 (+)
C HALL GND
CAP W
CAP W
C FG Vcc
C FG (-)
C FG GND
C FG (+)
no mark :REC/PB mode
( ) :REC mode
< > :PB mode
VS-93P BOARD (3/4)

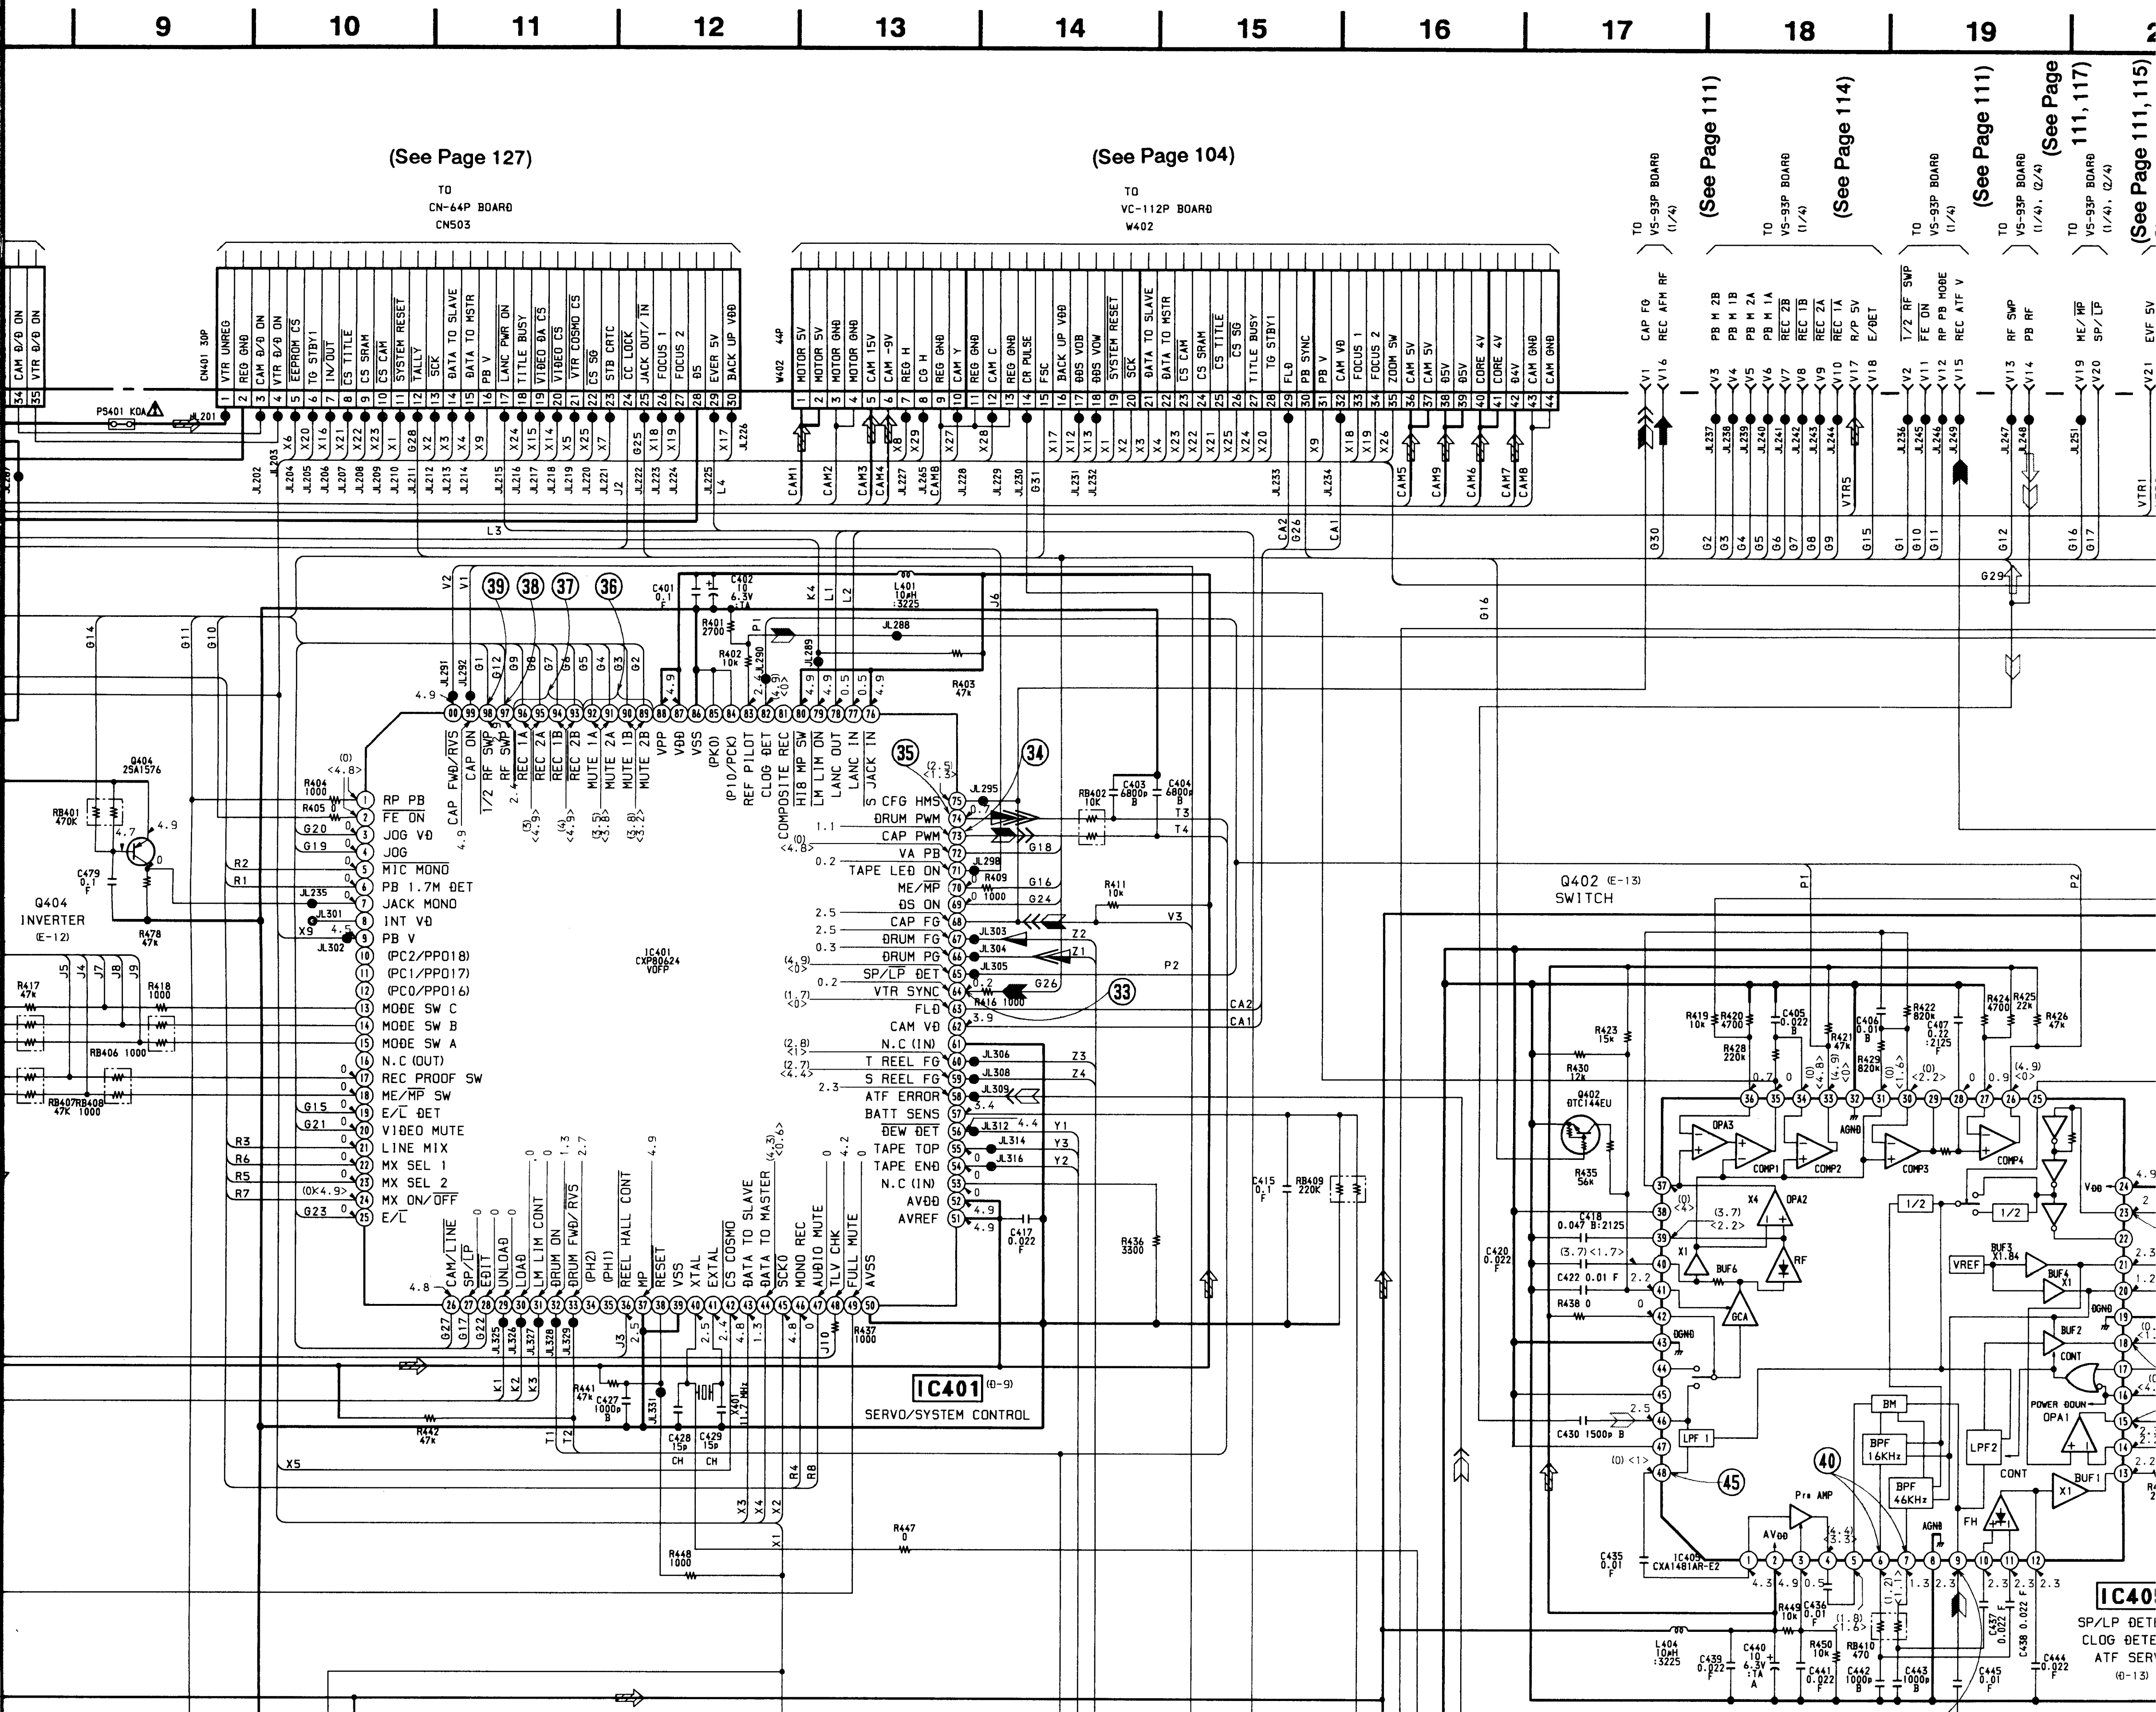
9
10
11
12
13
14
15
16
17
18
19
(See Page 127)
TO CN-64P BOARD CN503
(See Page 104)
TO VC-112P BOARD W402
TO VS-93P BOARD (1/4)
(See Page 111)
(See Page 114)
(See Page 111)
(See Page 111, 117)
(See Page 111,115)
CN401 35P
VTR UNREG
REG GND
CAM D/D ON
VTR D/D ON
EEPROM CS
TG STBY1
IN/OUT
CS TITLE
CS SRAM
CS CAM
SYSTEM RESET
TALLY
SCK
DATA TO SLAVE
DATA TO MSTR
PB V
LANC PWR ON
TITLE BUSY
VIDEO CS
VTR COSMO CS
CS SG
STB CRTC
CC LOCK
JACK OUT/IN
FOCUS 1
FOCUS 2
DS
EVER 5V
BACK UP VDD
W402 44P
MOTOR 5V
MOTOR GND
CAM 15V
CAM -9V
REG H
CG H
CAM Y
CAM C
CR PULSE
FSC
BACK UP VDD
DDS VDD
CS SRAM
CS SG
FLD
PB SYNC
CAM VD
ZOOM SW
D5V
CORE 4V
D4V
CAM GND
CAP FG
REC AFM RF
PB M 2B
PB M 1B
PB M 2A
PB M 1A
REC 2B
REC 1B
REC 2A
REC 1A
R/P 5V
E/DET
1/2 RF SWP
FE ON
RP PB MODE
REC ATF V
RF SWP
PB RF
ME/MP
SP/LP
EVF 5V
P5401 KOA
Q404 2SA1576
Q404 INVERTER (E-12)
IC401 CXP80624 VOFP
IC401 (D-9)
SERVO/SYSTEM CONTROL
RP PB
FE ON
JOG VD
JOG
MIC MONO
PB 1.7M DET
JACK MONO
INT VD
PB V
MODE SW C
MODE SW B
MODE SW A
N.C (OUT)
REC PROOF SW
ME/MP SW
E/L DET
VIDEO MUTE
LINE MIX
MX SEL 1
MX SEL 2
MX ON/OFF
E/L
S CFG HMS
DRUM PWM
CAP PWM
VA PB
TAPE LED ON
ME/MP
DS ON
CAP FG
DRUM FG
DRUM PG
SP/LP DET
VTR SYNC
FLD
CAM VD
N.C (IN)
T REEL FG
S REEL FG
ATF ERROR
BATT SENS
DEW DET
TAPE TOP
TAPE END
AVDD
AVREF
CAM/LINE
SP/LP
EDIT
UNLOAD
LOAD
LM LIM CONT
DRUM ON
DRUM FWD/RVS
REEL HALL CONT
RESET
XTAL
EXTAL
CS COSMO
DATA TO SLAVE
DATA TO MASTER
SCKO
MONO REC
AUDIO MUTE
TLV CHK
FULL MUTE
AVSS
CAP FWD/RVS
CAP ON
1/2 RF SWP
MUTE 2B
MUTE 1B
MUTE 2A
MUTE 1A
VPP
VDD
VSS
REF PILOT
CLOG DET
COMPOSITE REC
HI8 MP SW
LM LIM ON
LANC OUT
LANC IN
S JACK IN
Q402 (E-13) SWITCH
Q402 DTC144EU
IC405 CXA1481AR-E2
IC405
SP/LP DET
CLOG DET
ATF SER
(D-13)
COMP1
COMP2
COMP3
COMP4
BUF6
GCA
LPF1
LPF2
BPF 16KHz
BPF 46KHz
Pre AMP
AVDD
VREF
IC406 TL1596
UNREG
C LIM
PWR CONT
LANC DC
DATA IN
LANC OUT
DATA OUT
WAKE UP
EVERS
IC406
LANC I/O (F-11)
IC407 MC0004BN
IC407
DRUM MOTOR DRIVE (E-6)
IC408 MC0002AR
IC408
CAPSTAN FG WAVE SHAPER, CAPSTAN MOTOR DRIVE (E-8)
CN408 9P
DRUM V
DRUM U
DRUM W
DRUM COM
SENS GND
D PG
FG/PG COM
D FG
SENS GND
W403 18P
CAP U
CAP V
C HALL Vcc
CAP W
H1 (+)
H1 (-)
H2 (+)
H2 (-)
H3 (+)
H3 (-)
C HALL GND
C FG Vcc
C FG GND
C FG (+)
C FG (-)
(33)
(34)
(35)
(36)
(37)
(38)
(39)
(40)
(41)
(45)
(46)
(47)
(48)
(49)
(50)

no mark :REC/PB mode
( ) :REC mode
< > :PB mode

VS-93P BOARD (3/4)

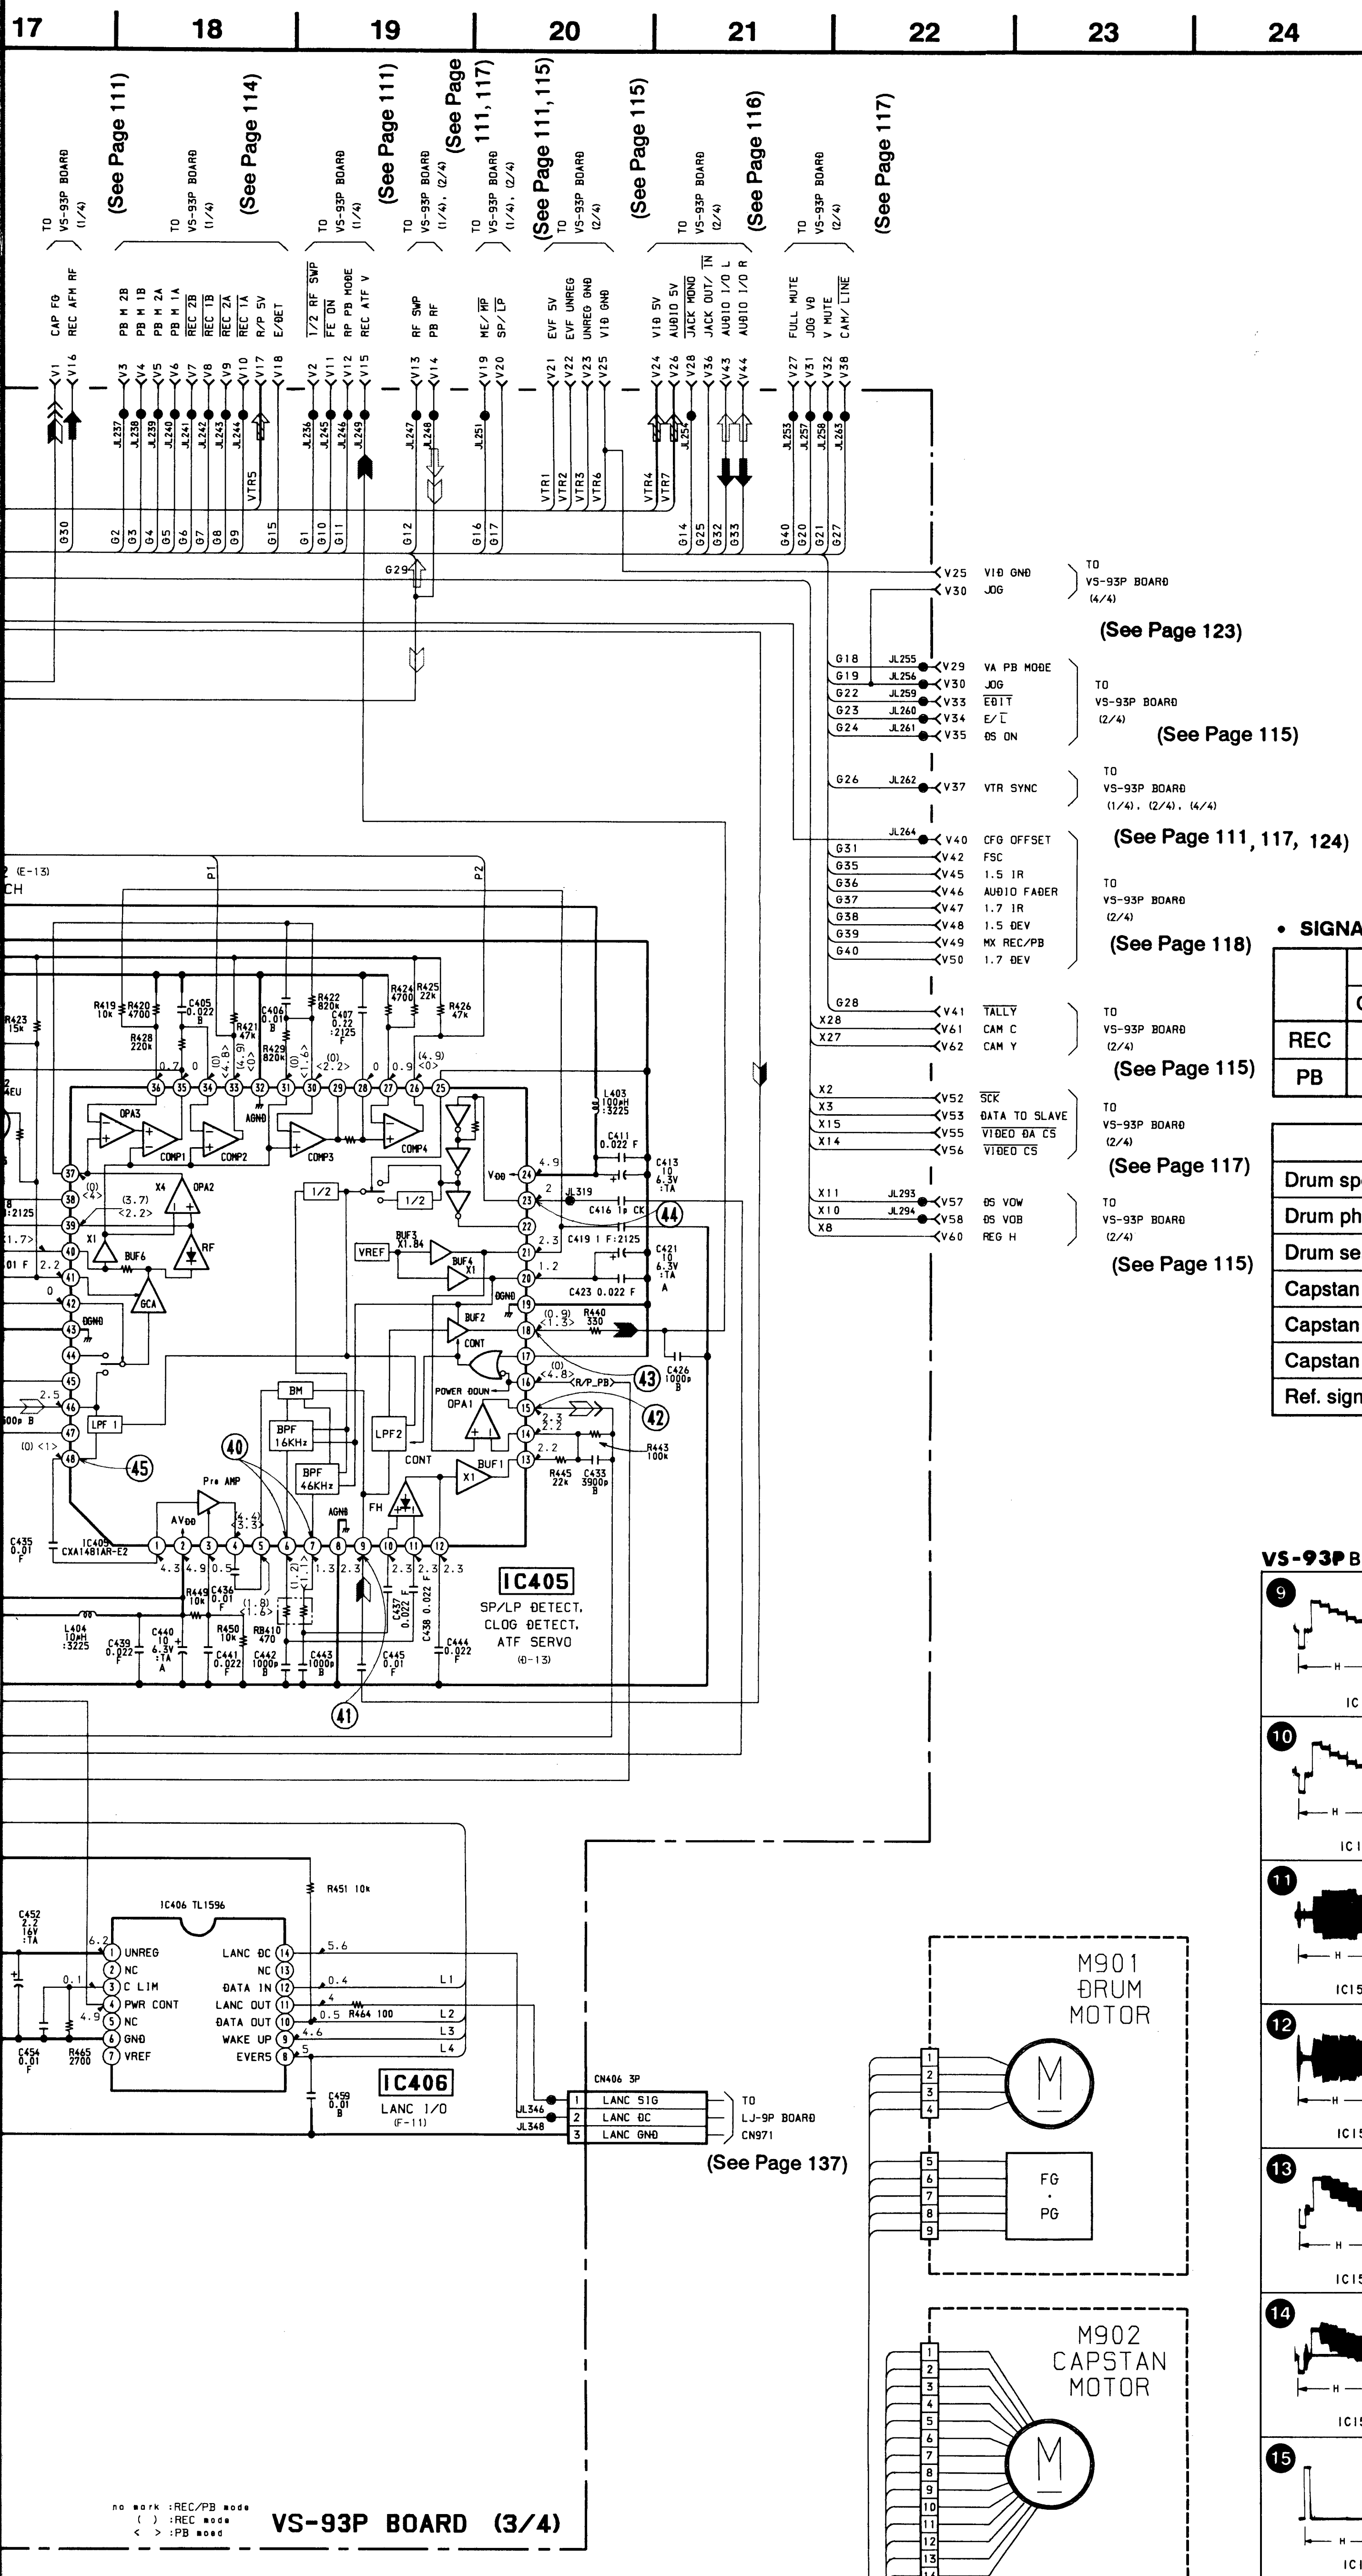
17
18
19
20
21
22
23
24
25
26
27
28
TO VS-93P BOARD (1/4) (See Page 111)
TO VS-93P BOARD (1/4) (See Page 114)
TO VS-93P BOARD (1/4) (See Page 111)
TO VS-93P BOARD (1/4), (2/4) (See Page 111, 117)
TO VS-93P BOARD (1/4), (2/4) (See Page 111, 115)
TO VS-93P BOARD (2/4) (See Page 115)
TO VS-93P BOARD (2/4) (See Page 116)
TO VS-93P BOARD (2/4) (See Page 117)
CAP FG
REC AFM RF
PB M 2B
PB M 1B
PB M 2A
PB M 1A
REC 2B
REC 1B
REC 2A
REC 1A
R/P 5V
E/BET
1/2 RF SWP
FE ON
RP PB MODE
REC ATF V
RF SWP
PB RF
HE/HP
SP/LP
EVF 5V
EVF UNREG
UNREG GND
VIO GND
VIO 5V
AUDIO 5V
JACK MONO
JACK OUT/IN
AUDIO I/O L
AUDIO I/O R
FULL MUTE
JOG VD
V MUTE
CAM/LINE
V25 VIO GND
V30 JOG
TO VS-93P BOARD (4/4)
(See Page 123)
V29 VA PB MODE
V30 JOG
V33 EDIT
V34 E/E
V35 OS ON
TO VS-93P BOARD (2/4)
(See Page 115)
V37 VTR SYNC
TO VS-93P BOARD (1/4), (2/4), (4/4)
(See Page 111, 117, 124)
V40 CFG OFFSET
V42 FSC
V45 1.5 IR
V46 AUDIO FADER
V47 1.7 IR
V48 1.5 DEV
V49 MX REC/PB
V50 1.7 DEV
TO VS-93P BOARD (2/4)
(See Page 118)
V41 TALLY
V61 CAM C
V62 CAM Y
TO VS-93P BOARD (2/4)
(See Page 115)
V52 SCK
V53 DATA TO SLAVE
V55 VIDEO DA CS
V56 VIDEO CS
TO VS-93P BOARD (2/4)
(See Page 117)
V57 OS VOW
V58 OS VOB
V60 REG H
TO VS-93P BOARD (2/4)
(See Page 115)
IC405
SP/LP DETECT, CLOG DETECT, ATF SERVO
(D-13)
IC405 CXA1481AR-E2
OPA1
OPA2
OPA3
COMP1
COMP2
COMP3
COMP4
BUF1
BUF2
BUF3
BUF4
BUF6
GCA
BPF 16KHz
BPF 46KHz
LPF1
LPF2
BM
Pre AMP
POWER DOWN
1/2
VREF
CONT
IC406 TL1596
UNREG
NC
C LIM
PWR CONT
NC
GND
VREF
LANC DC
NC
DATA IN
LANC OUT
DATA OUT
WAKE UP
EVERS
IC406
LANC I/O
(F-11)
CN406 3P
LANC SIG
LANC DC
LANC GND
TO LJ-9P BOARD CN971
(See Page 137)
M901 DRUM MOTOR
FG · PG
M902 CAPSTAN MOTOR
CAP FG
no mark :REC/PB mode
( ) :REC mode
< > :PB mode
VS-93P BOARD (3/4)

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				➡
PB				⇨

	REC	REC/PB	PB
Drum speed servo		▷	
Drum phase servo		▷▷	
Drum servo (speed and phase)		▷▷▷	
Capstan speed servo			
Capstan phase servo	➤»		⊃»
Capstan servo (speed and phase)		⊃»»	
Ref. signal	➤	⊃	⊃

VS-93P BOARD (2/4)

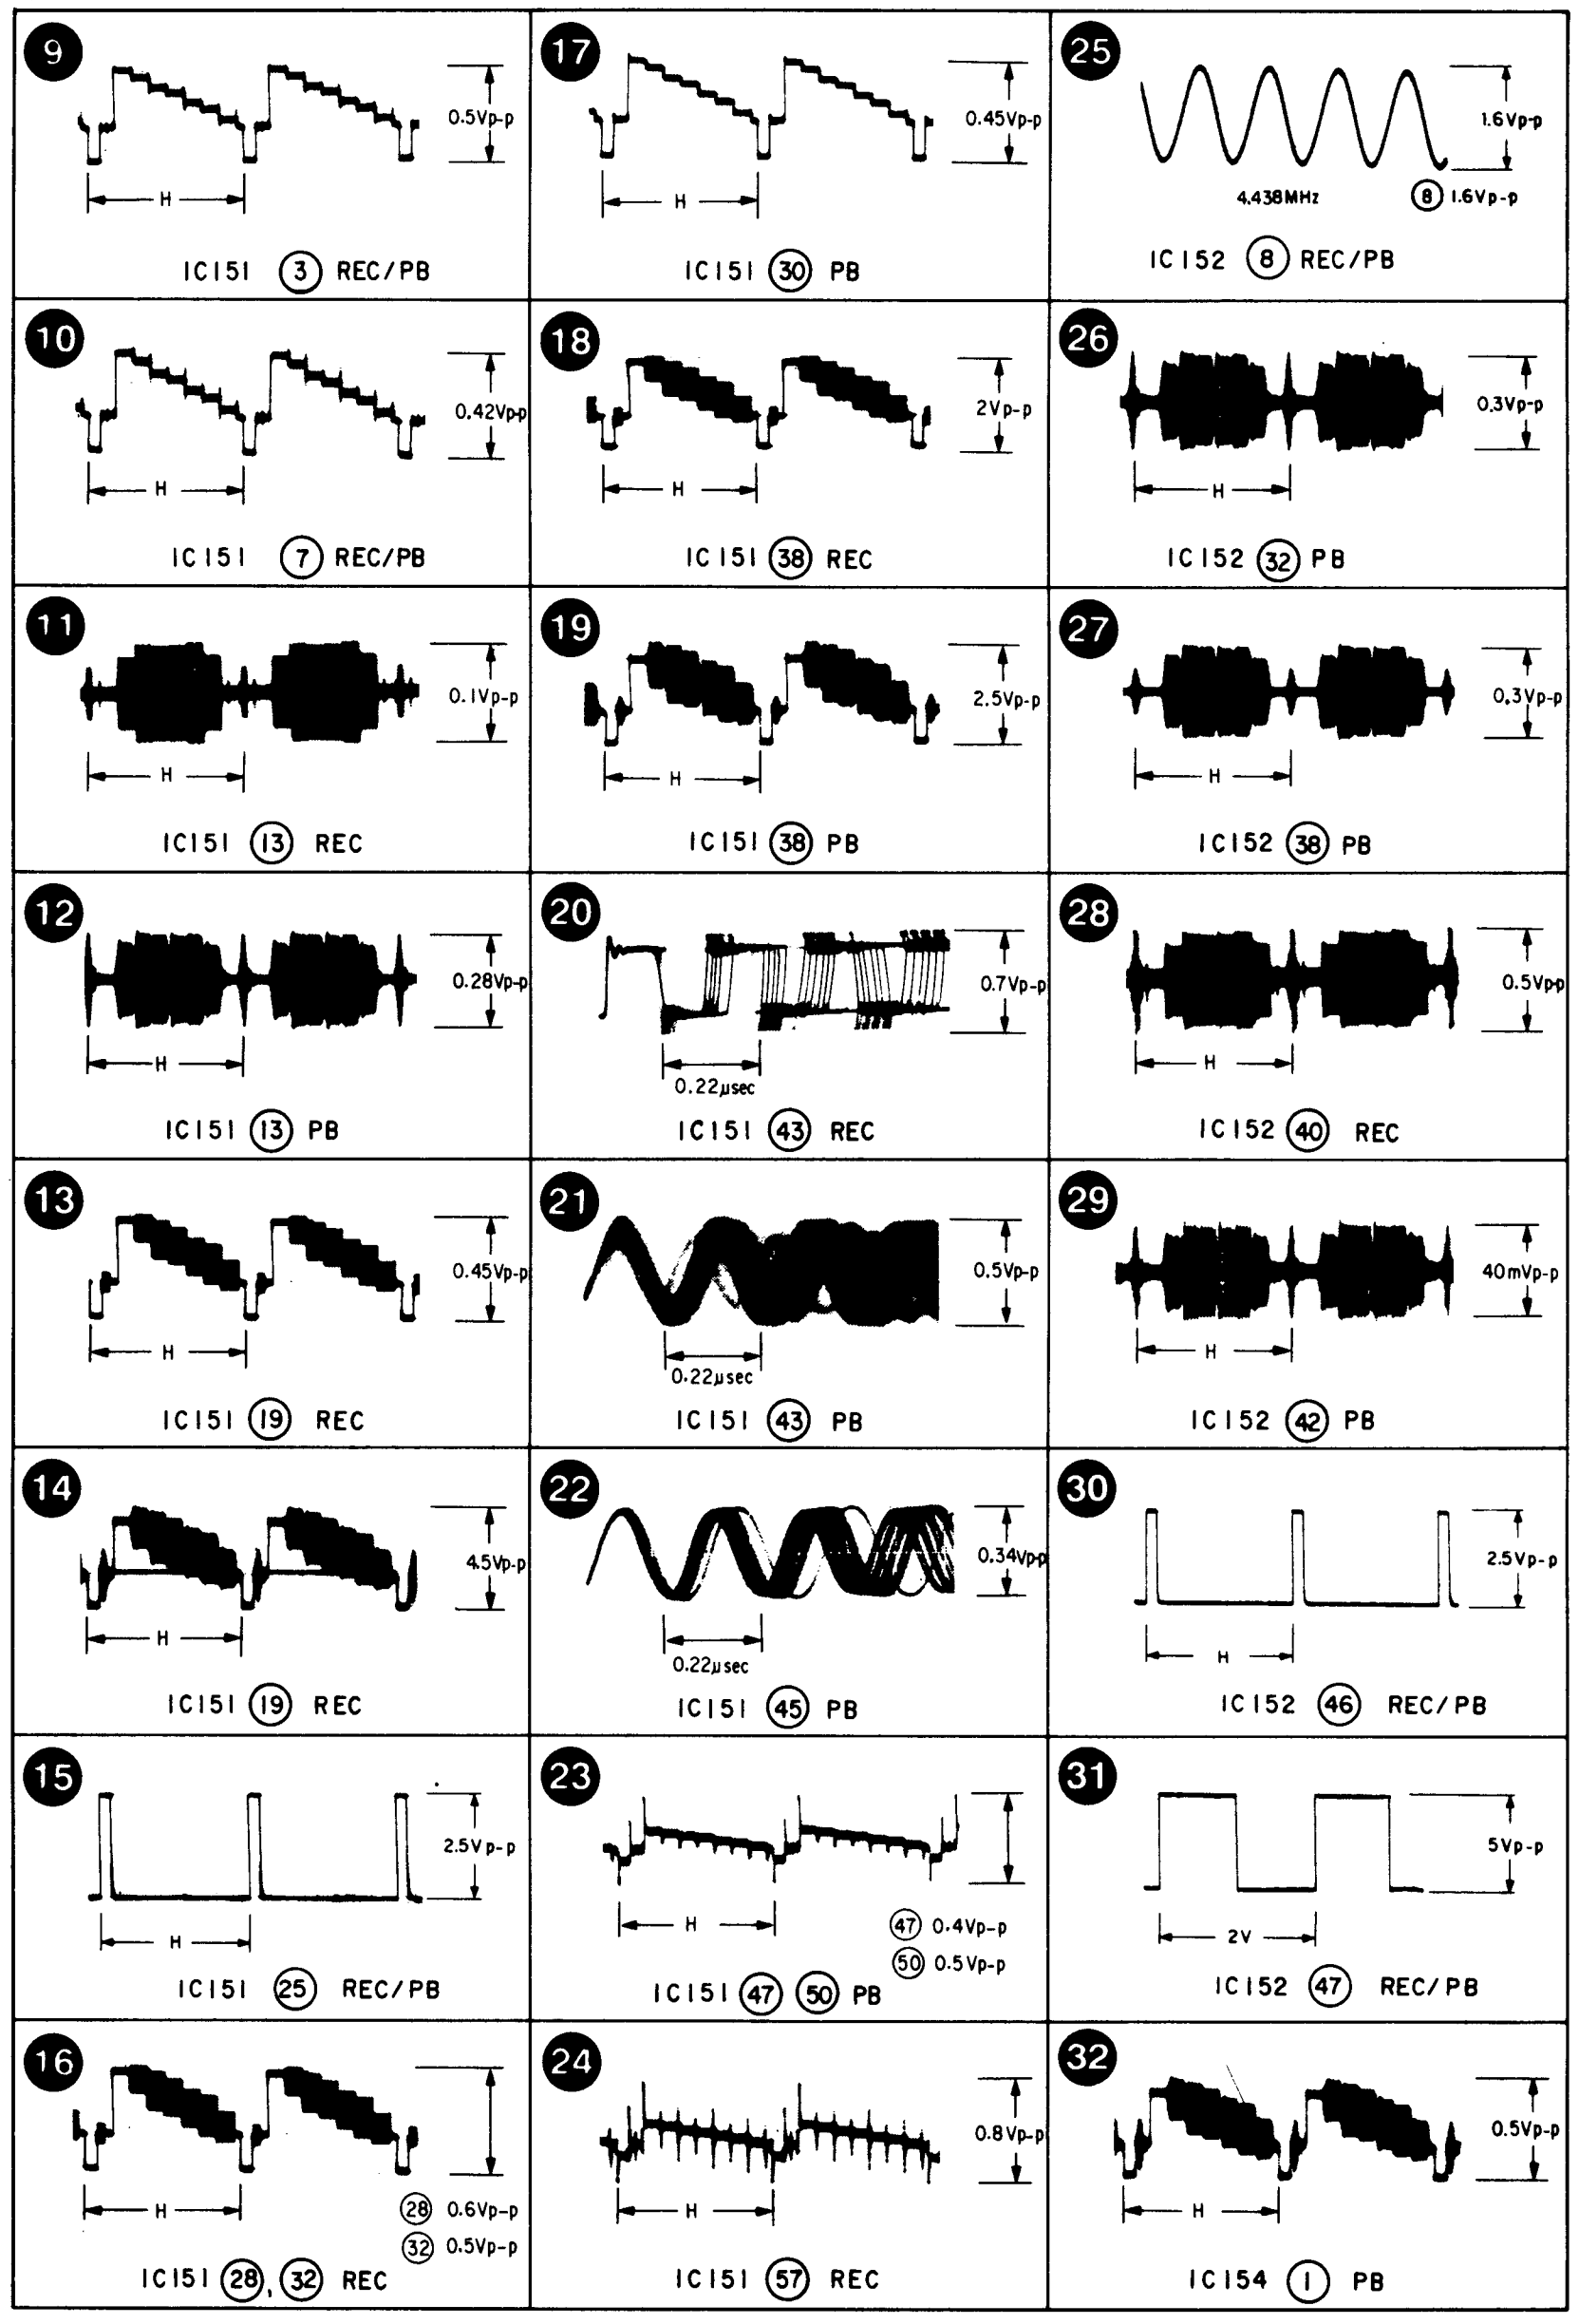

VS-93P (PAL JOG) SCHEMATIC DIAGRAM

• Refer to page 108 for Printed Wiring Board.

— Ref. No. VS-93P BOARD: 3000 series —

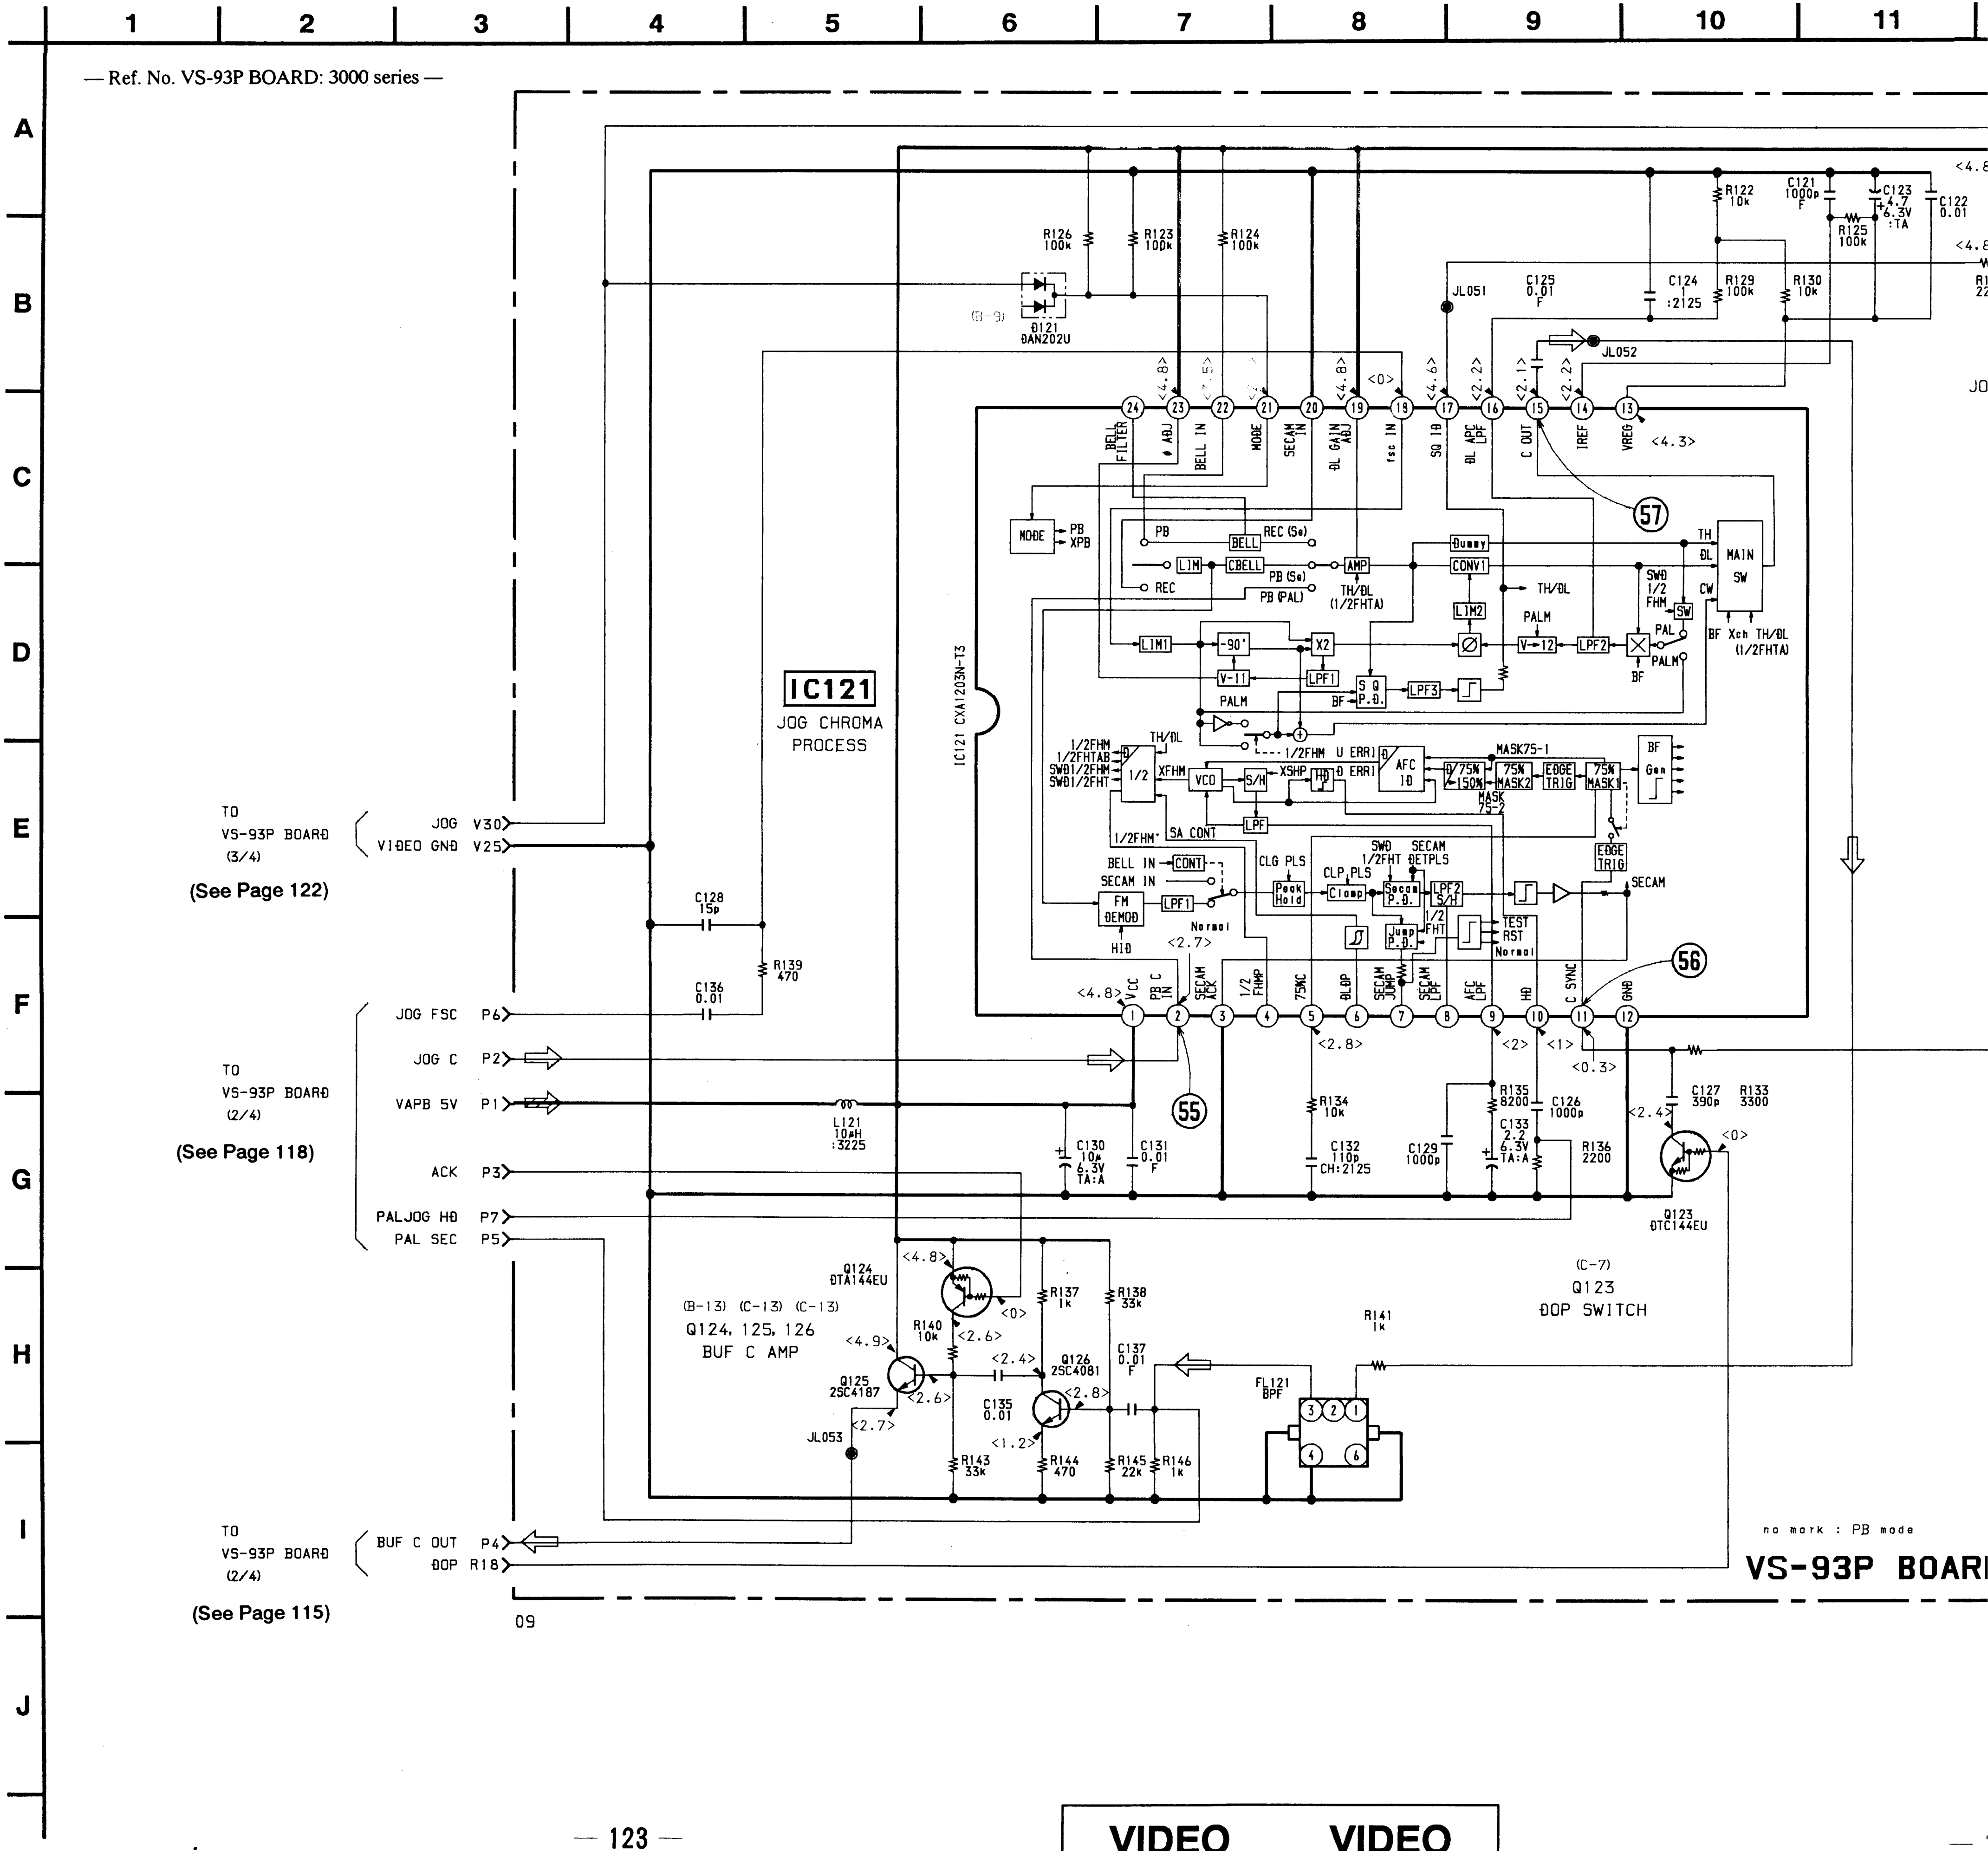

1
2
3
4
5
6
7
8
9
10
11
A
B
C
D
E
F
G
H
I
J
IC121
JOG CHROMA PROCESS
IC121 CXA1203N-T3
TO VS-93P BOARD (3/4)
JOG V30
VIDEO GND V25
(See Page 122)
TO VS-93P BOARD (2/4)
JOG FSC P6
JOG C P2
VAPB 5V P1
ACK P3
PALJOG HD P7
PAL SEC P5
(See Page 118)
TO VS-93P BOARD (2/4)
BUF C OUT P4
DOP R18
(See Page 115)
D121 DAN202U
R126 100k
R123 100k
R124 100k
R122 10k
C121 1000p F
C123 4.7 6.3V :TA
C122 0.01
R125 100k
C125 0.01 F
C124 :2125
R129 100k
R130 10k
JL051
JL052
JL053
C128 15p
C136 0.01
R139 470
L121 10μH :3225
C130 10μ 6.3V TA:A
C131 0.01 F
R134 10k
C132 110p CH:2125
C129 1000p
R135 8200
C126 1000p
C133 2.2 6.3V TA:A
R136 2200
C127 390p
R133 3300
Q123 DTC144EU
(C-7) Q123 DOP SWITCH
Q124 DTA144EU
(B-13) (C-13) (C-13)
Q124, 125, 126 BUF C AMP
R140 10k
Q125 2SC4187
Q126 2SC4081
R137 1k
R138 33k
C137 0.01 F
C135 0.01
R143 33k
R144 470
R145 22k
R146 1k
R141 1k
FL121 BPF
55
56
57
no mark : PB mode
VS-93P BOARD
09

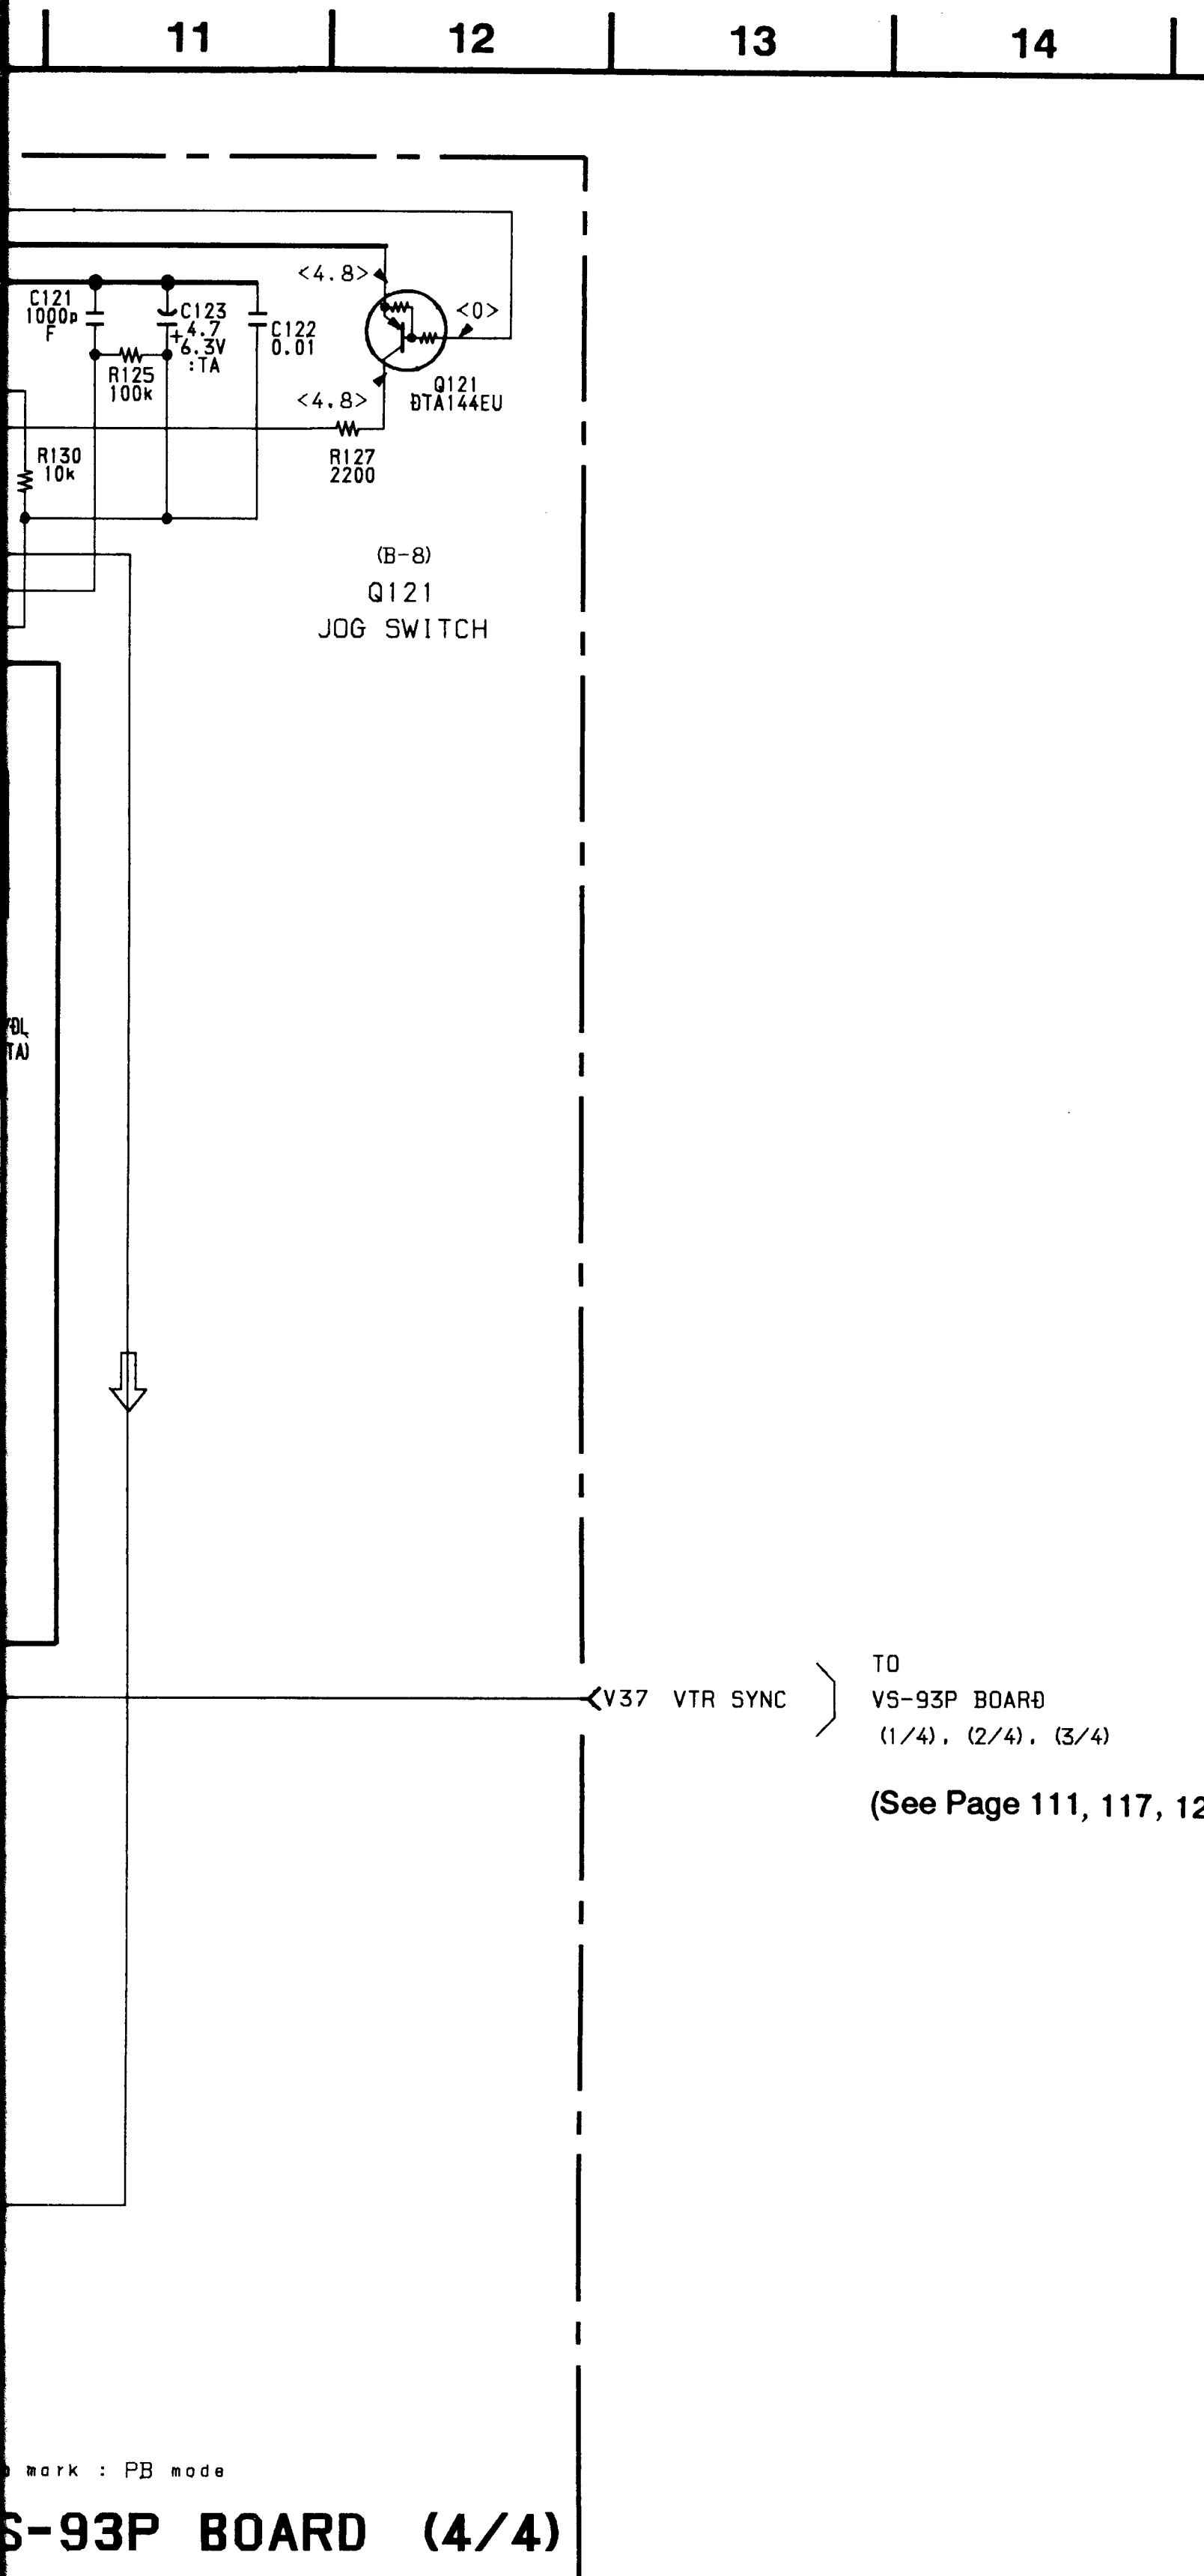
11
12
13
14
15
C121
1000p
F
C123
4.7
6.3V
:TA
C122
0.01
R125
100k
<4.8>
<0>
<4.8>
Q121
DTA144EU
R130
10k
R127
2200
(B-8)
Q121
JOG SWITCH
V37 VTR SYNC
TO
VS-93P BOARD
(1/4), (2/4), (3/4)
mark : PB mode

S-93P BOARD (4/4)

(See Page 111, 117, 122)

VS-93P BOARD(4/4)

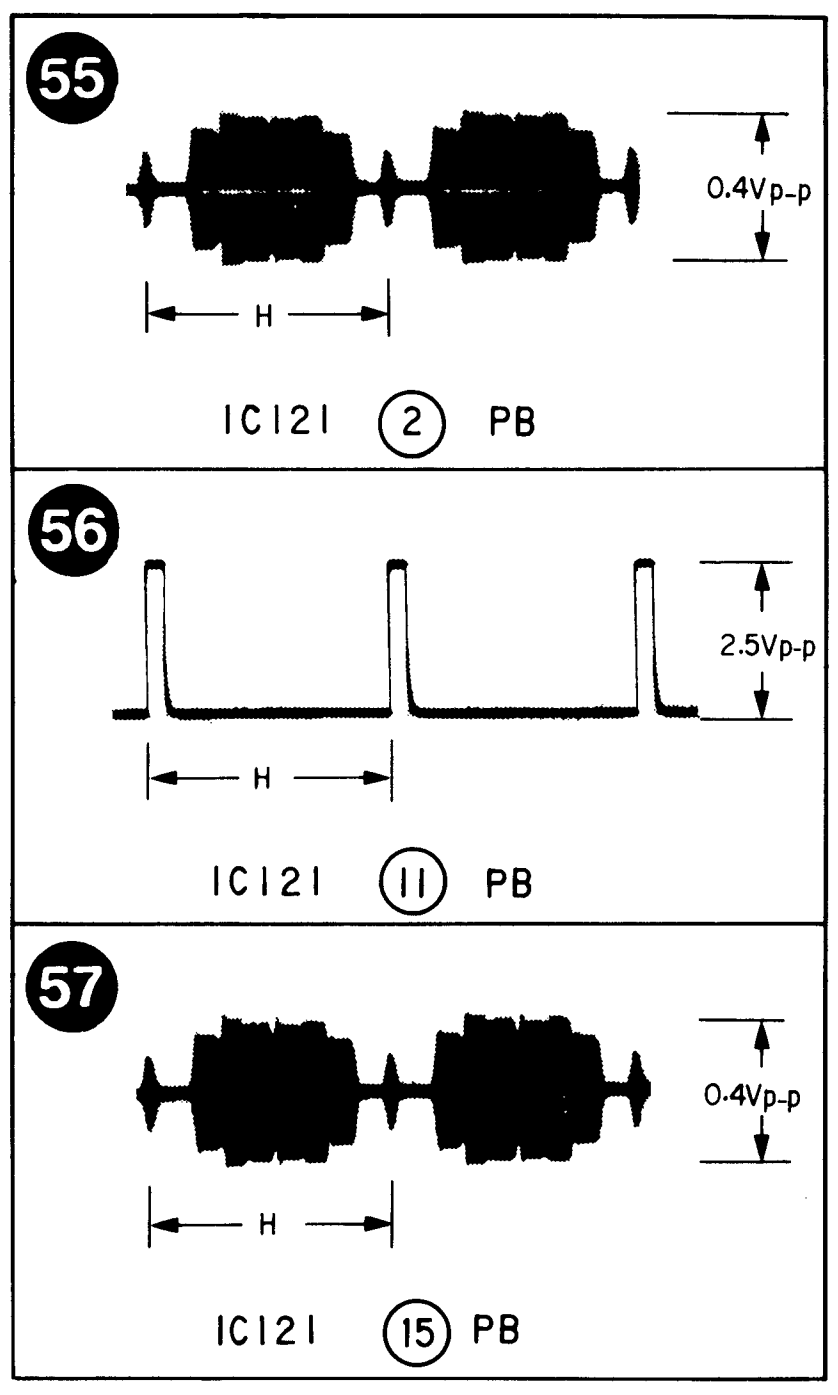

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				
PB	⇨			

LC-40P (LCD CONTROL), CN-64P (BOARD LINK) PRINTED WIRING BOARDS

— Ref. No. LC-40P BOARD: 4000 series, CN-64P BOARD: 1000 series —

LC-40P BOARD (COMPONENT SIDE)

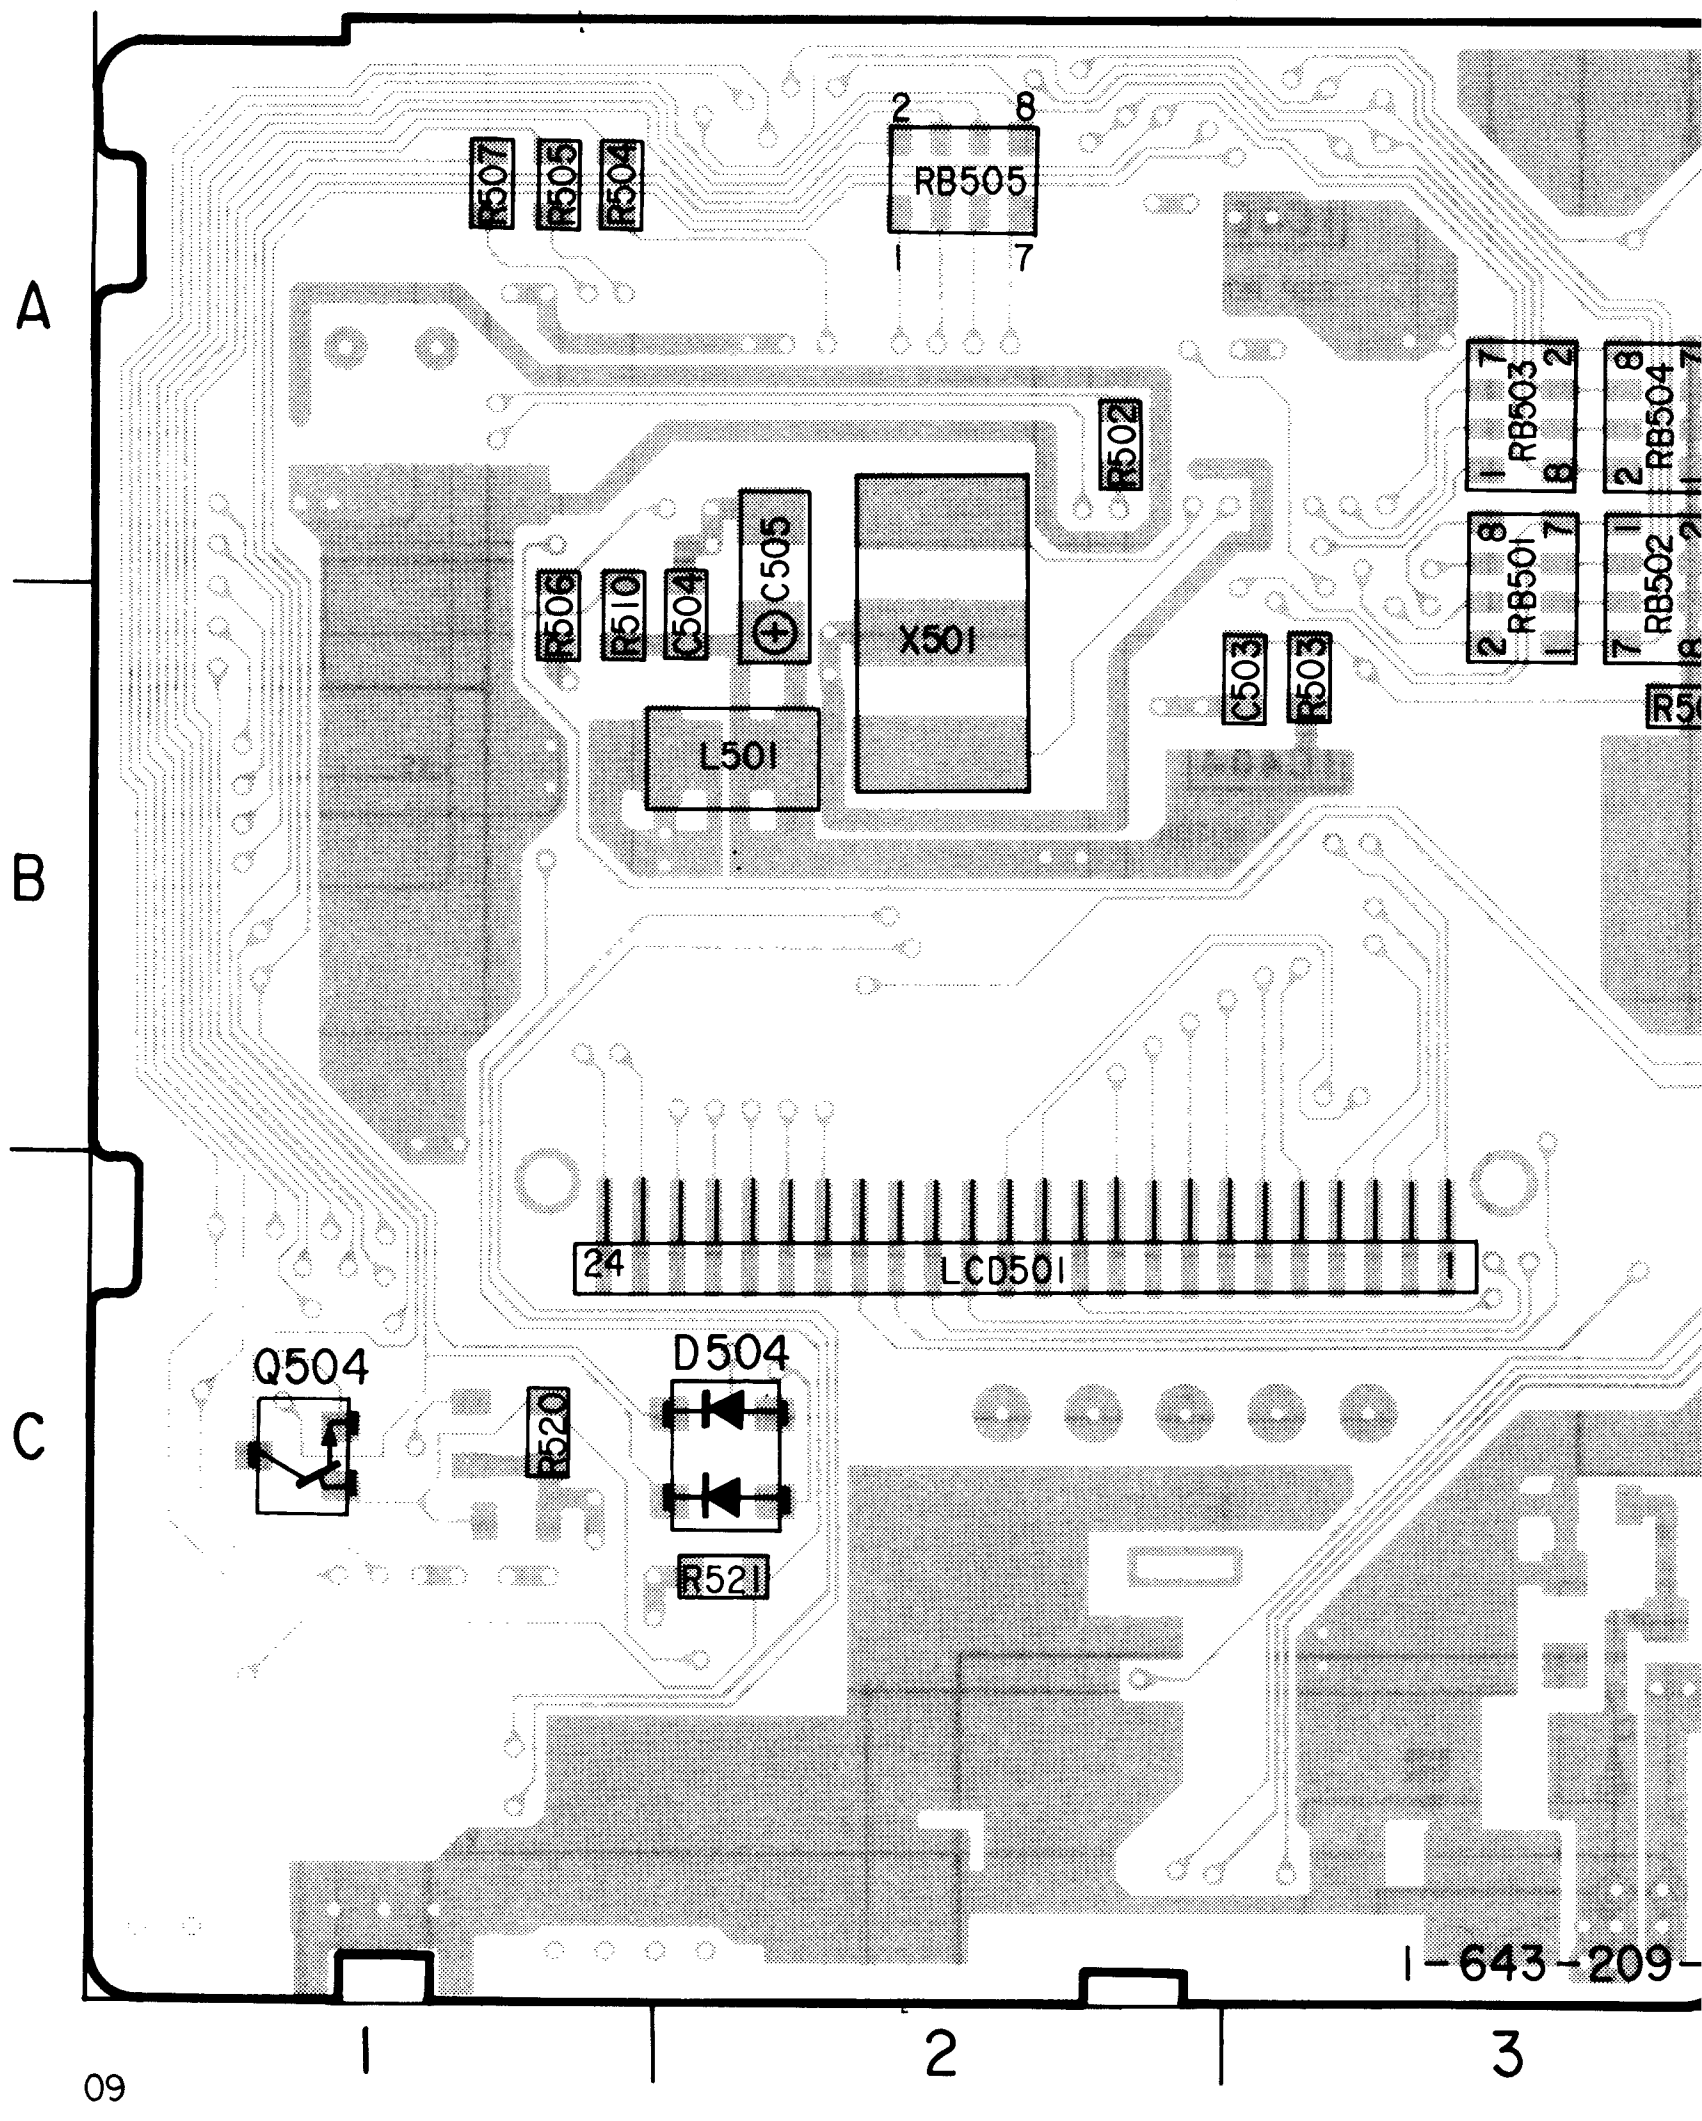
A
B
C
RB505
2
8
1
7
R507
R505
R504
R502
RB503
RB504
RB501
RB502
R506
R510
C504
C505
X501
L501
C503
R503
24
LCD501
1
Q504
R520
D504
R521
1-643-209-
1
2
3
09

< DIODE >

D501	8-719-421-27	DIODE	MA728
D504	8-719-940-45	DIODE	DWA010
D505	8-719-988-62	DIODE	1SS355

< IC >

IC501	8-759-059-51	IC	uPD75316GF-SGX3200
IC502	8-759-056-84	IC	S-8420AF
IC503	8-759-145-63	IC	uPD7564G-540

< TRANSISTOR >

Q501	8-729-905-15	TRANSISTOR	DTC144WU
Q502	8-729-905-12	TRANSISTOR	DTA144EU
Q504	8-729-905-XX	TRANSISTOR	DTC114TU

- **For printed wiring boards.**
- LC-40P, CN-64P boards are the printed wiring board four layers structure but inner two layers' patterns are
- ● : Through hole is omitted.

Caution:

Pattern face side: (Conductor Side)	Parts on the pattern face side s the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen parts face are indicated.

N-64P (BOARD LINK) PRINTED WIRING BOARDS

s, CN-64P BOARD: 1000 series —

OARD (COMPONENT SIDE)

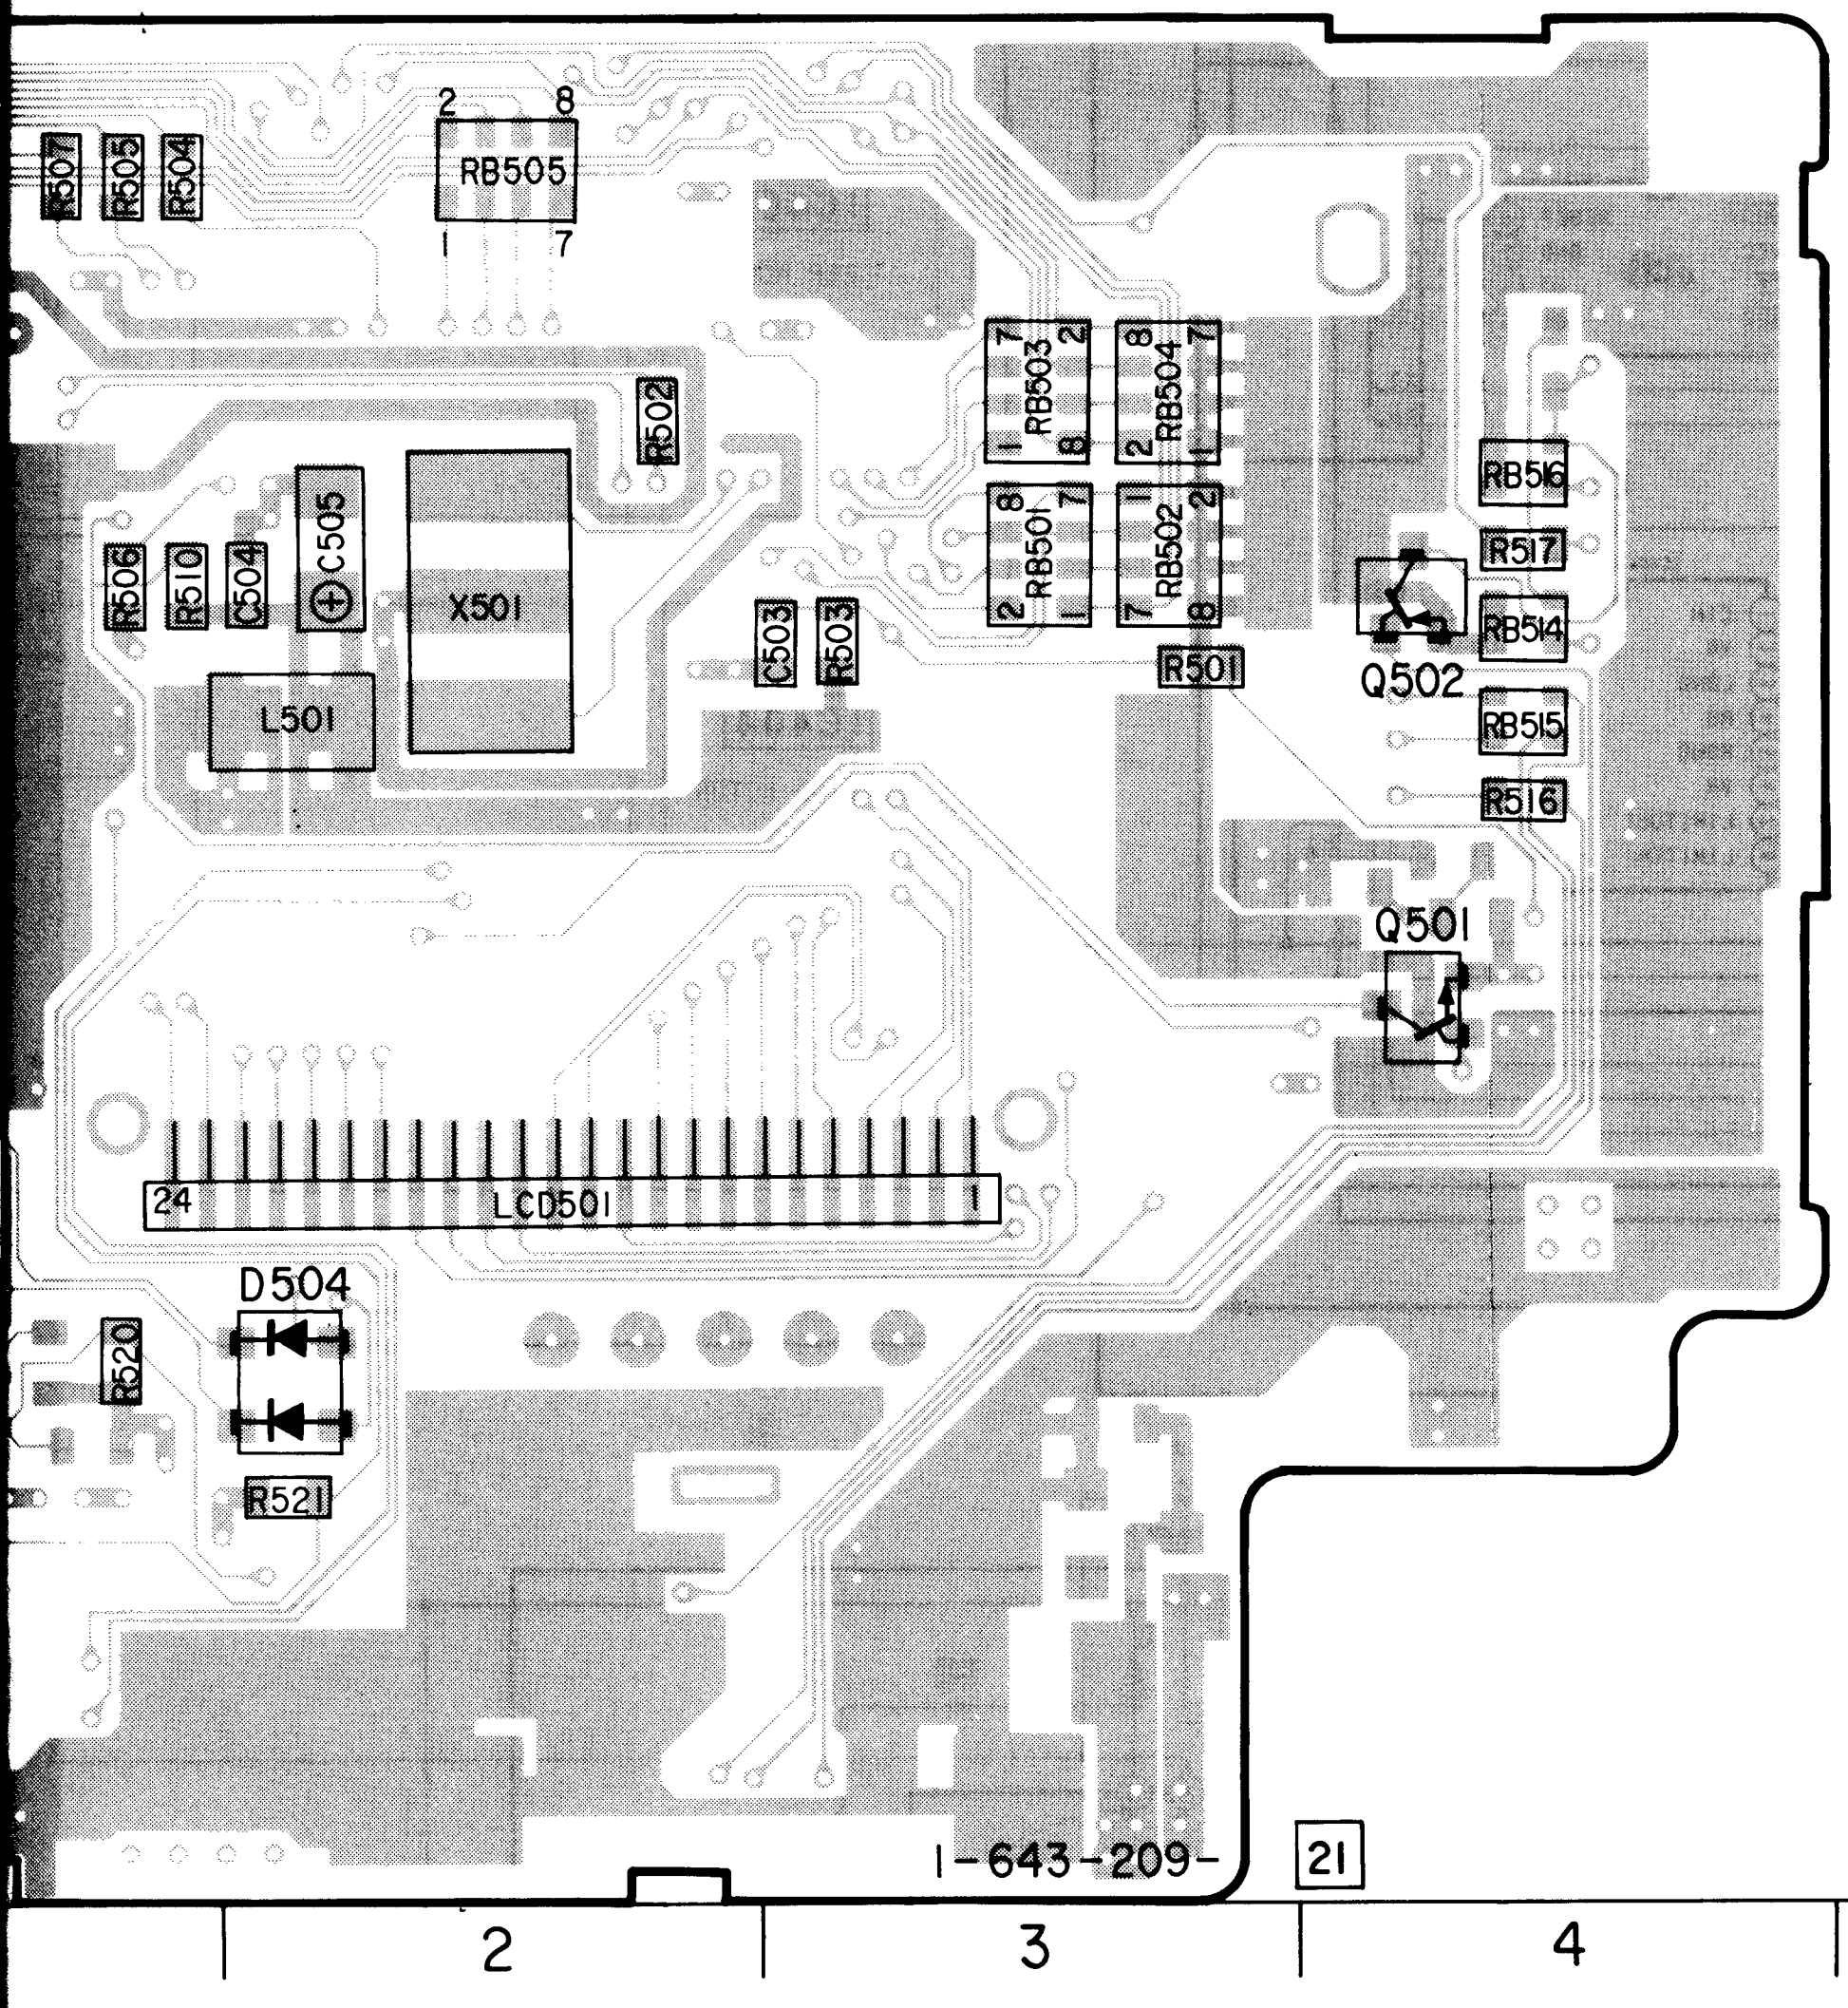
R507
R505
R504
RB505
2 8
1 7
R502
RB503
RB504
RB501
RB502
R506
R510
C504
C505
X501
L501
C503
R503
R501
RB516
R517
RB514
Q502
RB515
R516
Q501
24
LCD501
1
D504
R520
R521
1-643-209-
21
2
3
4

LC-40P BOARD (CONDUCTOR SIDE)

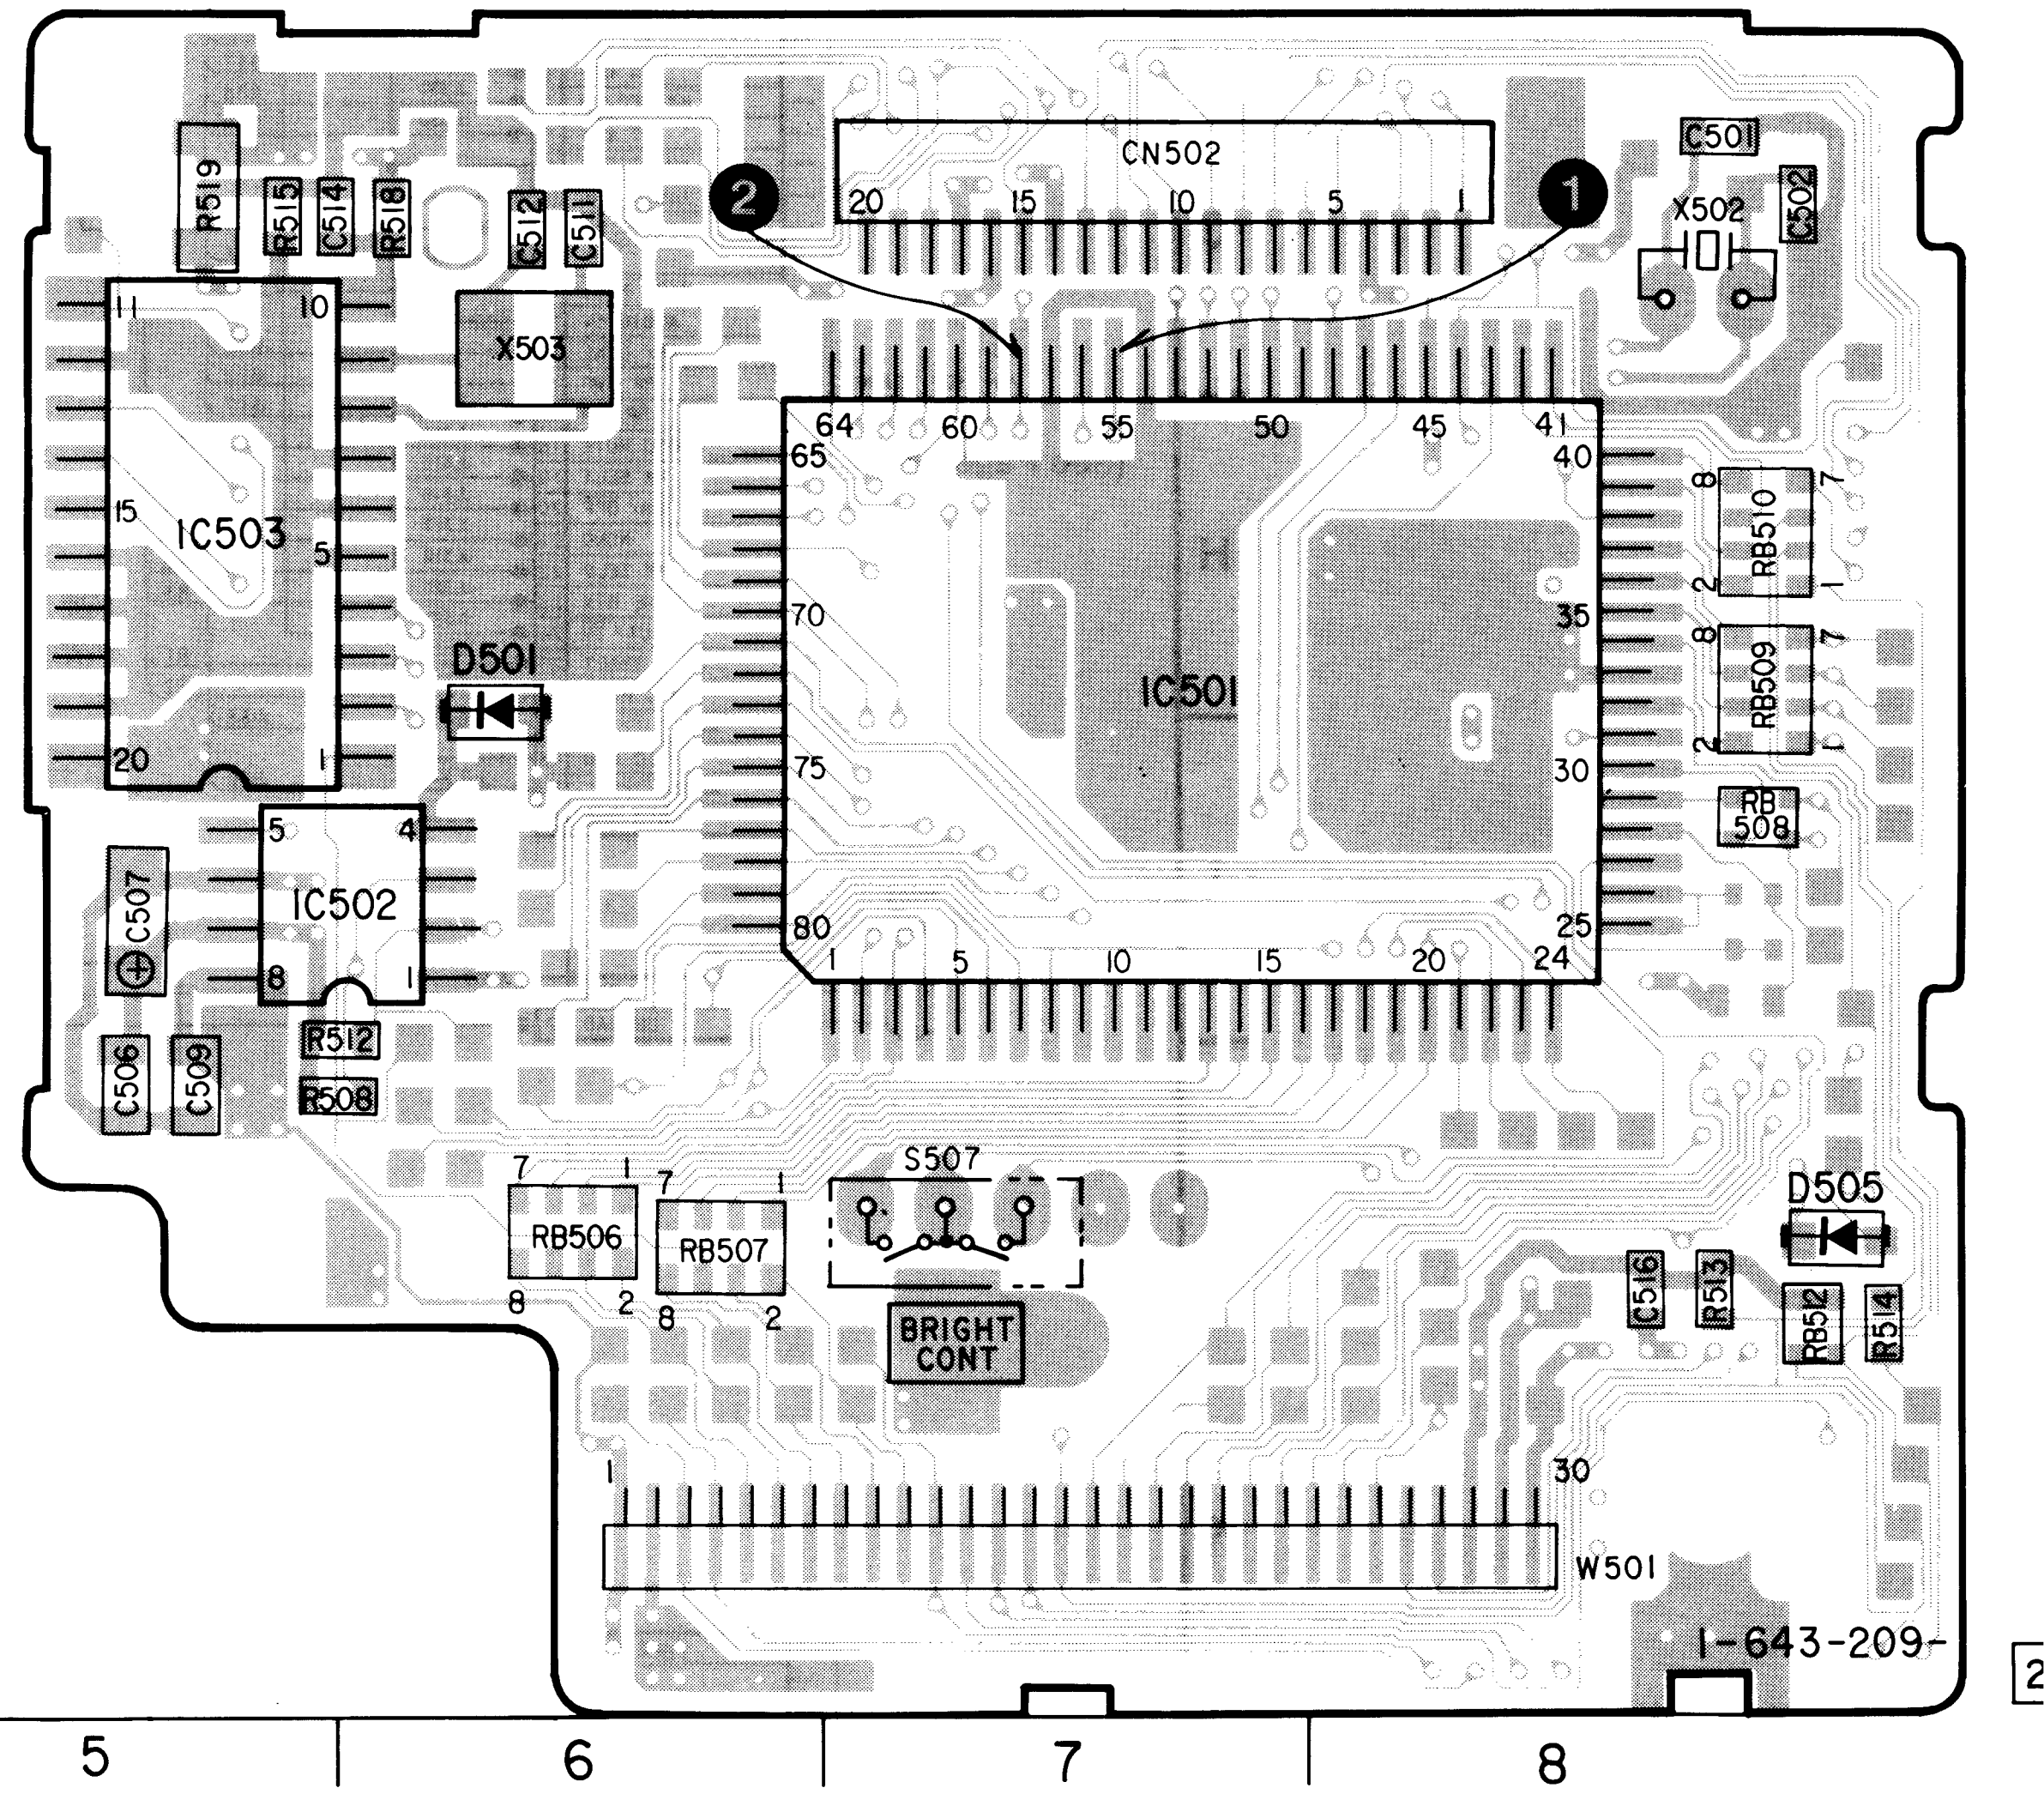
R519
R515
C514
R518
C512
C511
CN502
20 15 10 5 1
②
❶
C501
X502
C502
11
10
X503
15
IC503
5
20
1
64 60 55 50 45 41
65
40
70
35
75
30
80
25
1 5 10 15 20 24
IC501
RB510
RB509
RB508
D501
C507
IC502
C506
C509
R512
R508
RB506
RB507
S507
BRIGHT CONT
D505
C516
R513
R512
R514
1
30
W501
1-643-209-
5
6
7
8

X3200

144WU
144EU
114TU

- **For printed wiring boards.**
- LC-40P, CN-64P boards are the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:

Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

CN-64P BOARD (COMPONENT SIDE)

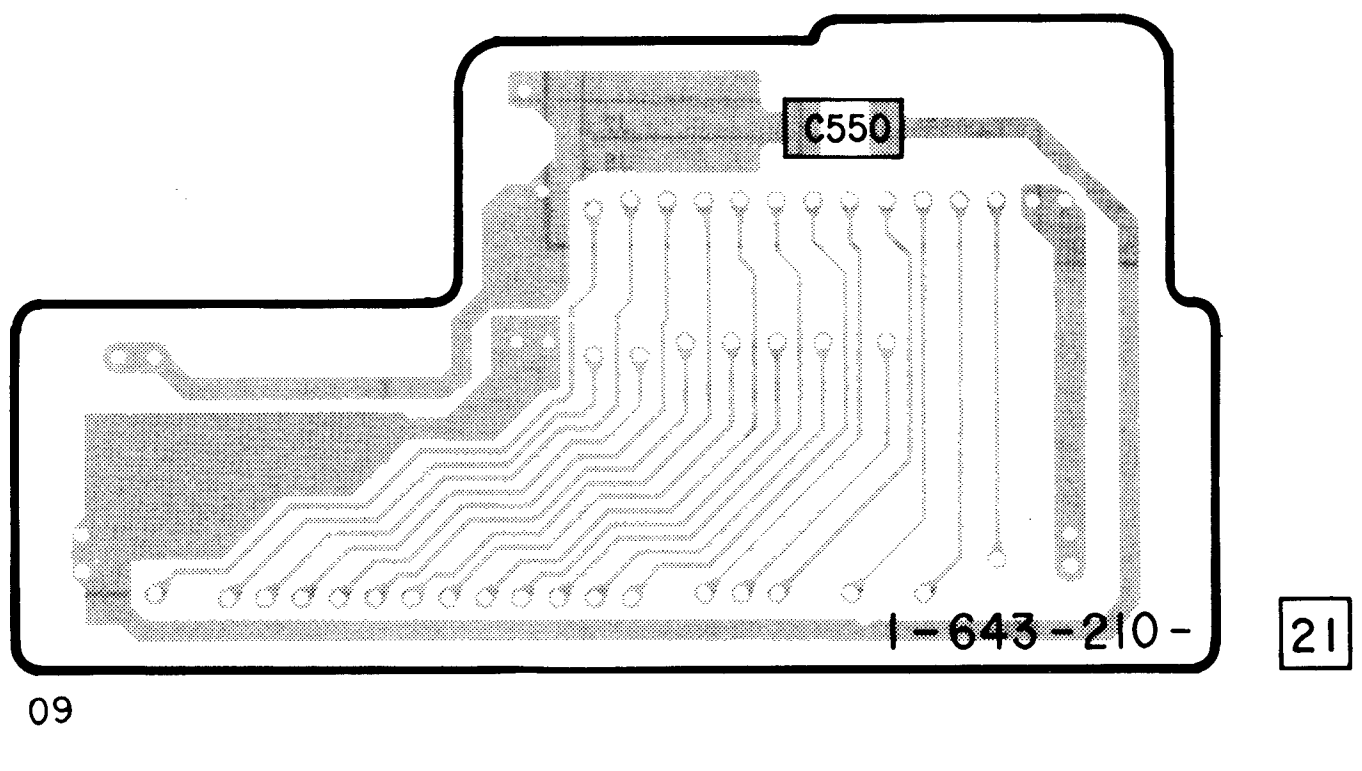
C550
1-643-210-
21
09

CN-64P BOARD (CONDUCTOR SIDE)

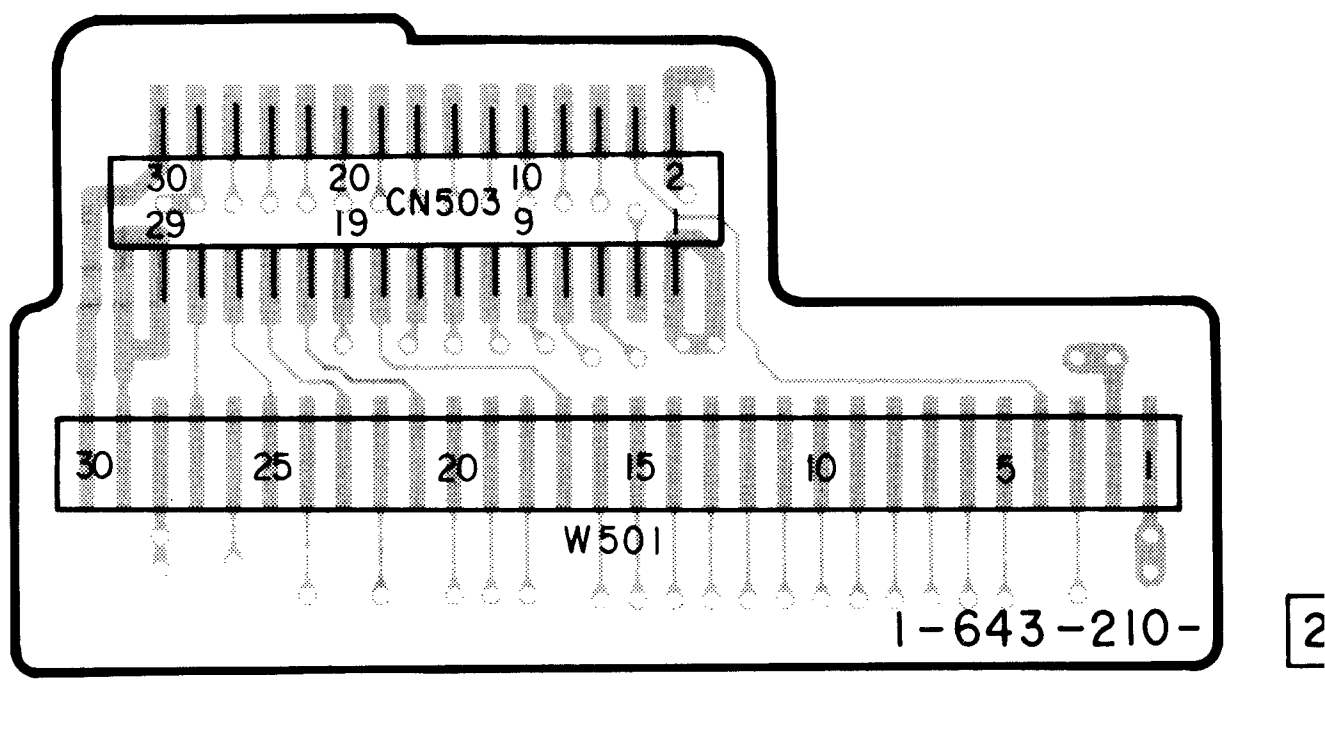
30 20 10 2
29 19 CN503 9 1
30 25 20 15 10 5 1
W501
1-643-210-

LC-40P (LCD CONTROL), CN-64P (BOARD LINK) SCHEMATIC DIAGRAMS

— Ref. No. LC-40P BOARD: 4000 series, CN-64P BOARD: 1000 series —

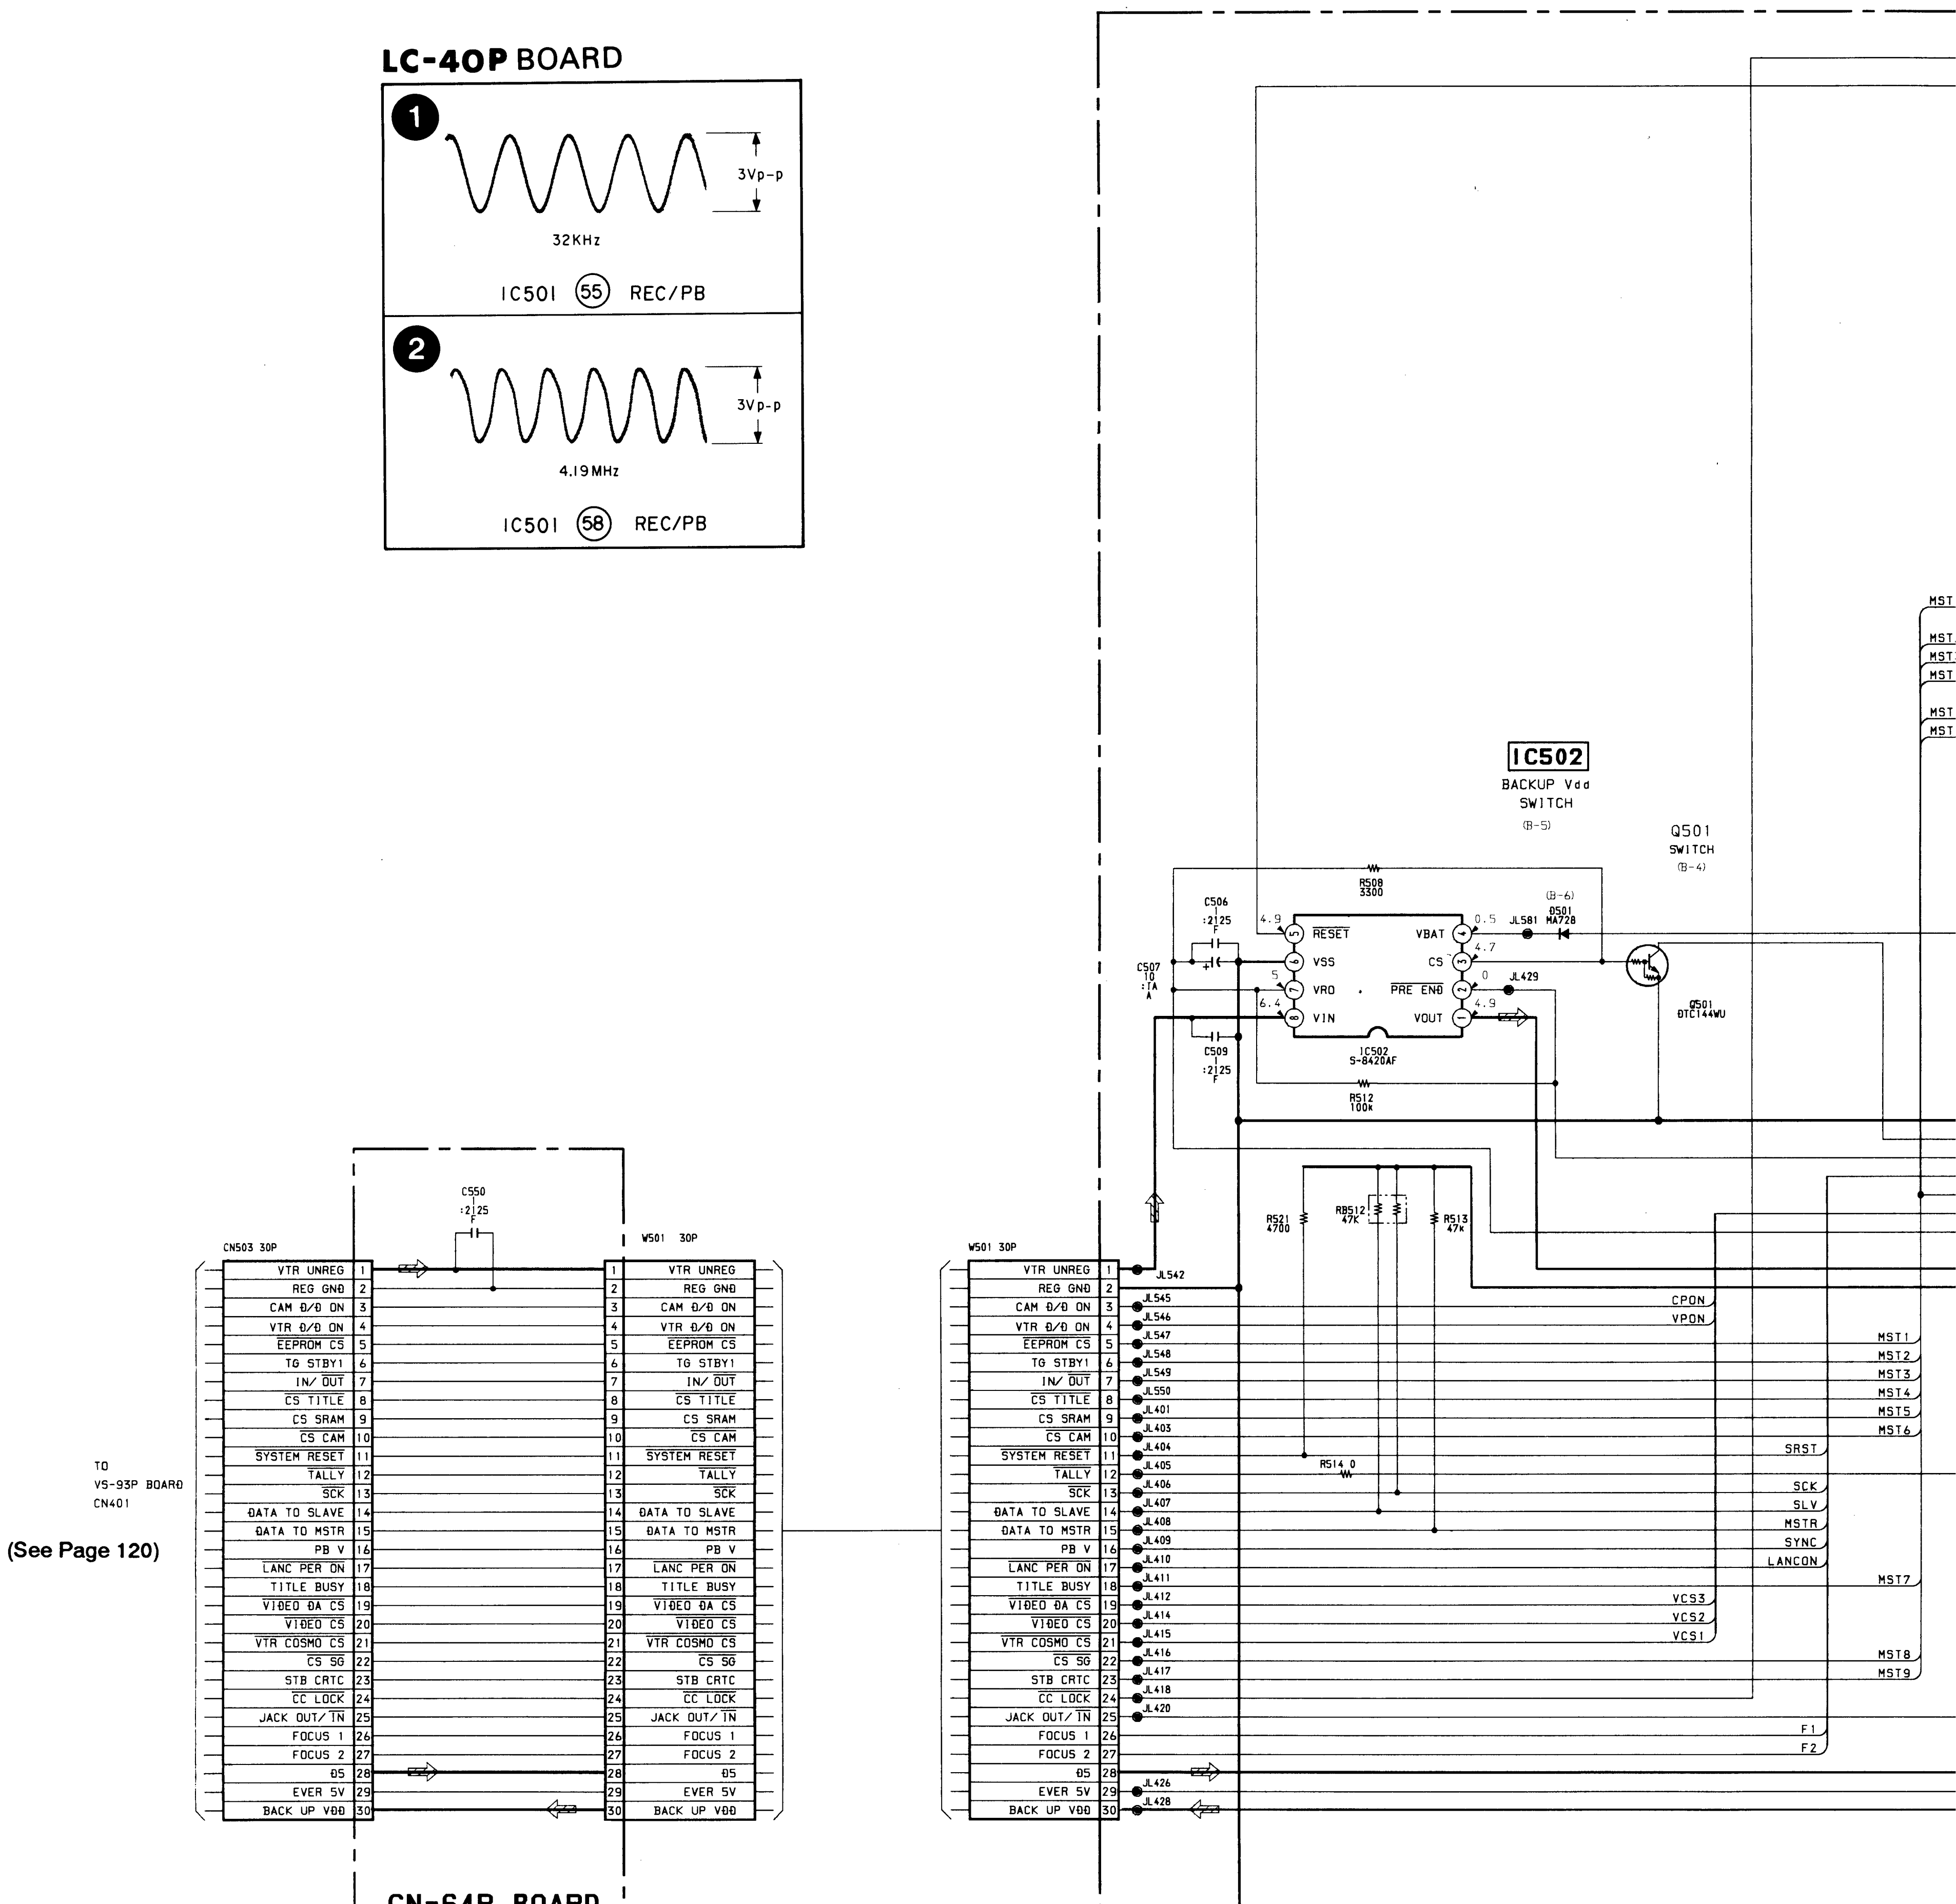
1
2
3
4
5
6
7
8
9
10
A
B
C
D
E
F
G
H
I
J
K
L
LC-40P BOARD
❶
3Vp-p
32KHz
IC501 ㊺ REC/PB
❷
3Vp-p
4.19MHz
IC501 ㊿ REC/PB
CN503 30P
TO VS-93P BOARD CN401
(See Page 120)
VTR UNREG 1
REG GND 2
CAM D/D ON 3
VTR D/D ON 4
EEPROM CS 5
TG STBY1 6
IN/ OUT 7
CS TITLE 8
CS SRAM 9
CS CAM 10
SYSTEM RESET 11
TALLY 12
SCK 13
DATA TO SLAVE 14
DATA TO MSTR 15
PB V 16
LANC PER ON 17
TITLE BUSY 18
VIDEO DA CS 19
VIDEO CS 20
VTR COSMO CS 21
CS SG 22
STB CRTC 23
CC LOCK 24
JACK OUT/ IN 25
FOCUS 1 26
FOCUS 2 27
D5 28
EVER 5V 29
BACK UP VDD 30
C550 :2.25
W501 30P
CN-64P BOARD
W501 30P
JL542
JL545
JL546
JL547
JL548
JL549
JL550
JL401
JL403
JL404
JL405
JL406
JL407
JL408
JL409
JL410
JL411
JL412
JL414
JL415
JL416
JL417
JL418
JL420
JL426
JL428
W505
09
IC502
BACKUP Vdd SWITCH
(B-5)
Q501
SWITCH
(B-4)
R508 3300
(B-6)
D501 MA728
JL581
C506 :2.25 F
C507 10 :TA A
C509 :2.25 F
RESET
VSS
VRO
VIN
VBAT
CS
PRE ENB
VOUT
4.9
5
6.4
0.5
4.7
0
4.9
JL429
IC502 S-8420AF
R512 100k
Q501 DTC144WU
R521 4700
RB512 47k
R513 47k
R514 0
CPON
VPON
MST1
MST2
MST3
MST4
MST5
MST6
SRST
SCK
SLV
MSTR
SYNC
LANCON
MST7
VCS3
VCS2
VCS1
MST8
MST9
F1
F2
MST

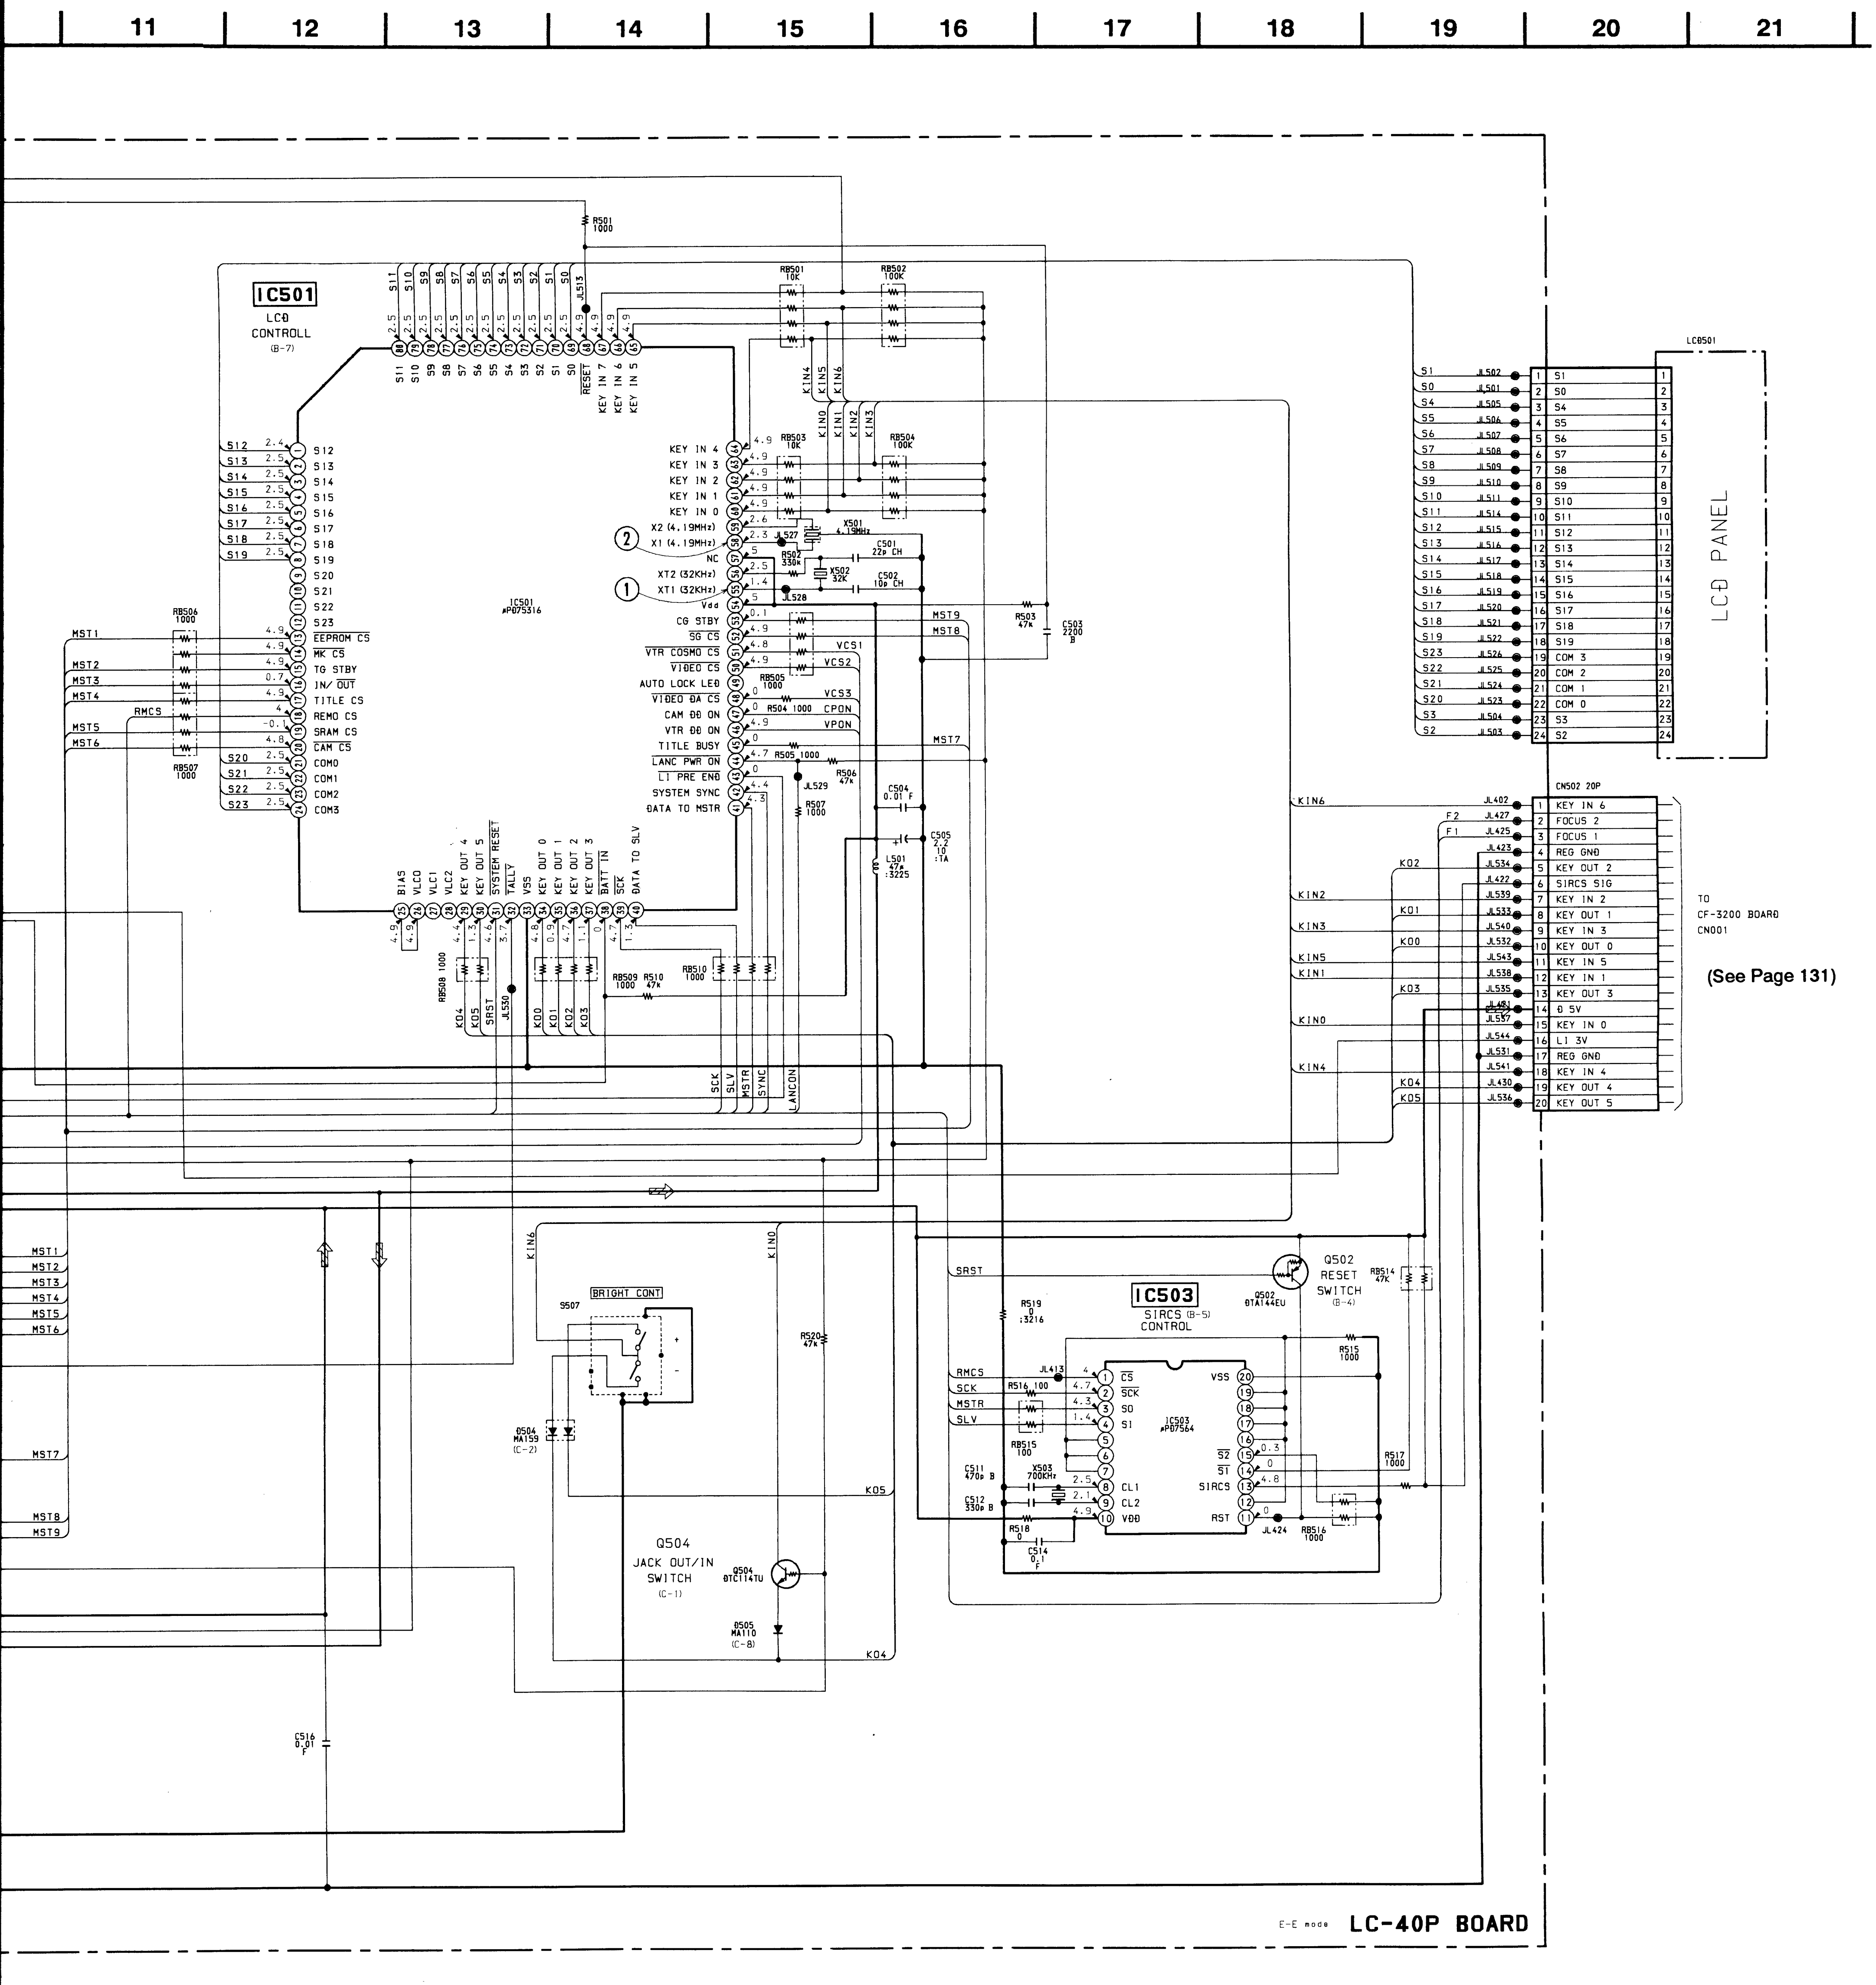

11
12
13
14
15
16
17
18
19
20
21
IC501
LCD CONTROLL
(B-7)
IC501 μPD75316
RB501 10K
RB502 100K
RB503 10K
RB504 100K
RB505 1000
RB506 1000
RB507 1000
RB508 1000
RB509 1000
RB510 1000
R501 1000
X501 4.19MHz
X502 32K
C501 22p CH
C502 10p CH
C503 2200 B
C504 0.01 F
C505 2.2 10 :TA
L501 47μ :3225
KEY IN 4
KEY IN 3
KEY IN 2
KEY IN 1
KEY IN 0
X2 (4.19MHz)
X1 (4.19MHz)
NC
XT2 (32KHz)
XT1 (32KHz)
Vdd
CG STBY
SG CS
VTR COSMO CS
VIDEO CS
AUTO LOCK LED
VIDEO DA CS
CAM DD ON
VTR DD ON
TITLE BUSY
LANC PWR ON
L1 PRE END
SYSTEM SYNC
DATA TO MSTR
EEPROM CS
MK CS
TG STBY
IN/ OUT
TITLE CS
REMO CS
SRAM CS
CAM CS
COM0
COM1
COM2
COM3
BIAS
VLC0
VLC1
VLC2
KEY OUT 4
KEY OUT 5
SYSTEM RESET
TALLY
VSS
KEY OUT 0
KEY OUT 1
KEY OUT 2
KEY OUT 3
BATT IN
SCK
DATA TO SLV
MST1
MST2
MST3
MST4
MST5
MST6
MST7
MST8
MST9
RMCS
VCS1
VCS2
VCS3
CPON
VPON
SCK
SLV
MSTR
SYNC
LANCON
LCD0501
LCD PANEL
CN502 20P
1 KEY IN 6
2 FOCUS 2
3 FOCUS 1
4 REG GND
5 KEY OUT 2
6 SIRCS SIG
7 KEY IN 2
8 KEY OUT 1
9 KEY IN 3
10 KEY OUT 0
11 KEY IN 5
12 KEY IN 1
13 KEY OUT 3
14 D 5V
15 KEY IN 0
16 L1 3V
17 REG GND
18 KEY IN 4
19 KEY OUT 4
20 KEY OUT 5
TO CF-3200 BOARD CN001
BRIGHT CONT
S507
D504 MA159 (C-2)
Q504 JACK OUT/IN SWITCH (C-1)
Q504 DTC114TU
D505 MA110 (C-8)
R520 47k
IC503
SIRCS (B-5) CONTROL
IC503 μPD7564
Q502 RESET SWITCH (B-4)
Q502 DTA144EU
RB514 47K
R515 1000
R517 1000
RB515 100
RB516 1000
R516 100
R518 0
R519 0 :3216
X503 700KHz
C511 470p B
C512 330p B
C514 0.1 F
C516 0.01 F
CS
SCK
SO
SI
CL1
CL2
VDD
VSS
S2
S1
SIRCS
RST
SRST
E-E mode

(See Page 131)

LC-40P BOARD

CF-3200 (FUNCTION SWITCH), MF-175P (FOCUS SWITCH) SCHEMATIC DIAGRAMS

— Ref. No. MF-175P BOARD: 6000 series —

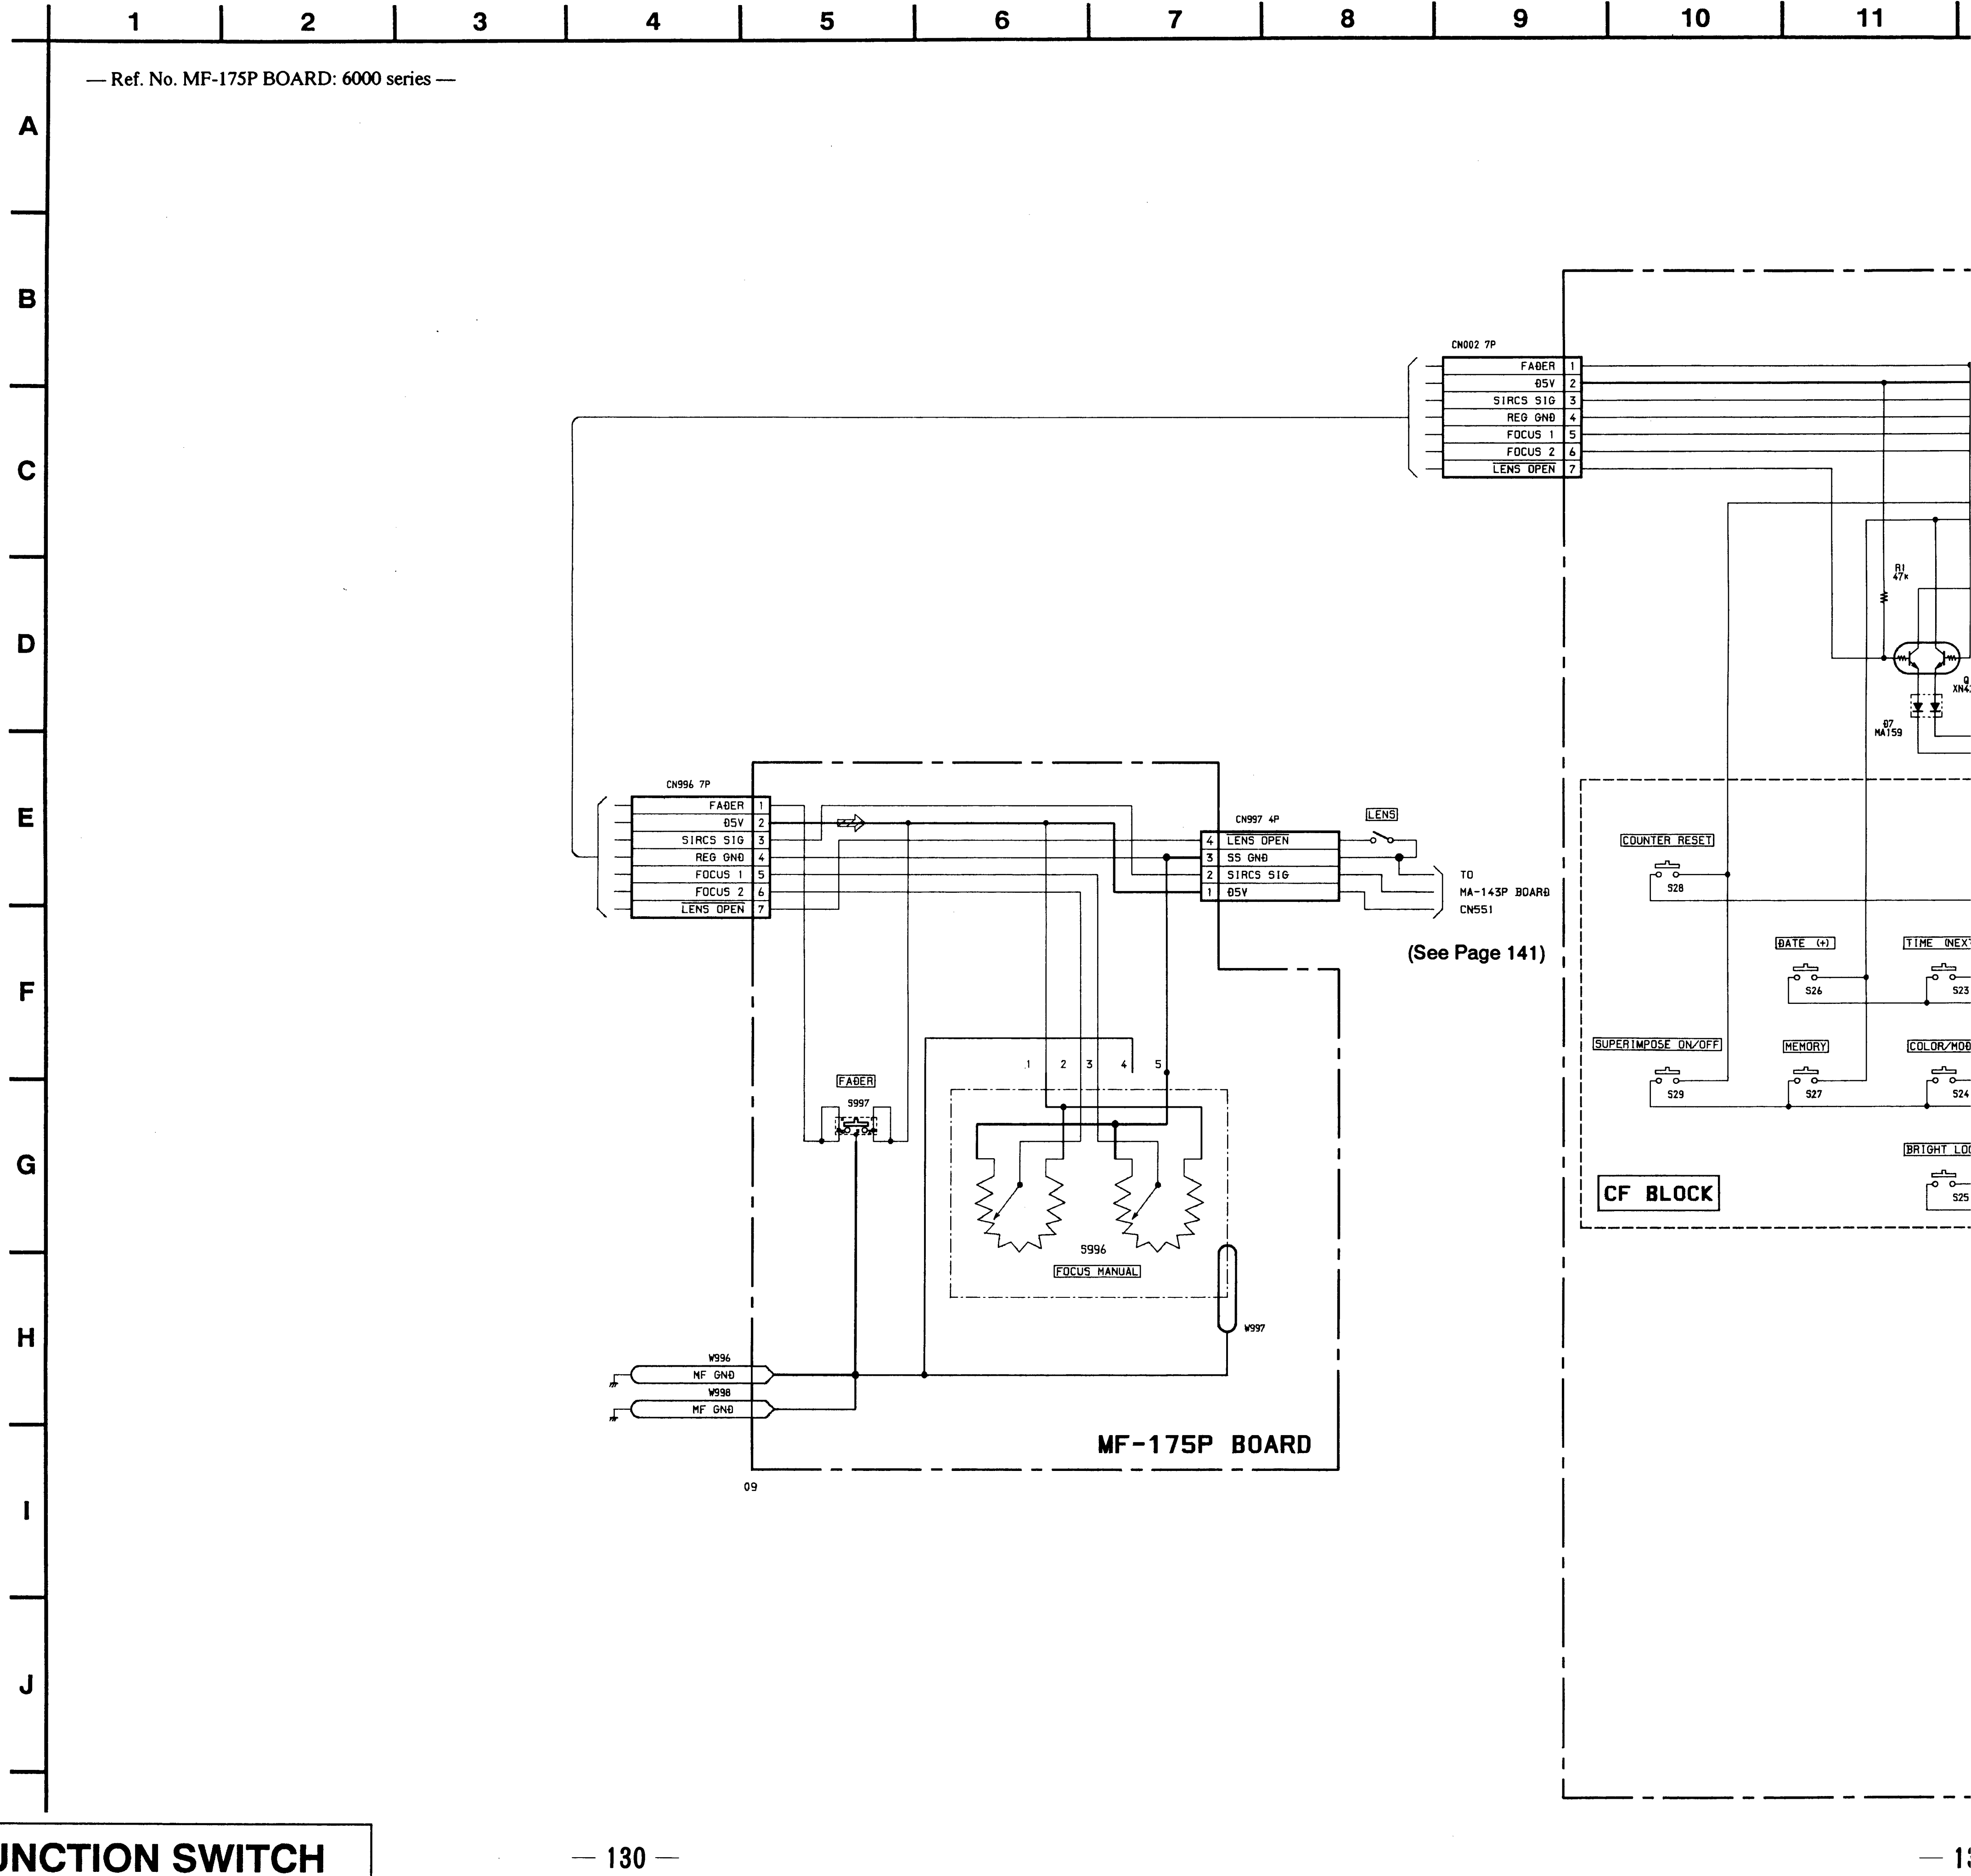
1
2
3
4
5
6
7
8
9
10
11
A
B
C
D
E
F
G
H
I
J
CN002 7P
FADER 1
D5V 2
SIRCS SIG 3
REG GND 4
FOCUS 1 5
FOCUS 2 6
LENS OPEN 7
R1
47k
Q
XN4
D7
MA159
CN996 7P
FADER 1
D5V 2
SIRCS SIG 3
REG GND 4
FOCUS 1 5
FOCUS 2 6
LENS OPEN 7
CN997 4P
4 LENS OPEN
3 SS GND
2 SIRCS SIG
1 D5V
LENS
TO
MA-143P BOARD
CN551
(See Page 141)
FADER
S997
1
2
3
4
5
S996
FOCUS MANUAL
W997
W996
MF GND
W998
MF GND
MF-175P BOARD
09
COUNTER RESET
S28
DATE (+)
S26
TIME (NEX
S23
SUPERIMPOSE ON/OFF
S29
MEMORY
S27
COLOR/MOD
S24
BRIGHT LO
S25
CF BLOCK

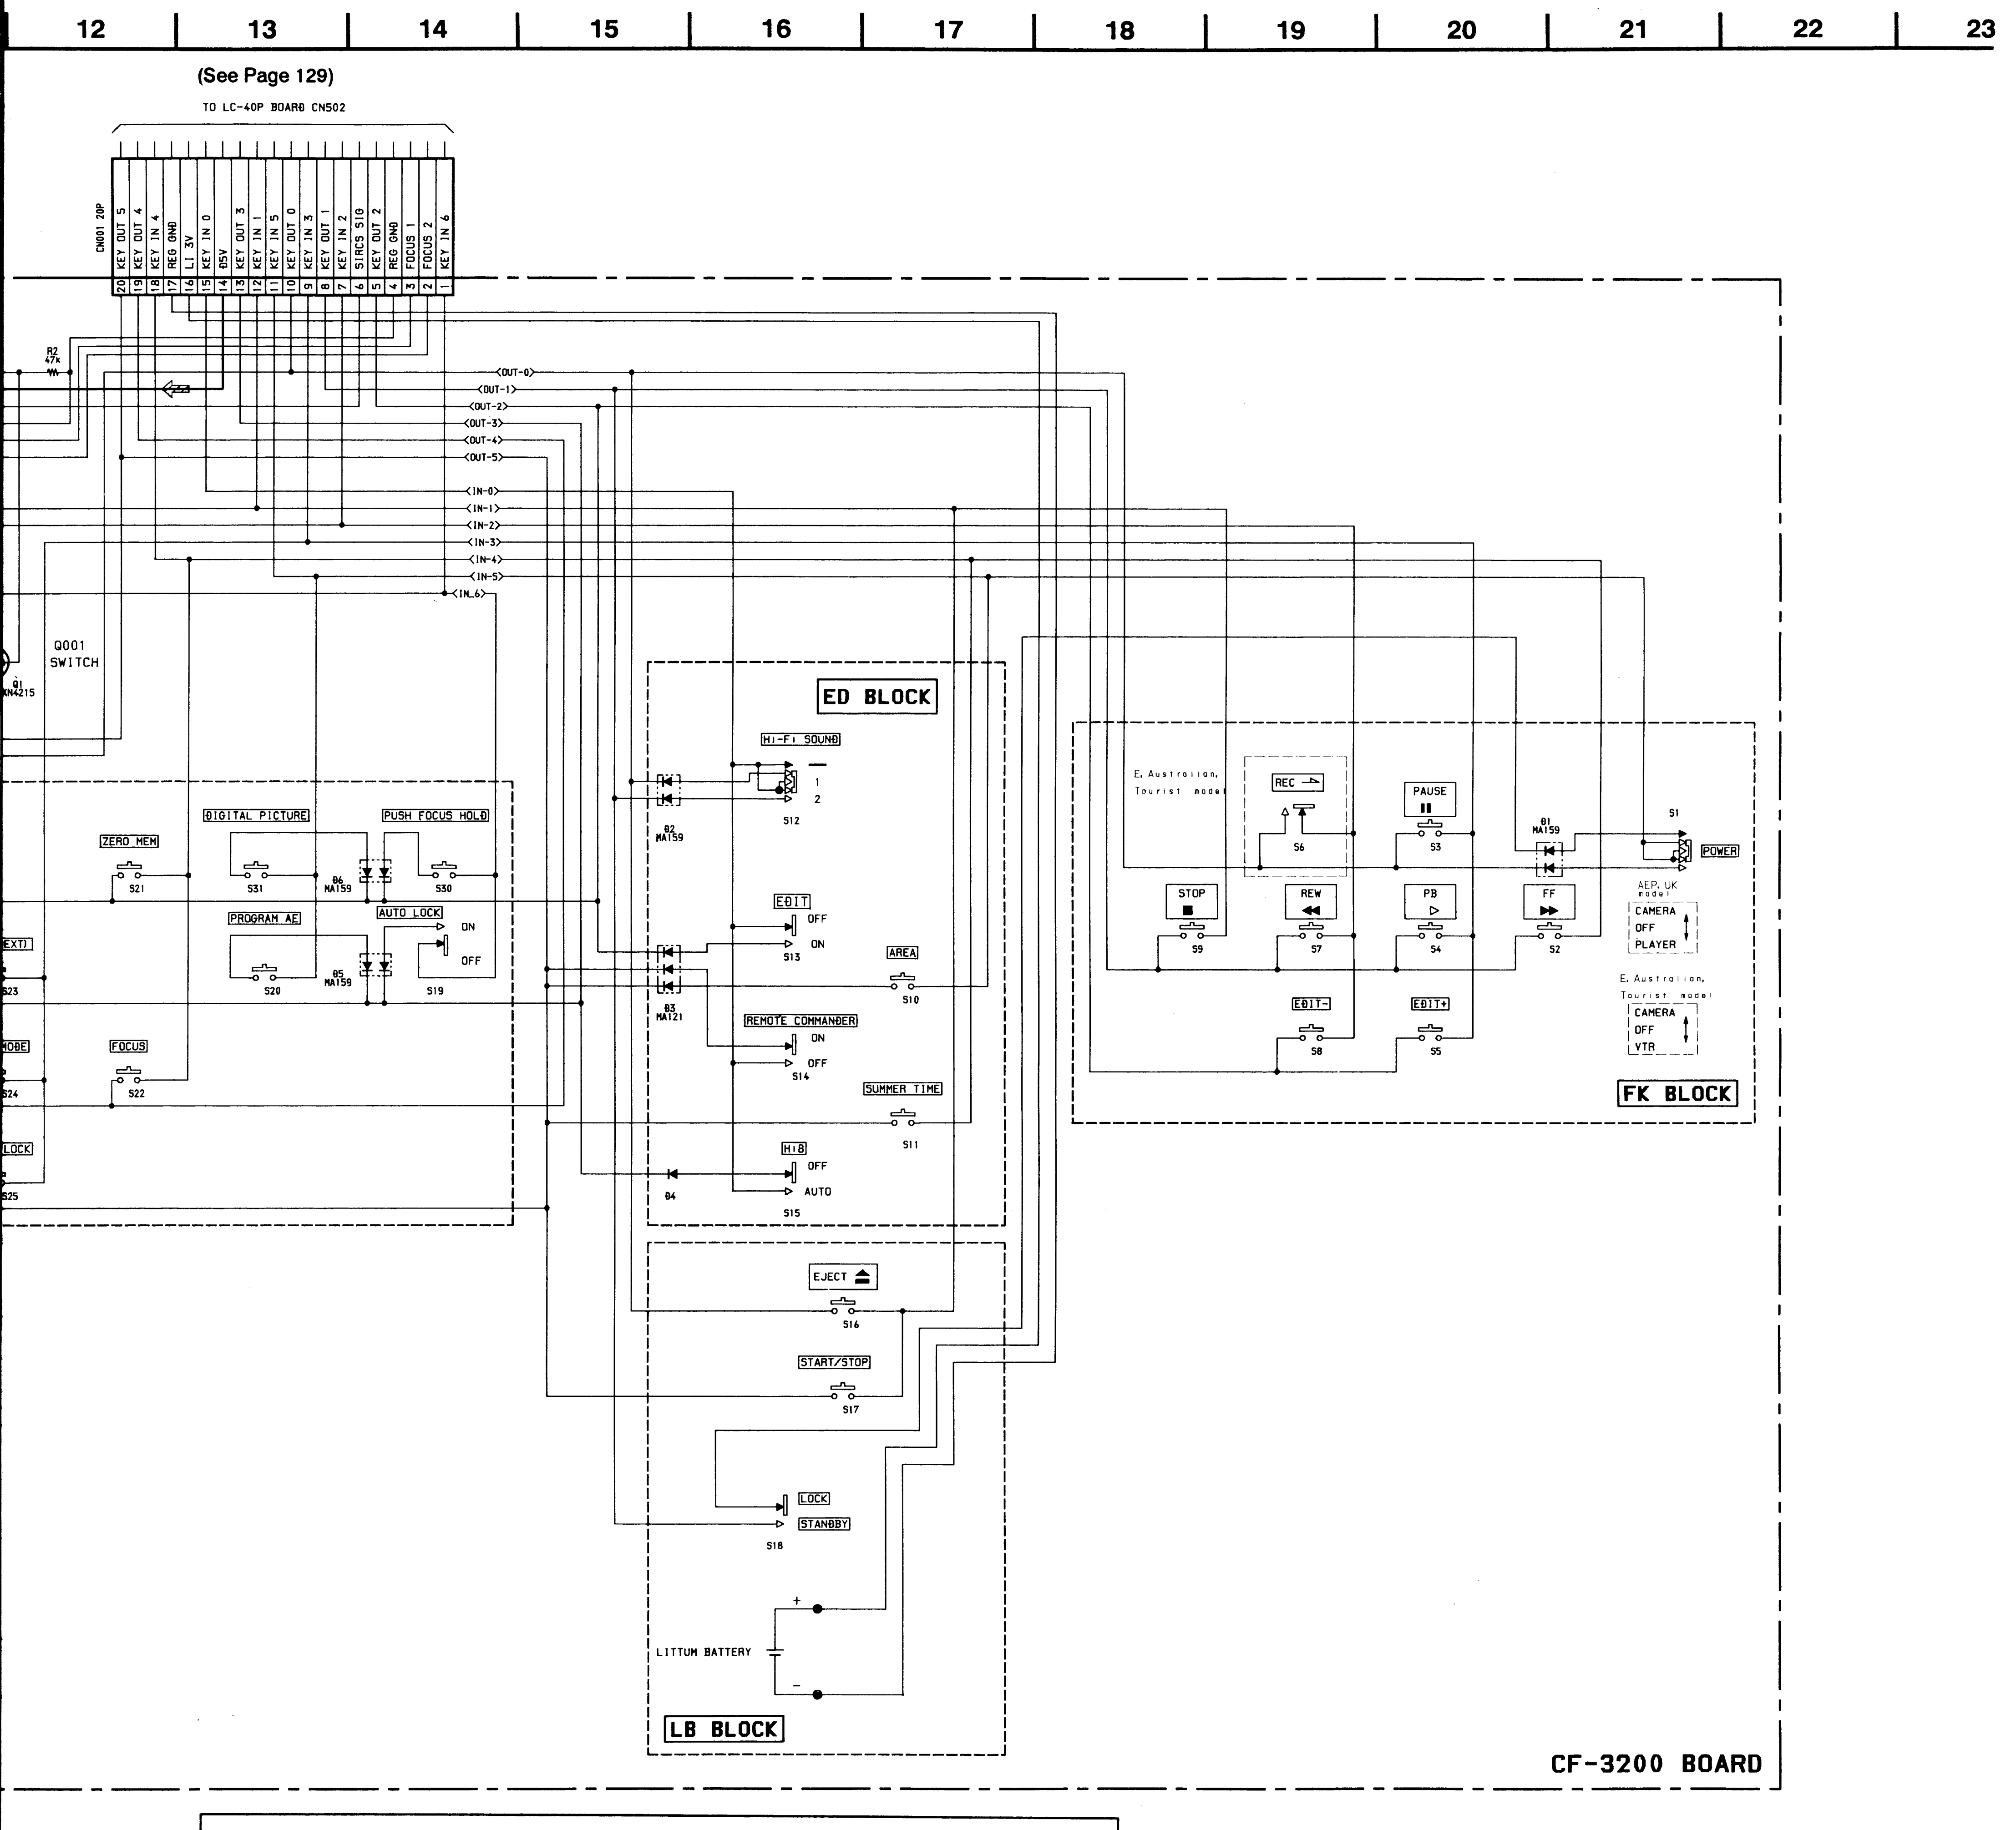
12
13
14
15
16
17
18
19
20
21
22
23
(See Page 129)
TO LC-40P BOARD CN502
CN001 20P
KEY OUT 5
KEY OUT 4
KEY IN 4
REG GND
LI 3V
KEY IN 0
D5V
KEY OUT 3
KEY IN 1
KEY IN 5
KEY OUT 0
KEY IN 3
KEY OUT 1
KEY IN 2
SIRCS SIG
KEY OUT 2
REG GND
FOCUS 1
FOCUS 2
KEY IN 6
20
19
18
17
16
15
14
13
12
11
10
9
8
7
6
5
4
3
2
1
R2
47k
<OUT-0>
<OUT-1>
<OUT-2>
<OUT-3>
<OUT-4>
<OUT-5>
<IN-0>
<IN-1>
<IN-2>
<IN-3>
<IN-4>
<IN-5>
<IN_6>
Q001
SWITCH
Q1
XN4215
ZERO MEM
S21
DIGITAL PICTURE
S31
D6
MA159
PUSH FOCUS HOLD
S30
PROGRAM AE
S20
D5
MA159
AUTO LOCK
ON
OFF
S19
EXT)
S23
MODE
S24
FOCUS
S22
LOCK
S25
ED BLOCK
Hi-Fi SOUND
1
2
S12
D2
MA159
EDIT
OFF
ON
S13
AREA
S10
D3
MA121
REMOTE COMMANDER
ON
OFF
S14
SUMMER TIME
S11
Hi8
OFF
AUTO
S15
D4
EJECT
S16
START/STOP
S17
LOCK
STANDBY
S18
+
LITTUM BATTERY
-
LB BLOCK
E. Australian,
Tourist model
REC
S6
PAUSE
S3
D1
MA159
S1
POWER
STOP
S9
REW
S7
PB
S4
FF
S2
AEP, UK
model
CAMERA
OFF
PLAYER
E. Australian,
Tourist model
CAMERA
OFF
VTR
EDIT-
S8
EDIT+
S5
FK BLOCK
CF-3200 BOARD

MF-175P (FOCUS SWITCH) PRINTED WIRING BOARD

— Ref. No. MF-175P BOARD: 6000 series —

- CF-3200 board is replaced as blocks, so that there PRINTED WIRING BOARDS are omitted.

- **For printed wiring boards.**
- MF-175P board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:

Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

MF-175P BOARD (COMPONENT SIDE)

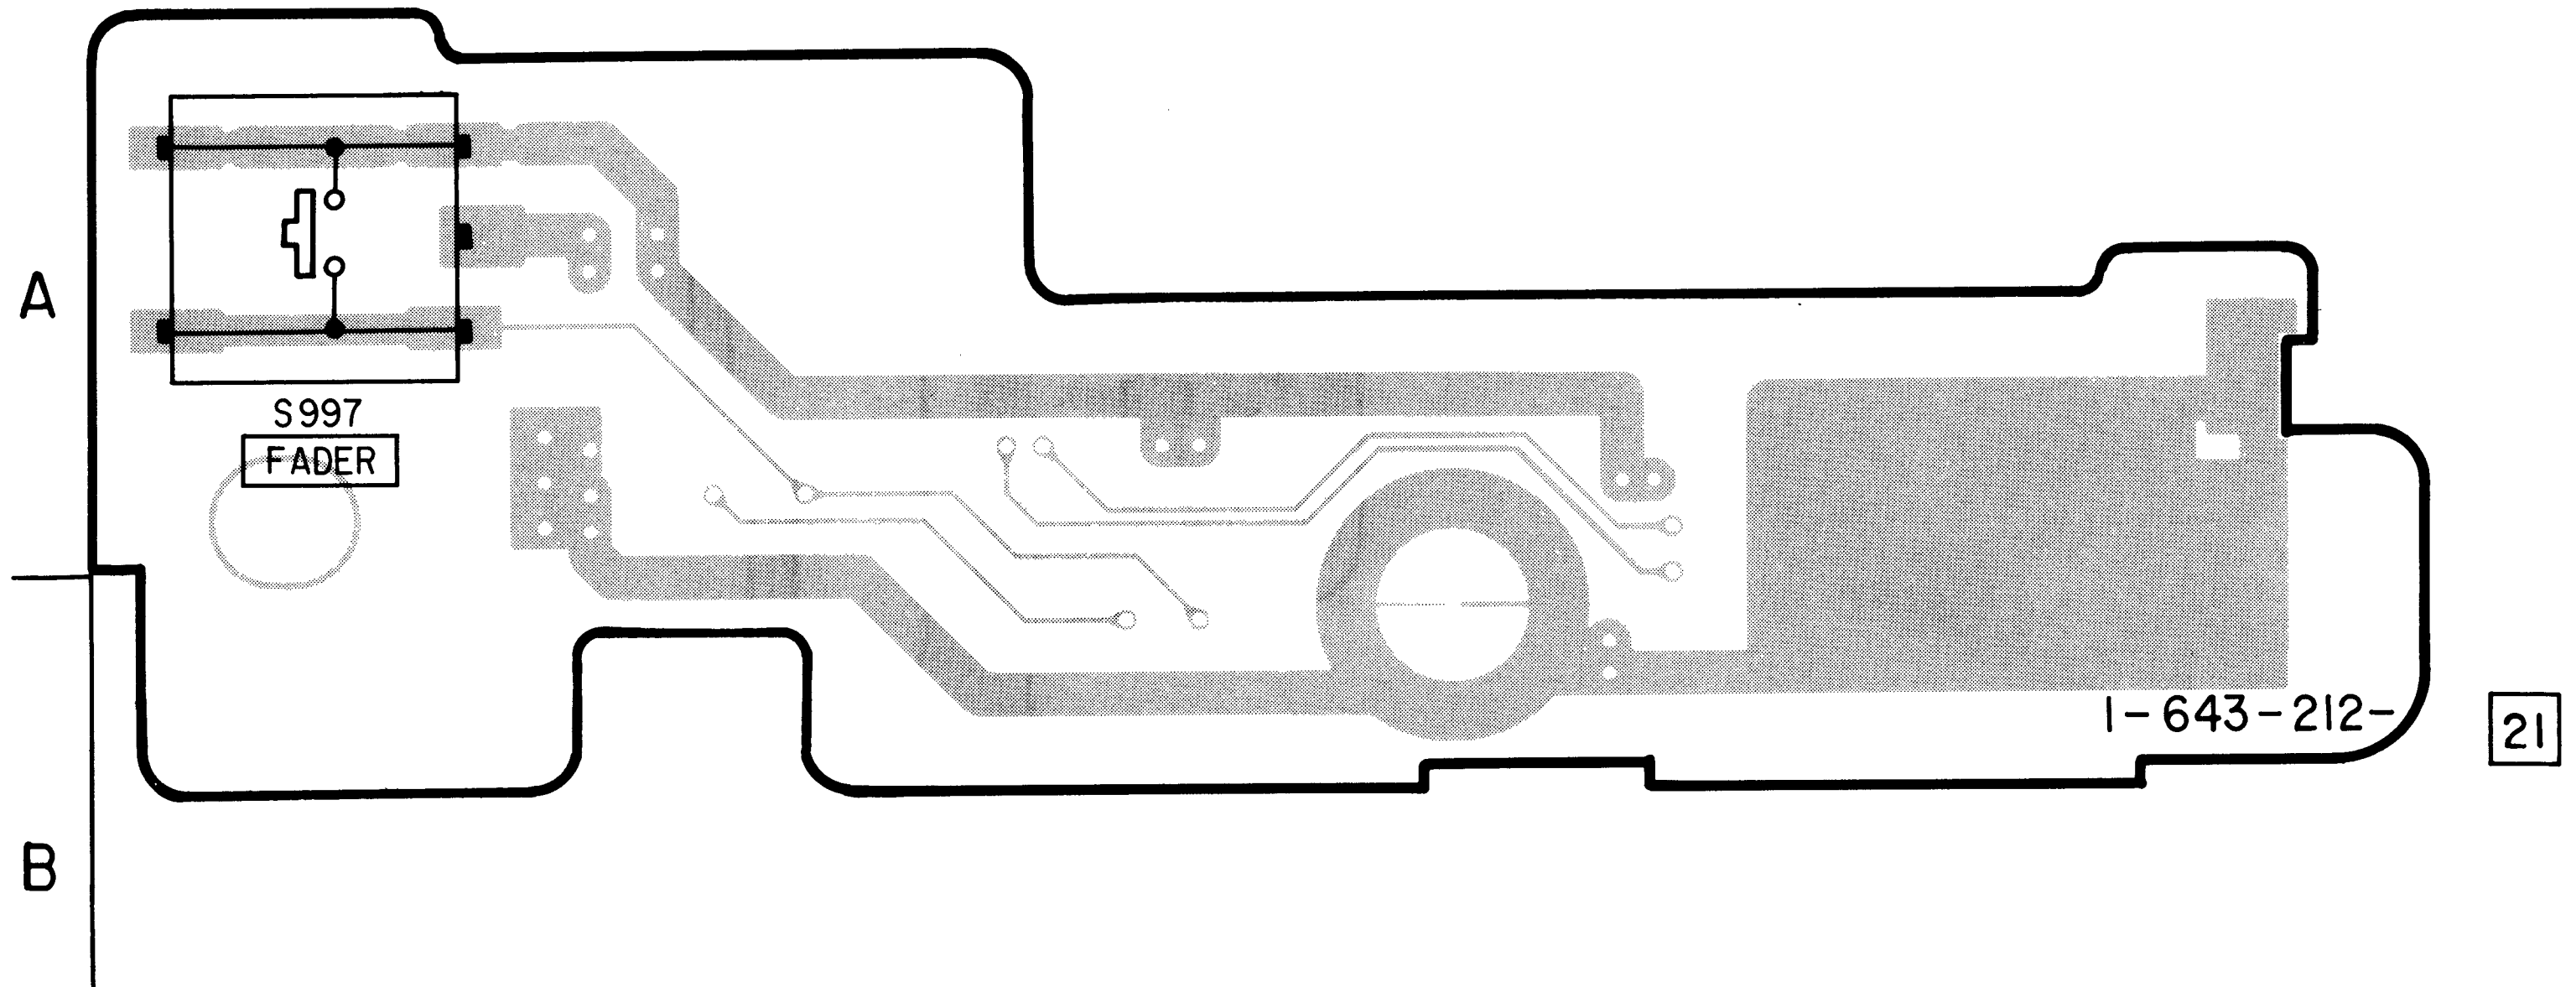
A
S997
FADER
1-643-212-
21
B

MF-175P BOARD (CONDUCTOR SIDE)

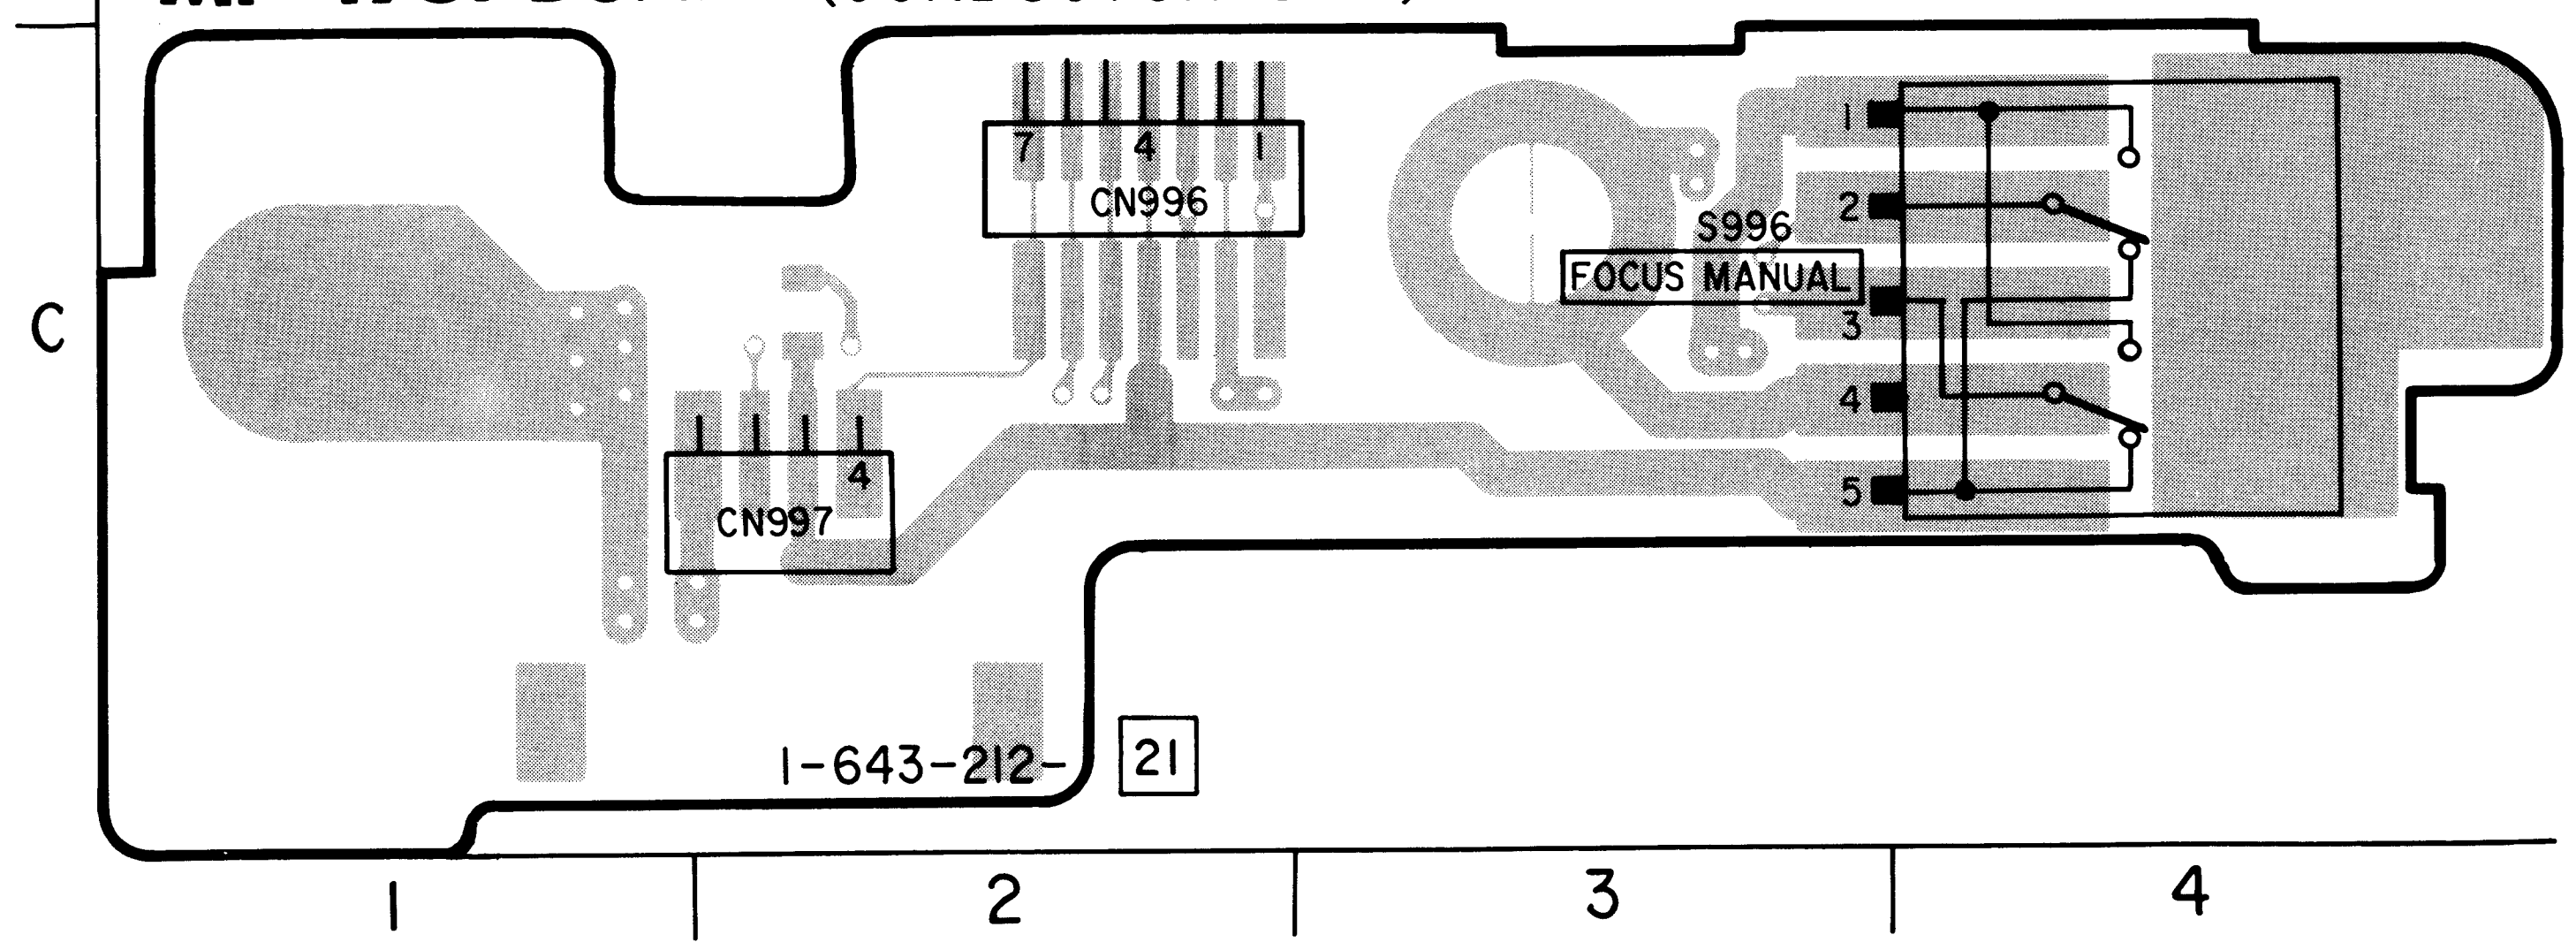
7
4
1
CN996
S996
FOCUS MANUAL
1
2
3
4
5
C
4
CN997
1-643-212-
21
1
2
3
4

LJ-9P (REMOTE CONTROL JACK), FP-115 (TAPE SENSOR) PRINTED WIRING BOARDS

— Ref. No. LJ-9P BOARD: 5000 series, FP-115 BOARD: 8000 series —

- ZM-3200, JK-3100 boards are replaced as blocks, so that there PRINTED WIRING BOARDS are omitted.

< DIODE >

D973	8-719-988-62	DIODE	1SS355

LJ-9P BOARD
(COMPONENT SIDE)

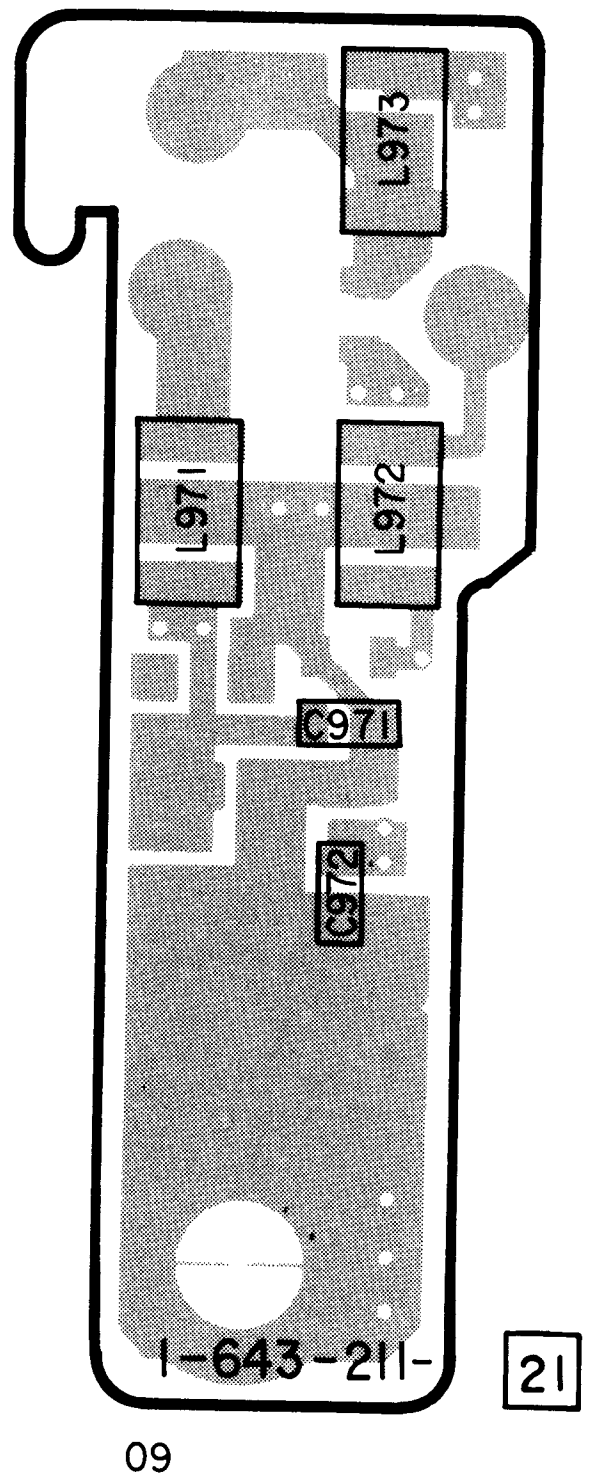
L973
L971
L972
C971
C972
1-643-211-
21
09

LJ-9P BOARD
(CONDUCTOR SIDE)

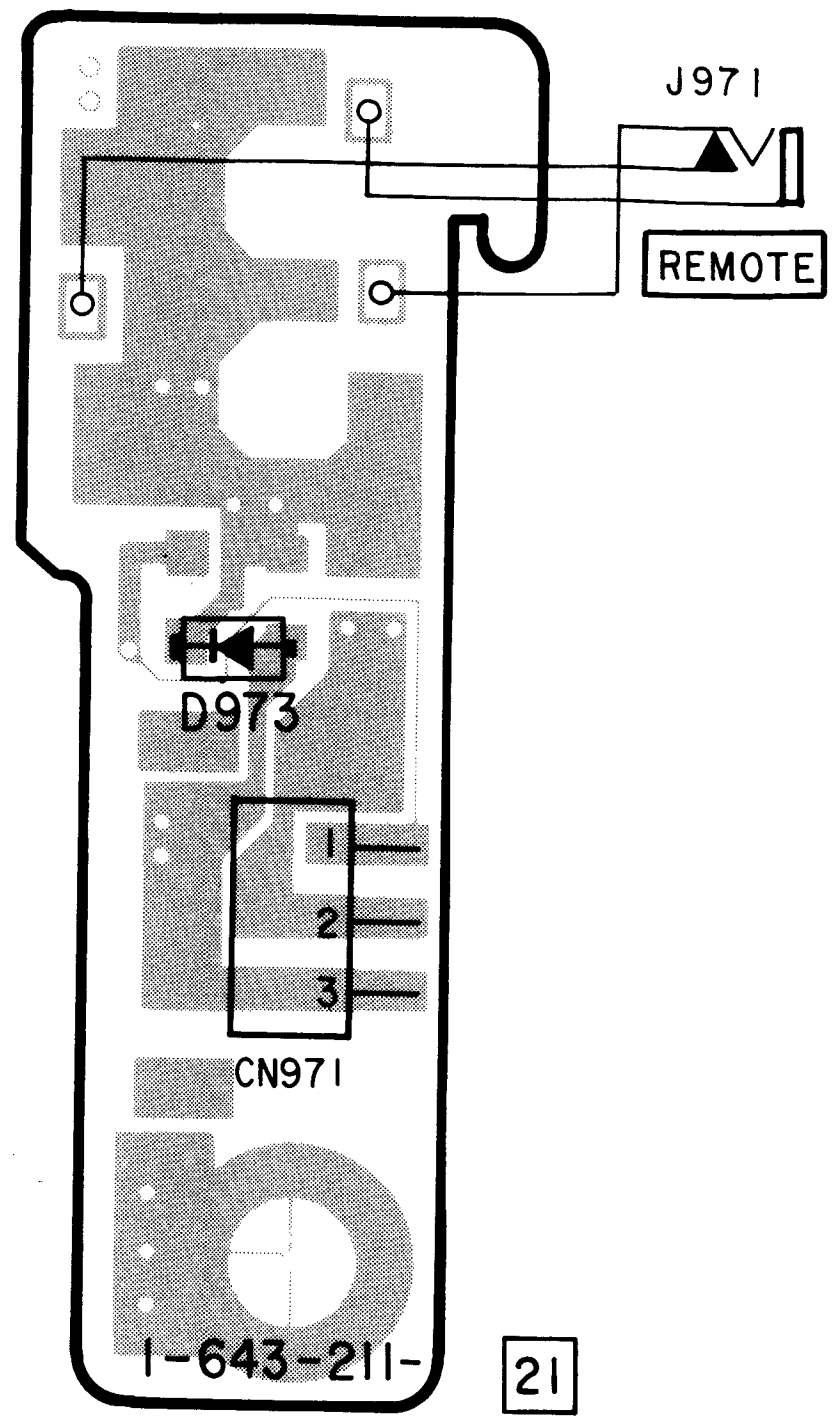
J971
REMOTE
D973
1
2
3
CN971
1-643-211-
21

FP-115 BOARD
(COMPONENT SIDE)

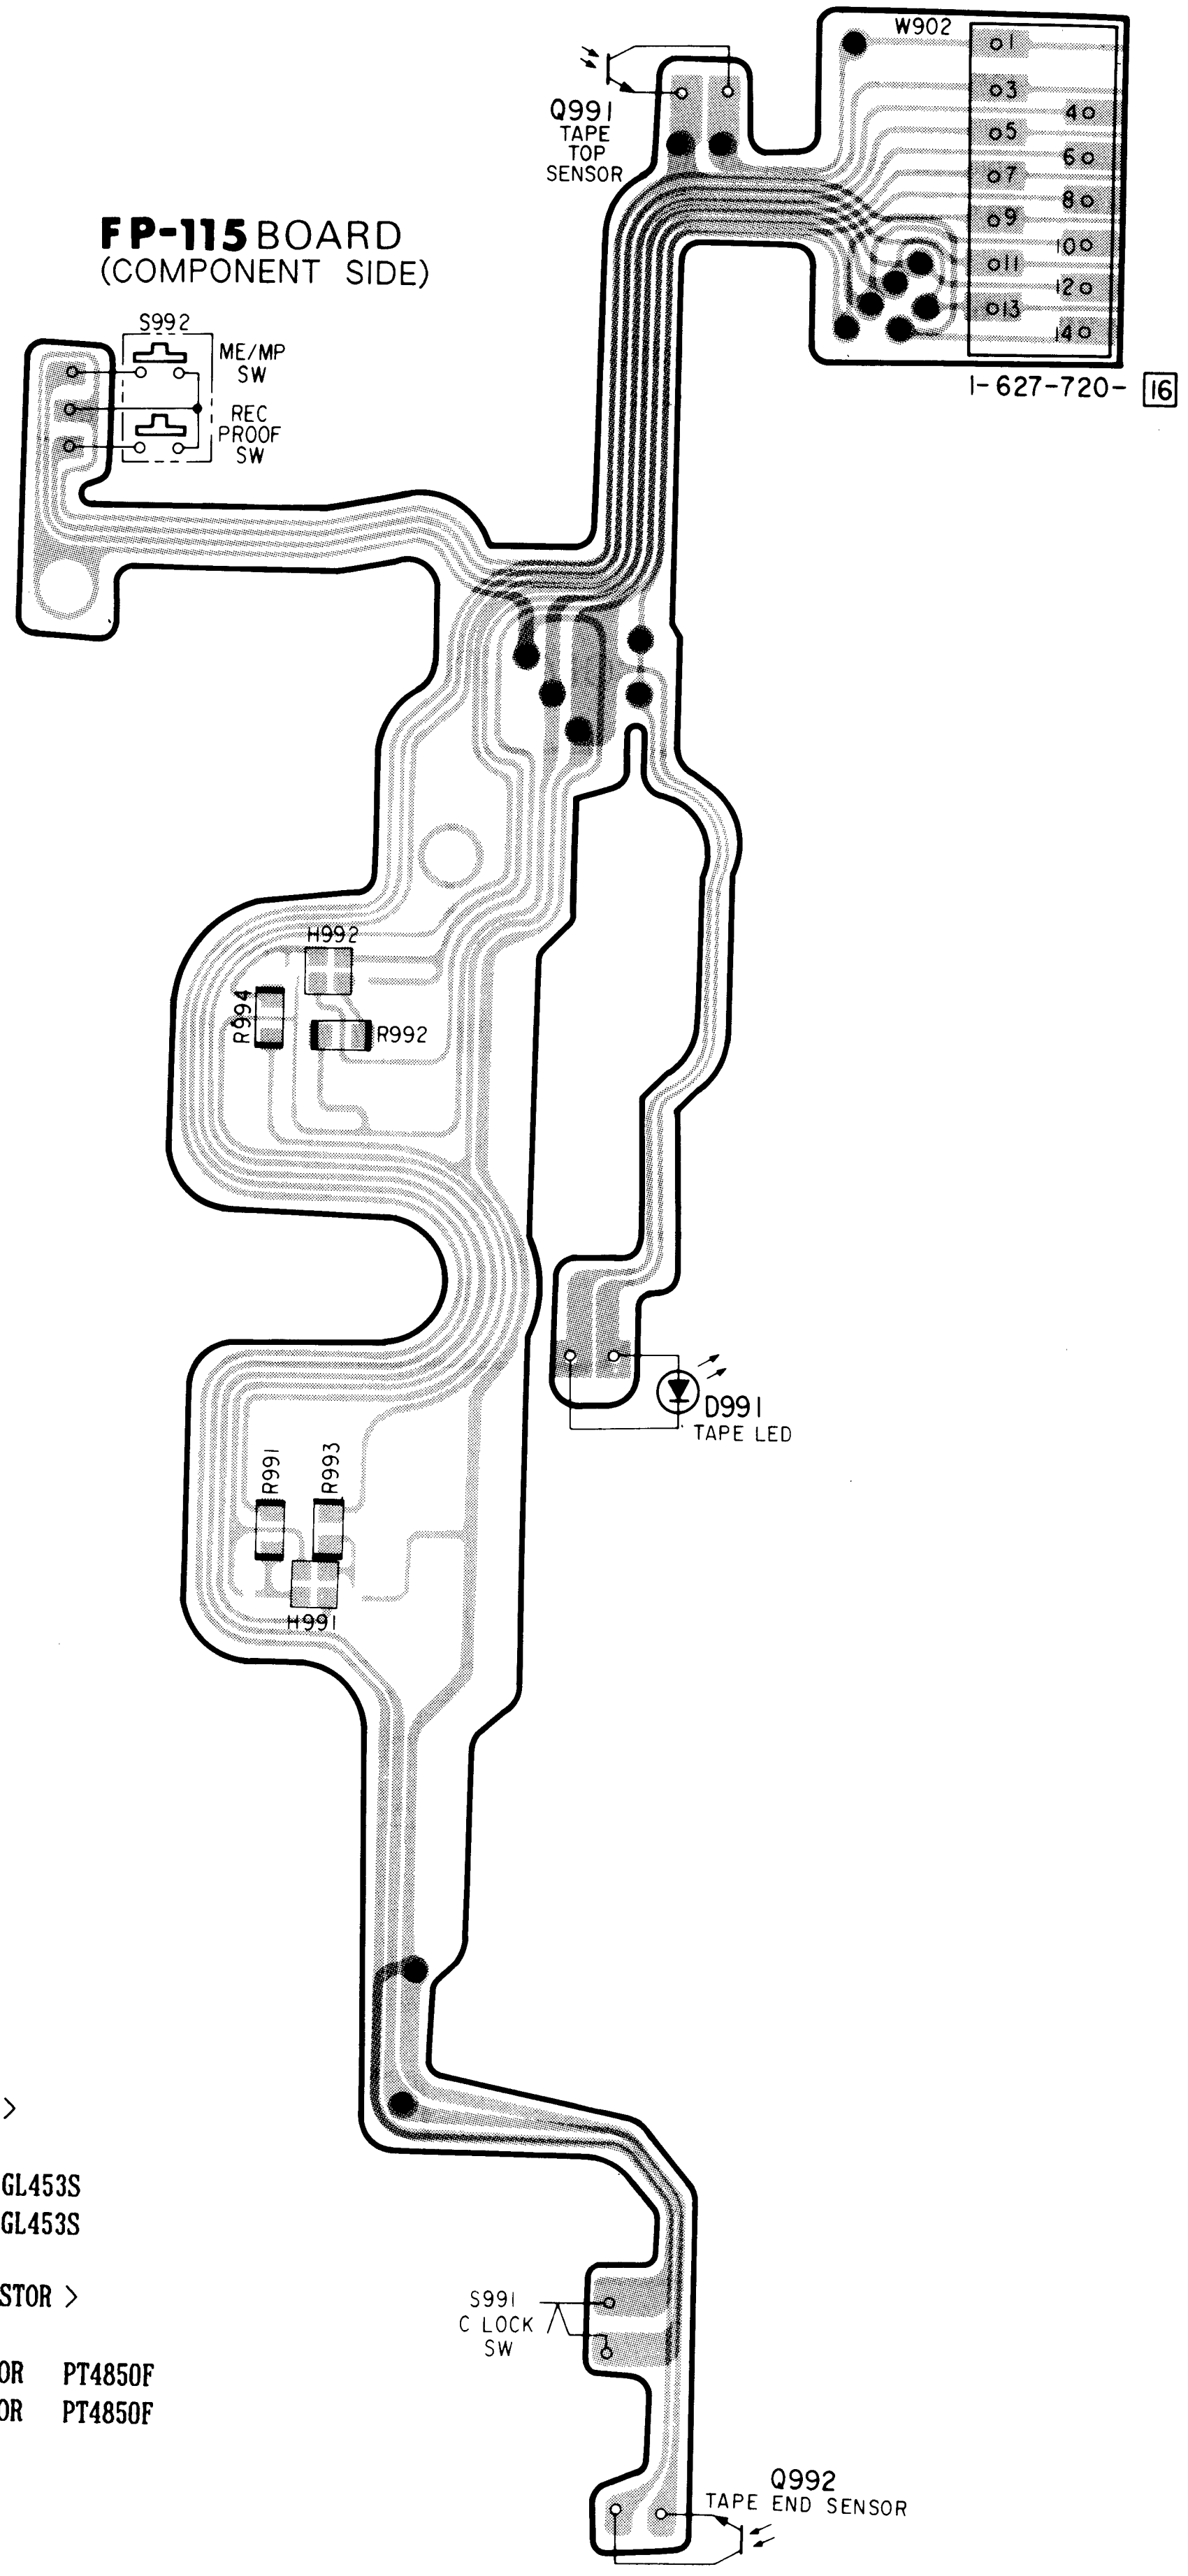
W902
Q991
TAPE TOP SENSOR
S992
ME/MP SW
REC PROOF SW
1
3
5
7
9
11
13
4
6
8
10
12
14
1-627-720-
16
H992
R994
R992
D991
TAPE LED
R991
R993
H991
S991
C LOCK SW
Q992
TAPE END SENSOR

- **For printed wiring boards.**
- LJ-9P board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

< DIODE >

D991	8-719-988-42	DIODE	GL453S
D992	8-719-988-42	DIODE	GL453S

< TRANSISTOR >

Q991	8-729-907-25	TRANSISTOR	PT4850F
Q992	8-729-907-25	TRANSISTOR	PT4850F

LJ-9P (REMOTE CONTROL JACK), FP-115 (TAPE SENSOR), ZM-3200 (ZOOM SWITCH), JK-3100 (VIDEO/AUDIO JACK) SCHEMATIC DIAGRAMS

— Ref. No. LJ-9P BOARD: 5000 series, FP-115 BOARD: 8000 series —

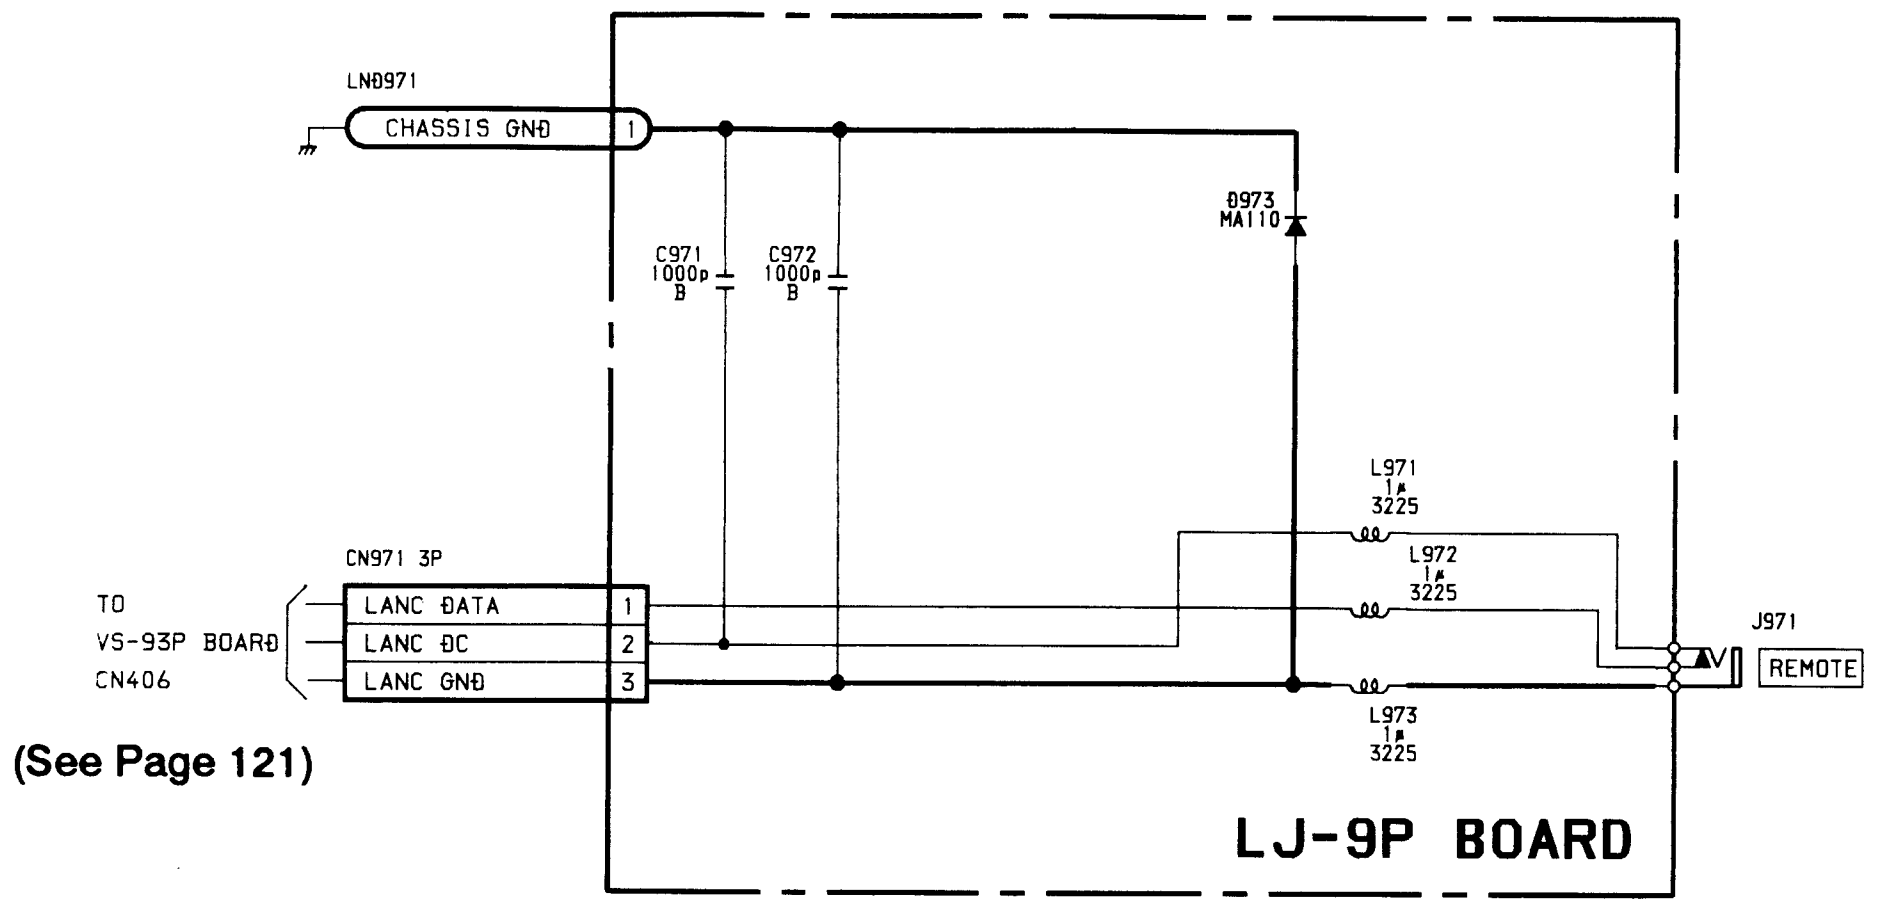
LND971
CHASSIS GND
1
C971
1000p
B
C972
1000p
B
D973
MA110
L971
1µ
3225
L972
1µ
3225
L973
1µ
3225
CN971 3P
TO
VS-93P BOARD
CN406
LANC DATA 1
LANC DC 2
LANC GND 3
J971
REMOTE
(See Page 121)
LJ-9P BOARD

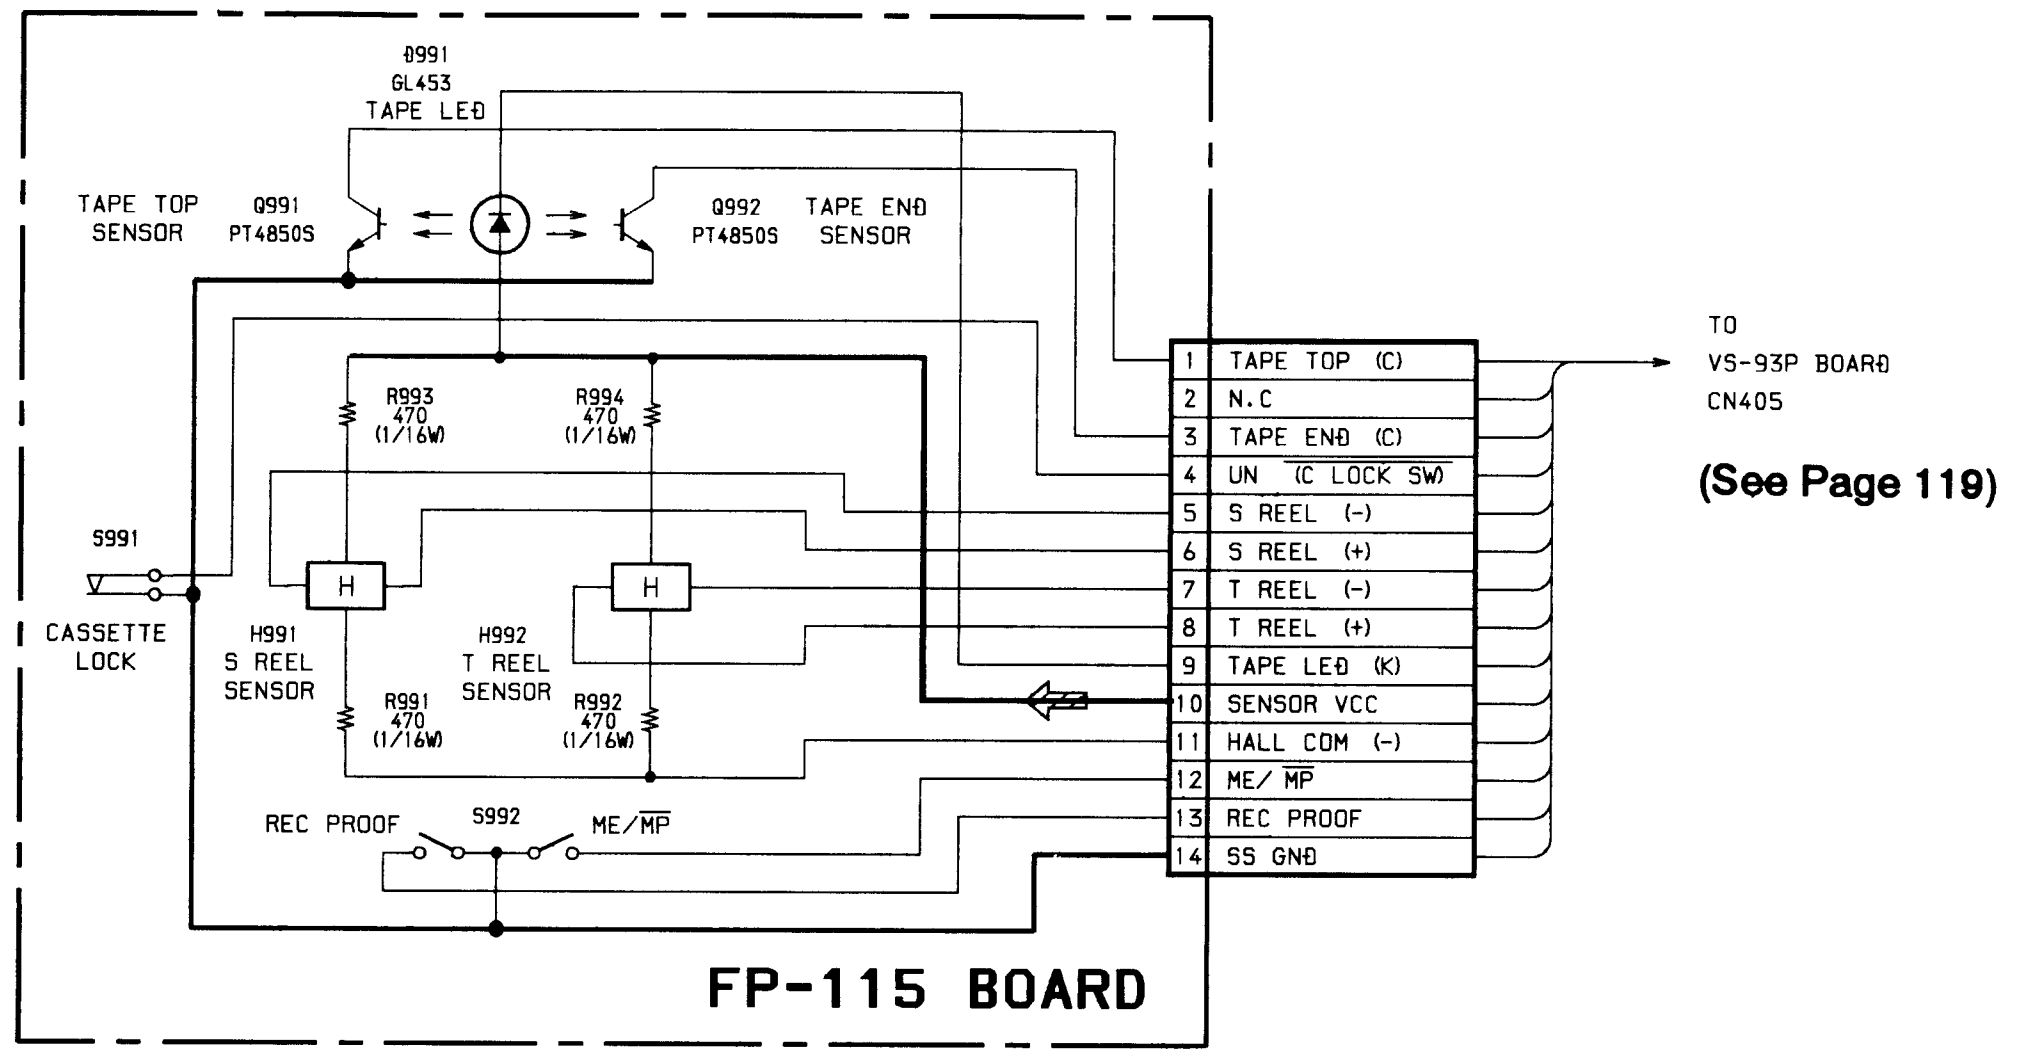
D991
GL453
TAPE LED
TAPE TOP
SENSOR
Q991
PT4850S
Q992
PT4850S
TAPE END
SENSOR
R993
470
(1/16W)
R994
470
(1/16W)
S991
CASSETTE
LOCK
H991
S REEL
SENSOR
H992
T REEL
SENSOR
R991
470
(1/16W)
R992
470
(1/16W)
H
H
REC PROOF
S992
ME/MP
1 TAPE TOP (C)
2 N.C
3 TAPE END (C)
4 UN (C LOCK SW)
5 S REEL (-)
6 S REEL (+)
7 T REEL (-)
8 T REEL (+)
9 TAPE LED (K)
10 SENSOR VCC
11 HALL COM (-)
12 ME/ MP
13 REC PROOF
14 SS GND
TO
VS-93P BOARD
CN405
(See Page 119)
FP-115 BOARD

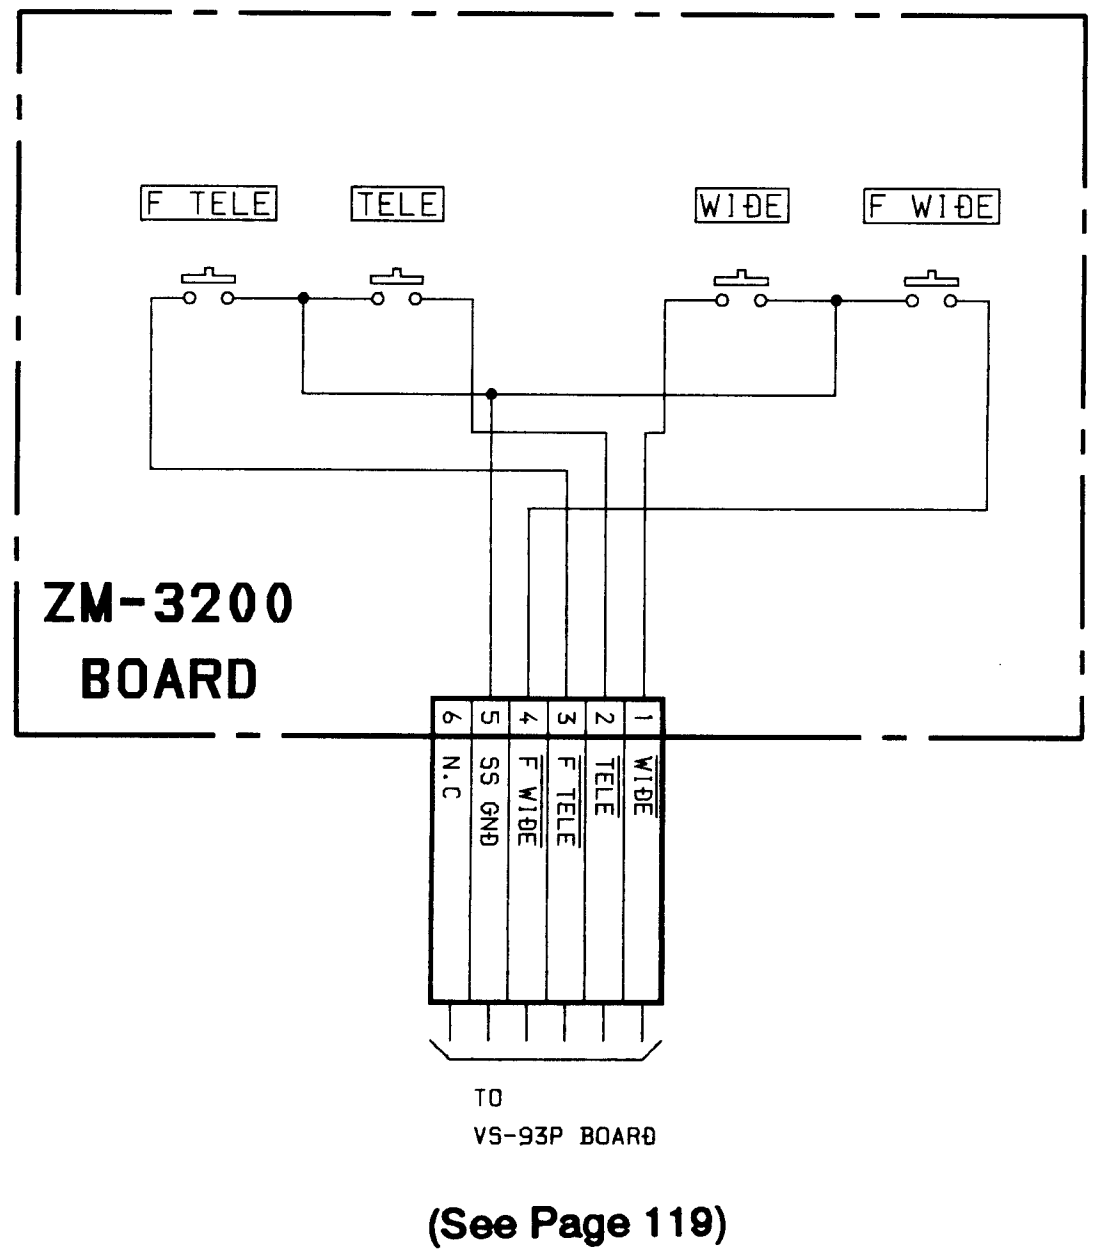
F TELE
TELE
WIDE
F WIDE
ZM-3200
BOARD
1 WIDE
2 TELE
3 F TELE
4 F WIDE
5 SS GND
6 N.C
TO
VS-93P BOARD
(See Page 119)

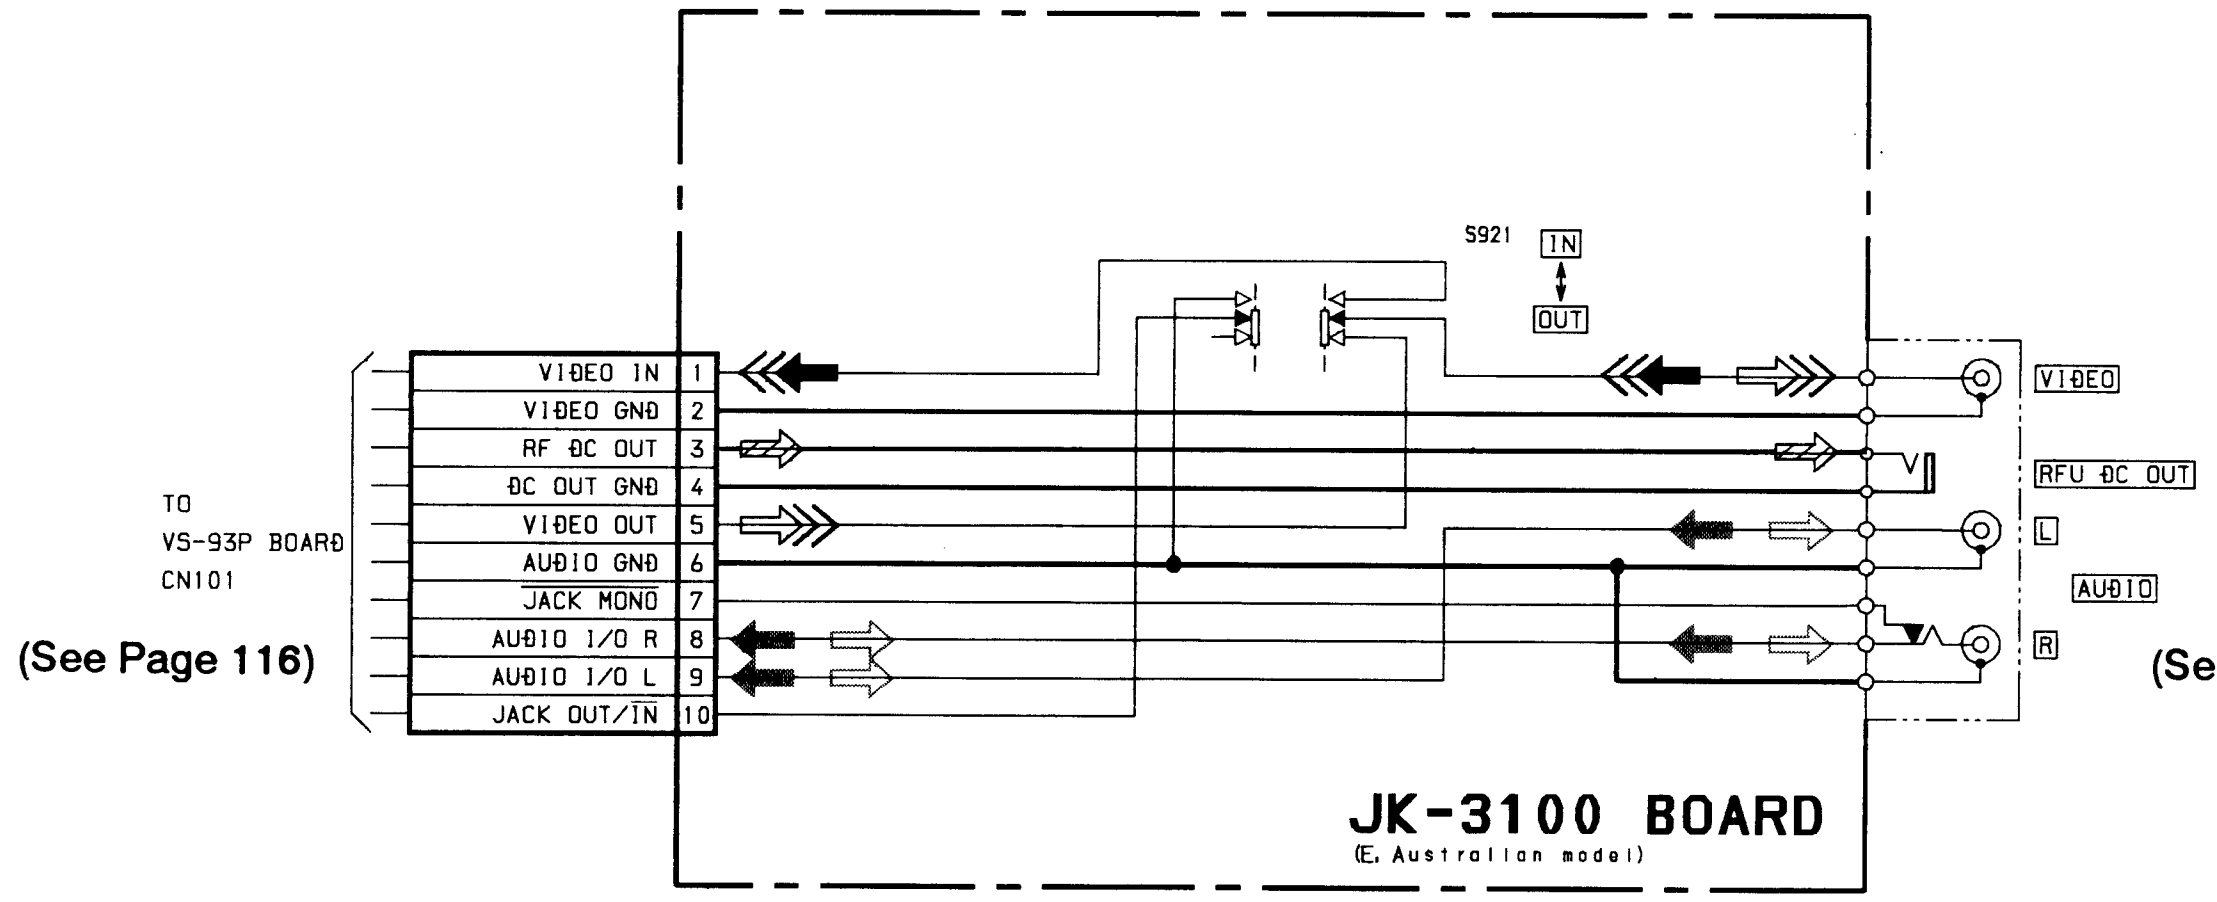
TO
VS-93P BOARD
CN101
(See Page 116)
VIDEO IN 1
VIDEO GND 2
RF DC OUT 3
DC OUT GND 4
VIDEO OUT 5
AUDIO GND 6
JACK MONO 7
AUDIO I/O R 8
AUDIO I/O L 9
JACK OUT/IN 10
S921
IN
OUT
VIDEO
RFU DC OUT
L
AUDIO
R
JK-3100 BOARD
(E, Australian model)

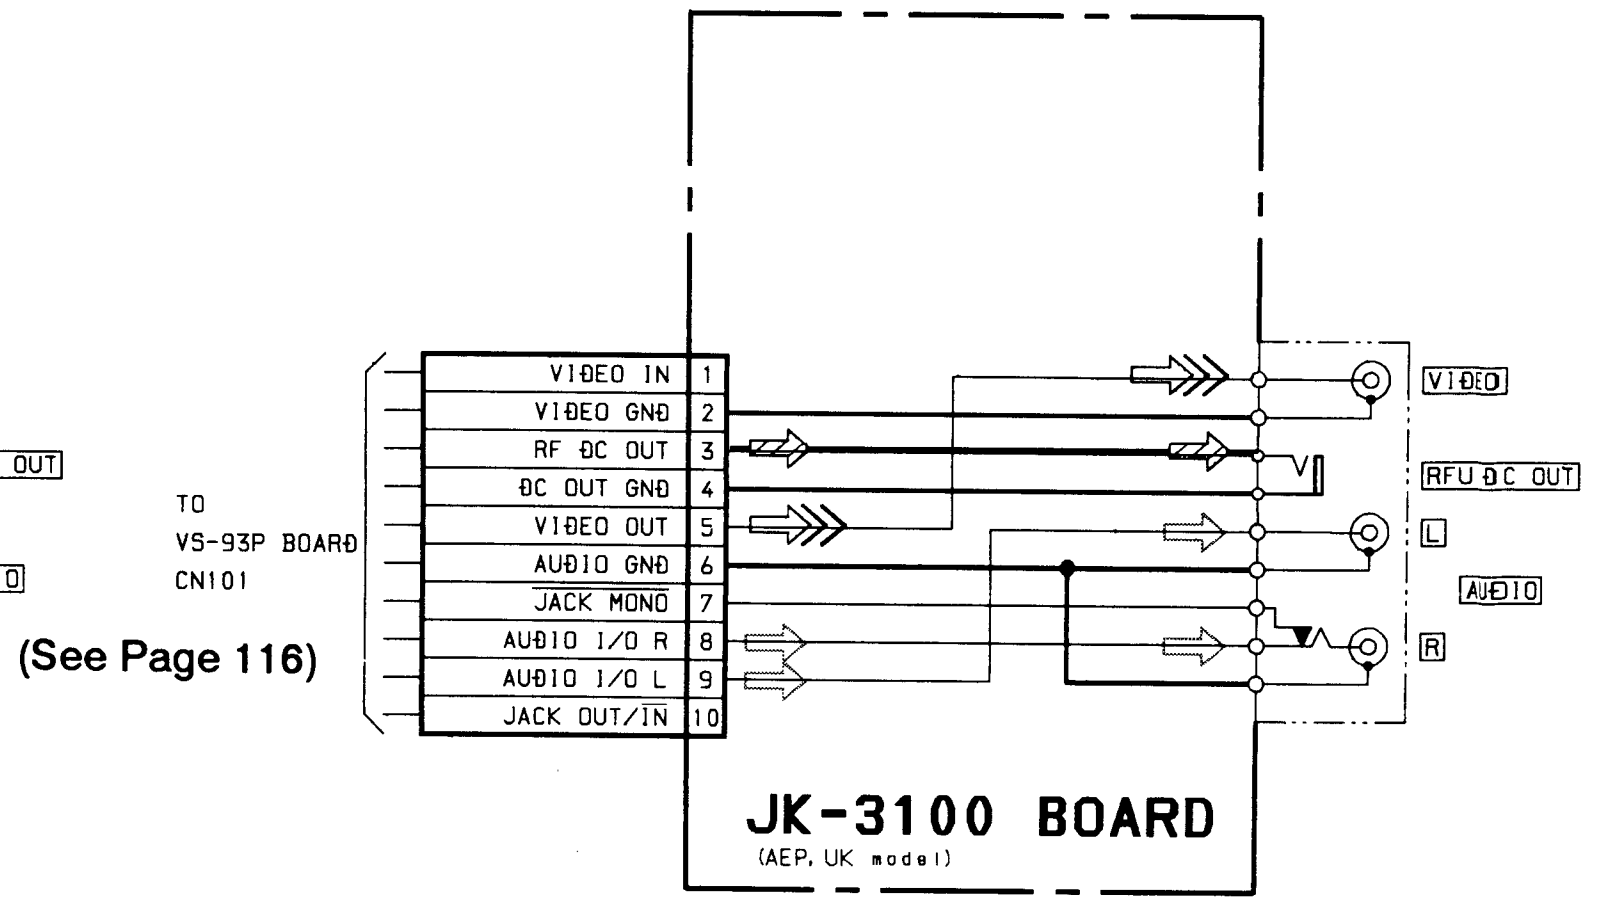
TO
VS-93P BOARD
CN101
(See Page 116)
VIDEO IN 1
VIDEO GND 2
RF DC OUT 3
DC OUT GND 4
VIDEO OUT 5
AUDIO GND 6
JACK MONO 7
AUDIO I/O R 8
AUDIO I/O L 9
JACK OUT/IN 10
VIDEO
RFU DC OUT
L
AUDIO
R
JK-3100 BOARD
(AEP, UK model)

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC			➡≫	➡
PB			⇨≫	⇨

AU-135P (AUDIO), MA-143P (MIC AMP) PRINTED WIRING BOARDS

— Ref. No. AU-135P BOARD: 1000 series, MA-143P BOARD: 5000 series —

- **For printed wiring boards.**
- AU-135P, MA-143P boards are the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

< IC >

IC601	8-759-823-19	IC	CXA1488RR
IC602	8-759-823-19	IC	CXA1488RR
IC603	8-759-823-21	IC	CXA1536QQ
IC604	8-759-509-05	IC	XRU4066BF

< TRANSISTOR >

Q601	8-729-823-00	TRANSISTOR	2SA1622-5. 6. 7
Q603	8-729-402-81	TRANSISTOR	XN4501
Q604	8-729-402-81	TRANSISTOR	XN4501
Q605	8-729-905-18	TRANSISTOR	DTC144EU
Q606	8-729-402-81	TRANSISTOR	XN4501

< DIODE >

D551	8-719-404-46	DIODE	MA110
D552	8-719-404-46	DIODE	MA110

< IC >

IC551	8-759-062-23	IC	CXA-1618N-E2
IC552	8-741-100-63	IC	SBX1619-51
IC553	8-759-998-98	IC	LM358D

< TRANSISTOR >

Q551	8-729-010-80	TRANSISTOR	FC13
Q555	8-729-822-97	TRANSISTOR	2SC4211-5. 6. 7

AU-135P BOARD (COMPONENT SIDE)

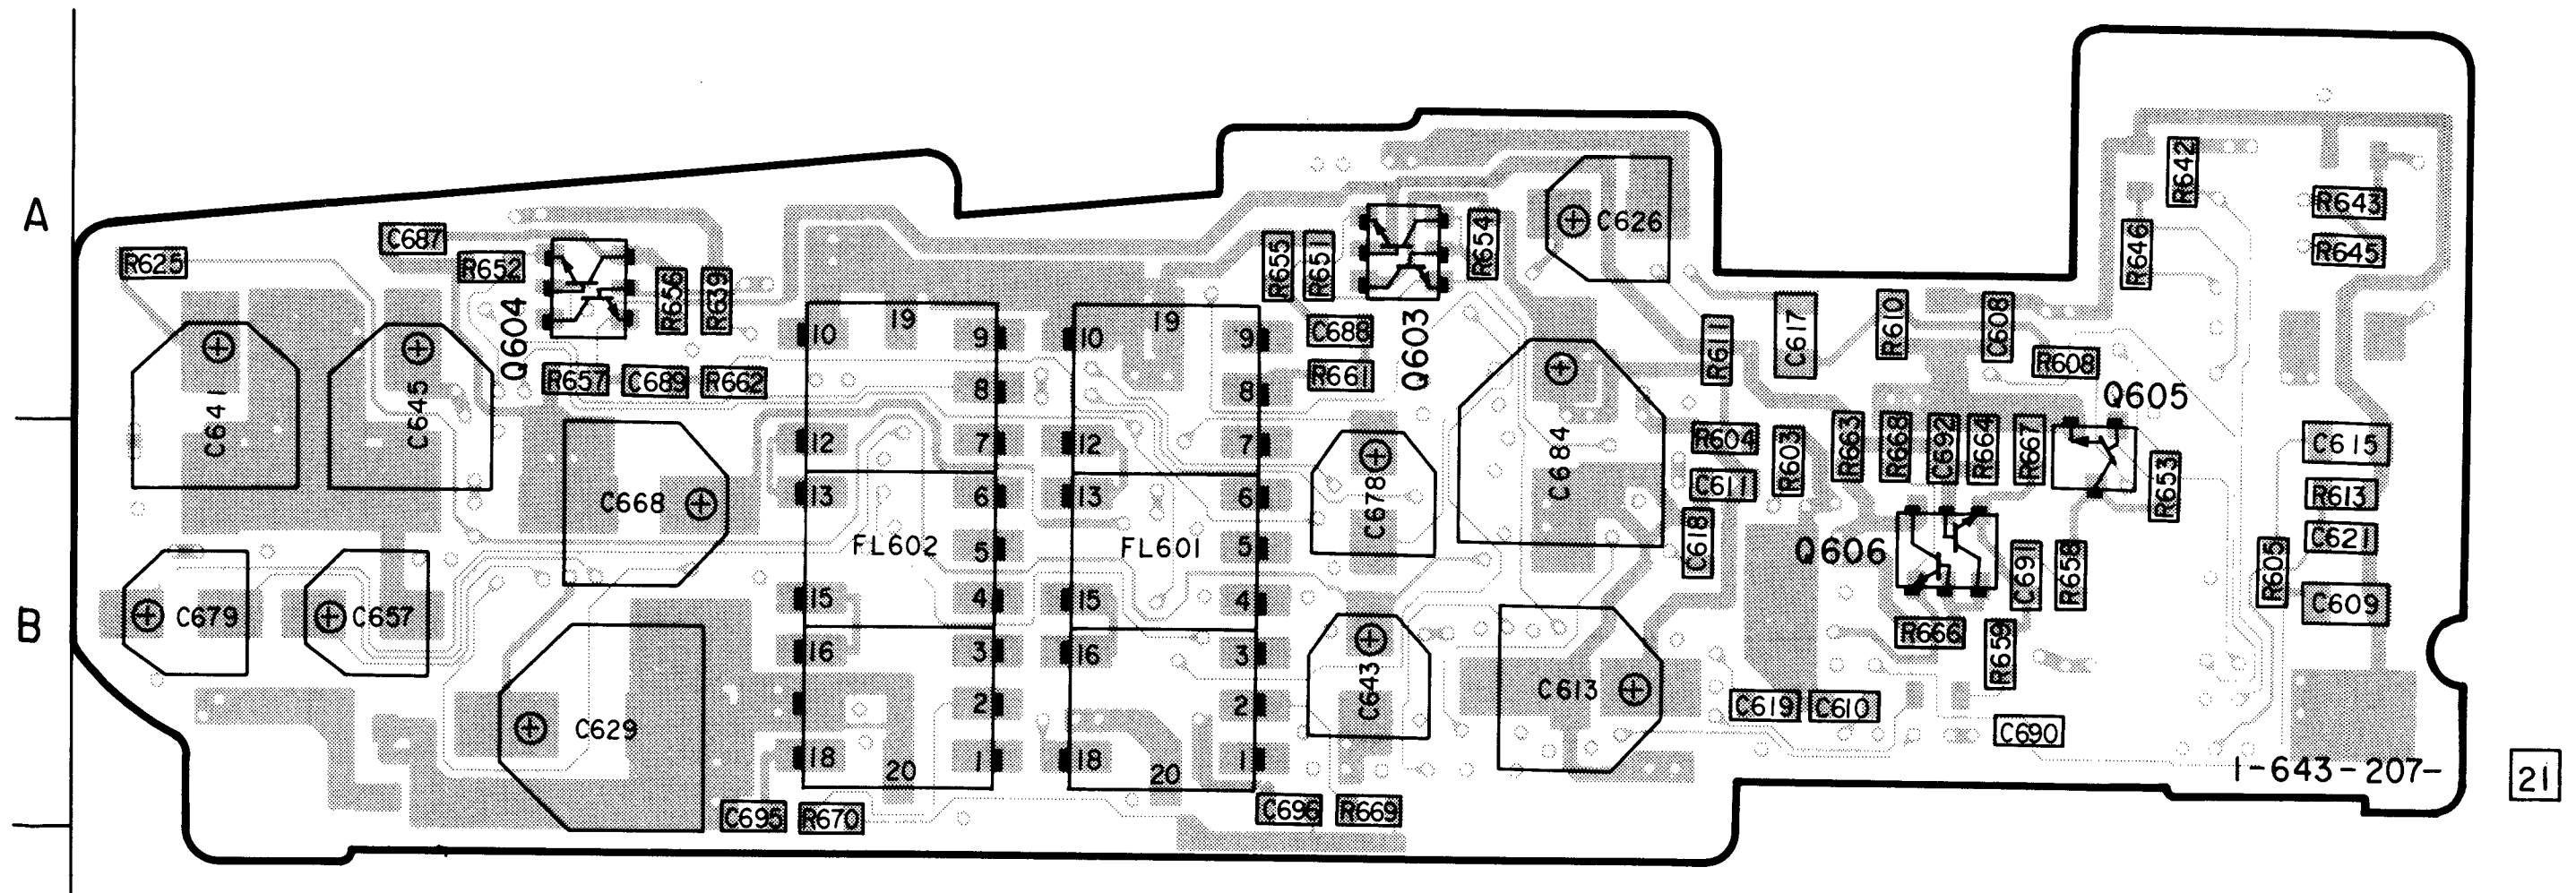
A
B
R625
C687
R652
Q604
C641
C645
C679
C657
C668
C629
R657
C689
R662
FL602
FL601
C695
R670
Q603
C688
R661
C678
C643
C684
C626
C613
C696
R669
R611
C617
R610
C608
R608
R604
C611
C618
R603
R663
R668
C692
R664
R667
R653
Q605
Q606
C691
R658
R666
R659
C619
C610
C690
R646
R642
R643
R645
C615
R613
C621
R605
C609
1-643-207-
21

AU-135P BOARD (CONDUCTOR SIDE)

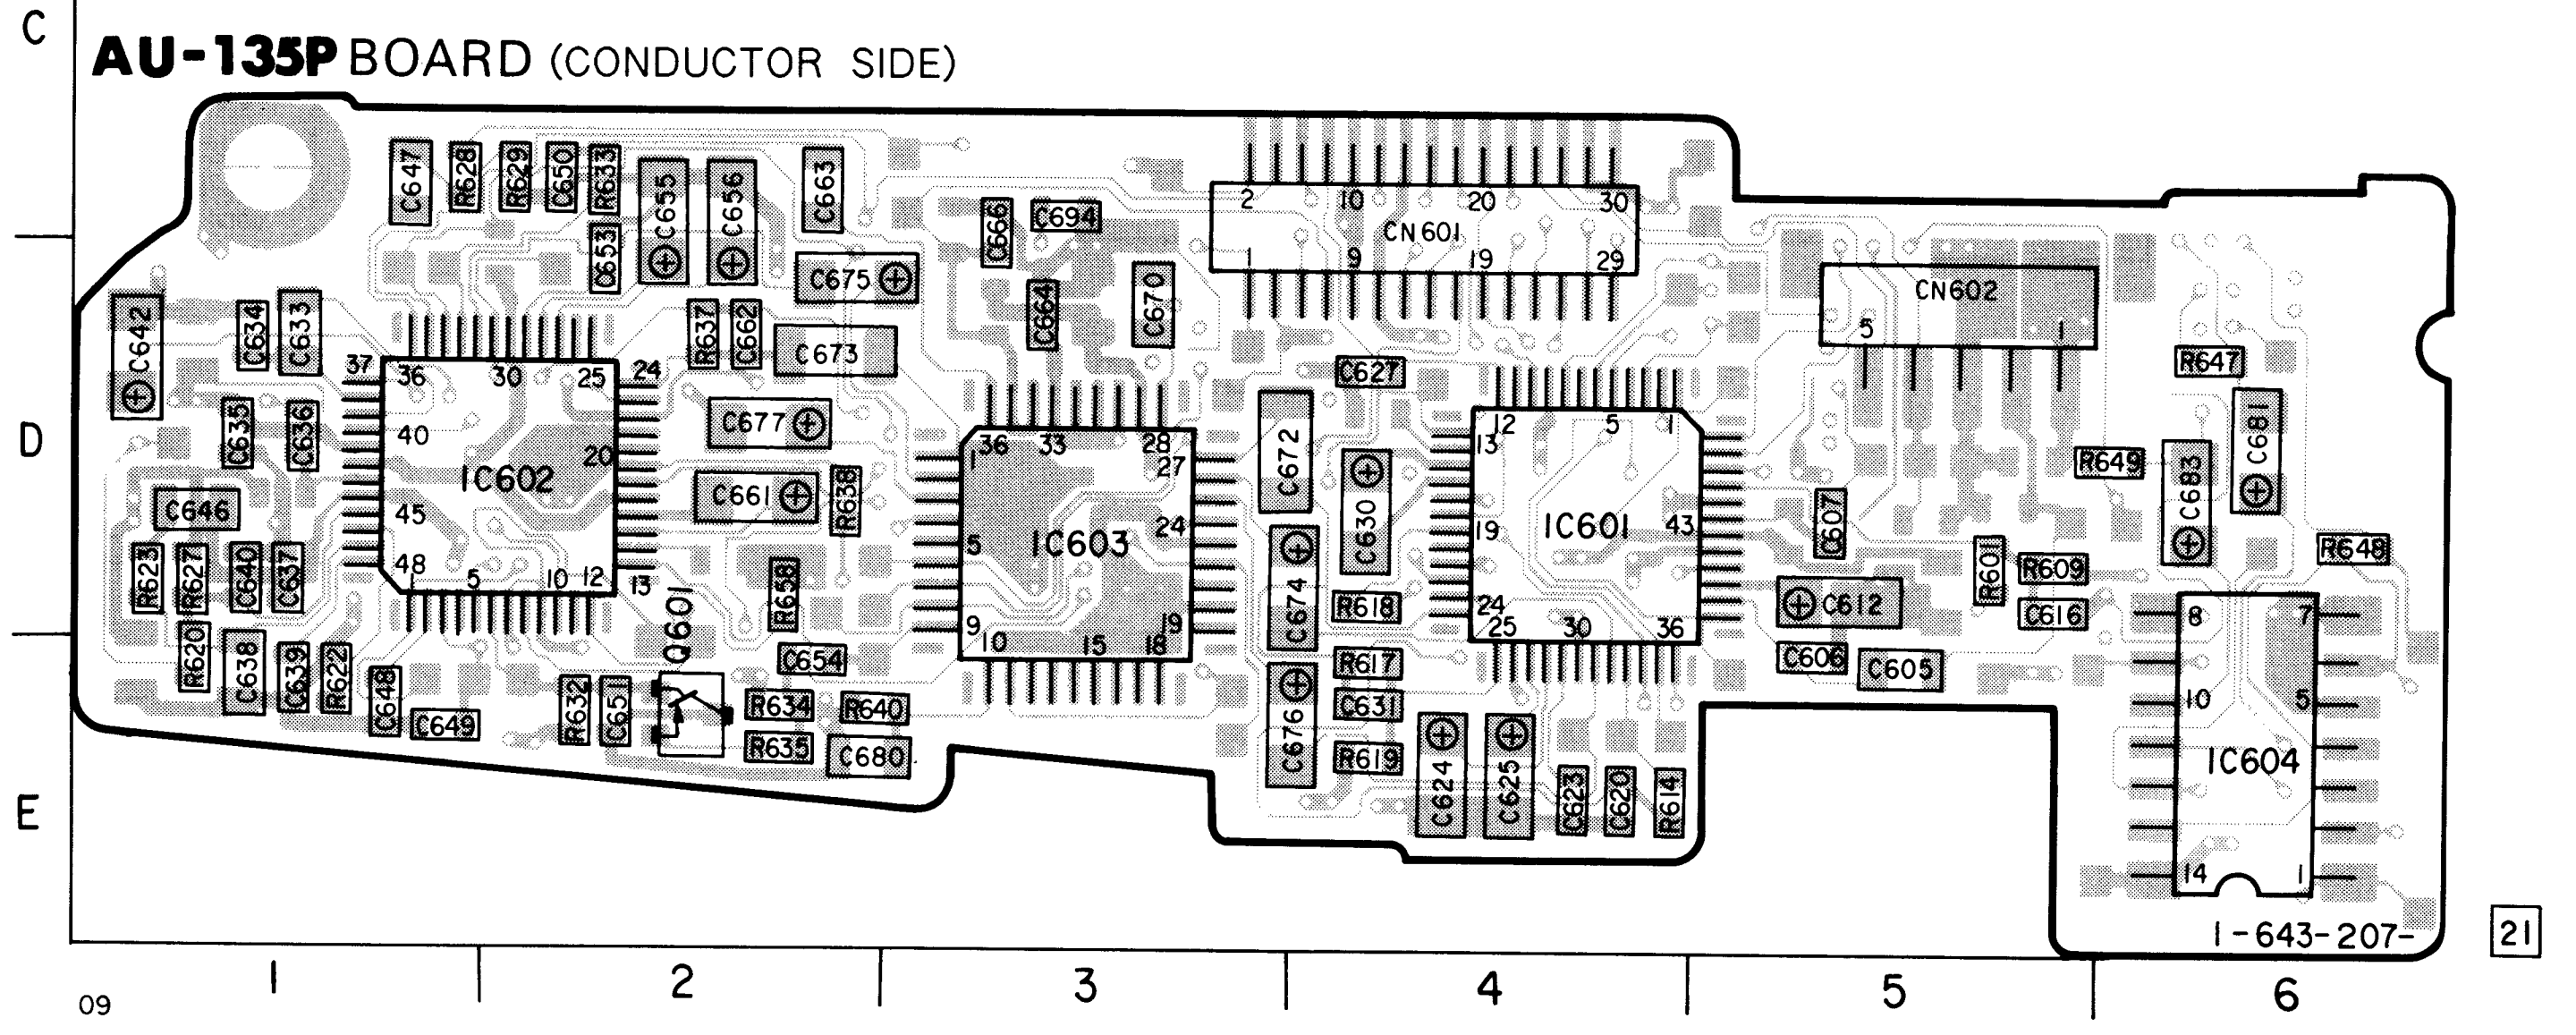
C
D
E
C647
R628
R629
C650
R633
C653
C655
C656
C663
C675
C666
C694
C670
CN601
2
10
20
30
1
9
19
29
CN602
5
1
C642
C634
C633
C635
C636
C646
R623
R627
C640
C637
R620
C638
C639
R622
C648
C649
IC602
37
36
30
25
24
40
45
48
5
10
12
13
20
R637
C662
C673
C677
C661
R638
R658
Q601
C654
R632
C651
R634
R640
R635
C680
C664
IC603
36
33
28
27
24
19
18
15
10
9
1
5
C627
C672
C630
C674
R618
R617
C631
C676
R619
C624
C625
C623
C620
R614
IC601
12
13
19
24
25
30
36
43
C607
R601
R609
C616
C612
C606
C605
R647
R649
C683
C681
R648
IC604
8
7
10
5
14
1
1-643-207-
21
09
1
2
3
4
5
6

MA-143P BOARD (COMPONENT SIDE)

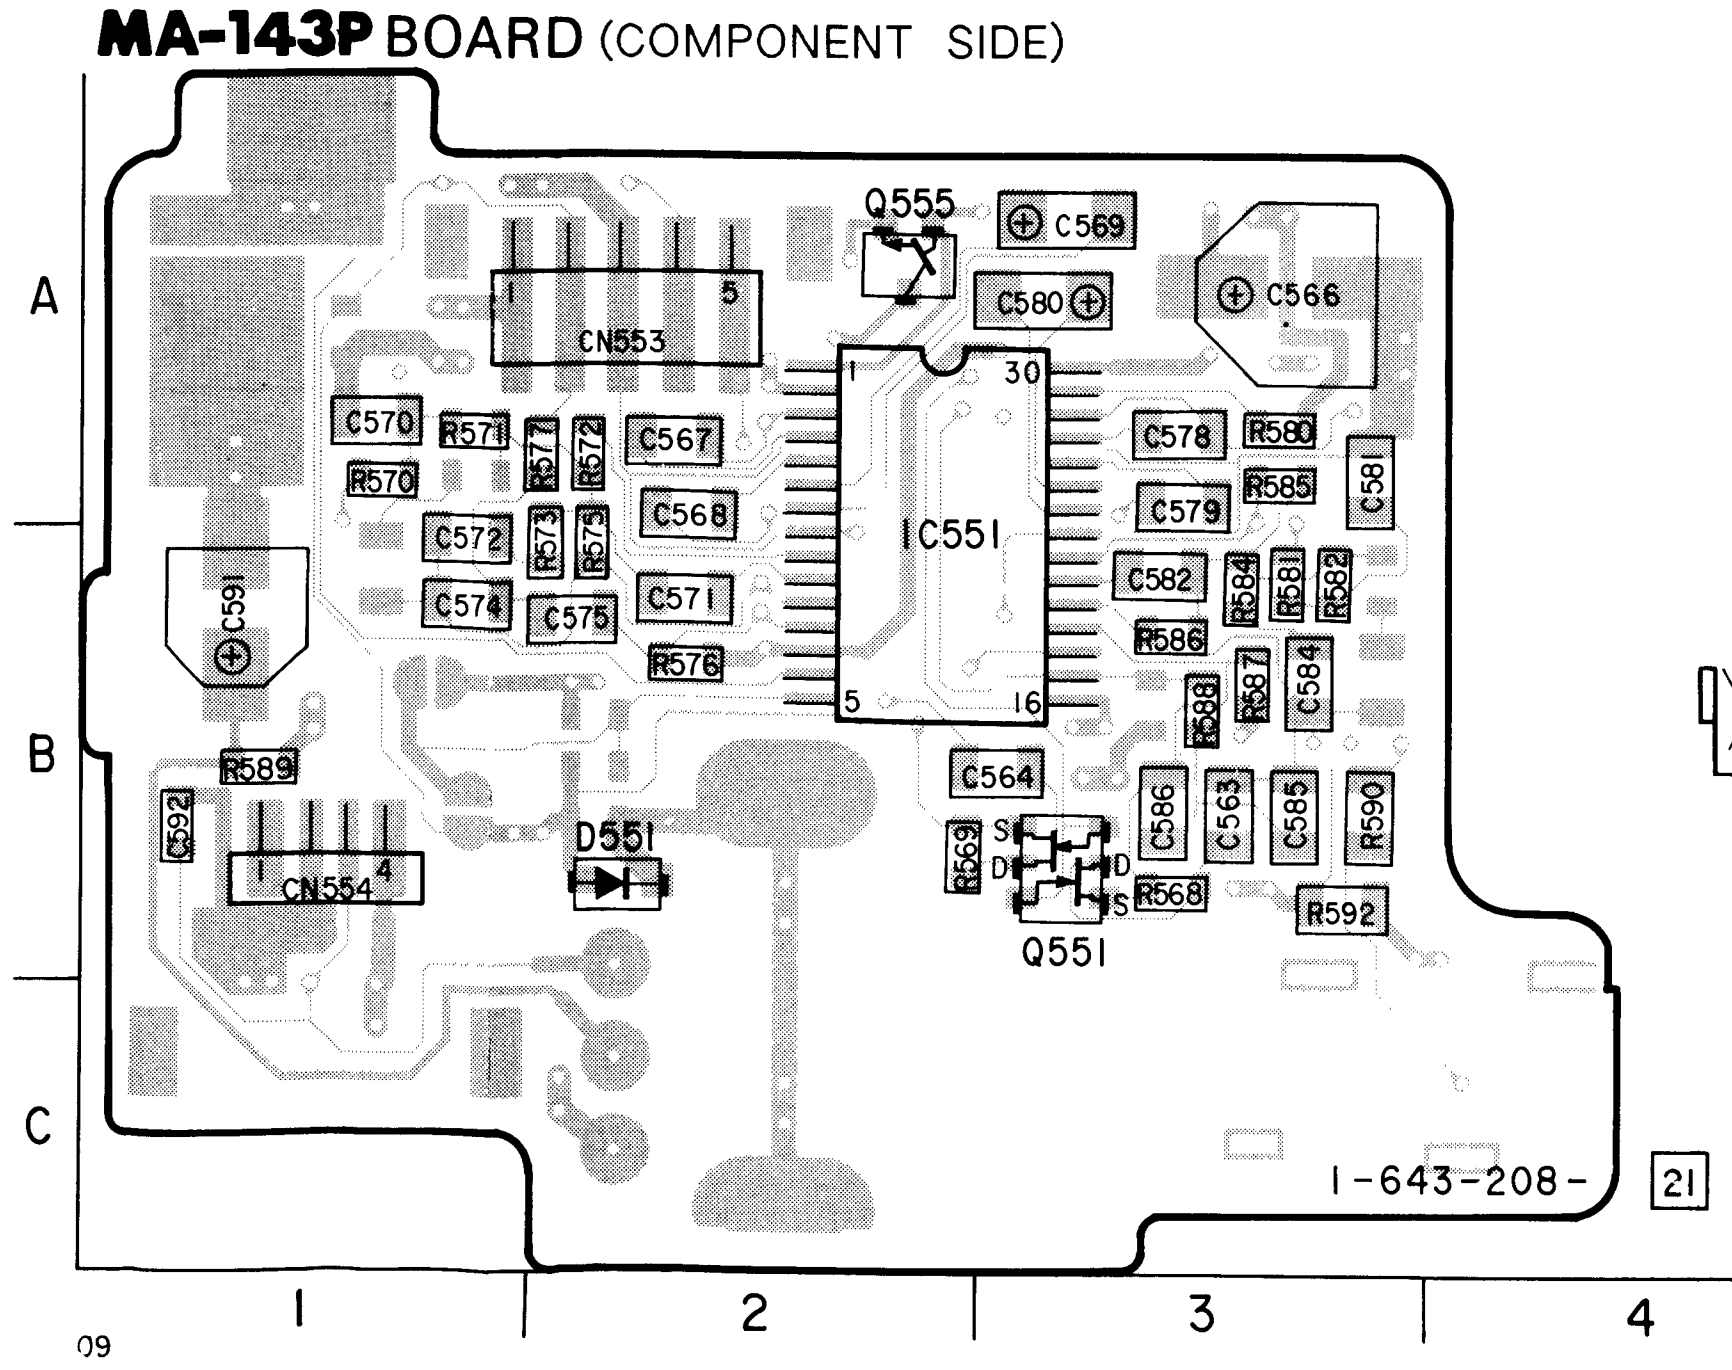
A
B
C
Q555
C569
C566
C580
CN553
1
5
C570
R571
R570
C567
C568
C572
C574
C575
C571
R576
IC551
1
30
5
16
C578
R580
C579
R585
C581
C582
R586
C591
R589
C592
CN554
1
4
D551
C564
R569
Q551
R568
C586
C563
C585
R590
R592
1-643-208-
21
09
1
2
3
4

MA-143P BOARD(CONDUCTOR SIDE)

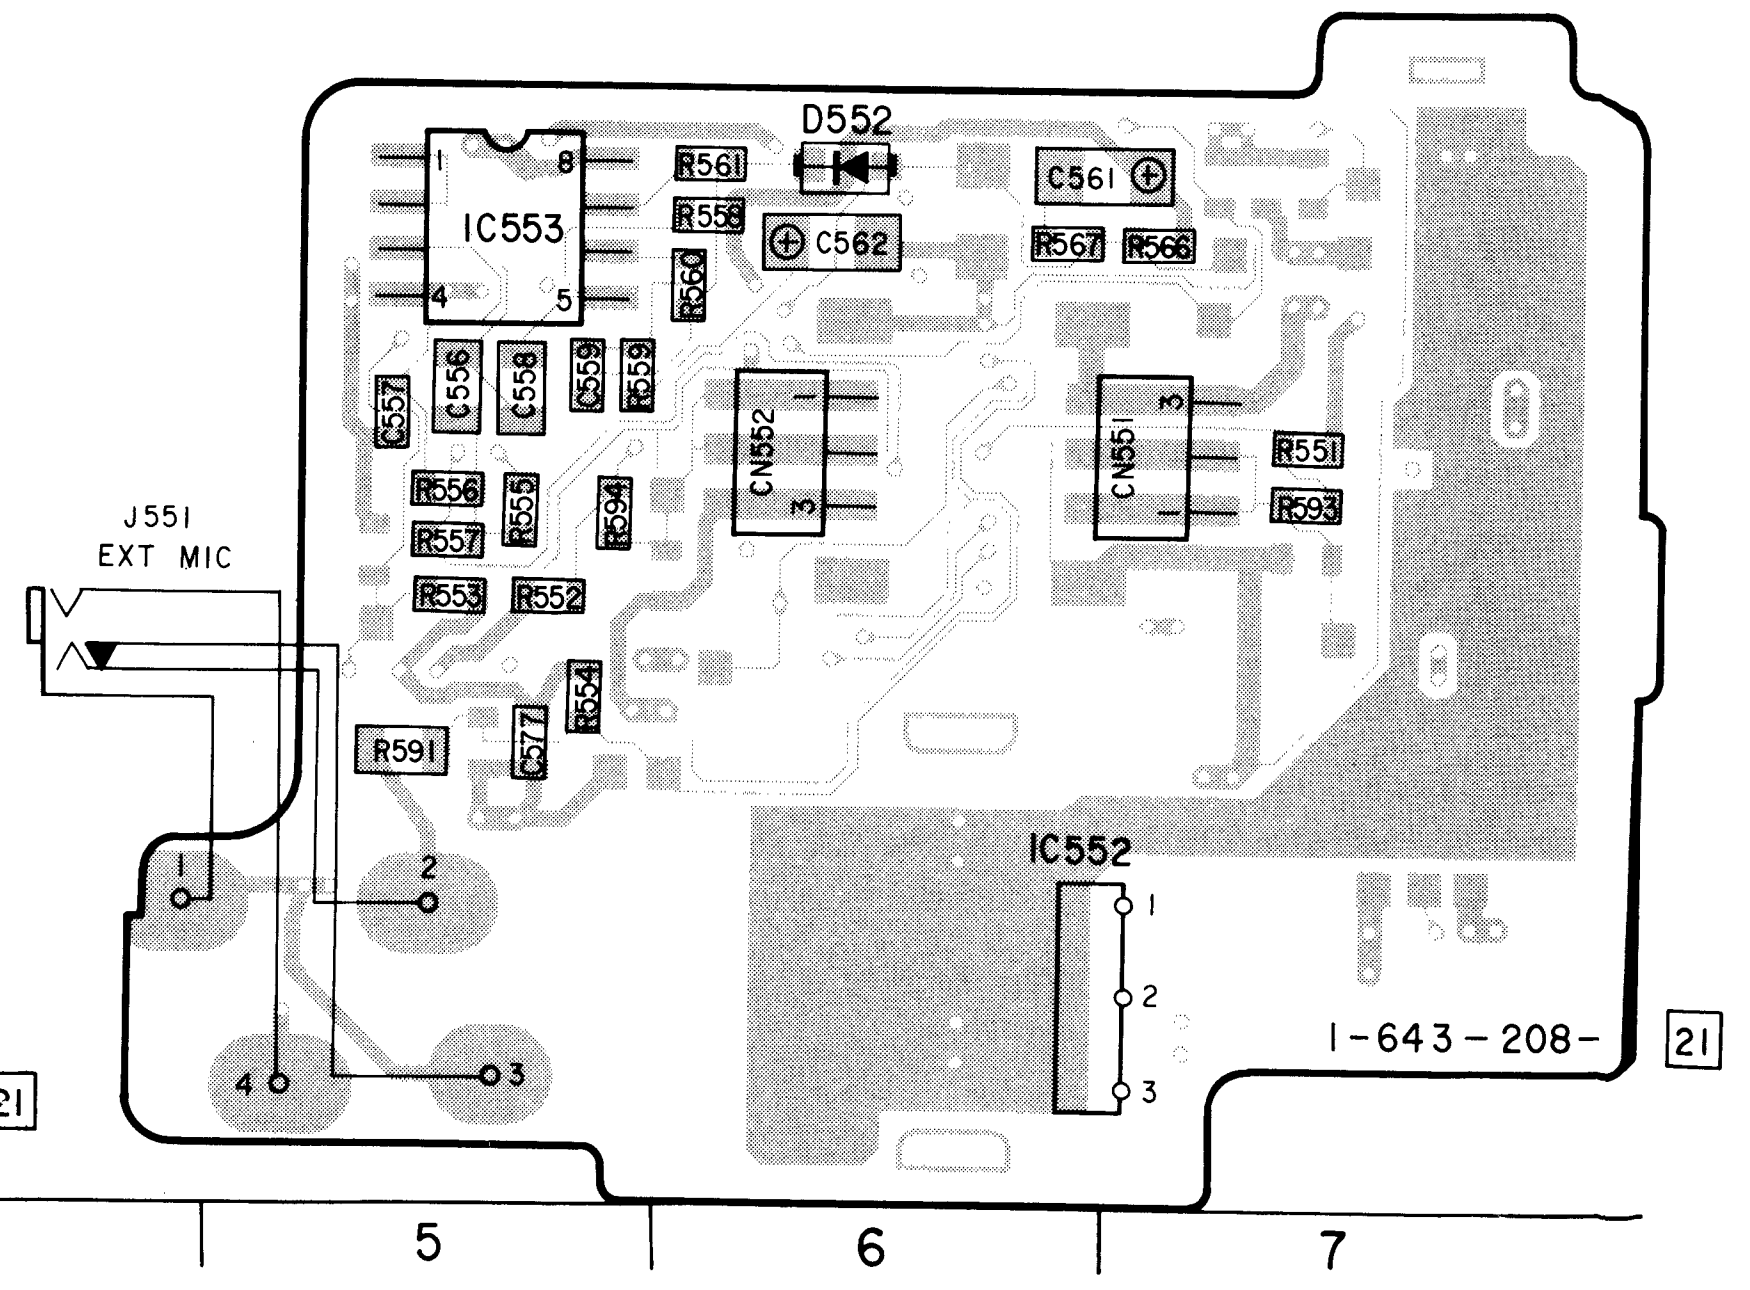
D552
IC553
1
8
4
5
R561
R559
C562
C561
R567
R566
R560
C557
C556
C558
C559
CN552
CN551
R551
R593
R556
R557
R553
R552
R591
C577
R554
J551
EXT MIC
1
2
3
4
IC552
1-643-208-
21
5
6
7

AU-135P (AUDIO), MA-143P (MIC AMP) SCHEMATIC DIAGRAMS

1 2 3 4 5 6 7 8 9 10

A B C D E F G H I J K L

— Ref. No. AU-135P BOARD: 1000 series, MA-143P BOARD: 5000 series —

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				➡
PB				⇨

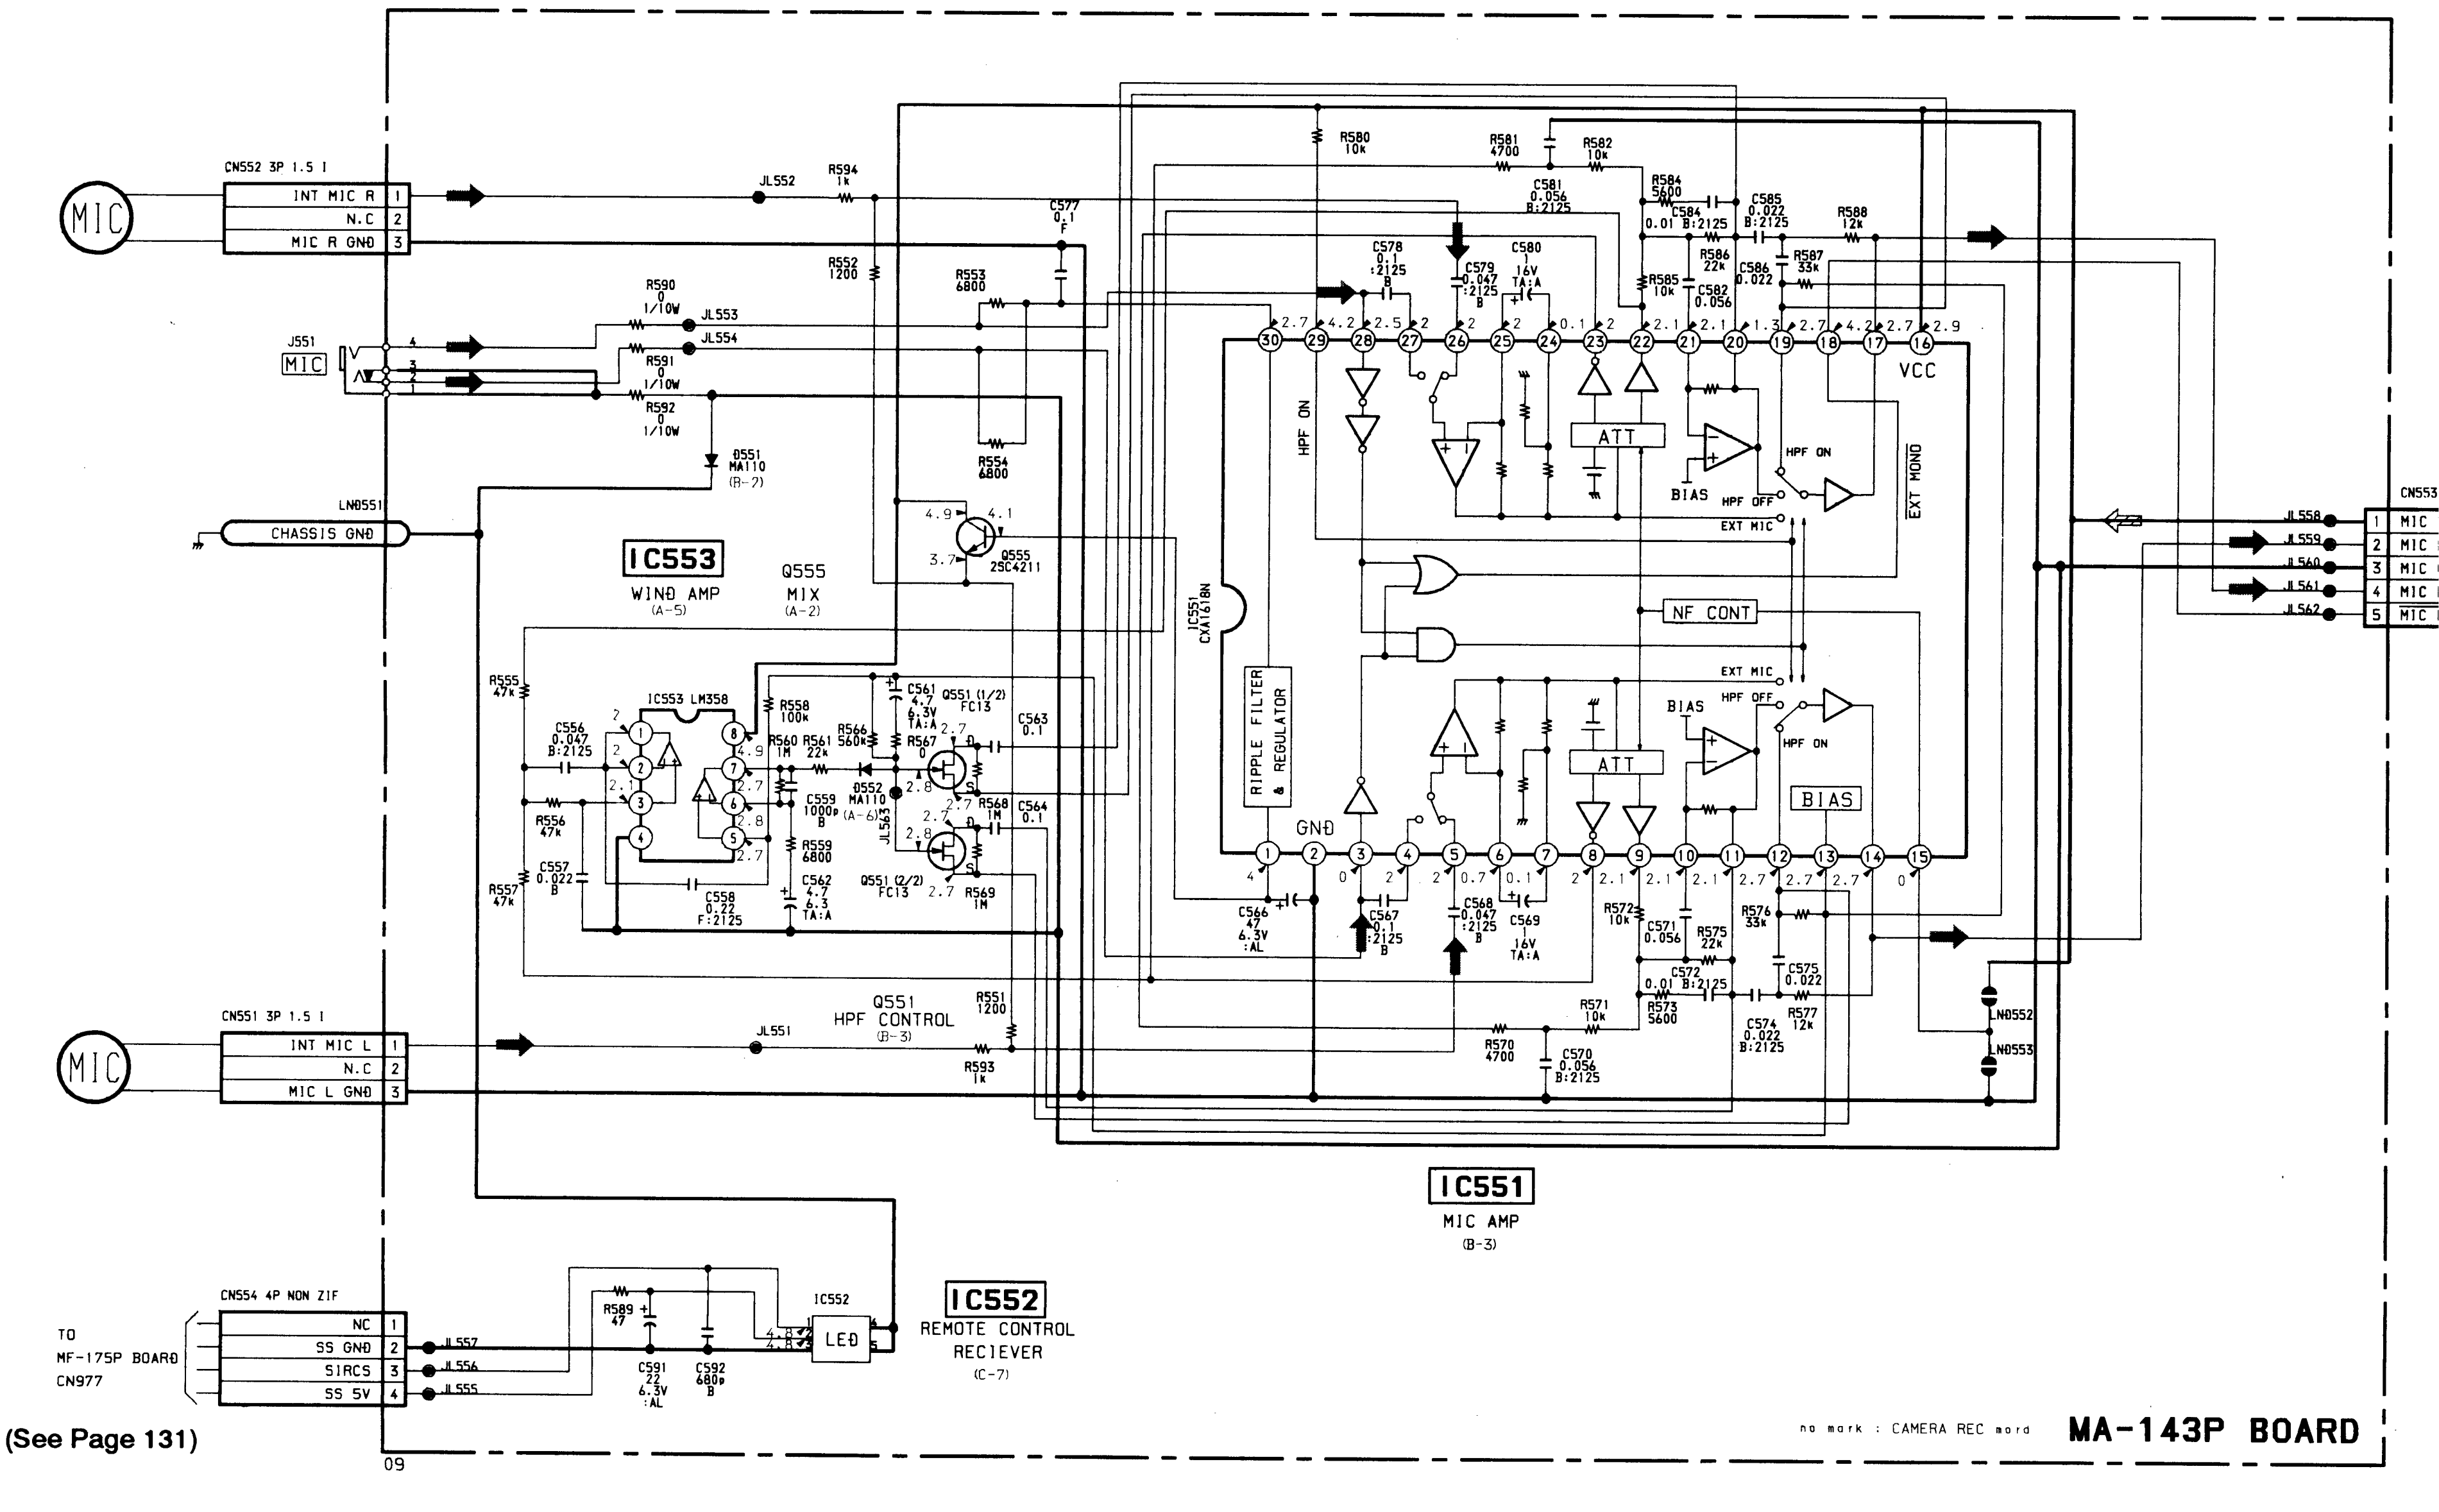

MIC
CN552 3P 1.5 I
INT MIC R 1
N.C 2
MIC R GND 3
JL552
R594 1k
C577 0.1 F
R552 1200
R553 6800
R590 0 1/10W
JL553
JL554
R591 0 1/10W
R592 0 1/10W
J551 MIC
D551 MA110 (B-2)
R554 6800
LND551
CHASSIS GND
Q555 2SC4211
IC553 WIND AMP (A-5)
Q555 MIX (A-2)
IC551 CXA1618N
RIPPLE FILTER & REGULATOR
R555 47k
IC553 LM358
C556 0.047 B:2125
R558 100k
R560 1M
R561 22k
R566 560k
R567 0
C561 4.7 6.3V TA:A
Q551 (1/2) FC13
C563 0.1
C559 1000p B
D552 MA110 (A-6)
JL563
R568 1M
C564 0.1
R556 47k
R559 6800
R557 47k
C557 0.022 B
C558 0.22 F:2125
C562 4.7 6.3 TA:A
Q551 (2/2) FC13
R569 1M
R580 10k
R581 4700
R582 10k
C581 0.056 B:2125
R584 5600
C584 0.01 B:2125
C585 0.022 B:2125
R588 12k
C578 0.1 :2125 B
C579 0.047 :2125 B
C580 1 16V TA:A
R585 10k
R586 22k
C582 0.056
C586 0.022
R587 33k
HPF ON
ATT
BIAS
HPF OFF
EXT MIC
EXT MONO
VCC
NF CONT
GND
C566 47 6.3V :AL
C567 0.1 :2125 B
C568 0.047 :2125 B
C569 1 16V TA:A
R572 10k
C571 0.056
R575 22k
R576 33k
C575 0.022
C572 0.01 B:2125
R573 5600
C574 0.022 B:2125
R577 12k
R571 10k
R570 4700
C570 0.056 B:2125
LND552
LND553
CN553
JL558 1 MIC
JL559 2 MIC
JL560 3 MIC
JL561 4 MIC
JL562 5 MIC
CN551 3P 1.5 I
INT MIC L 1
N.C 2
MIC L GND 3
JL551
Q551 HPF CONTROL (B-3)
R551 1200
R593 1k
IC551 MIC AMP (B-3)
CN554 4P NON ZIF
TO MF-175P BOARD CN977
NC 1
SS GND 2
SIRCS 3
SS 5V 4
JL557
JL556
JL555
R589 47
C591 22 6.3V :AL
C592 680p B
IC552
LED
IC552 REMOTE CONTROL RECIEVER (C-7)
(See Page 131)
09
no mark : CAMERA REC mord
MA-143P BOARD

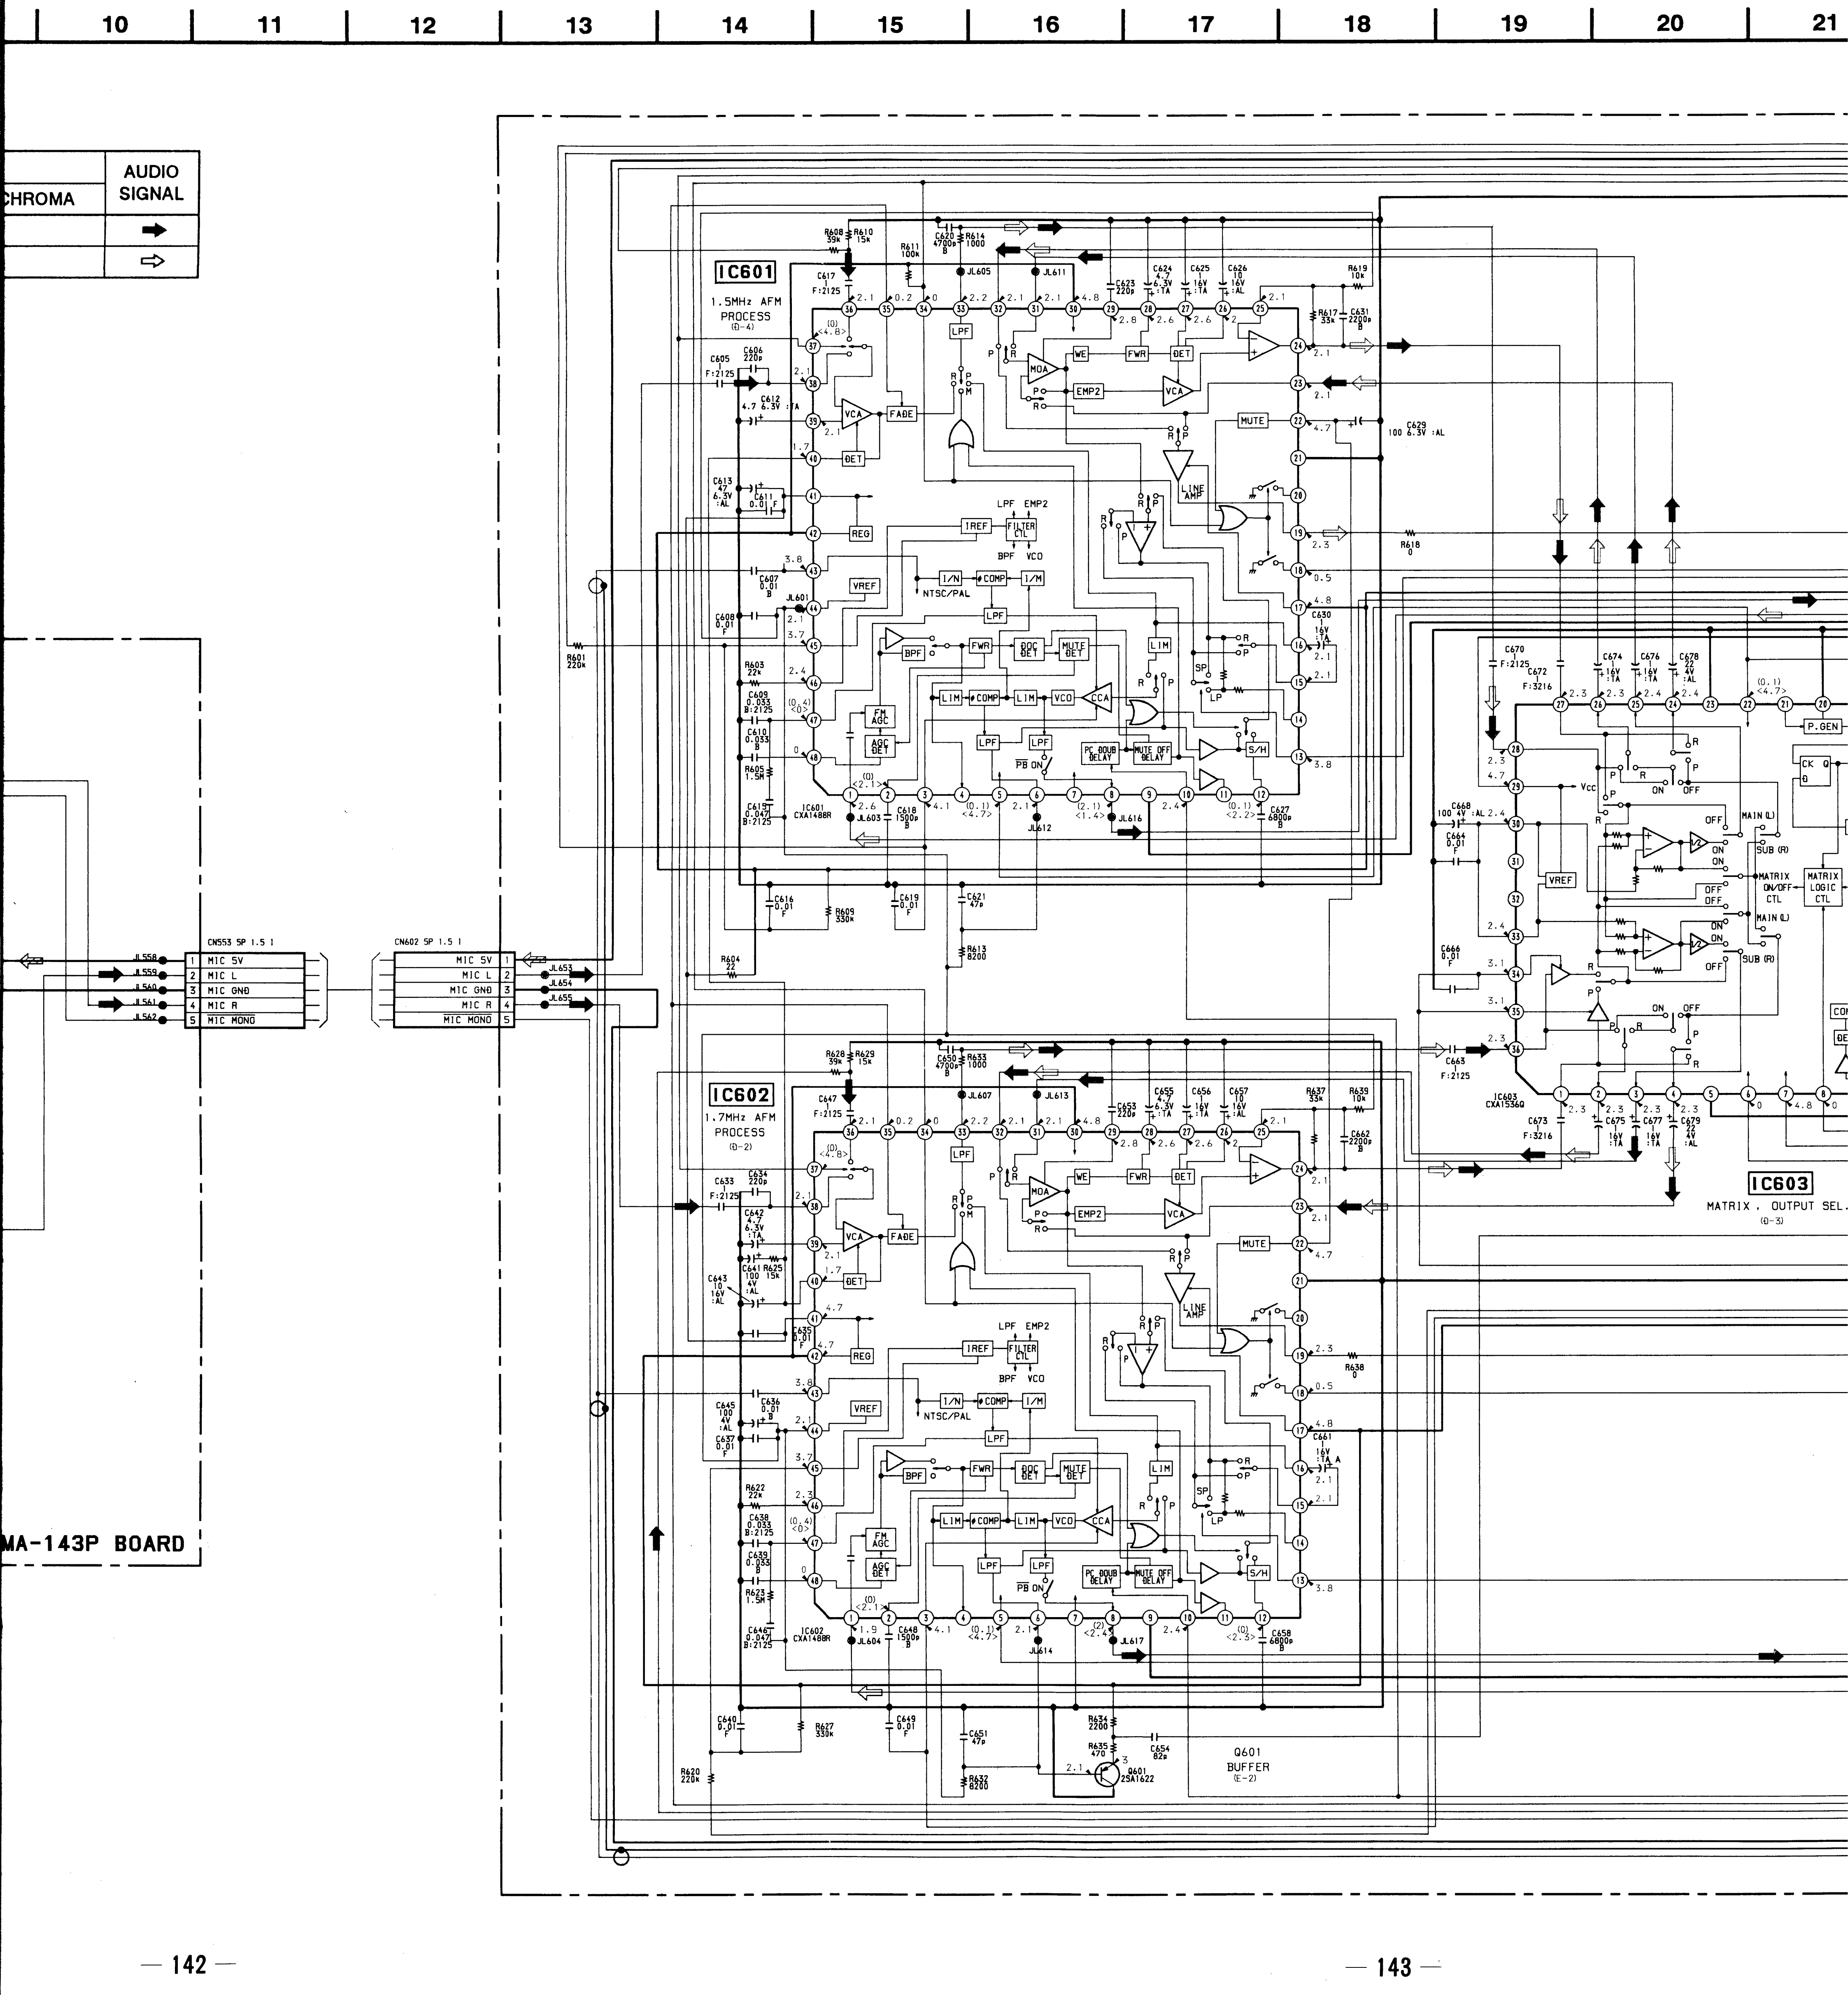10
11
12
13
14
15
16
17
18
19
20
21
CHROMA
AUDIO SIGNAL
MA-143P BOARD
CN553 5P 1.5 I
CN602 5P 1.5 I
MIC 5V
MIC L
MIC GND
MIC R
MIC MONO
IC601
1.5MHz AFM PROCESS
(D-4)
IC601 CXA1488R
IC602
1.7MHz AFM PROCESS
(D-2)
IC602 CXA1488R
IC603
MATRIX , OUTPUT SEL.
(D-3)
IC603 CXA1536Q
Q601
BUFFER
(E-2)
Q601 2SA1622
VCA
FADE
DET
REG
VREF
IREF
FILTER CTL
LPF EMP2
BPF VCO
I/N
COMP
I/M
NTSC/PAL
LPF
BPF
FWR
DOC DET
MUTE DET
LIM
VCO
CCA
FM AGC
AGC DET
PC DOUB DELAY
MUTE OFF DELAY
S/H
PB ON
MOA
WE
EMP2
LINE AMP
MUTE
P.GEN
MAIN (L)
SUB (R)
MATRIX ON/OFF CTL
MATRIX LOGIC CTL

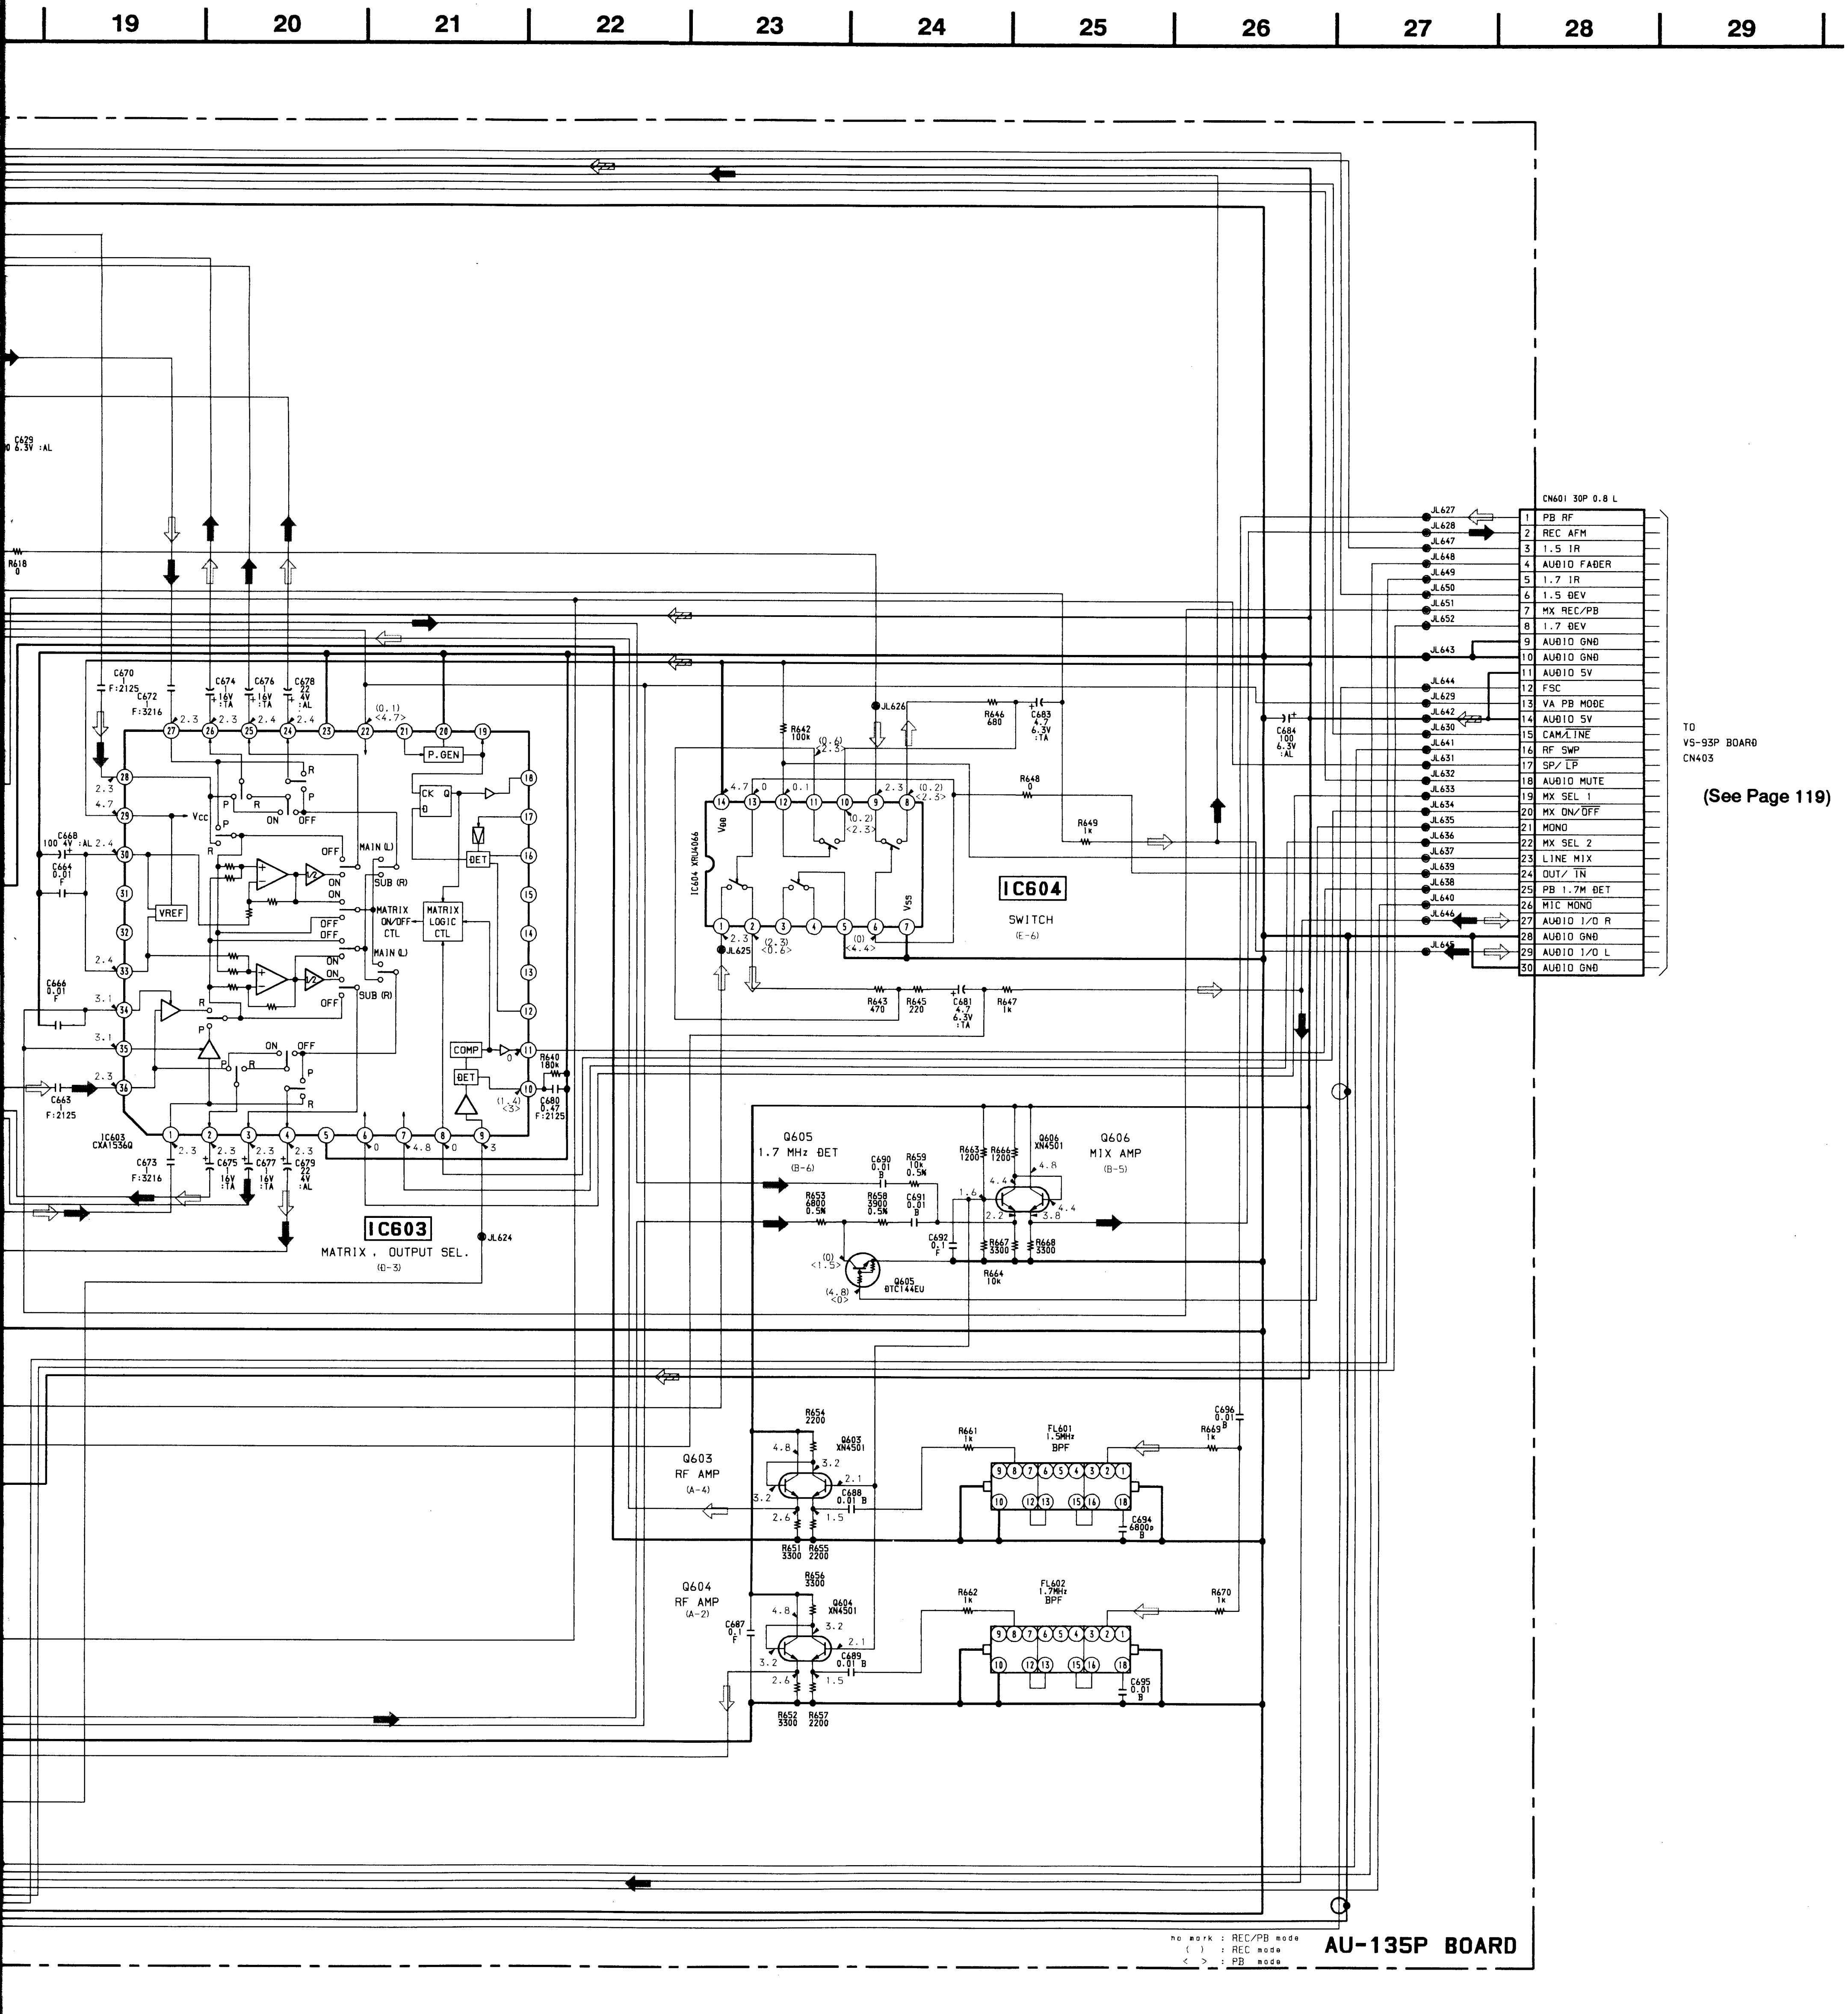
19
20
21
22
23
24
25
26
27
28
29
IC603
CXA1536Q
MATRIX , OUTPUT SEL.
(D-3)
P.GEN
VREF
MATRIX ON/OFF CTL
MATRIX LOGIC CTL
COMP
DET
MAIN (L)
SUB (R)
IC604 XRU4066
IC604
SWITCH
(E-6)
Q605
1.7 MHz DET
(B-6)
Q605 DTC144EU
Q606
MIX AMP
(B-5)
Q606 XN4501
Q603
RF AMP
(A-4)
Q603 XN4501
Q604
RF AMP
(A-2)
Q604 XN4501
FL601 1.5MHz BPF
FL602 1.7MHz BPF
CN601 30P 0.8 L
1 PB RF
2 REC AFM
3 1.5 IR
4 AUDIO FADER
5 1.7 IR
6 1.5 DEV
7 MX REC/PB
8 1.7 DEV
9 AUDIO GND
10 AUDIO GND
11 AUDIO 5V
12 FSC
13 VA PB MODE
14 AUDIO 5V
15 CAM/LINE
16 RF SWP
17 SP/ LP
18 AUDIO MUTE
19 MX SEL 1
20 MX ON/OFF
21 MONO
22 MX SEL 2
23 LINE MIX
24 OUT/ IN
25 PB 1.7M DET
26 MIC MONO
27 AUDIO I/O R
28 AUDIO GND
29 AUDIO I/O L
30 AUDIO GND
TO
VS-93P BOARD
CN403
no mark : REC/PB mode
( ) : REC mode
< > : PB mode
AU-135P BOARD

(See Page 119)

VF-42P BOARD

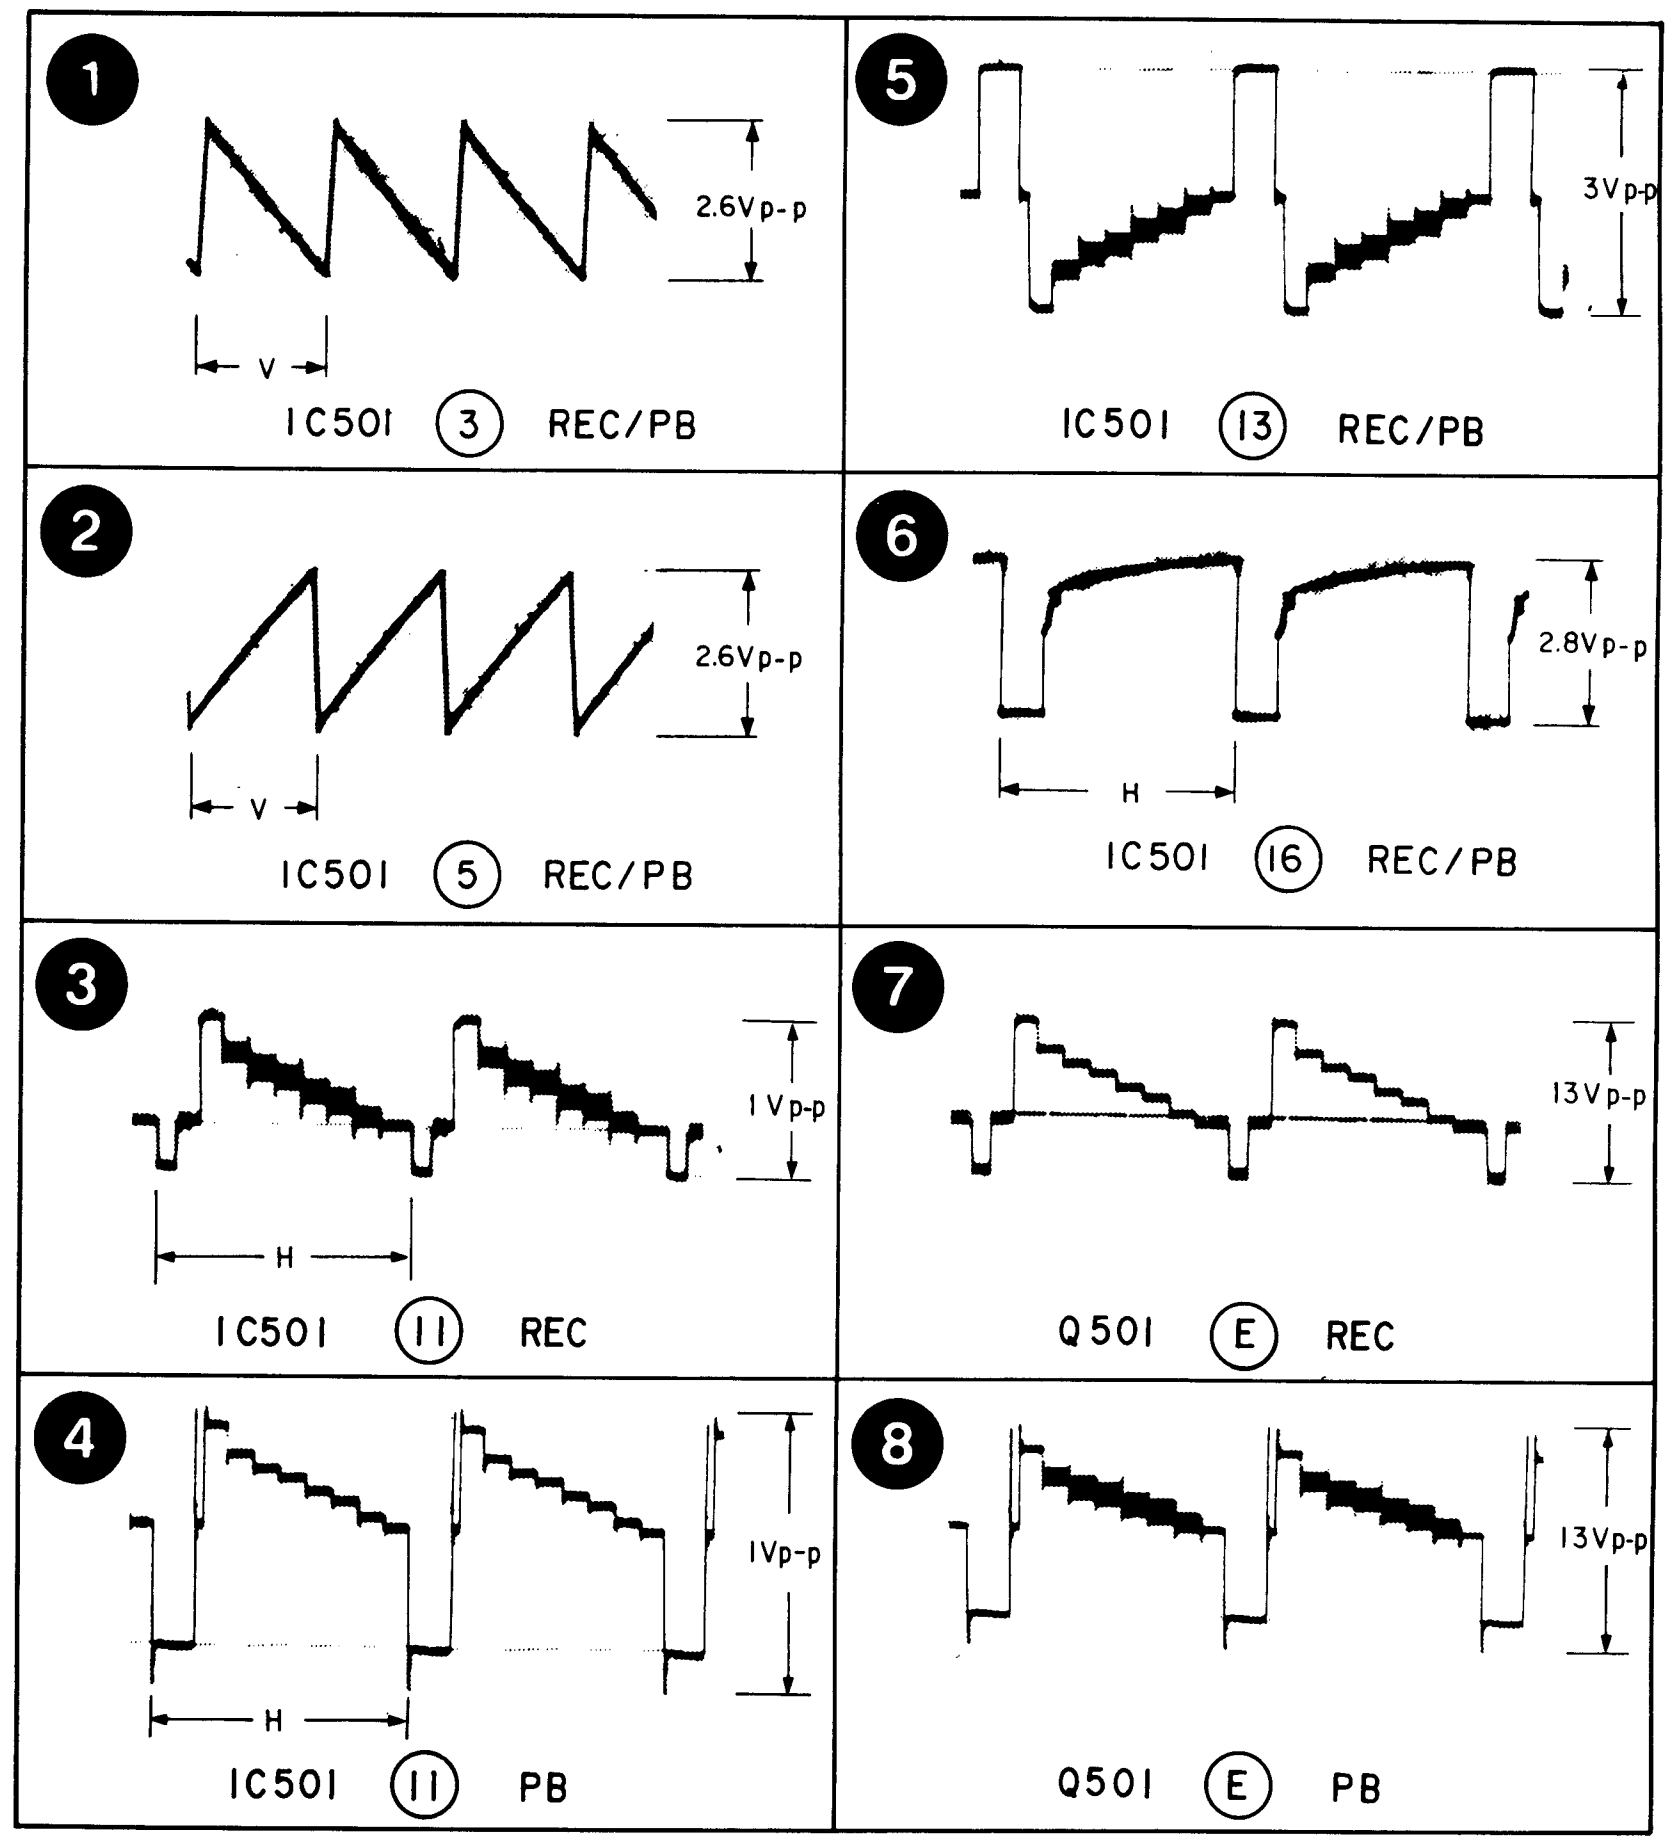

< DIODE >

D501	8-719-820-65	DIODE	TLS221
D502	8-719-984-02	LED	BR4371F
D503	8-719-400-20	DIODE	MA152WA

< IC >

IC501	8-759-420-01	IC	AN2512S

< TRANSISTOR >

Q501	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q502	8-729-216-31	TRANSISTOR	2SA1163-G
Q503	8-729-120-28	TRANSISTOR	2SC1623-L5L6
Q504	8-729-106-68	TRANSISTOR	2SD1615A-GP

- **For printed wiring boards.**

Caution:

Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

VF-42P (VIEW FINDER) PRINTED WIRING BOARD

— Ref. No. VF-42P BOARD: 7000 series —

VF-42P BOARD (COMPONENT SIDE)

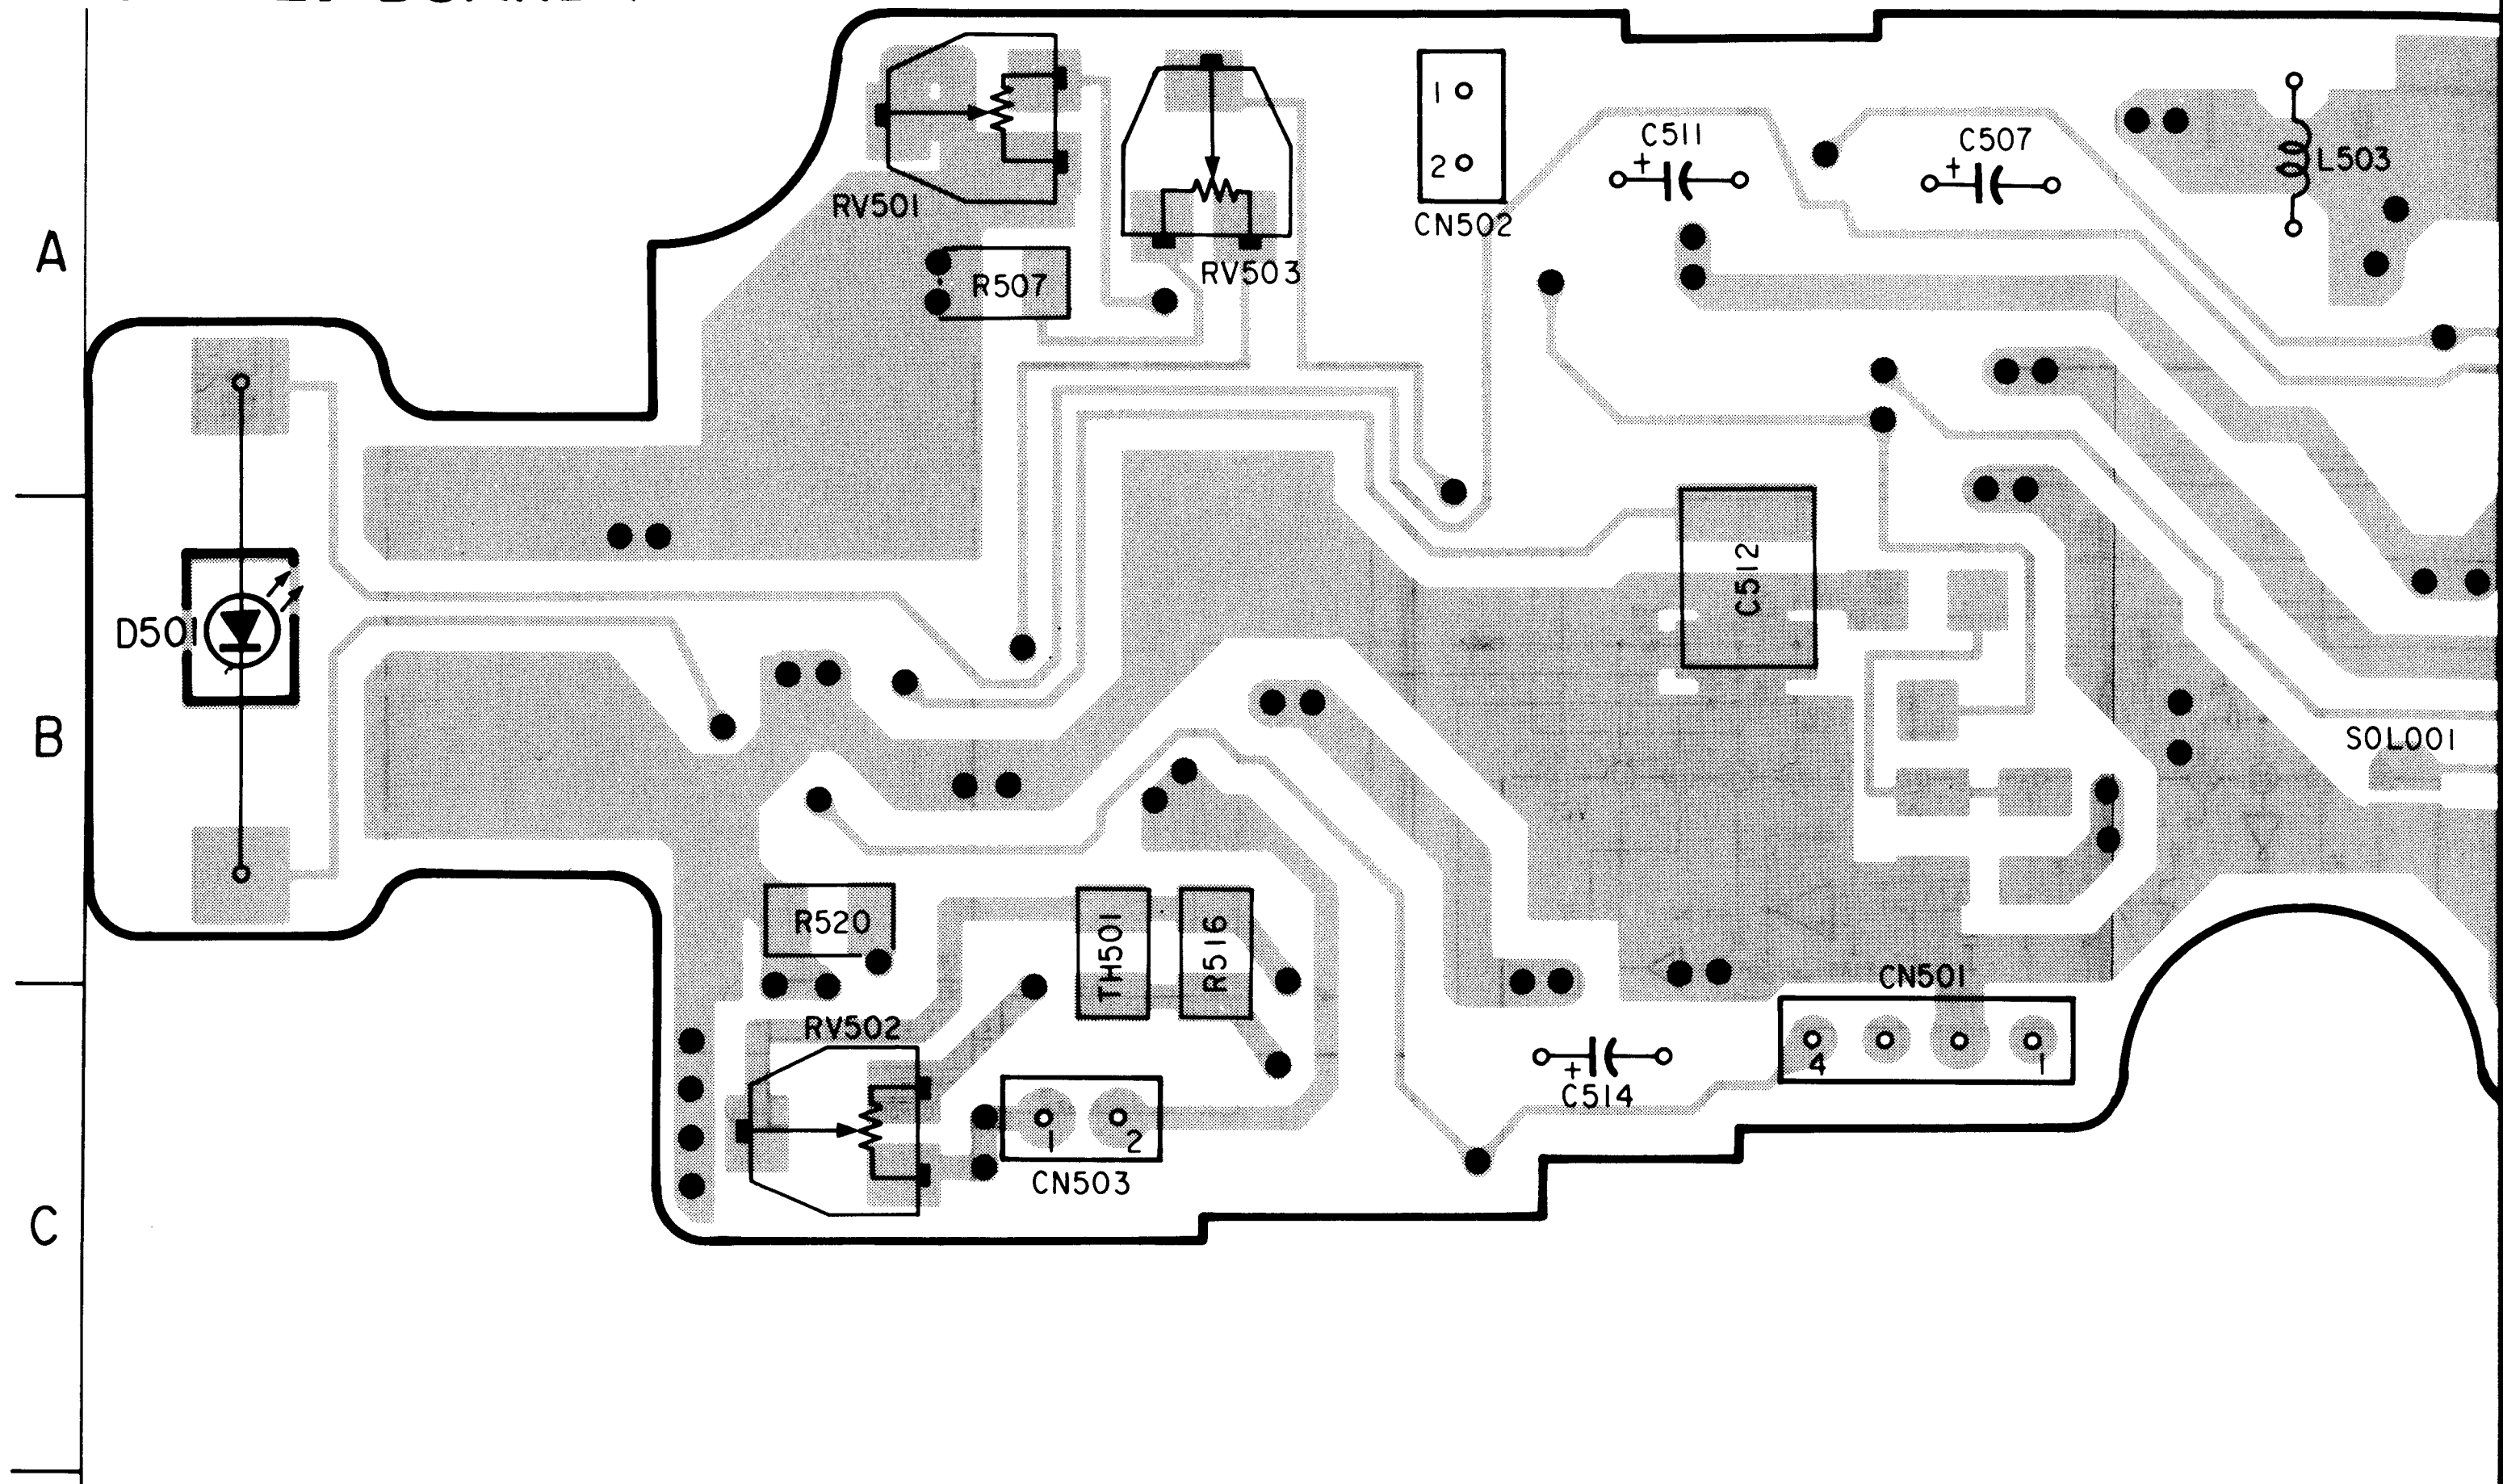
A
B
C
RV501
RV503
CN502
1
2
C511
C507
L503
R507
D501
C512
SOL001
R520
TH501
R516
CN501
4
1
RV502
CN503
1
2
C514

VF-42P BOARD (CONDUCTOR SIDE)

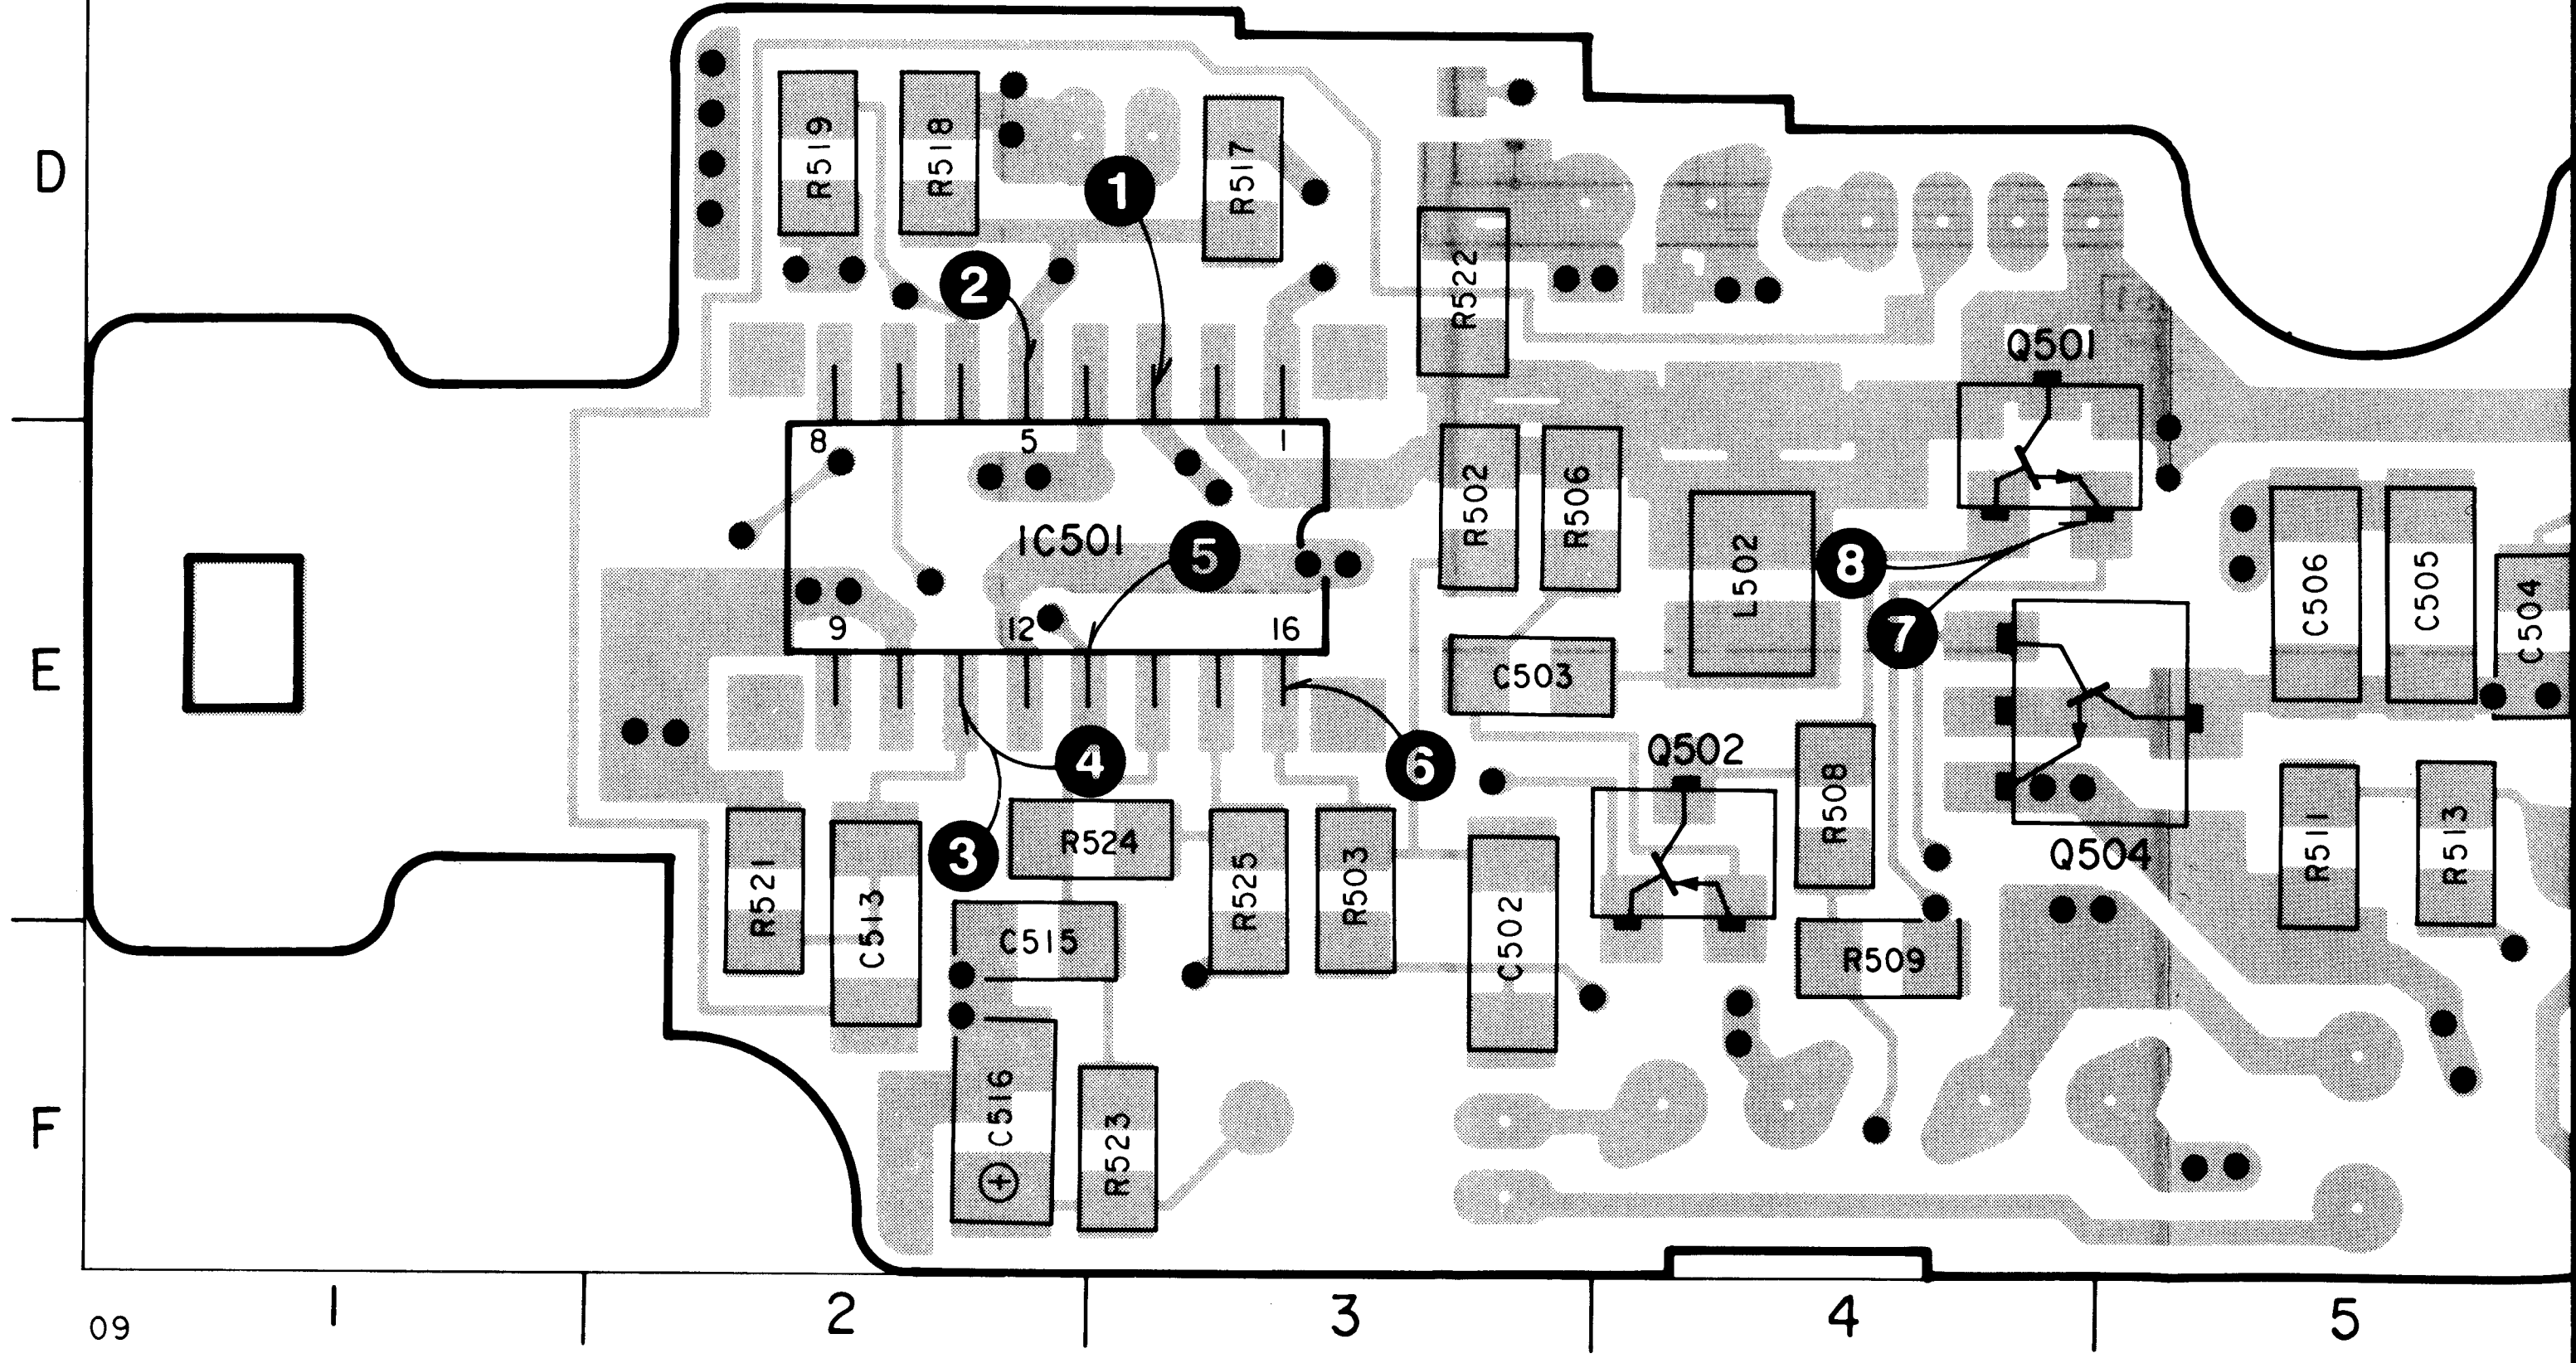
D
E
F
R519
R518
R517
R522
❶
❷
Q501
8
5
1
IC501
9
12
16
❺
R502
R506
L502
❽
❼
C506
C505
C504
C503
Q502
R508
Q504
❹
❻
❸
R521
C513
R524
C515
R525
R503
C502
R509
R511
R513
C516
R523
09
1
2
3
4
5

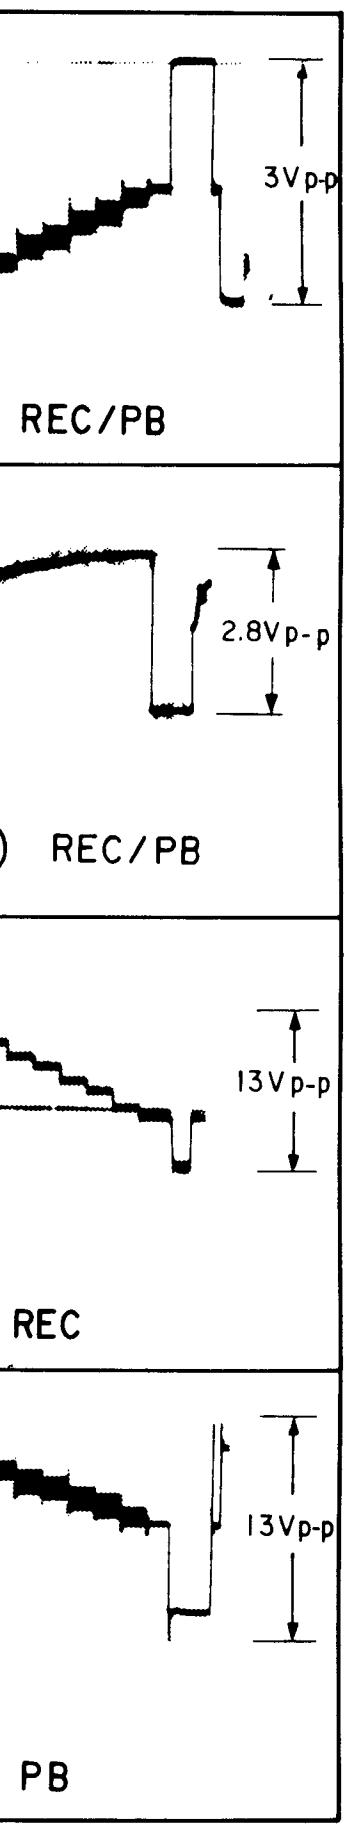

E >

TLS221
BR4371F
MA152WA

512S

SISTOR >

STOR	2SC1623-L5L6
STOR	2SA1163-G
STOR	2SC1623-L5L6
STOR	2SD1615A-GP

side seen from
ted.
de seen from the

VF-42P (VIEW FINDER) PRINTED WIRING BOARD

— Ref. No. VF-42P BOARD: 7000 series —

VF-42P BOARD (COMPONENT SIDE)

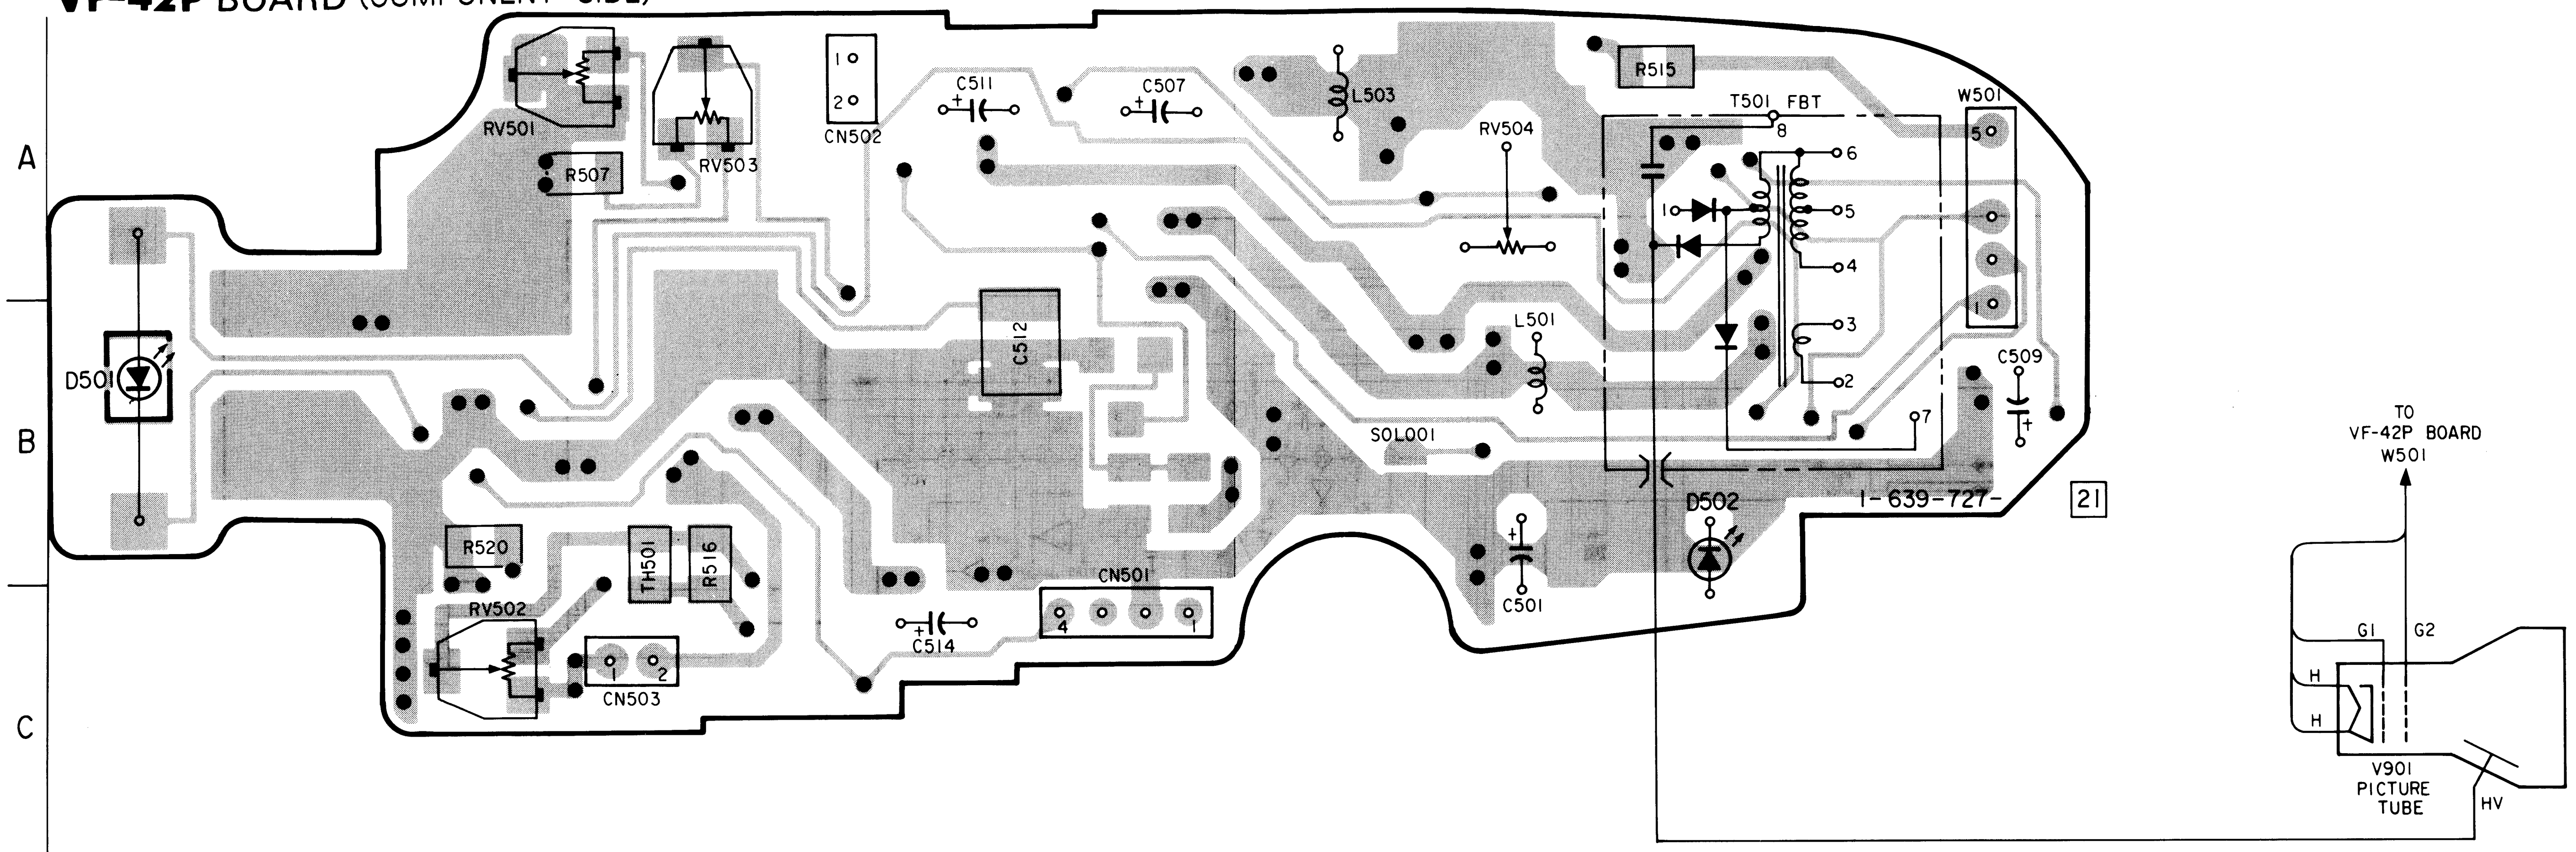
A
B
C
RV501
RV503
R507
CN502
1
2
C511
C507
L503
R515
T501 FBT
W501
RV504
8
6
5
4
3
2
7
1
D501
C512
L501
C509
SOL001
D502
1-639-727-
21
C501
CN501
4
1
C514
R520
TH501
R516
RV502
CN503
1
2
TO
VF-42P BOARD
W501
G1
G2
H
H
V901
PICTURE
TUBE
HV

VF-42P BOARD (CONDUCTOR SIDE)

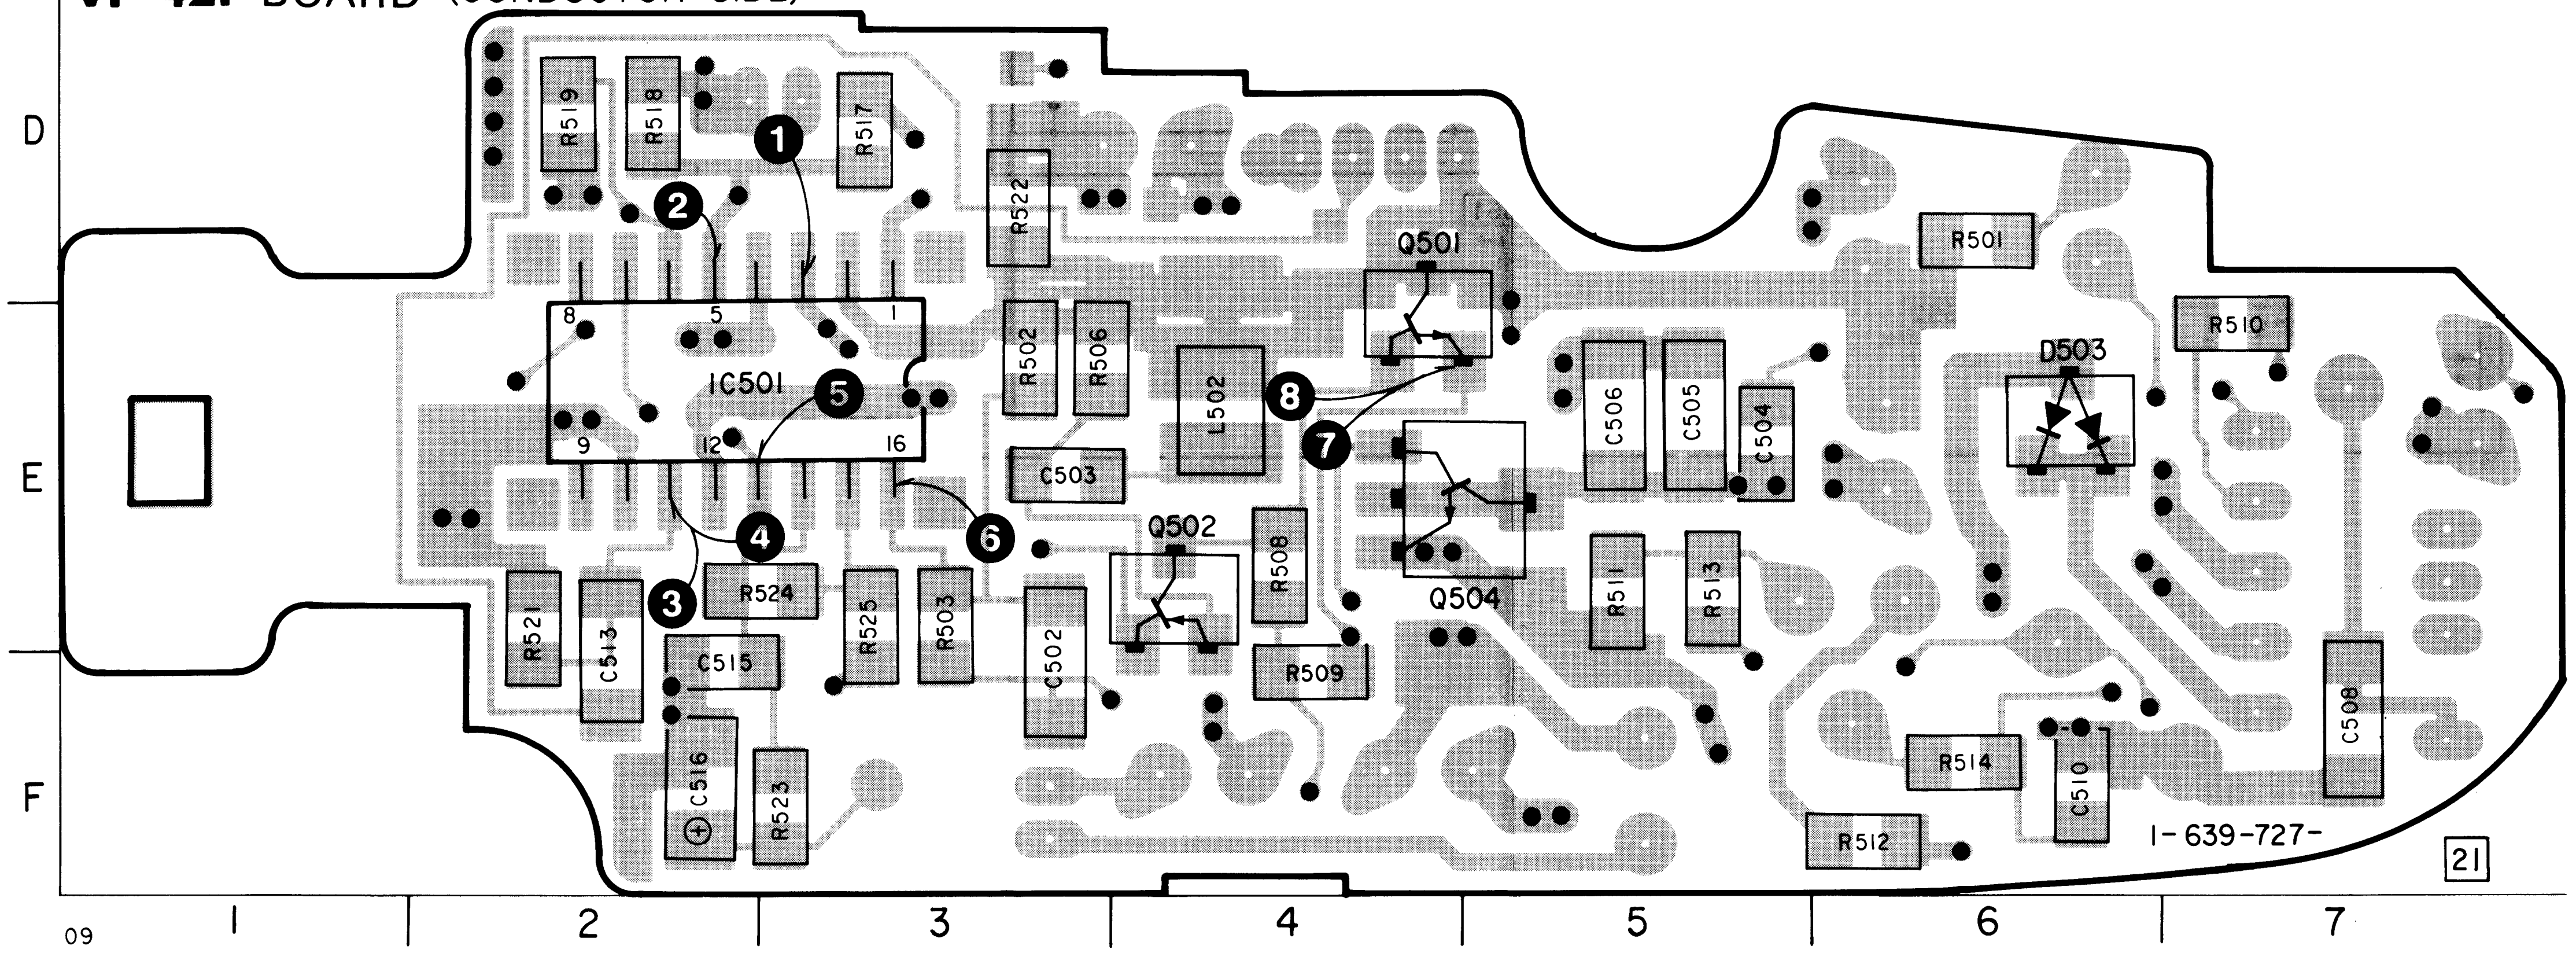
D
E
F
R519
R518
R517
①
②
R522
Q501
R501
R510
D503
8
5
1
IC501
⑤
9
12
16
R502
R506
L502
⑧
⑦
C506
C505
C504
C503
Q502
R508
Q504
R511
R513
④
⑥
③
R521
C513
R524
C515
R525
R503
C502
R509
C516
R523
R514
C510
R512
C508
1-639-727-
21
09
1
2
3
4
5
6
7

VF-42P (VIEW FINDER) SCHEMATIC DIAGRAM

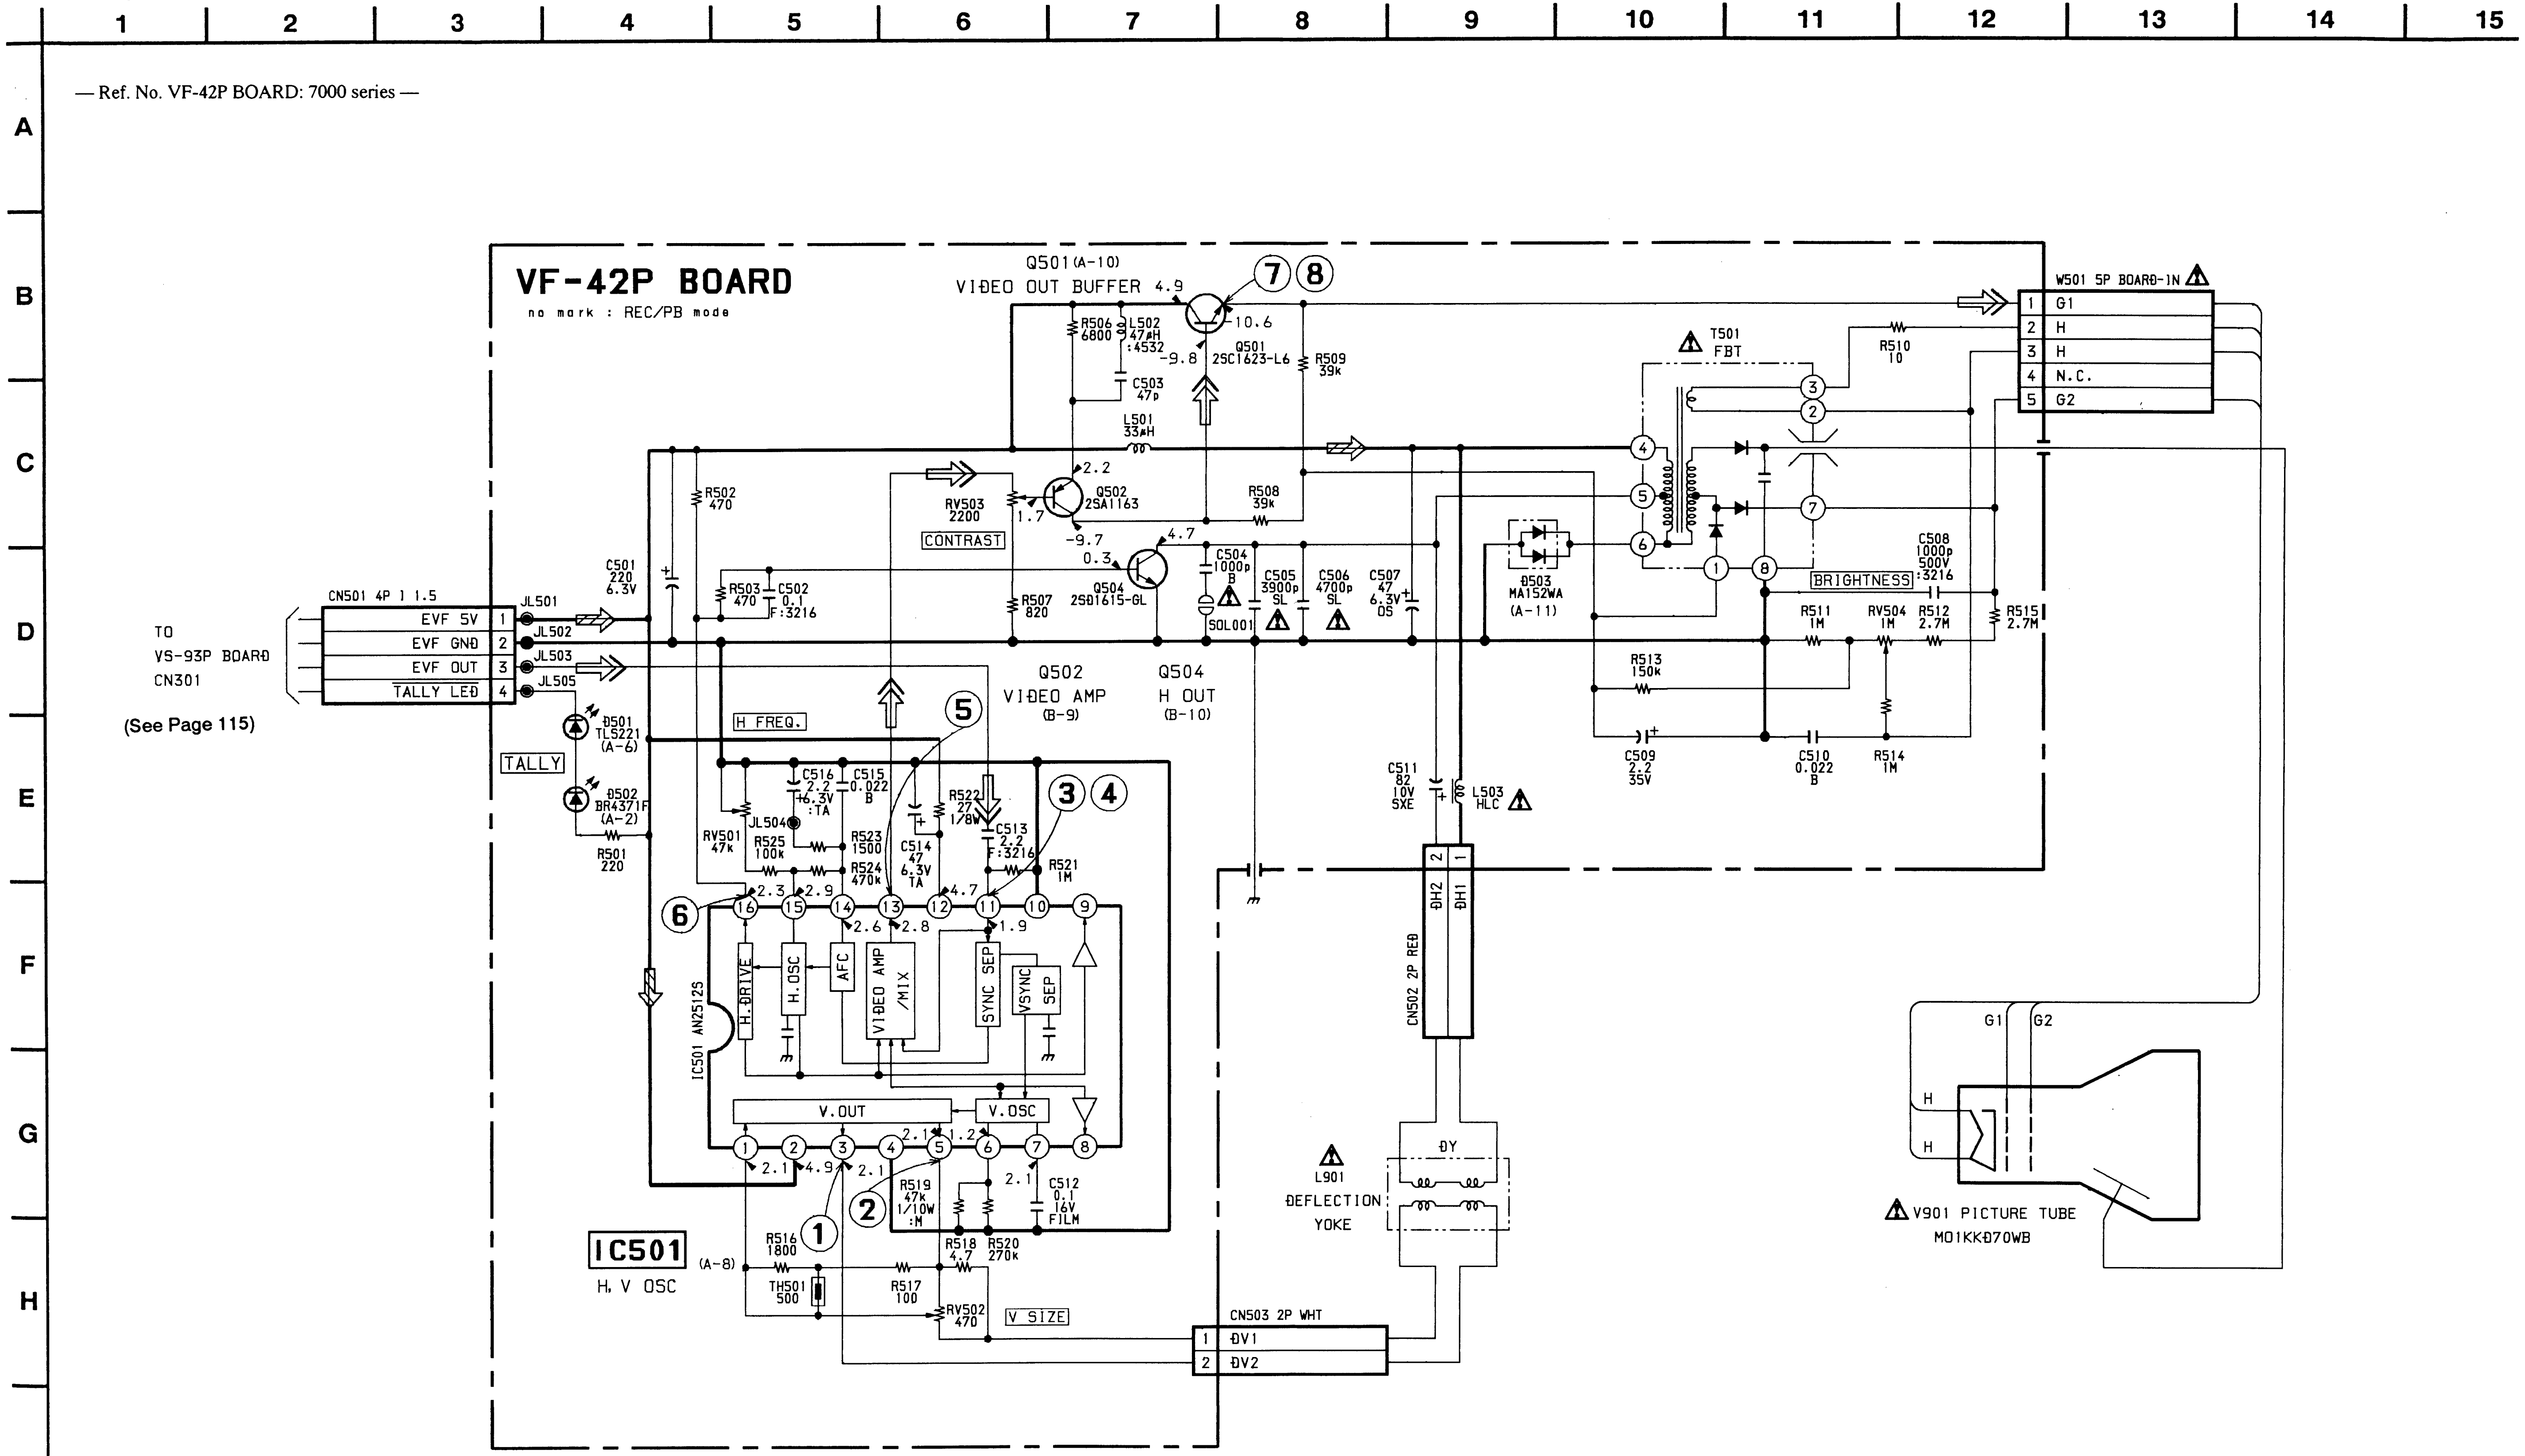
— Ref. No. VF-42P BOARD: 7000 series —

(See Page 115)

VF-42P BOARD
no mark : REC/PB mode
Q501 (A-10) VIDEO OUT BUFFER
Q501 2SC1623-L6
Q502 VIDEO AMP (B-9)
Q502 2SA1163
Q504 H OUT (B-10)
Q504 2SD1615-GL
T501 FBT
D503 MA152WA (A-11)
W501 5P BOARD-IN
G1
H
H
N.C.
G2
CN501 4P I 1.5
EVF 5V
EVF GND
EVF OUT
TALLY LED
TO VS-93P BOARD CN301
JL501
JL502
JL503
JL505
JL504
D501 TL5221 (A-6)
D502 BR4371F (A-2)
TALLY
H FREQ.
CONTRAST
BRIGHTNESS
V SIZE
RV501 47k
RV502 470
RV503 2200
RV504 1M
IC501 AN2512S
IC501 H, V OSC (A-8)
H.DRIVE
H.OSC
AFC
VIDEO AMP /MIX
SYNC SEP
VSYNC SEP
V.OUT
V.OSC
CN502 2P RED
DH2
DH1
CN503 2P WHT
DV1
DV2
DY
L901 DEFLECTION YOKE
L503 HLC
V901 PICTURE TUBE M01KKD70WB
G1
G2
H
H
D9

- **SIGNAL PATH**

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				
PB		⇨		

DD-47P (DC-DC CONVERTER) PRINTED WIRING BOARD

— Ref. No. DD-47P BOARD: 4000 series —

DD-47PBOARD(COMPONENT SIDE)

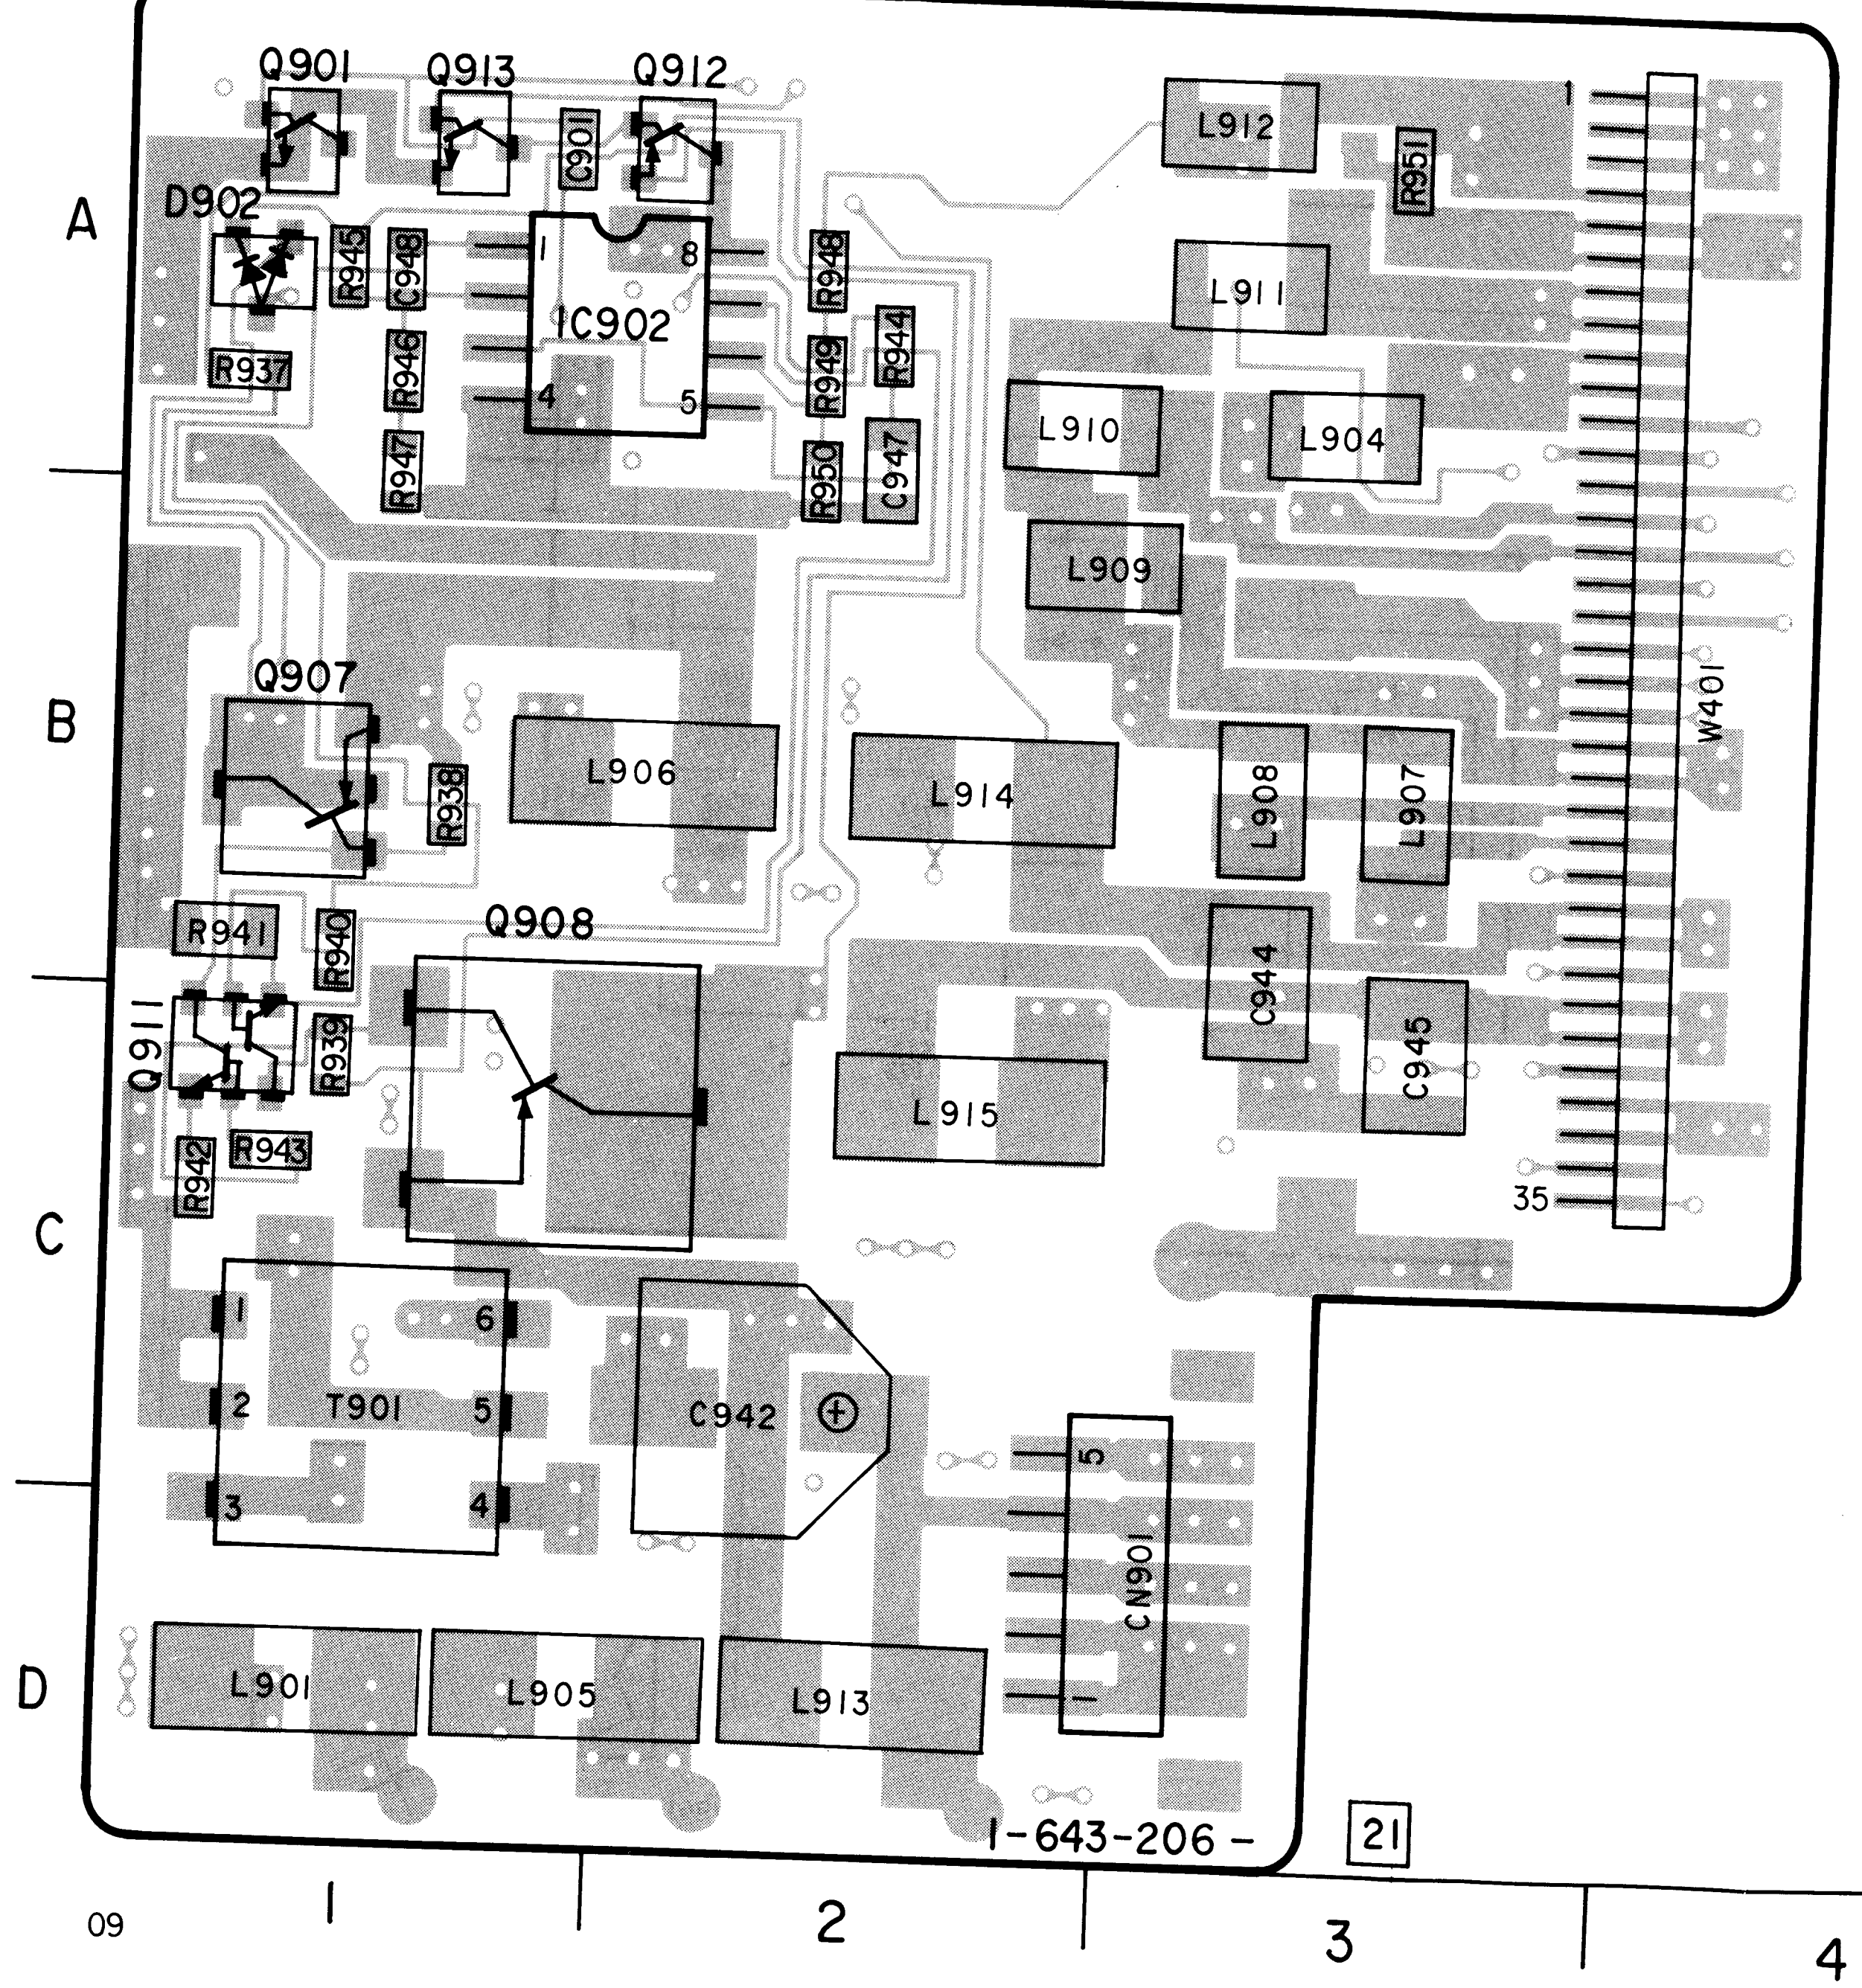
Q901
Q913
Q912
C901
D902
IC902
1
8
4
5
R945
C948
R946
R947
R937
R948
R949
R944
R950
C947
L912
R951
L911
L910
L904
L909
W401
1
35
Q907
L906
L914
R938
L908
L907
R941
R940
Q908
Q911
R939
R942
R943
C944
C945
L915
T901
C942
CN901
L901
L905
L913
1-643-206-
21
A
B
C
D
09
1
2
3
4

DD-47PBOARD(CONDUCTOR SIDE)

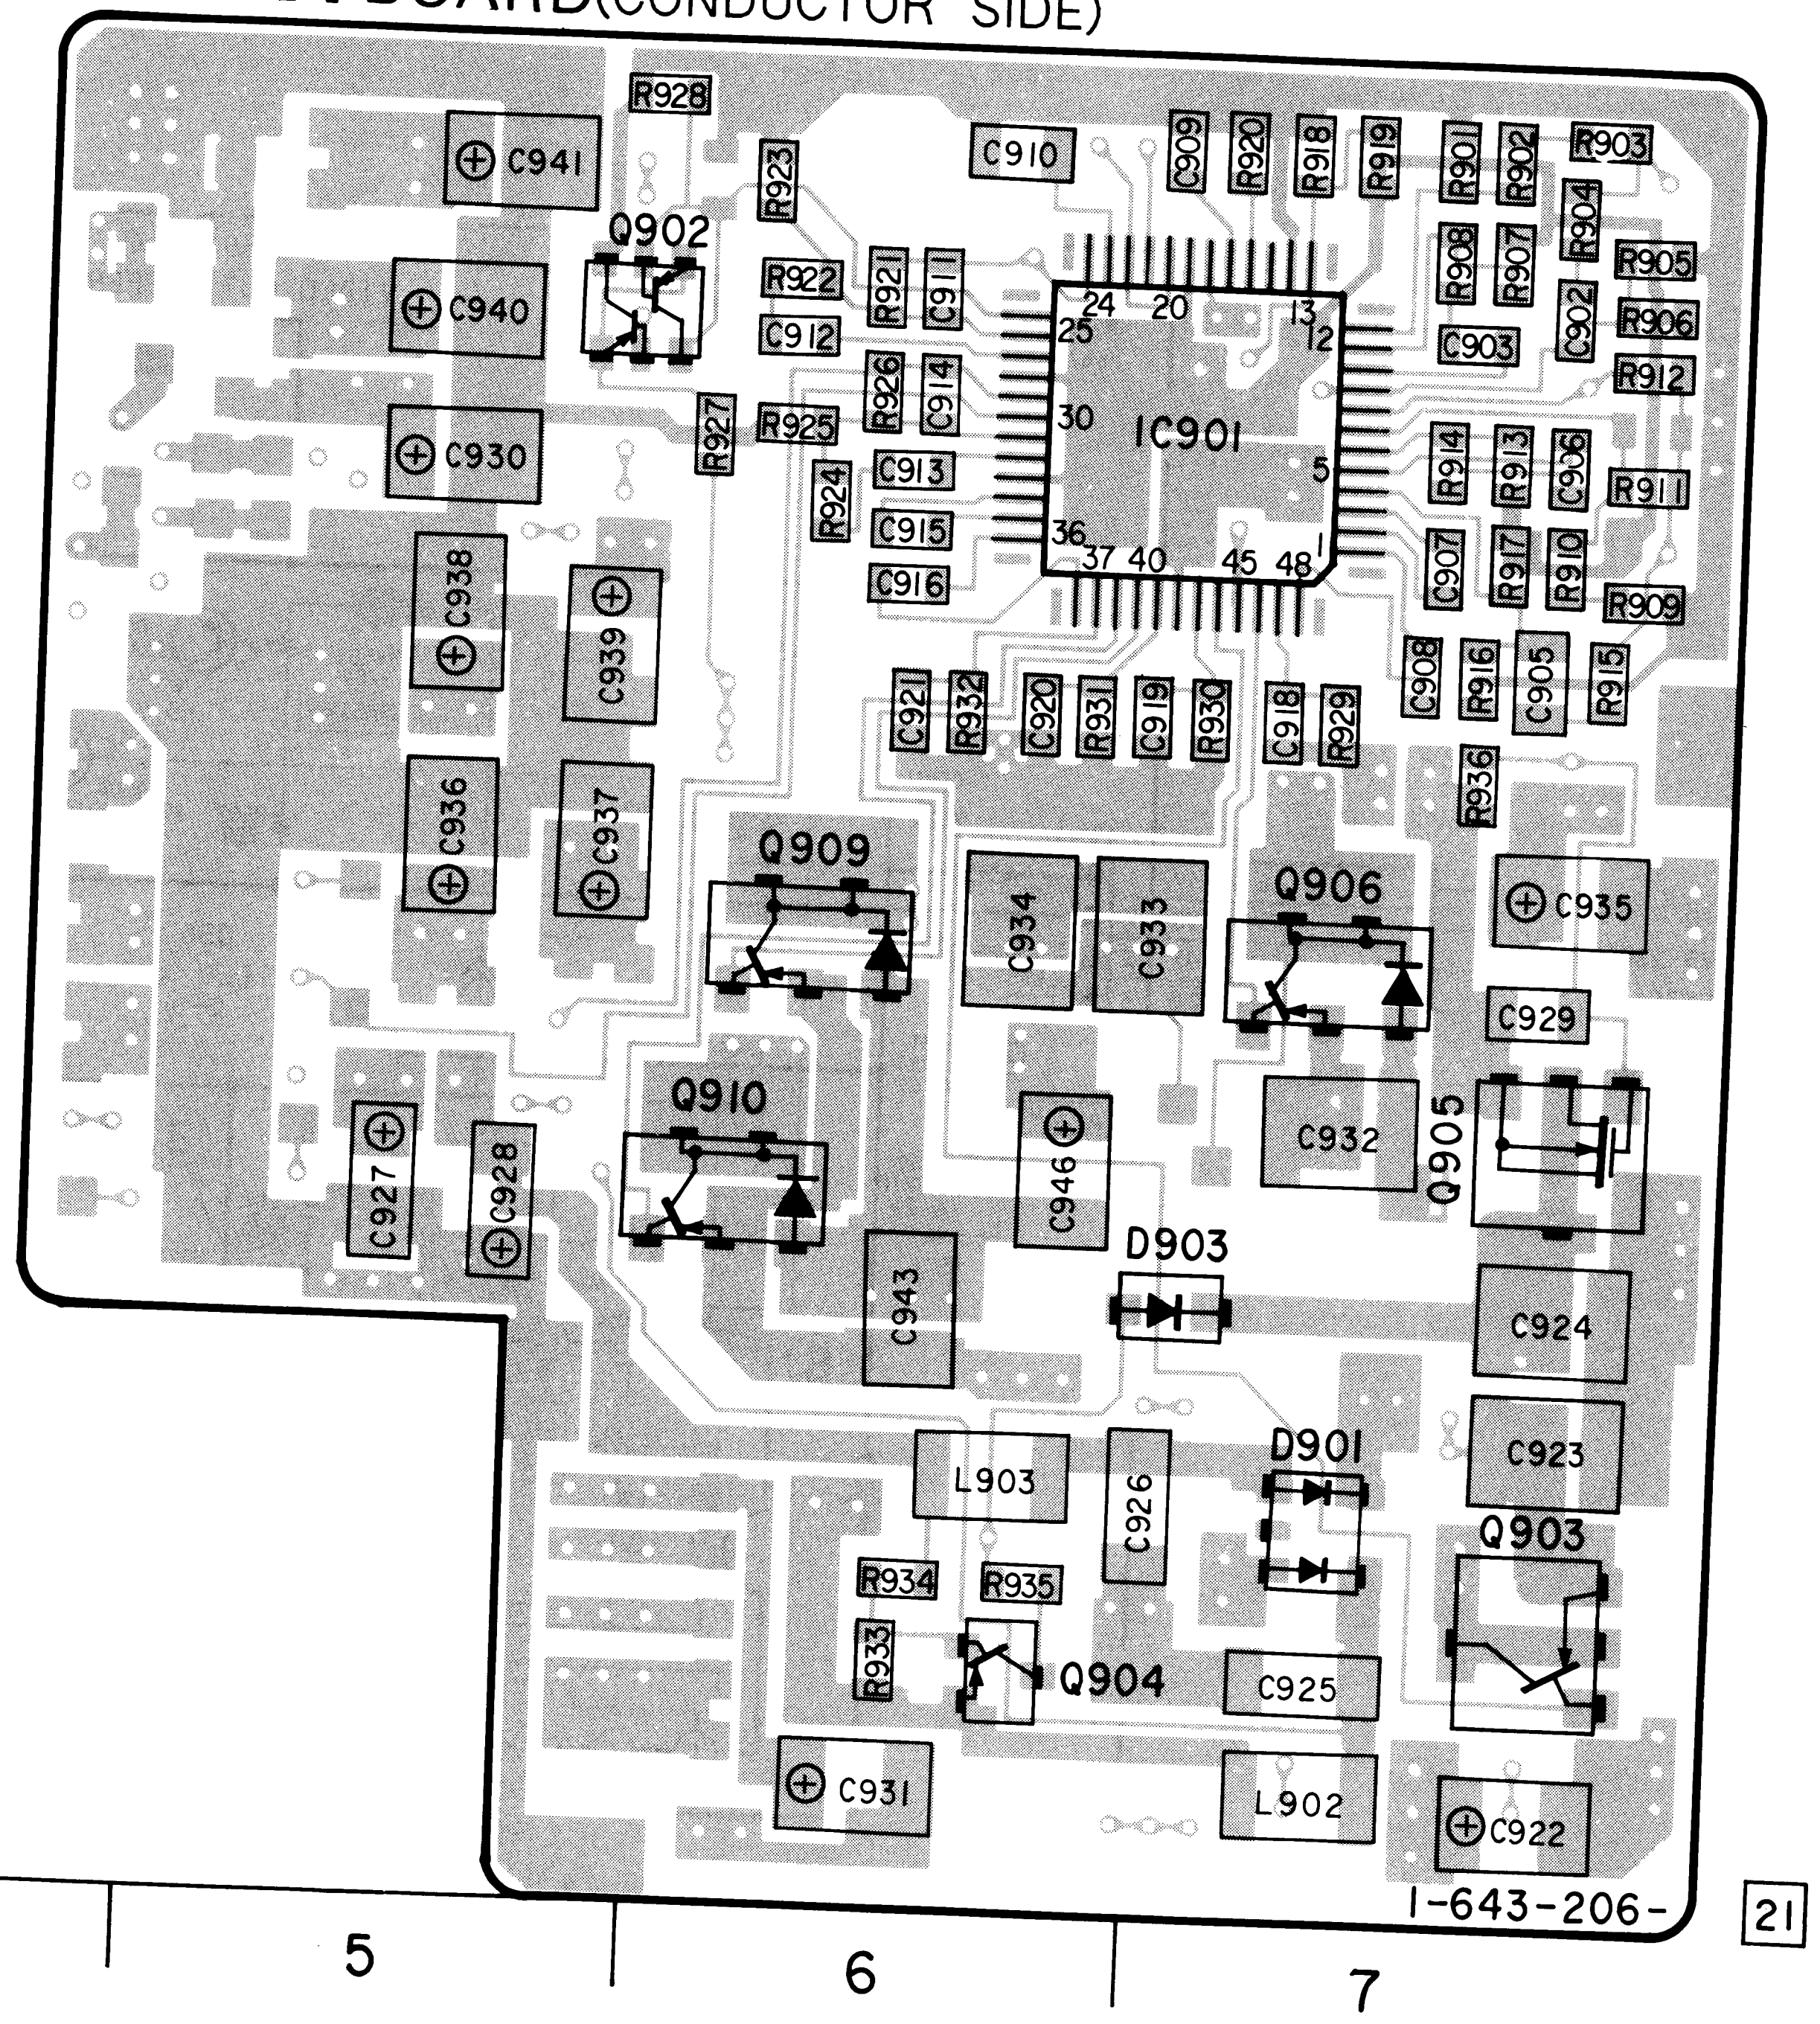
R928
C941
Q902
R923
C910
C909
R920
R918
R919
R901
R902
R903
R904
R905
R906
R912
C940
R922
C912
R921
C911
R908
R907
C903
C902
IC901
24
20
13
25
12
30
5
36
37
40
45
48
1
C930
R927
R925
R926
C914
C913
R924
C915
C916
R914
R913
C906
R911
C907
R917
R910
R909
C938
C939
C921
R932
C920
R931
C919
R930
C918
R929
C908
R916
C905
R915
C936
C937
R936
Q909
Q906
C934
C933
C935
C929
Q910
C932
Q905
C927
C928
C946
C943
D903
C924
L903
C926
D901
C923
Q903
R934
R935
R933
Q904
C925
C931
L902
C922
1-643-206-
21
5
6
7

- **For printed wiring boards.**
- DD-47P board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

< DIODE >

D901	8-719-981-59	DIODE	FC805
D902	8-719-941-09	DIODE	DAP202U
D903	8-719-988-62	DIODE	1SS355

< IC >

IC901	8-759-060-94	IC	MB3785APFV-G-BND-ER
IC902	8-759-998-98	IC	LM358D

< TRANSISTOR >

Q901	8-729-905-18	TRANSISTOR	DTC144EU
Q902	8-729-403-27	TRANSISTOR	XN4401
Q903	8-729-804-41	TRANSISTOR	2SB1122-S
Q904	8-729-905-12	TRANSISTOR	DTA144EU
Q905	8-729-015-61	TRANSISTOR	2SJ316-TD
Q906	8-729-823-84	TRANSISTOR	FP102-TL
Q907	8-729-805-25	TRANSISTOR	2SB1121-S
Q908	8-729-822-84	TRANSISTOR	2SB1202FAST
Q909	8-729-823-82	TRANSISTOR	FP101
Q910	8-729-823-82	TRANSISTOR	FP101
Q911	8-729-907-26	TRANSISTOR	IMX1
Q912	8-729-905-12	TRANSISTOR	DTA144EU
Q913	8-729-905-18	TRANSISTOR	DTC144EU

DD-47P (DC-DC CONVERTER) SCHEMATIC DIAGRAM

— Ref. No. DD-47P BOARD: 4000 series —

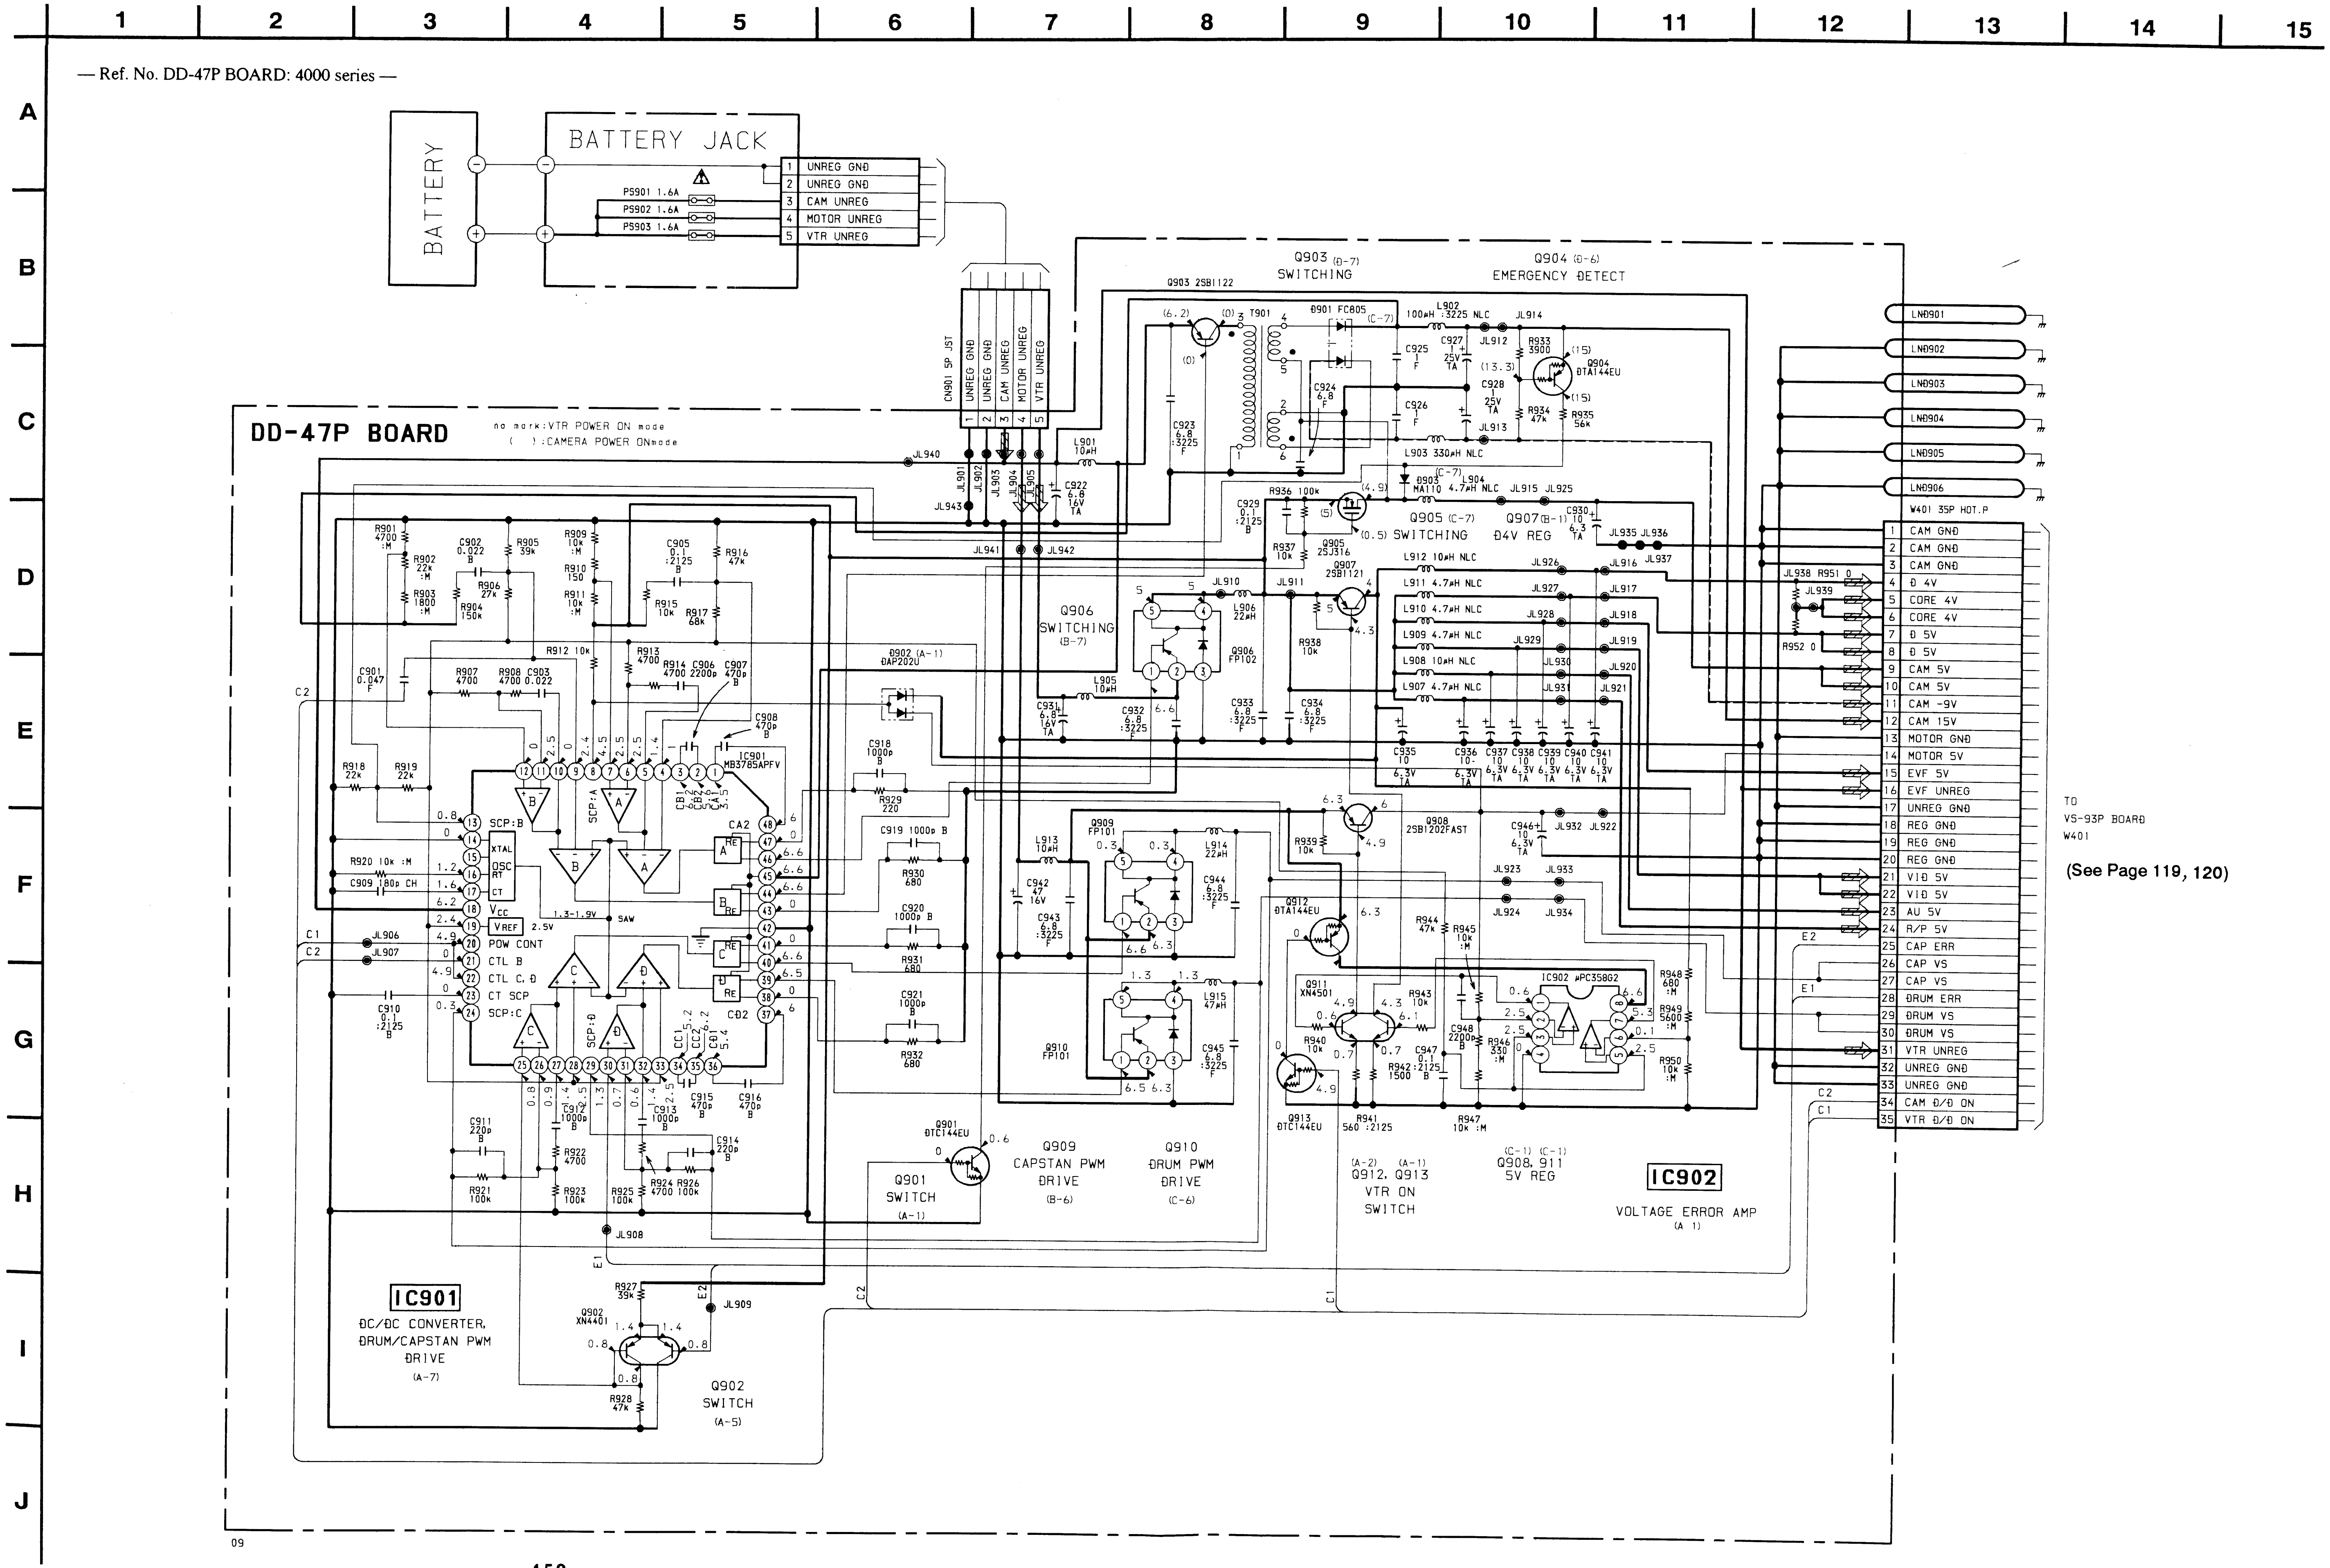
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
A
B
C
D
E
F
G
H
I
J
BATTERY
BATTERY JACK
PS901 1.6A
PS902 1.6A
PS903 1.6A
1 UNREG GND
2 UNREG GND
3 CAM UNREG
4 MOTOR UNREG
5 VTR UNREG
CN901 5P JST
DD-47P BOARD
no mark: VTR POWER ON mode
( ) : CAMERA POWER ON mode
Q903 (B-7) SWITCHING
Q903 2SB1122
Q904 (B-6) EMERGENCY DETECT
Q904 DTA144EU
T901
D901 FC805
L902 100μH :3225 NLC
L903 330μH NLC
D903 MA110
L904 4.7μH NLC
Q905 (C-7) SWITCHING
Q905 2SJ316
Q907 (B-1) D4V REG
Q907 2SB1121
Q906 SWITCHING (B-7)
Q906 FP102
D902 (A-1) DAP202U
L912 10μH NLC
L911 4.7μH NLC
L910 4.7μH NLC
L909 4.7μH NLC
L908 10μH NLC
L907 4.7μH NLC
Q908 2SB1202FAST
Q909 FP101
Q910 FP101
Q912 DTA144EU
Q911 XN4501
Q913 DTC144EU
IC902 μPC358G2
IC901 MB3785APFV
Q901 DTC144EU
Q902 XN4401
W401 35P HOT.P
LND901
LND902
LND903
LND904
LND905
LND906
1 CAM GND
2 CAM GND
3 CAM GND
4 D 4V
5 CORE 4V
6 CORE 4V
7 D 5V
8 D 5V
9 CAM 5V
10 CAM 5V
11 CAM -9V
12 CAM 15V
13 MOTOR GND
14 MOTOR 5V
15 EVF 5V
16 EVF UNREG
17 UNREG GND
18 REG GND
19 REG GND
20 REG GND
21 VID 5V
22 VID 5V
23 AU 5V
24 R/P 5V
25 CAP ERR
26 CAP VS
27 CAP VS
28 DRUM ERR
29 DRUM VS
30 DRUM VS
31 VTR UNREG
32 UNREG GND
33 UNREG GND
34 CAM D/D ON
35 VTR D/D ON
TO VS-93P BOARD W401
(See Page 119, 120)
SCP:B
XTAL OSC
RT
CT
Vcc
VREF 2.5V
POW CONT
CTL B
CTL C, D
CT SCP
SCP:C
SCP:A
SCP:D
CA2
CB2
CD2
SAW
Q901 SWITCH (A-1)
Q909 CAPSTAN PWM DRIVE (B-6)
Q910 DRUM PWM DRIVE (C-6)
(A-2) (A-1) Q912, Q913 VTR ON SWITCH
(C-1) (C-1) Q908, 911 5V REG
IC902 VOLTAGE ERROR AMP (A-1)
IC901 DC/DC CONVERTER, DRUM/CAPSTAN PWM DRIVE (A-7)
Q902 SWITCH (A-5)
09

4-3. SEMICONDUCTORS

AK6420F
LM358D


8 7 6 5
1 2 3 4
(TOP VIEW)

AN2512S

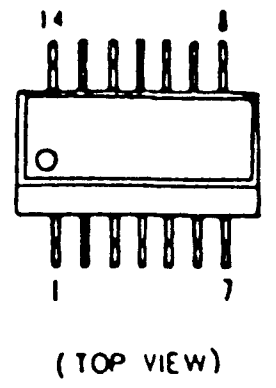
14
8
1
7
(TOP VIEW)

CXA-1618N-E2
MCD004BN

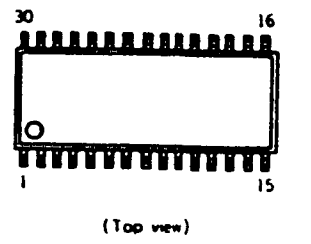
30
16
1
15
(Top view)

CXA1208R
CXA1481AR
CXA1488RR

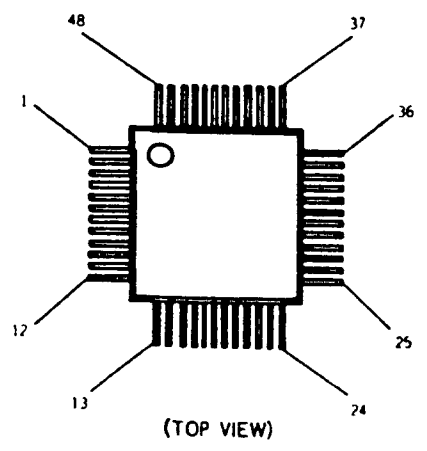
48
37
1
36
12
25
13
24
(TOP VIEW)

CXA1211M
NJM2234M
RC3414M


8 7 6 5
1 2 3 4
(TOP VIEW)

CXA1452
CXL5502M
MPC1727VMER


16
9
1
8
(TOP VIEW)

CXA1536QQ
LB8110M

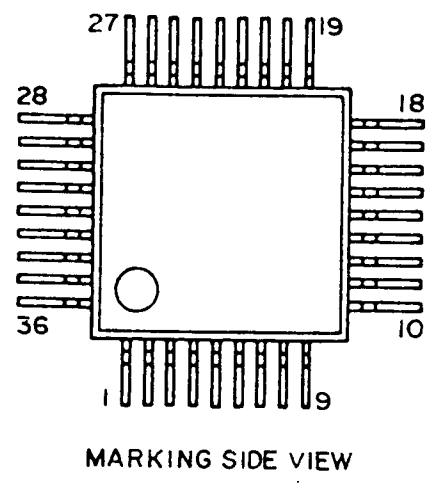
27
19
28
18
36
10
1
9
MARKING SIDE VIEW

CXD2100AQ
µPD75316GF

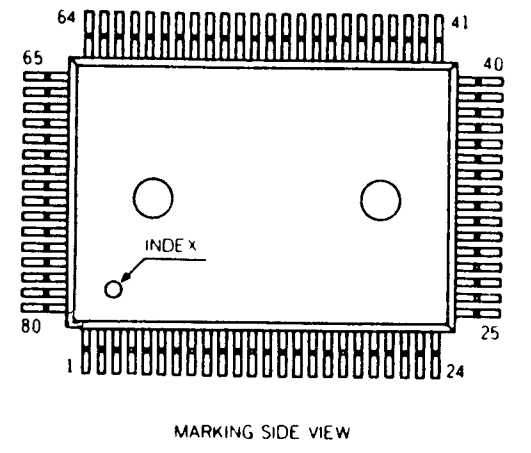
64
41
65
40
INDEX
80
25
1
24
MARKING SIDE VIEW

CXD1250N
CXD2104N
LC78865M
MB88346BPFV
MPC1724VMEL
µPD7564G-540

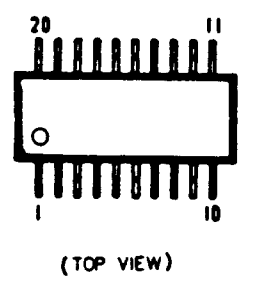
20
11
1
10
(TOP VIEW)

CXP80624-281R/293R

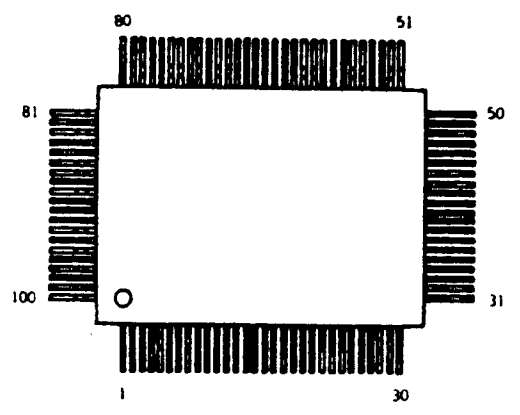
80
51
81
50
100
31
1
30

LB1830M

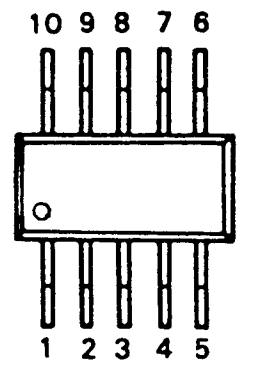
10 9 8 7 6
1 2 3 4 5

LM324D


14
8
1
7
(TOP VIEW)

MB8464

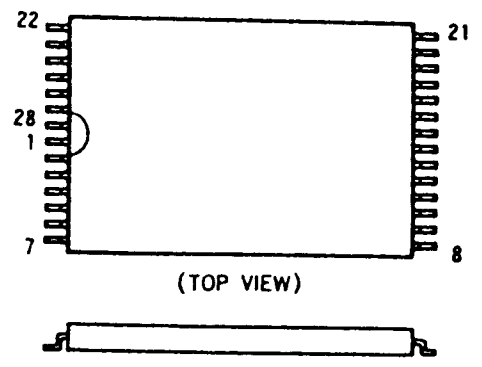
22
21
28
1
7
8
(TOP VIEW)

MCD002AR



RC3414M


8 7 6 5
1 2 3 4
(TOP VIEW)

SBX1619-51

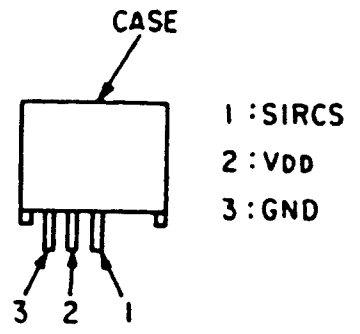
CASE
1 :SIRCS
2 :VDD
3 :GND
3
2
1

TL1596CDB
XRU4066BF


14
8
1
7
(TOP VIEW)

PT4850F



XP4601

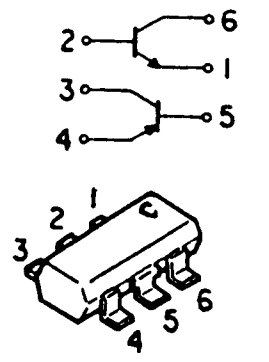
2
6
3
1
4
5
2
1
3
4
5
6

MA110

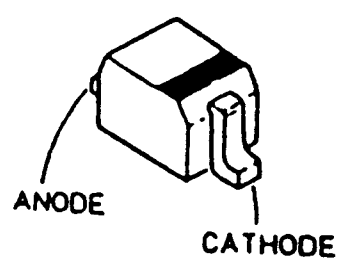
ANODE
CATHODE

MA728


Anode
Cathode

TLS221

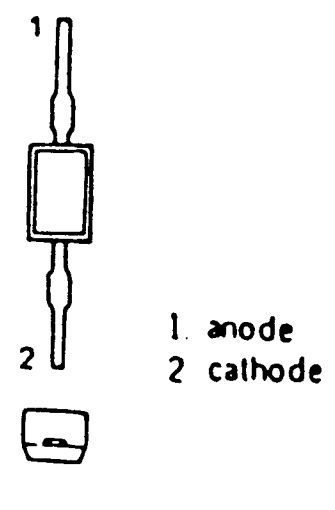
1
2
1 anode
2 cathode

BR4371F


anode
cathode

GL453S

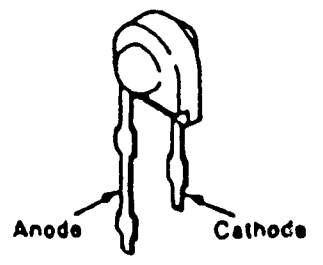
Anode
Cathode

SECTION 5
EXPLODED VIEWS

NOTE:
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked " * " are not stocked since they are seldom required for routine service. Some delav should be anticipated when order
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list is given in the last of this parts list.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

5-1. CABINET (L) AND F PANEL ASSEMBLIES

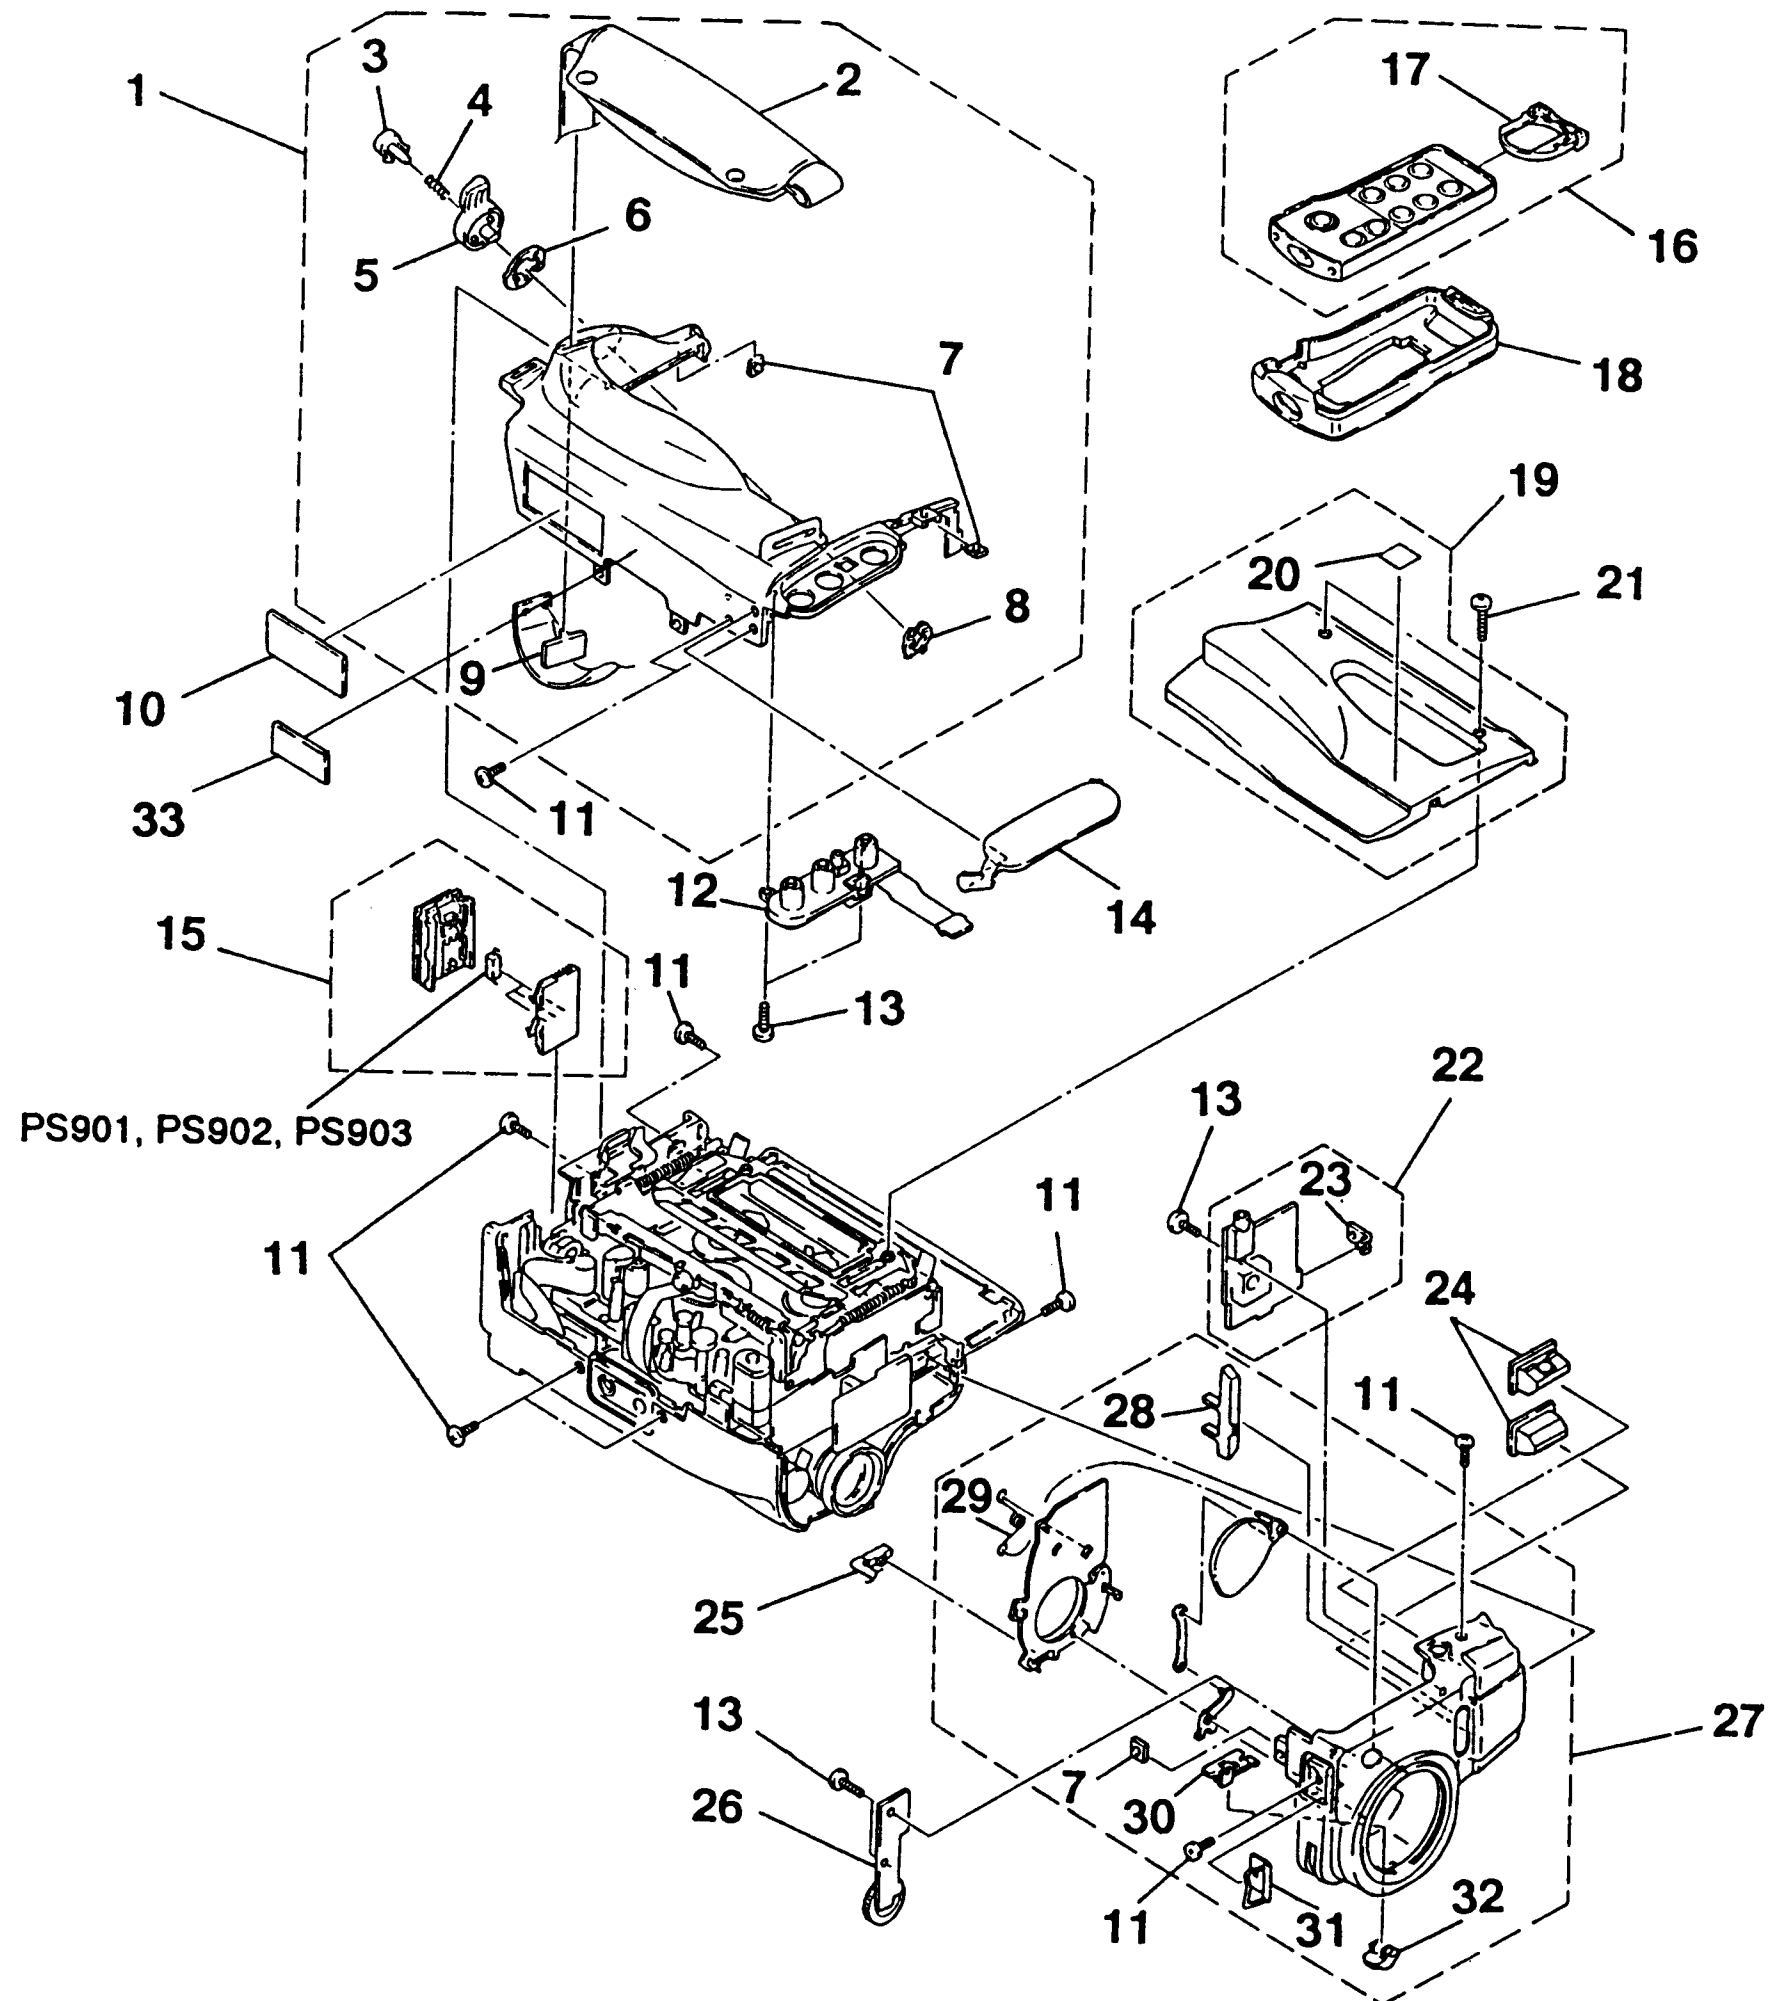
1
2
3
4
5
6
7
8
9
10
33
11
12
13
14
15
PS901, PS902, PS903
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32

Ref. No.	Part No.	Description	Remark
1	X-3941-602-1	CABINET (L) ASSY	(AEP:BLACK, UK model)
1	X-3941-726-1	CABINET (L) ASSY	(E, Australian, Tourist model)
1	X-3941-839-1	CABINET (L) ASSY	(AEP:BLUE model)
2	3-736-807-01	BELT, GRIP	
3	3-942-950-01	BUTTON, S/S	
4	3-578-221-00	SPRING, COMPRESSION	
5	3-942-985-01	KNOB, STAND-BY	
6	3-736-364-01	SPRING	
7	3-718-233-01	NUT, PLATE	
8	3-942-894-01	HOLDER, STAND-BY KNOB	
9	3-942-895-01	STOPPER, BELT	
* 10	3-948-004-01	LABEL, MODEL NUMBER	(AEP model)
* 10	3-948-346-01	LABEL, MODEL NUMBER	(EXCEPT AEP model)
11	3-719-381-01	SCREW (M2X4)	
12	1-537-369-11	TERMINAL BOARD (JK-3100)	(E, Australian, Tourist model)
12	1-537-369-21	TERMINAL BOARD (JK-3100)	(AEP, UK model)
13	3-719-601-01	SCREW (B2X5), TAPPING	
14	3-943-012-01	COVER, JACK	(EXCEPT AEP:BLUE model)
14	3-943-012-21	COVER, JACK	(AEP:BLUE model)
15	1-537-368-21	TERMINAL BOARD (BATTERY)	
16	1-693-137-31	REMOTE COMMANDER (CAM CORDER) (RMT-701)	
17	3-708-412-01	LID, REMOTE COMMANDER	
* 18	3-943-154-11	HOLDER (B), REMOTE CONTROL	
19	X-3941-583-1	LID ASSY, CASSETTE	(EXCEPT AEP : BLUE model)
19	X-3941-840-1	LID ASSY, CASSETTE	(AEP:BLUE model)
* 20	3-703-713-41	STICKER, SONY SYMBOL (10)	
21	3-727-902-11	SCREW (M1.4), SPECIAL	
* 22	A-7063-167-A	MA-143P BOARD, COMPLETE	
* 23	3-947-506-01	PLATE, GROUND, MICROPHONE	
24	A-7091-800-A	MICROPHONE UNIT	
25	1-692-084-11	SWITCH ASSY	
* 26	A-7071-607-A	MF-175P BOARD, COMPLETE	(EXCEPT AEP:BLUE model)
* 26	A-7071-648-A	MF-175P BOARD, COMPLETE	(AEP:BLUE model)
27	X-3941-584-1	PANEL ASSY, F	(EXCEPT AEP:BLUE model)
27	X-3941-843-1	PANEL ASSY, F	(AEP:BLUE model)
28	3-947-361-01	PLATE, LIGHT GUIDE	
29	3-947-357-01	SPRING, TORSION	
30	3-947-800-01	HOLDER, S KNOB	
31	3-947-358-01	STAND	
32	3-942-905-01	KNOB, S	
* 33	3-704-235-01	LABEL, CAUTION (UK)	
⚠PS901	1-532-841-41	LINK, IC	
⚠PS902	1-532-841-41	LINK, IC	
⚠PS903	1-532-841-41	LINK, IC	

5-2. CABINET (R) AND EVF ASSEMBLIES

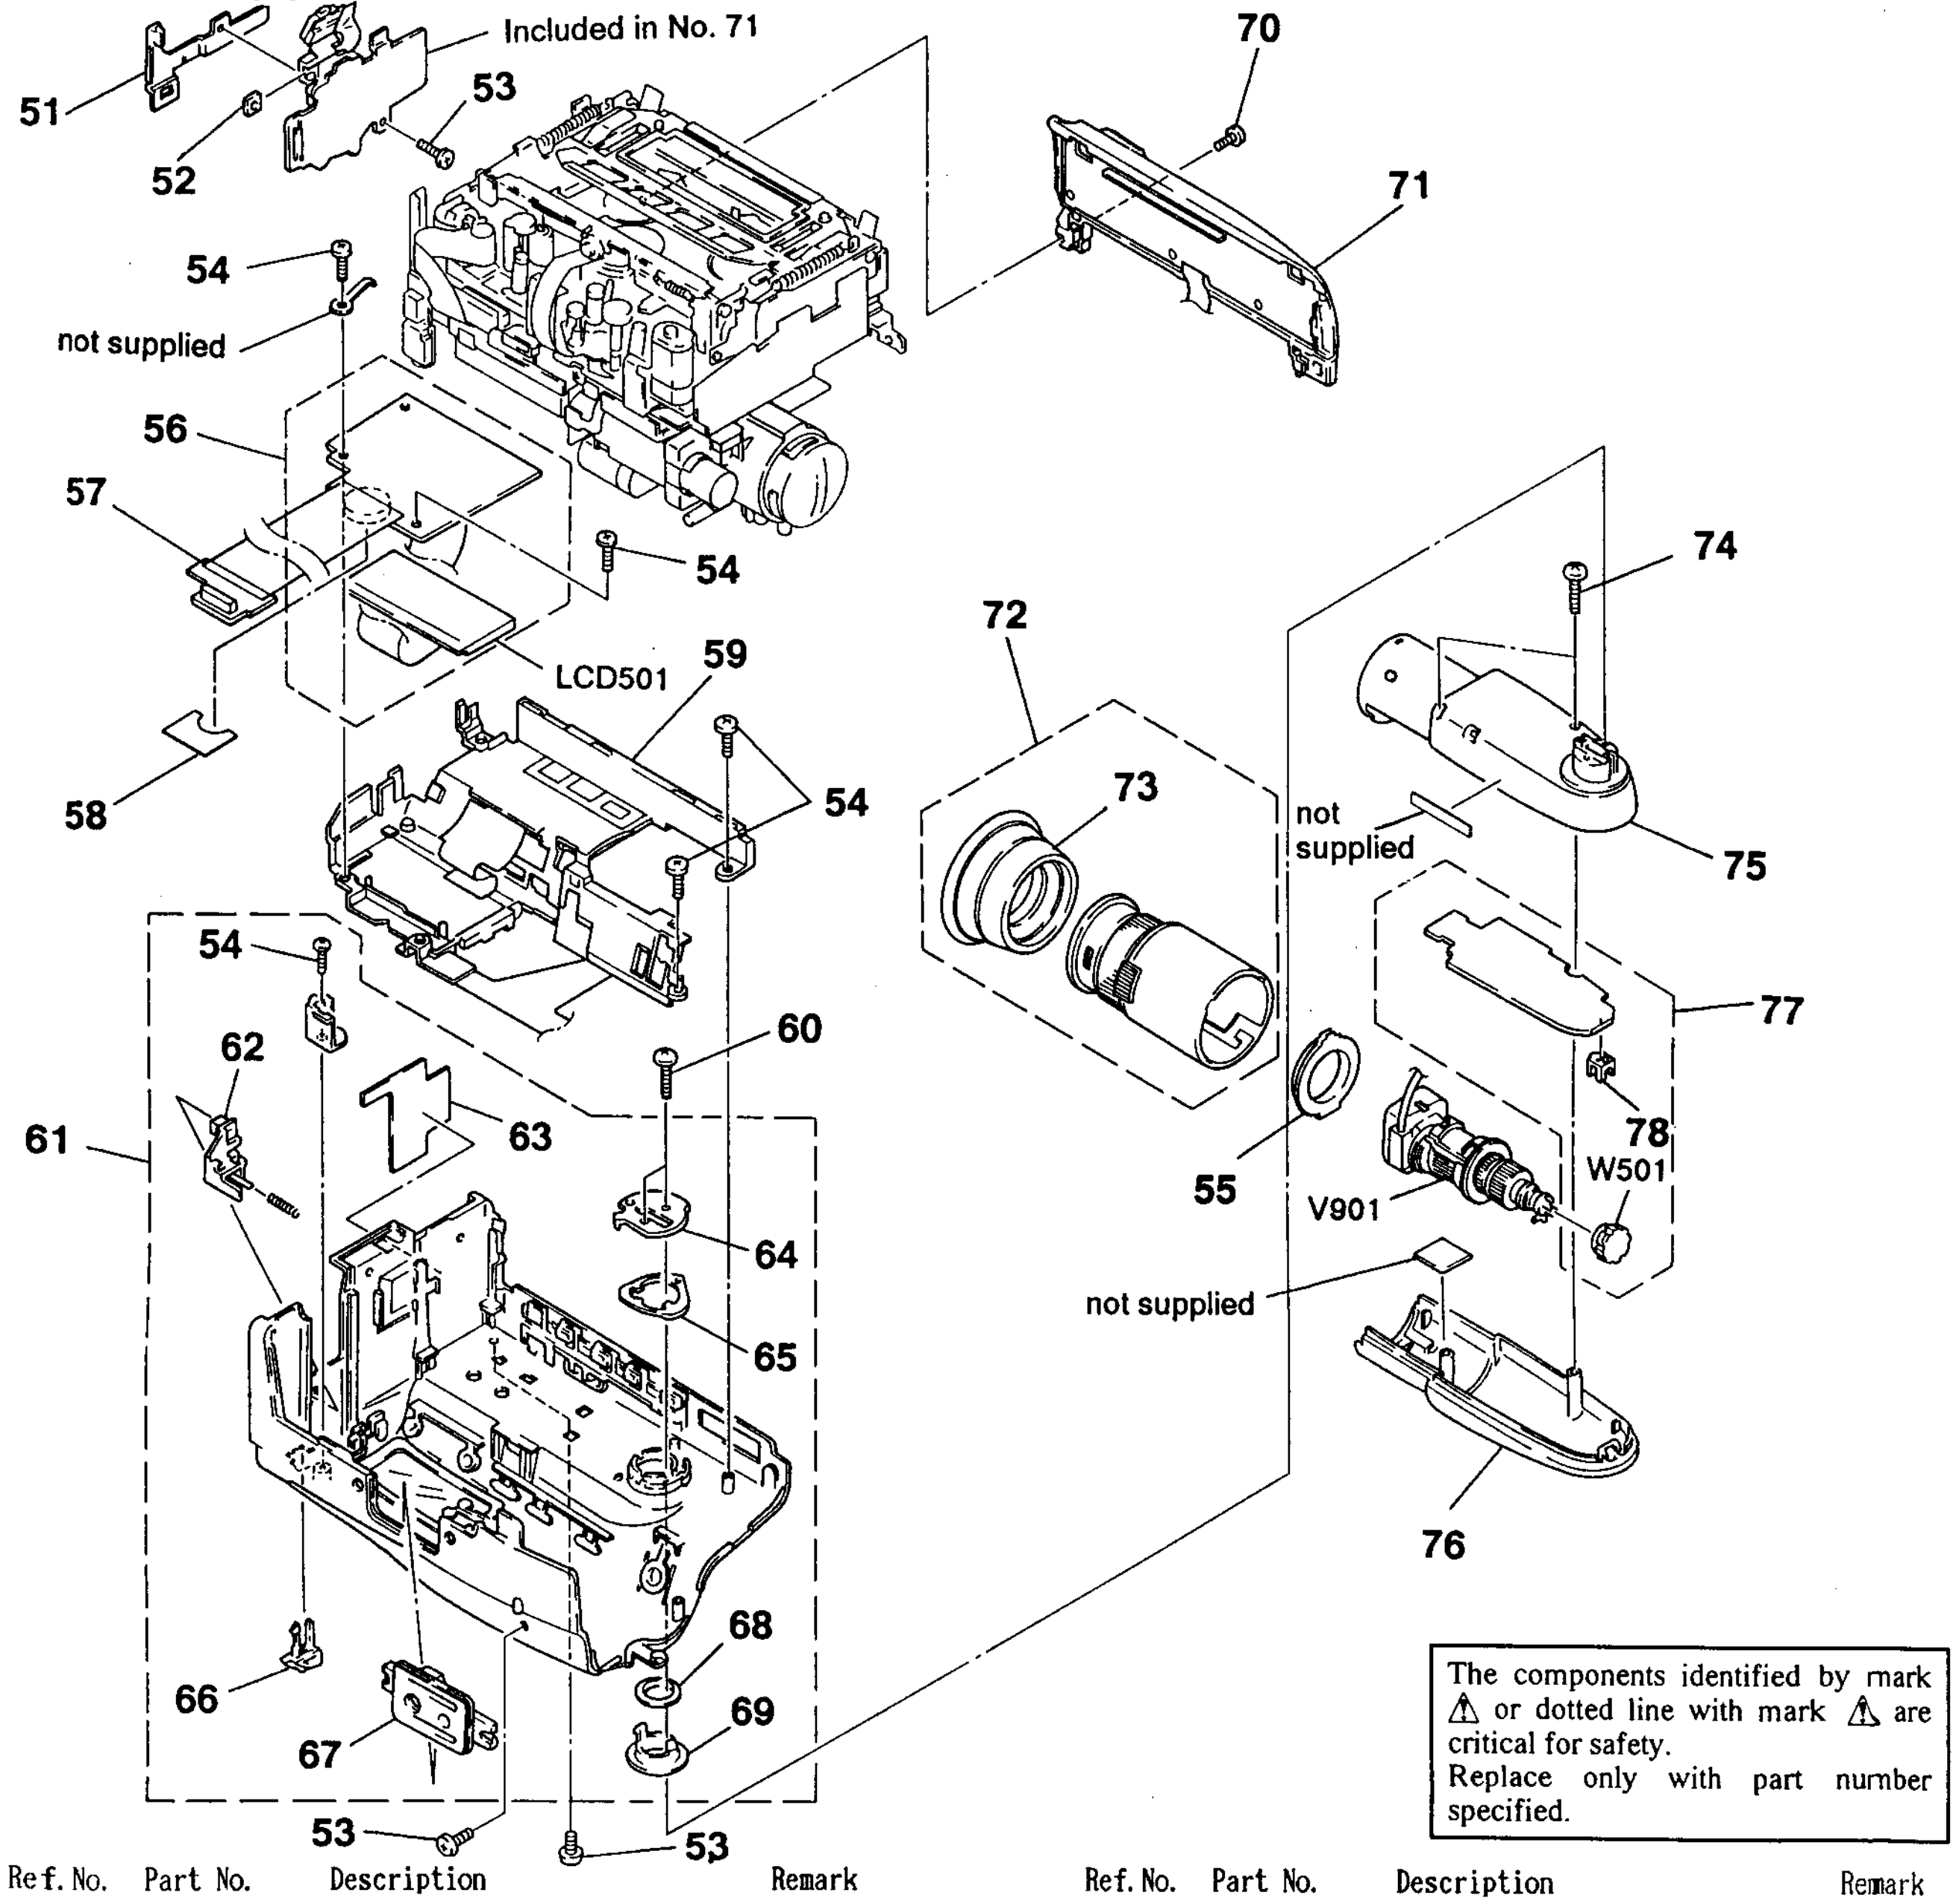

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
* 51	3-947-354-01	BRACKET (L)	
52	3-718-233-01	NUT, PLATE	
53	3-719-381-01	SCREW (M2X4)	
54	3-719-601-01	SCREW (B2X5), TAPPING	
55	3-747-116-01	COVER, CRT	
* 56	A-7063-166-A	LC-40P BOARD, COMPLETE(EXCEPT AEP:BLUE model)	
* 56	A-7063-258-A	LC-40P BOARD, COMPLETE (AEP:BLUE model)	
* 57	A-7071-606-A	CN-64P BOARD, COMPLETE	
* 58	3-948-369-01	SHEET, BLIND	
59	1-466-711-11	SWITCH BLOCK, CONTROL (CF3200) (E, Australian, Tourist model)	
* 59	1-466-711-21	SWITCH BLOCK, CONTROL (CF3200) (AEP,UK model)	
60	3-740-546-01	SCREW (M2X10)	
61	X-3941-580-1	CABINET (R) ASSY (AEP:BLACK,UK model)	
61	X-3941-841-1	CABINET (R) ASSY (AEP:BLUE model)	
61	X-3941-915-1	CABINET (R) ASSY (E,Australian,Tourist model)	
62	3-947-449-01	LOCK, BATTERY	
* 63	3-944-102-01	LABEL, BATTERY FITTING	
64	3-942-897-01	PLATE, LOCK, TILT	
65	3-747-110-01	SPRING, LEAF, TILT	
66	3-943-068-01	KNOB, BATTERY (EXCEPT AEP:BLUE model)	
66	3-943-068-31	KNOB, BATTERY (AEP:BLUE model)	

Ref. No.	Part No.	Description	Remark
67	3-942-911-01	SCREW, TRIPOD	
68	3-747-112-01	RING, TILT	
69	3-747-109-01	SLEEVE, EVF	
70	3-713-786-51	SCREW (M2X3)	
71	1-466-710-11	SWITCH BLOCK, CONTROL (ZM3200) (AEP, UK model)	
71	1-466-710-21	SWITCH BLOCK, CONTROL (ZM3200) (E, Australian, Tourist model)	
72	X-3941-603-1	HOLDER ASSY, FINDER	
73	3-946-426-01	EYE CUP	
74	3-713-790-31	SCREW (M2X8), TAPPING, P3	
75	X-3940-706-1	CABINET (L) ASSY, EVF (EXCEPT AEP : BLUE model)	
75	X-3941-842-1	CABINET (L) ASSY, EVF (AEP:BLUE model)	
76	3-943-077-01	CABINET(R), EVF (EXCEPT AEP:BLUE model)	
76	3-943-077-65	CABINET(R), EVF (AEP:BLUE model)	
* 77	A-7062-880-A	VF-42P BOARD, COMPLETE	
78	3-942-888-01	HOLDER, LID	
LCD501	1-809-671-21	DISPLAY PANEL, LIQUID CRYSTAL	
⚠V901	1-452-565-11	CRT ASSY (M01KTA80WB)	
⚠W501	1-540-019-21	SOCKET ASSY, CRT	

5-3. MAIN BOARDS ASSEMBLY

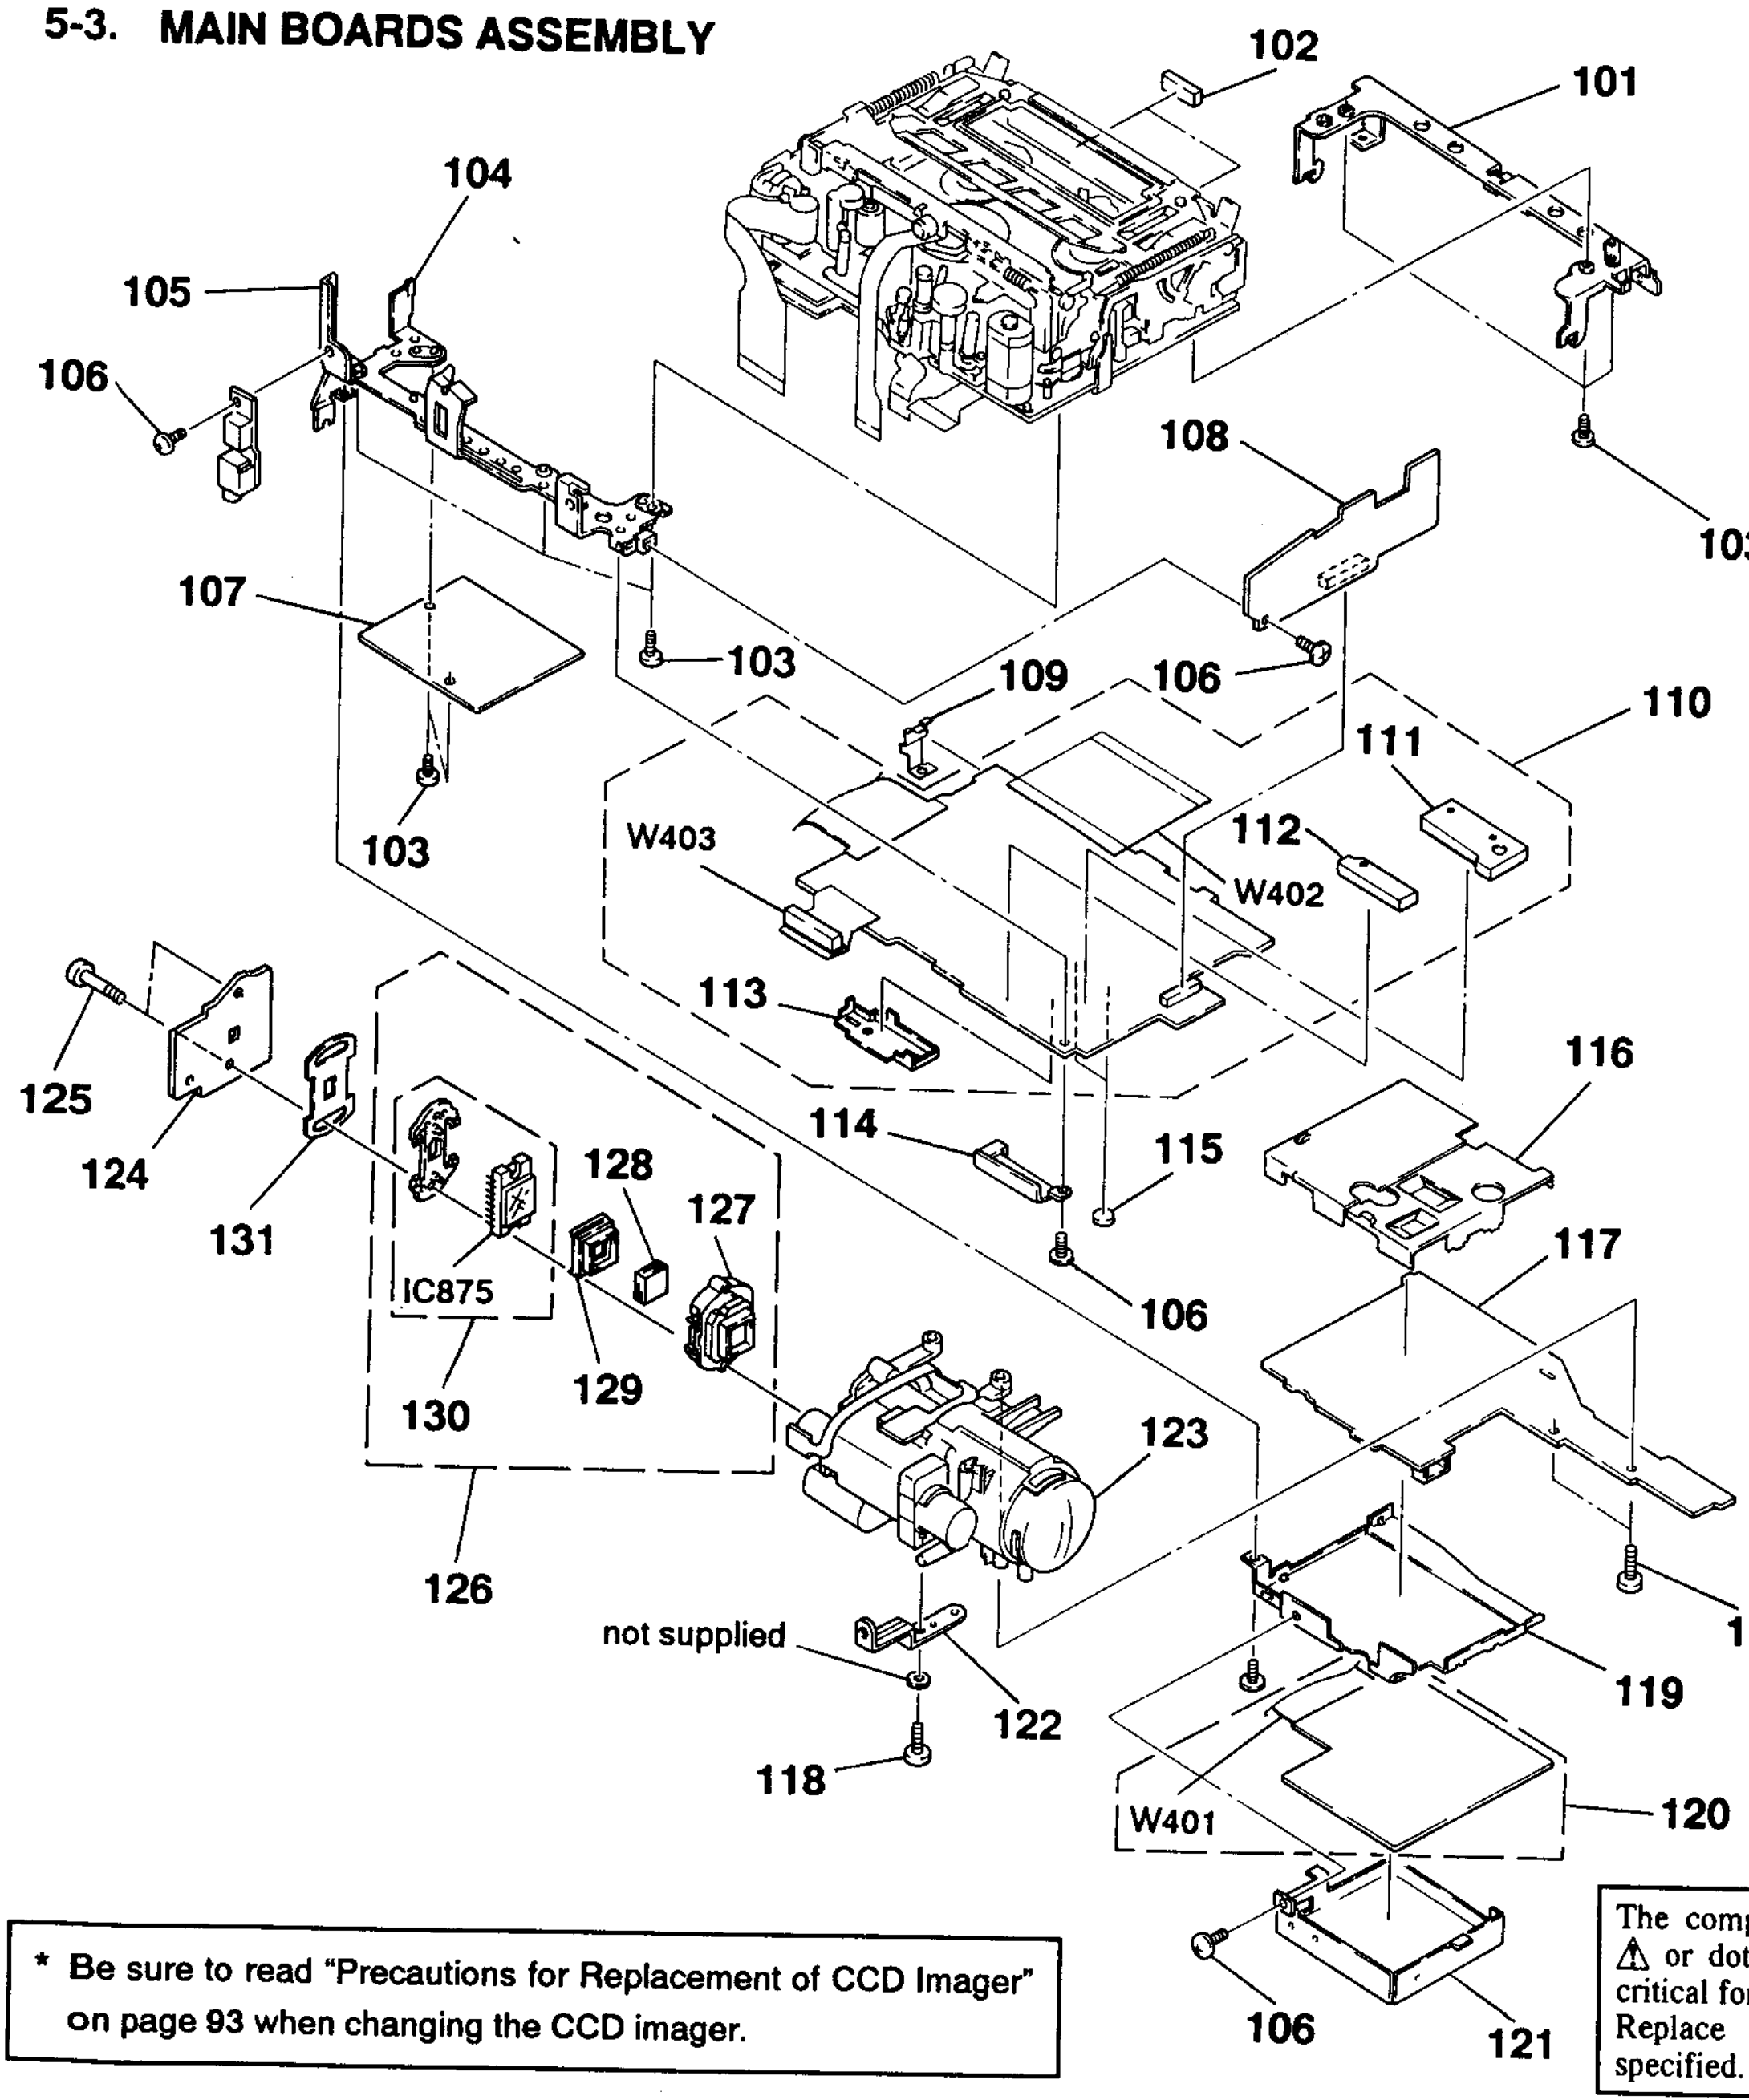

* Be sure to read "Precautions for Replacement of CCD Imager" on page 93 when changing the CCD imager.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
* 101	3-947-459-01	FRAME (UPPER)	
102	3-942-882-01	SPACER, FK	
103	3-703-816-41	SCREW (M1.4X2.5), SPECIAL HEAD	
104	3-942-921-11	FRAME (LOWER)	
* 105	A-7071-605-A	LJ-9P BOARD, COMPLETE	
106	3-713-786-51	SCREW (M2X3)	
107	3-943-959-11	SHEET, VM	
* 108	A-7063-165-A	AU-135P BOARD, COMPLETE	
* 109	3-947-355-01	PLATE, GROUND, VS	
* 110	A-7063-162-A	VS-93P BOARD, COMPLETE (AEP, UK model)	
* 110	A-7063-275-A	VS-93P BOARD, COMPLETE (E, Australian, Tourist model)	
111	3-943-007-01	CASE (LOWER), SHIELD, RP	
112	3-943-009-01	PLATE, SHIELD, FE	
113	3-943-006-01	CASE (UPPER), SHIELD, RP	
114	3-943-008-01	PLATE, SHIELD, RP CONNECTOR	
115	3-943-014-01	CUSHION, RUBBER	
* 116	3-947-347-01	CASE (LOWER), SHIELD, VC	
* 117	A-7063-163-A	VC-112P BOARD, COMPLETE	
118	3-719-601-01	SCREW (B2X5), TAPPING	
* 119	X-3941-473-1	CASE (UPPER) ASSY, SHIELD, VC	
*⚠120	A-7063-161-A	DD-47P BOARD, COMPLETE (DC-DC CONVERTER UNIT)	
* 121	3-947-352-01	CASE (UPPER), SHIELD, DD	
* 122	3-947-442-01	BRACKET (A), FITTING	
123	1-547-548-11	LENS, ZOOM (VCL-6210WC)	
* 124	A-7063-164-A	CD-84P BOARD, COMPLETE	
125	3-947-268-01	SCREW (P TIGHT) (2), TAPPING	
126	A-7030-322-A	CCD ASSY (BOND)	
127	3-947-818-11	ADAPTOR (D), CCD	
128	1-547-558-21	FILTER BLOCK, OPTICAL	
129	3-947-820-11	RUBBER (D), SEAL	
130	A-7030-321-A	CCD BLOCK ASSY (BOND)	
* 131	3-947-821-01	SHEET (D), INSULATING	
IC875	8-752-607-39	IC ICX045BKA-2 (CCD IMAGER)	
W401	1-690-817-11	CABLE, FLAT	
W402	1-644-285-11	FP-572 FLEXIBLE BOARD	
W403	1-630-591-11	FP-182 FLEXIBLE BOARD	

5-4. CASSETTE COMPARTMENT HOLDER ASSEMBLY

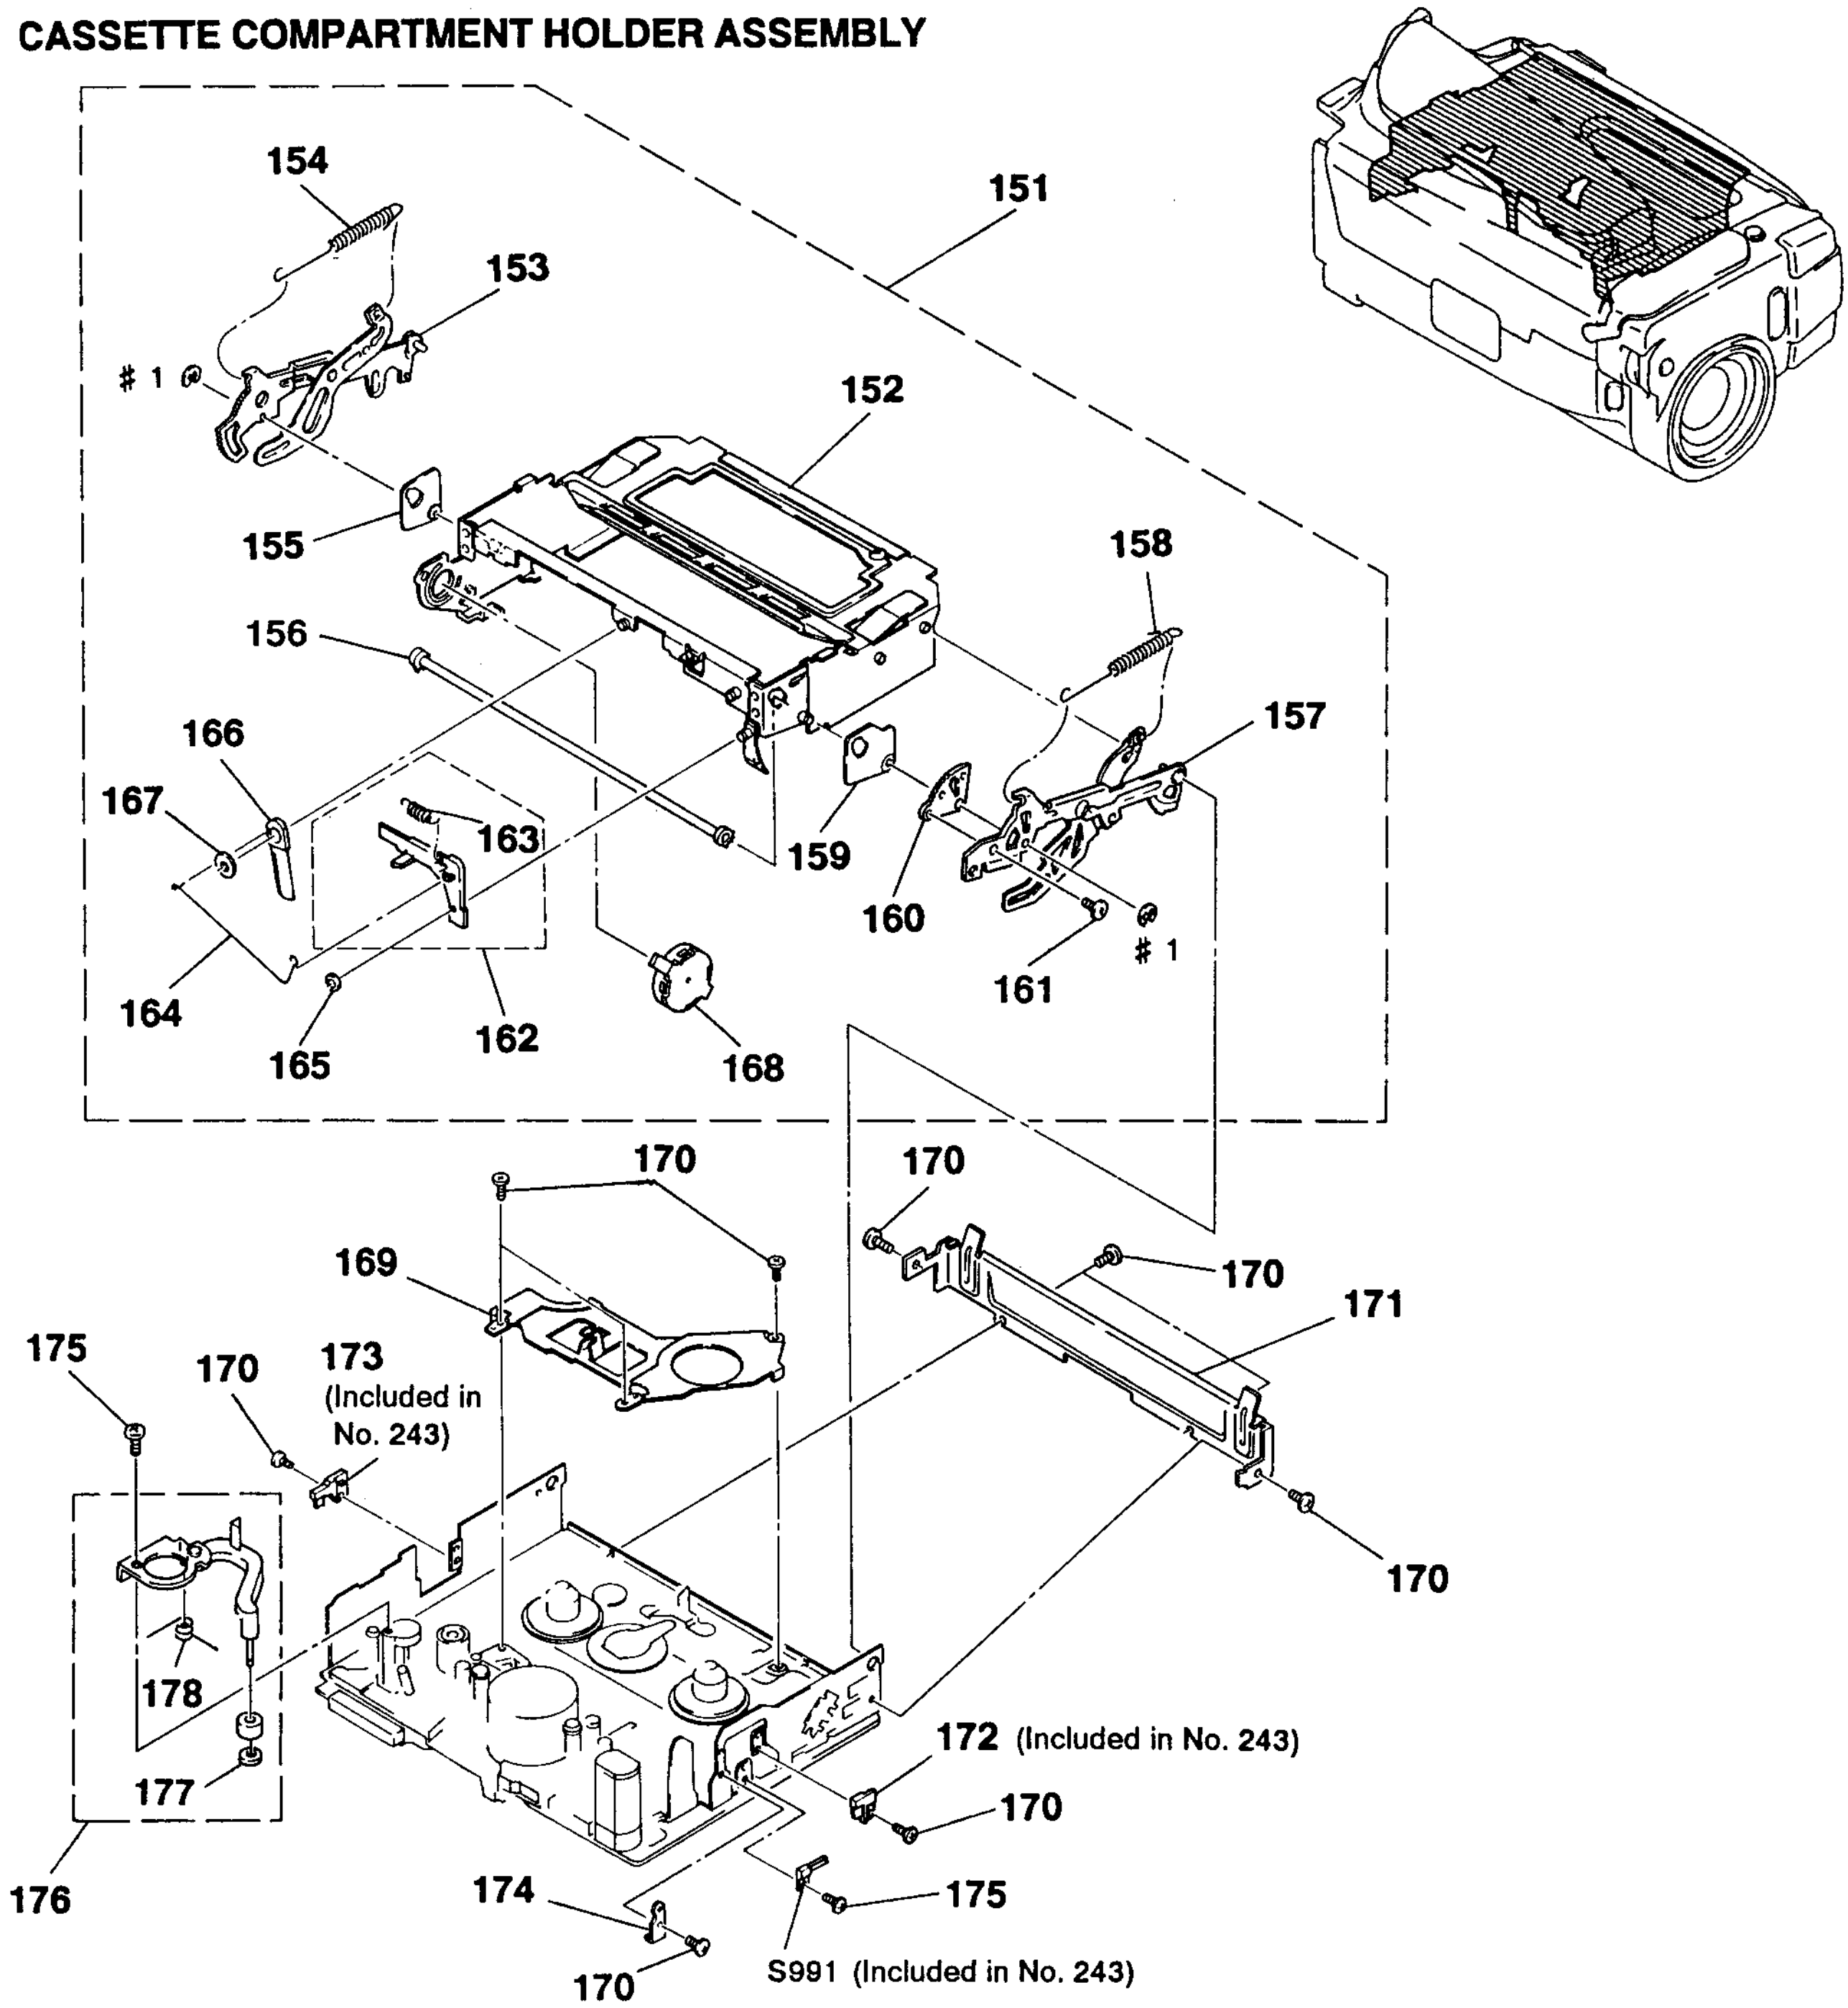
154
151
153
# 1
152
155
158
156
157
166
167
163
159
160
# 1
164
161
162
165
168
170
170
169
170
171
175
170
173
(Included in No. 243)
170
178
172 (Included in No. 243)
177
170
176
174
175
S991 (Included in No. 243)
170

Ref. No.	Part No.	Description	Remark
151	A-7040-255-A	HOLDER BLOCK ASSY (L)	
152	X-3940-680-1	HOLDER ASSY (L)	
153	X-3940-677-1	ARM (T) ASSY (L), F	
154	3-739-872-01	SPRING, TENSION	
155	3-728-145-01	BEARING (T), MIDWAY GEAR	
156	X-3727-920-1	GEAR ASSY, MIDWAY	
157	X-3940-678-1	ARM (S) ASSY (L), F	
158	3-739-873-01	SPRING, TENSION	
159	3-728-146-01	BEARING (S), MIDWAY GEAR	
160	3-739-808-01	PLATE (2), ADJUSTMENT, C ARM	
161	3-728-126-01	SCREW (M1.4X2), SPECIAL HEAD	
162	A-7040-164-A	ARM BLOCK ASSY, TP	
163	3-509-127-00	SPRING, TENSION	
164	3-728-277-01	BAR, JOINT	
165	3-331-007-11	WASHER	
166	X-3940-991-1	PROTECTOR ASSY (2), T	
167	3-749-304-01	WASHER, STOPPER	
168	X-3739-809-1	DAMPER ASSY (2)	
169	3-942-924-01	BASE (L), LED	
170	3-728-103-11	SCREW (M1.4X1.6), SPECIAL HEAD	
171	3-943-055-01	FRAME (L), LS	
172	3-727-957-01	HOLDER (S), SENSOR	
173	3-727-954-01	HOLDER (T), SENSOR	
174	3-727-946-01	SUPPORT, LS	
175	3-728-148-11	SCREW (M1.4X2.5), SPECIAL HEAD	
176	A-7040-264-D	ROLLER BLOCK ASSY, HC	
177	3-321-393-11	WASHER, STOPPER	
178	3-943-439-02	SPRING, TORSION	
S991	1-572-611-11	SWITCH, LEAF (C LOCK)	

5-5. LS CHASSIS ASSEMBLY

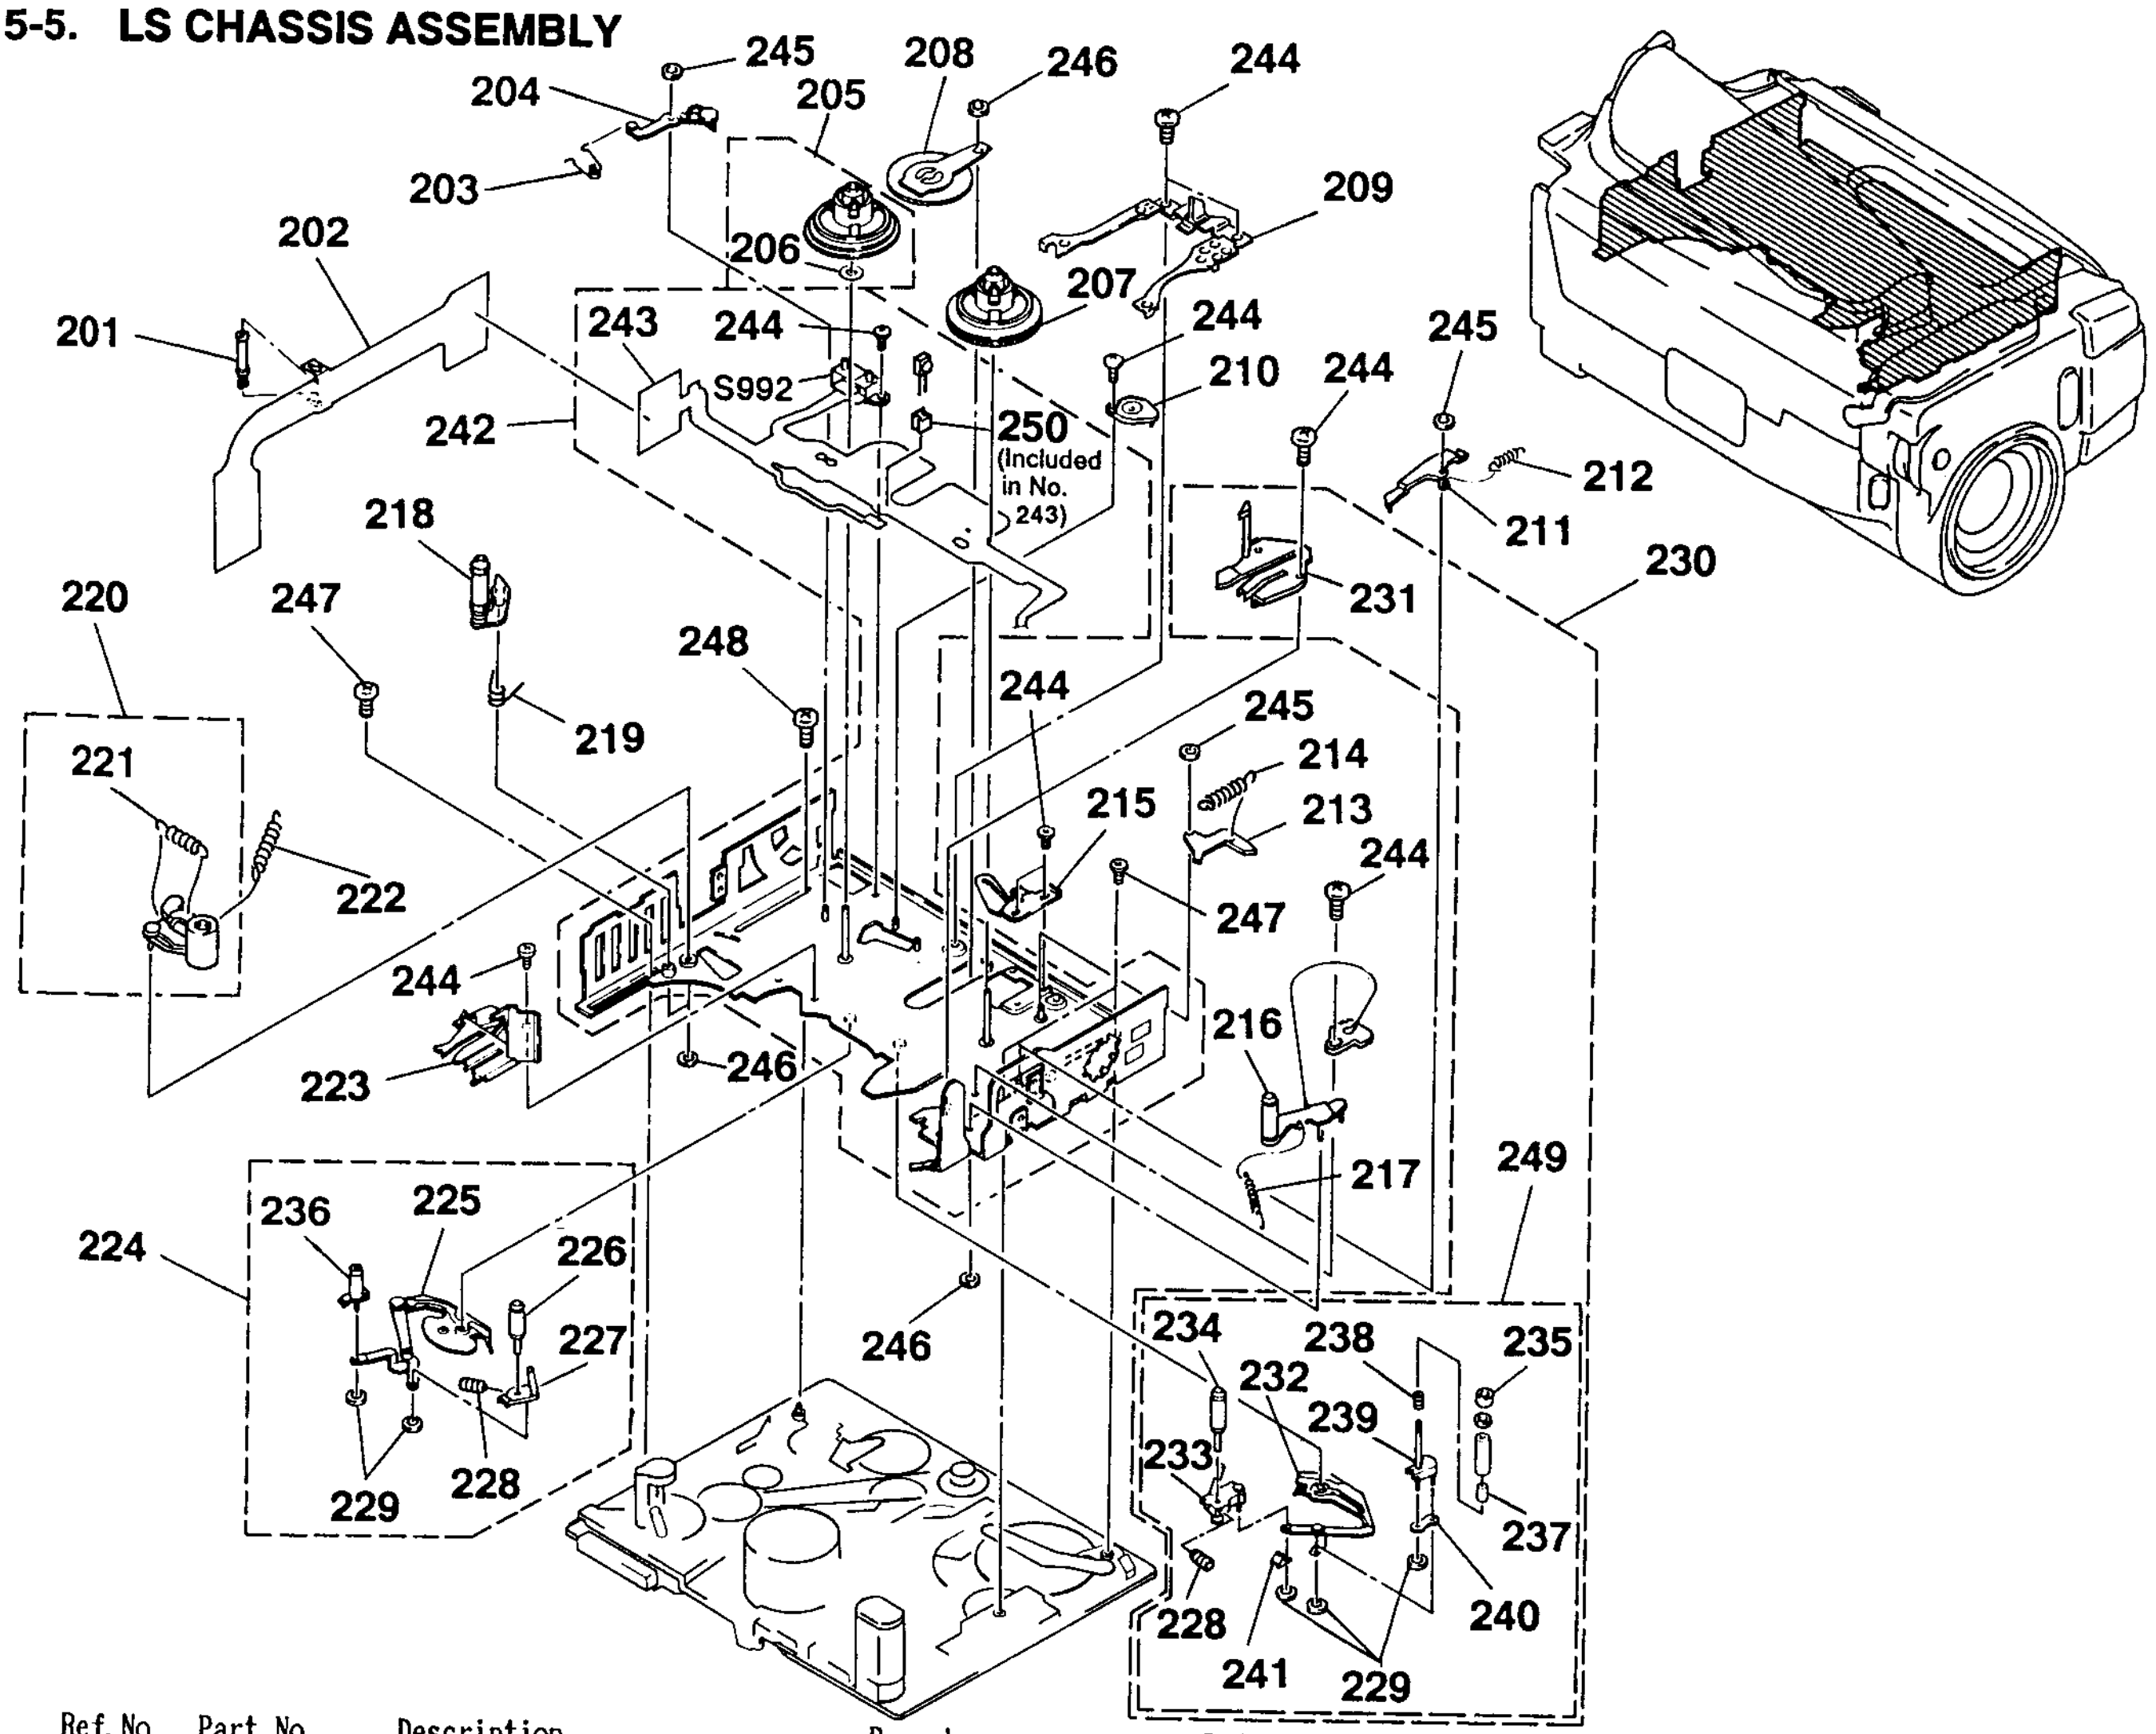
245
208
246
244
204
205
203
209
202
206
207
201
243
244
S992
244
245
210
244
242
250
(Included in No. 243)
212
211
218
230
220
247
231
248
244
245
219
214
221
215
213
244
222
247
244
216
223
246
217
249
224
236
225
226
227
246
234
238
235
232
239
233
237
229
228
240
228
241
229

Ref. No.	Part No.	Description	Remark
201	3-739-807-01	SHAFT (2), FLEXIBLE ROTARY	
202	1-627-722-11	FP-149 FLEXIBLE BOARD	
203	3-732-068-01	SPRING (JD), RATCHET	
204	X-3728-005-1	RATCHET ASSY (JD), T	
205	X-3727-951-2	TABLE ASSY, REEL, TAKE-UP	
206	3-701-439-11	WASHER	
207	X-3727-952-1	TABLE ASSY, REEL, SUPPLY	
208	X-3727-926-1	ARM ASSY, GEAR	
209	X-3940-675-1	BASE ASSY (L), RL	
210	X-3727-914-4	CLUTCH ASSY, ONEWAY	
211	3-732-077-01	RATCHET (JD), S	
212	3-732-076-01	SPRING (JD), TENSION	
213	3-732-079-01	ARM (JD), S SOFT	
214	3-732-078-01	SPRING (JD), TENSION	
215	3-728-206-01	PLATE, CAM, LS	
216	X-3749-001-1	ARM ASSY (JD), TG1	
217	3-940-616-03	SPRING (JD), TENSION	
218	A-7040-252-A	ARM BLOCK ASSY (L), TG11	
219	3-727-939-01	SPRING (JD), TORSION	
220	A-7040-240-A	ARM BLOCK ASSY (JD), PINCH	
221	3-727-927-01	SPRING (POWER TENSION), TENSION	
222	3-732-089-01	SPRING (JD), TENSION	
223	3-728-244-01	RAIL (T), GUIDE	
224	A-7040-148-A	ARM (T) BLOCK ASSY, GUIDE	
225	X-3727-940-1	ARM (T) ASSY, GUIDE	
226	X-3728-004-1	ROLLER ASSY (2), TG8	
227	X-3728-001-1	BASE ASSY (R), TG7	
228	3-728-290-01	SCREW (M1.2)	
229	3-331-007-11	WASHER	
230	A-7040-263-A	RAIL(S)BLOCK ASSY(3)(JD), GUIDE	
231	3-728-226-01	RAIL (S) (JD), GUIDE	
232	X-3727-941-1	ARM (S) ASSY, GUIDE	
233	X-3727-948-1	BASE ASSY, TG6	
234	X-3940-733-1	ROLLER ASSY (3), TG5	
235	3-943-822-01	FLANGE (P), TG4 UPPER	
236	X-3728-002-1	BASE ASSY (R), TG9	
237	3-728-048-01	SLEEVE, TG4	
238	3-728-023-01	SPRING, COMPRESSION	
239	X-3727-936-2	BASE ASSY, TG4	
240	3-728-053-01	PLATE, UNDER, TG4	
241	3-728-062-01	SPRING (6GB), LEAF	
242	A-7010-369-A	MD ASSY (1)	
243	A-7061-238-B	FP-115 BLOCK ASSY	
244	3-728-103-11	SCREW (M1.4X1.6), SPECIAL HEAD	
245	3-728-091-01	WASHER, STOPPER	
246	3-315-414-31	WASHER	
247	3-941-601-01	SCREW (M1.4X2.5), SPECIAL HEAD	
248	3-732-085-01	SCREW (1.2X1.6), SPECIAL HEAD	
249	A-7040-262-C	ARM (S) BLOCK ASSY (3), GUIDE	
250	3-732-046-01	HOLDER, LED	
S992	1-571-647-11	SWITCH PUSH (2 KEY) (REC PROOF, ME/MP)	

5-6. MECHANISM CHASSIS ASSEMBLY (1)

Note: For the rotary upper drum assembly.
There are two kinds of rotary upper drum assemblies.
They can be distinguished by the indicated color mark.

Note on FP-464
The FP-464 part, a component of the No. 301 mechanism chassis, is attached by hot-pressing, and it requires high mounting precision.
Therefore, it will not be supplied as a separate part.

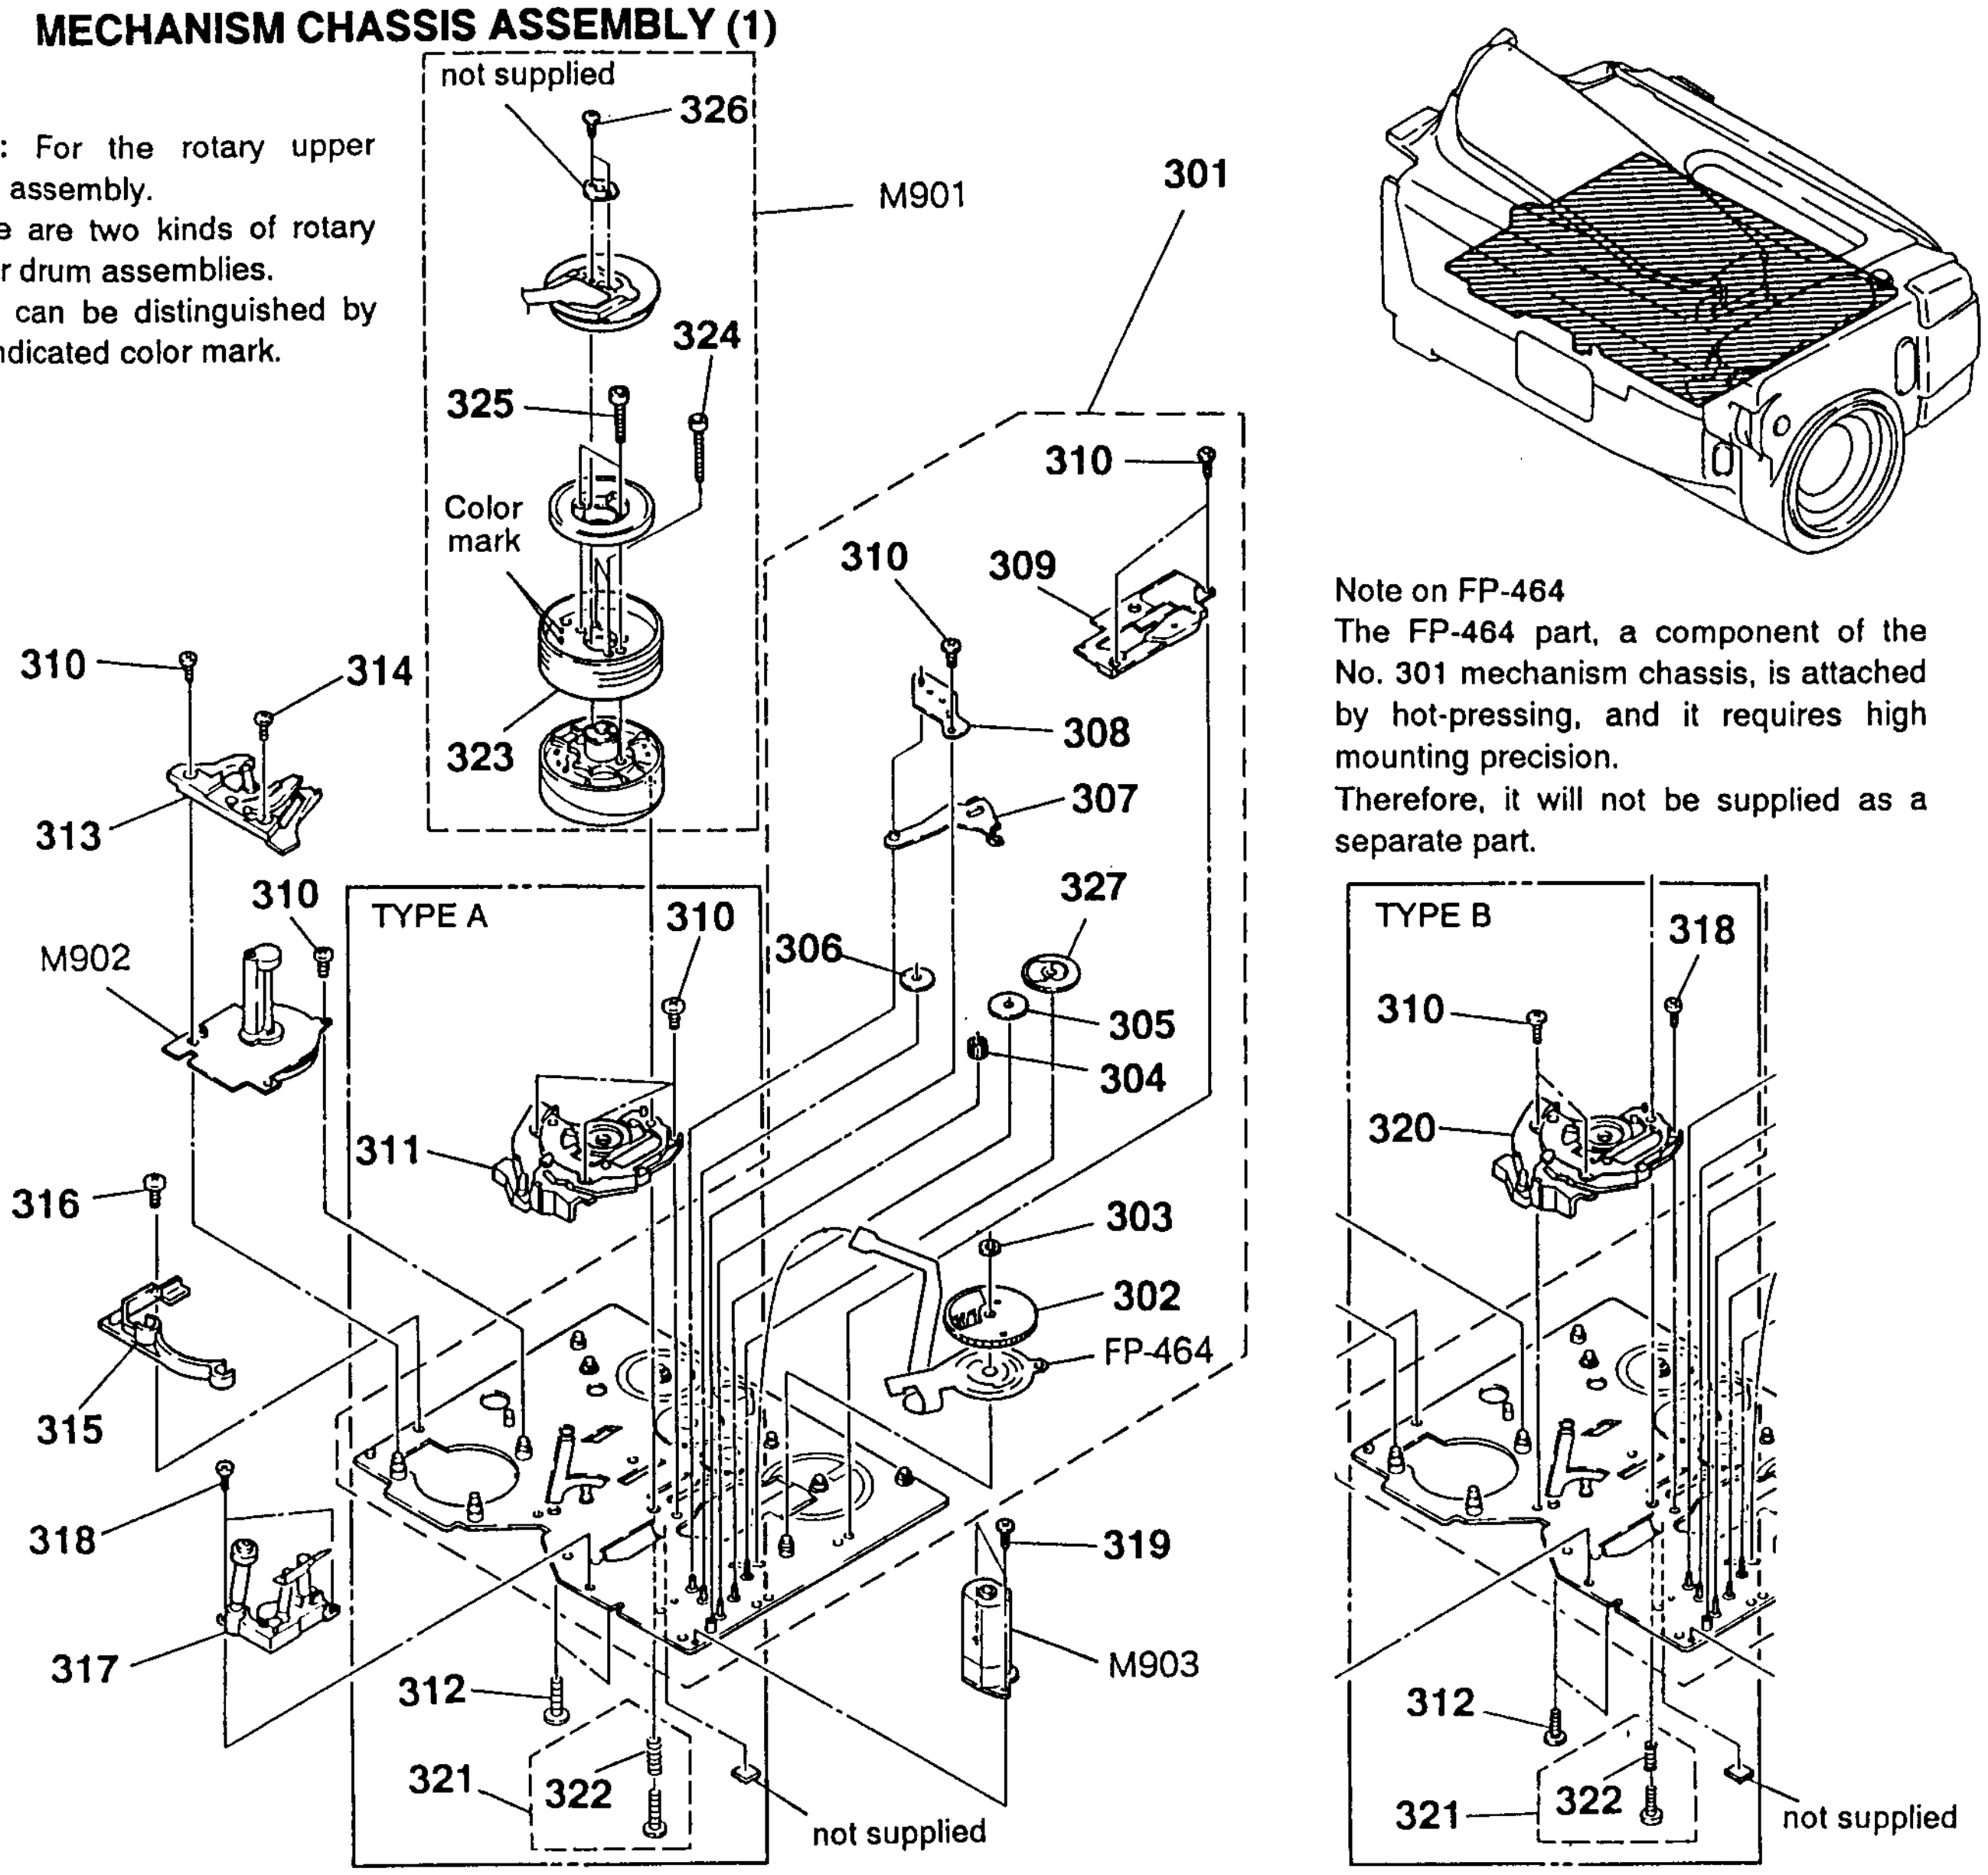

Ref. No.	Part No.	Description	Remark
301	A-7040-253-A	CHASSIS BLOCK ASSY (L)	
302	X-3727-915-1	GEAR ASSY, MODE	
303	3-579-788-01	WASHER, STOPPER	
304	3-728-149-01	GEAR, NO. 0	
305	X-3727-904-1	GEAR ASSY, NO. 2	
306	X-3727-903-1	GEAR ASSY, NO. 1	
307	X-3727-906-1	ARM ASSY	
308	3-728-119-01	RETAINER, GEAR	
309	3-728-231-06	BASE, TG-1 CAM	
310	3-728-148-11	SCREW (M1.4X2.5), SPECIAL HEAD	
* 311	A-7040-222-D	BASE (M) BLOCK ASSY, DRUM (TYPE A)	
312	3-728-108-01	SCREW (M1.4X4.5)	
313	X-3941-027-2	RAIL (BASE) (3) ASSY (3), GUIDE	
314	3-732-084-01	SCREW (M1.4), SPECIAL HEAD	
315	3-732-064-01	COVER, ROTOR	
316	3-728-126-01	SCREW (M1.4X2), SPECIAL HEAD	
317	A-7040-289-A	BASE (1) BLOCK ASSY (2), RAIL	
318	3-703-816-51	SCREW (M1.4X3.5), SPECIAL HEAD	
319	3-732-087-31	SCREW (M1.4X1.8), SPECIAL HEAD	
* 320	A-7040-203-C	BASE (A) BLOCK ASSY, DRUM (TYPE B)	
321	X-3728-009-2	SCREW ASSY, FITTING	
322	3-743-633-01	SPRING, COMPRESSION	
323	A-7049-197-A	DRUM ASSY, UPPER, ROTARY (DGR-37-R-(1)) (COLOR MARK; GREEN, GREEN/RED, BLACK, BLACK/RED) (E, Australian, Tourist model)	
323	A-7049-198-A	DRUM ASSY, UPPER, ROTARY (DGR-37-R-(2)) (COLOR MARK; RED, RED/RED, BLUE, BLUE/RED) (E, Australian, Tourist model)	
323	A-7049-461-A	DRUM ASSY, UPPER, ROTARY (DGR-80-R-(1)) (COLOR MARK; GREEN, GREEN/RED, BLACK, BLACK/RED) (AEP, UK model)	
323	A-7049-464-A	DRUM ASSY, UPPER, ROTARY (DGR-80-R-(2)) (COLOR MARK ; RED, RED/RED, BLUE, BLUE/RED) (AEP, UK model)	
324	3-727-809-01	SCREW (M1.4X5), HEXAGON HOLE	
325	3-727-807-01	SCREW (M1.7X3.3), HEXAGON HOLE	
326	3-728-108-21	SCREW (M1.4X2.7)	
327	3-728-189-02	GEAR, NO. 3	
M901	A-7048-214-A	DRUM BLOCK ASSY (DGH-37A-R) (E, Australian, Tourist model)	
M901	A-7048-534-A	DRUM BLOCK ASSY (DGH-80A-R) (AEP, UK model)	
M902	8-835-329-12	MOTOR, DC U-21A (CAPSTAN)	
M903	1-541-607-21	MOTOR, DC (LA12G-344VA) (LOADING)	

5-7. MECHANISM CHASSIS ASSEMBLY (2)

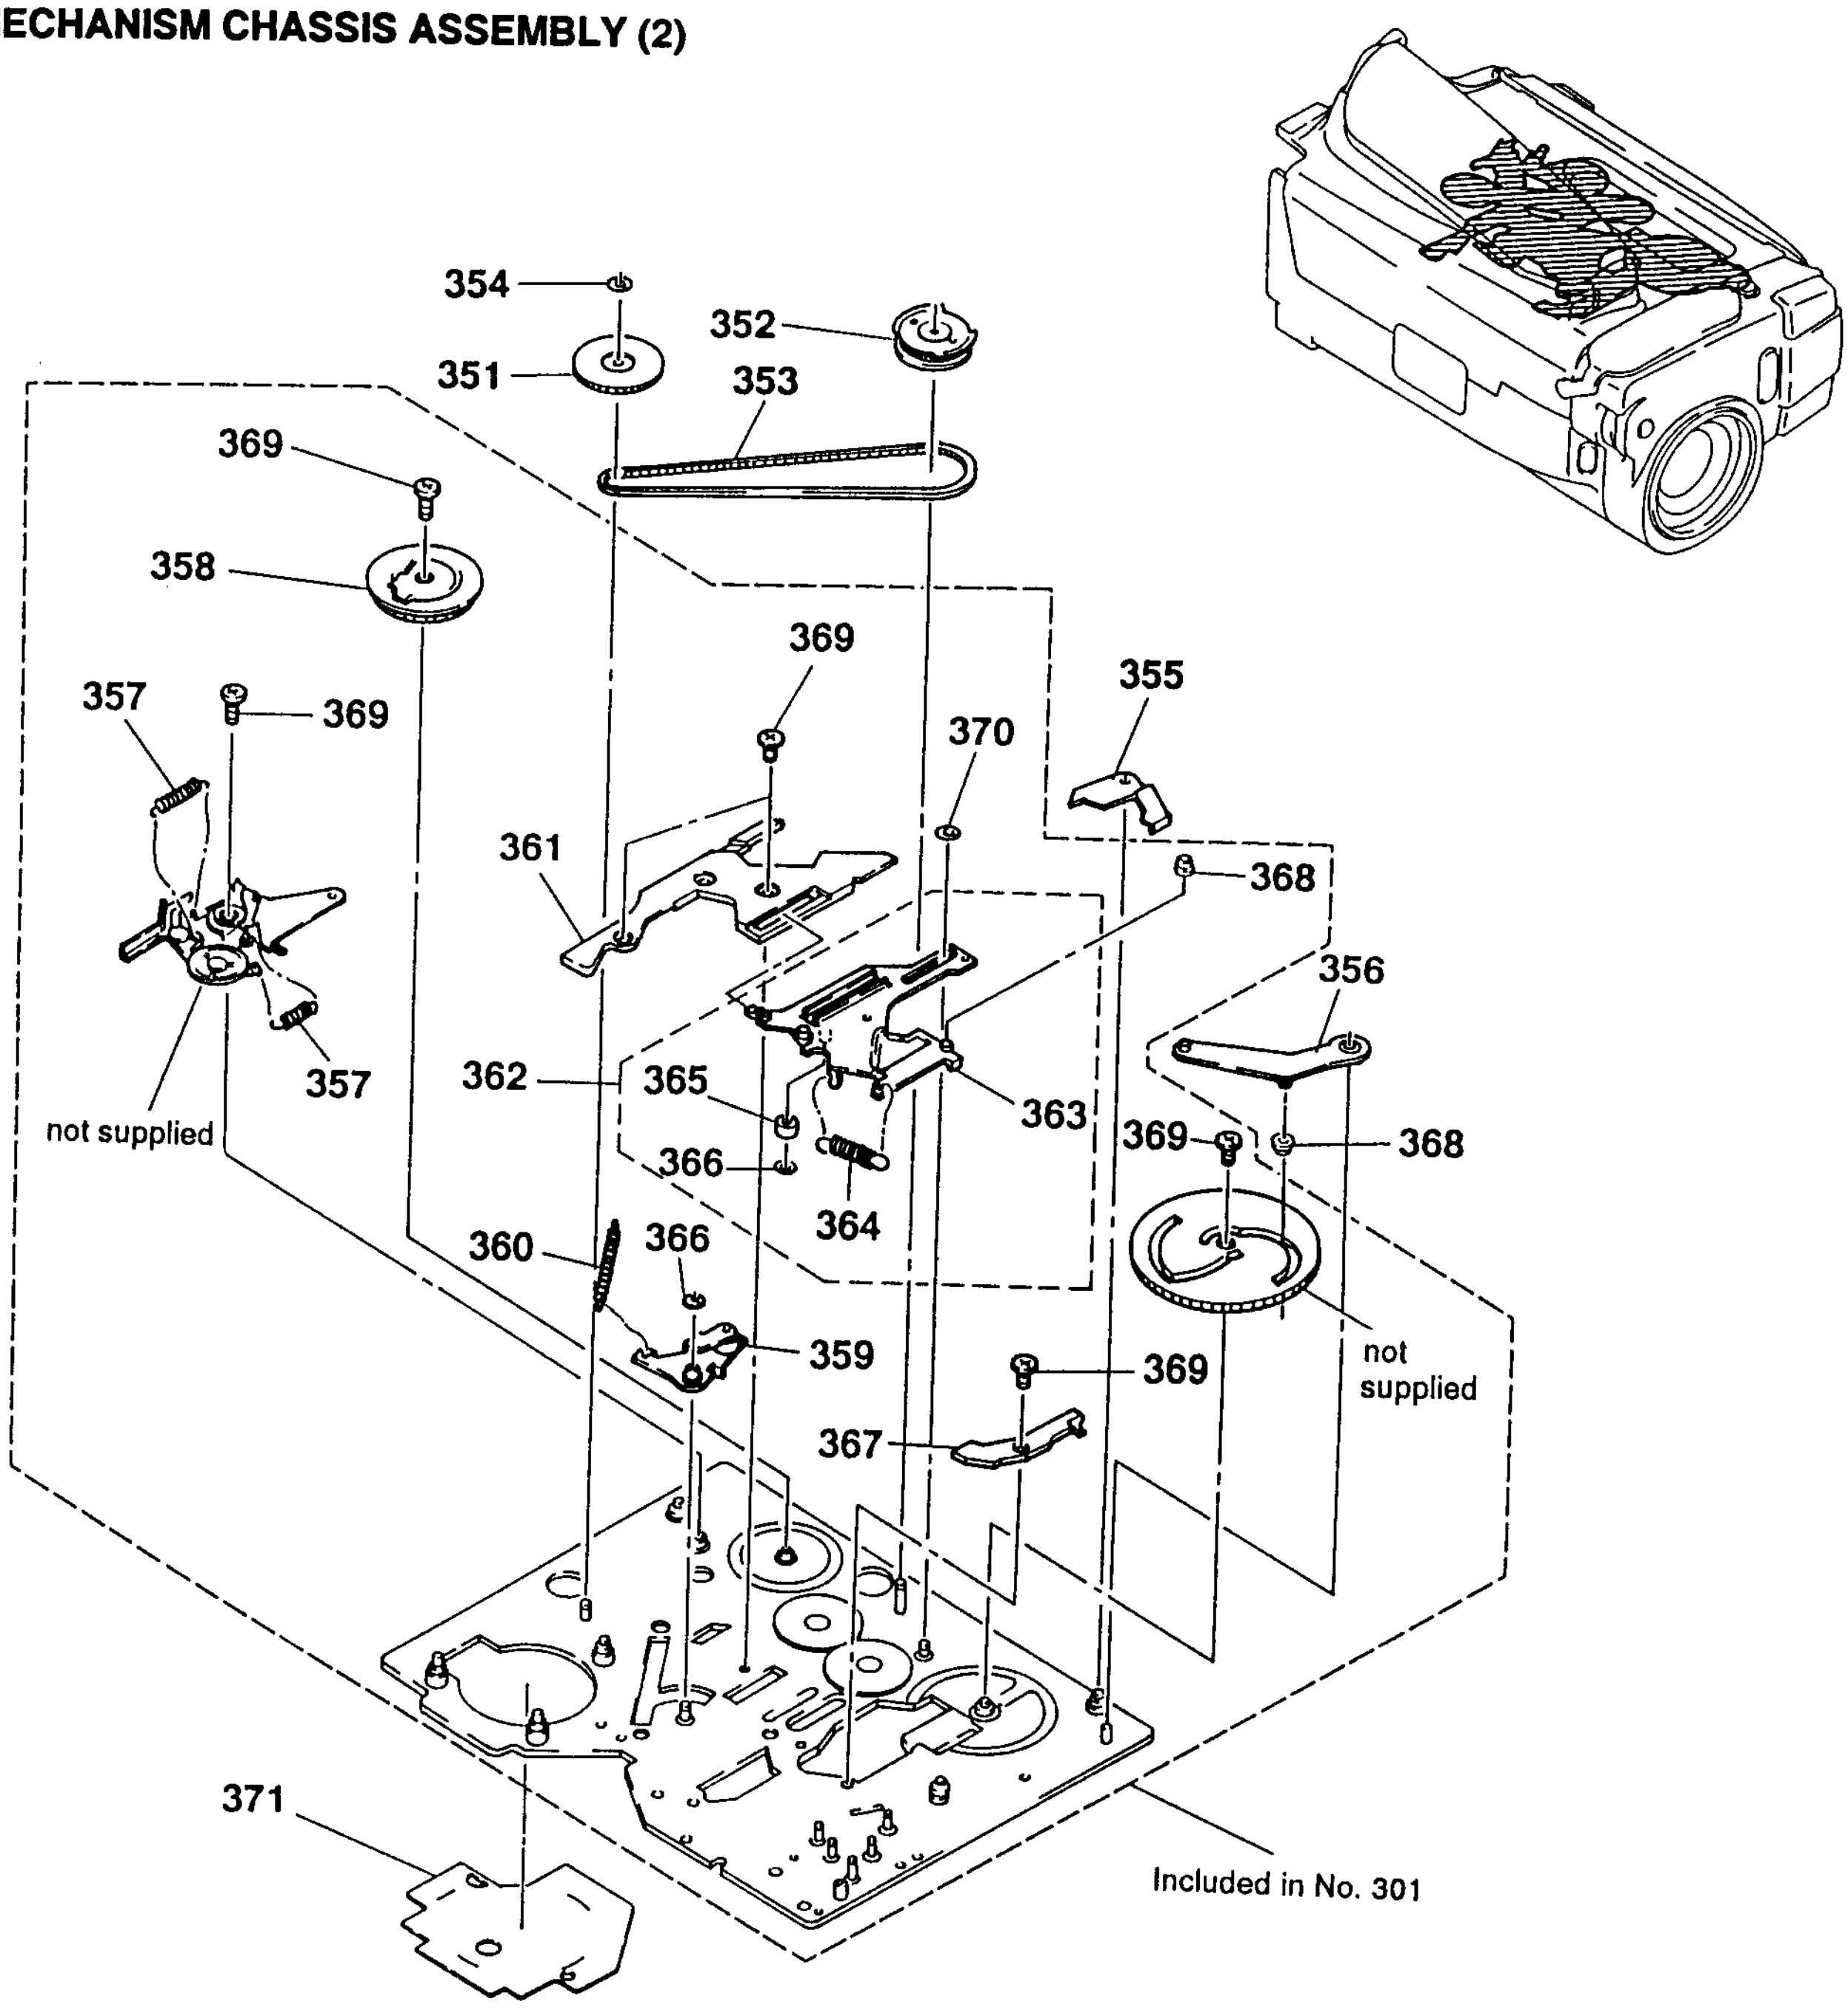
354
352
351
353
369
358
369
357
369
370
355
361
368
356
362
365
363
369
368
357
not supplied
366
364
360
366
359
not supplied
369
367
371
Included in No. 301

Ref. No.	Part No.	Description	Remark
351	X-3727-930-1	GEAR ASSY, CONVERSION	
352	X-3727-931-1	PULLEY ASSY, MIDWAY	
353	3-728-212-01	BELT, RELAY	
354	3-728-091-01	WASHER, STOPPER	
355	3-728-154-01	ARM, EJ	
356	3-941-980-01	ARM (T), LS	
357	3-728-065-01	SPRING, TENSION	
358	3-728-190-01	CAM (B)	
359	X-3727-924-2	ARM ASSY, GUIDE LOCK	
360	3-728-015-01	SPRING (POWER TENSION), TENSION	
361	3-728-228-03	SUPPORT (T), GL	
362	A-7040-153-A	SLIDER BLOCK ASSY, GL	
363	X-3727-942-1	SLIDER ASSY, GL	
364	3-727-929-01	SPRING (POWER TENSION), TENSION	
365	3-728-144-01	ROLLER, GL	
366	3-331-007-11	WASHER	
367	3-728-213-01	SUPPORT (S), GL	
368	3-728-109-01	ROLLER, LS	
369	3-728-148-11	SCREW (M1.4X2.5), SPECIAL HEAD	
370	3-315-384-31	WASHER, STOPPER	
371	3-942-901-01	COVER (L), CAPSTAN	

SECTION 6
ELECTRICAL PARTS LIST

NOTE:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u:μ, for example:
  uA..: μA.. uPA..: μPA..
  uPB..: μPB.. uPC..: μPC.. uPD..: μPD..
- CAPACITORS
  uF: μF
- COILS
  uH: μH

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description			Remark
*	A-7063-165-A	AU-135P BOARD, COMPLETE			
		*************************			
		(Ref. No. 1000 Series)			
		< CAPACITOR >			
C605	1-164-634-11	CERAMIC CHIP	1uF		16V
C606	1-162-957-11	CERAMIC CHIP	220PF	5%	50V
C607	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C608	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C609	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C610	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C611	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C612	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C613	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C615	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C616	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C617	1-164-634-11	CERAMIC CHIP	1uF		16V
C618	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C619	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C620	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C621	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C623	1-162-957-11	CERAMIC CHIP	220PF	5%	50V
C624	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C625	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C626	1-128-004-11	ELECT CHIP	10uF	20%	16V
C627	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C629	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C630	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C631	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C633	1-164-634-11	CERAMIC CHIP	1uF		16V
C634	1-162-957-11	CERAMIC CHIP	220PF	5%	50V
C635	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C636	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C637	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C638	1-163-989-11	CERAMIC CHIP	0.033uF	10%	25V
C639	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C640	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C641	1-126-209-11	ELECT CHIP	100uF	20%	4V
C642	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C643	1-128-004-11	ELECT CHIP	10uF	20%	16V
C645	1-126-209-11	ELECT CHIP	100uF	20%	4V
C646	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C647	1-164-634-11	CERAMIC CHIP	1uF		16V
C648	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C649	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C650	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C651	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C653	1-162-957-11	CERAMIC CHIP	220PF	5%	50V
C654	1-162-952-11	CERAMIC CHIP	82PF	5%	50V
C655	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C656	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C657	1-128-004-11	ELECT CHIP	10uF	20%	16V
C658	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C661	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C662	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C663	1-164-634-11	CERAMIC CHIP	1uF		16V
C664	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C666	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C668	1-126-209-11	ELECT CHIP	100uF	20%	4V
C670	1-164-634-11	CERAMIC CHIP	1uF		16V
C672	1-162-638-11	CERAMIC CHIP	1uF		16V
C673	1-162-638-11	CERAMIC CHIP	1uF		16V
C674	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C675	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C676	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C677	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C678	1-128-003-11	ELECT CHIP	22uF	20%	4V
C679	1-128-003-11	ELECT CHIP	22uF	20%	4V
C680	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C681	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C683	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C684	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C687	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C688	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C689	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C690	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C691	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C692	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C694	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C695	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

Ref. No.	Part No.	Description			Remark
C696	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V

< CONNECTOR >

Ref. No.	Part No.	Description
CN601	1-691-539-11	CONNECTOR, BOARD TO BOARD 30P
CN602	1-569-775-21	PIN, CONNECTOR 5P

< FILTER >

Ref. No.	Part No.	Description
FL601	1-236-837-21	FILTER, BAND PASS (1.5MHz)
FL602	1-236-838-21	FILTER, BAND PASS (1.7MHz)

< IC >

Ref. No.	Part No.	Description	
IC601	8-759-823-19	IC	CXA1488RR
IC602	8-759-823-19	IC	CXA1488RR
IC603	8-759-823-21	IC	CXA1536QQ
IC604	8-759-509-05	IC	XRU4066BF

< TRANSISTOR >

Ref. No.	Part No.	Description	
Q601	8-729-823-00	TRANSISTOR	2SA1622-5.6.7
Q603	8-729-402-81	TRANSISTOR	XN4501
Q604	8-729-402-81	TRANSISTOR	XN4501
Q605	8-729-905-18	TRANSISTOR	DTC144EU
Q606	8-729-402-81	TRANSISTOR	XN4501

< RESISTOR >

Ref. No.	Part No.	Description			Remark
R601	1-216-849-11	METAL CHIP	220K	5%	1/16W
R603	1-216-837-11	METAL CHIP	22K	5%	1/16W
R604	1-216-801-11	METAL CHIP	22	5%	1/16W
R605	1-216-859-11	METAL GLAZE	1.5M	5%	1/16W
R608	1-216-840-11	METAL CHIP	39K	5%	1/16W
R609	1-216-851-11	METAL CHIP	330K	5%	1/16W
R610	1-216-835-11	METAL CHIP	15K	5%	1/16W
R611	1-216-845-11	METAL CHIP	100K	5%	1/16W
R613	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R614	1-216-821-11	METAL CHIP	1K	5%	1/16W
R617	1-216-839-11	METAL CHIP	33K	5%	1/16W
R618	1-216-864-11	METAL CHIP	0	5%	1/16W
R619	1-216-833-11	METAL CHIP	10K	5%	1/16W
R620	1-216-849-11	METAL CHIP	220K	5%	1/16W
R622	1-216-837-11	METAL CHIP	22K	5%	1/16W
R623	1-216-859-11	METAL GLAZE	1.5M	5%	1/16W
R625	1-216-835-11	METAL CHIP	15K	5%	1/16W
R627	1-216-851-11	METAL CHIP	330K	5%	1/16W
R628	1-216-840-11	METAL CHIP	39K	5%	1/16W
R629	1-216-835-11	METAL CHIP	15K	5%	1/16W
R632	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R633	1-216-821-11	METAL CHIP	1K	5%	1/16W
R634	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R635	1-216-817-11	METAL CHIP	470	5%	1/16W
R637	1-216-839-11	METAL CHIP	33K	5%	1/16W
R638	1-216-864-11	METAL CHIP	0	5%	1/16W
R639	1-216-833-11	METAL CHIP	10K	5%	1/16W
R640	1-216-848-11	METAL CHIP	180K	5%	1/16W
R642	1-216-845-11	METAL CHIP	100K	5%	1/16W
R643	1-216-817-11	METAL CHIP	470	5%	1/16W
R645	1-216-813-11	METAL CHIP	220	5%	1/16W
R646	1-216-819-11	METAL CHIP	680	5%	1/16W
R647	1-216-821-11	METAL CHIP	1K	5%	1/16W
R648	1-216-864-11	METAL CHIP	0	5%	1/16W
R649	1-216-821-11	METAL CHIP	1K	5%	1/16W
R651	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R652	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R653	1-216-795-11	METAL CHIP	6.8K	0.50%	1/16W
R654	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R655	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R656	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R657	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R658	1-218-708-11	METAL CHIP	4.7K	0.50%	1/16W
R659	1-218-716-11	METAL CHIP	10K	0.50%	1/16W
R661	1-216-821-11	METAL CHIP	1K	5%	1/16W
R662	1-216-821-11	METAL CHIP	1K	5%	1/16W
R663	1-216-834-11	METAL CHIP	12K	5%	1/16W
R664	1-216-833-11	METAL CHIP	10K	5%	1/16W
R666	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R667	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R668	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R669	1-216-821-11	METAL CHIP	1K	5%	1/16W
R670	1-216-821-11	METAL CHIP	1K	5%	1/16W

****

* A-7063-164-A CD-84P BOARD, COMPLETE

****

(Ref. No. 1000 Series)

< CAPACITOR >

Ref. No.	Part No.	Description			Remark
C875	1-135-214-21	TANTAL. CHIP	4.7uF	20%	20V
C876	1-128-013-11	ELECT CHIP	1uF	20%	50V
C877	1-128-008-11	ELECT CHIP	3.3uF	20%	35V
C878	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C879	1-162-637-11	CERAMIC CHIP	0.47uF		16V
C880	1-126-607-11	ELECT CHIP	47uF	20%	4V
C881	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C882	1-128-004-11	ELECT CHIP	10uF	20%	16V
C883	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C884	1-164-156-11	CERAMIC CHIP	0.1uF		25V

< CONNECTOR >

Ref. No.	Part No.	Description
CN875	1-573-523-21	CONNECTOR, BOARD TO BOARD 16P

< DIODE >

Ref. No.	Part No.	Description	Remark
D875	8-719-800-76	DIODE 1SS226	
D876	8-719-404-46	DIODE MA110	
D877	8-719-820-05	DIODE 1SS181	
D878	8-719-404-46	DIODE MA110	

< COIL >

Ref. No.	Part No.	Description	Remark
L875	1-412-064-11	INDUCTOR CHIP 100uH	

< TRANSISTOR >

Ref. No.	Part No.	Description	Remark
Q875	8-729-927-XX	TRANSISTOR 2SC4617TL	
Q876	8-729-927-68	TRANSISTOR UMW1	
Q877	8-729-232-86	TRANSISTOR 2SK1875	

< RESISTOR >

Ref. No.	Part No.	Description				Remark
R875	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R876	1-216-857-11	METAL CHIP	1M	5%	1/16W	
R877	1-216-819-11	METAL CHIP	680	5%	1/16W	
R878	1-216-843-11	METAL CHIP	68K	5%	1/16W	
R879	1-216-849-11	METAL CHIP	220K	5%	1/16W	
R880	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R881	1-216-835-11	METAL CHIP	15K	5%	1/16W	
R882	1-216-850-11	METAL CHIP	270K	5%	1/16W	
R883	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R884	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	
R885	1-216-809-11	METAL CHIP	100	5%	1/16W	

****

* A-7071-606-A CN-64P BOARD, COMPLETE

****

(Ref. No. 1000 Series)

< CAPACITOR >

Ref. No.	Part No.	Description				Remark
C550	1-164-346-11	CERAMIC CHIP	1uF		16V	

< CONNECTOR >

Ref. No.	Part No.	Description	Remark
CN503	1-691-519-11	CONNECTOR, BOARD TO BOARD 30P	

< FLAT CABLE >

Ref. No.	Part No.	Description	Remark
W501	1-690-818-11	CABLE, FLAT	

****

* A-7063-161-A DD-47P BOARD, COMPLETE

****

(Ref. No. 4000 Series)

< CAPACITOR >

Ref. No.	Part No.	Description				Remark
C901	1-164-361-11	CERAMIC CHIP	0.047uF		16V	
C902	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V	
C903	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V	
C905	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C906	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	
C907	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	
C908	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	
C909	1-164-218-11	CERAMIC CHIP	180PF	0.25PF	50V	
C910	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C911	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
C912	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C913	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C914	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	
C915	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	
C916	1-162-962-11	CERAMIC CHIP	470PF	10%	50V	
C918	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C919	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C920	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C921	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
C922	1-135-215-21	TANTAL. CHIP	6.8uF	20%	16V	
C923	1-165-178-11	CERAMIC CHIP	6.8uF		16V	
C924	1-165-178-11	CERAMIC CHIP	6.8uF		16V	
C925	1-162-638-11	CERAMIC CHIP	1uF		16V	
C926	1-162-638-11	CERAMIC CHIP	1uF		16V	
C927	1-135-177-21	TANTALUM CHIP	1uF	20%	20V	
C928	1-135-177-21	TANTALUM CHIP	1uF	20%	20V	
C929	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	
C930	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C931	1-135-215-21	TANTAL. CHIP	6.8uF	20%	16V	
C932	1-165-178-11	CERAMIC CHIP	6.8uF		16V	
C933	1-165-178-11	CERAMIC CHIP	6.8uF		16V	
C934	1-165-178-11	CERAMIC CHIP	6.8uF		16V	
C935	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C936	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C937	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C938	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C939	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C940	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C941	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C942	1-126-204-11	ELECT CHIP	47uF	20%	16V	
C943	1-165-178-11	CERAMIC CHIP	6.8uF		16V	
C944	1-165-178-11	CERAMIC CHIP	6.8uF		16V	
C945	1-165-178-11	CERAMIC CHIP	6.8uF		16V	
C946	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V	
C947	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	

DD-47P

Ref. No.	Part No.	Description	Remark
C948	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V	
		< CONNECTOR >	
CN901	1-569-775-21	PIN, CONNECTOR 5P	
		< DIODE >	
D901	8-719-981-59	DIODE FC805	
D902	8-719-941-09	DIODE DAP202U	
D903	8-719-988-62	DIODE 1SS355	
		< IC >	
IC901	8-759-060-94	IC MB3785APFV-G-BND-ER	
IC902	8-759-998-98	IC LM358D	
		< COIL >	
L901	1-424-643-11	COIL, CHOKE 10uH	
L902	1-412-064-11	INDUCTOR CHIP 100uH	
L903	1-412-067-21	INDUCTOR CHIP 330uH	
L904	1-412-056-11	INDUCTOR CHIP 4.7uH	
L905	1-424-643-11	COIL, CHOKE 10uH	
L906	1-424-641-11	COIL, CHOKE 22uH	
L907	1-412-056-11	INDUCTOR CHIP 4.7uH	
L908	1-412-058-11	INDUCTOR CHIP 10uH	
L909	1-412-056-11	INDUCTOR CHIP 4.7uH	
L910	1-412-056-11	INDUCTOR CHIP 4.7uH	
L911	1-412-056-11	INDUCTOR CHIP 4.7uH	
L912	1-412-058-11	INDUCTOR CHIP 10uH	
L913	1-424-643-11	COIL, CHOKE 10uH	
L914	1-424-641-11	COIL, CHOKE 22uH	
L915	1-424-642-11	COIL, CHOKE 47uH	
		< TRANSISTOR >	
Q901	8-729-905-18	TRANSISTOR DTC144EU	
Q902	8-729-403-27	TRANSISTOR XN4401	
Q903	8-729-804-41	TRANSISTOR 2SB1122-S	
Q904	8-729-905-12	TRANSISTOR DTA144EU	
Q905	8-729-015-61	TRANSISTOR 2SJ316-TD	
Q906	8-729-823-84	TRANSISTOR FP102-TL	
Q907	8-729-805-25	TRANSISTOR 2SB1121-S	
Q908	8-729-822-84	TRANSISTOR 2SB1202FAST	
Q909	8-729-823-82	TRANSISTOR FP101	
Q910	8-729-823-82	TRANSISTOR FP101	
Q911	8-729-907-26	TRANSISTOR IMX1	
Q912	8-729-905-12	TRANSISTOR DTA144EU	
Q913	8-729-905-18	TRANSISTOR DTC144EU	

Ref. No.	Part No.	Description	Remark
		< RESISTOR >	
R901	1-218-708-11	METAL CHIP 4.7K 0.50% 1/16W	
R902	1-218-724-11	METAL CHIP 22K 0.50% 1/16W	
R903	1-218-698-11	METAL CHIP 1.8K 0.50% 1/16W	
R904	1-216-847-11	METAL CHIP 150K 5% 1/16W	
R905	1-216-840-11	METAL CHIP 39K 5% 1/16W	
R906	1-216-838-11	METAL CHIP 27K 5% 1/16W	
R907	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R908	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R909	1-218-716-11	METAL CHIP 10K 0.50% 1/16W	
R910	1-216-811-11	METAL CHIP 150 5% 1/16W	
R911	1-218-716-11	METAL CHIP 10K 0.50% 1/16W	
R912	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R913	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R914	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R915	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R916	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R917	1-216-843-11	METAL CHIP 68K 5% 1/16W	
R918	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R919	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R920	1-218-716-11	METAL CHIP 10K 0.50% 1/16W	
R921	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R922	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R923	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R924	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R925	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R926	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R927	1-216-840-11	METAL CHIP 39K 5% 1/16W	
R928	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R929	1-216-813-11	METAL CHIP 220 5% 1/16W	
R930	1-216-819-11	METAL CHIP 680 5% 1/16W	
R931	1-216-819-11	METAL CHIP 680 5% 1/16W	
R932	1-216-819-11	METAL CHIP 680 5% 1/16W	
R933	1-216-828-11	METAL CHIP 3.9K 5% 1/16W	
R934	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R935	1-216-842-11	METAL CHIP 56K 5% 1/16W	
R936	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R937	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R938	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R939	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R940	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R941	1-216-043-00	METAL CHIP 560 5% 1/10W	
R942	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
R943	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R944	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R945	1-218-716-11	METAL CHIP 10K 0.50% 1/16W	
R946	1-218-680-11	METAL CHIP 330 0.50% 1/16W	
R947	1-218-716-11	METAL CHIP 10K 0.50% 1/16W	

Ref.No.	Part No.	Description	Remark
R948	1-218-688-11	METAL CHIP 680 0.50% 1/16W	
R949	1-218-295-11	METAL CHIP 5.6K 0.50% 1/16W	
R950	1-218-716-11	METAL CHIP 10K 0.50% 1/16W	
R951	1-216-864-11	METAL CHIP 0 5% 1/16W	
		< TRANSFORMER >	
T901	1-450-785-21	TRANSFORMER, CONVERTER	
		< FLAT CABLE >	
W401	1-690-817-11	CABLE, FLAT	

****

Ref.No.	Part No.	Description	Remark
*	A-7061-238-B	FP-115 BOARD, COMPLETE *********************** (Ref. No. 8000 Series)	
	3-727-954-01	HOLDER (T), SENSOR	
	3-727-957-01	HOLDER (S), SENSOR	
	3-732-046-01	HOLDER, LED	
		< DIODE >	
D991	8-719-988-42	DIODE GL453S	
D992	8-719-988-42	DIODE GL453S	
		< HOLE ELEMENT >	
H991	1-808-448-11	ELEMENT, HALL (CHIP TYPE)	
		< TRANSISTOR >	
Q991	8-729-907-25	TRANSISTOR PT4850F	
Q992	8-729-907-25	TRANSISTOR PT4850F	
		< RESISTOR >	
R991	1-216-817-11	METAL CHIP 470 5% 1/16W	
		< SWITCH >	
S992	1-571-647-11	SWITCH, PUSH (2 KEY)	
S991	1-572-611-11	SWITCH, LEAF	

****

Ref.No.	Part No.	Description	Remark
*	A-7063-166-A	LC-40P BOARD, COMPLETE *************************************** (EXCEPT AEP : BLUE model)	
*	A-7063-258-A	LC-40P BOARD, COMPLETE (AEP:BLUE model) *************************************** (Ref. No. 4000 Series)	
		< CAPACITOR >	
C501	1-162-919-11	CERAMIC CHIP 22PF 5% 50V	
C502	1-162-915-11	CERAMIC CHIP 10PF 0.5PF 50V	
C503	1-162-966-11	CERAMIC CHIP 0.0022uF 10% 50V	
C504	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C505	1-135-149-21	TANTALUM CHIP 2.2uF 20% 10V	
C506	1-164-346-11	CERAMIC CHIP 1uF 16V	
C507	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C509	1-164-346-11	CERAMIC CHIP 1uF 16V	
C511	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C512	1-162-961-11	CERAMIC CHIP 330PF 10% 50V	
C514	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C516	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
		< CONNECTOR >	
CN502	1-691-499-11	CONNECTOR, FFC/FPC 20P	
		< DIODE >	
D501	8-719-421-27	DIODE MA728	
D504	8-719-940-45	DIODE DWA010	
D505	8-719-988-62	DIODE 1SS355	
		< IC >	
IC501	8-759-059-51	IC uPD75316GF-SGX3200	
IC502	8-759-056-84	IC S-8420AF	
IC503	8-759-145-63	IC uPD7564G-540	
		< COIL >	
L501	1-412-062-11	INDUCTOR CHIP 47uH	
		< LIQUID CRYSTAL DISPLAY >	
LCD501	1-809-671-21	DISPLAY PANEL, LIQUID CRYSTAL	
		< TRANSISTOR >	
Q501	8-729-905-15	TRANSISTOR DTC144WU	
Q502	8-729-905-12	TRANSISTOR DTA144EU	
Q504	8-729-905-XX	TRANSISTOR DTC114TU	
		< RESISTOR >	
R501	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R502	1-216-851-11	METAL CHIP 330K 5% 1/16W	
R503	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R504	1-216-821-11	METAL CHIP 1K 5% 1/16W	

Ref. No.	Part No.	Description	Remark
R505	1-216-821-11	METAL CHIP 1K 5%	1/16W
R506	1-216-841-11	METAL CHIP 47K 5%	1/16W
R507	1-216-821-11	METAL CHIP 1K 5%	1/16W
R508	1-216-827-11	METAL CHIP 3.3K 5%	1/16W
R510	1-216-841-11	METAL CHIP 47K 5%	1/16W
R512	1-216-845-11	METAL CHIP 100K 5%	1/16W
R513	1-216-841-11	METAL CHIP 47K 5%	1/16W
R514	1-216-864-11	METAL CHIP 0 5%	1/16W
R515	1-216-821-11	METAL CHIP 1K 5%	1/16W
R516	1-216-809-11	METAL CHIP 100 5%	1/16W
R517	1-216-821-11	METAL CHIP 1K 5%	1/16W
R518	1-216-864-11	METAL CHIP 0 5%	1/16W
R519	1-216-296-00	METAL CHIP 0 5%	1/8W
R520	1-216-841-11	METAL CHIP 47K 5%	1/16W
R521	1-216-829-11	METAL CHIP 4.7K 5%	1/16W

< NETWORK RESISTOR >

Ref. No.	Part No.	Description	Remark
RB501	1-236-908-11	RESISTOR, NETWORK (CHIP TYPE)	
RB502	1-236-907-11	RESISTOR, NETWORK (CHIP TYPE)	
RB503	1-236-908-11	RESISTOR, NETWORK (CHIP TYPE)	
RB504	1-236-907-11	RESISTOR, NETWORK (CHIP TYPE)	
RB505	1-236-904-11	RESISTOR, NETWORK (CHIP TYPE)	
RB506	1-236-904-11	RESISTOR, NETWORK (CHIP TYPE)	
RB507	1-236-904-11	RESISTOR, NETWORK (CHIP TYPE)	
RB508	1-236-412-11	NETWORK, RES 1.0K	
RB509	1-236-904-11	RESISTOR, NETWORK (CHIP TYPE)	
RB510	1-236-904-11	RESISTOR, NETWORK (CHIP TYPE)	
RB512	1-236-432-11	NETWORK, RES 47K	
RB514	1-236-432-11	NETWORK, RES 47K	
RB515	1-236-400-11	NETWORK, RES 100	
RB516	1-236-412-11	NETWORK, RES 1.0K	

< SWITCH >

Ref. No.	Part No.	Description	Remark
S507	1-692-085-11	SWITCH, ROTARY (EXPOSURE DIAL)	

< VIBRATOR >

Ref. No.	Part No.	Description	Remark
X501	1-579-063-21	VIBRATOR, CERAMIC (4.19MHz)	
X502	1-579-049-21	VIBRATOR, CRYSTAL (32KHz)	
X503	1-579-551-11	VIBRATOR, CERAMIC (700KHz)	

****

Ref. No.	Part No.	Description	Remark
*	A-7071-605-A	LJ-9P BOARD, COMPLETE	

****

(Ref. No. 5000 Series)

< CAPACITOR >

Ref. No.	Part No.	Description	Remark
C971	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C972	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V

< CONNECTOR >

Ref. No.	Part No.	Description	Remark
* CN971	1-580-056-21	PIN, CONNECTOR 3P	

< DIODE >

Ref. No.	Part No.	Description	Remark
D973	8-719-988-62	DIODE 1SS355	

< JACK >

Ref. No.	Part No.	Description	Remark
J971	1-565-276-21	JACK, ULTRA SMALL 1P (REMOTE)	

< COIL >

Ref. No.	Part No.	Description	Remark
L971	1-410-369-11	INDUCTOR CHIP 1uH	
L972	1-410-369-11	INDUCTOR CHIP 1uH	
L973	1-410-369-11	INDUCTOR CHIP 1uH	

****

Ref. No.	Part No.	Description	Remark
*	A-7063-167-A	MA-143P BOARD, COMPLETE	

****

(Ref. No. 5000 Series)

Ref. No.	Part No.	Description	Remark
*	3-947-506-01	PLATE, GROUND, MICROPHONE	

< CAPACITOR >

Ref. No.	Part No.	Description	Remark
C556	1-163-809-11	CERAMIC CHIP 0.047uF 10%	25V
C557	1-164-227-11	CERAMIC CHIP 0.022uF 10%	25V
C558	1-164-222-11	CERAMIC CHIP 0.22uF	25V
C559	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C561	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C562	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C563	1-164-633-11	CERAMIC CHIP 0.1uF 10%	25V
C564	1-164-633-11	CERAMIC CHIP 0.1uF 10%	25V
C566	1-126-205-11	ELECT CHIP 47uF 20%	6.3V
C567	1-164-633-11	CERAMIC CHIP 0.1uF 10%	25V
C568	1-163-809-11	CERAMIC CHIP 0.047uF 10%	25V
C569	1-135-091-00	TANTALUM CHIP 1uF 20%	16V
C570	1-164-343-11	CERAMIC CHIP 0.056uF 10%	25V
C571	1-164-343-11	CERAMIC CHIP 0.056uF 10%	25V
C572	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C574	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C575	1-163-037-11	CERAMIC CHIP 0.022uF 10%	25V
C577	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C578	1-164-633-11	CERAMIC CHIP 0.1uF 10%	25V
C579	1-163-809-11	CERAMIC CHIP 0.047uF 10%	25V

Ref.No.	Part No.	Description	Remark
C580	1-135-091-00	TANTALUM CHIP 1uF 20% 16V	
C581	1-164-343-11	CERAMIC CHIP 0.056uF 10% 25V	
C582	1-164-343-11	CERAMIC CHIP 0.056uF 10% 25V	
C584	1-164-232-11	CERAMIC CHIP 0.01uF 50V	
C585	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C586	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C591	1-124-778-00	ELECT CHIP 22uF 20% 6.3V	
C592	1-162-963-11	CERAMIC CHIP 680PF 10% 50V	

< CONNECTOR >

Ref.No.	Part No.	Description	Remark
CN551	1-691-550-11	PIN, CONNECTOR (1.5MM)(SMD) 3P	
CN552	1-691-550-11	PIN, CONNECTOR (1.5MM)(SMD) 3P	
CN553	1-573-768-21	PIN, CONNECTOR (1.5MM) (SMD) 5P	
CN554	1-573-506-41	CONNECTOR, FPC (NON ZIF) 4P	

< DIODE >

Ref.No.	Part No.	Description	Remark
D551	8-719-404-46	DIODE MA110	
D552	8-719-404-46	DIODE MA110	

< IC >

Ref.No.	Part No.	Description	Remark
IC551	8-759-062-23	IC CXA-1618N-E2	
IC552	8-741-100-63	IC SBX1619-51	
IC553	8-759-998-98	IC LM358D	

< JACK >

Ref.No.	Part No.	Description	Remark
J551	1-691-737-11	JACK, SMALL (MIC)	

< TRANSISTOR >

Ref.No.	Part No.	Description	Remark
Q551	8-729-010-80	TRANSISTOR FC13	
Q555	8-729-822-97	TRANSISTOR 2SC4211-5.6.7	

< RESISTOR >

Ref.No.	Part No.	Description	Remark
R551	1-216-822-11	METAL CHIP 1.2K 5% 1/16W	
R552	1-216-822-11	METAL CHIP 1.2K 5% 1/16W	
R553	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
R554	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
R555	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R556	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R557	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R558	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R559	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
R560	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R561	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R566	1-216-854-11	METAL CHIP 560K 5% 1/16W	
R567	1-216-864-11	METAL CHIP 0 5% 1/16W	
R568	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R569	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R570	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R571	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R572	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R573	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	
R575	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R576	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R577	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R580	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R581	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R582	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R584	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	
R585	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R586	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R587	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R588	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R589	1-216-805-11	METAL CHIP 47 5% 1/16W	
R590	1-216-295-00	METAL CHIP 0 5% 1/10W	
R591	1-216-295-00	METAL CHIP 0 5% 1/10W	
R592	1-216-295-00	METAL CHIP 0 5% 1/10W	
R593	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R594	1-216-821-11	METAL CHIP 1K 5% 1/16W	

****

* A-7071-607-A MF-175P BOARD, COMPLETE
****
(EXCEPT AEP:BLUE model)

* A-7071-648-A MF-175P BOARD, COMPLETE (AEP:BLUE model)
****
(Ref. No. 6000 Series)

< CONNECTOR >

Ref.No.	Part No.	Description	Remark
CN554	1-573-506-41	CONNECTOR, FPC (NON ZIF) 4P	
CN996	1-691-473-21	CONNECTOR, FFC/FPC 7P	

< SWITCH >

Ref.No.	Part No.	Description	Remark
S996	1-241-865-11	RES, VAR, CARBON 10K (FOCUS MANUAL)	
S997	1-571-787-41	SWITCH, TACTILE (FADER)	

****

* A-7063-163-A VC-112P BOARD, COMPLETE
****
(Ref. No. 2000 Series)

< CAPACITOR >

Ref.No.	Part No.	Description	Remark
C701	1-135-149-21	TANTALUM CHIP 2.2uF 20% 10V	
C702	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C703	1-164-361-11	CERAMIC CHIP 0.047uF 16V	
C705	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C706	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C707	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C708	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C709	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C710	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C711	1-135-181-21	TANTALUM CHIP 4.7uF 20% 6.3V	

Ref. No.	Part No.	Description	Remark
C712	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C713	1-162-947-11	CERAMIC CHIP 33PF 5%	50V
C714	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C716	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C717	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V
C718	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C719	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C721	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C722	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C723	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C724	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C725	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C726	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C727	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C728	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C729	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C730	1-162-971-11	CERAMIC CHIP 0.001uF	50V
C731	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C734	1-163-077-00	CERAMIC CHIP 0.1uF 10%	25V
C737	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C738	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C739	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C741	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C742	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C744	1-162-638-11	CERAMIC CHIP 1uF	16V
C745	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C747	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C748	1-163-077-00	CERAMIC CHIP 0.1uF 10%	25V
C750	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C751	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C752	1-162-943-11	CERAMIC CHIP 15PF 5%	50V
C801	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V
C802	1-162-920-11	CERAMIC CHIP 27PF 5%	50V
C803	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C804	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C805	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C806	1-162-971-11	CERAMIC CHIP 0.001uF	50V
C807	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C808	1-135-091-00	TANTALUM CHIP 1uF 20%	16V
C809	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C810	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C811	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C813	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C814	1-162-971-11	CERAMIC CHIP 0.001uF	50V
C815	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C816	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C817	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C818	1-135-091-00	TANTALUM CHIP 1uF 20%	16V
C819	1-164-360-11	CERAMIC CHIP 0.1uF	16V

Ref. No.	Part No.	Description	Remark
C820	1-135-091-00	TANTALUM CHIP 1uF 20%	16V
C821	1-162-947-11	CERAMIC CHIP 33PF 5%	50V
C823	1-135-091-00	TANTALUM CHIP 1uF 20%	16V
C826	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C827	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C830	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C832	1-162-971-11	CERAMIC CHIP 0.001uF	50V
C833	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C834	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C835	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C836	1-126-205-11	ELECT CHIP 47uF 20%	6.3V
C837	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C838	1-135-145-11	TANTALUM CHIP 0.47uF 10%	35V
C839	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C841	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C851	1-164-633-11	CERAMIC CHIP 0.1uF 10%	25V
C852	1-162-971-11	CERAMIC CHIP 0.001uF	50V
C853	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C854	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C855	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C856	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C857	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C858	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C859	1-135-181-21	TANTALUM CHIP 4.7uF 20%	6.3V
C860	1-126-205-11	ELECT CHIP 47uF 20%	6.3V
C861	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C862	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C863	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C864	1-162-638-11	CERAMIC CHIP 1uF	16V
C866	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C868	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C869	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C870	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C871	1-124-778-00	ELECT CHIP 22uF 20%	6.3V

< CONNECTOR >

CN701	1-573-372-21	CONNECTOR, BOARD TO BOARD 18P	
CN801	1-573-525-21	CONNECTOR, BOARD TO BOARD 16P	
CN851	1-573-361-11	CONNECTOR, FFC/FPC 21P	

< TRIMMER >

CT801	1-141-356-11	CAP, ADJ	

< FILTER >

FL701	1-236-834-21	FILTER, LOW PASS	
FL702	1-415-751-21	DELAY LINE, LC (YH)	

Ref.No.	Part No.	Description	Remark
		< IC >	
IC701	8-759-243-19	IC TC7SU04F	
IC702	8-759-064-36	IC MB88346BPFV	
IC703	8-759-710-07	IC NJM2234M	
IC704	8-752-348-92	IC CXD2101AR	
IC705	8-759-069-19	IC CXD2103AR	
IC706	8-752-337-36	IC CXD2104N	
IC707	8-752-344-53	IC CXD2100Q	
IC709	8-752-834-64	IC CXP80624-281R	
IC710	8-759-519-14	IC MB8464-15LLPFTN	
IC711	8-759-518-81	IC CXD2112R	
IC712	8-759-044-78	IC AK6420F	
IC801	8-752-337-34	IC CXD1257R	
IC802	8-752-056-39	IC CXA1507BR	
IC803	8-752-053-26	IC CXA1399Q	
IC804	8-752-327-48	IC CXD1250N	
IC805	8-752-054-61	IC CXA1390AR	
IC851	8-759-701-24	IC NJM3414M	
IC852	8-759-998-96	IC LM324D	
IC853	8-759-058-47	IC MPC1724VMEL	
IC854	8-759-823-51	IC LB1830M	
IC855	8-759-059-07	IC LC78865M	
		< COIL >	
L701	1-412-006-31	INDUCTOR CHIP 10uH	
L703	1-412-052-21	INDUCTOR CHIP 1uH	
L704	1-412-006-31	INDUCTOR CHIP 10uH	
L705	1-412-979-21	INDUCTOR 1uH	
L706	1-412-058-11	INDUCTOR CHIP 10uH	
L707	1-412-006-31	INDUCTOR CHIP 10uH	
L708	1-412-979-21	INDUCTOR 1uH	
L709	1-412-058-11	INDUCTOR CHIP 10uH	
L710	1-412-052-21	INDUCTOR CHIP 1uH	
L711	1-412-052-21	INDUCTOR CHIP 1uH	
L712	1-412-052-21	INDUCTOR CHIP 1uH	
L714	1-412-006-31	INDUCTOR CHIP 10uH	
L715	1-412-058-11	INDUCTOR CHIP 10uH	
L717	1-412-058-11	INDUCTOR CHIP 10uH	
L718	1-412-006-31	INDUCTOR CHIP 10uH	
L720	1-412-006-31	INDUCTOR CHIP 10uH	
L721	1-410-391-11	INDUCTOR CHIP 68uH	
L801	1-412-058-11	INDUCTOR CHIP 10uH	
L802	1-412-006-31	INDUCTOR CHIP 10uH	
L803	1-412-058-11	INDUCTOR CHIP 10uH	
L804	1-412-058-11	INDUCTOR CHIP 10uH	
L851	1-412-058-11	INDUCTOR CHIP 10uH	
L852	1-412-063-21	INDUCTOR CHIP 68uH	
L853	1-412-058-11	INDUCTOR CHIP 10uH	
		< TRANSISTOR >	
Q701	8-729-928-87	TRANSISTOR DTC124EE	
Q702	8-729-427-74	TRANSISTOR XP4601	
Q703	8-729-427-74	TRANSISTOR XP4601	
Q704	8-729-928-19	TRANSISTOR 2SA1774R	
Q705	8-729-928-81	TRANSISTOR DTC144EE	
Q706	8-729-927-XX	TRANSISTOR 2SC4617TL	
Q707	8-729-928-36	TRANSISTOR DTA114EE	
Q708	8-729-927-97	TRANSISTOR 2SC4617TL	
Q709	8-729-427-72	TRANSISTOR XP4501	
Q801	8-729-927-XX	TRANSISTOR 2SC4617TL	
Q802	8-729-427-70	TRANSISTOR XP4401	
Q851	8-729-927-XX	TRANSISTOR 2SC4617TL	
Q852	8-729-907-00	TRANSISTOR DTC114EU	
Q853	8-729-427-70	TRANSISTOR XP4401	
		< RESISTOR >	
R701	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R702	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R703	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R704	1-216-815-11	METAL CHIP 330 5% 1/16W	
R705	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R706	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R707	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R708	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R709	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R710	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R712	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R713	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R714	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R715	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R716	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R718	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R719	1-216-840-11	METAL CHIP 39K 5% 1/16W	
R721	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R722	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R723	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R724	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R725	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R727	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R728	1-216-813-11	METAL CHIP 220 5% 1/16W	
R729	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R730	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R732	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R733	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R734	1-216-817-11	METAL CHIP 470 5% 1/16W	
R735	1-216-834-11	METAL CHIP 12K 5% 1/16W	

Ref. No.	Part No.	Description			Remark
R736	1-216-864-11	METAL CHIP	0	5%	1/16W
R737	1-216-821-11	METAL CHIP	1K	5%	1/16W
R738	1-216-821-11	METAL CHIP	1K	5%	1/16W
R739	1-216-833-11	METAL CHIP	10K	5%	1/16W
R742	1-216-821-11	METAL CHIP	1K	5%	1/16W
R744	1-216-833-11	METAL CHIP	10K	5%	1/16W
R745	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R748	1-216-864-11	METAL CHIP	0	5%	1/16W
R749	1-216-841-11	METAL CHIP	47K	5%	1/16W
R750	1-216-842-11	METAL CHIP	56K	5%	1/16W
R751	1-216-821-11	METAL CHIP	1K	5%	1/16W
R752	1-216-817-11	METAL CHIP	470	5%	1/16W
R753	1-216-834-11	METAL CHIP	12K	5%	1/16W
R754	1-216-821-11	METAL CHIP	1K	5%	1/16W
R755	1-216-821-11	METAL CHIP	1K	5%	1/16W
R756	1-216-857-11	METAL CHIP	1M	5%	1/16W
R757	1-216-857-11	METAL CHIP	1M	5%	1/16W
R758	1-216-841-11	METAL CHIP	47K	5%	1/16W
R759	1-216-821-11	METAL CHIP	1K	5%	1/16W
R760	1-216-857-11	METAL CHIP	1M	5%	1/16W
R762	1-216-821-11	METAL CHIP	1K	5%	1/16W
R768	1-216-837-11	METAL CHIP	22K	5%	1/16W
R769	1-216-821-11	METAL CHIP	1K	5%	1/16W
R770	1-216-821-11	METAL CHIP	1K	5%	1/16W
R771	1-216-821-11	METAL CHIP	1K	5%	1/16W
R774	1-216-821-11	METAL CHIP	1K	5%	1/16W
R775	1-216-833-11	METAL CHIP	10K	5%	1/16W
R776	1-216-841-11	METAL CHIP	47K	5%	1/16W
R777	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R778	1-216-839-11	METAL CHIP	33K	5%	1/16W
R779	1-216-833-11	METAL CHIP	10K	5%	1/16W
R780	1-216-821-11	METAL CHIP	1K	5%	1/16W
R781	1-216-833-11	METAL CHIP	10K	5%	1/16W
R782	1-216-813-11	METAL CHIP	220	5%	1/16W
R783	1-216-863-11	METAL GLAZE	3.3M	5%	1/16W
R784	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R785	1-216-841-11	METAL CHIP	47K	5%	1/16W
R787	1-216-821-11	METAL CHIP	1K	5%	1/16W
R788	1-216-821-11	METAL CHIP	1K	5%	1/16W
R791	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R792	1-216-857-11	METAL CHIP	1M	5%	1/16W
R793	1-216-821-11	METAL CHIP	1K	5%	1/16W
R794	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R795	1-216-815-11	METAL CHIP	330	5%	1/16W
R796	1-216-817-11	METAL CHIP	470	5%	1/16W
R797	1-216-818-11	METAL CHIP	560	5%	1/16W
R799	1-216-857-11	METAL CHIP	1M	5%	1/16W
R800	1-216-309-00	METAL CHIP	5.6	5%	1/10W
R801	1-216-864-11	METAL CHIP	0	5%	1/16W

Ref. No.	Part No.	Description			Remark
R802	1-216-835-11	METAL CHIP	15K	5%	1/16W
R803	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R804	1-216-833-11	METAL CHIP	10K	5%	1/16W
R805	1-216-845-11	METAL CHIP	100K	5%	1/16W
R806	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R807	1-216-818-11	METAL CHIP	560	5%	1/16W
R808	1-216-801-11	METAL CHIP	22	5%	1/16W
R810	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R812	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R813	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R816	1-216-833-11	METAL CHIP	10K	5%	1/16W
R819	1-216-805-11	METAL CHIP	47	5%	1/16W
R821	1-216-863-11	METAL GLAZE	3.3M	5%	1/16W
R823	1-218-721-11	METAL CHIP	16K	0.50%	1/16W
R825	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R830	1-216-821-11	METAL CHIP	1K	5%	1/16W
R851	1-216-837-11	METAL CHIP	22K	5%	1/16W
R852	1-216-821-11	METAL CHIP	1K	5%	1/16W
R853	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R854	1-216-833-11	METAL CHIP	10K	5%	1/16W
R855	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R856	1-216-837-11	METAL CHIP	22K	5%	1/16W
R857	1-216-848-11	METAL CHIP	180K	5%	1/16W
R858	1-216-837-11	METAL CHIP	22K	5%	1/16W
R859	1-216-845-11	METAL CHIP	100K	5%	1/16W
R860	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R861	1-216-821-11	METAL CHIP	1K	5%	1/16W
R862	1-216-848-11	METAL CHIP	180K	5%	1/16W
R863	1-216-855-11	METAL CHIP	680K	5%	1/16W
R864	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R865	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R866	1-216-820-11	METAL CHIP	820	5%	1/16W
R867	1-216-837-11	METAL CHIP	22K	5%	1/16W
R868	1-216-833-11	METAL CHIP	10K	5%	1/16W
R870	1-216-841-11	METAL CHIP	47K	5%	1/16W
R872	1-216-851-11	METAL CHIP	330K	5%	1/16W
R873	1-216-816-11	METAL CHIP	390	5%	1/16W
R874	1-216-842-11	METAL CHIP	56K	5%	1/16W

< NETWORK RESISTOR >

RB701	1-236-420-11	NETWORK, RES	4.7K
RB702	1-236-432-11	NETWORK, RES	47K
RB703	1-236-412-11	NETWORK, RES	1.0K
RB704	1-236-416-11	NETWORK, RES	2.2K
RB705	1-236-416-11	NETWORK, RES	2.2K
RB706	1-236-412-11	NETWORK, RES	1.0K
RB707	1-236-412-11	NETWORK, RES	1.0K
RB708	1-236-412-11	NETWORK, RES	1.0K

Ref. No.	Part No.	Description			Remark
		< VIBRATOR >			
X701	1-579-369-21	VIBRATOR			
X801	1-579-621-11	VIBRATOR, CRYSTAL (28.6363MHz)			
**					
*	A-7062-880-A	VF-42P BOARD, COMPLETE ************************			
					(Ref. No. 7000 Series)
	1-540-019-21	SOCKET ASSY, CRT			
	3-942-888-01	HOLDER, LED			
		< CAPACITOR >			
C501	1-126-176-11	ELECT	220uF	20%	10V
C502	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C503	1-163-109-00	CERAMIC CHIP	47PF	5%	50V
⚠C504	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
⚠C505	1-164-758-11	CERAMIC CHIP	0.0039uF	5%	50V
⚠C506	1-162-625-11	CERAMIC CHIP	0.0047uF	5%	50V
C507	1-127-515-11	ELECT(SOLID)	47uF	20%	6.3V
C508	1-164-611-11	CERAMIC CHIP	0.001uF	10%	500V
C509	1-124-257-00	ELECT	2.2uF	20%	50V
C510	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C511	1-126-090-11	ELECT	82uF	20%	10V
C512	1-137-306-11	FILM CHIP	0.1uF	5%	16V
C513	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C514	1-131-381-00	TANTALUM	47uF	10%	10V
C515	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C516	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
		< CONNECTOR >			
* CN501	1-566-759-11	PIN, CONNECTOR (PC BOARD) 4P			
* CN502	1-566-195-11	PIN, CONNECTOR (PC BOARD) 2P			
* CN503	1-566-195-11	PIN, CONNECTOR (PC BOARD) 2P			
		< DIODE >			
D501	8-719-820-65	DIODE TLS221			
D502	8-719-984-02	LED BR4371F			
D503	8-719-400-20	DIODE MA152WA			
		< IC >			
IC501	8-759-420-01	IC AN2512S			
		< COIL >			
L501	1-408-976-21	INDUCTOR 33uH			
L502	1-408-785-21	INDUCTOR CHIP 47uH			
⚠L503	1-459-876-41	COIL, FERRITE (HLC)			

Ref. No.	Part No.	Description			Remark
		< TRANSISTOR >			
Q501	8-729-120-28	TRANSISTOR	2SC1623-L5L6		
Q502	8-729-216-31	TRANSISTOR	2SA1163-G		
Q503	8-729-120-28	TRANSISTOR	2SC1623-L5L6		
Q504	8-729-106-68	TRANSISTOR	2SD1615A-GP		
		< RESISTOR >			
R501	1-216-033-00	METAL CHIP	220	5%	1/10W
R502	1-216-041-00	METAL CHIP	470	5%	1/10W
R503	1-216-041-00	METAL CHIP	470	5%	1/10W
R506	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R507	1-216-047-00	METAL CHIP	820	5%	1/10W
R508	1-216-087-11	METAL GLAZE	39K	5%	1/10W
R509	1-216-087-11	METAL GLAZE	39K	5%	1/10W
R510	1-216-001-00	METAL CHIP	10	5%	1/10W
R511	1-216-121-00	METAL CHIP	1M	5%	1/10W
R512	1-216-131-11	METAL CHIP	2.7M	5%	1/10W
R513	1-216-101-00	METAL CHIP	150K	5%	1/10W
R514	1-216-121-00	METAL CHIP	1M	5%	1/10W
R515	1-216-131-11	METAL CHIP	2.7M	5%	1/10W
R516	1-216-055-00	METAL CHIP	1.8K	5%	1/10W
R517	1-216-025-00	METAL CHIP	100	5%	1/10W
R518	1-216-308-00	METAL CHIP	4.7	5%	1/10W
R519	1-216-336-11	METAL CHIP	47K	1%	1/10W
R520	1-216-107-00	METAL CHIP	270K	5%	1/10W
R521	1-216-121-00	METAL CHIP	1M	5%	1/10W
R522	1-216-160-00	METAL GLAZE	27	5%	1/8W
R523	1-216-053-00	METAL CHIP	1.5K	5%	1/10W
R524	1-216-113-00	METAL CHIP	470K	5%	1/10W
R525	1-216-097-00	METAL CHIP	100K	5%	1/10W
		< VARIABLE RESISTOR >			
RV501	1-238-092-11	RES, ADJ, CERMET 47K			
RV502	1-238-086-11	RES, ADJ, CERMET 470			
RV503	1-238-088-11	RES, ADJ, CERMET 2.2K			
RV504	1-228-762-00	RES, ADJ, METAL GLAZE 1M			
		< TRANSFORMER >			
⚠T501	1-439-486-11	TRANSFORMER ASSY, FLYBACK			
		< THERMISTOR >			
TH501	1-809-350-21	THERMISTOR, NTC (2125)			
		< FLAT CABLE >			
⚠W501	1-540-019-21	SOCKET ASSY, CRT			
**					

The components identified by
mark ⚠ or dotted line with mark
⚠ are critical for safety.
Replace only with part number
specified.

Ref. No.	Part No.	Description	Remark
*	A-7063-162-A	VS-93P BOARD, COMPLETE (AEP,UK model) *************************************	
*	A-7063-275-A	VS-93P BOARD, COMPLETE *********************** (E,Australian,Tourist model)	
		(Ref. No. 3000 Series)	
	1-630-591-11	FP-182 FLEXIBLE BOARD	
	3-943-006-01	CASE (UPPER), SHIELD, RP	
	3-943-007-01	CASE (LOWER), SHIELD, RP	
	3-943-009-01	PLATE, SHIELD, FE	
		< CAPACITOR >	
C001	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C002	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C003	1-162-955-11	CERAMIC CHIP 150PF 5% 50V	
C004	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C005	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C006	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C007	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C008	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C009	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C010	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C011	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C012	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C013	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C014	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C015	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C016	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C017	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C018	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C019	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C020	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C021	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C022	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C023	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C024	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C025	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C026	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C027	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C028	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C029	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C030	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C031	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C032	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C033	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C034	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C035	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C036	1-135-157-21	TANTALUM CHIP 10uF 20% 6.3V	
C037	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C038	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C039	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C040	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C041	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C042	1-162-968-11	CERAMIC CHIP 0.0047uF 10% 50V	
C043	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C044	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C045	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C046	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C047	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C048	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C049	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C050	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C051	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C052	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C053	1-135-259-11	TANTAL. CHIP 10uF 20% 6.3V	
C054	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C055	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C056	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C057	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C058	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C059	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C060	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C061	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C062	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C063	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C064	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C065	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C066	1-162-974-11	CERAMIC CHIP 0.01uF 50V	
C067	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C068	1-162-949-11	CERAMIC CHIP 47PF 5% 50V	
C069	1-162-948-11	CERAMIC CHIP 39PF 5% 50V	
C070	1-162-953-11	CERAMIC CHIP 100PF 5% 50V	
C071	1-164-360-11	CERAMIC CHIP 0.1uF 16V	
C072	1-162-943-11	CERAMIC CHIP 15PF 5% 50V	
C073	1-162-951-11	CERAMIC CHIP 68PF 5% 50V	
C074	1-162-956-11	CERAMIC CHIP 180PF 5% 50V	
C075	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C076	1-162-945-11	CERAMIC CHIP 22PF 5% 50V	
C077	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C078	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C079	1-162-939-11	CERAMIC CHIP 8PF 0.5PF 50V	
C080	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C081	1-162-944-11	CERAMIC CHIP 18PF 5% 50V	
C082	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C083	1-162-995-11	CERAMIC CHIP 0.022uF 50V	
C084	1-162-995-11	CERAMIC CHIP 0.022uF 50V	(AEP, UK model)
C086	1-162-959-11	CERAMIC CHIP 330PF 5% 50V	(AEP, UK model)
C087	1-162-974-11	CERAMIC CHIP 0.01uF 50V	(AEP, UK model)

Ref. No.	Part No.	Description			Remark
C088	1-162-974-11	CERAMIC CHIP	0.01uF		50V (AEP, UK model)
C089	1-164-360-11	CERAMIC CHIP	0.1uF		16V (AEP, UK model)
C091	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C092	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C093	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C121	1-162-971-11	CERAMIC CHIP	0.001uF		50V
C122	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C123	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C124	1-164-346-11	CERAMIC CHIP	1uF		16V
C125	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C126	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C127	1-164-145-11	CERAMIC CHIP	390PF	5%	50V
C128	1-162-943-11	CERAMIC CHIP	15PF	5%	50V
C129	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C130	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C131	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C132	1-163-118-00	CERAMIC CHIP	110PF	5%	50V
C133	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C135	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C136	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C137	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C150	1-162-944-11	CERAMIC CHIP	18PF	5%	50V
C151	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C155	1-163-105-00	CERAMIC CHIP	33PF	5%	50V
C156	1-162-948-11	CERAMIC CHIP	39PF	5%	50V
C159	1-162-946-11	CERAMIC CHIP	27PF	5%	50V
C161	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
C167	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C170	1-162-568-11	CERAMIC CHIP	0.33uF		25V
C171	1-162-638-11	CERAMIC CHIP	1uF		16V
C172	1-162-942-11	CERAMIC CHIP	12PF	5%	50V
C173	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C175	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C176	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C177	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C178	1-164-145-11	CERAMIC CHIP	390PF	5%	50V
C179	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C180	1-162-947-11	CERAMIC CHIP	33PF	5%	50V
C181	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C182	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C185	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C186	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C187	1-162-943-11	CERAMIC CHIP	15PF	5%	50V
C188	1-162-954-11	CERAMIC CHIP	120PF	5%	50V
C189	1-164-362-11	CERAMIC CHIP	470PF	5%	50V
C190	1-162-951-11	CERAMIC CHIP	68PF	5%	50V
C192	1-162-958-11	CERAMIC CHIP	270PF	5%	50V
C193	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
C194	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C199	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C203	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C204	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C205	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C206	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C207	1-162-952-11	CERAMIC CHIP	82PF	5%	50V
C208	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C209	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C210	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C211	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C212	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C213	1-163-081-00	CERAMIC CHIP	0.22uF		25V
C214	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C215	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C216	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C217	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C218	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C219	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C220	1-126-246-11	ELECT CHIP	220uF	20%	4V
C221	1-164-182-11	CERAMIC CHIP	0.0033uF	10%	50V
C222	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C223	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C225	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C226	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C227	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C228	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C229	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V
C230	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C231	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C232	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V
C233	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C234	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C235	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C236	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C237	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C238	1-164-005-11	CERAMIC CHIP	0.47uF		25V
C239	1-162-954-11	CERAMIC CHIP	120PF	5%	50V
C240	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
C241	1-126-607-11	ELECT CHIP	47uF	20%	4V
C242	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C245	1-163-035-00	CERAMIC CHIP	0.047uF		50V
C246	1-135-157-21	TANTALUM CHIP	10uF	20%	6.3V
C247	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C248	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C249	1-162-959-11	CERAMIC CHIP	330PF	5%	50V
C250	1-164-145-11	CERAMIC CHIP	390PF	5%	50V
C251	1-162-955-11	CERAMIC CHIP	150PF	5%	50V (AEP, UK model)
C252	1-162-955-11	CERAMIC CHIP	150PF	5%	50V (AEP, UK model)
C255	1-162-974-11	CERAMIC CHIP	0.01uF		50V

Ref. No.	Part No.	Description			Remark
C256	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C257	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C259	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C260	1-162-945-11	CERAMIC CHIP	22PF	5%	50V
C261	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C262	1-162-954-11	CERAMIC CHIP	120PF	5%	50V
C263	1-162-951-11	CERAMIC CHIP	68PF	5%	50V
C264	1-162-950-11	CERAMIC CHIP	56PF	5%	50V
C265	1-162-957-11	CERAMIC CHIP	220PF	5%	50V
C266	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
C267	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C268	1-162-955-11	CERAMIC CHIP	150PF	5%	50V
C269	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C270	1-162-947-11	CERAMIC CHIP	33PF	5%	50V
C271	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C272	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C273	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C276	1-162-945-11	CERAMIC CHIP	22PF	5%	50V
C277	1-162-941-11	CERAMIC CHIP	10PF	0.5PF	50V
C278	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C279	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C280	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C281	1-135-146-21	TANTALUM CHIP	0.68uF	20%	25V
C282	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C283	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C284	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C285	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C286	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C288	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C289	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C290	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C291	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C292	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V
C294	1-162-638-11	CERAMIC CHIP	1uF		16V
C295	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C296	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C297	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C298	1-162-947-11	CERAMIC CHIP	33PF	5%	50V
C299	1-162-949-11	CERAMIC CHIP	47PF	5%	50V
C300	1-162-953-11	CERAMIC CHIP	100PF	5%	50V
C301	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C302	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C303	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C304	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C305	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C306	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C307	1-135-091-00	TANTALUM CHIP	1uF	20%	16V
C401	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C402	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V

Ref. No.	Part No.	Description			Remark
C403	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C404	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C405	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C406	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C407	1-164-222-11	CERAMIC CHIP	0.22uF		25V
C408	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C411	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C412	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C413	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C415	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C416	1-162-905-11	CERAMIC CHIP	1PF	0.25PF	50V
C417	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C418	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C419	1-164-346-11	CERAMIC CHIP	1uF		16V
C420	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C421	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C422	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C423	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C424	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C426	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C427	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C428	1-162-917-11	CERAMIC CHIP	15PF	5%	50V
C429	1-162-917-11	CERAMIC CHIP	15PF	5%	50V
C430	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C431	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C432	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C433	1-164-173-11	CERAMIC CHIP	0.0039uF	10%	50V
C434	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C435	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C436	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C437	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C438	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C439	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C440	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C441	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C442	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C443	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C444	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C445	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C446	1-164-346-11	CERAMIC CHIP	1uF		16V
C447	1-162-936-11	CERAMIC CHIP	5PF	0.25PF	50V
C448	1-164-346-11	CERAMIC CHIP	1uF		16V
C449	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V
C450	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C451	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C452	1-135-179-21	TANTAL. CHIP	2.2uF	20%	16V
C453	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V
C454	1-162-974-11	CERAMIC CHIP	0.01uF		50V

Ref.No.	Part No.	Description	Remark
C455	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C456	1-164-633-11	CERAMIC CHIP 0.1uF 10%	25V
C457	1-163-809-11	CERAMIC CHIP 0.047uF 10%	25V
C458	1-135-180-21	TANTALUM CHIP 3.3uF 20%	6.3V
C459	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V
C460	1-163-833-00	CERAMIC CHIP 0.068uF	25V
C461	1-162-967-11	CERAMIC CHIP 0.0033uF 10%	50V
C462	1-163-833-00	CERAMIC CHIP 0.068uF	25V
C463	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C464	1-163-809-11	CERAMIC CHIP 0.047uF 10%	25V
C465	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C466	1-164-346-11	CERAMIC CHIP 1uF	16V
C467	1-163-809-11	CERAMIC CHIP 0.047uF 10%	25V
C468	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
C469	1-163-809-11	CERAMIC CHIP 0.047uF 10%	25V
C470	1-163-809-11	CERAMIC CHIP 0.047uF 10%	25V
C471	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V
C472	1-164-222-11	CERAMIC CHIP 0.22uF	25V
C473	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C474	1-135-259-11	TANTAL. CHIP 10uF 20%	6.3V
C475	1-126-205-11	ELECT CHIP 47uF 20%	6.3V
C476	1-164-633-11	CERAMIC CHIP 0.1uF 10%	25V
C477	1-164-633-11	CERAMIC CHIP 0.1uF 10%	25V
C478	1-135-091-00	TANTALUM CHIP 1uF 20%	16V
C479	1-164-360-11	CERAMIC CHIP 0.1uF	16V

< FILTER >

Ref.No.	Part No.	Description	Remark
CF151	1-579-371-11	FILTER, CERAMIC	

< CONNECTOR >

Ref.No.	Part No.	Description	Remark
CN001	1-566-531-11	CONNECTOR, FPC (ZIF) 15P	
CN002	1-573-371-21	CONNECTOR, BOARD TO BOARD 14P	
CN101	1-566-542-31	CONNECTOR, FPC (NON ZIF) 10P	
CN102	1-580-789-21	PIN, CONNECTOR (SMD) 6P	
CN401	1-691-539-11	CONNECTOR, BOARD TO BOARD 30P	
CN402	1-691-472-21	CONNECTOR, FFC/FPC 6P	
CN403	1-691-519-11	CONNECTOR, BOARD TO BOARD 30P	
CN404	1-573-293-21	PIN, CONNECTOR (1.5MM) (SMD) 2P	
CN405	1-566-546-11	CONNECTOR, FPC (NON ZIF) 14P	
CN406	1-580-056-21	PIN, CONNECTOR 3P	
CN407	1-566-538-11	CONNECTOR, FPC (NON ZIF) 6P	
CN408	1-566-541-11	CONNECTOR, FPC (NON ZIF) 9P	
CN502	1-565-662-11	CONNECTOR (PC BOARD) 15P	

< DIODE >

Ref.No.	Part No.	Description	Remark
D001	8-719-951-22	IC IMN10	
D121	8-719-941-86	DIODE DAN202U	
D152	8-719-421-71	DIODE MA132WA-TX	
D152	8-719-991-00	DIODE DAP222-TL	
D154	8-719-989-03	DIODE DAN222	
D159	8-719-941-86	DIODE DAN202U	
D160	8-719-941-86	DIODE DAN202U	
D402	8-719-404-46	DIODE MA110	

< FILTER >

Ref.No.	Part No.	Description	Remark
FL121	1-236-188-11	FILTER, BAND PASS	
FL152	1-236-849-21	FILTER, BAND PASS	
FL153	1-236-186-11	FILTER, BAND PASS	
FL154	1-239-055-21	FILTER, LOW PASS (CCD. PAL. Y)	
FL155	1-236-848-21	FILTER, LOW PASS	
FL401	1-406-452-11	COIL, OSC	

< IC >

Ref.No.	Part No.	Description	Remark
IC001	8-752-033-38	IC CXA1202R	
IC002	8-752-033-38	IC CXA1202R	
IC003	8-752-053-21	IC CXA1211M	
IC005	8-759-998-32	IC CXD-2107M (AEP, UK model)	
IC121	8-759-605-61	IC CXA1203N	
IC151	8-752-036-19	IC CXA1207R	
IC152	8-752-036-20	IC CXA1208R	
IC153	8-759-710-29	IC NJM2235M	
IC154	8-752-333-24	IC CXL1506M	
IC155	8-752-053-21	IC CXA1211M	
IC156	8-759-064-36	IC MB88346BPFV-EF	
IC158	8-759-064-36	IC MB88346BPFV-EF	
IC159	8-759-636-33	IC CXA1452-E2	
IC401	8-752-834-39	IC CXP80624-293R	
IC402	8-759-069-29	IC uPD6456GS-618	
IC403	8-759-044-78	IC AK6420F	
IC404	8-759-057-81	IC MPC1727VMER	
IC405	8-759-059-42	IC CXA1481AR	
IC406	8-759-999-02	IC TL1596CDB	
IC407	8-759-057-77	IC MCD004BN	
IC408	8-759-057-74	IC MCD002AR-TLM	
IC409	8-759-823-90	IC LB8110M	

< COIL >

Ref.No.	Part No.	Description	Remark
L001	1-410-381-11	INDUCTOR CHIP 10uH	
L002	1-412-066-21	INDUCTOR CHIP 220uH	
L003	1-412-066-21	INDUCTOR CHIP 220uH	
L004	1-412-066-21	INDUCTOR CHIP 220uH	
L005	1-410-385-11	INDUCTOR CHIP 22uH	
L006	1-410-385-11	INDUCTOR CHIP 22uH	
L007	1-412-058-11	INDUCTOR CHIP 10uH	
L008	1-410-658-31	INDUCTOR CHIP 220uH	

Ref. No.	Part No.	Description	Remark
L009	1-410-380-31	INDUCTOR CHIP 8.2uH	
L010	1-410-655-31	INDUCTOR CHIP 120uH	
L011	1-412-280-31	INDUCTOR 330uH	
L012	1-410-388-21	INDUCTOR CHIP 39uH	
L013	1-410-385-11	INDUCTOR CHIP 22uH	
L014	1-412-058-11	INDUCTOR CHIP 10uH	(AEP, UK model)
L121	1-410-381-11	INDUCTOR CHIP 10uH	
L150	1-412-954-11	INDUCTOR 18uH	
L151	1-410-388-21	INDUCTOR CHIP 39uH	
L152	1-410-385-11	INDUCTOR CHIP 22uH	
L154	1-410-390-11	INDUCTOR CHIP 56uH	
L155	1-410-390-11	INDUCTOR CHIP 56uH	
L158	1-410-393-11	INDUCTOR CHIP 100uH	
L160	1-412-058-11	INDUCTOR CHIP 10uH	
L161	1-410-385-11	INDUCTOR CHIP 22uH	
L162	1-412-280-31	INDUCTOR 330uH	
L163	1-410-167-41	INDUCTOR CHIP 820uH	
L164	1-410-657-21	INDUCTOR CHIP 180uH	
L167	1-410-383-31	INDUCTOR CHIP 15uH	
L168	1-410-379-31	INDUCTOR CHIP 6.8uH	
L169	1-410-392-11	INDUCTOR CHIP 82uH	
L170	1-410-381-11	INDUCTOR CHIP 10uH	
L171	1-410-384-31	INDUCTOR CHIP 18uH	
L174	1-412-058-11	INDUCTOR CHIP 10uH	
L175	1-410-393-11	INDUCTOR CHIP 100uH	
L176	1-410-656-11	INDUCTOR CHIP 150uH	
L177	1-412-058-11	INDUCTOR CHIP 10uH	
L178	1-412-062-11	INDUCTOR CHIP 47uH	
L179	1-410-379-31	INDUCTOR CHIP 6.8uH	
L180	1-410-393-11	INDUCTOR CHIP 100uH	
L181	1-410-393-11	INDUCTOR CHIP 100uH	
L182	1-410-655-31	INDUCTOR CHIP 120uH	
L184	1-410-386-11	INDUCTOR CHIP 27uH	
L185	1-412-058-11	INDUCTOR CHIP 10uH	
L401	1-412-058-11	INDUCTOR CHIP 10uH	
L402	1-412-058-11	INDUCTOR CHIP 10uH	
L403	1-412-064-11	INDUCTOR CHIP 100uH	
L404	1-412-058-11	INDUCTOR CHIP 10uH	

< IC LINK >

Ref. No.	Part No.	Description	Remark
⚠PS401	1-576-122-21	RINK, IC	
⚠PS402	1-576-123-21	RINK, IC	

< TRANSISTOR >

Ref. No.	Part No.	Description	Remark
Q001	8-729-216-22	TRANSISTOR 2SA1162-G	
Q003	8-729-905-23	TRANSISTOR 2SA1576-R	
Q004	8-729-905-18	TRANSISTOR DTC144EU	
Q005	8-729-905-18	TRANSISTOR DTC144EU	
Q006	8-729-823-86	TRANSISTOR 2SA1745	
Q007	8-729-823-86	TRANSISTOR 2SA1745	
Q008	8-729-905-23	TRANSISTOR 2SA1576-R	
Q009	8-729-905-23	TRANSISTOR 2SA1576-R	
Q010	8-729-905-12	TRANSISTOR DTA144EU	
Q011	8-729-905-18	TRANSISTOR DTC144EU	
Q012	8-729-905-18	TRANSISTOR DTC144EU	
Q013	8-729-823-86	TRANSISTOR 2SA1745	
Q014	8-729-823-86	TRANSISTOR 2SA1745	
Q015	8-729-905-23	TRANSISTOR 2SA1576-R	
Q016	8-729-905-23	TRANSISTOR 2SA1576-R	
Q017	8-729-905-12	TRANSISTOR DTA144EU	
Q018	8-729-905-18	TRANSISTOR DTC144EU	
Q019	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q020	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q021	8-729-905-23	TRANSISTOR 2SA1576-R	
Q022	8-729-905-23	TRANSISTOR 2SA1576	
Q023	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q024	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q025	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q026	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q027	8-729-905-96	TRANSISTOR DTA114TU	(AEP, UK model)
Q028	8-729-905-96	TRANSISTOR DTA114TU	(AEP, UK model)
Q029	8-729-905-96	TRANSISTOR DTA114TU	
Q030	8-729-905-15	TRANSISTOR DTC144WU	(AEP, UK model)
Q031	8-729-905-18	TRANSISTOR DTC144EU	
Q121	8-729-905-12	TRANSISTOR DTA144EU	
Q123	8-729-905-18	TRANSISTOR DTC144EU	
Q124	8-729-905-12	TRANSISTOR DTA144EU	
Q125	8-729-117-73	TRANSISTOR 2SC4178	
Q126	8-729-120-28	TRANSISTOR 2SC1623	
Q151	8-729-101-07	TRANSISTOR 2SB798-DL	
Q152	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q153	8-729-928-81	TRANSISTOR DTC144EE	
Q154	8-729-927-XX	TRANSISTOR 2SC4617TL-QR	
Q155	8-729-823-16	TRANSISTOR 2SC4555-5.6.7	
Q158	8-729-927-XX	TRANSISTOR 2SC4617TL-QR	
Q160	8-729-928-19	TRANSISTOR 2SA1774R	(AEP, UK model)
Q161	8-729-927-XX	TRANSISTOR 2SC4617TL-QR	
Q162	8-729-928-27	TRANSISTOR DTA144EE	
Q166	8-729-928-19	TRANSISTOR 2SA1774R	
Q168	8-729-928-27	TRANSISTOR DTA144EE	
Q169	8-729-905-18	TRANSISTOR DTC144EU	
Q170	8-729-925-47	TRANSISTOR IMB2	
Q171	8-729-117-73	TRANSISTOR 2SC4178	
Q172	8-729-117-73	TRANSISTOR 2SC4178	
Q175	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q176	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q177	8-729-905-23	TRANSISTOR 2SA1576-R	
Q178	8-729-905-23	TRANSISTOR 2SA1576-R	

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.

Ref.No.	Part No.	Description		Remark
Q180	8-729-422-54	TRANSISTOR	XN4215	
Q181	8-729-905-18	TRANSISTOR	DTC144EU	(AEP, UK model)
Q182	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q183	8-729-921-58	TRANSISTOR	DTA144TU	
Q184	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q185	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q188	8-729-907-26	TRANSISTOR	IMX1	
Q189	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q191	8-729-927-XX	TRANSISTOR	2SC4617	
Q192	8-729-927-XX	TRANSISTOR	2SC4617TL-QR	
Q194	8-729-927-XX	TRANSISTOR	2SC4617TL-QR	
Q195	8-729-928-19	TRANSISTOR	2SA1774R	
Q199	8-729-807-87	TRANSISTOR	2SB1295-UL6	
Q200	8-729-905-18	TRANSISTOR	DTC144EU	
Q201	8-729-920-48	TRANSISTOR	IMH2	
Q202	8-729-117-16	TRANSISTOR	2SA1611-M6	
Q203	8-729-905-23	TRANSISTOR	2SA1576-R	
Q204	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q205	8-729-920-48	TRANSISTOR	IMH2	
Q207	8-729-905-12	TRANSISTOR	DTA144EU	
Q208	8-729-905-18	TRANSISTOR	DTC144EU	
Q210	8-729-920-48	TRANSISTOR	IMH2	
Q211	8-729-823-16	TRANSISTOR	2SC4555	(AEP, UK model)
Q212	8-729-905-23	TRANSISTOR	2SA1576-R	
Q213	8-729-823-16	TRANSISTOR	2SC4555	(AEP, UK model)
Q214	8-729-920-48	TRANSISTOR	IMH2	
Q216	8-729-905-18	TRANSISTOR	DTC144EU	(AEP, UK model)
Q219	8-729-905-12	TRANSISTOR	DTA144EU	
Q220	8-729-905-18	TRANSISTOR	DTC144EU	
Q221	8-729-920-48	TRANSISTOR	IMH2	
Q222	8-729-120-28	TRANSISTOR	2SC1623	
Q223	8-729-905-18	TRANSISTOR	DTC144EU	
Q224	8-729-120-28	TRANSISTOR	2SC1623	
Q225	8-729-120-28	TRANSISTOR	2SC1623	
Q227	8-729-117-16	TRANSISTOR	2SA1611-M6	
Q228	8-729-920-48	TRANSISTOR	IMH2	
Q229	8-729-905-23	TRANSISTOR	2SA1576	
Q230	8-729-120-28	TRANSISTOR	2SC1623	
Q231	8-729-905-23	TRANSISTOR	2SA1576-R	
Q232	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q233	8-729-120-28	TRANSISTOR	2SC1623-L5L6	
Q234	8-729-905-23	TRANSISTOR	2SA1576-R	
Q235	8-729-928-81	TRANSISTOR	DTC144EE	
Q236	8-729-905-09	TRANSISTOR	DTA144WU	
Q237	8-729-928-19	TRANSISTOR	2SA1774R	
Q401	8-729-905-12	TRANSISTOR	DTA144EU	
Q402	8-729-905-18	TRANSISTOR	DTC144EU	
Q403	8-729-907-00	TRANSISTOR	DTC114EU	
Q404	8-729-905-23	TRANSISTOR	2SA1576-R	

Ref.No.	Part No.	Description				Remark
		< RESISTOR >				
R001	1-216-801-11	METAL CHIP	22	5%	1/16W	
R002	1-216-818-11	METAL CHIP	560	5%	1/16W	
R004	1-216-815-11	METAL CHIP	330	5%	1/16W	
R005	1-216-817-11	METAL CHIP	470	5%	1/16W	
R006	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R007	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R008	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R009	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R010	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R011	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R012	1-216-834-11	METAL CHIP	12K	5%	1/16W	(AEP, UK model)
R012	1-216-838-11	METAL CHIP	27K	5%	1/16W	(E, Australian, Tourist model)
R013	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R014	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R015	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R016	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R017	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R018	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R019	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R020	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R021	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R022	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R023	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R024	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R025	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R026	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	
R027	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R028	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R029	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R030	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R031	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R032	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R033	1-216-791-11	METAL CHIP	3.3	5%	1/16W	
R034	1-216-791-11	METAL CHIP	3.3	5%	1/16W	
R035	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R036	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R037	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R038	1-216-834-11	METAL CHIP	12K	5%	1/16W	(AEP, UK model)
R038	1-216-838-11	METAL CHIP	27K	5%	1/16W	(E, Australian, Tourist model)
R039	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R040	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R041	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R042	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R043	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R044	1-216-833-11	METAL CHIP	10K	5%	16W	

Ref. No.	Part No.	Description				Remark
R045	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R046	1-216-840-11	METAL CHIP	39K	5%	1/16W	
R047	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R048	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R049	1-216-828-11	METAL CHIP	3.9K	5%	1/16W	
R050	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	
R051	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R052	1-216-824-11	METAL CHIP	1.8K	5%	1/16W	
R054	1-216-817-11	METAL CHIP	470	5%	1/16W	
R055	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R056	1-216-813-11	METAL CHIP	220	5%	1/16W	
R057	1-216-818-11	METAL CHIP	560	5%	1/16W	
R058	1-216-818-11	METAL CHIP	560	5%	1/16W	
R059	1-216-823-11	METAL CHIP	1.5K	5%	1/16W	
R060	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	
R061	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R062	1-216-818-11	METAL CHIP	560	5%	1/16W	
R063	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	
R064	1-216-817-11	METAL CHIP	470	5%	1/16W	
R065	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R066	1-216-809-11	METAL CHIP	100	5%	1/16W	
R067	1-216-835-11	METAL CHIP	15K	5%	1/16W	
R068	1-216-816-11	METAL CHIP	390	5%	1/16W	
R069	1-216-819-11	METAL CHIP	680	5%	1/16W	
R070	1-216-835-11	METAL CHIP	15K	5%	1/16W	
R071	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R072	1-216-820-11	METAL CHIP	820	5%	1/16W	
R073	1-216-814-11	METAL CHIP	270	5%	1/16W	
R074	1-216-816-11	METAL CHIP	390	5%	1/16W	
R075	1-216-817-11	METAL CHIP	470	5%	1/16W	
R076	1-216-864-11	METAL CHIP	0	5%	1/16W	
R077	1-216-809-11	METAL CHIP	100	5%	1/16W	
R078	1-216-820-11	METAL CHIP	820	5%	1/16W	
R079	1-216-834-11	METAL CHIP	12K	5%	1/16W	
R080	1-216-819-11	METAL CHIP	680	5%	1/16W	
R082	1-216-819-11	METAL CHIP	680	5%	1/16W	
R083	1-216-819-11	METAL CHIP	680	5%	1/16W	
R086	1-216-813-11	METAL CHIP	220	5%	1/16W	
R087	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R088	1-216-814-11	METAL CHIP	270	5%	1/16W	
R089	1-216-816-11	METAL CHIP	390	5%	1/16W	
R090	1-216-834-11	METAL CHIP	12K	5%	1/16W	
R091	1-216-826-11	METAL CHIP	2.7K	5%	1/16W	
R092	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R093	1-216-864-11	METAL CHIP	0	5%	1/16W	(AEP, UK model)
R095	1-216-833-11	METAL CHIP	10K	5%	1/16W	(AEP, UK model)
R096	1-216-864-11	METAL CHIP	0	5%	1/16W	(E, Australian, Tourist model)
R097	1-216-864-11	METAL CHIP	0	5%	1/16W	
R099	1-216-864-11	METAL CHIP	0	5%	1/16W	
R100	1-216-864-11	METAL CHIP	0	5%	1/16W	
R113	1-809-352-11	THERMISTOR, NTC				
R115	1-216-864-11	METAL CHIP	0	5%	1/16W	
R116	1-216-864-11	METAL CHIP	0	5%	1/16W	
R119	1-216-864-11	METAL CHIP	0	5%	1/16W	
R122	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R123	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R124	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R125	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R126	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R127	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R129	1-216-845-11	METAL CHIP	100K	5%	1/16W	
R130	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R131	1-216-841-11	METAL CHIP	47K	5%	1/16W	
R132	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R133	1-216-827-11	METAL CHIP	3.3K	5%	1/16W	
R134	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R135	1-216-832-11	METAL CHIP	8.2K	5%	1/16W	
R136	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R137	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R138	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R139	1-216-817-11	METAL CHIP	470	5%	1/16W	
R140	1-216-833-11	METAL CHIP	10K	5%	1/16W	
R141	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R142	1-216-825-11	METAL CHIP	2.2K	5%	1/16W	
R143	1-216-839-11	METAL CHIP	33K	5%	1/16W	
R144	1-216-817-11	METAL CHIP	470	5%	1/16W	
R145	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R146	1-216-821-11	METAL CHIP	1K	5%	1/16W	
R147	1-216-864-11	METAL CHIP	0	5%	1/16W	
R148	1-216-864-11	METAL CHIP	0	5%	1/16W	
R151	1-216-296-00	METAL CHIP	0	5%	1/8W	
R152	1-216-830-11	METAL CHIP	5.6K	5%	1/16W	
R153	1-216-304-11	METAL CHIP	3.3	5%	1/10W	
R154	1-216-820-11	METAL CHIP	820	5%	1/16W	
R155	1-216-836-11	METAL CHIP	18K	5%	1/16W	
R156	1-216-296-00	METAL CHIP	0	5%	1/8W	
R157	1-216-837-11	METAL CHIP	22K	5%	1/16W	
R158	1-216-829-11	METAL CHIP	4.7K	5%	1/16W	
R159	1-216-814-11	METAL CHIP	270	5%	1/16W	
R160	1-216-817-11	METAL CHIP	470	5%	1/16W	
R161	1-216-809-11	METAL CHIP	100	5%	1/16W	
R164	1-216-811-11	METAL CHIP	150	5%	1/16W	
R167	1-216-820-11	METAL CHIP	820	5%	1/16W	
R168	1-216-820-11	METAL CHIP	820	5%	1/16W	
R170	1-216-822-11	METAL CHIP	1.2K	5%	1/16W	
R171	1-216-864-11	METAL CHIP	0	5%	1/16W	
R174	1-216-841-11	METAL CHIP	47K	5%	1/16W	(AEP, UK model)

Ref.No.	Part No.	Description			Remark
R175	1-216-811-11	METAL CHIP	150	5%	1/16W
R176	1-216-807-11	METAL CHIP	68	5%	1/16W
R177	1-216-819-11	METAL CHIP	680	5%	1/16W
R178	1-216-817-11	METAL CHIP	470	5%	1/16W
R179	1-216-820-11	METAL CHIP	820	5%	1/16W
R189	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R190	1-216-837-11	METAL CHIP	22K	5%	1/16W
R191	1-216-864-11	METAL CHIP	0	5%	1/16W
R192	1-216-833-11	METAL CHIP	10K	5%	1/16W
R193	1-216-841-11	METAL CHIP	47K	5%	1/16W
R196	1-216-815-11	METAL CHIP	330	5%	1/16W
R197	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R198	1-216-817-11	METAL CHIP	470	5%	1/16W
R200	1-216-821-11	METAL CHIP	1K	5%	1/16W
R201	1-216-815-11	METAL CHIP	330	5%	1/16W
R202	1-216-840-11	METAL CHIP	39K	5%	1/16W
R203	1-216-837-11	METAL CHIP	22K	5%	1/16W
R204	1-216-821-11	METAL CHIP	1K	5%	1/16W
R205	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R206	1-216-813-11	METAL CHIP	220	5%	1/16W
R208	1-216-864-11	METAL CHIP	0	5%	1/16W
R209	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R210	1-216-807-11	METAL CHIP	68	5%	1/16W (E, Australian, Tourist model)
R210	1-216-821-11	METAL CHIP	1K	5%	1/16W (AEP, UK model)
R211	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R213	1-216-823-11	METAL CHIP	1.5K	5%	1/16W (E, Australian, Tourist model)
R213	1-216-831-11	METAL CHIP	6.8K	5%	1/16W (AEP, UK model)
R216	1-216-837-11	METAL CHIP	22K	5%	1/16W
R217	1-216-837-11	METAL CHIP	22K	5%	1/16W
R218	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R219	1-216-821-11	METAL CHIP	1K	5%	1/16W
R220	1-216-811-11	METAL CHIP	150	5%	1/16W
R221	1-216-835-11	METAL CHIP	15K	5%	1/16W
R222	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R223	1-216-835-11	METAL CHIP	15K	5%	1/16W
R225	1-216-821-11	METAL CHIP	1K	5%	1/16W
R226	1-216-864-11	METAL CHIP	0	5%	1/16W
R228	1-216-818-11	METAL CHIP	560	5%	1/16W
R229	1-216-811-11	METAL CHIP	150	5%	1/16W
R230	1-216-819-11	METAL CHIP	680	5%	1/16W
R236	1-216-837-11	METAL CHIP	22K	5%	1/16W
R237	1-216-841-11	METAL CHIP	47K	5%	1/16W
R238	1-216-818-11	METAL CHIP	560	5%	1/16W
R239	1-216-864-11	METAL CHIP	0	5%	1/16W
R240	1-216-837-11	METAL CHIP	22K	5%	1/16W
R241	1-216-841-11	METAL CHIP	47K	5%	1/16W
R242	1-216-818-11	METAL CHIP	560	5%	1/16W

Ref.No.	Part No.	Description			Remark
R243	1-216-817-11	METAL CHIP	470	5%	1/16W
R245	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R246	1-216-820-11	METAL CHIP	820	5%	1/16W
R247	1-216-296-00	METAL CHIP	0	5%	1/8W
R248	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R250	1-216-810-11	METAL CHIP	120	5%	1/16W
R251	1-216-806-11	METAL GLAZE	56	5%	1/16W
R252	1-216-864-11	METAL CHIP	0	5%	1/16W
R253	1-216-816-11	METAL CHIP	390	5%	1/16W
R254	1-216-817-11	METAL CHIP	470	5%	1/16W
R255	1-216-833-11	METAL CHIP	10K	5%	1/16W
R256	1-216-864-11	METAL CHIP	0	5%	1/16W
R257	1-216-818-11	METAL CHIP	560	5%	1/16W
R258	1-216-821-11	METAL CHIP	1K	5%	1/16W
R259	1-216-816-11	METAL CHIP	390	5%	1/16W
R260	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R270	1-216-295-00	METAL CHIP	0	5%	1/10W
R271	1-216-841-11	METAL CHIP	47K	5%	1/16W
R272	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R273	1-216-841-11	METAL CHIP	47K	5%	1/16W
R274	1-216-841-11	METAL CHIP	47K	5%	1/16W
R275	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R276	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R277	1-216-818-11	METAL CHIP	560	5%	1/16W
R278	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R279	1-216-818-11	METAL CHIP	560	5%	1/16W
R280	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R281	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R282	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R283	1-216-821-11	METAL CHIP	1K	5%	1/16W
R285	1-216-833-11	METAL CHIP	10K	5%	1/16W
R286	1-216-833-11	METAL CHIP	10K	5%	1/16W
R287	1-216-833-11	METAL CHIP	10K	5%	1/16W
R288	1-216-804-11	METAL CHIP	39	5%	1/16W
R289	1-216-804-11	METAL CHIP	39	5%	1/16W
R290	1-216-821-11	METAL CHIP	1K	5%	1/16W
R291	1-216-820-11	METAL CHIP	820	5%	1/16W
R292	1-216-804-11	METAL CHIP	39	5%	1/16W
R293	1-216-804-11	METAL CHIP	39	5%	1/16W
R294	1-216-845-11	METAL CHIP	100K	5%	1/16W
R295	1-216-853-11	METAL CHIP	470K	5%	1/16W
R296	1-216-855-11	METAL CHIP	680K	5%	1/16W
R297	1-216-820-11	METAL CHIP	820	5%	1/16W
R298	1-216-820-11	METAL CHIP	820	5%	1/16W
R299	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R300	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R301	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R302	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R303	1-216-846-11	METAL CHIP	120K	5%	1/16W

Ref. No.	Part No.	Description			Remark
R304	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R305	1-216-818-11	METAL CHIP	560	5%	1/16W
R306	1-216-821-11	METAL CHIP	1K	5%	1/16W
R307	1-216-821-11	METAL CHIP	1K	5%	1/16W
R308	1-216-819-11	METAL CHIP	680	5%	1/16W
R309	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R310	1-216-846-11	METAL CHIP	120K	5%	1/16W
R311	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R312	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R314	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R315	1-216-833-11	METAL CHIP	10K	5%	1/16W
R316	1-216-817-11	METAL CHIP	470	5%	1/16W
R317	1-216-816-11	METAL CHIP	390	5%	1/16W (AEP, UK model)
R318	1-216-833-11	METAL CHIP	10K	5%	1/16W
R319	1-216-841-11	METAL CHIP	47K	5%	1/16W
R321	1-216-864-11	METAL CHIP	0	5%	1/16W
R323	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R324	1-216-817-11	METAL CHIP	470	5%	1/16W
R325	1-216-864-11	METAL CHIP	0	5%	1/16W (E, Australian, Tourist model)
R326	1-216-841-11	METAL CHIP	47K	5%	1/16W (AEP, UK model)
R327	1-216-841-11	METAL CHIP	47K	5%	1/16W (AEP, UK model)
R329	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R331	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R333	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R334	1-216-833-11	METAL CHIP	10K	5%	1/16W
R335	1-216-821-11	METAL CHIP	1K	5%	1/16W
R337	1-216-864-11	METAL CHIP	0	5%	1/16W
R339	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R341	1-216-841-11	METAL CHIP	47K	5%	1/16W
R342	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R343	1-216-839-11	METAL CHIP	33K	5%	1/16W
R344	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R345	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R346	1-216-845-11	METAL CHIP	100K	5%	1/16W
R347	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R348	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R349	1-216-834-11	METAL CHIP	12K	5%	1/16W
R350	1-216-838-11	METAL CHIP	27K	5%	1/16W
R352	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R353	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R354	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R355	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R356	1-216-817-11	METAL CHIP	470	5%	1/16W
R357	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R358	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R359	1-216-296-00	METAL CHIP	0	5%	1/8W
R360	1-216-296-00	METAL CHIP	0	5%	1/8W
R361	1-216-864-11	METAL CHIP	0	5%	1/16W
R362	1-216-810-11	METAL CHIP	120	5%	1/16W
R364	1-216-833-11	METAL CHIP	10K	5%	1/16W
R365	1-216-841-11	METAL CHIP	47K	5%	1/16W
R366	1-216-844-11	METAL CHIP	82K	5%	1/16W
R367	1-216-296-00	METAL CHIP	0	5%	1/8W
R368	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R371	1-216-857-11	METAL CHIP	1M	5%	1/16W
R373	1-216-817-11	METAL CHIP	470	5%	1/16W
R374	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R375	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R376	1-216-817-11	METAL CHIP	470	5%	1/16W
R377	1-216-821-11	METAL CHIP	1K	5%	1/16W
R378	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R379	1-216-821-11	METAL CHIP	1K	5%	1/16W
R380	1-216-839-11	METAL CHIP	33K	5%	1/16W
R381	1-216-839-11	METAL CHIP	33K	5%	1/16W
R382	1-216-842-11	METAL CHIP	56K	5%	1/16W
R383	1-216-821-11	METAL CHIP	1K	5%	1/16W
R384	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R385	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R386	1-216-842-11	METAL CHIP	56K	5%	1/16W
R387	1-216-821-11	METAL CHIP	1K	5%	1/16W
R388	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R389	1-216-821-11	METAL CHIP	1K	5%	1/16W
R390	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R391	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R392	1-216-837-11	METAL CHIP	22K	5%	1/16W
R393	1-216-833-11	METAL CHIP	10K	5%	1/16W
R394	1-216-841-11	METAL CHIP	47K	5%	1/16W
R397	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R398	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R399	1-216-833-11	METAL CHIP	10K	5%	1/16W (AEP, UK model)
R401	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R402	1-216-833-11	METAL CHIP	10K	5%	1/16W
R403	1-216-841-11	METAL CHIP	47K	5%	1/16W
R404	1-216-821-11	METAL CHIP	1K	5%	1/16W
R405	1-216-864-11	METAL CHIP	0	5%	1/16W
R406	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R407	1-216-833-11	METAL CHIP	10K	5%	1/16W
R408	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R409	1-216-821-11	METAL CHIP	1K	5%	1/16W
R410	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R411	1-216-833-11	METAL CHIP	10K	5%	1/16W
R413	1-216-833-11	METAL CHIP	10K	5%	1/16W
R414	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R415	1-216-841-11	METAL CHIP	47K	5%	1/16W
R416	1-216-821-11	METAL CHIP	1K	5%	1/16W
R417	1-216-841-11	METAL CHIP	47K	5%	1/16W
R418	1-216-821-11	METAL CHIP	1K	5%	1/16W

Ref. No.	Part No.	Description	Remark
R419	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R420	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R421	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R422	1-216-856-11	METAL CHIP 820K 5% 1/16W	
R423	1-216-835-11	METAL CHIP 15K 5% 1/16W	
R424	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R425	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R426	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R428	1-216-849-11	METAL CHIP 220K 5% 1/16W	
R429	1-216-856-11	METAL CHIP 820K 5% 1/16W	
R430	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R435	1-216-842-11	METAL CHIP 56K 5% 1/16W	
R436	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R437	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R438	1-216-864-11	METAL CHIP 0 5% 1/16W	
R440	1-216-815-11	METAL CHIP 330 5% 1/16W	
R441	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R442	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R443	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R444	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R445	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R447	1-216-864-11	METAL CHIP 0 5% 1/16W	
R448	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R449	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R450	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R451	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R452	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R453	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R454	1-216-838-11	METAL CHIP 27K 5% 1/16W	
R455	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R456	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
R457	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R458	1-216-853-11	METAL CHIP 470K 5% 1/16W	
R459	1-216-826-11	METAL CHIP 2.7K 5% 1/16W	
R460	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
R461	1-216-852-11	METAL CHIP 390K 5% 1/16W	
R462	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R463	1-216-822-11	METAL CHIP 1.2K 5% 1/16W	
R464	1-216-809-11	METAL CHIP 100 5% 1/16W	
R465	1-216-826-11	METAL CHIP 2.7K 5% 1/16W	
R466	1-216-849-11	METAL CHIP 220K 5% 1/16W	
R468	1-216-809-11	METAL CHIP 100 5% 1/16W	
R470	1-216-840-11	METAL CHIP 39K 5% 1/16W	
R471	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R472	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R473	1-217-671-11	METAL CHIP 1 5% 1/10W	
R474	1-217-671-11	METAL CHIP 1 5% 1/10W	
R475	1-217-671-11	METAL CHIP 1 5% 1/10W	

Ref. No.	Part No.	Description	Remark
R476	1-217-671-11	METAL CHIP 1 5% 1/10W	
R477	1-216-019-00	METAL CHIP 56 5% 1/10W	
R478	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R479	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R480	1-216-844-11	METAL CHIP 82K 5% 1/16W	

< NETWORK RESISTOR >

RB401	1-236-444-11	NETWORK, RES 470K	
RB402	1-236-424-11	NETWORK, RES 10K	
RB403	1-236-424-11	NETWORK, RES 10K	
RB404	1-236-424-11	NETWORK, RES 10K	
RB405	1-236-432-11	NETWORK, RES 47K	
RB406	1-236-412-11	NETWORK, RES 1.0K	
RB407	1-236-432-11	NETWORK, RES 47K	
RB408	1-236-412-11	NETWORK, RES 1.0K	
RB409	1-236-440-11	NETWORK, RES 220K	
RB410	1-236-408-11	NETWORK, RES 470	
RB411	1-236-448-11	NETWORK, RES 1.0M	
RB412	1-236-444-11	NETWORK, RES 470K	
RB413	1-236-424-11	NETWORK, RES 10K	
RB414	1-236-424-11	NETWORK, RES 10K	
RB415	1-236-424-11	NETWORK, RES 10K	
RB416	1-236-416-11	NETWORK, RES 2.2K	
RB417	1-236-432-11	NETWORK, RES 47K	

< VARIABLE RESISTOR >

RV151	1-238-087-11	RES, ADJ, CERMET 1K	
RV151	1-238-853-11	RES, ADJ, CERMET 1K	

< FLEXIBLE BOARD >

W402	1-644-285-11	FP-572 FLEXIBLE BOARD	

< VIBRATOR >

X151	1-577-117-21	OSCILLATOR, CRYSTAL (4.433619MHz)	
X401	1-579-368-31	VIBRATOR, CRYSTAL (11.71875MHz)	

* * *

MISCELLANEOUS

Ref. No.	Part No.	Description	Remark
12	1-537-369-11	TERMINAL BOARD (JK-3100)	(E, Australian, Tourist model)
12	1-537-369-21	TERMINAL BOARD (JK-3100)	(AEP, UK model)
15	1-537-368-21	TERMINAL BOARD (BATTERY)	
25	1-692-084-11	SWITCH ASSY	
59	1-466-711-11	SWITCH BLOCK, CONTROL (CF3200)	(E, Australian, Tourist model)
* 59	1-466-711-21	SWITCH BLOCK, CONTROL (CF3200)	(AEP, UK model)
71	1-466-710-11	SWITCH BLOCK, CONTROL (ZM3200)	(AEP, UK model)
71	1-466-710-21	SWITCH BLOCK, CONTROL (ZM3200)	(E, Australian, Tourist model)
123	1-547-548-11	LENS, ZOOM (VCL-6210WC)	
128	1-547-558-21	FILTER BLOCK, OPTICAL	
IC875	8-752-607-39	IC ICX045BKA-2 (CCD IMAGER)	
M901	A-7048-214-A	DRUM BLOCK ASSY (DGH-37A-R)	(E, Australian, Tourist model)
M901	A-7048-534-A	DRUM BLOCK ASSY (DGH-80A-R)	(AEP, UK model)
M902	8-835-329-12	MOTOR, DC U-21A (CAPSTAN)	
M903	1-541-607-21	MOTOR, DC (LA12G-344VA) (LOADING)	
⚠PS901	1-532-841-41	LINK, IC	
⚠PS902	1-532-841-41	LINK, IC	
⚠PS903	1-532-841-41	LINK, IC	
⚠V901	1-452-565-11	CRT ASSY (M01KTA80WB)	

* * *

ACCESSORIES & PACKING MATERIALS

Ref. No.	Part No.	Description	Remark
	A-6767-706-A	RFU ADAPTOR (RFU-89EA)	(E, Tourist model)
	A-6767-707-A	RFU ADAPTOR (RFU-89EA)	(UK model)
	A-6768-254-A	RFU ADAPTOR (RFU-90E)	(AEP model)
	A-6768-255-A	RFU ADAPTOR (RFU-90AS)	(Australian model)
	1-571-164-11	SWITCH, ANTENNA CHANGE (CABLE)	(UK, E, Tourist model)
	1-573-291-11	CONNECTOR, CONVERSION	(AEP, UK model)
	1-575-334-11	CORD, CONNECTION	
	1-693-137-31	REMOTE COMMANDER (CAM CORDER) (RMT-701)	
	3-701-625-00	BAG, POLYETHYLENE	
	3-704-281-01	BAG, PROTECTION (STANDARD)	
	3-708-412-01	LID, REMOTE COMMANDER	
	3-712-673-01	SCREWDRIVER	(UK, E, Tourist model)
	3-738-517-01	BELT (S), SHOULDER	
	3-754-800-41	MANUAL, INSTRUCTION (ENGLISH)	(AEP:BLACK, UK model)
	3-754-800-51	MANUAL, INSTRUCTION (AEP model) (FRENCH, GERMAN, SPANISH)	
	3-754-800-61	MANUAL, INSTRUCTION (DUTCH, SWEDISH, ITALIAN)	(AEP:BLACK, Australian model)
	3-754-800-71	MANUAL, INSTRUCTION (PORTUGUESE)	(AEP model)
	3-754-800-81	MANUAL, INSTRUCTION (DANISH, FINNISH)	(AEP model)
	3-754-940-61	MANUAL, INSTRUCTION (ENGLISH)	(E, Tourist model)
	3-754-940-71	MANUAL, INSTRUCTION (FRENCH, GERMAN, SPANISH)	(E, Tourist model)
	3-754-940-81	MANUAL, INSTRUCTION (ARABIC)	(E, Tourist model)
	3-754-940-91	MANUAL, INSTRUCTION (CHINESE)	(E model)
*	3-943-154-11	HOLDER (B), REMOTE CONTROL	
*	3-947-958-51	INDIVIDUAL CARTON	(AEP:BLUE model)
*	3-948-281-11	INDIVIDUAL CARTON	(EXCEPT AEP:BLUE model)
*	3-948-282-02	CUSHION, ACC	
*	3-948-283-01	CUSHION (LOWER)	
**	AC-V35	AC POWER ADAPTOR	
***	NP-55	BATTERY PACK	

Note

** MARK PARTS IS AVAILABLE FOR REPAIR SERVICE.
** MARK PARTS IS AVAILABLE AS AN OPTIONAL ACCESSORIES.

* * *

HARDWARE LIST

Ref. No.	Part No.	Description	Remark
#1	7-624-102-04	STOP RING 1.5, TYPE -E	

* * *

The components identified by mark ⚠ or dotted line with mark. ⚠ are critical for safety. Replace only with part number specified.

SECTION 7
CAMERA SECTION ADJUSTMENTS

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 218.

7-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

7-1-1. List of Service Tools

- Oscilloscope
- Adjusting driver
- Stabilized power supply
- Color monitor
- Vectorscope
- Digital voltmeter

Ref. No.	Name	Part Code	Usage
J-1	Filter for color temperature correction (C14)	J-6080-058-A	Auto white balance adjustment/check White balance adjustment/check
J-2	ND filter 1.0	J-6080-808-A	Max gain adjustment (2 used) White balance check
	ND filter 0.4	J-6080-806-A	Max gain adjustment
	ND filter 0.3	J-6080-818-A	White balance adjustment
	ND filter 0.1	J-6080-807-A	Max gain adjustment
J-3	Pattern box PTB-500	J-6029-140-A	
J-4	Color chart for pattern box	J-6020-250-A	
J-5	Adjusting remote control unit (RM-95-remodeled in part)[Note 1]	J-6082-053-B	
J-6	Extension cord (10P, 1 mm)	J-6082-064-A	For extension of JK-3100 board
J-7	Extension cord (30P, 0.8 mm)	J-6082-135-A	For extension of LC-40P board (For the video and the camera section adjustment)
			For extension of AU-135P board (During the repair of AU-135 board)
J-8	Extension cord (16P, 0.8 mm)	J-6082-136-A	For the extension of the lens block (During the repair of the camera section)
J-9	Relay board (21P, 0.5 mm)[Note 2]	J-6082-176-A	For the extension of the lens block (During the repair of the camera section)
J-10	Measuring pin for camera section	J-6082-139-A	For the camera section adjustment
J-11	Measuring pin for video section	J-6082-140-A	For the video section adjustment
J-12	Siemens star	J-6080-875-A	For flange back check
J-13	Extension cord (20P, 0.5 mm)[Note 2]	J-6082-138-A	For extension between the lens block (FPC) and VC-112P board (CN851) (During the repair of the camera section)

Note 1: If the micro processor IC in the adjusting remote control unit is not the new micro processor (UPD7503G-C56-12), the switchover of the page cannot be carried out. In this case, replace with the new micro processor (8-759-148-35).

Note 2: The extension code (J-6082-136-A) is also attached with a 21P, 0.5 mm code. Connect this code to the relay board (J-6082-136-A) for extensions between the lens block (FPC) and VC-112P board (CN851).

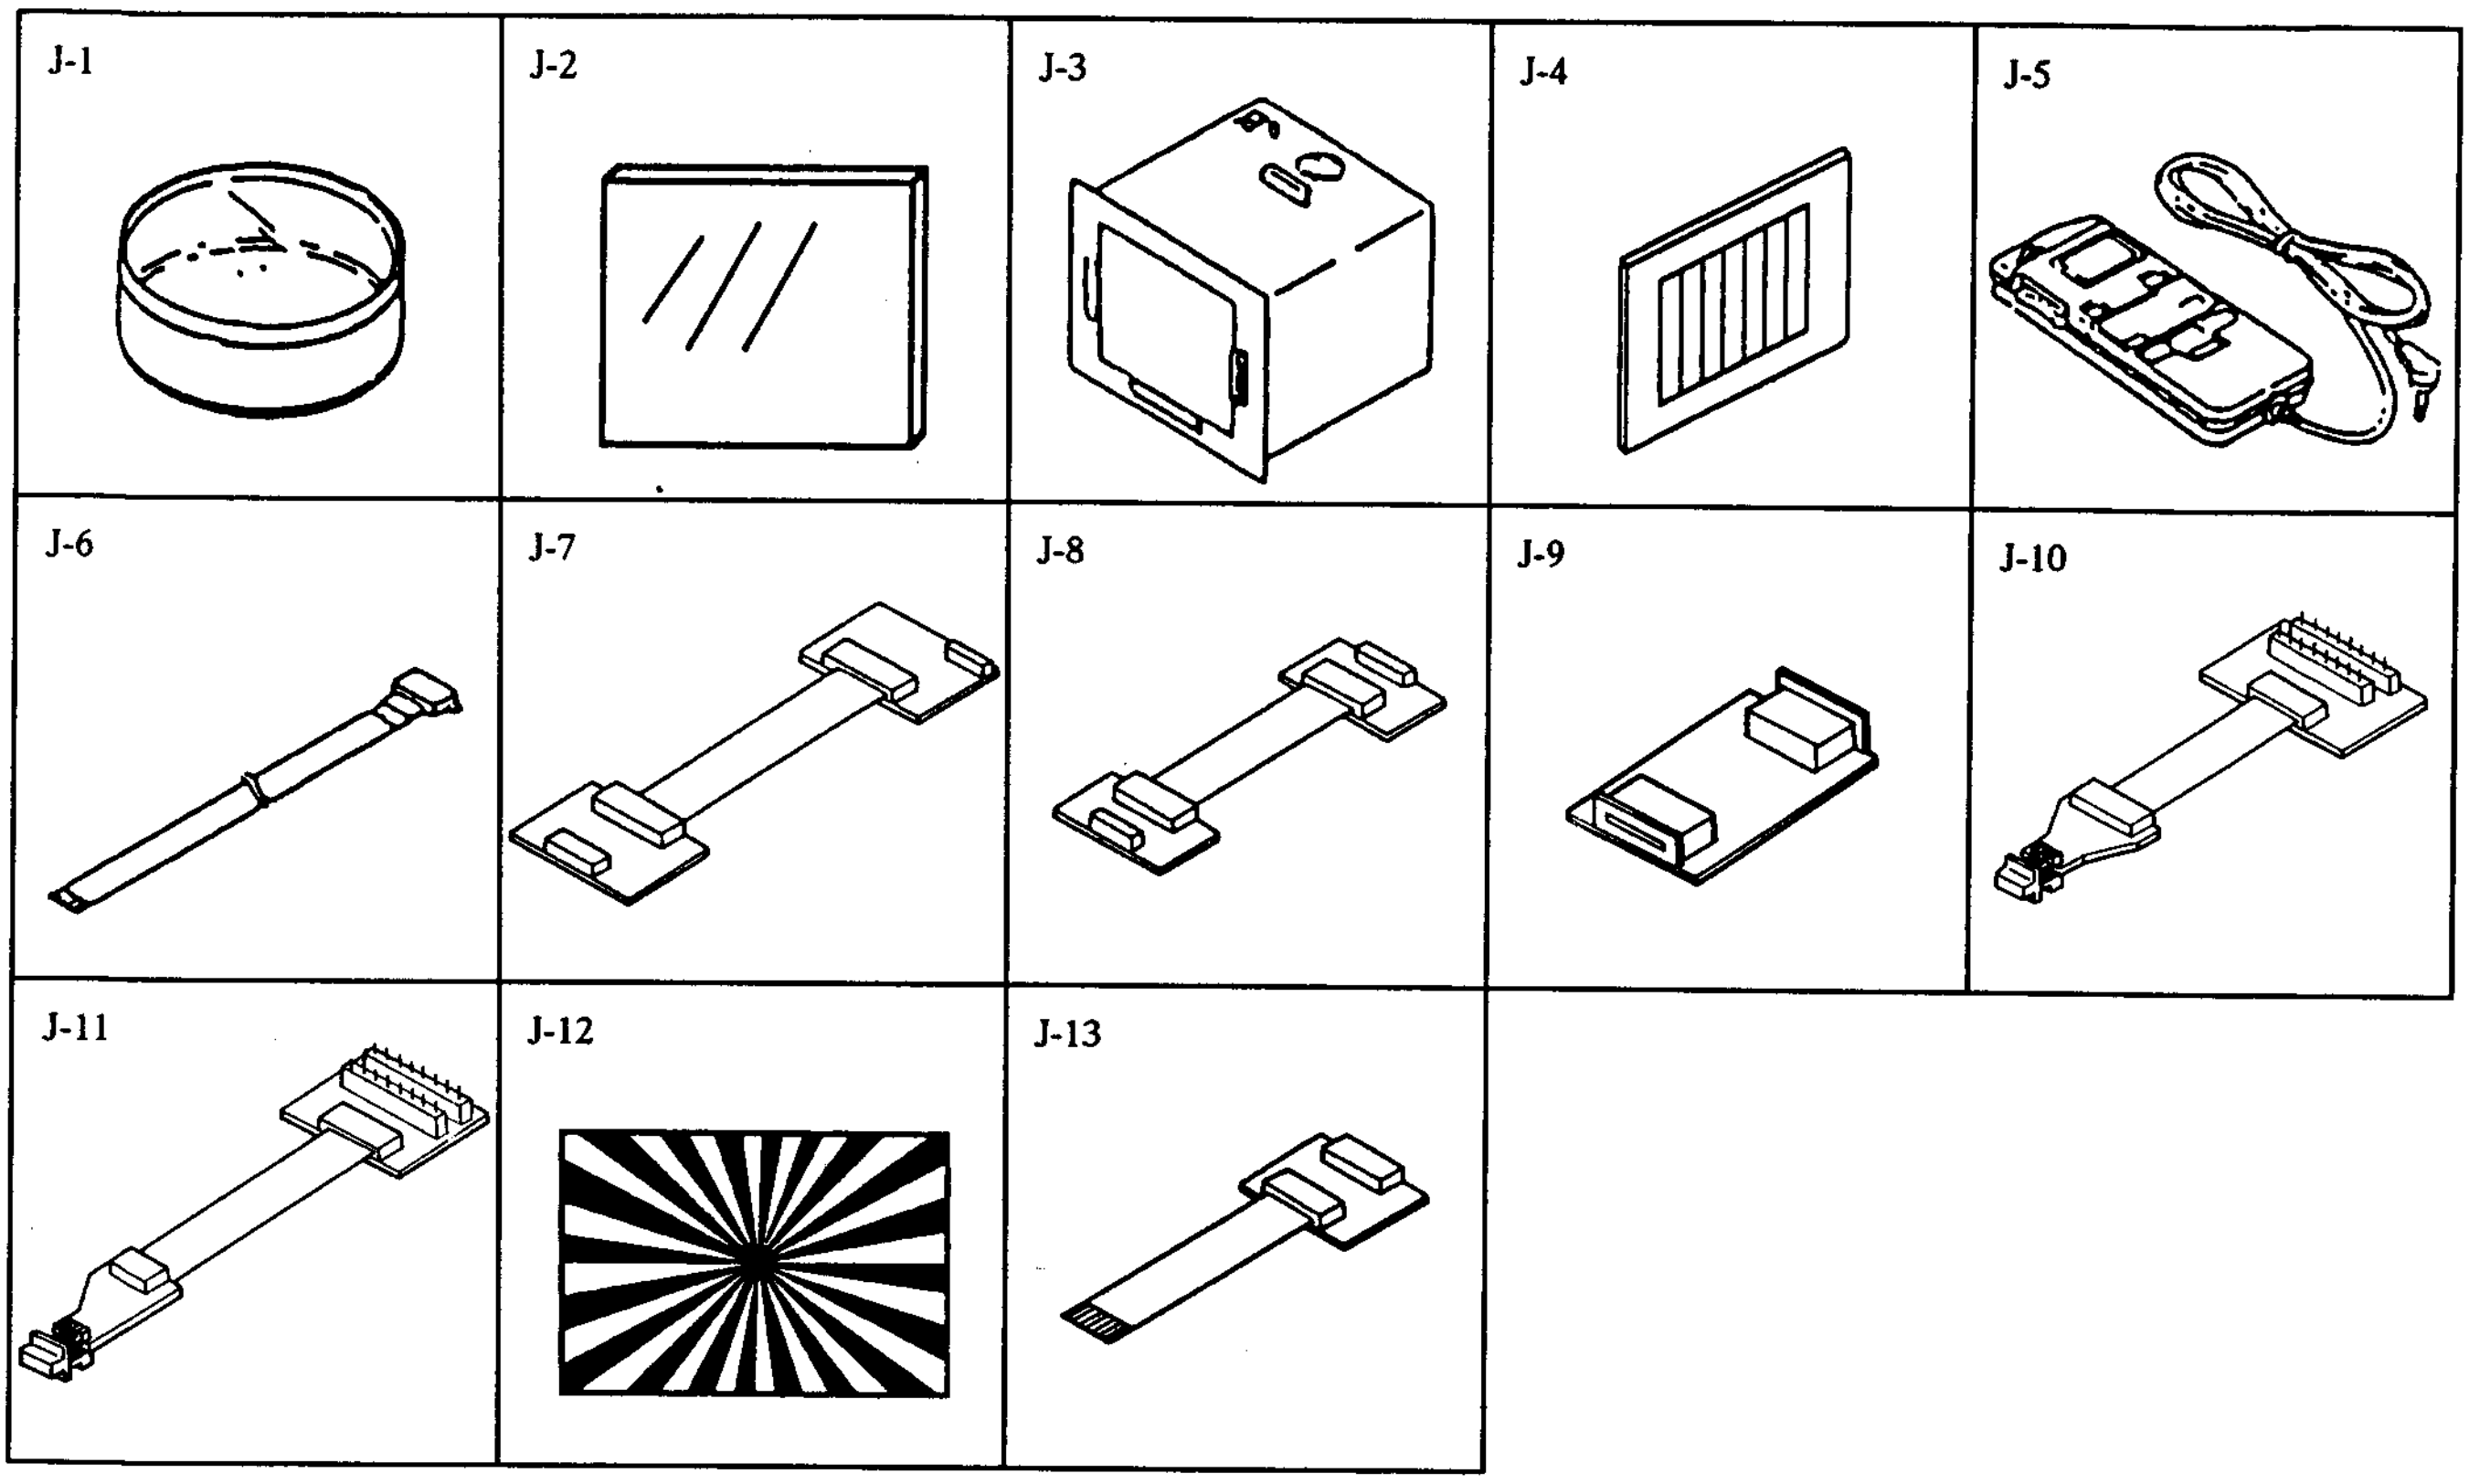
J-1
J-2
J-3
J-4
J-5
J-6
J-7
J-8
J-9
J-10
J-11
J-12
J-13

Fig. 7-1.

7-1-2. Preparations

Note: For further details on how to remove the cabinet and each board, refer to "1. Disassembly".

1) Connect the equipments for adjustment as shown in Fig. 7-3.
2) The EVF (Electronic viewfinder) is required for checking the white balance mode and shutter speeds. If the EVF is not required, remove the VS-93P board CN102.

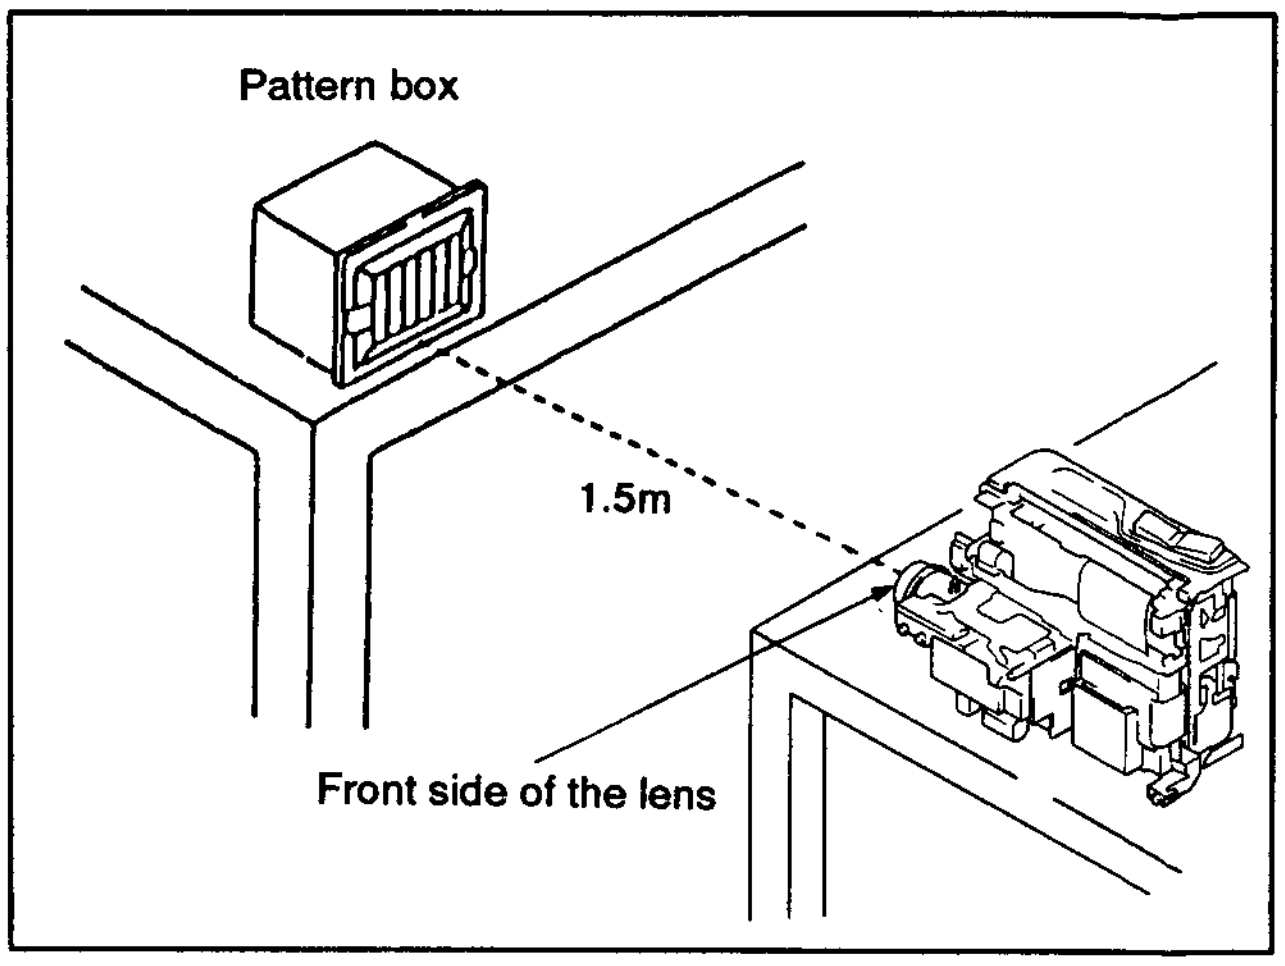
Pattern box
1.5m
Front side of the lens

Fig. 7-2.

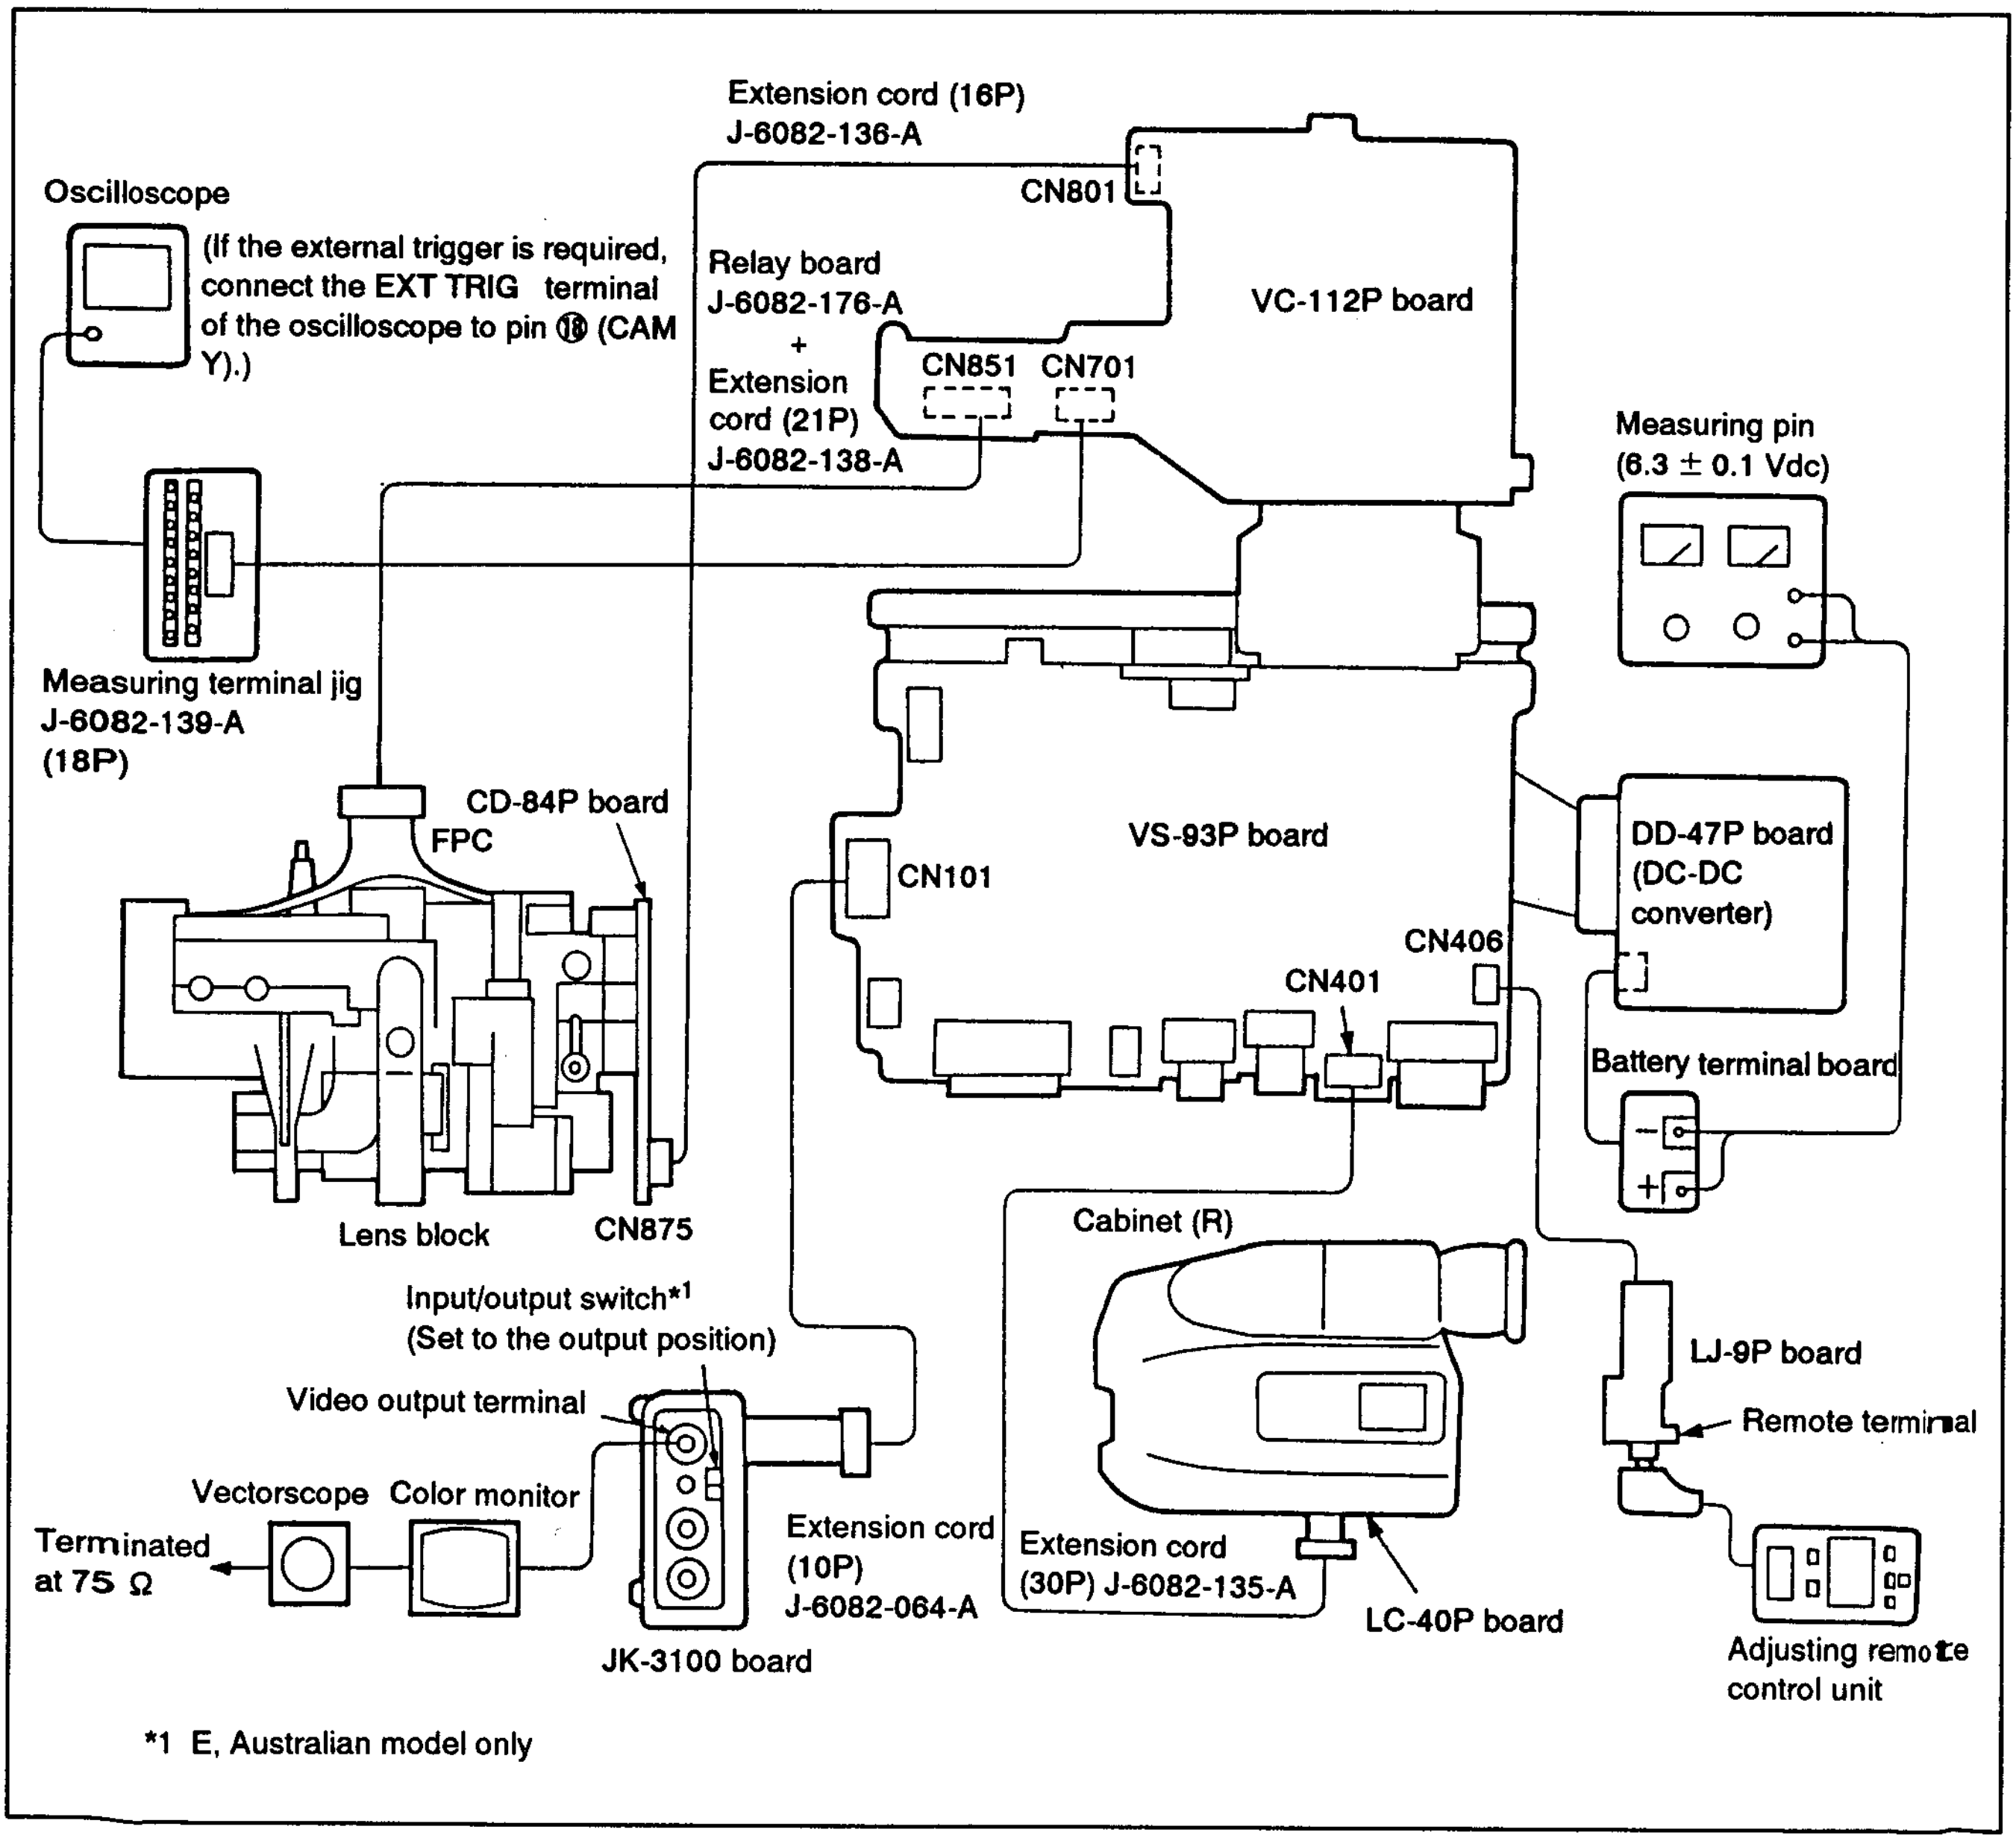
Extension cord (16P)
J-6082-136-A
Oscilloscope
(If the external trigger is required, connect the EXT TRIG terminal of the oscilloscope to pin ⑱ (CAM Y).)
CN801
Relay board
J-6082-176-A
+
Extension cord (21P)
J-6082-138-A
CN851 CN701
VC-112P board
Measuring pin
(6.3 ± 0.1 Vdc)
Measuring terminal jig
J-6082-139-A
(18P)
CD-84P board
FPC
VS-93P board
CN101
CN406
CN401
DD-47P board
(DC-DC converter)
Battery terminal board
Lens block
CN875
Cabinet (R)
Input/output switch*1
(Set to the output position)
Video output terminal
LJ-9P board
Remote terminal
Vectorscope
Color monitor
Terminated at 75 Ω
Extension cord
(10P)
J-6082-064-A
Extension cord
(30P) J-6082-135-A
LC-40P board
JK-3100 board
Adjusting remote control unit

*1 E, Australian model only

Fig. 7-3.

7-1-3. Precautions

1. Switch settings

Adjust the switches to the following positions, and perform the adjustments without inserting the tape, unless specified otherwise.

1. Camera/VTR (or player) power switch (CF-3200 board S1) ··························Camera
2. Standby switch (CF-3200 board S18)···················Standby
3. Input/output switchover switch (JK-3100 board S921) ·····························Output (Except for AEP, UK model)
4. LENS OPEN switch···OPEN
5. AUTO LOCK switch (CF-3200 board S19)················ OFF
6. FOCUS button (CF-3200 board S22)················MANUAL
7. EXPOSURE button (CF-3200 board S25)···············AUTO
8. PROGRAM AE button (CF-3200 board S20)······NORMAL

2. Adjustment Procedure

Perform in the given order as a rule.

3. Subject

1) Color bar chart (Standard picture frame)
   Adjust the display frame as shown in Fig. 7-4. if adjustments are performed using the color bar chart.
   (Standard picture frame)
2) White pattern (Standard picture frame)
   Remove the color bar chart from the pattern box, and adjust the zoom lever so that the white pattern becomes the same size and is in the same position as the color bar chart (Standard picture frame).

Color bar chart standard picture frame

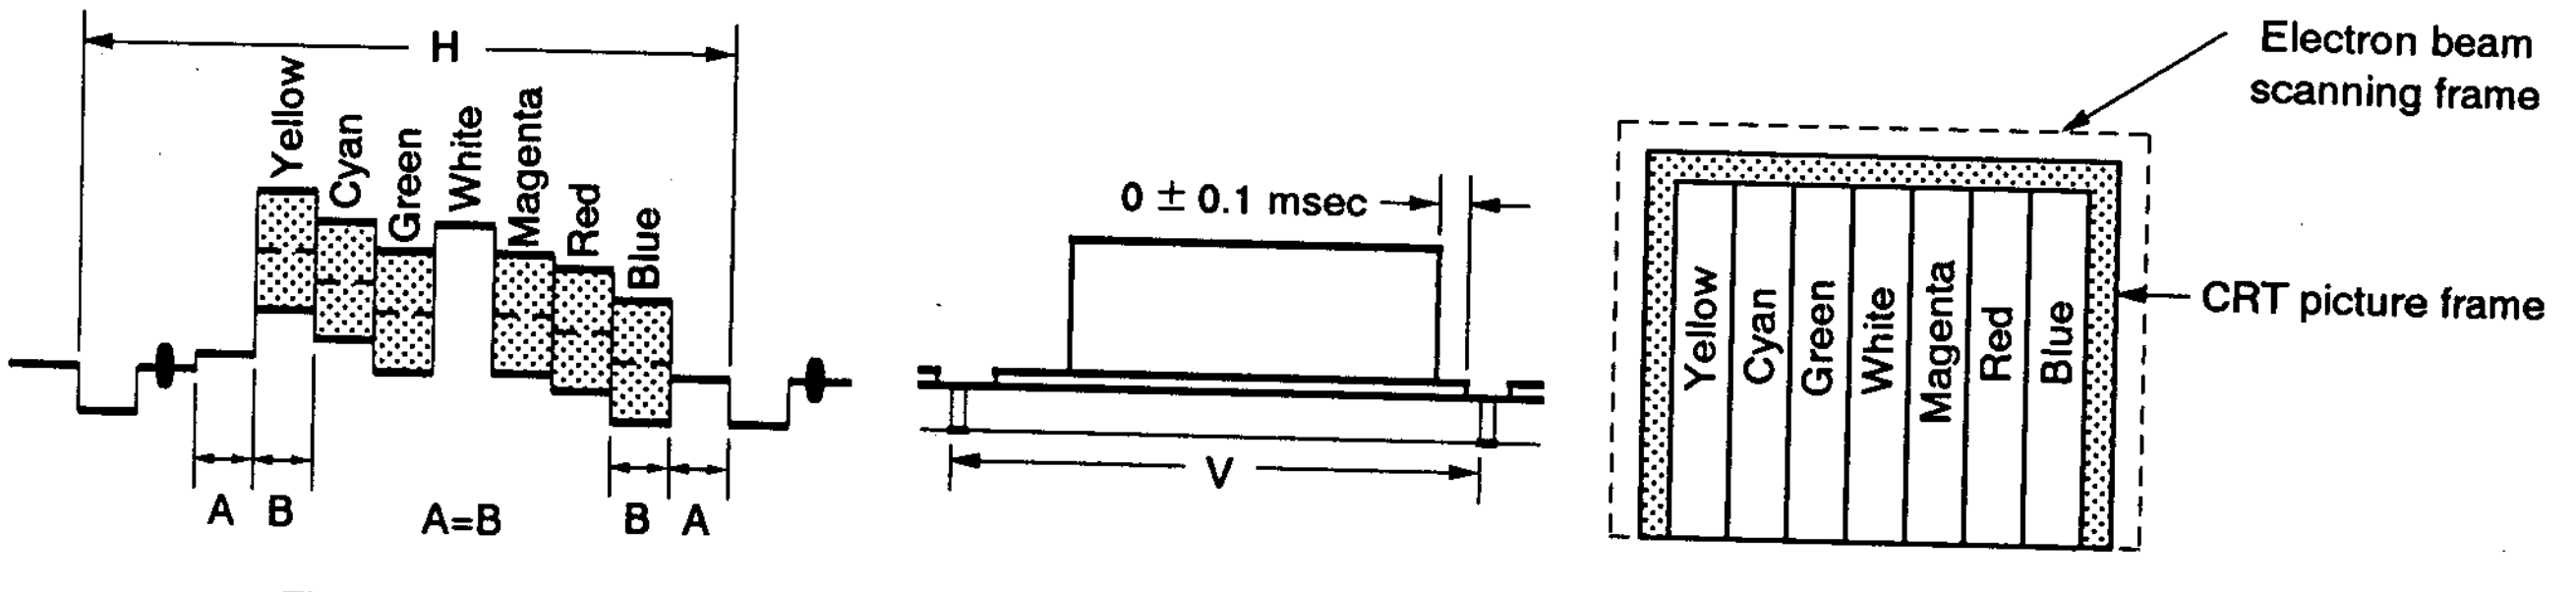
H
Yellow
Cyan
Green
White
Magenta
Red
Blue
A B
A=B
B A
0 ± 0.1 msec
V
Electron beam scanning frame
CRT picture frame
Yellow
Cyan
Green
White
Magenta
Red
Blue

Fig. a (Video input/output terminal output waveform)

Fig. b (Picture on monitor TV)

Adjust the zooming and direction of the camera to obtain the output waveform shown in Fig. a and the monitor TV picture shown in Fig. b.

Fig. 7-4.

3) Chart for flange back adjustment
   Combine a white A0 size (1189 mm× 841 mm) paper to a black one, and make the chart shown in Fig. 7-5.

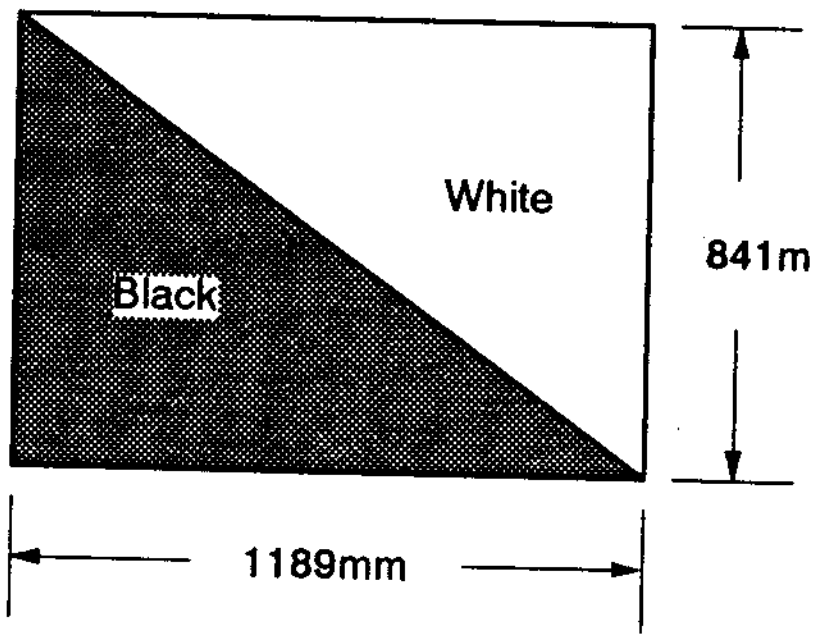
White
Black
841mm
1189mm

Fig. 7-5.

Note: Use the non-reflecting and non-glazing vellum paper whose size is more than A0, and make the boundary between white and black to be smoothly flat.

7-1-4. Adjusting Remote Control Unit

The camera section is adjusted by changing the constant using the coefficient of the digital signal processing calculation, or modifying the output voltage of EVR IC (VC-112P board IC702). These processes are carried out by the camera micro processor (VC-112P board IC709). This micro processor reads the data written in the non-volatile memory (VC-112P board IC712), and transmits it to the digital signal processing circuit and EVR.

The adjusting remote control unit is used for rewriting the adjustment data written in the non-volatile memory necessary for performing the adjustments.

The adjusting remote control unit uses the remote control signal line (LANC) to correspond mutually with the camera micro processor. The page, address and the up/down command of the data can be transmitted from the remote control unit to the camera micro processor. On the other hand, the page, address, and data can also be transmitted the other way round.

1. Using the adjusting remote control unit

1) Connect the adjusting remote control unit to the remote terminal (LJ-9P board J971).
2) Adjust the HOLD switch of the adjusting remote control unit to HOLD (SERVICE position).
   If it has been properly connected, the LCD on the adjusting remote control unit will show the display in Fig. 7-6.

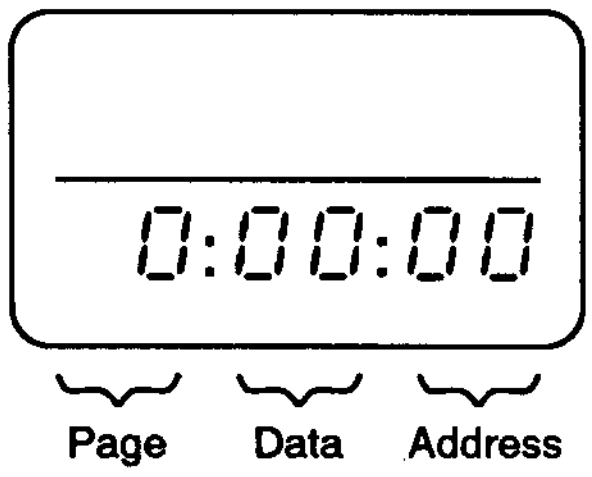

Fig. 7-6.

3) Operate the adjusting remote control unit as follows.
   - Changing the page
     The page will increase when the EDIT SEARCH+ button is pressed. It will decrease when the EDIT SEARCH– button is pressed. There are altogether 16 pages, from 0 to F.

Hexadecimal notation	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Display on LCD	0	1	2	3	4	5	6	7	8	9	A	b	c	d	E	F
Decimal notation conversion value	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Table 7-1.

   - Changing the address
     The address will increase when the FF (▶▶) button is pressed, and decrease when the REW (◀◀) button is pressed. There are altogether 256 addresses, from 00 to FF.
   - Changing the data (Data setting)
     The data will increase when the PLAY (▶) button is pressed, and decrease when the STOP (■) button is pressed.
     There are altogether 256 data, from 00 to FF.
   - Writing the adjustment data
     It is necessary to press the PAUSE button to write the adjustment data (F page, D page) in the non-volatile memory.
     (The new adjustment data will not be recorded in the non-volatile memory if this operation is not performed.)
4) Select page: 6, address: 00, and adjust the data to 01. This releases the write protect of page F, and the camera section (F page) can be adjusted.
   (To adjust the titler system (D page), adjust the data of page: 1, address: 00 to 01, and release the protect of page D.)
5) After completing all adjustments, turn off the main power (6.3V) once. This can release the adjustment mode (other than page F).

2. Precautions upon using the adjusting remote control unit

The correct adjustment data may be erased at times, due to operation errors of the adjusting remote control unit. To prevent this from occurring, it is recommended that all adjustment data be recorded in the memory before beginning adjustments, and the new adjustment data be recorded in the memory after each adjustment.

7-1-5. Page F Address List

Note 1: The data listed in the adjustment data memo column are fixed values.

Note 2: The adjustment data initial values are the values after performing "Page F Data Initialization" and "Page F Data Modification". They are different from the value after performing all the adjustments.

<table>
<tr><th rowspan="2">Address</th><th rowspan="2">Name</th><th rowspan="2" colspan="2">Function
[ ] Indicate the adjustment voltage output terminal</th><th colspan="2">Adjustment data</th></tr>
<tr><th>Initial value</th><th>Memo column</th></tr>
<tr><td>00</td><td>ID</td><td colspan="2">Set ID</td><td>00</td><td>26</td></tr>
<tr><td>01</td><td>FADER LEVEL</td><td colspan="2">AE REF level modification during fader</td><td>E0</td><td>E0</td></tr>
<tr><td>02</td><td>FADER ENDTIM</td><td colspan="2">The setting of the AE REF modulation time during fader</td><td>10</td><td>10</td></tr>
<tr><td>03</td><td>SI OFFSET</td><td colspan="2">Carrier balance adjustment</td><td>35</td><td></td></tr>
<tr><td>04</td><td>VSUB</td><td colspan="2">CCD imager V SUB adjustment [IC702 ③]</td><td>80</td><td></td></tr>
<tr><td>05</td><td>VPGH</td><td colspan="2">CCD imager VRG adjustment [IC702 ④]</td><td>80</td><td></td></tr>
<tr><td>06</td><td>VREF Y</td><td colspan="2">Camera core Y D/A standard voltage, SYNC level adjustment [IC702 ⑤]</td><td>7B</td><td></td></tr>
<tr><td>07</td><td>VREF C</td><td colspan="2">Camera core CHROMA D/A standard voltage, BURST level adjustment [IC702 ⑥]</td><td>99</td><td></td></tr>
<tr><td>08</td><td>HALL GAIN</td><td>Hole amplifier gain adjustment [IC702 ⑦]</td><td rowspan="2">HALL adjustment</td><td>47</td><td></td></tr>
<tr><td>09</td><td>HALL OFFSET</td><td>Hole amplifier offset adjustment [IC702 ⑧]</td><td>71</td><td></td></tr>
<tr><td>0A</td><td>E LOWLIGHT START</td><td colspan="2">Low luminance intensity REF level modulation start setting</td><td>20</td><td>20</td></tr>
<tr><td>0B</td><td>REF 2V</td><td colspan="2">2V standard voltage for hole element [IC702 ⑫]</td><td>68</td><td>68</td></tr>
<tr><td>0C</td><td>AD REF</td><td colspan="2">Black level setting during A/D conversion, A/D off set adjustment [IC702 ⑬]</td><td>72</td><td></td></tr>
<tr><td>0D</td><td>CORE DETH</td><td colspan="2">CCD correction control</td><td>04</td><td>04</td></tr>
<tr><td>0E</td><td>CORE VTR DELAY</td><td colspan="2">1HDL longitudinal setting during VTR playback</td><td>16</td><td>16</td></tr>
<tr><td>0F</td><td>CORE APCN4</td><td colspan="2">Horizontal aperture setting</td><td>A5</td><td>A5</td></tr>
<tr><td>10</td><td>CORE APCN5</td><td colspan="2">Vertical aperture setting</td><td>3D</td><td>3D</td></tr>
<tr><td>11</td><td>CORE EFECT</td><td colspan="2">Special effect control</td><td>A8</td><td>A8</td></tr>
<tr><td>12</td><td>CORE MATR</td><td colspan="2">BLUE matrix constant</td><td>27</td><td>27</td></tr>
<tr><td>13</td><td>CORE MATB</td><td colspan="2">RED matrix constant</td><td>6C</td><td>6C</td></tr>
<tr><td>14</td><td>CORE BURST LEVEL</td><td colspan="2">Burst flag level setting, color modulation ON/OFF<table><tr><th>Data</th><th>Adjustment modeAdjustment</th></tr><tr><td>38</td><td>Normal level</td></tr><tr><td>2E</td><td>Color modulation stopped</td></tr></table></td><td>38</td><td>38</td></tr>
<tr><td>15</td><td>CORE CHROMA DLY</td><td colspan="2">Y/C delay adjustment</td><td>01</td><td>01</td></tr>
<tr><td>16</td><td>CORE Y SETUP</td><td colspan="2">Set up level setting</td><td>06</td><td>06</td></tr>
<tr><td>17</td><td>CORE VHAPCN</td><td colspan="2">Slice and level setting of the aperture signal</td><td>15</td><td>15</td></tr>
<tr><td>18</td><td>CORE B-Y GAIN</td><td>B–Y GAIN</td><td rowspan="4">Color reproduction adjustments</td><td>13</td><td></td></tr>
<tr><td>19</td><td>CORE R-Y GAIN</td><td>R–Y GAIN</td><td>11</td><td></td></tr>
<tr><td>1A</td><td>CORE R-Y HUE</td><td>R–Y HUE</td><td>FF</td><td></td></tr>
<tr><td>1B</td><td>CORE B-Y HUE</td><td>B–Y HUE</td><td>FD</td><td></td></tr>
<tr><td>1C</td><td>CS/APCCUT</td><td colspan="2">Low luminance intensity aperture and chroma suppress level</td><td>22</td><td>22</td></tr>
</table>

Table 7-2 (1).

Address	Name	Function [ ] Indicate the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
1D	NEXT LINE DEFECT BIT	CCD correction pattern CCD imager correction data write	00	
1E	CCD DEFECT0	CCD correction data	00	
1F	CCD DEFECT1	CCD correction data	00	
20	CCD DEFECT2	CCD correction data	00	
21	CCD DEFECT3	CCD correction data	00	
22	CCD DEFECT4	CCD correction data	00	
23	CCD DEFECT5	CCD correction data	00	
24	CCD DEFECT6	CCD correction data	00	
25	CCD DEFECT7	CCD correction data	00	
26	CCD DEFECT8	CCD correction data	00	
27	CCD DEFECT9	CCD correction data	00	
28	CCD DEFECT10	CCD correction data	00	
29	CCD DEFECT11	CCD correction data	00	
2A	CCD DEFECT12	CCD correction data	00	
2B	CCD DEFECT13	CCD correction data	00	
2C	CCD DEFECT14	CCD correction data	00	
2D	RREF L	3200k Red standard data LSB Auto white balance preset adjustment	72	
2E	RREF H	3200k Red standard data MSB	5F	
2F	GREF L	3200k Green standard data LSB	D4	
30	GREF H	3200k Green standard data MSB	63	
31	BREF L	3200k Blue standard data LSB	3B	
32	BREF H	3200k Blue standard data MSB	2C	
33	RCONTREF	3200k RCONT adjustment value Pre-white balance adjustment	42	
34	BCONTREF	3200k BCONT adjustment value	4A	
35	AWB NOWM R	Red regular correction coefficient Auto white balance adjustment	7E	
36	AWB NORM B	Blue regular correction coefficient	96	
37	AWB SHUT IN	Indoor determination shutter data	A8	A8
38	ABW SHUT OUT	Outdoor determination shutter data	A0	A0
39	AWB IRIS IN	Indoor determination hole data IRIS IN/OUT adjustment	79	
3A	AWB IRIS OUT	Outdoor determination hole data	7F	
3B	AWB G LEVEL	High luminance section green integral level	02	02
3C	AWB G WIDTH	High luminance section green integral level range	03	03
3D	DMAT HUE	Variable linear matrix HUE coefficient Linear matrix adjustment	00	
3E	DMAT GAIN	Variable linear matrix GAIN coefficient	00	
3F	AWB SELECT	AWB mode selection	00	00
40	AWB DIFF	Standard difference from the outdoor fixed value	0A	0A
41	AWB BOTTOM SLP R	AWB incoming frame bottom R coefficient	48	48
42	AWB BOTTOM SLP B	AWB incoming frame bottom B coefficient	78	78
43	AWB MIDDLE SLP R	AWB incoming frame middle R coefficient	60	60
44	AWB MIDDLE SLP B	AWB incoming frame middle B coefficient	40	40
45	AWB TOP SLP R	AWB incoming frame top R coefficient	66	66
46	AWB TOP SLP B	AWB incoming frame top B coefficient	18	18

Table 7-2 (2).

<table>
<tr><th rowspan="2">Address</th><th rowspan="2">Name</th><th rowspan="2">Function
[ ] indicate the adjustment voltage output terminal</th><th colspan="2">Adjustment data</th></tr>
<tr><th>Initial value</th><th>Memo column</th></tr>
<tr><td>47</td><td>AWB KEIKO R</td><td>AWB incoming frame fluorescent light R coefficient</td><td>66</td><td>66</td></tr>
<tr><td>48</td><td>AWB KEIKO B</td><td>AWB incoming frame fluorescent light B coefficient</td><td>18</td><td>18</td></tr>
<tr><td>49</td><td>AWB BOTTOM UP</td><td>AWB incoming frame bottom upper value</td><td>C2</td><td>C2</td></tr>
<tr><td>4A</td><td>AWB BOTTOM DWN</td><td>AWB incoming frame bottom lower value</td><td>94</td><td>94</td></tr>
<tr><td>4B</td><td>AWB MIDDLE UP</td><td>AWB incoming frame middle upper value</td><td>AD</td><td>AD</td></tr>
<tr><td>4C</td><td>AWB MIDDLE DWN</td><td>AWB incoming frame middle lower value</td><td>96</td><td>96</td></tr>
<tr><td>4D</td><td>AWB TOP UP</td><td>AWB incoming frame top upper value</td><td>78</td><td>78</td></tr>
<tr><td>4E</td><td>AWB TOP DWN</td><td>AWB incoming frame top lower value</td><td>60</td><td>60</td></tr>
<tr><td>4F</td><td>AWB KEIKO</td><td>AWB incoming frame fluorescent light output lower value</td><td>6C</td><td>6C</td></tr>
<tr><td>50</td><td>AWB KEIKO DWN</td><td>AWB incoming frame fluorescent light lower value</td><td>5C</td><td>5C</td></tr>
<tr><td>51</td><td>AWB R TOP LMT</td><td>AWB incoming frame Rcont upper value</td><td>6E</td><td>6E</td></tr>
<tr><td>52</td><td>AWB R DWN LMT</td><td>AWB incoming frame Rcont lower value</td><td>20</td><td>20</td></tr>
<tr><td>53</td><td>AWB B TOP LMT</td><td>AWB incoming frame Bcont upper value</td><td>83</td><td>83</td></tr>
<tr><td>54</td><td>AWB B IN TOP</td><td>AWB incoming frame Bcont</td><td>67</td><td>67</td></tr>
<tr><td>55</td><td>AWB B IN MAX</td><td>AWB incoming frame Bcont</td><td>5C</td><td>5C</td></tr>
<tr><td>56</td><td>AWB B OUT MIN</td><td>AWB incoming frame Bcont</td><td>5C</td><td>5C</td></tr>
<tr><td>57</td><td>AWB B OUT DWN</td><td>AWB incoming frame Bcont</td><td>4A</td><td>4A</td></tr>
<tr><td>58</td><td>AWB B DWN LMT</td><td>AWB incoming frame Bcont lower value</td><td>1B</td><td>1B</td></tr>
<tr><td>59</td><td>AWB LL LMT</td><td>Low luminance intensity limiter</td><td>06</td><td>06</td></tr>
<tr><td>5A</td><td>AWB T M DIVID</td><td>AWB incoming frame upper, middle border value</td><td>5B</td><td>5B</td></tr>
<tr><td>5B</td><td>AWB B M DIVID</td><td>AWB incoming frame middle, lower border value</td><td>39</td><td>39</td></tr>
<tr><td>5C</td><td>AWB DELAY TM</td><td>AWB tracking speed<table><tr><th>Data</th><th>Adjustment mode</th></tr><tr><td>01</td><td>High speed tracking mode</td></tr><tr><td>0C</td><td>Normal</td></tr></table></td><td>0C</td><td>0C</td></tr>
<tr><td>5D</td><td>AWB FAST TM</td><td>AWB initial high speed tracking amount</td><td>40</td><td>40</td></tr>
<tr><td>5E</td><td>AWB OUT HYS OFF</td><td>AWB outdoor hysteresis off difference</td><td>0C</td><td>0C</td></tr>
<tr><td>5F</td><td>AWB OUT B HYS</td><td>AWB outdoor hysteresis amount</td><td>06</td><td>06</td></tr>
<tr><td>60</td><td>AWB MODE</td><td>AWB adjustment mode<table><tr><th>Data</th><th>Adjustment mode</th></tr><tr><td>00</td><td>Normal</td></tr><tr><td>D0</td><td>AWB adjustment mode</td></tr><tr><td>F1</td><td>All area tracking mode</td></tr></table></td><td>00</td><td>00</td></tr>
<tr><td>61</td><td>AE REFL</td><td>Reference value (lower) for AE</td><td>00</td><td>00</td></tr>
<tr><td>62</td><td>AE REFH</td><td>Reference value (upper) for AE</td><td>18</td><td>18</td></tr>
<tr><td>63</td><td>AGC MIN</td><td>AGC MIN value (AGCREF value), IRIS level adjustment</td><td>E3</td><td></td></tr>
<tr><td>64</td><td>AE MIML</td><td>Low luminance intensity side limiter (MAXGAIN), MAX GAIN adjustment</td><td>32</td><td></td></tr>
<tr><td>65</td><td>AE MAXL</td><td>High luminance intensity side limiter (lower)</td><td>80</td><td>80</td></tr>
<tr><td>66</td><td>IRIS OFFSET</td><td>Iris ROM table OPEN side off set</td><td>D0</td><td>D0</td></tr>
<tr><td>67</td><td>AE KEISU</td><td>Correction coefficient during detection weighting</td><td>00</td><td>00</td></tr>
<tr><td>68</td><td>AE FUNCTION</td><td>SW for turning each AE function ON and OFF</td><td>02</td><td>02</td></tr>
</table>

Table 7-2 (3).

Address	Name	Function [ ] Indicate the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
69	BL HOSEIH	Forcible back light level setting (upper)	40	40
6A	JITEISU DOWN	Constant during loop response DOWN side	28	28
6B	JITEISU UP	Constant during loop response UP side	0D	0D
6C	AE KNEE	KNEE setting value for AE	FF	FF
6D	ORETEN SET	Variable point due to time constant error amount	13	13
6E	OMOMIOUT	Outer frame weighting amount	40	40
6F	AFC WIDE	Coefficient required for the ANF integral loop	03	03
70	AFC GAIN	Loop gain of the flickerless loop	01	01
71	AFC LIMIL	Limiter corresponding to the error rate (Lower)	60	60
72	HIST P KEISU	Histocomp level setting P for counter light determination	20	20
73	HIST H KEISU	Histocomp level setting H for counter light determination	E0	E0
74	HIST L KEISU	Histocomp level setting L for counter light determination	90	90
75	GYKOU JITEISU	Constant during auto back light response	08	08
76	SUBN LIMIT	Limiter for counter light determination	40	40
77	FUZZY RULE1	Correction amount 1 for auto back light	90	90
78	FUZZY RULE2	Correction amount 2 for auto back light	C0	C0
79	FUZZY RULE3	Correction amount 3 for auto back light	B0	B0
7A	FUZZY RULE4	Correction amount 4 for auto back light	A0	A0
7B	FUZZY RULE5	Correction amount 5 for auto back light	70	70
7C	FUZZY RULE6	Correction amount 6 for auto back light	80	80
7D	FUZZY RULE7	Correction amount 7 for auto back light	A0	A0
7E	FUZZY RULE8	Correction amount 8 for auto back light	98	98
7F	FUZZY RULE9	Correction amount 9 for auto back light	90	90
80	FUZZY RULE10	Correction amount 10 for auto back light	78	78
81	IRIS MIN L	Iris limit value (lower)	42	42
82	IRIS MIN H	Iris limit value (upper)	02	02
83	DELTA SHUT GAIN	Shutter smoothing value setting	04	04
84	AE WAKUH	Frame data for AE detection (vertical line)	0F	0F
85	AE WAKUV	Frame data for AE detection (horizontal line)	4F	4F
86	WIDE LIMIT	ZOOM limiter WIDE (lower) Flange back adjustment	DE	
87	WIDE LIMITH	ZOOM limiter WIDE (upper)	02	
88	TELE LIMIT	ZOOM limiter TELE (lower)	22	
89	TELE SIMITH	ZOOM limiter TELE (upper)	1D	
8A	STEP ZERO	Flange back value	90	
8B	STEP ZERO SPAN	Frange back value 2	A0	
8C	ZOOM SPD FAST	Zoom speed (fast)	73	73
8D	ZOOM SPD SUPER	Zoom speed (For adjustment)	6A	6A
8E	ZS INIT SLOW	Zoom speed initial value (slow)	6A	6A
8F	ZS INIT FAST	Zoom speed initial value (fast)	6A	6A
90	ZMSPD DAMIN	Zoom speed D/A MIN value	3D	3D
91	ZS K	Zoom servo coefficient K	11	11
92	ZS L	Zoom servo coefficient L	04	04

Table 7-2 (4).

<table>
<tr><th rowspan="2">Address</th><th rowspan="2">Name</th><th rowspan="2">Function
[ ] Indicate the adjustment voltage output terminal</th><th colspan="2">Adjustment data</th></tr>
<tr><th>Initial value</th><th>Memo column</th></tr>
<tr><td>93</td><td>ZP HYS</td><td>Zoom potential hysteresis</td><td>03</td><td>03</td></tr>
<tr><td>94</td><td>ZOOM SPD SLOW</td><td>Zoom speed (slow)</td><td>29</td><td>29</td></tr>
<tr><td>95</td><td>AF MD2THL</td><td>MODE2 THR</td><td>20</td><td>20</td></tr>
<tr><td>96</td><td>MAXCHG THR</td><td>MAX value renewal THR</td><td>1A</td><td>1A</td></tr>
<tr><td>97</td><td>ERR THL</td><td>Wobbling width THR</td><td>18</td><td>18</td></tr>
<tr><td>98</td><td>WOB INTV</td><td>Wobbling second interval</td><td>04</td><td>04</td></tr>
<tr><td>99</td><td>ERRPOL THR</td><td>MODE2 error possible THR</td><td>13</td><td>13</td></tr>
<tr><td>9A</td><td>MAXCHK THR</td><td>MAX CHECK THR</td><td>12</td><td>12</td></tr>
<tr><td>9B</td><td>REWOB THR</td><td>Wobbling second THR</td><td>0A</td><td>0A</td></tr>
<tr><td>9C</td><td>MODE2 INOUT</td><td>MODE2 speed switchover</td><td>8B</td><td>8B</td></tr>
<tr><td>9D</td><td>SMLWD THR</td><td>Small frame THR</td><td>0A</td><td>0A</td></tr>
<tr><td>9E</td><td>ZOOM PULSE LIMIT</td><td>Maximum zoom pulse value</td><td>EE</td><td>EE</td></tr>
<tr><td>9F</td><td>ZOOM RIZE</td><td>Zoom rise minimum speed time</td><td>0A</td><td>0A</td></tr>
<tr><td>A0</td><td>FB CURVEPEAKL</td><td>Constant for flange back adjustment</td><td>F5</td><td>F5</td></tr>
<tr><td>A1</td><td>FB CURVEPEAKH</td><td>Constant for flange back adjustment</td><td>0B</td><td>0B</td></tr>
<tr><td>A2</td><td>FB ZOOMSH</td><td>Constant for flange back adjustment</td><td>5D</td><td>5D</td></tr>
<tr><td>A3</td><td>FB ZOOMSH</td><td>Constant for flange back adjustment</td><td>06</td><td>06</td></tr>
<tr><td>A4</td><td>LIMITREST WIDE</td><td>Zoom limiter WIDE side</td><td>14</td><td>14</td></tr>
<tr><td>A5</td><td>LIMITREST TELE</td><td>Zoom limiter TELE side</td><td>0F</td><td>0F</td></tr>
<tr><td>A6</td><td>FB PEAKTHR</td><td>Constant for flange back adjustment</td><td>FF</td><td>FF</td></tr>
<tr><td>A7</td><td>FB FOCUSZERO</td><td>Constant for flange back adjustment</td><td>1C</td><td>1C</td></tr>
<tr><td>A8</td><td>DET IRIS ALT</td><td>Iris variation check THR</td><td>02</td><td>02</td></tr>
<tr><td>A9</td><td>DET AGC ALT</td><td>AGC variation check THR</td><td>02</td><td>02</td></tr>
<tr><td>AA</td><td>LIMIT INSURANCE</td><td>Focus limiter insurance value</td><td>02</td><td>02</td></tr>
<tr><td>AB</td><td>FOCUS MODE</td><td>Focus mode<table><tr><th>Data</th><th>Adjustment mode</th></tr><tr><td>08</td><td>Zoom, Focus fixed</td></tr><tr><td>00</td><td>Normal</td></tr></table></td><td>00</td><td>00</td></tr>
<tr><td>AC</td><td>LENS ADJ MODE</td><td>Flange back adjustment mode<table><tr><th>Data</th><th>Adjustment mode</th></tr><tr><td>00</td><td>Nomal</td></tr><tr><td>01</td><td>Flange back adjustment</td></tr></table></td><td>00</td><td>00</td></tr>
<tr><td>AD</td><td>LENS EMRG</td><td>Lens emergency</td><td>00</td><td>00</td></tr>
<tr><td>AE</td><td>NTSC PAL/H DEF DELAY</td><td>DELAY bit=0: NTSC, 1: PAL, bit4-7=CCD correction delay</td><td>21</td><td>21</td></tr>
<tr><td>AF</td><td>FT SW</td><td>DDS display mode switchover<table><tr><th>Data</th><th>DDS display mode</th></tr><tr><td>00</td><td>Y sampling display</td></tr><tr><td>03</td><td>R–Y, B–Y display</td></tr><tr><td>40</td><td>HALL data display</td></tr><tr><td>82</td><td>R ratio display</td></tr><tr><td>83</td><td>B ratio display</td></tr><tr><td>91</td><td>R, B ratio (M) display</td></tr><tr><td>B0</td><td>Focus step display</td></tr></table></td><td>00</td><td>00</td></tr>
</table>

Table 7-2 (5).

Address	**Name**	**Function** **[ ] Indicate the adjustment voltage output terminal**	**Adjustment data**	
			Initial value	**Memo column**
B0	CORE OTHER	CORE MODE DATA 13 byte	10	10
B1	CORE Y GAIN	CORE FIELD DATA 0 byte	3A	3A
B2	LOW LIGHT CS	Low light chroma suppress start point	80	80
B3				
B4	E LOW LIGHT START 2	Low light REF level modulation start 2	80	80
B5	E LOW LIGHT LEVEL	Low light REF level modulation level	F0	F0
B6	ZOOM DROP 1	F-No. dropping (1) by Zoom lens	60	60
B7	ZOOM DROP 2	F-No. dropping (2) by Zoom lens	75	75
B8				
B9				
BA	AWB IN B HYS	Hysteresis of AWB indoor BLUE	04	04
BB	AWB IN R HYS	Hysteresis of AWB indoor RED	02	02
BC	AWB KAKE NORM R	ADD: 35 NORM R × 1000H	20	20
BD	AWB KAKE NORM B	ADD: 36 NORM B × 1000H	20	20
BE	MF STEP CHNGE	Coefficent of MODE 2 THR	06	06
BF	ZOOM SPEED SUPER LOW	Zoom speed (supper low)	07	07
C0	MAX CHECK NG CNT	MAX CHECK NG count	14	14
C1	AF CONTROL FLAG		0E	0E
C2	AE Y THR	Low light AE fluctuation THR 1	28	28
C3	AE Y MIN	Low light AE fluctuation THR 2	20	20
C4	MD2 SPD	Focus speed at MODE 2	61	61
C5	AE CHECK	Re-start up AE THR	10	10
C6	LOW CON THR	THR 1 for judging Low-contrast at MODE 2	10	10
C7	LOW CON THR2	THR 2 for judging Low-contrast at MODE 2	20	20
C8~EF		Not used		
F0		Input column of the unit ID No., etc. Not related to unit operations.Lens emergency	FF	
F1			FF	
F2			FF	
F3			FF	
F4			FF	
F5			FF	
F6			FF	
F7			FF	
F8			FF	
F9			FF	
FA			FF	
FB			FF	
FC			FF	
FD			FF	
FE			FF	
FF			FF	

Table 7-2 (6).

7-1-6. 6 Page, 1 Page Address List

The camera adjustment mode can be set by performing the following data settings at page: 6 or page: 1. (These page data can be set temporary, but when the main power (6.3V) is turned off, the original value (normal value) will be returned. Therefore, these adjustment modes can be released very simply by turning the main power off.)

(Example) The camera adjustment mode (1) is set by setting data: 01 to page: 6, address: 00. The F page write protect will also be released.

1. Page 6

Address	Adjustment Mode	Data	Function
00	Camera adjustment mode	01	Camera adjustment mode (1), F page write protect released
		10	Normal
		11	Camera adjustment mode (2), F page write protect released
01	Camera adjustment switch **Note:** To set this address adjustment mode, it is necessary to press the PAUSE button of the adjusting remote control unit after setting the data.	00	Normal
		01	IRIS OPEN, AGC HOLD
		03	IRIS CLOSE1, AGC HOLD
		05	IRIS CLOSE2, AGC MIN
		07	IRIS CLOSE3, AGC MAX
		09	ND0.5 SHUTTER (PAL=1/160, NTSC=1/190)
		0B	ND0.8 SHUTTER (PAL=1/320, NTSC=1/380)
		0D	AWB PRESET1: 3200K PRESET DATA take in
		0F	WB 3200K PRESET: Indoor white balance mode
		11	AWB PRESET2: Preparation of 3200K PRESET DATA take in
		13	ZOOM HUNTING1 ZOOM SPDSLOW
		15	ZOOM HUNTING2 ZOOM SPDFAST
		17	AE FB adjustment mode (IRIS: OPEN, AGC: REF, SHUTTER: 1/100 (NTSC), 1/120 (PAL))
		1D	EEPROM PRE WRITE: Page F initial data write
05	Shutter mode	00	NTSC=1/60, PAL=1/50
		15	1/2000
06	FOCUS limiter ON/OFF	00	FOCUS limiter ON (Normal)
		01	FOCUS limiter OFF
07	ZOOM limiter ON/OFF	00	ZOOM limiter ON (Normal)
		01	ZOOM limiter OFF
08	ZOOM speed SLOW/FAST	00	Normal
		01	ZOOM speed SLOW
		02	ZOOM speed FAST
		03	ZOOM speed SUPER SLOW
09 ★	COMPLEATED FLAG	00	Camera Adjustment not completed
		01	Camera adjustment completed
11 ★	ROM VERSION	01	Camera micro processor ver1
		02	Camera micro processor ver2
		03	Camera micro processor ver3
0C ★	LENS INITIAL END	00	During the initial operation of the lens
		01	Lens initial operation completed

Addresses with ★ are exclusively for reading.

Table 7-3.

2. Page 1

Address	Adjustment Mode	Data	Function
E6	VH address L		Title horizontal/vertical position (L)
E7	VH address H		Title horizontal/vertical position (H)

Table 7-4.

7-1-7. Adjustment Connector

Most of the measuring points for the camera section adjustment are concentrated on CN701 of the VC-112P board. Connect the oscilloscope and etc. via the measuring pin (J-6082-139-A). The following table lists the terminal numbers and the signal names of CN701.

Terminal Number	Signal Name	Terminal Number	Signal Name
1	D5V	2	NC
3	NC	4	CAM SI
5	NC	6	CAM SO
7	$\overline{\text{CS OPD}}$	8	$\overline{\text{CAM SCK}}$
9	$\overline{\text{CS CORE}}$	10	GND
11	IRIS OUT	12	NC
13	V SUB CHK	14	CAM C
15	PG CONT	16	GND
17	14 MHz	18	CAM Y

Table 7-5.

7-1-8. Data Processing

The calculation of the DDS display and the adjusting remote control unit display data (hexadecimal notation) are required for obtaining the adjustment data of some adjustment items. In this case, after converting the hexadecimal notation to decimal notation, calculate and convert the result to hexadecimal notation, and use it as the adjustment data. Table 7-6. indicates the hexadecimal notation-the decimal notation calculation table.

Hexadecimal notation-Decimal notation

The lower digits of the hexadecimal notation / The upper digits of the hexadecimal notation	0	1	2	3	4	5	6	7	8	9	A (A)	B (b)	C (c)	② D (d)	E (E)	F (F)
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
3	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
4	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
5	80	80	82	83	84	85	86	87	88	89	90	91	92	93	94	95
6	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
7	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
8	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
9	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
A (A)	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
① B (b)	176	177	178	179	180	180	182	183	184	185	186	187	188	189	190	191
C (c)	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
D (d)	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
E (E)	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
F (F)	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255

Note: ( ) indicate the adjusting remote control unit display.

(Example) In the case that the DDS display and the adjusting remote control unit display are BD (b d).
As the upper digit of the hexadecimal notation is B (b), and the lower digit is D (d), the intersection "189" of the ① and ② in the above table is the decimal notation to be calculated.

Table 7-6.

7-2. CAMERA SYSTEM ADJUSTMENT

1. Power Supply Voltage Check (DD-47P Board)

Subject	Option
Measuring instrument	Digital voltmeter
D5V check	
Measurement point	Pins ⑦ and ⑧ of W401
Specified value	4.91 ± 0.1 Vdc
D4V check	
Measurement point	Pin ④ of W401
Specified value	4.06 ± 0.1 Vdc
CAM 5V check	
Measurement point	Pins ⑨ and ⑩ of W401
Specified value	4.89 ± 0.15 Vdc
CAM 15V check	
Measurement point	Pin ⑫ of W401
Specified value	15.09 ± 0.3 Vdc
CAM -9V check	
Measurement point	Pin ⑪ of W401
Specified value	-8.8 ± 0.7 Vdc

Checking method:

1) Check that each power supply voltage satisfies the specified value.

2. Page F Data Initialization

Note: It is necessary to perform all adjustments of the camera section from the beginning again if the data of page F has been initialized.

Initializing method:

1) Check that the data of page: 6, address: 09 is 00.
   (Display indicating that page F data can be initialized)
2) Check that the data of page: 6, address: 01 is 00.
3) Set data: 1D to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (Page F data initialization execution.
   The data of all addresses of page F will be initialized.)
4) Check that the data of page: 6, address: 09 is 01.
   (Displays that the initialization of page F data has been completed)
5) Set data: 00 to page: 6, address: 01. and press the PAUSE button of the adjusting remote control unit.
   (Releases the page F data initialization mode)
6) After performing "Page F data modification", perform all the adjustments of the camera section (page F).

3. Page F Data Modification

The data (initial data) that is automatically written on page F after the initialization of the page F data will differ according to some camera micro processor versions. Change the data by manual input, and arrange it.

Note: When changing the data, to write the data to the non-volatile memory, press the PAUSE button of the adjusting remote control unit every time the new data is set.

Address	Data	Address	Data
00 (ID)	26	4E (AWB TOP DWN)	60
0A (E LOWLIGHT START)	20	51 (AWB R TOP LMT)	6E
0F (CORE APCN 4)	A5	58 (AWB B DWN LMT)	1B
10 (CORE APCN 5)	3D	5B (AWB M DIVID)	39
11 (CORE EFFECT)	A8	5C (AWB DELAY TM)	0C
12 (CORE MAT R)	27	62 (AE REFH)	18
13 (CORE MTT B)	6C	68 (AE FUNCTION)	02
14 (CORE BURST LEVEL)	38	6A (JITEISU DOWN)	28
15 (CORE CHROMA DLY)	01	6B (JITEISU UP)	0D
17 (CORE VHAPCN)	15	8C (ZOOM SPD FAST)	73
41 (AWB BOTTOM SLP R)	48	8D (ZOOM SPD SUPER)	6A
42 (AWB BOTTOM SLP B)	78	8E (ZS INIT SLOW)	6A
43 (AWB MIDDLE SLP R)	60	8F (ZS INIT FAST)	6A
44 (AWB MIDDLE SLP B)	40	94 (ZOOM SPD SLOW)	29
45 (AWB TOP SLP R)	66	9E (ZOOM PULSE LIMIT)	EE
46 (AWB TOP SLP B)	18	AE (NTSC PAL/H DEF DELAY)	21
49 (AWB BOTTOM UP)	C2	B0 (CORE OTHER)	10
4A (AWB BOTTOM DWN)	94	B1 (CORE YGAIN)	3A
4B (AWB MIDDLE UP)	AD	B2 (LOW LIGHT CS)	80
4C (AWB MIDDLE DWN)	96	BD (AWB KAKE CHNGE)	20
4D (AWB TOP UP)	78	C0 (MAX CHECK NG CNT)	14

[Distinguishing the Camera Micro Computer (IC709) Versions]

Each version can be distinguished by looking at the part name of the camera micro processor or the data of page: 6, address: 11.

Version	Part Name	Page: 6 Address: 11
Ver.2	CXP80624-285R	02
Ver.3	CXP80624-298R	03

4. 28 MHz Original Oscillation Adjustment (VC-112P Board)

Subject	Not required
Measurement Point	Pin ⑰ of IC706 (14 MHz)
Measuring Instrument	Frequency counter
Adjusting Element	CT801
Specified Value	14187500 ± 71 Hz

Adjusting method:

1) Use CT801 to adjust the oscillation frequency to 14187500 ± 71 Hz.

5. V SUB Adjustment (VC-112P Board)

Subject	Not required
Measurement Point	Pin ⑬ of CN701 (V SUB CHK)
Measuring Instrument	Digital voltmeter
Adjustment Page	F
Adjustment Address	04 (V SUB)
Specified Value	(Imager display voltage) ± 0.1 Vdc

Adjusting method:

1) Release the protect.
   Page: 6, address: 00, data: 01
2) Change the data of page: F, address: 04, and adjust the voltage of pin ⑬ of CN701 to (imager display voltage) ± 0.1 Vdc.
3) Press the PAUSE button of the adjusting remote control unit.

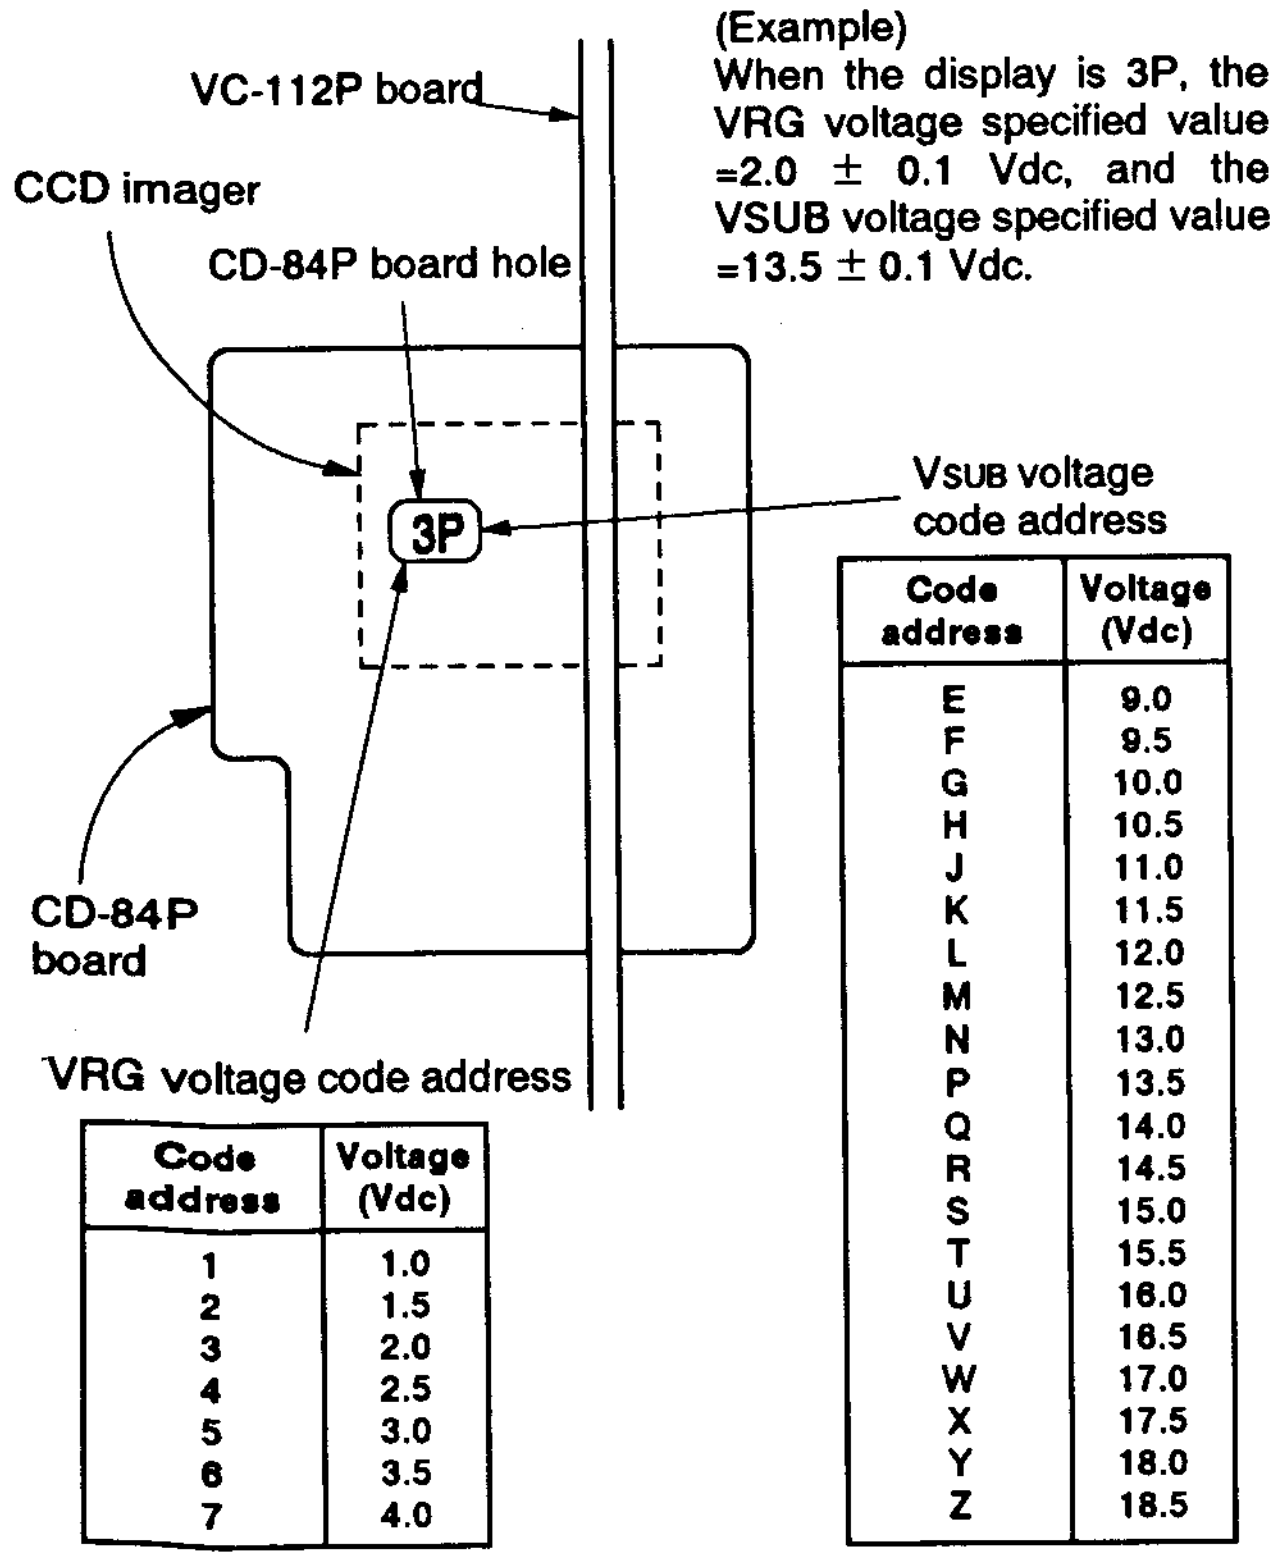

(Example)
When the display is 3P, the VRG voltage specified value =2.0 ± 0.1 Vdc, and the VSUB voltage specified value =13.5 ± 0.1 Vdc.

VRG voltage code address

Code address	Voltage (Vdc)
1	1.0
2	1.5
3	2.0
4	2.5
5	3.0
6	3.5
7	4.0

VSUB voltage code address

Code address	Voltage (Vdc)
E	9.0
F	9.5
G	10.0
H	10.5
J	11.0
K	11.5
L	12.0
M	12.5
N	13.0
P	13.5
Q	14.0
R	14.5
S	15.0
T	15.5
U	16.0
V	16.5
W	17.0
X	17.5
Y	18.0
Z	18.5

Fig. 7-7.

6. VRG Adjustment (VC-112P Board)

Subject	Not required
Measurement Point	Pin ⑮ of CN701 (PG CONT)
Measuring Instrument	Digital voltmeter
Adjustment Page	F
Adjustment Address	05 (VRG)
Specified Value	(Imager display voltage) ± 0.1 Vdc

Adjusting method:

1) Release the protect.
   Page: 6, address: 00, data: 01
2) Change the data of page: F, address: 05, and adjust the voltage of pin ⑮ of CN701 to (imager display voltage) ± 0.1 Vdc.
3) Press the PAUSE button of the adjusting remote control unit.

7. CCD Imager Correction Data Write

Subject	Not required
Adjustment Page	F
Adjustment	1D to 2C (CCD-DEFECT)

Perform CCD imager correction data write in the following cases.

1. When the CCD imager has been replaced
2. The ocassion of exchaning a camera micro processor or EEPROM (IC712).
3. When the page F data has been initialized

In the case of 1, as the correction data is not required for the CCD imager for repair, adjust all data of addresses 1D to 2C to "00".

In the case of 2 and 3, write the correction data attached to the shield case of DD-47P board to addresses 1D to 2C.

If the correction data are not attached, adjust all data of addresses 1D to 2C to "00".

Adjusting method:

1) Release the protect.
   Page: 6, address: 00, data: 01
2) Write the correction data to page: F, addresses: 1D to 2C.
   Note: To perform write to the non-volatile memory, press the PAUSE button of the adjusting remote control unit before changing addresses.

Processing after completing adjustments

1) If the CCD imager has been replaced, remove the old correction data label attached on the shield case (UPPER) of DD-47P board.

8. HALL Adjustment

Subject	Not required
Measurement Point	DDS display of EVF or monitor TV
Measuring Instrument	
Adjustment Page	F
Adjustment Address	08 (HALL GAIN) 09 (HALL OFFSET)
Specified Value	31 to 35 during IRIS OPEN B1 to B5 during IRIS CLOSE

Adjusting method:

1) Release the protect.
Page: 6, address: 00, data: 01
2) Set data: 40 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.
(HALL output display mode setting)
3) Set data: 03 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS CLOSE mode setting)
4) Set data: 40 to page: F, address: 08, and press the PAUSE button of the adjusting remote control unit.
5) Read the DDS display data (the bottom two digits of the display data at the bottom right of the EVF or the monitor TV display), and set to W_2.
6) Set data: 30 to page: F, address: 08, and press the PAUSE button of the adjusting remote control unit.
7) Read the DDS display data, and set to W_1.
8) Set data: 01 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS OPEN mode setting)
9) Read the DDS display data, and set to K_1.
10) Set data: 40 to page: F, address: 08, and press the PAUSE button.
11) Read the DDS display data, and set to K_2.
12) Convert W_1, W_2, K_1, K_2 to decimal notation, and obtain W_1', W_2', K_1', K_2'. (Refer to Table 7-6. "Hexadecimal notation-decimal notation conversion table".)
13) Calculate X_1' using the following equations (decimal notation calculation).
$A' = W_2' + K_1' - W_1' - K_2'$ ··························Equation 1
$B' = W_1' - K_1'$ ··Equation 2
$X_1' = \frac{2048 + (48 \times A') - (16 \times B')}{A'}$ ················Equation 3
14) Convert X_1' to hexadecimal notation, and obtain X_1.
(Round off to one decimal place)
15) Set data: X_1 to page: F, address: 08, and press the PAUSE button of the adjusting remote control unit.
16) Change the data of page: F, address: 09, and adjust the DDS display data to "33".
17) Press the PAUSE button of the adjusting remote control unit.
18) Set data: 03 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS CLOSE mode setting)
19) Read the DDS display data, and set to W_0. If W_0 lies within the "B1" to "B5" range, perform "Processing after completing adjustments". If it lies outside the range, perform the following adjustments.
20) Convert W_0 to hexadecimal notation, and obtain W_0'.
21) Calculate X_2' using the following equations (decimal notation calculation).
$C' = W_0' - B' - 51$ ···································Equation 4
$X_2' = \frac{(128 - B') \times (X_1' - 48) + 48 \times C'}{C'}$ ············Equation 5
(X_1' and B' are values obtained from equations 2 and3)
22) Convert X_2' to hexadecimal notation and obtain X_2.
(Round off to one decimal place)
23) Set data X_2 to page: F, address: 08, and press the PAUSE button of the adjusting remote control unit.
24) Change the data of page: F, address: 09, and adjust the DDS display data to "B3".
25) Press the PAUSE button of the adjusting remote control unit.
26) Set data: 01 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS OPEN mode setting)
27) Check that the DDS display data lies within the "31" to "35" range.

Processing after Completing Adjustments

1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS NORMAL mode setting)

9. Flange Back Adjustment

Subject	Chart for flange back adjustment (1998 ± 5mm from the front side of the lens Luminance: 300 ± 50 lux)
Measurement Point	Check the operations on the TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	86 (WIDE LIMIT), 87 (WIDE LIMIT H), 88 (TELE LIMIT), 89 (TELE LIMIT H), 8A (STEP ZERO), 8B (STEP ZERO SPAN)

Adjusting method:

1) Turn the auto focus off.
2) Adjust the focus using the focus knob.
3) Check that the flange back adjustment chart center and the exposure display center coincide at both zoom lens TELE end and WIDE end.
4) Release the protect.
   Page: 6, address: 00, data: 01
5) Check that the data of page: 6, address: 09 is 00.
   (Flange back adjustment possible display)
6) Check that the page: F, address: 86 to 8B data is at the initial value. (Refer to Table 7-2. "Page F address list")
7) Set data: 01 to page: F, address: AC.
   (This causes automatic adjustment to be performed. Adjustments are performed at the zoom lens TELE end first, and then at the WIDE end. The adjustment data is automatically input to page: F, addresses: 86 to 8B.)
8) Check that the data of page: 6, address: 09 is 01.
   (Display indicating flange back adjustment completion)

Processing after completing adjustments

1) Set data: 00 to page: F, address: AC.
2) Turn off the main power supply (6.3V).

10. Flange Back Check

Subject	Siemens star (2m (or 1.4m) from the front of the lens)
Measurement Point	DDS display of EVF or TV monitor
Measuring Instrument	
Specified Value	$D_2=D_1 \pm 3$

Checking method:

1) Set data: 11 to page: 6, address: 00. (Camera adjustment mode 2)
2) Set data: B0 to page: F, address: AF. (Focus step display mode)
3) Place the Siemens star 2m (or 1.4m) from the front of the lens.
4) Adjust the EXPOSURE knob to set the lens full apearture. At this time, adjust the illumination on the Siemens star or place a ND filter over the lens, and confirm that the proper image is displayed on the monitor TV screen.
5) Turn off the auto-focus.
6) Shoot the Siemens star with the zoom TELE end.
7) Rotate the focus ring, and adjust the focus.
8) Adjust to the zoom WIDE end.
9) Read the focus step value (4 digits) displayed on the TV monitor, and take the value as D_1.
10) Rotate the focus ring, and adjust the focus.
    Read the focus step value here, and take the value as D_2.
11) Check that $D_2=D_1 \pm 3$.

Process after checking

1) Set data: 00 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.

11. SYNC Level Adjustment (VC-112P Board)

Subject	Not required
Measurement Point	Pin ⑱ of CN701 (CAM Y)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	06 (VREF-Y)
Specified Value	A=150 ± 5 mV

Adjusting method:

1) Release the protect.
   Page: 6, address: 00, data: 01
2) Set data: 05 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (IRIS CLOSE mode setting)
3) Change the data of page: F, address: 06, and adjust so that the SYNC level (A) becomes the specified value.
4) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (Release of IRIS CLOSE mode)

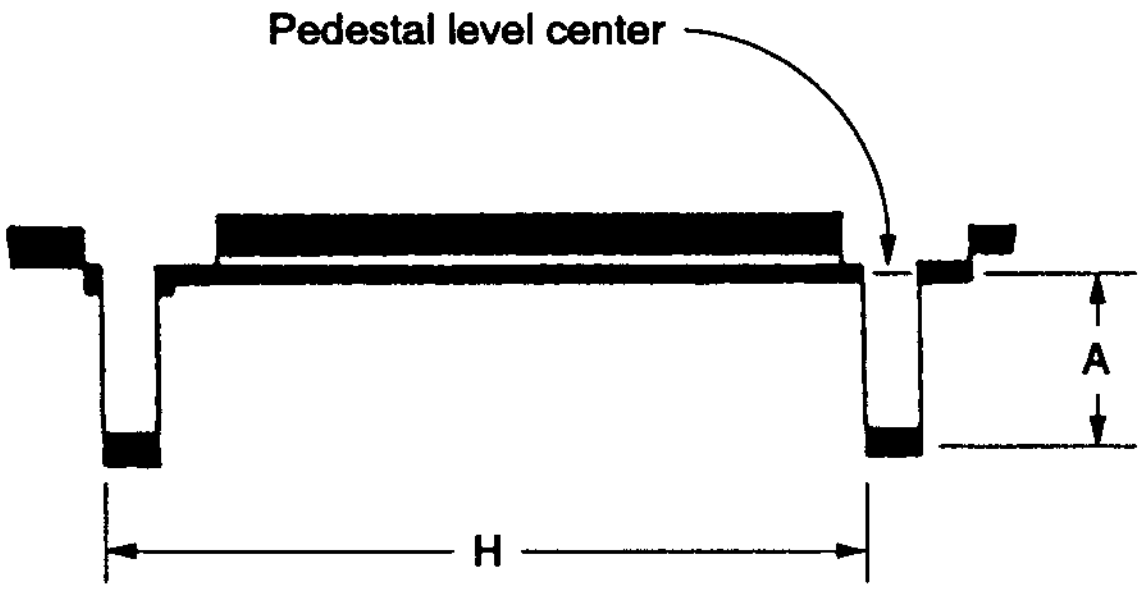

Fig. 7-8.

12. BURST Level Adjustment (VC-112P Board)

Subject	Not required
Measurement Point	Pin ⑭ of CN701 (CAM C)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	07 (VREF-C)
Specified Value	A=150 ± 5 mVp-p

Adjusting method:

1) Release the protect.
   Page: 6, address: 00, data: 01
2) Set data: 05 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (IRIS CLOSE mode setting)
3) Change the data of page: F, address: 07, and adjust so that the burst level (A) becomes the specified value.
4) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (Release of IRIS CLOSE mode)

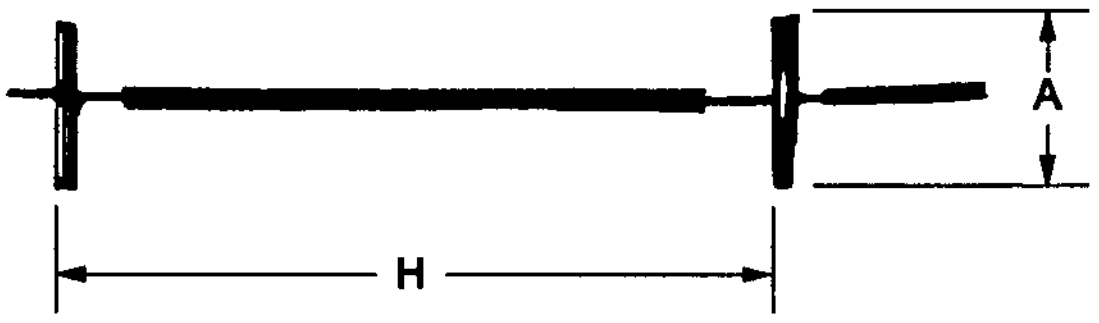

Fig. 7-9.

13. A/D Offset Adjustment

Subject	Not required
Measurement Point	DDS display on the EVF or the TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	0C (AD REF)
Specified Value	46 to 47

Adjusting method:

1) Release the protect.
   Page: 6, address: 00, data: 01
2) Set data: 05 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (IRIS CLOSE AGC MIN mode setting)
3) Set data: 00 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.
   (Y sampling output mode setting)
4) Set data: 35 to page: 1, address: E6.
   (Setting 1 of the sampling position)
5) Set data: 6D to page: 1, address: E7.
   (Setting 2 of the sampling position)
6) Change the data of page: F, address: 0C, and adjust the average value of the DDS display (the bottom two digits of the display data at the bottom right of the EVF or the TV monitor display) to 46 to 47.
   (Set the data of address 0C to the maximum value satisfying the specification.)
7) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

1) Turn the main power supply (6.3V) off.

14. Carrier Balance Adjustment

Subject	Not required
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	03 (SI OFFSET)
Specified Value	The center of the black luminance point should lie within the 1 ϕ circle whose center is the principle point.

Adjusting method:

1) Release the protect.
   Page: 6, address: 00, data: 01.
2) Set data: 07 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (IRIS CLOSE, AGC MAX mode setting)
3) Change the data of page: F, address: 03, and adjust so that the center of the black luminance point coincides with the principle point.
4) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (IRIS NORMAL mode setting)

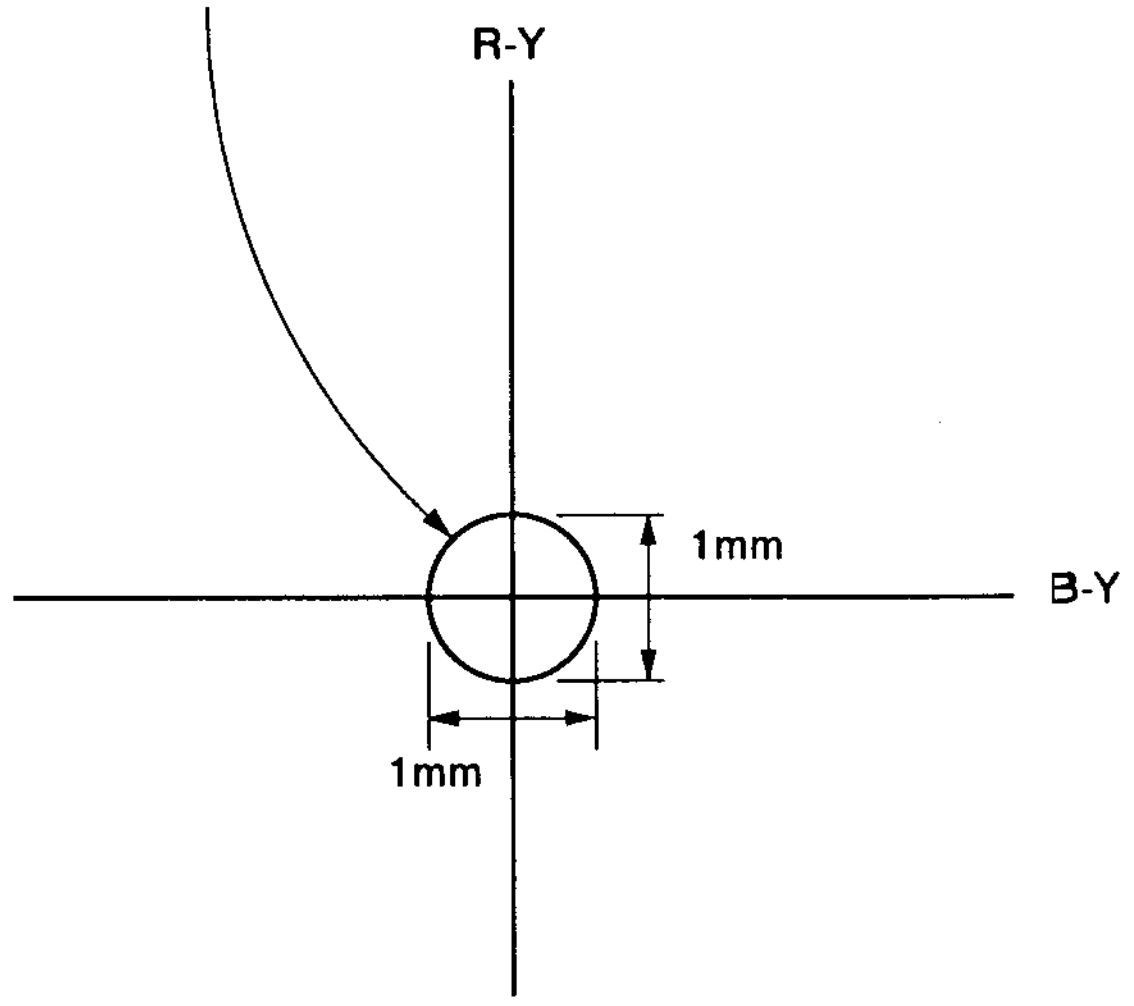
The center of the black luminance point should be within this circle

Fig. 7-10.

15. Picture Frame Setting

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope and TV monitor.
Specified Value	A=B, C=D, t=0 ± 0.1 msec

Setting method:

1) Turn the auto focus off.
2) Adjust the focus using the focus knob.
3) Adjust the zoom and the camera direction, and set to the specified position.
4) Mark the position of the picture frame on the monitor display, and adjust the picture frame to this position in following adjustments using "color bar chart standard picture frame" and "white pattern standard picture frame".

Check on the oscilloscope

1. horizontal period

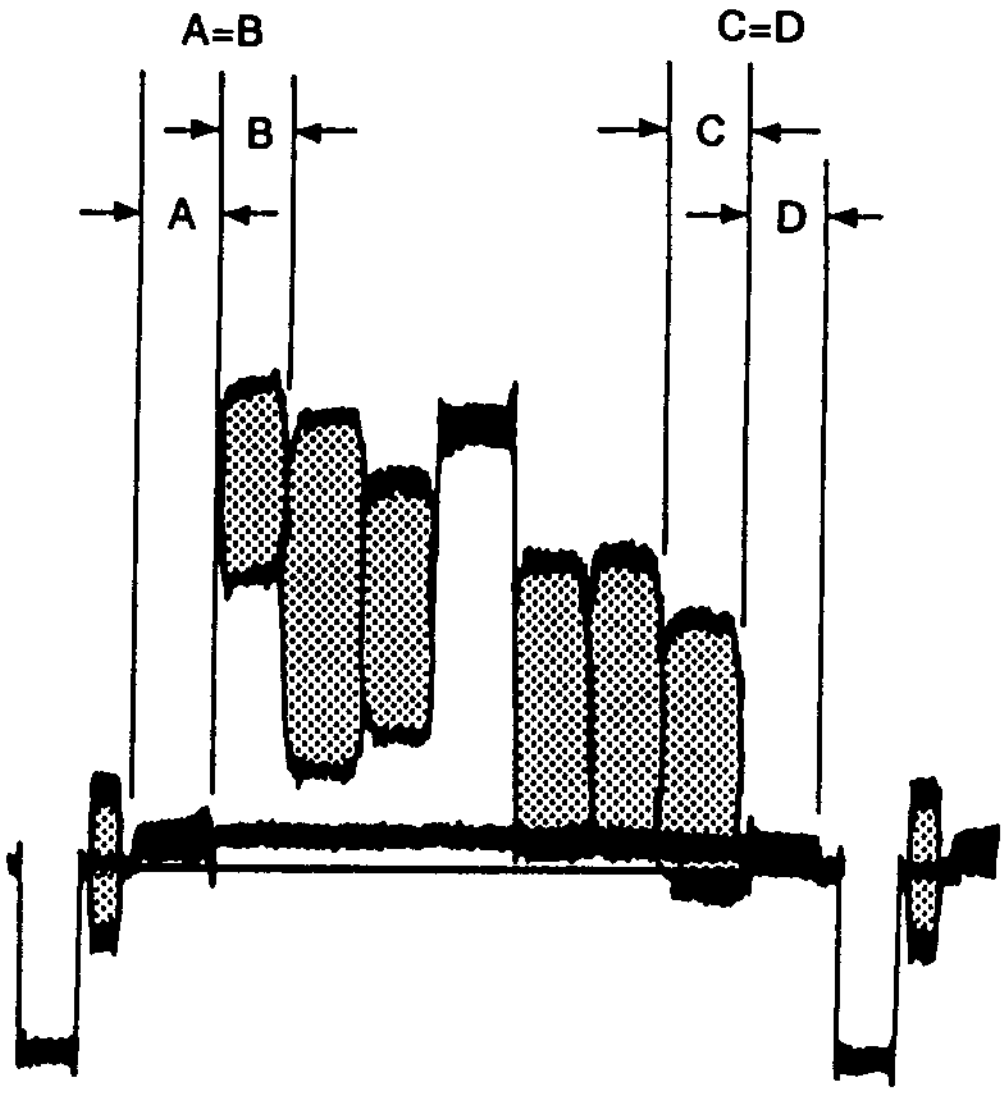

2. Vertical period

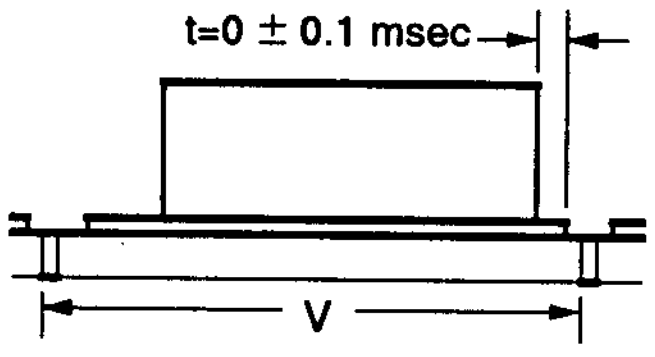

Fig. 7-11.

Check on the TV monitor

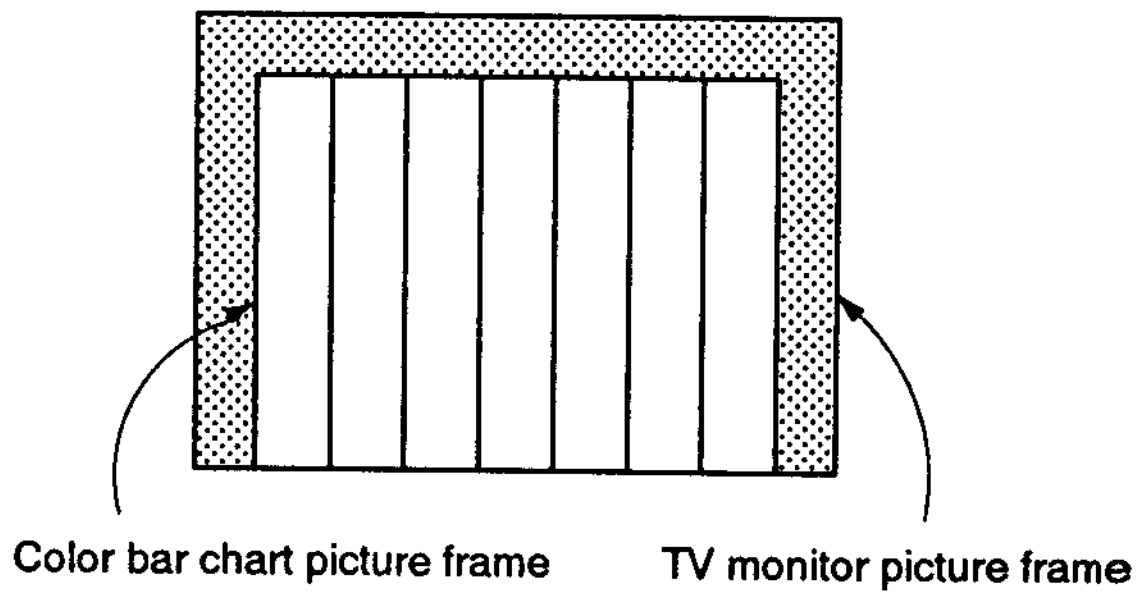
Color bar chart picture frame
TV monitor picture frame

Fig. 7-12.

16. IRIS Level Adjustment (VC-112P Board)

Subject	Color bar standard picture frame
Measurement Point	Pin ⑪ of CN701 (IRIS OUT)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	63 (AGC MIN)
Specified Value	A=200 ± 5 mV

Adjusting method:

1) Release the protect.
   Page: 6, address: 00, data: 01
2) Change the data of page: F, address: 63, and adjust so that the IRIS OUT signal level (A) becomes the specified value.
3) Press the PAUSE button of the adjusting remote control unit.

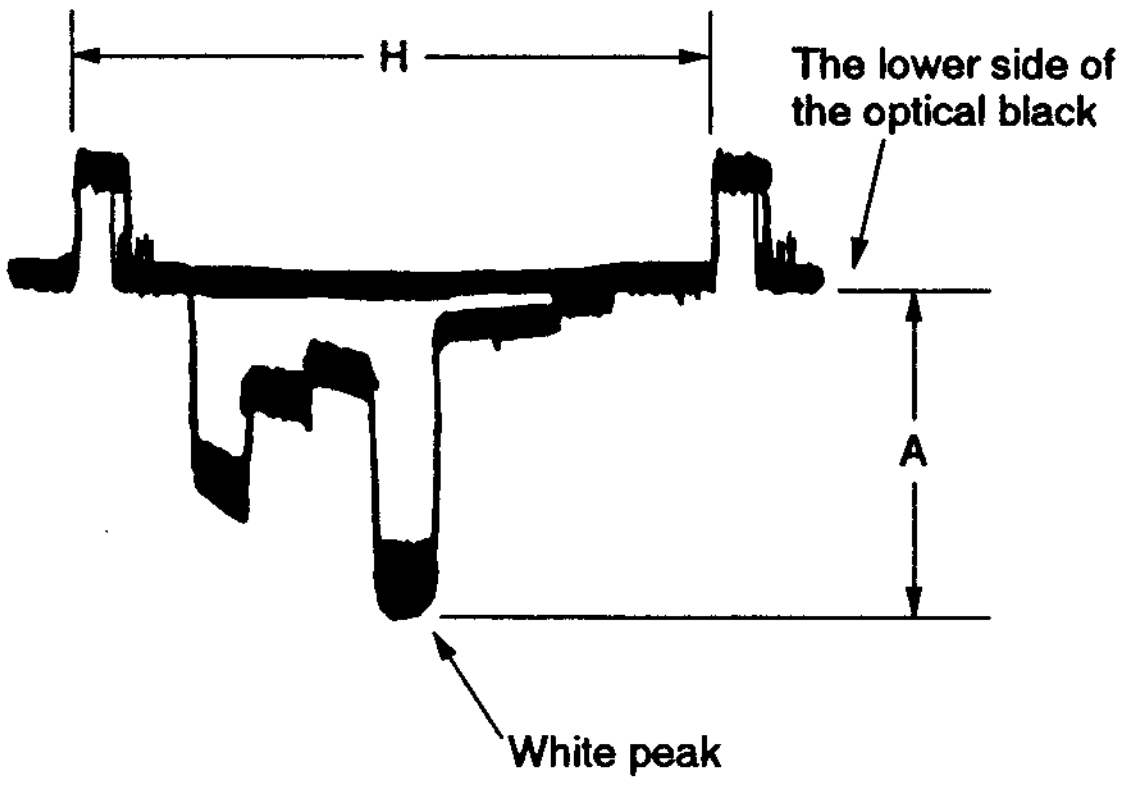

Fig. 7-13.

17. MAX GAIN Adjustment (VC-112P Board)

Subject	Color bar standard picture frame
Filter	ND filter 1.0 (2 sheets) and 0.4 (1 sheet), 0.1 (1 sheet)
Measurement Point	Pin ⑱ of CN701 (CAM Y)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	64 (AE MIN L)
Specified Value	A=160 ± 5 mV

Adjusting method:

1) Place the ND filter 2.5 (1.0+1.0+0.4+0.1) on the lens.
2) Release the protect.
   Page: 6, address: 00, data: 01
2) Change the data of page: F, address: 64, and adjust so that the CAM Y signal level (A) becomes the specified value.
4) Press the PAUSE button of the adjusting remote control unit.

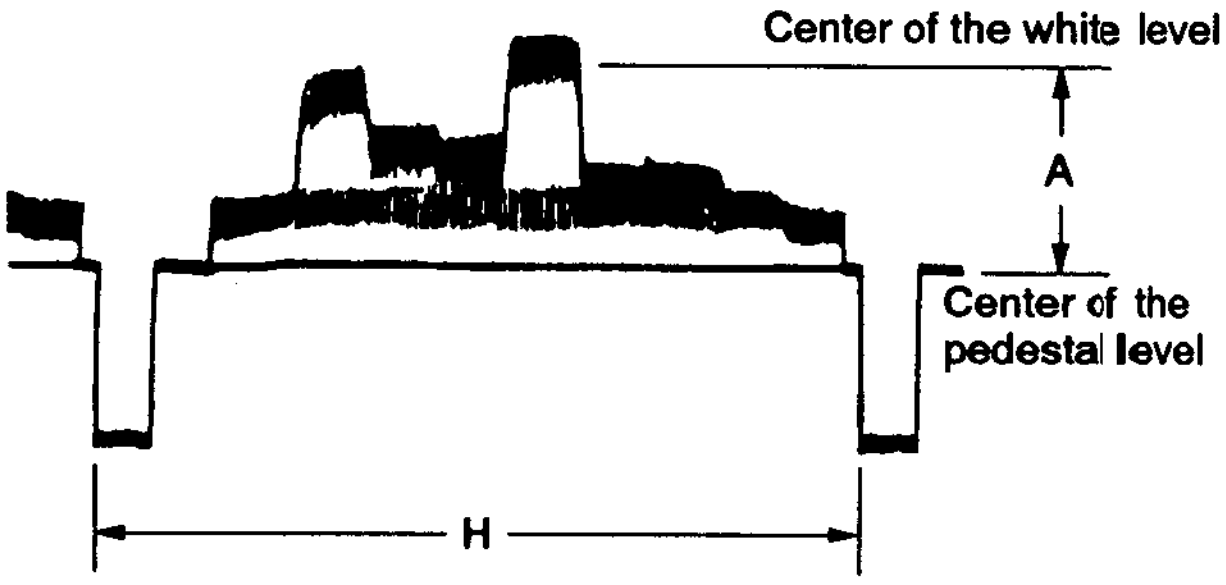

Fig. 7-14.

18. IRIS IN/OUT Adjustment

Subject	White pattern standard picture frame
Measurement Point	DDS display of the EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	39 (AWB IRIS IN) 3A (AWB IRIS OUT)

Adjusting method:

1) Set data: 11 to page: 6, address: 00.
   (Camera adjustment mode 2 setting)
2) Set data: 40 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.
   (HALL data display)
3) Set data: 0B to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (ND0.8 shutter mode setting)
4) Read the DDS display data (the bottom two digits of the display data at the bottom right of the EVF or the TV monitor), and set to D39.
5) Set data: D39 to page: F, address: 39, and press the PAUSE button of the adjusting remote control unit.
6) Set data: 09 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (ND0.5 shutter mode setting)
7) Read the DDS display data and set to D3A.
8) Set data: D3A to page: F, address: 3A, and press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (Release of the ND0.5 shutter mode)

19. Pre-white Balance Adjustment

Subject	White pattern standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	33 (R CONT REF), 34 (B CONT REF)
Specified Value	The center of the white luminance point should lie within the circle with a diameter of 1mm and whose center is the principle point

Adjusting method:

1) Set data: 0F to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (WB 3200K preset mode setting)
2) Set data: 11 to page: 6, address: 00.
   (Camera adjustment mode 2 setting)
3) Change the data of addresses:33 and 34 of page: F alternately, and coincide the white luminance point to the principle point.
   Note: Be sure to press the PAUSE button of the adjusting remote control unit before changing the addresses.
   If not, the new data will not written to the memory.
4) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (Release of the preset mode)
2) Set data: 10 to page: 6, address: 00.
   (Protect mode setting)

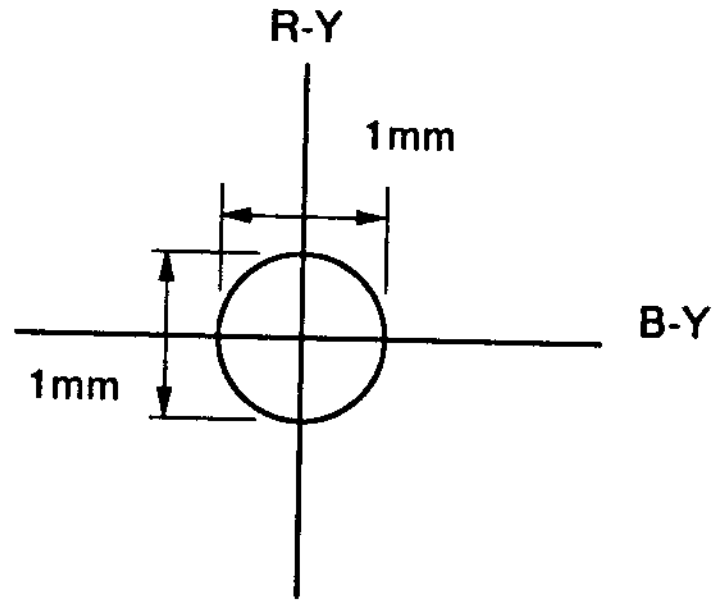

Fig. 7-15.

20. Color Reproduction Adjustment

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	18 (CORE B–Y GAIN), 19 (CORE R–Y GAIN), 1A (CORE R–Y HUE), 1B (CORE B–Y HUE)
Specified Value	All color luminance points should settle within each color reproduction frame.

Adjusting method:

1) Release the protect.
   Page: 6, address: 00, data: 01
2) Set data: 0F to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (Indoor white balance mode setting)
3) Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame.
4) Change the data of addresses 18 to 1B of page: F, and settle each color luminance point in each color reproduction frame.
   Note: Be sure to press the PAUSE button of the adjusting remote control unit before changing the addresses.
   If not, the new data will not be written to the memory.
5) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

1) Set data: 00 to page: 6, address: 01 and press the PAUSE button of the adjustment remote control unit.
   (Release of the adjustment mode)
2) Set data: 10 to page: 6, address: 00.
   (Protect mode setting)

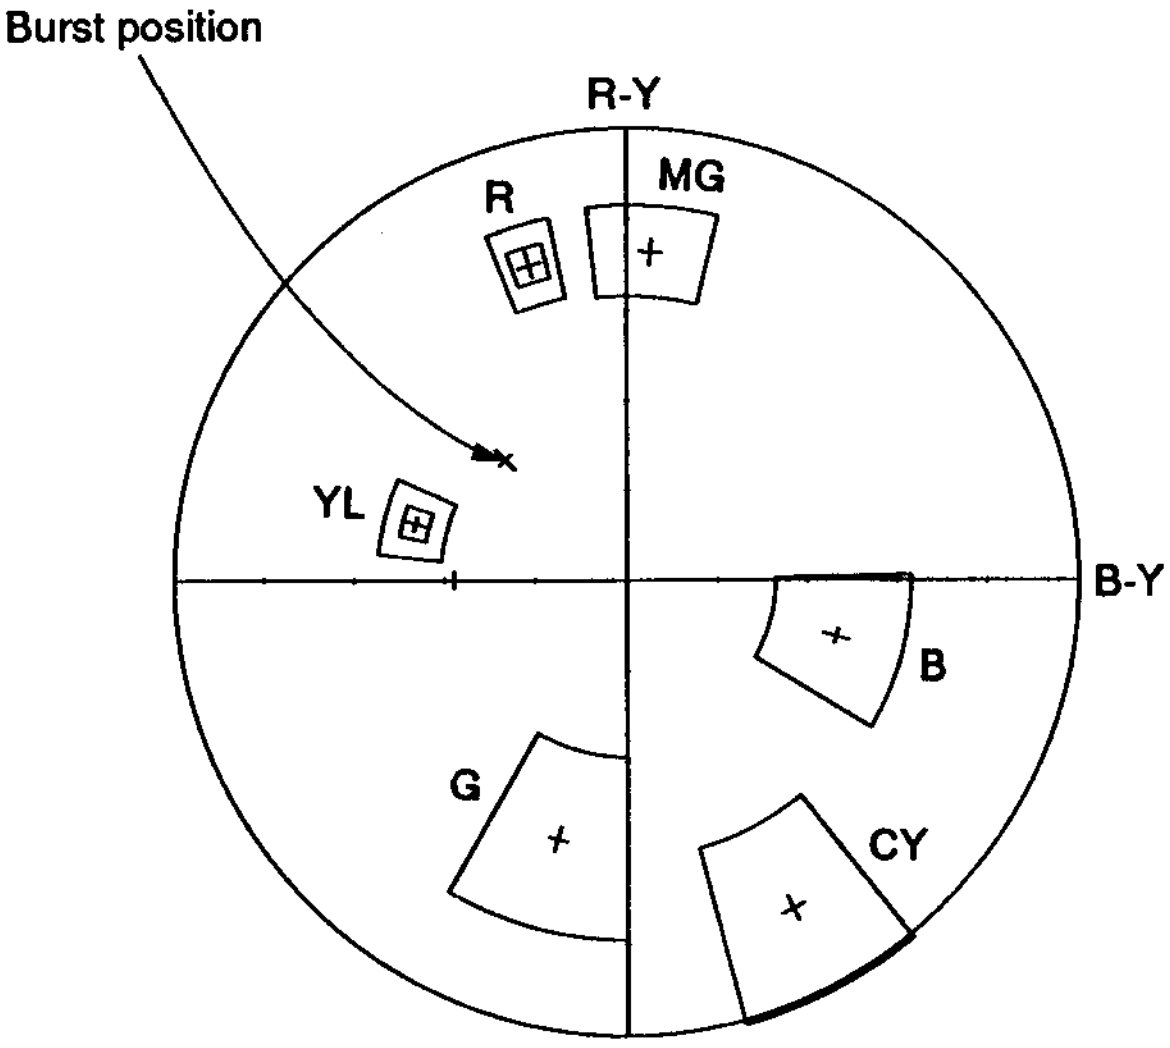

Fig. 7-16.

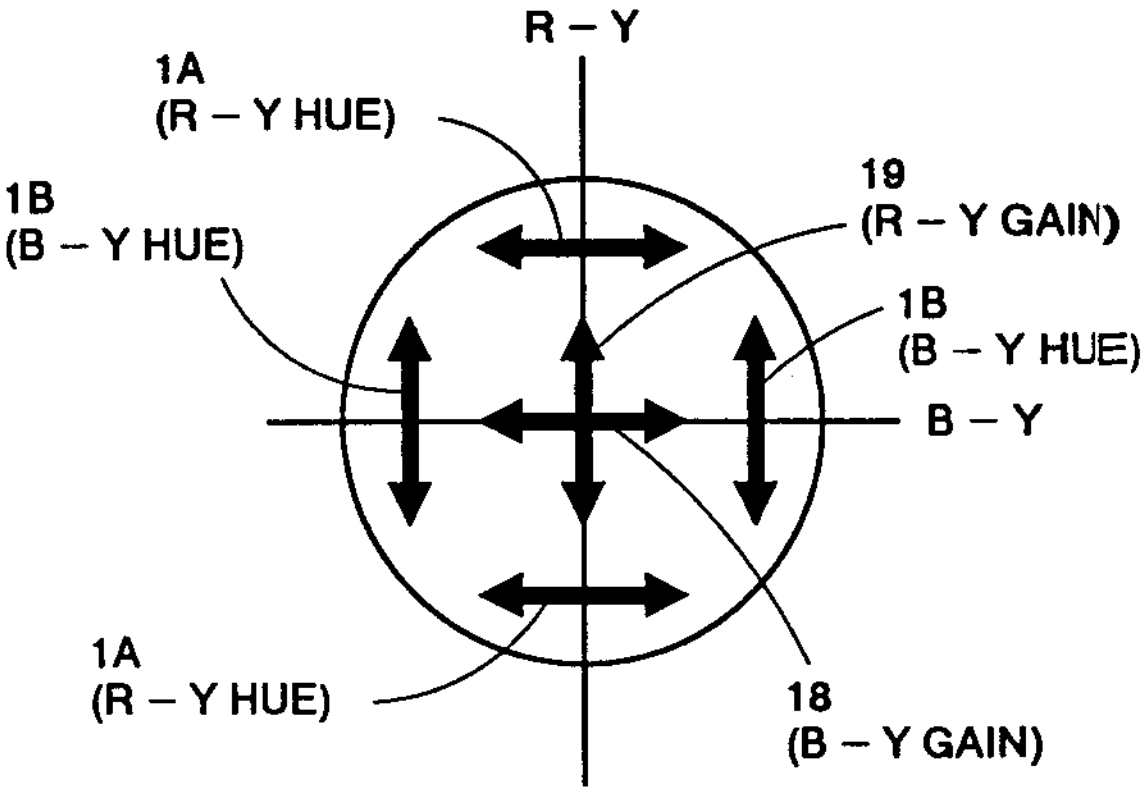

Fig. 7-17. Direction of the Movements of the Adjustment Address and Luminance Point

21. Auto White Balance Preset Adjustment

Subject	White pattern standard picture frame
Adjustment Page	F
Adjustment Address	2D (R REF L), 2E (R REF H), 2F (G REF L), 30 (G REF H), 31 (B REF L), 32 (B REF H)

Adjusting method:

1) Turn the power of the unit OFF/ON.
2) Check that the data of page: 6, address: 09 is 00.
   (Auto white balance preset adjustment possible display)
3) Set data: 11 to page: 6, address: 00.
   (Camera adjustment mode 2 setting)
5) Set data: 11 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (3200K preset data take in preparation mode)
6) Set data: 0D to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (When the 3200K preset data is taken in, the data will be automatically input to addresses 2D to 32 of page F.)
7) Check that the data of page: 6, address: 09 is 01.
   (Auto white balance preset adjustment completion display)

Processing after completing adjustments

1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (Release of the auto white balance preset mode)
2) Set data: 10 to page: 6, address: 00.
   (Release of camera adjustment mode 2)

22. Auto White Balance Adjustment

Subject	White pattern standard picture frame
Filter	Filter C14 for color temperature correction
Measurement Point	Check with the DDS display on the EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	35 (AWB NORM R) 36 (AWB NORM B)
Specified Value	R ratio 2C80 ± 40 B ratio 5A80 ± 40

Adjusting method:

1) Place the C14 filter for color temperature correction on the lens.
2) Set data: 11 to page: 6, address: 00.
   (Camera adjustment mode 2 setting)
3) Set data: D0 to page: F, address: 60, and press the PAUSE button of the adjusting remote control unit.
   (Auto white balance adjustment mode setting)
4) Set data: 82 to page: F, address: AF.
   (R ratio display mode setting)
5) Change the data of page: F, address: 35, and adjust the average value of the DDS display data (the display data at the bottom right of the EVF or the TV monitor) to 2C80 ± 40.
6) Press the PAUSE button of the adjusting remote control unit.
7) Set data: 83 to page: F, address: AF.
   (B ratio display mode setting)
8) Change the data of page: F, address: 36, and adjust the average value of the DDS display data to 5A80 ± 40.
9) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

1) Set data: 00 to page: F, address: 60, and press the PAUSE button of the adjusting remote control unit.
   (Release of the white balance adjustment mode)
2) Set data: 10 to page: 6, address: 00.
   (Release of camera adjustment mode 2)

23. White Balance Check

Subject	White pattern standard picture frame
Filter	Filter C14 for color temperature correction ND filter 1.0 and 0.3
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Specified Value	Fig. 7-18. A to C

Checking method:

1) Check that the lens is not covered with either filter.
2) Set data: 11 to page: 6, address: 00.
   (Camera adjustment mode 2 setting)
3) Set data: 0F to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (Indoor white balance mode setting)
4) Check that the center of the white luminance point is within the circle shown in Fig. 7-18.A.
   (Indoor white balance check)
5) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (Auto white balance mode setting)
6) Set data: 01 to page: F, address: 5C, and press the PAUSE button of the adjusting remote control unit.
   (Auto white balance high speed tracking mode setting)
7) Check that the center of the white luminance point is within the circle shown in Fig. 7-18. A.
8) Place the C14 filter on the lens.
9) Check that the center of the white luminance point settles in the circle shown in Fig. 7-18. B.
   (Auto white balance outdoor mode check)
10) Remove the C14 filter, and place the ND filter 1.3 (1.0+0.3) on the lens.
11) Check that the center of the white luminance point settles in the circle shown in Fig. 7-18. C.
    (Auto white balance outdoor mode check)

Processing after completing adjustments

1) Set data: 0C to page: F, address: 5C, and press the PAUSE button of the adjusting remote control unit.
   (Release of the auto white balance fast tracking mode)
2) Set data: 10 to page: 6, address: 00.
   (Release of camera adjustment mode 2)
3) Set data: 00 to page: 6, address: 01, and press the PAUSE button.

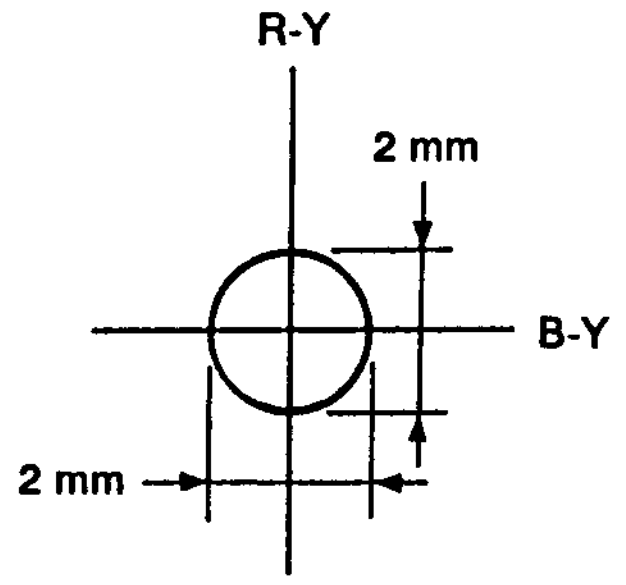

Fig. 7-18. A

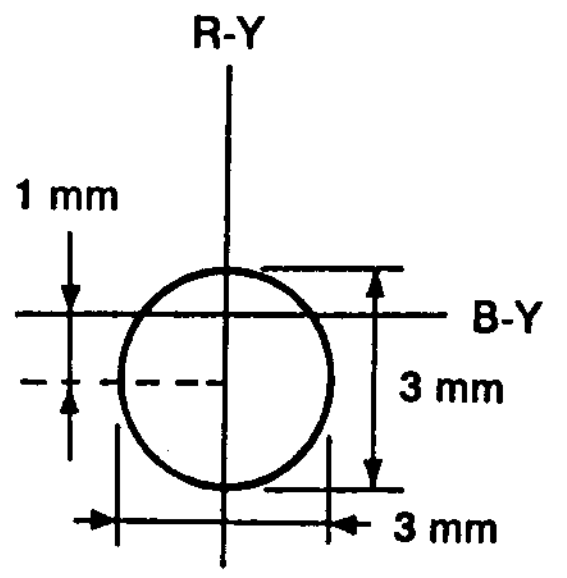

Fig. 7-18. B

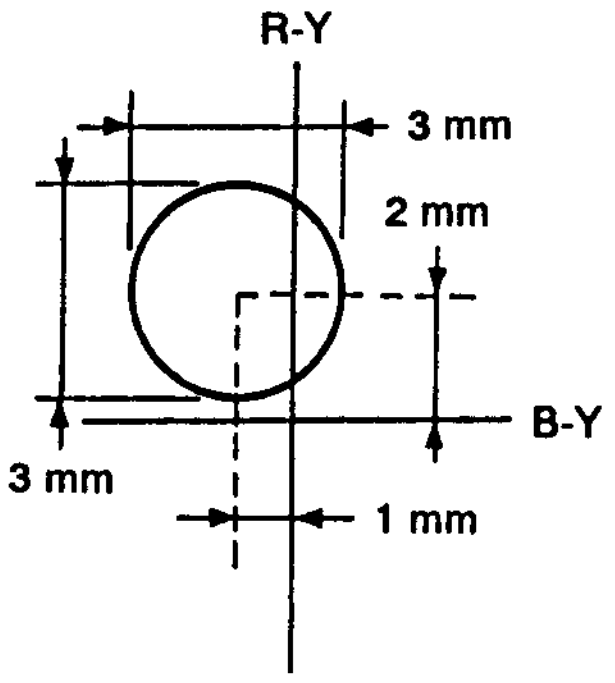

Fig. 7-18. C

24. Linear Matrix Adjustment

Subject	Color bar standard picture frame
Filter	Filter C14 for color temperature correction
Measurement Point	DDS display on the EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	3D (DMAT HUE) 3E (DMAT GAIN)

Note 1: Check that position that was set in the color bar chart picture frame "14. Picture Frame Setting" is maintained, before beginning adjustments.

Adjusting method:

1) Remove the filter C14 for color temperature correction.
2) Release the protect.
   Page: 6, address: 00, data: 01
3) Color bar data sampling mode setting
   1. Set data: F1 to page: F, address: 60, and press the PAUSE button of the adjusting remote control unit.
   2. Set data: 2E to page: F, address: 14, and press the PAUSE button of the adjusting remote control unit.
   (Check that the colors on the monitor display at the color modulation stop mode have disappeared)
4) Specifying the Yellow position
   1. Set data: C9 to page: 1, address: E6.
   2. Set data: B6 to page: 1, address: E7.
5) Set data: 03 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.
   (R–Y, B–Y data display mode setting)
6) Read the average value of the DDS display data (the bottom two digits of the display data at the bottom right of the EVF or monitor TV), and set to Y_1.[Note 3]
7) Specifying the Red position
   1. Set data: 59 to page: 1, address: E6.
   2. Set data: 6D to page: 1, address: E7.
8) Select page: F and read the average value of the DDS display data, and set to R_1.[Note 3]
9) Place the filter C14 for color temperature correction on the lens. (Ensure that the picture frame of the chart does not shift at this time.)
10) Specifying the yellow position.
    1. Set data: C9 to page: 1, address: E6.
    2. Set data: B6 to page: 1, address: E7.
11) Select page: F and read the average value of the DDS display data, and set to Y_2.[Note 3]
12) Specifying the Red position
    1. Set data: 59 to page: 1, address: E6.
    2. Set data: 6D to page: 1, address: E7.
13) Select page: F and read the average value of the DDS display data, and set to R_2.[Note 3]
14) Convert Y_1, R_1, Y_2, R_2 to decimal notation to obtain Y_1', R_1', Y_2' and R_2'.
    (Refer to Table 7-6. "Hexadecimal notation-decimal notation conversion table")
15) Calculate X_1' from the following equation (decimal notation calculation).
    $X_1'=Y_2'-Y_1'$
16) Calculate D_{3D} from the following table
    (D_{3D} is hexadecimal notation)

X_1' value	D_{3D}
$-1 \leqq X_1' \leqq 1$	F0
$X_1' > 1$	F1
$X_1' < -1$	FF

17) Set data: D_{3D} to page: F, address: 3D, and press the PAUSE button of the adjusting remote control unit.
18) Calculate X_2' from the following equation (decimal notation calculation).
    $X_2'=R_2'-R_1'$
19) Calculate D_{3E} from the following table.

X_2' value	D_{3E}
$X_2' \geqq 0$	00
$0 > X_2' \geqq -1$	01
$-1 > X_2'$	02

20) Set data: D_{3E} to page: F, address: 3E, and press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

1) Set data: 00 to page: F, address: 60, and press the PAUSE button of the adjusting remote control unit.
   (Release of the sampling mode)
2) Set data: 2C to page: F, address: 14, and press the PAUSE button of the adjusting remote control unit.
   (Color modulation ON mode setting)
3) Set data: 00 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.
   (Release of the R–Y, B–Y data display mode)
4) Turn the main power supply (6.3V) off.

Note 3: As the R-Y data and B-Y data are displayed alternatively, it will be difficult to read the R-Y data. Record this data on a tape, and perform frame advancing playback so that only the R-Y data is read.
(Example)
If the frame advancing playback is performed, the following will be displayed.
$\underline{81} \rightarrow 7A \rightarrow \underline{82} \rightarrow 7A \rightarrow \underline{80} \rightarrow 7A \rightarrow \underline{81} \rightarrow 7C \rightarrow \underline{81} \rightarrow 79$
As the R-Y data is above 80, and the B-Y data is below 7F, the data which is underlined is the R-Y data. If the average value is calculated, the R-Y data will become 81.

25. VIDEO OUT Level Check

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal (Terminated at 75 Ω)
Measuring Instrument	Oscilloscope
Specified Value	Y level=660 ± 50 mV SYNC level=300 ± 20 mV BURST level=300 ± 40 mVp-p

Checking method:

1) Check that the Y level, SYNC level and BURST level satisfy the specified values.

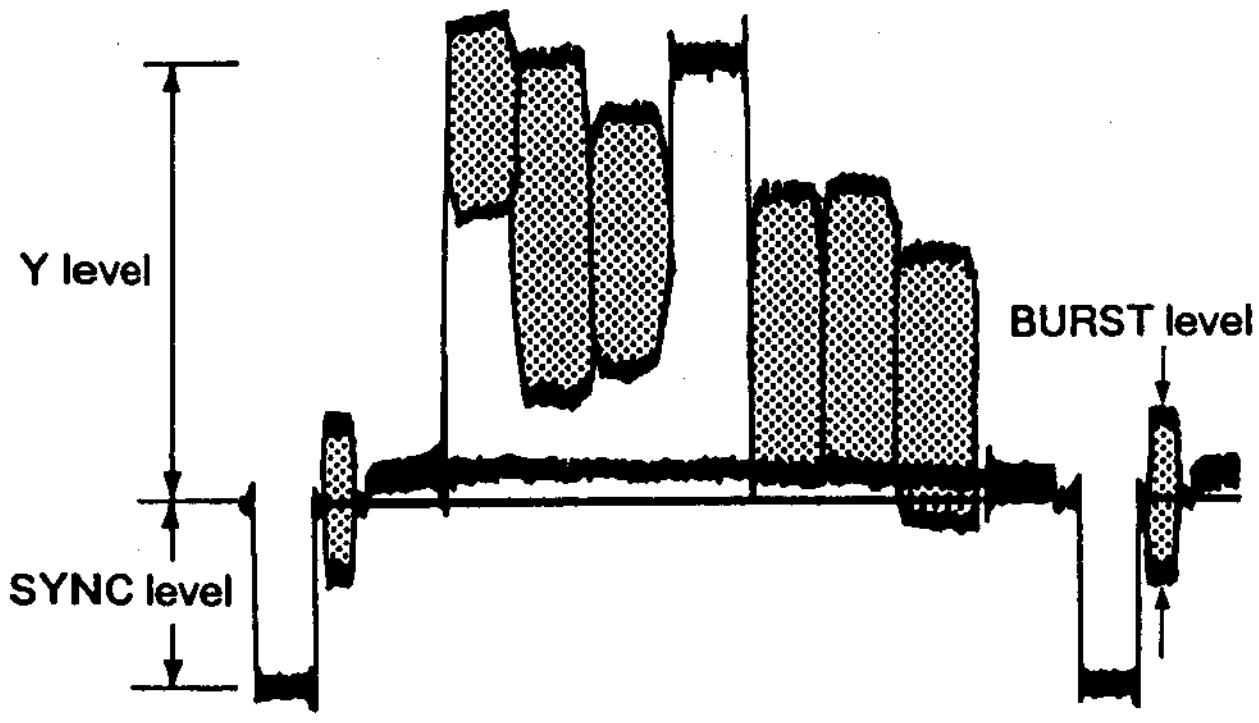

Fig. 7-19.

26. Title Color Reproduction Adjustment

Subject	All black (Cover the lens with a black cap)
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	D
Adjustment Address	14 (BLU R–Y), 15 (BLU B–Y), 16 (GRN R–Y), 17 (GRN B–Y), 18 (CYN R–Y), 19 (CYN B–Y), 1A (RED R–Y), 1B (RED B–Y), 1C (VIO R–Y), 1D (VIO B–Y), 1E (YEL R–Y), 1F (YEL B–Y)
Specified Value	Each title color luminance point should settle within each color reproduction frame.

Note: For details on the page D address list, refer to "Service mode" in "Video Section Adjustments".

Adjusting method:

1) Set data: 01 to page: 6, address: 00.
(Camera adjustment mode 1 setting)
2) Release the protect of page D.
Page: 1, address: 00, data: 01
3) Press the superimpose button "memory".
4) Use the "color/mode" button to change the title color to "blue".
5) Change the data of addresses 14 and 15 of page D, and and settle the blue luminance points within the blue (B) color reproduction frame.
Note: Be sure to press the PAUSE button of the adjusting remote control unit before changing the addresses. If not, the new data will not be written to the memory.
6) Adjust for green (addresses 16, 17), cyan (addresses 18, 19), red (addresses 1A, 1B), violet (addresses 1C, 1D) and yellow (addresses 1E, 1F) in the same way.

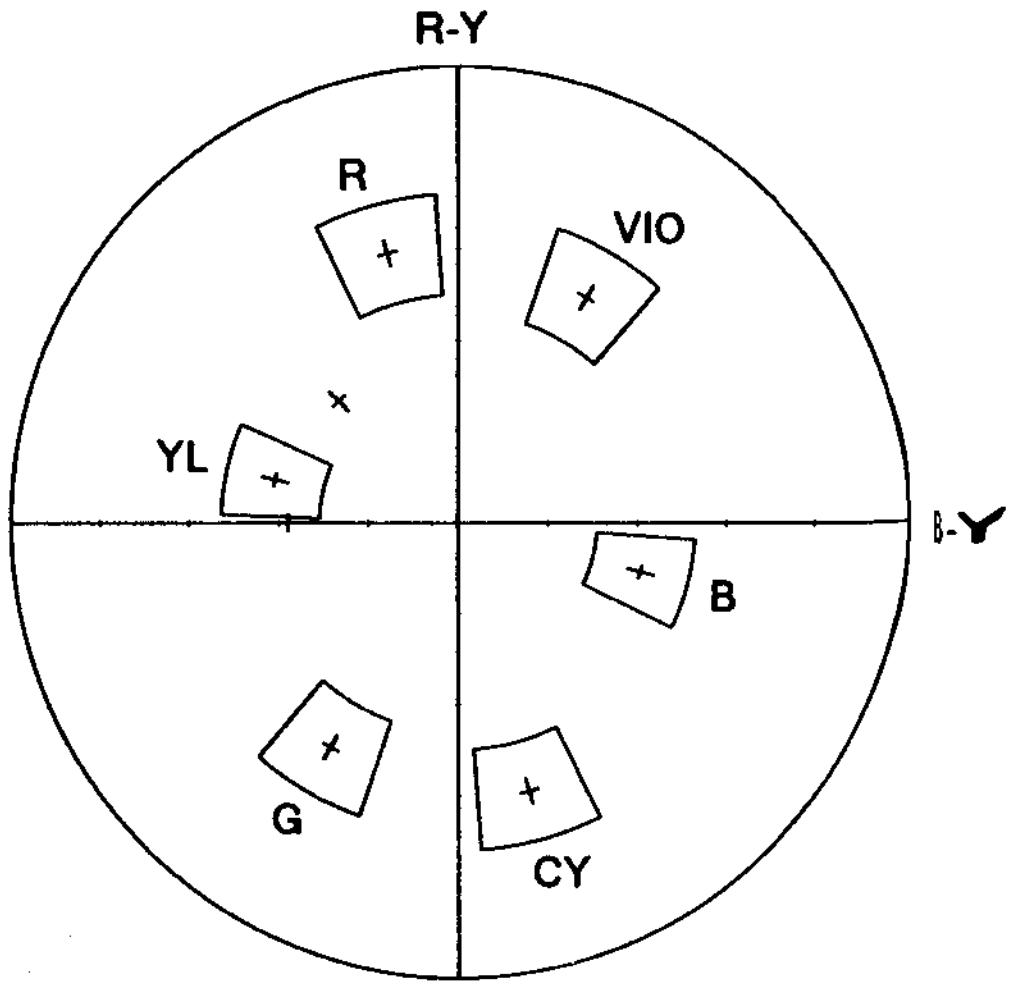

Fig. 7-20.

7-3. ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENTS

7-3-1. Horizontal Slant Adjustment

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section
Specified Value	Refer to Fig. 7-21.

Adjusting method:

1) Adjust RV504 (BRIGHT) so that the CRT can be seen easily and clearly.
2) Loosen the DY (deflection yoke) tightening nut.
3) Rotate DY, and adjust the image so that it is horizontal.
4) Tighten the DY tightening nut.
   (Do not tighten it too tightly.)

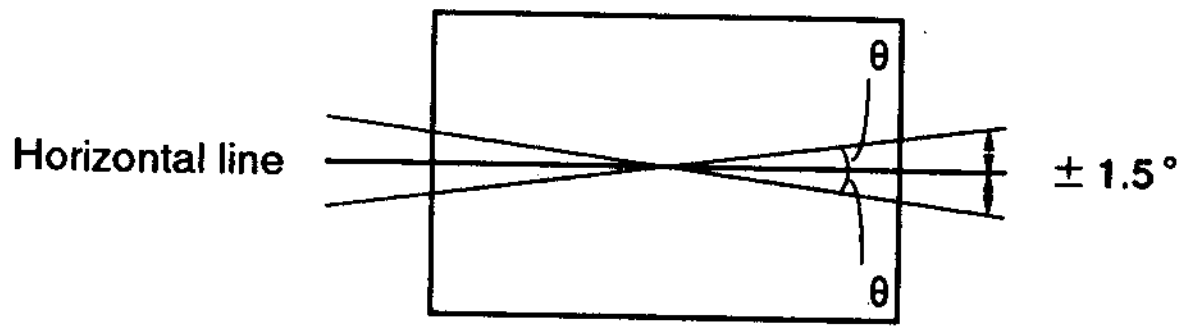

Specified value: The image should be within ± 1.5° of the horizontal line.

Fig. 7-21.

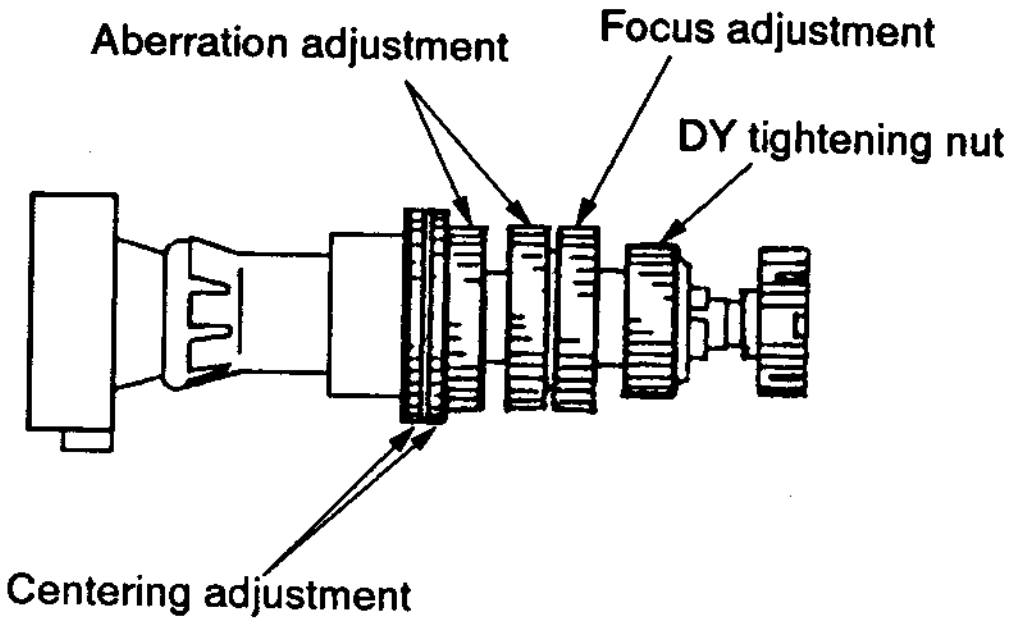

Fig. 7-22.

7-3-2. Centering Adjustment

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section
Specified Value	Refer to Fig. 7-23.

Adjusting method:

1) Use the centering adjustment ring and adjust so that the left, right, top, and bottom sides of the display are uniform. (Refer to Fig. 7-22.)
   Note: As the centering position changes due to earth magnetism, rotate it 360 ° in the horizontal direction, and adjust with the center section of the modifying position.

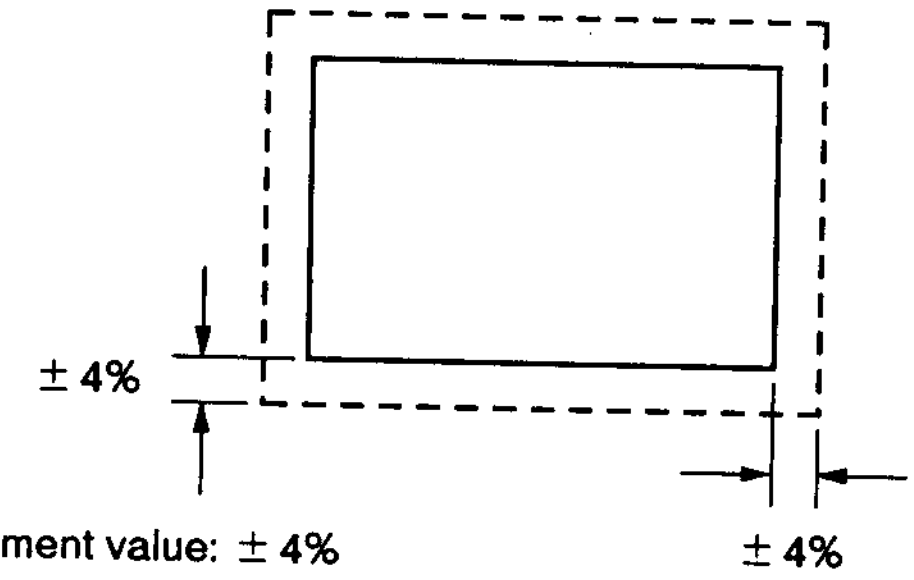

Adjustment value: ± 4%

Fig. 7-23.

7-3-3. Focus Adjustment

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section

Adjusting method:

1) Adjust the focus ring to obtain the optimum focus.
   (Refer to Fig. 7-22.)

7-3-4. Aberration Adjustment

Model	E-E
Signal	Dot pattern
Specified Value	Refer to Fig. 7-24.

Adjusting method:

1) Adjust the aberration adjustment ring so that the tracing of the dot becomes less than twice the diameter of the dot, or the fan aberration becomes less than the diameter of the dot.
2) If the centering becomes displaced here, perform the centering adjustment from the beginning again.

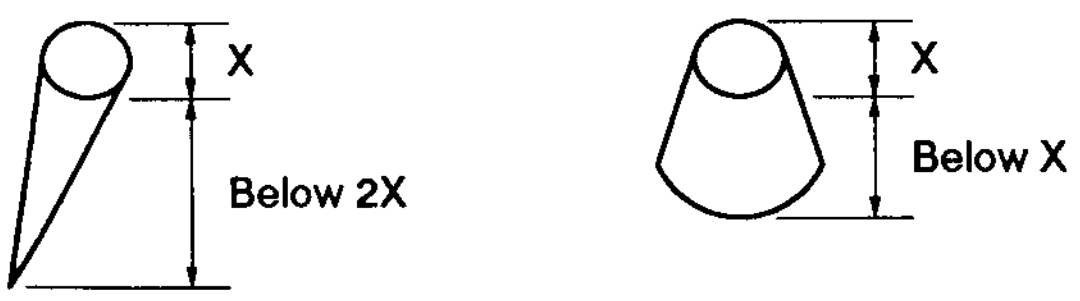

Fig. 7-24.

7-3-5. Horizontal Oscillation Frequency Adjustment (VF-42P Board)

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP)
Measurement Point	Positive pole terminal of C516
Measuring Instrument	Digital voltmeter or oscilloscope (DC range)
Adjustment Element	RV501
Specified Value	2.60 ± 0.05 Vdc

Adjusting method:

1) Adjust to 2.60 ± 0.05 Vdc using RV501.

7-3-6. Horizontal Amplitude Adjustment (VF-42P Board)

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section
Adjusting Element	C504
Specified Value	6 ± 2%

Adjusting method:

1) Rotate RV502, and adjust the top and bottom sides of the monoscope image to the top and bottom edges of the display.
2) Rotate RV504 so that the brightness is the normal level.
3) Adjust the pattern (A) of the H size adjustment capacitor (C504) to "short" or "open", so that the horizontal direction over scan becomes 6 ± 2% (Left and right totals). (Refer to Fig. 7-26.)

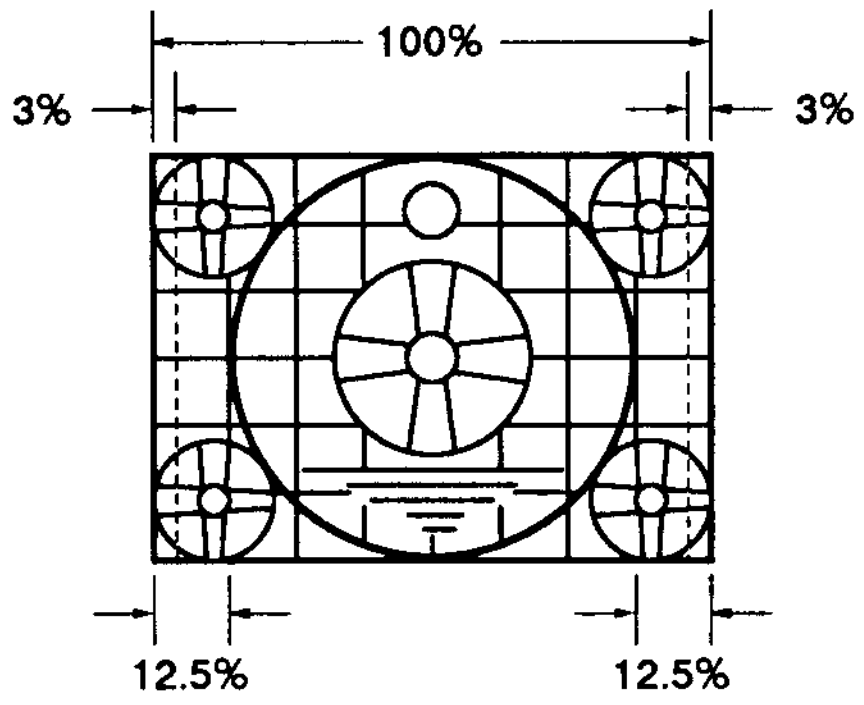

Fig. 7-25.

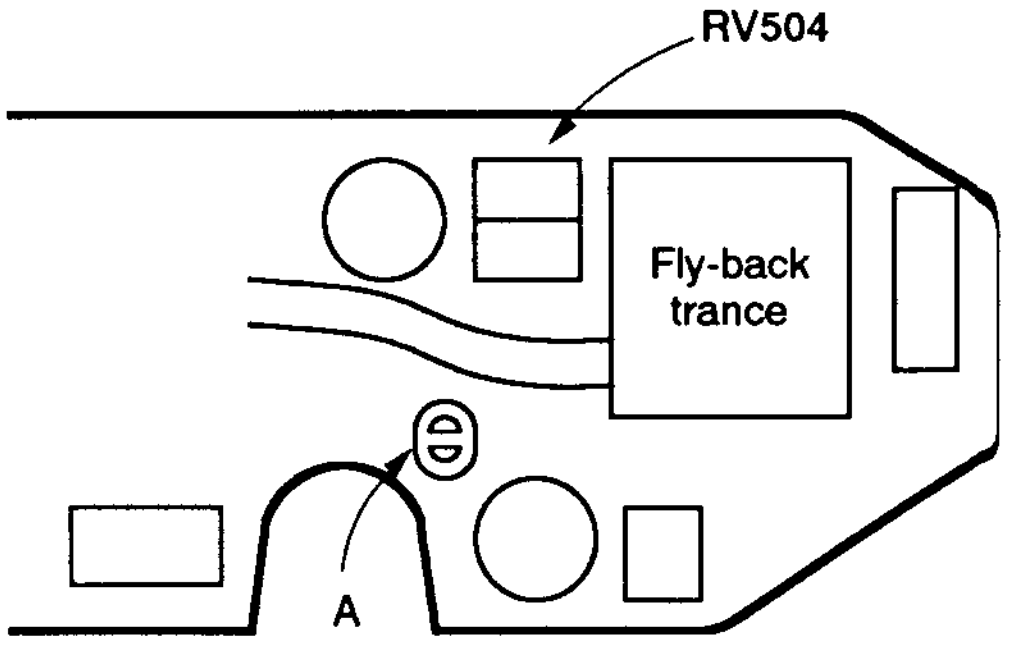

VF-42P board (section side)

Section A	Size H
Open	Small
Short	Big

Fig. 7-26.

7-3-7. Vertical Amplitude Adjustment (VF-42P Board)

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section
Adjusting Element	RV502
Specified Value	5 ± 2%

Adjusting method:

1) Adjust RV502 so that the vertical direction over scan becomes 5 ± 2% (Top and bottom totals).

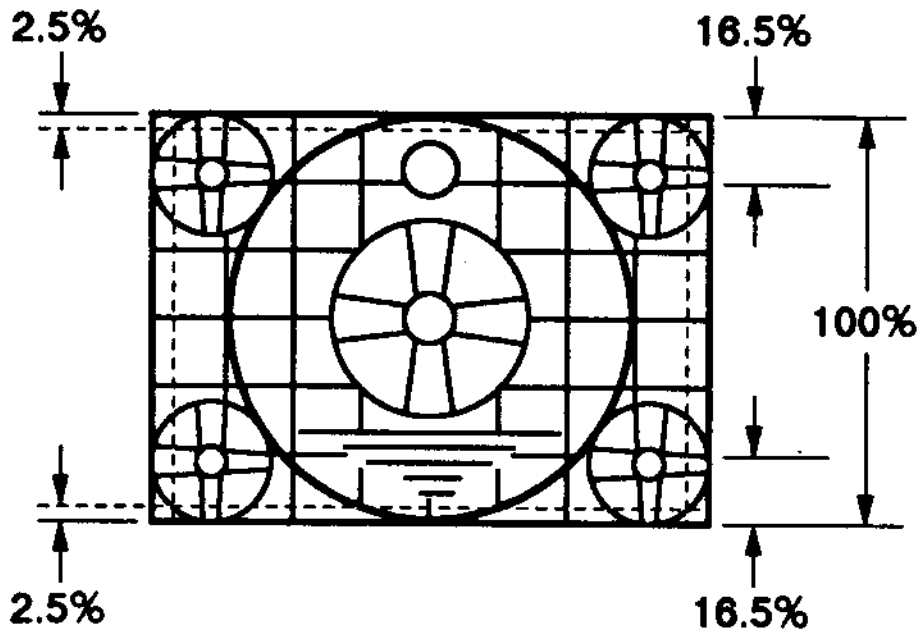

Fig. 7-27.

7-3-8. Brightness, Contrast Adjustments (VF-42P Board)

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section
Adjusting Element	Brightness: RV504 Contrast: RV503

Adjusting method:

1) Rotate RV504 and RV503 alternately, and adjust so that the bright/dark sections of the gray scale are displayed correctly. (The bright section should be unsatisfactory till the cross hatch appears vague in the monoscope circle. The dark section should be unsatisfactory till the darkest section and the second darkest section of the gray scale cannot be differentiated.)

7-3-9. Horizontal Amplitude, Vertical Amplitude, Focus Check

"7-3-6. Horizontal Amplitude Adjustment" and "7-3-7. Vertical Amplitude Adjustment" should both satisfy the specified values. If not, perform the adjustments from the beginning again. In this case, perform [7-3-8. Brightness, Contrast Adjustments] again. Moreover, check the focus, and if it found to be vague, perform "7-3-3. Focus Adjustment" and "7-3-4. Aberration Adjustment".

7-4. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS

DD-47P BOARD (COMPONENT SIDE)

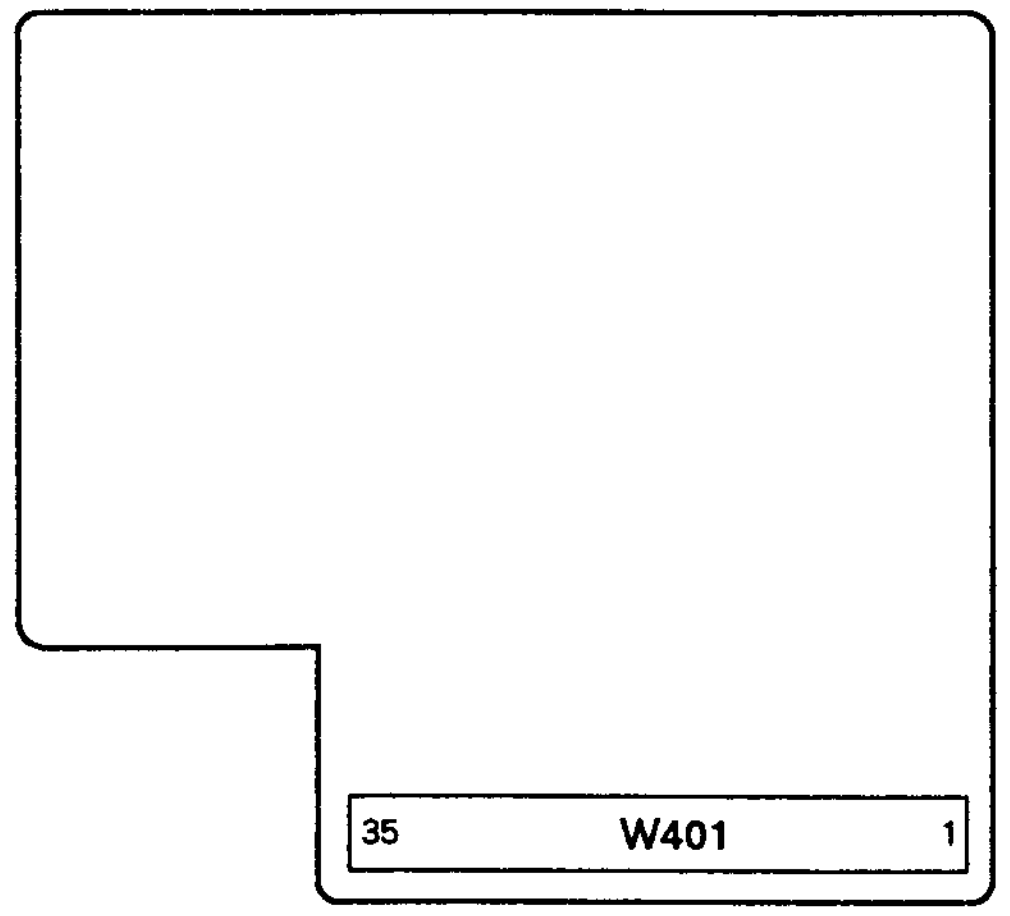

VC-112P BOARD (CONDUCTOR SIDE)

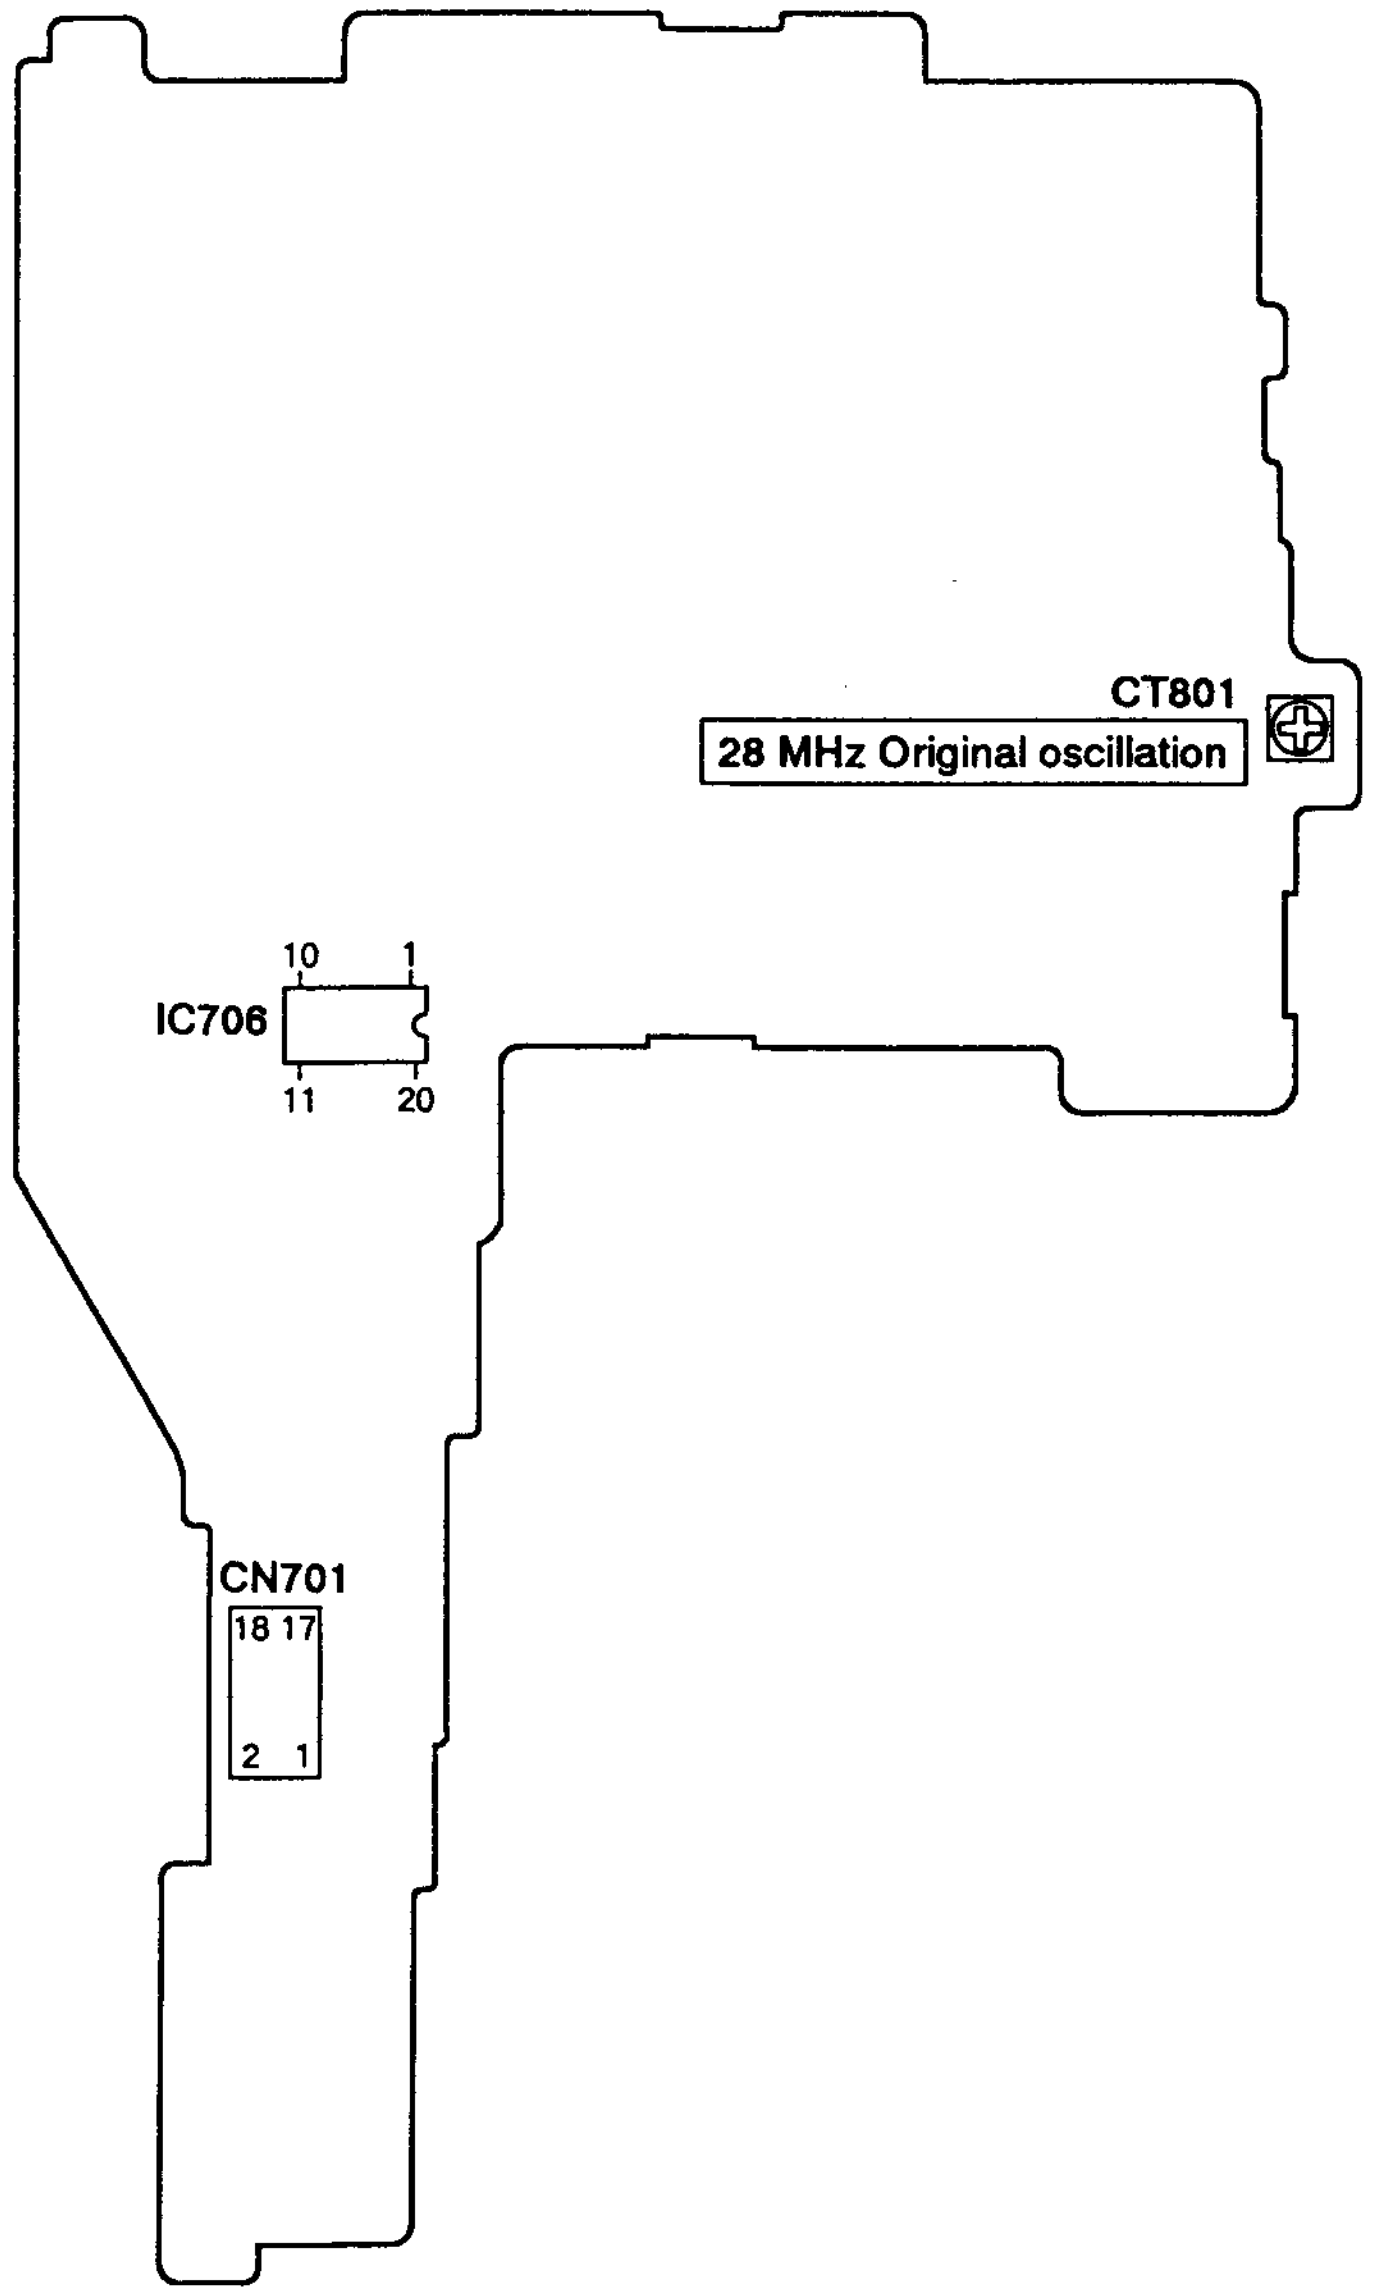
CT801
28 MHz Original oscillation
IC706
10
1
11
20
CN701
18 17
2 1

VF-42P BOARD (COMPONENT SIDE)

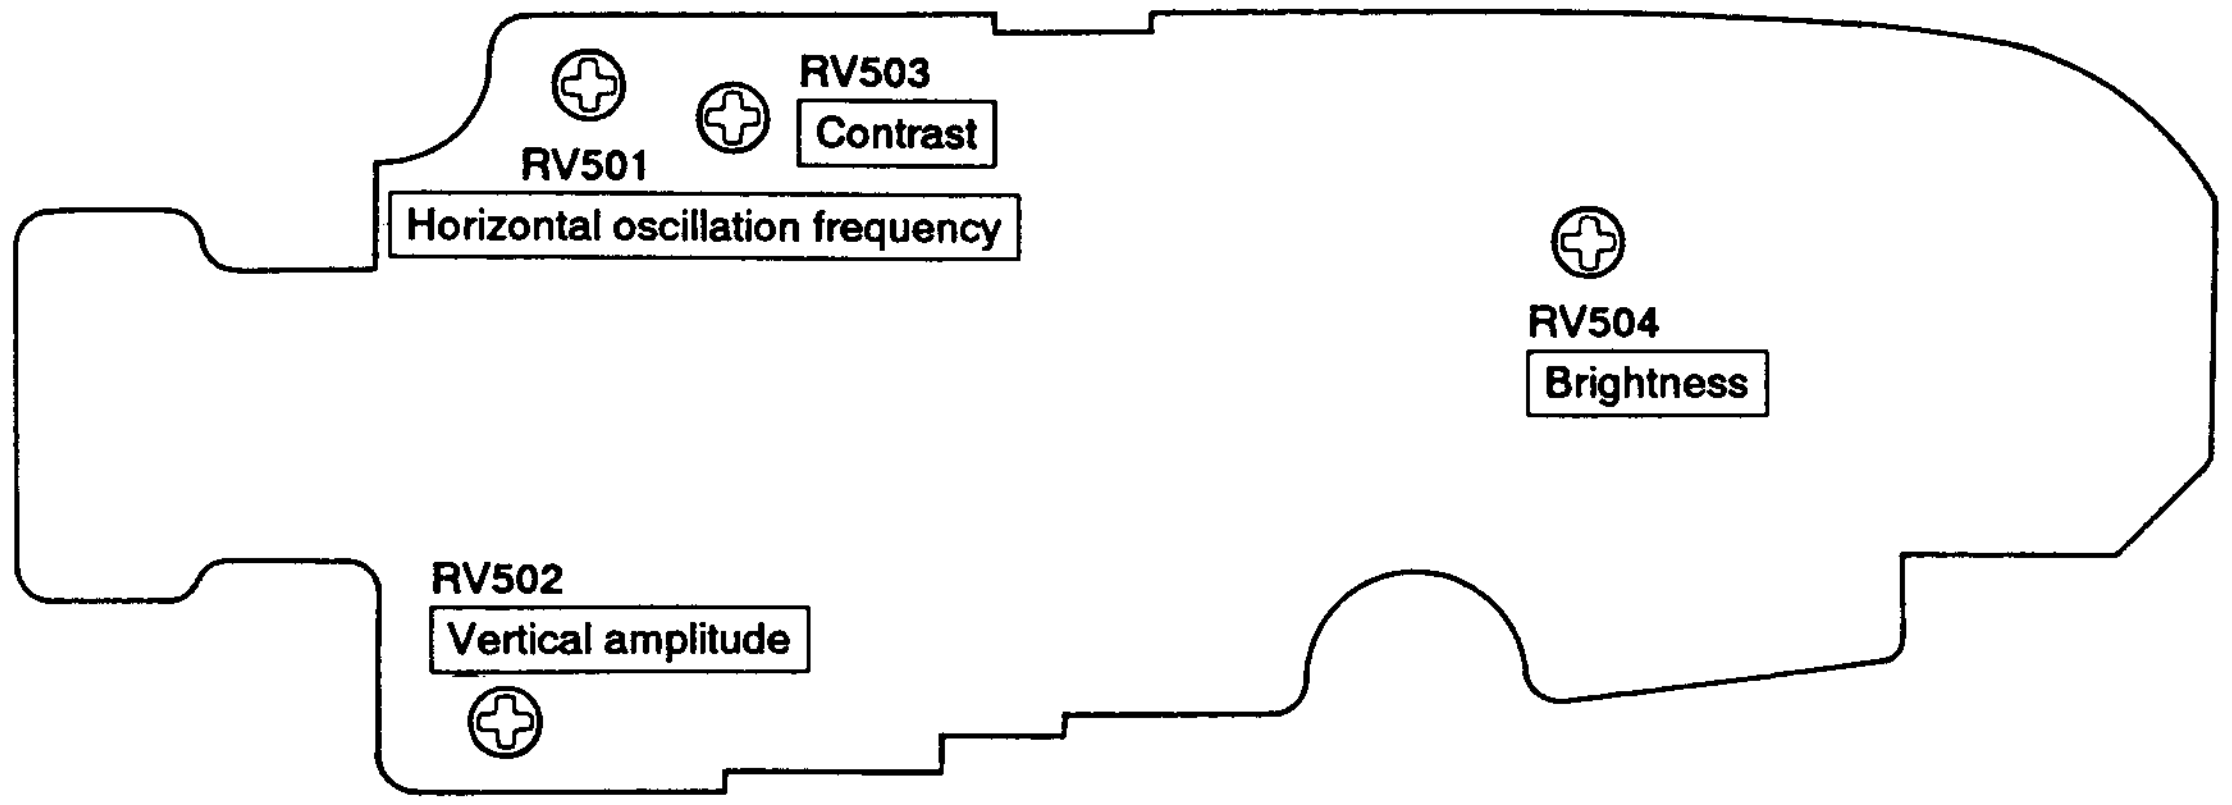
RV503
Contrast
RV501
Horizontal oscillation frequency
RV504
Brightness
RV502
Vertical amplitude

VF-42P BOARD (CONDUCTOR SIDE)

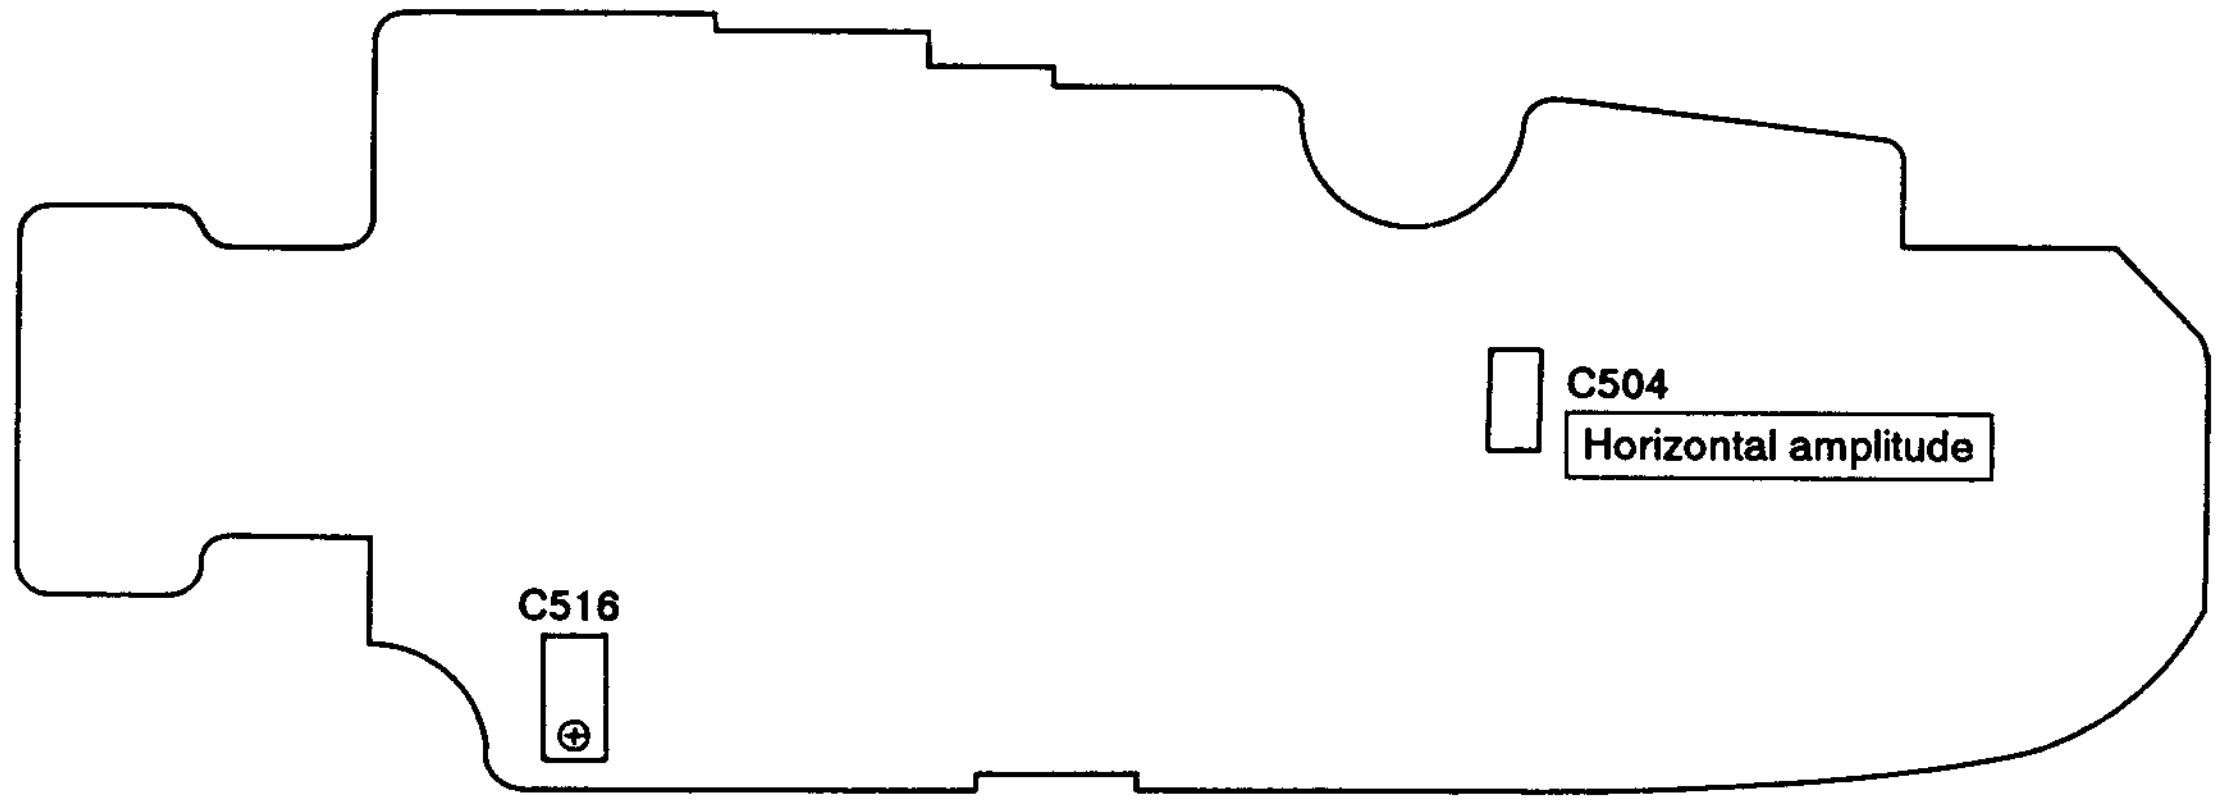
C504
Horizontal amplitude
C516

SECTION 8
MECHANICAL SECTION ADJUSTMENTS

Mechanical Section Adjustments

For details on the adjustments and checks of mechanical section and the mechanical parts, refer to the separate volume-"8 MM Video Mechanical Section Adjustment Guide II FL mechanism (Q mechanism)".

8-1. OPERATING WITH THE CASSETTE COMPARTMENT HOLDER ASSEMBLY REMOVED (Refer to Fig. 8-1.)

1. Loading

1) Refer to "2. Removal", and supply the power with the external section removed (however, leave the LJ-9P board connected so that the adjusting remote control unit can be connected.). (So that the mechanical deck section can be operated.)
2) Connect the adjusting remote control unit, and turn ON the HOLD switch.
3) Select page: 1, address: 00, and set data: 01.
(Release of the protect)
4) Select page: D, address: 01, and set data: 01.
(Test mode 1 setting)
5) Press the PAUSE button of adjusting remote control unit.
6) Turn off the HOLD switch of the adjusting remote control unit. (The adjusting remote control unit can be disconnected after this.)
7) The unit will be set into the loading mode when the lock board release arm ① is pressed in the direction of the arrow.
(To set the unit into the record mode, hold the push switch ② in place with the cohesion tape ③ before performing this operation.)
8) After completing all operations, be sure to perform "5. Processing after completing operations".

2. Setting the unit into the playback condition

1) Perform steps 1) to 7) of "1. Loading".
2) Press the playback button.

3. Setting the unit into the recording condition

1) Perform steps 1) to 7) of "1. Loading".
2) Press the record switch.
Note: Refer to "VIDEO SECTION ADJUSTMENT" to set the models without the record switch into the record condition.

4. Ejecting

1) Press the EJECT button.

5. Processing after completing operations

1) Connect the adjusting remote control unit, and turn on the HOLD switch.
2) Select page: 1, address: 00, and set data: 01.
3) Select page: D, address: 01, and set data: 00.
4) Press the PAUSE button of the adjusting remote control unit.
5) Remove the power supply from the unit.

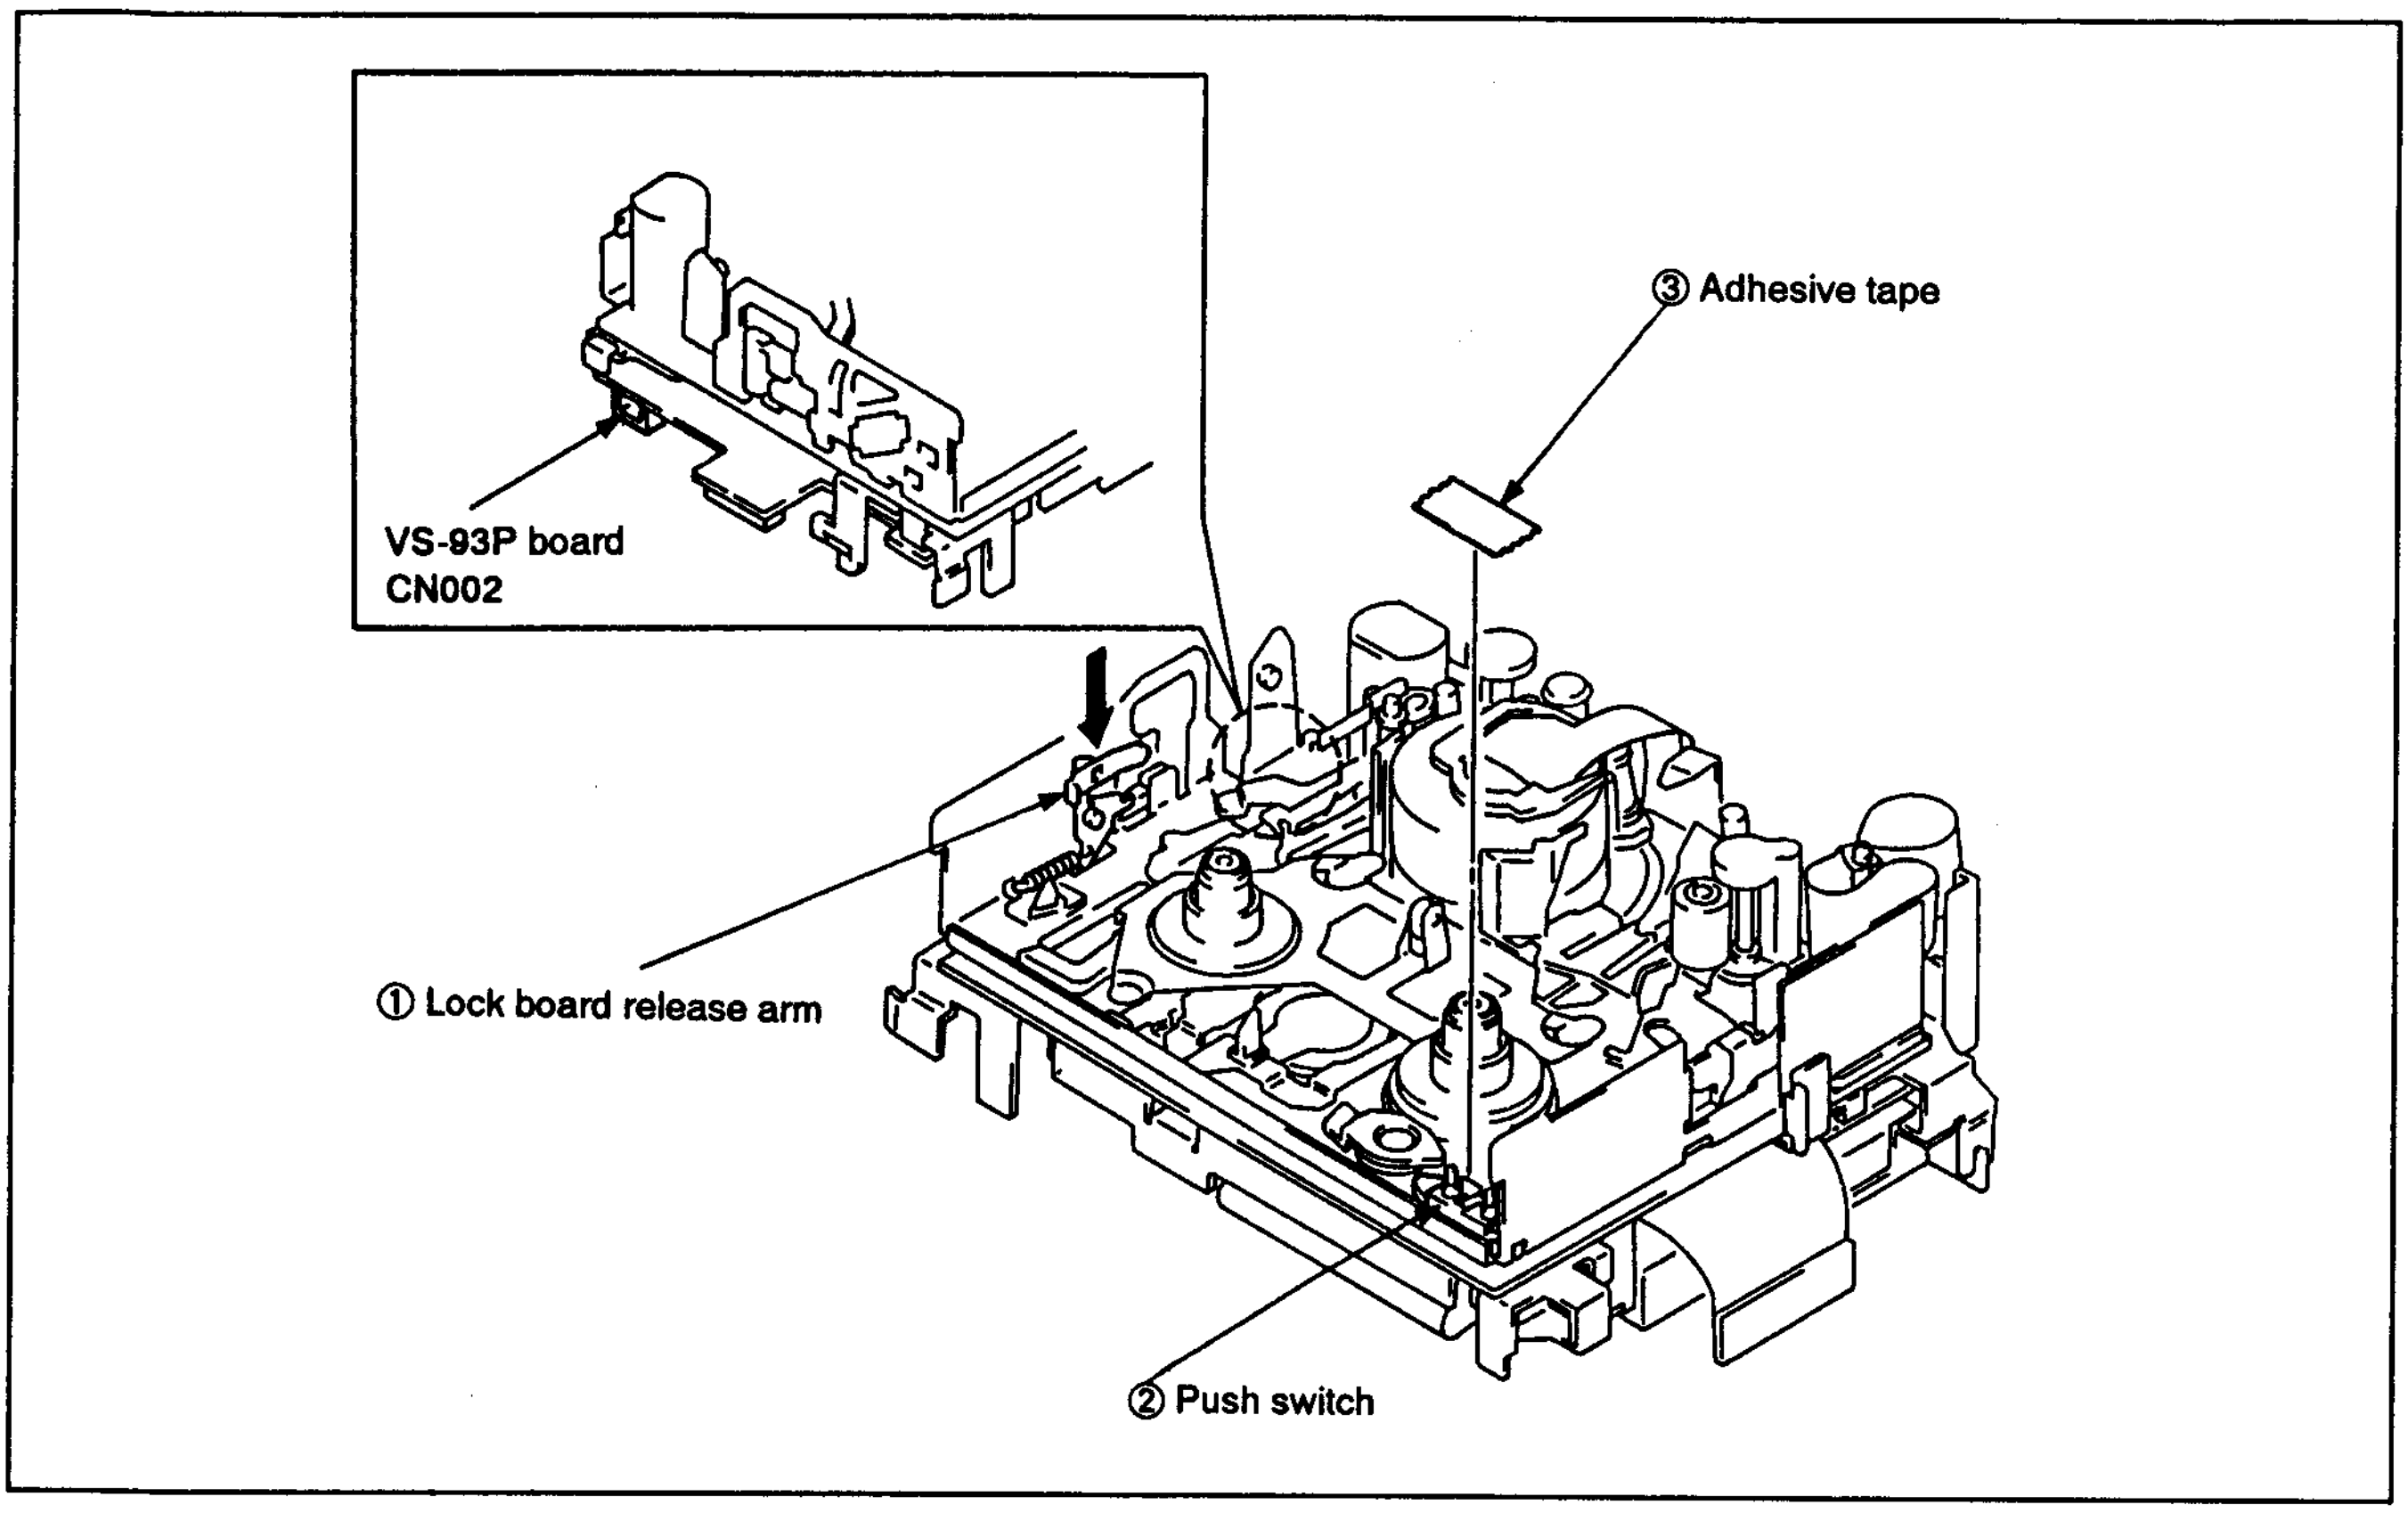
③ Adhesive tape
VS-93P board
CN002
① Lock board release arm
② Push switch

Fig. 8-1.

8-2. TAPE PATH ADJUSTMENT

1. Preparations for adjustment

1) Clean the tape path face (tape guide, drum, capstan shaft, pinch roller).
2) Connect the adjusting remote control unit to the remote terminal (LJ-9P board J971).
3) Turn on the HOLD switch of the adjusting remote control unit.
4) Select page: 1, address: 00, and set data: 01.
   (Release of the protect)
5) Select page: D, address: 01, and set data: 03.
   (Set the track shift mode. The adjusting remote control unit can be disconnected if its PAUSE button is pressed. In this case, be sure to perform "8-1-5. Processing after completing operation" after completing adjustments.)
6) Connect the oscilloscope.
   Channel 1-VS-93P board Pin ⑭ of CN002
   External trigger-VS-93P board Pin ⑨ of CN002
   (Connect the oscilloscope via the measuring pin for the video section (J-6082-140-A).)
7) Playback the alignment tape (WR5-1CP) for tracking.
8) Confirm that the SP/LP switch is SP position.
9) Check that the RF waveform of the oscilloscope is flat at both the entrance and the exit sides.
   If not, perform the following adjustment.
10) Perform "8-1-5. Processing after completing operations", after completing adjustments.

VS-93P board CN002

1	N.C
2	N.C
3	RF GND
4	CAP FG
5	REC 1B
6	REC 2B
7	REC 1A
8	REC 2A
9	RF SWP
10	$\overline{\text{1/2 RF SWP}}$
11	PB RF CH1
12	PB RF CH2
13	RF GND
14	PB RF OUT

SECTION 9

VIDEO SECTION ADJUSTMENT

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 262.

9-1. PREPARATIONS BEFORE ADJUSTMENT

The following adjusting instruments are used for adjusting the video section.

9-1-1. Equipments to be used

1) TV monitor
2) Oscilloscope: 2 phenomena, band 30 MHz or wider, with delay mode. (Use a 10:1 probe unless specified otherwise.)
3) Frequency counter
4) Pattern generator with video output terminal
5) Digital voltmeter
6) Audio generator
7) Audio level meter
8) Audio distortion meter
9) Audio attenuater
10) Regulated power supply
11) Alignment tape
    For tracking adjustment (WR5-1CP)
        Part Code: 8-967-995-07
    For video frequency characteristics adjustment
    (WR5-7CE)
        Part Code: 8-967-995-18
    (WR5-6C)
        Part Code: 8-967-995-17
    For checking operations
    (WR5-4CL)[Note 1]
        Part Code: 8-967-995-56
    (WR5-5CSP)[Note 2]
        Part Code: 8-967-995-47
    (WR5-8CSE)
        Part Code: 8-967-995-48
    For checking AFM stereo operations (WR5-9CS)
        Part Code: 8-967-995-28
    Note: The following alignment tapes can also be used.
        1) WR5-3CL (8-967-995-36)
        2) WR5-4CSP (8-967-995-46)
12) Remote control unit for adjustment (J-6082-053-B)
13) JK-3100 board extension cord (10P, 1 mm)
        Part Code: J-6082-064-A
14) AU-135P board, Cabinet (R) extension cord (30P, 0.8 mm)
        Part Code: J-6082-135-A
15) Measuring pin for video section
        Part Code: J-6082-140-A

9-1-2. Connecting the equipments

Unless specified otherwise, connect the measuring instruments as shown in Fig. 9-1 and perform the adjustments.

- Camera/video (or player) power switch ·······Position of the video (or player)
- Connect the adjusting remote control unit to the remote terminal (LJ-9P board J971).

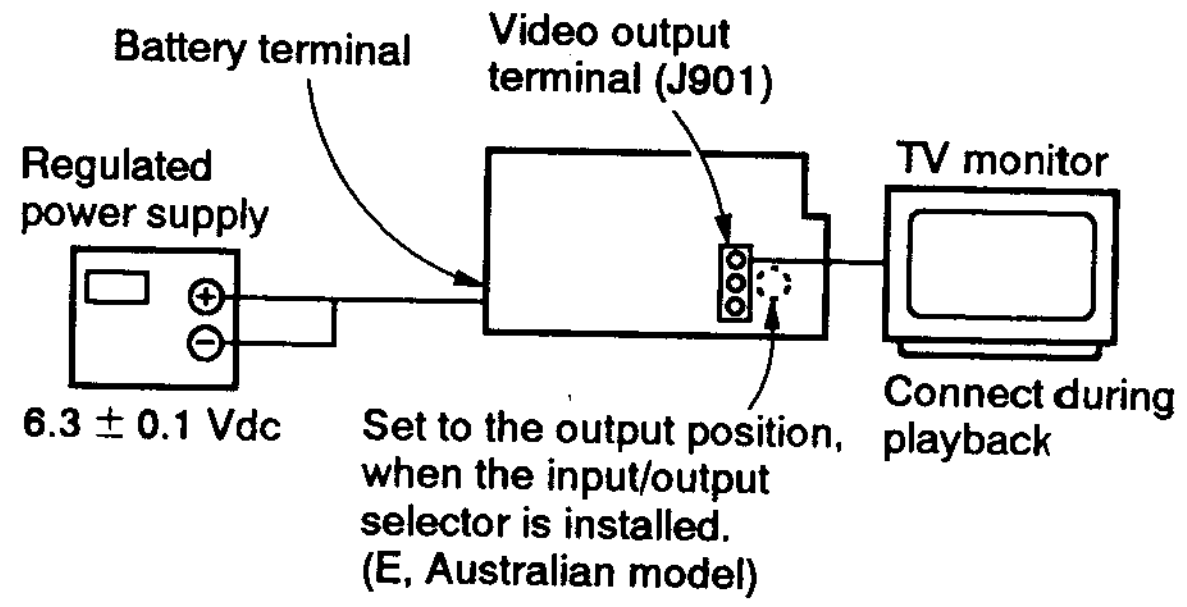
Battery terminal
Video output terminal (J901)
Regulated power supply
TV monitor
6.3 ± 0.1 Vdc
Set to the output position, when the input/output selector is installed. (E, Australian model)
Connect during playback

Connect the pattern generator as follows.
Connect pin ⑩ of CN101 to GND with a jumper wire.

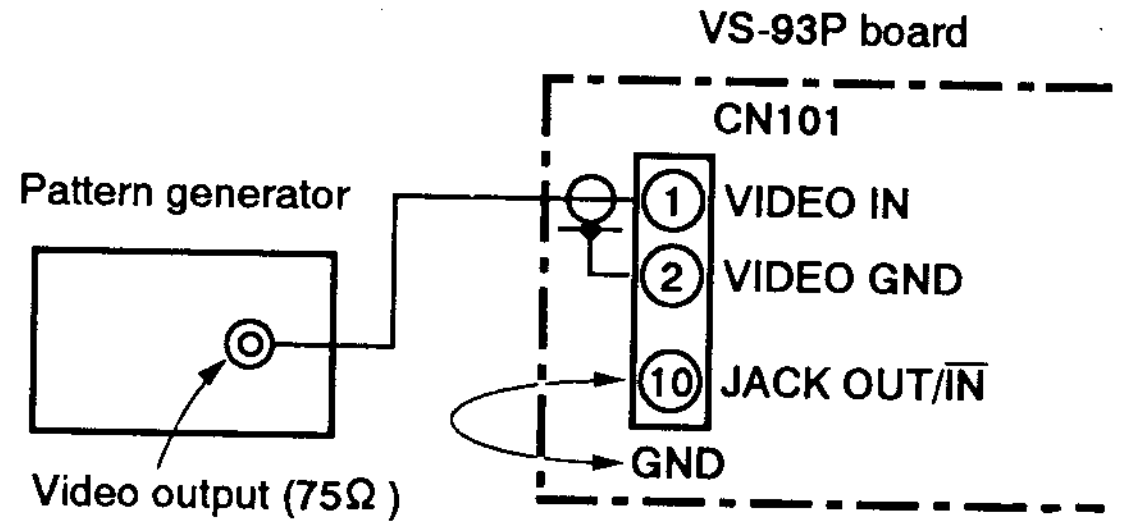
VS-93P board
CN101
Pattern generator
① VIDEO IN
② VIDEO GND
⑩ JACK OUT/IN
GND
Video output (75Ω)

Fig. 9-1.

9-1-3. How to Set the REC Mode in the Model without REC Switch

1. REC key forbidden accept mode cancel
    1. Connect the adjustment remote controller to the REMOTE terminal.
    2. Turn on the power.
    3. Turn on the HOLD switch of the adjustment remote controller.
    4. Select the page: 1 address: 00, and set the data to 01. (Protect mode cancel)
    5. Select the page: D address: 02, and set the data to 83. (REC key forbidden accept mode cancel)
    6. Press PAUSE button on the adjustment remote controller. (Write to the non-volatile memory)

The REC key is accepted through the above procedure. The adjustment remote controller may be removed, hereafter.

2. REC mode setting
    1. Connect Pin ⑦ of CN502 (KEY IN 2) and Pin ⑩ of CN502 (KEY OUT 0) on LC-40P board with a jumper wire until the VTR is set to REC mode.

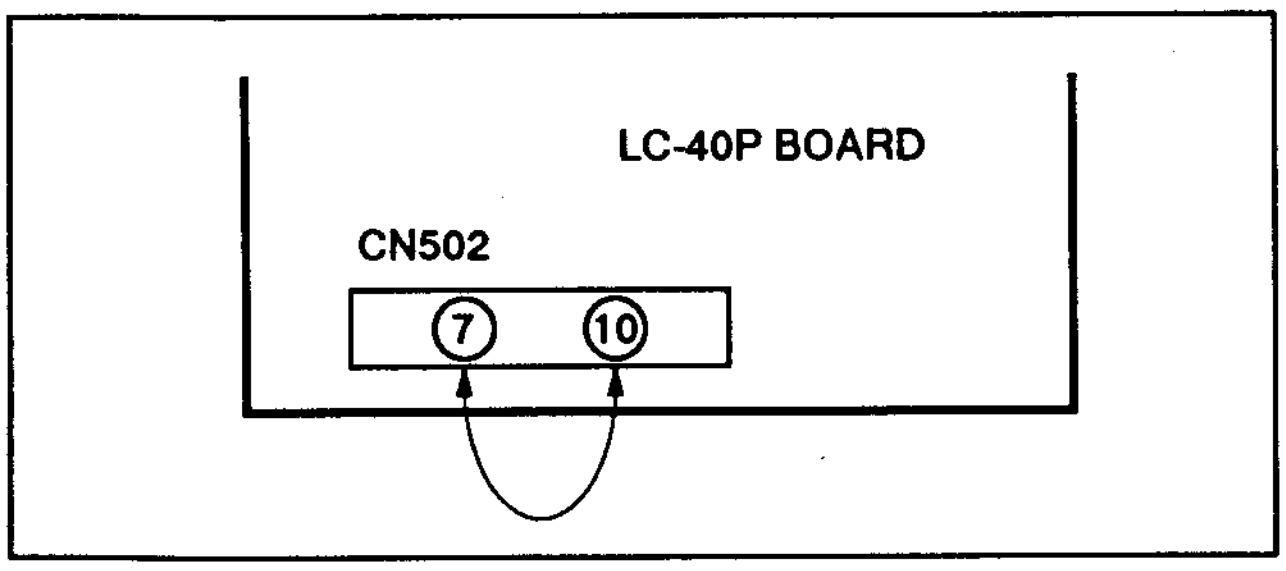

Fig. 9-2.

3. Procedure after completed the adjustment
   Be sure to return the mode to REC key forbidden accept mode after adjustment.
    1. Connect the adjustment remoter controller to the REMOTE terminal.
    2. Turn on the power.
    3. Turn on HOLD switch of the adjustment remote controller.
    4. Select the page: 1 address: 00, and set the data to 01. (Protect mode cancel)
    5. Select the page: D address: 02, and set the data to 82. (Setting of the REC key forbidden accept mode)
    6. Press PAUSE button on the adjustment remote controller. (Write to the non-volatile memory)

9-1-4. Precautions upon adjustment

The EVF (Electronic viewfinder) is not required for adjusting the video section.
Remove the following connector when removing the EVF section.

1. VS-93P board CN102 (6 pin)

The front panel section assembly is not required for adjusting the video section. Remove the following connectors when removing the front panel section assembly.

1. MA-143P board CN553 (5 pin)
2. MF-175P board CN996 (14 pin)

The cabinet (R) is required for adjusting the video section. Use the extension cord (J-6082-135-A) when adjusting the video section.

Connect the cabinet (L) (JK-3100 board) with an extension cord (J-6082-064-A).

9-1-5. Connectors for adjustments (VS-93P board CN002)

Some video section adjustment points are concentrated on the VS-93P board CN002. Connect the measuring instrument via a measuring pin jig (J-6082-140-A).

Pin No.	Signal Name	Pin No.	Signal Name
1	N.C	2	N.C
3	RF GND	4	CAP FG
5	REC 1B	6	REC 2B
7	REC 1A	8	REC 2A
9	RF SWP	10	$\overline{\text{1/2 RF SWP}}$
11	PB RF CH1	12	PB RF CH2
13	RF GND	14	PB RF OUT

Table 9-1.

9-1-6. Set-up during Adjustment

As the video signal obtained from the pattern generator is used as an adjustment signal during electric adjustments, ensure that this video output signal is within the specification. Connect the oscilloscope to pin ① of CN101 on the VS-93P board, and check that the amplitude of the sync signal of the video signal is approximately 0.3V, the amplitude of the video section is approximately 0.7V, the amplitude of the burst signal is approximately 0.3V and flat, and that the level ratio of the burst signal and the [red] signal is 0.30: 0.66. The video signal (color bar) used for electric adjustments is shown in Fig. 9-3.

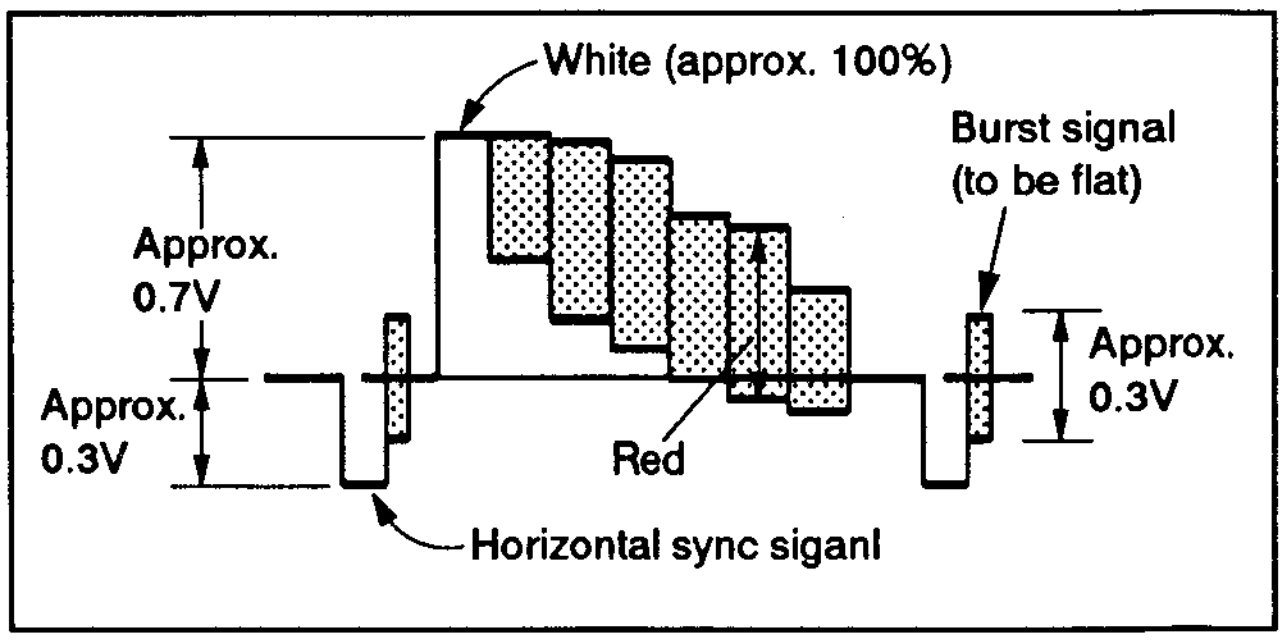

Fig. 9-3. Color bar signal of pattern generator

9-1-7. Alignment Tape

The following table lists alignment tapes which are available.
Use the tape specified in the signal column for each adjustment.

If the type of tape to be used for checking operations is not specified, use whichever type.

Name	Record-ing mode	Tape type	Tape speed	Recording contents		Usage
				Video area	PCM area	
Tracking WR5-1CP	L	MP	SP	CH2: Signal for 1 MHz tape path adjustment		Tape path adjustment Switching position adjustment
Video frequency characteristics WR5-6C	L	MP	LP	RF sweep: 0 to 10 MHz Marker: 1, 3.58, 5.5, 7 MHz		Frequency characteristics adjustment
Video frequency characteristics (Hi8 mode) WR5-7CE	E	ME	LP	RF sweep: 0 to 15 MHz Marker: 2, 4.5, 7, 8.5, 10 MHz		Frequency characteristics adjustment
Operation check (SP mode) WR5-5CSP	L	MP	SP	• Video signal Color bar 4 minutes Monoscope 4 minutes • Audio signal (AFM) 400 Hz 60% modulation	• Audio signal (PCM) Monoscope section 20 Hz 20 sec. 400 Hz 20 sec. 14 kHz 20 sec. } Color bar section Repeated 4 times 1 kHz 4 minutes	Checking operations
Operation check (LP mode) WR5-4CL	L	MP	LP	• Video signal Color bar 4 minutes Monoscope 4 minutes • Audio signal (AFM) 400 Hz 60% modulation		
Operation check (Hi8 SP mode) WR5-8CSE	E	ME	SP	• Video signal Color bar 4 minutes Monoscope 4 minutes • Audio signal (AFM) 400 Hz 60% modulation	• Audio signal (PCM) 400 Hz	
AFM stereo Operation check WR5-9CS	L	MP	SP	• Video signal Color bar 4 minutes Monoscope 4 minutes • Audio signal (AFM) Stereo section (color bar) Lch: 400 Hz, Rch: 1 kHz (L+R: 1.5 MHz ± 60 kHz DEV L–R: 1.7 MHz ± 30 kHz DEV) Bilingual section (Monoscope) MAIN: 400 Hz (1.5 MHz ± 60 kHz DEV) SUB: 1 kHz (1.7 MHz ± 30 kHz DEV)	• Audio signal (PCM) 400 Hz	AFM stereo Checking operations

Note: Recording mode

L ··············· Conventional mode
E ··············· hi8 (hi band) mode

Tape type

MP············· Particle type metal tape
ME············· Evaporated type metal tape

Table 9-2.

Fig. 9-4. shows the 75% color bar signals recorded on the alignment tape.

Note: Measure at the video output terminal (Terminated at 75 Ω)

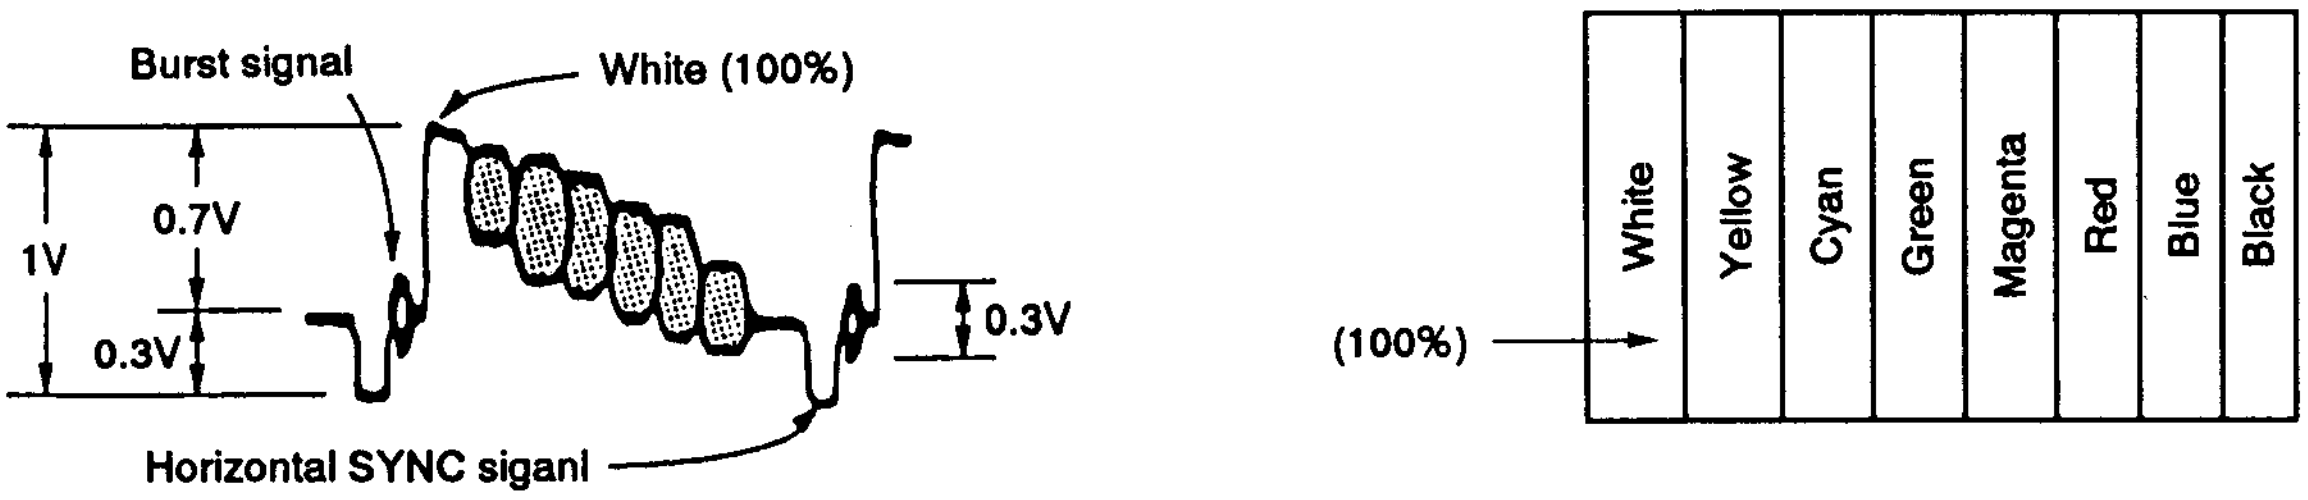
Burst signal
White (100%)
1V
0.7V
0.3V
0.3V
Horizontal SYNC siganl
(100%)
White
Yellow
Cyan
Green
Magenta
Red
Blue
Black

Color bar signal waveform

Color bar pattern

Fig. 9-4. Alignment tape color bar signal

9-1-8. Input/Output Level and Impedance

1. E, Australian, Tourist model

[I/O level and Impedance]

Video input/output phone jack
Input signal: 1 Vp-p, 75Ω unbalanced, negative sync

Audio input/output phone jack
Input level: –7.5 dBs (0 dBs=0.775 Vrms)
Input impedance: More than 47 kΩ
Output level: –7.5 dBs (at output impedance 47 kΩ)
Output impedance: More than 2.2 kΩ

2. AEP, UK model

[I/O level and Impedance]

Video output phone jack
Output signal: 1 Vp-p, 75Ω unbalanced, negative sync

Audio output phone jack
Specified output: –7.5 dBs
Output impedance: More than 2.2 kΩ

9-1-9. Service Mode

1. Setting the Service mode

The service mode consists of the adjustment mode which adjusts the EVR and the test mode which displays the condition of the unit.

The unit can be shifted into the test mode and adjustment mode by connecting the adjusting remote control unit (set the HOLD switch to the HOLD side).

Adjusting Remote Control Unit LCD Display

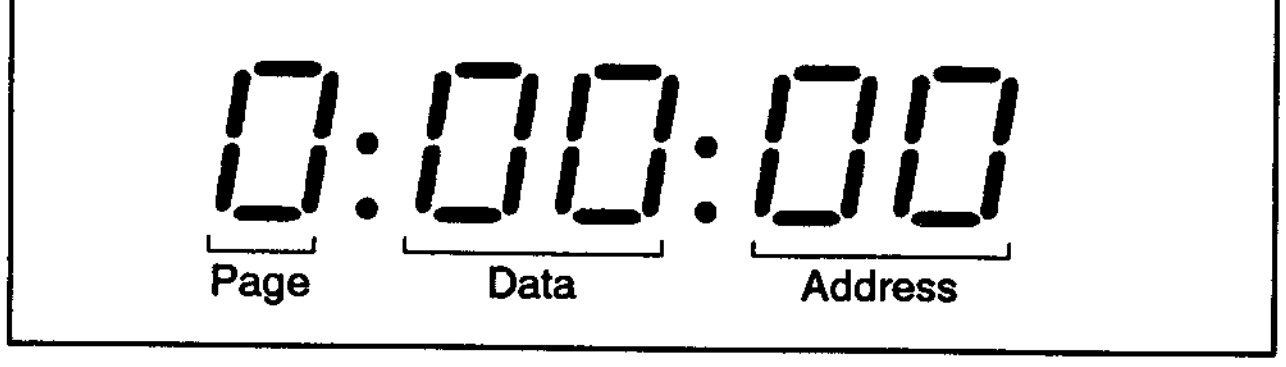

0:00:00
Page
Data
Address

(1) Service LANC memory map

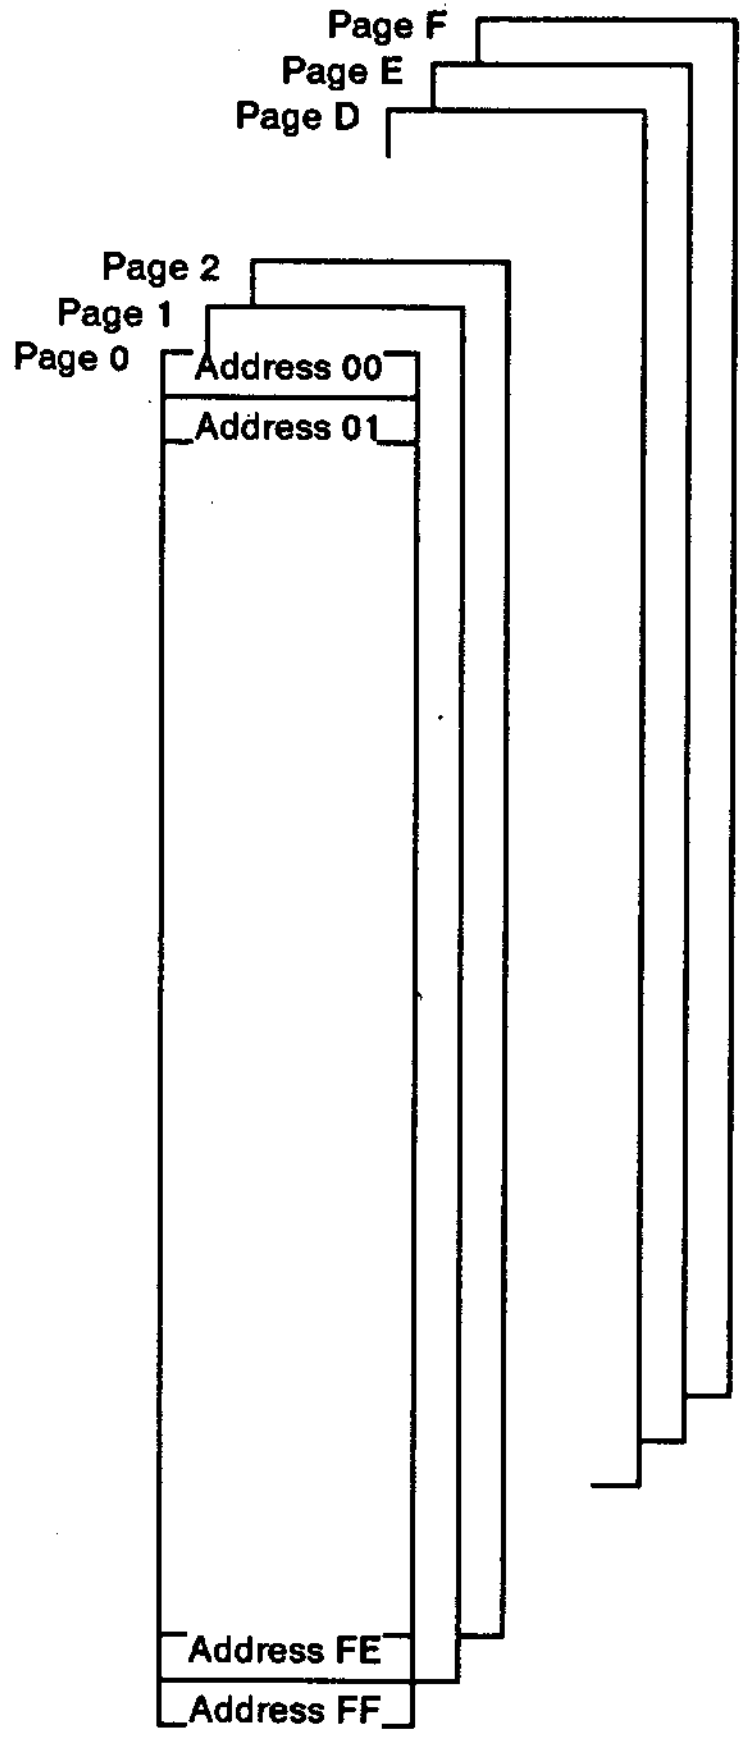

Page F
Page E
Page D
Page 2
Page 1
Page 0
Address 00
Address 01
Address FE
Address FF

Adjusting remote control unit RM-95 (J-6082-053-A)

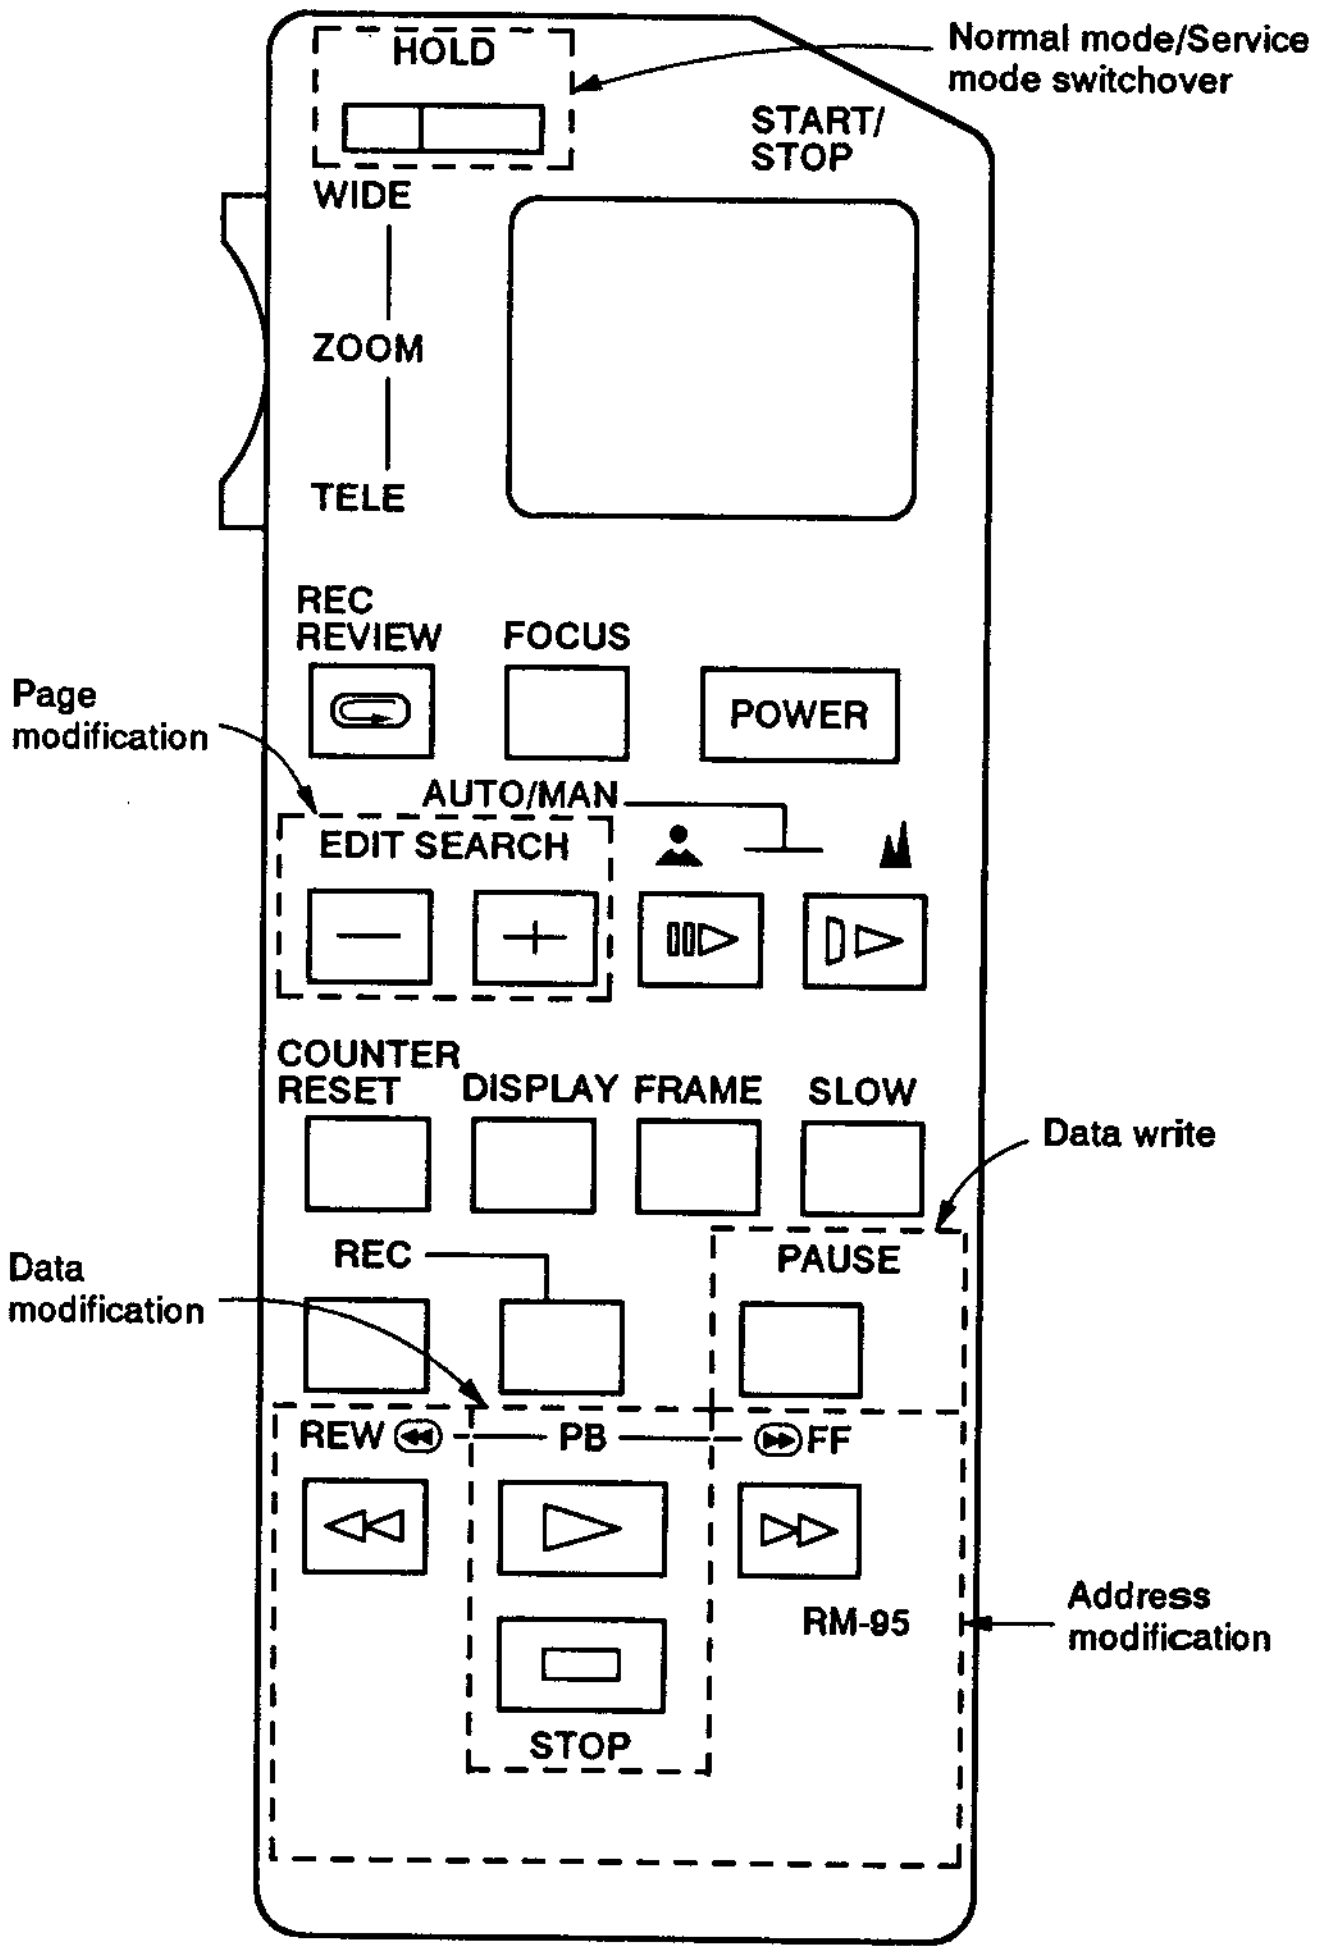

HOLD
Normal mode/Service mode switchover
START/ STOP
WIDE
ZOOM
TELE
REC REVIEW
FOCUS
POWER
Page modification
AUTO/MAN
EDIT SEARCH
COUNTER RESET
DISPLAY
FRAME
SLOW
Data write
Data modification
REC
PAUSE
REW
PB
FF
RM-95
Address modification
STOP

Page	Page allocation	Description
0	Not used	
1	Mode Control RAM, I/O	RAM and I/O interface data memory area required for operating the mode controller. Data is not held when the power is turned off because this area is not ROM.
2~4	Mechanical Control RAM, I/O	RAM and I/O memory area of the mechanical controller.
5	Not used	
6~8	Camera Control RAM, I/O	RAM and I/O memory area of the camera control.
9	Not used	
A	Camera Control RAM, I/O	RAM and I/O memory area of the camera control.
B, C	Not used	
D	VTR EE-PROM	ROM memory area of the VTR part. Data of this area is held by EE-PROM when the power is turned off. Releasing protect is required for changing data.
E	Not used	
F	Camera EE-PROM	ROM memory area of the camera part. Data of this area is held by EE•P•ROM when the power is turned off.

(2) Shifting to the Service Mode Using the Adjusting Remote Control Unit

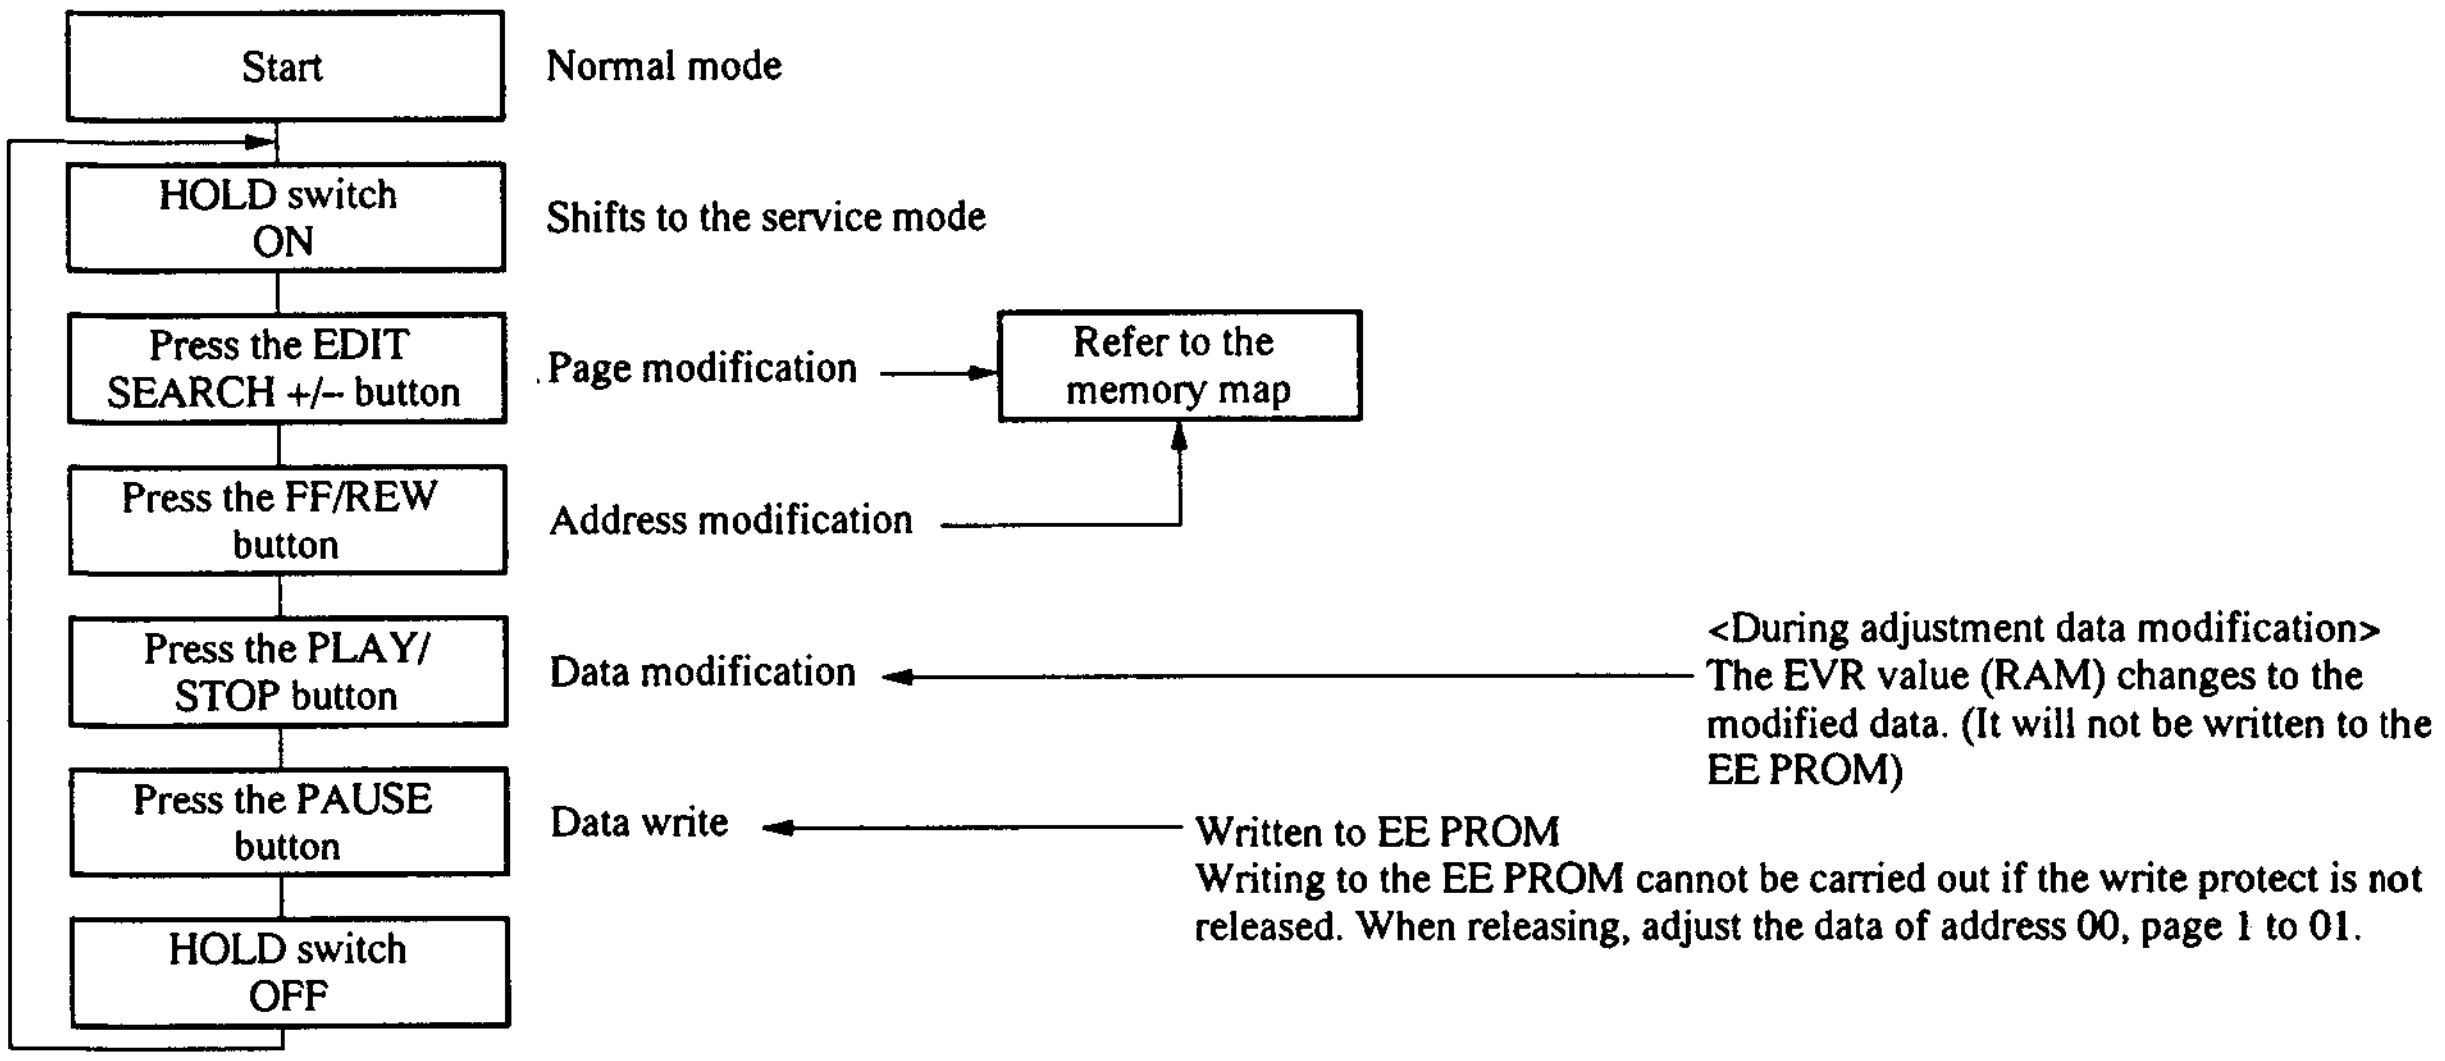
Start
Normal mode
HOLD switch ON
Shifts to the service mode
Press the EDIT SEARCH +/– button
Page modification
Refer to the memory map
Press the FF/REW button
Address modification
Press the PLAY/ STOP button
Data modification
Press the PAUSE button
Data write
HOLD switch OFF

<During adjustment data modification>
The EVR value (RAM) changes to the modified data. (It will not be written to the EE PROM)

Written to EE PROM
Writing to the EE PROM cannot be carried out if the write protect is not released. When releasing, adjust the data of address 00, page 1 to 01.

Command Name	**Command Function**	**Normal LANC command**
Page Up	Page +1	Edit Search +
Page Down	Page –1	Edit Search –
Direc Page Set	Sets the specified page	Event Clear
Address Up	Address +1	Fast Forward
Address Down	Address –1	Rewind
Data Up	Data +1	Play Back
Data Down	Data –1	Stop
Store	Write the data to the EE PROM. RAM	Pause

2. Types of Self-diagnostic Feature

MODE		Contents
TEST	Camera adjustment	Refer to Camera Adjustment
	Switching position adjustment	Refer to each adjustment page
	Battery DOWN adjustment	
	Video, Audio adjustment	
ADJUST	Pass Adjustment track shift	When adjusting tape pass, set this mode and shift the tracking.
	Emergency STOP inhibition	Detection of emergency is inhibited. This allows the following items. • Power is not turned off when the battery is ended. • SP/LP is not automatically distinguished. • Emergence is not detected except for TOP/END detection of the TAPE.
	Read of emergence code	The following functions are added to the emergency display function currently in use. ① The lithium battery is not required because to memorize into EE-PROM is allowed. ② The first emergency and the last emergency are memorized. ③ The mode when the emergency is generated is memorized, in addition to the emergency contents.
	Motor single check	Rotating in forward direction, reverse direction, stopping of each motor can be separately controlled. • Drum motor • Capstan motor • Loading motor
	Function switch check	The acceptance of the function switch of the unit can be confirmed by designating an address. On the contrary, RM-95 can command the substitution for the function switch of the unit.
	Mechanical switch check	The contents of the mechanical switch and the mode switch can be confirmed.
	Sensor check	The following sensor is input by performing A/D converting, and the A/D converted value can be confirmed. TOP sensor, End sensor, S REEL FG, T REEL FG, Thermistor for SWP correction, DEW sensor.
	Reception contents check of wireless remote control	The received code contents of the remote control code can be confirmed.

3. Page D Write Protect

Release/set the page D write protect.

Page 1	Address 00

Data	Function
00	Normal (Write protect condition)
01	Write protect release

4. Page F Write Protect

Release/set the page F write protect.

Page 6	Address 00

Data	Function
10	Normal (Write protect condition)
01	Write protect release

5. Test Mode Setting

Each type of test mode is set/released. Release the protect (page: 1, address: 00, data: 01), before setting the data.

Page D	Address 01

Data	Function
00	Normal
01	Test mode 1 Various emergency inhibition and release Drum, capstan, loading motor, reel, tape top, end, DEW SP/LP automatic distinction inhibition, manual switchover (EDIT SW ON: LP, OFF: SP) 5 minutes pause release inhibition Power off inhibition • release by battery end
02	Test mode 2 1'CH frequency response adjustment (Not used) SP/LP automatic distinction inhibition, manual switchover (EDIT SW ON: LP, OFF: SP)
03	Test mode 3 Track shift Plays back the track shift Rear lock distinction inhibition during PB SP/LP automatic distinction inhibition, manual switchover (EDIT SW ON: LP, OFF: SP)
04	Test mode 4 Rear lock mode Rear lock playback is performed SP/LP automatic distinction inhibition, manual switchover (EDIT SW ON: LP, OFF: SP)
05	Test mode 5 SP/LP automatic distinction inhibition, manual switchover (EDIT SW ON: LP, OFF: SP)

※ This address data will be recorded on the non-volatile memory by pressing the PAUSE button on the adjusting remote control unit. Take note, as when this happens, the test mode will not be released even if the main power is turned off (6.3 Vdc).

※ Be sure to return the data of this address data to 00 after completing adjustments/repairs.

6. Emergency code

Troubles (errors) can be checked.

Page D	Address 06

First emergency code

······The first error code generated

Page D	Address 07

Last emergency code

······ The last error code generated (this data will be modified each time an error occurs.)

※ Be sure to rewrite the data of addresses 06 and 07 to 00 after completing repairs/adjustments.

※ When rewriting data, be sure to press the PAUSE button of the remote control unit after resetting the data.

Code	Error condition
00	No error
01	Loading motor error
02	Reel error during unloading
03	Other reel errors
04	Capstan error
05	DRUM FG error during drum start up
06	DRUM PG error during drum start up
07	DRUM FG error during drum regular condition
08	DRUM PG error during drum regular condition
09	DRUM Phase error during drum regular

7. Emergency mode

The operation mode during an error outbreak can be checked.

Page D	Address 08

First emergency mode
……The operation mode when the first error is generated

Page D	Address 09

Last emergency mode
……The operation mode when the last error is generated
(This data will be modified each time an error occurs.)

※ Be sure to rewrite the data of addresses 08 and 09 to 00 after completing repairs/adjustments.
※ When rewriting data, be sure to press the PAUSE button of the remote control unit after setting the data.
※ Addresses 08 and 09 of page 0 and addresses 08 and 09 of page D have the same functions.

Code	Error condition
00	BEFOR INITIALIZE
01	EJECTED
02	NORMAL STOP
03	FF
04	NORMAL REC
06	NORMAL PB
07	PB PAUSE
12	LOADING
14	REC PAUSE
27	1/5 SLOW
31	UNLOADING
46	CUE
56	REVIEW
62	STOP TAPE END
67	FRAME
72	STOP TAPE TOP
83	REWIND
85	REC REVIEW(+)
95	REC REVIEW(–)
A2	EMERGENCY STOP
A5	EDIT SEARCH(+)
B1	EMERGENCY UNLOADING
B2	STOP EMERGENCY 1
B5	EDIT SEARCH(–)
C2	STOP EMERGENCY 2
E2	STOP NO CASSETTE
F5	EDIT PAUSE

8. Bit value Discrimination

It is necessary to discriminate the bit value by the adjusting remote control unit display data for the following items. Discriminate if the bit value is "1" or "0" using the following table.

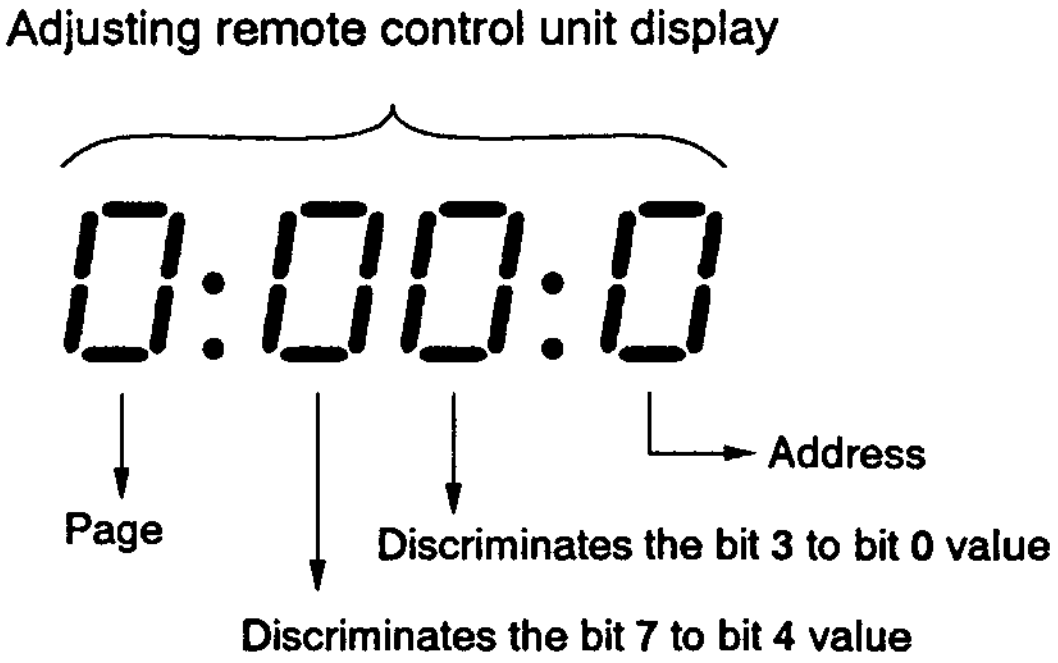
Adjusting remote control unit display
0:00:0
Address
Page
Discriminates the bit 3 to bit 0 value
Discriminates the bit 7 to bit 4 value

	Remote Control Unit Display	Bit Value			
		bit 3 or bit 7	bit 2 or bit 6	bit 1 or bit 5	bit 0 or bit 4
	0	0	0	0	0
	1	0	0	0	1
	2	0	0	1	0
	3	0	0	1	1
	4	0	1	0	0
	5	0	1	0	1
	6	0	1	1	0
	7	0	1	1	1
Ⓐ→	8	1	0	0	0
	9	1	0	0	1
	A (A)	1	0	1	0
	B (b)	1	0	1	1
	C (c)	1	1	0	0
	D (d)	1	1	0	1
Ⓑ→	E (E)	1	1	1	0
	F (F)	1	1	1	1

(Example) When the remote control unit display data is "8E", the bit values of bit 7 to bit 4 can be discriminated from column Ⓐ, and that of bit 3 to bit 0 can be discriminated from column Ⓑ.

9. Check of Tape Distinction Switch, etc.

Page 1	Address 3E

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
				$\overline{\text{REC PROOF}}$	ME/$\overline{\text{MP}}$	Hi8/$\overline{\text{Normal}}$	

"1"=Recording impossible
"0"=Recording possible

"1"=ME tape
"0"=MP tape

"1"=Hi8 mode playback
"0"=Normal mode playback

Page 1	Address 23

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
					$\overline{\text{CC LOCK}}$		

"0"=During cassette compartment lock

Page 1	Address 3D

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
V MUTE	A MUTE	VA PB MODE	JOG	PB CLOG	REC CLOG	SYNC DET	LP/$\overline{\text{SP}}$

"1"=LP mode playback
"0"=SP mode playback

"1"=SYNC is detected
"0"=SYNC is not detected

"1"=CLOG is detected
"0"=Normal

"1"=When the PB RF signals are being playback normaly
"0"=Others

"1"=JOG mode
"0"=Other

"1"=Playback mode
"0"=Others

"1"=AUDIO MUTE: ON
"0"=AUDIO MUTE: OFF

"1"=VIDEO MUTE: ON
"0"=VIDEO MUTE: OFF

Page 1	Address 42

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
	PB 1.7M DET	$\overline{\text{JACK MONO}}$	$\overline{\text{MIC MONO}}$			DEW	

"0"=Dew outbreak
"1"=Others

"0"=During monaural external microphone use
"1"=Others

"1"=Audio input/output terminal (right) open condition
"0"=Audio input/output terminal (right) connection condition

"1"=During AFM stereo/bilingual tape playback
"0"=Others

10. Mode Switch Check

The mode switch position (mechanical section condition) can be checked.

Page 1	Address 3E

Mode switch position	**Adjusting remote control display data**	**Bit 7 (MODE SW C)**	**Bit 6 (MODE SW B)**	**Bit 5 (MODE SW A)**
EJECT	8*	1	0	0
USE	6*	0	1	1
LS	C*	1	1	0
GL	4*	0	1	0
RP (REC, PB, FF, REW, CUE, REVIEW, PAUSE)	A*	1	0	1
READY (STOP)	2*	0	0	1

*: 0 to F

11. Mechanism Control Micro Processor Input/Output Signal Level Check

Page 2	Address E2

Bit	Signal	Pin No.	I/O	Level
5	JACK MONO	7	I	"1"=H "0"=L
6	PB 1.7M DET	6	I	
7	$\overline{\text{MIC MONO}}$	5	I	

Page 2	Address E3

Bit	Signal	Pin No.	I/O	Level
0	$\overline{\text{EDIT}}$	28	O	"1"=H "0"=L
1	SP/$\overline{\text{LP}}$	27	O	
2	CAM/$\overline{\text{LINE}}$	26	O	
3	Hi8/$\overline{\text{NORMAL}}$	25	O	
4	MX ON/$\overline{\text{OFF}}$	24	O	
5	MX SEL 2	23	O	
6	MX SEL 1	22	O	
7	LINE MIX	21	O	

Page 2	Address E4

Bit	Signal	Pin No.	I/O	Level
0	$\overline{\text{S JACK IN}}$	76	I	"1"=H "0"=L
1	CFG HMS	75	I	
4	VA PB MODE	72	O	
5	TAPE LED ON	71	O	
6	ME/$\overline{\text{MP}}$	70	O	
7	DS ON	69	O	

Page 2	Address E5

Bit	Signal	Pin No.	I/O	Level
0	$\overline{\text{DEW DET}}$	56	I	"1"=H "0"=L
1	TAPE TOP	55	I	
2	TAPE END	54	I	
4	FULL MUTE	49	O	
6	AUDIO MUTE	47	O	
7	MONO REC	46	O	

Page 2	Address E7

Bit	Signal	Pin No.	I/O	Level
0	$\overline{\text{REEL HALL CONT}}$	36	O	"1"=H "0"=L
3	DRUM FWD/$\overline{\text{RVS}}$	33	O	
4	DRUM ON	32	O	
5	LM LIM CONT	31	O	
6	LOAD	30	O	
7	UNLOAD	29	O	

Page 2	Address E8

Bit	Signal	Pin No.	I/O	Level
2	CLOG DET	82	I	"1"=H "0"=L
5	$\overline{\text{LM LIM ON}}$	79	I	

Page 2	Address E9

Bit	Signal	Pin No.	I/O	Level
0	VIDEO MUTE	20	O	"1"=H "0"=L
1	E/$\overline{\text{L}}$ DET	19	I	
2	ME/$\overline{\text{MP}}$ SW	18	I	
3	REC PROOF SW	17	I	
5	MODE SW A	15	I	
6	MODE SW B	14	I	
7	MODE SW C	13	I	

Note: Refer to "Mode switch check".

12. Mechanism Control A/D Port Input Voltage Check

Page 4	Address 14

Checking method:

1) Set data: 02 to page: 4, address: 0E.
   (A/D conversion processing active)
2) Set the data in the following table to page: 4, address: 13, and select the A/D port to be displayed.

Data	A/D Port
00	Pin (62): AN0 (T REEL FG)
01	Pin (61): AN1 (S REEL FG)
02	Pin (60): AN2 (ATF ERROR)
03	Pin (59): AN3 (BATT SENS)
04	Pin (58): AN4 ($\overline{\text{DEW}}$)

3) Check the data of page: 4, address: 14.

Adjusting Remote Control Unit Display Data	A/D Port Input Voltage
FF to 00	Approx. 5 Vdc to 0 Vdc

13. Tape Top/End Sensor Condition Check

Page 4	Address 0A

Checking method:

1) Set data: 10 to page: 4, address: 0E.
   (Tape top/end sensor condition sampling processing active)
2) Check the data of page: 4, address: 0A.

Adjusting Remote Control Unit Display Data	Tape Top/End Sensor Condition
0 0	Tape present (Middle of tape)
0 1	Tape top
1 0	Tape end
1 1	No tape

Tape end sensor condition
Tape top sensor condition

"0"=Non-active (Not receiving light)
"1"=Active (Receiving light)

14. Battery Voltage Check

Page 4	Address 10

Adjusting Remote Control Unit Display Data	Battery Voltage
FF	Approx. 10 Vdc
F0	Approx. 9.4Vdc
E0	Approx. 8.8Vdc
D0	Approx. 8.2Vdc
C0	Approx. 7.5Vdc
B0	Approx. 6.9Vdc
A0	Approx. 6.3Vdc
90	Approx. 5.6Vdc
80	Approx. 5.0Vdc

15. Individual Operations of the Drum, Capstan, and Loading Motor

Page 4	Address 11

1) Adjust the mechanical section to the loading completion condition.
2) Release the protect.
   Page: 1, address: 00, data: 01
3) Set data: 01 to page: 4, address: 0E.
   (Control permission from the adjusting remote control unit of the motor)
4) By setting the data in the following table to page: 4, address: 11, the corresponding motors can be operated individually.
5) After checking the operations, turn off the main power (6.3 Vdc).

Data	Operation
00	Normal
02	Drum forward rotation
04	Drum reverse rotation
06	Capstan forward rotation
08	Capstan reverse rotation
0A	Loading motor forward rotation
0C	Loading motor reverse rotation
01	All motors stop
03	
05	
07	
09	
0B	
0D	
0F	

16. Mode control micro processor key matrix check

The key input can be checked.

Page 1	Address 68~6D

	Bit7	Bit6 (K IN 6)	Bit5 (K IN 5)	Bit4 (K IN 4)	Bit3 (K IN 3)	Bit2 (K IN 2)	Bit1 (K IN 1)	Bit0 (K IN 0)
Address 68 (K OUT 0)		LENS COVER OPEN	VTR POWER (CF-3200 S1)		PAUSE (CF-3200 S3)	REC (CF-3200 S6)	EJECT (CF-3200 S16)	HiFi SOUND 1 (CF-3200 S12)
Address 69 (K OUT 1)			CAMERA POWER (CF-3200 S1)	FF (CF-3200 S2)	PLAY (CF-3200 S4)	REW (CF-3200 S7)	STOP (CF-3200 S9)	HiFi SOUND 2 (CF-3200 S12)
Address 6A (K OUT 2)		PUSH FOCUS FIX (CF-3200 S30)	DIGITAL PICTURE (CF-3200 S31)	ZERO MEMORY (CF-3200 S21)	EDIT SEARCH (+) (CF-3200 S5)	EDIT SEARCH (–) (CF-3200 S8)	COUNTER RESET (CF-3200 S28)	EDIT ON/OFF SP/LP (CF-3200 S13)
Address 6B (K OUT 3)		AUTO LOCK (CF-3200 S19)	PROGRAM AE (CF-3200 S20)		TIME (CF-3200 S23)	DATE (CF-3200 S26)		
Address 6C (K OUT 4)		EXPOSURE (+) (LC-40P S507)		AUTO FOCUS ON/OFF (CF-3200 S22)	SUPER IMPOSE COLOR/MODE (CF-3200 S24)	SUPER IMPOSE MEMORY (CF-3200 S27)	SUPER IMPOSE ON/OFF (CF-3200 S29)	OUT/IN (JK-3100 S921)
Address 6D (K OUT 5)		EXPOSURE (–) (LC-40P S507)	AREA (CF-3200 S10)	SUMMER TIME (CF-3200 S11)	EXPOSURE ON/OFF (CF-3200 S25)	FADER (MF-175P S997)	START/ STOP (CF-3200 S17)	REMOTE COMMANDER (CF-3200 S14)

"1"=key switch ON
"0"=key switch OFF

17. Wireless Remote Control Unit Reception Content Check

Page 1	Address 1E

Wireless remote control unit key pressed	**Data**
None	FF
TELE	9A
WIDE	9B
Start/stop	99
Rewind	1B
Fast forward	1C
Stop	18
Playback	1A
Data screen	5A
Pause	19
SLOW	23

18. REC MODE/EDIT Switch, Remote Commander Switch Check

Page 1	Address 0A

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
REC MODE (SP/LP)	REMOTE COMMANDER		EDIT				

"1"=OFF
"0"=ON

"1"=EDIT ON
"0"=EDIT OFF

"1"=LP
"0"=SP

19. HIFI Sound Switch, IN/OUT Switch Check

Page 1	Address 0B

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
		HiFi SOUND		IN/OUT			

Switch Position		
1	0	1
2	1	0
GREEN MARK	0	0

"1"=IN
"0"=OUT

20. White Balance Mode and Focus Mode Display/Switchover

Page 1	Address 9A

The mode can be switched when the data of page: 1, address: A3 is set to 04.

Data	White Balance Mode
*1	INDOOR
*2	OUTDOOR
*3	HOLD
*6	AUTO

Data	Focus Mode
0*	Manual
1*	Automatic

21. LCD, LED Check, etc.

Page 1	Address A3

Data	Mode
00	Normal
01	Key input prohibited
02	All segments of LCD, LED light up
04	Camera function renewal prohibited

22. Page D Address List

Note 1: The adjustment data initial value is the data to be input before performing video section adjustment (page D), when the page D data has been erased due to some cause.

Note 2: The data listed in the adjustment data memo column are the fixed data.
Check that these data have not been accidentally rewritten, after completing adjustments.

*1 No mark : AEP, UK model
[ ] : E, Australian, Tourist model

Address	Name	Function [ ] indicate the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
00	Category code	Not used	01	01
01	Test mode		00	00
02	Destination flag		82[A3]*1	82[A3]*1
03	BATT END	Battery end adjustment	8C	
04	SW POSITION	SW POSITION adjustment	00	
05	SW POSITION	SW POSITION adjustment	80	
06	EMERGENCY code (FIRST)	Error code and mode are memorized. Rewrite the data of these addresses to 00 after repairs/adjustments	00	00
07	EMERGENCY code (LAST)		00	00
08	EMERGENCY mode (FIRST)		00	00
09	EMERGENCY mode (LAST)		00	00
0A	SR DATA (MP NORMAL SP)	CXA1207 serial data	3C	3C
0B	SR DATA (MP NORMAL LP)	CXA1207 serial data	3C	3C
0C	SR DATA (ME Hi8 SP)	CXA1207 serial data	28	28
0D	SR DATA (ME Hi8 LP)	CXA1207 serial data	28	28
0E	SR DATA (ME NORMAL SP)	CXA1207 serial data	28	28
0F	SR DATA (ME NORMAL LP)	CXA1207 serial data	28	28
10	SR DATA (MP Hi8 SP)	CXA1207 serial data	3C	3C
11	SR DATA (MP Hi8 LP)	CXA1207 serial data	3C	3C
12	SR DATA (EDIT ON NORMAL)	CXA1207 serial data	28	28
13	SR DATA (EDIT ON Hi8)	CXA1207 serial data	28	28
14	CAM TITLE BLU R-Y	Camera titler color adjustment [Blue]	74	
15	CAM TITLE BLU B-Y	Camera titler color adjustment [Blue]	DA	
16	CAM TITLE GRN R-Y	Camera titler color adjustment [Green]	3E	
17	CAM TITLE GRN B-Y	Camera titler color adjustment [Green]	2C	
18	CAM TITLE CYN R-Y	Camera titler color adjustment [Light blue]	32	
19	CAM TITLE CYN B-Y	Camera titler color adjustment [Light blue]	86	
1A	CAM TITLE RED R-Y	Camera titler color adjustment [Red]	DE	
1B	CAM TITLE RED B-Y	Camera titler color adjustment [Red]	7A	
1C	CAM TITLE VIO R-Y	Camera titler color adjustment [Violet]	A0	
1D	CAM TITLE VIO B-Y	Camera titler color adjustment [Violet]	A6	
1E	CAM TITLE YEL R-Y	Camera titler color adjustment [Yellow]	8C	
1F	CAM TITLE YEL B-Y	Camera titler color adjustment [Yellow]	26	
20	Permission plug		20	20
21	Adjustment plug	FORCED VTR ON, CAM ON etc DATA: MODE 01: FORCED CAMERA POWER ON 02: FORCED VTR POWER ON	00	00
22~2C		Not used		

Table 9-3 (1).

Address	Name	Function [ ] Indicate the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
2D	BATT REMAIN LEVEL 1	Amount of remaining battery 1	A0	
2E	BATT REMAIN LEVEL 2	Amount of remaining battery 2	99	
2F	BATT REMAIN LEVEL 3	Amount of remaining battery 3	94	
30	1A-ch REC C LEVEL (ME)	ME REC C level adjustment [IC156 ⑥]	B5	
31	1A-ch REC C LEVEL (MP)	MP REC C level adjustment [IC156 ⑥]	B5	
32	1B-ch REC C LEVEL (ME)	Not used	B5	B5
33	1B-ch REC C LEVEL (MP)	Not used	B5	B5
34	2A-ch REC C LEVEL (ME)	Not used	B5	B5
35	2A-ch REC C LEVEL (MP)	Not used	B5	B5
36	2B-ch REC C LEVEL (ME)	Not used	B5	B5
37	2B-ch REC C LEVEL (MP)	Not used	B5	B5
38	CAP FG BIAS	Capstan FG bias adjustment [IC158 ②]	80	
39~3D		Not used		
3E	2A-ch M.T Hi8		90	90
3F	2A-ch M.T NORMAL	2A ch playback frequency characteristic adjustment [IC158 ⑱]	90	
40	2B-ch M.T Hi8		90	90
41	2B-ch M.T NORMAL	2B ch playback frequency characteristic adjustment [IC158 ⑲]	90	
42	1A-ch M.T Hi8		90	90
43	1A-ch M.T NORMAL	1A ch playback frequency characteristic adjustment [IC158 ⑫]	90	
44	1B-ch M.T Hi8		90	90
45	1B-ch M.T NORMAL	1B ch playback frequency characteristic adjustment [IC158 ⑬]	90	
46	REC C RF (EE)	Not used		
47	REC C RF (PB)	Not used		
48	RF CONT (ME)	Not used		
49	RF CONT (MP)	Not used		
4A	EE LEVEL	EE level adjustment [IC156 ⑱]	67	
4B		Not used		
4C	COMB ADJ	Chroma comb filter adjustment [IC156 ⑬]	AB	
4D	SR-IR	IR adjustment [IC156 ④]	AB	
4E	Y-FM CARRIER (Hi8)	Y-FM carrier frequency [IC156 ③]	AB	AB
4F	Y-FM CARRIER (NORMAL)	Y-FM carrier frequency adjustment [IC156 ③]	AB	
50	Y-FM DEVIATION (Hi8)	Y-FM deviation [IC156 ②]	96	96
51	Y-FM DEVIATION (NORMAL)	Y-FM deviation adjustment [IC156 ②]	96	
52	REC Y LEVEL (EE Hi8 ME)		7A	7A
53	REC Y LEVEL (EE Hi8 MP)		7A	7A
54	REC Y LEVEL (EE NOR ME)	REC Y recording current adjustment (ME) [IC158 ⑨]	7A	
55	REC Y LEVEL (EE NOR MP)	REC Y recording current adjustment (MP) [IC158 ⑨]	7A	
56	REC Y LEVEL (PB)	Playback REC Y level	7A	7A
57	PB Y LEVEL (EE)	EE PB Y level [IC156 ⑤]	8B	8B
58	PB Y LEVEL (Hi8)	Hi8 PB Y level adjustment [IC156 ⑤]	8F	
59	PB Y LEVEL (NORMAL)	Normal PB Y level adjustment [IC156 ⑤]	8B	

Table 9-3 (2)

Address	Name	Function [ ] Indicate the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
5A	EMPHASIS INPUT LEVEL	EE emphasis input level adjustment [IC156 ⑲]	9C	
5B	PB LINE LEVEL	Playback emphasis input level adjustment [IC156 ⑲]	AF	
5C~77		Not used		
78	L/R MX LEVEL (REC)	REC matrix adjustment [IC158 ③]	B0	
79	L/R MX LEVEL (PB)	PB matrix adjustment [IC158 ③]	A0	
7A	1.5 IR	1.5 MHz IR adjustment [IC158 ⑤]	90	
7B	1.5 DEV	1.5 MHz deviation adjustment [IC158 ④]	B0	
7C	1.7 IR	1.7 MHz IR adjustment [IC158 ⑦]	90	
7D	1.7 DEV	1.7 MHz Deviation adjustment [IC158 ⑥]	A0	
7E	AUDIO FADER	Not used		
7F~FF		Not used		

Table 9-3 (3)

9-2. POWER SYSTEM ADJUSTMENTS

1. Oscillator Frequency Check (DD-47P Board)

Mode	Camera record
Subject	Arbitrary
Measurement Point	Q906 collector
Measuring Instrument	Frequency counter
Specified Value	510 ± 35 kHz

Adjusting method:

1) Check that the oscillator frequency satisfies the specified value.

2. Power Voltage Check (DD-47P Board)

Mode	Camera record
Subject	Arbitrary
Measuring Instrument	Digital voltmeter
EVF 5V check	
Measurement Point	Pin ⑮ of W401
Specified Value	4.95 ± 0.1 Vdc
D5V check	
Measurement Point	Pins ⑦ and ⑧ of W401
Specified Value	4.91 ± 0.1 Vdc
D4V check	
Measurement Point	Pin ④ of W401
Specified Value	4.06 ± 0.1 Vdc
VID 5V check	
Measurement Point	Pins ㉑ and ㉒ of W401
Specified Value	4.93 ± 0.1 Vdc
RP 5V check	
Measurement Point	Pin ㉔ of W401
Specified Value	4.94 ± 0.1 Vdc
AU5V check	
Measurement Point	Pin ㉓ of W401
Specified Value	4.93 ± 0.1 Vdc
CAM5V check	
Measurement Point	Pins ⑨ and ⑩ of W401
Specified Value	4.89 ± 0.15 Vdc
CAM15V check	
Measurement Point	Pin ⑫ of W401
Specified Value	15.09 ± 0.3 Vdc
CAM -9V check	
Measurement Point	Pin ⑪ of W401
Specified Value	-8.8 ± 0.7 Vdc
MOTOR 5V check	
Measurement Point	Pin ⑭ of W401
Specified Value	4.92 ± 0.1 Vdc

9-3. SYSTEM CONTROL SYSTEM ADJUSTMENTS

1. Page D Initial Value Input

If the page D data has been erased due to some cause, input the page D initial value before performing adjustments. For details on the initial value, refer to "Page D address list" in "9-1-9. Service Mode".

Mode	E-E
Signal	Arbitrary
Adjustment Page	D
Adjustment Address	00 to 7D

Input method:

1) Release the write protect.
   Page: 1, address: 00, data: 01
2) Select page D, and input the initial value to each address.
   (After setting the data (initial value), be sure to press the PAUSE button of the adjusting remote control unit before changing the address.)

2. Battery End Adjustment

Mode	E-E
Signal	Arbitrary
Measurement Point	LCD display of the adjusting remote control unit
Measuring Instrument	
Adjustment Page	D
Specified Value	03 (BATT END) 2D (BATT REMAIN LEVEL 1) 2E (BATT REMAIN LEVEL 2) 2F (BATT REMAIN LEVEL 3)

Connection:

1) Connect the regulated power supply and the digital voltmeter as shown in Fig. 9-5.

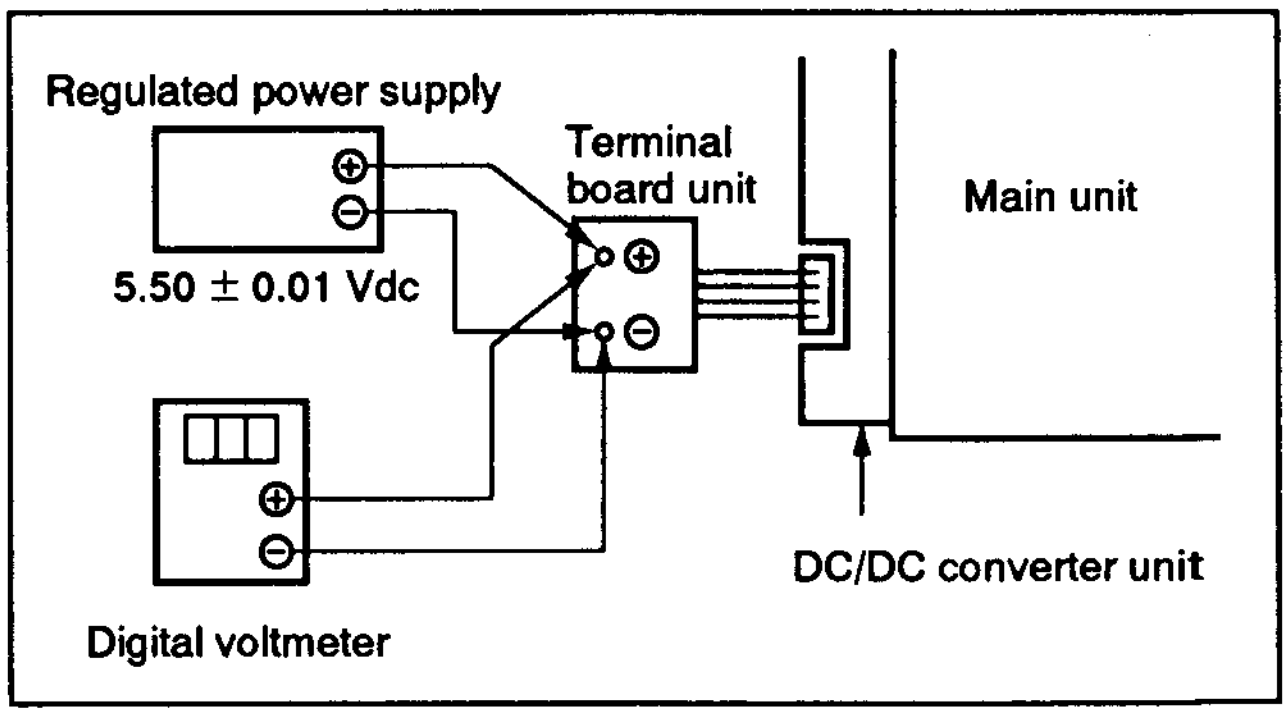

Fig. 9-5.

Adjusting method:

1) Adjust the output voltage of the regulated power supply so that the digital voltmeter display is 6.3 ± 0.1 Vdc.
2) Release the protect.
   Page: 1, address: 00, data: 01
3) Set data: 01 to page: D, address: 01.
   (Test mode 1 setting)
4) Adjust the output voltage of the regulated power supply so that the digital voltmeter display is 5.50 ± 0.01 Vdc.
5) Select page: 4, address: 10, read the adjusting remote control unit display data, and set to DEND.
6) Set data DEND to page: D, address: 03, and press the PAUSE button of the adjusting remote control unit.
7) Convert DEND to decimal to obtain DEND'. (Refer to Table 7-6. "Hexadecimal notation – decimal notation conversion table")
8) Obtain the adjustment data (decimal) by following formula (decimal notation calculation), convert to hexadecimal and enter the data into each adjustment address.
   Address: 2D D2D'=DEND'+20
   Address: 2E D2E'=DEND'+13
   Address: 2F D2F'=DEND'+8
   Note: After setting the data, be sure to press the PAUSE button of the adjusting remote control unit before changing the address.
9) Set data: 00 to page: D, address: 01, and press the PAUSE button of the adjusting remote control unit.
   (Test mode 1 release)
10) Perform "Battery Down Check".

3. Battery Down Check

Mode	Camera record
Subject	Arbitrary

Connection

1) Connect the regulated power supply and the digital voltmeter as shown in Fig. 9-5.

Checking method:

Remove the adjusting remote control unit, and perform the following check. If the check is not satisfied, perform from the beginning again.

1) Adjust the output voltage of the regulated power supply so that the digital voltmeter display becomes 6.3 ± 0.1 Vdc.
2) Set to the camera recording mode.
3) Decrease the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.65 ± 0.01 Vdc.
4) Check that the 🔋 mark on the EVF (viewfinder) display is not lighted up. (TALLY lamp lights up).
5) Decrease the the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.53 ± 0.01 Vdc.
6) Check that the 🔋 mark and the TALLY lamp on the EVF display on the EVF display blinks every second.
7) Decrease the the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.47 ± 0.01 Vdc.
8) Check that the 🔋 mark and the TALLY lamp on the EVF display are blinking faster, the VTR stops and the power supply turns off.

9-4. SERVO SYSTEM ADJUSTMENTS

1. Switching Position Adjustment (VS-93P Board)

Mode	Playback
Signal	Alignment tape: For tracking adjustment (WR5-1CP)
Measurement Point	CH1: Pin ⑨ of CN002 (RF SWP) CH2: Pin ⑫ of CN002 (PB RF CH2)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	04 (SW POSITION) 05 (SW POSITION)
Specified Value	t1=0 ± 10 μsec

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Set data: 80 to page: D, address: 05.
3) Change the data of page: D, address: 05 and minimize "t1". (Coarse adjustment)
4) Press the PAUSE button of the remote control unit.
5) Change the data of page: D, address: 04, and adjust so that the switching position (t1) becomes the specified value. (Fine adjustment)
6) Press the PAUSE button of the adjusting remote control unit.

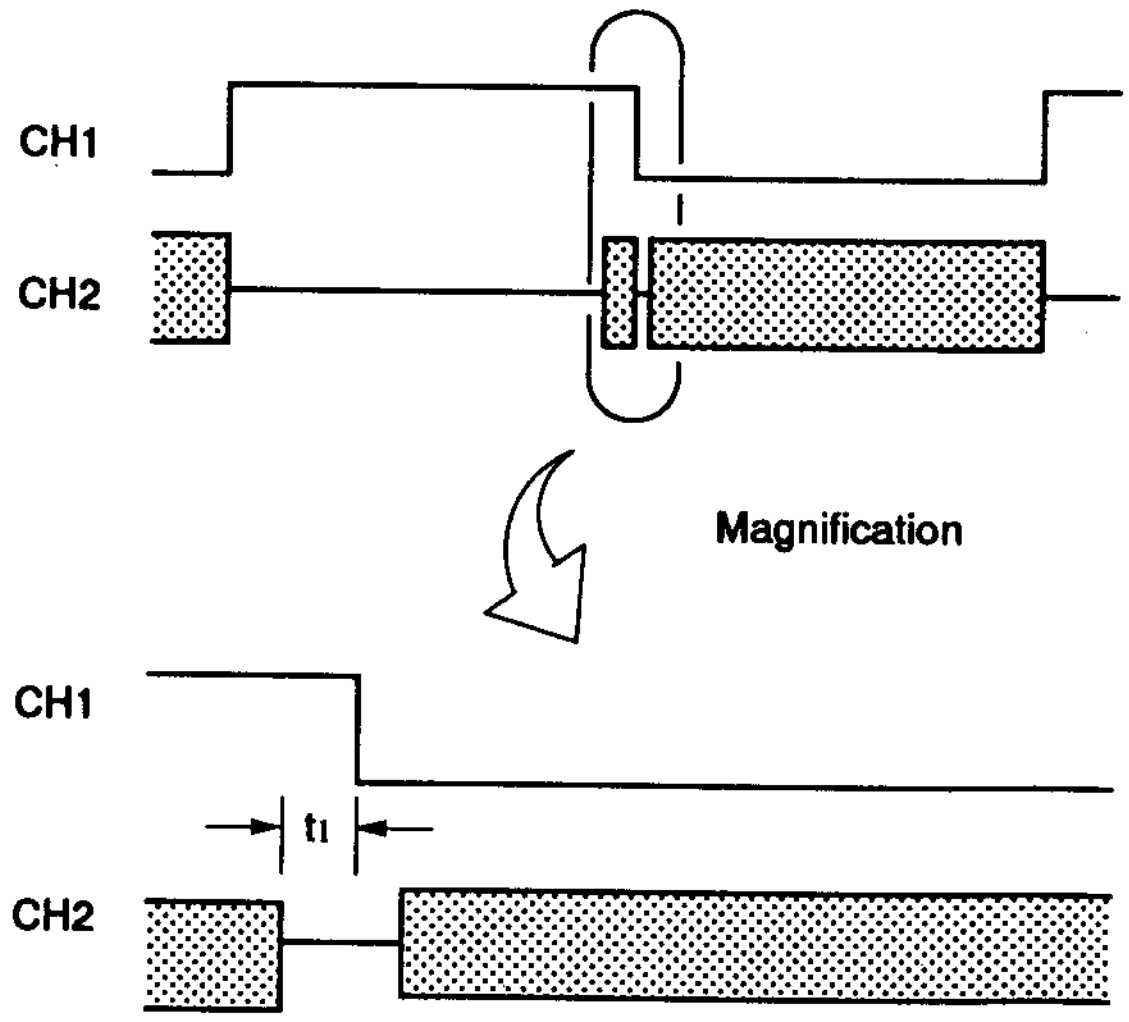

Fig. 9-6.

2. CAP FG Duty Adjustment (VS-93P Board)

Mode	Record (SP)
Signal	Color bar
Measurement Point	Pin ④ of CN002 (CAP FG)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	38 (CAP FG BIAS)
Specified Value	Duty=50 ± 1%

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Set data: 80 to page: D, address: 38.
3) Change the data of page: D, address: 38, and adjust the duty of the CFG waveform to the specified value.
4) Press the PAUSE button of the adjusting remote control unit.

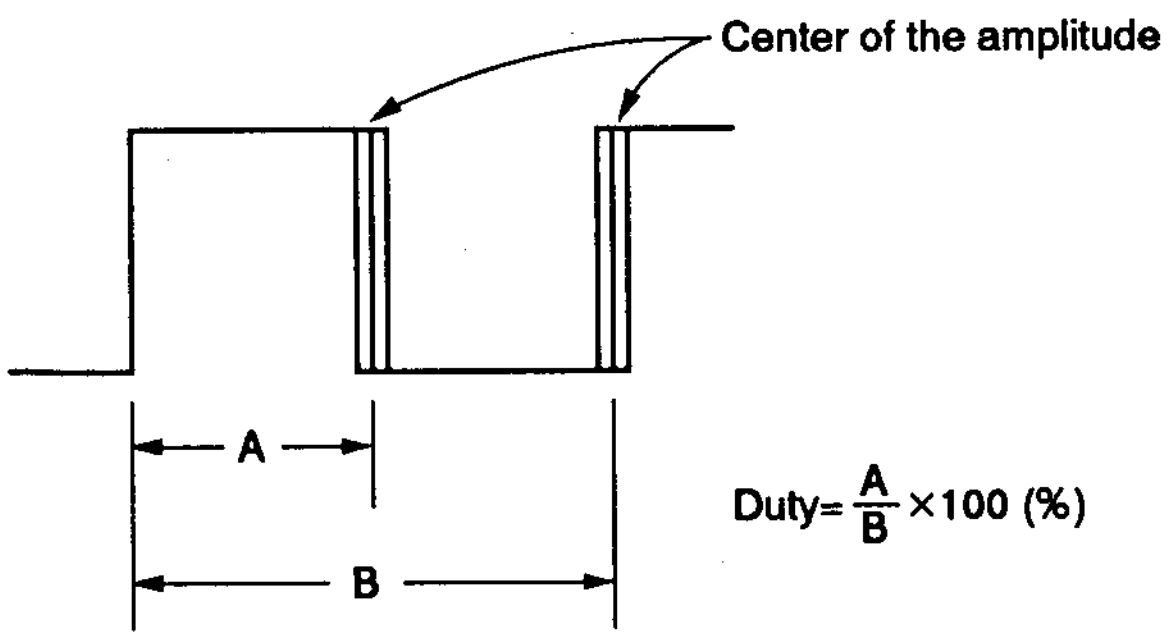

Fig. 9-7.

9-5. VIDEO ADJUSTMENTS

The adjustments of the video system must be performed according to the following adjustment procedure.
The color video signal supplied from the pattern generator is used as the video input signal for adjusting the video system in recording mode. Check that the sync signal and the color burst signal satisfy the specification specified during the adjustment set-up shown in Fig. 9-3.

[Adjusting procedure]

1) Playback frequency characteristic adjustment
2) Flying erase check
3) VXO oscillation frequency check
4) EE level adjustment
5) IR adjustment
6) Y/C separation adjustment
7) Emphasis input level adjustment
8) PB Y level adjustment
9) PB LINE OUT level adjustment
10) Y FM carrier frequency adjustment
11) Y FM deviation adjustment
12) Chroma emphasis fo adjustment
13) REC Y level adjustment
14) REC C level adjustment
15) REC ATF level check
16) REC AFM level check

1. Playback Frequency Characteristic Adjustment (VS-93P Board)

Mode	Playback
Signal	Alignment tape: For frequency characteristic adjustment • AEP, UK model WR5-7CE • E, Australian, Tourist model WR5-6C
Measurement Point	Refer to Fig. 9-8
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	43 (1a-ch M.T), 45 (1b-ch M.T), 3F (2a-ch M.T), 41 (2b-ch M.T)
Specified Value	• AEP, UK model 4.5 MHz level: 8.5 MHz level= 6: (3.6 ± 0.4) • E, Australian model 3.58 MHz level: 5.5 MHz level= 4: (3 ± 0.3)

Note: [ ] indicates the measuring frequency for WR5-6C.

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Change the data of each address of page D, and adjust the level ratio of 4.5 MHz [3.58 MHz] and 8.5 MHz [5.5 MHz] of each PB RF output waveform of 1a, 1b, 2a, 2b to the specified value.
   Note: After each address adjustment, be sure to press the PAUSE button of the adjusting remote control unit and memorize the data.

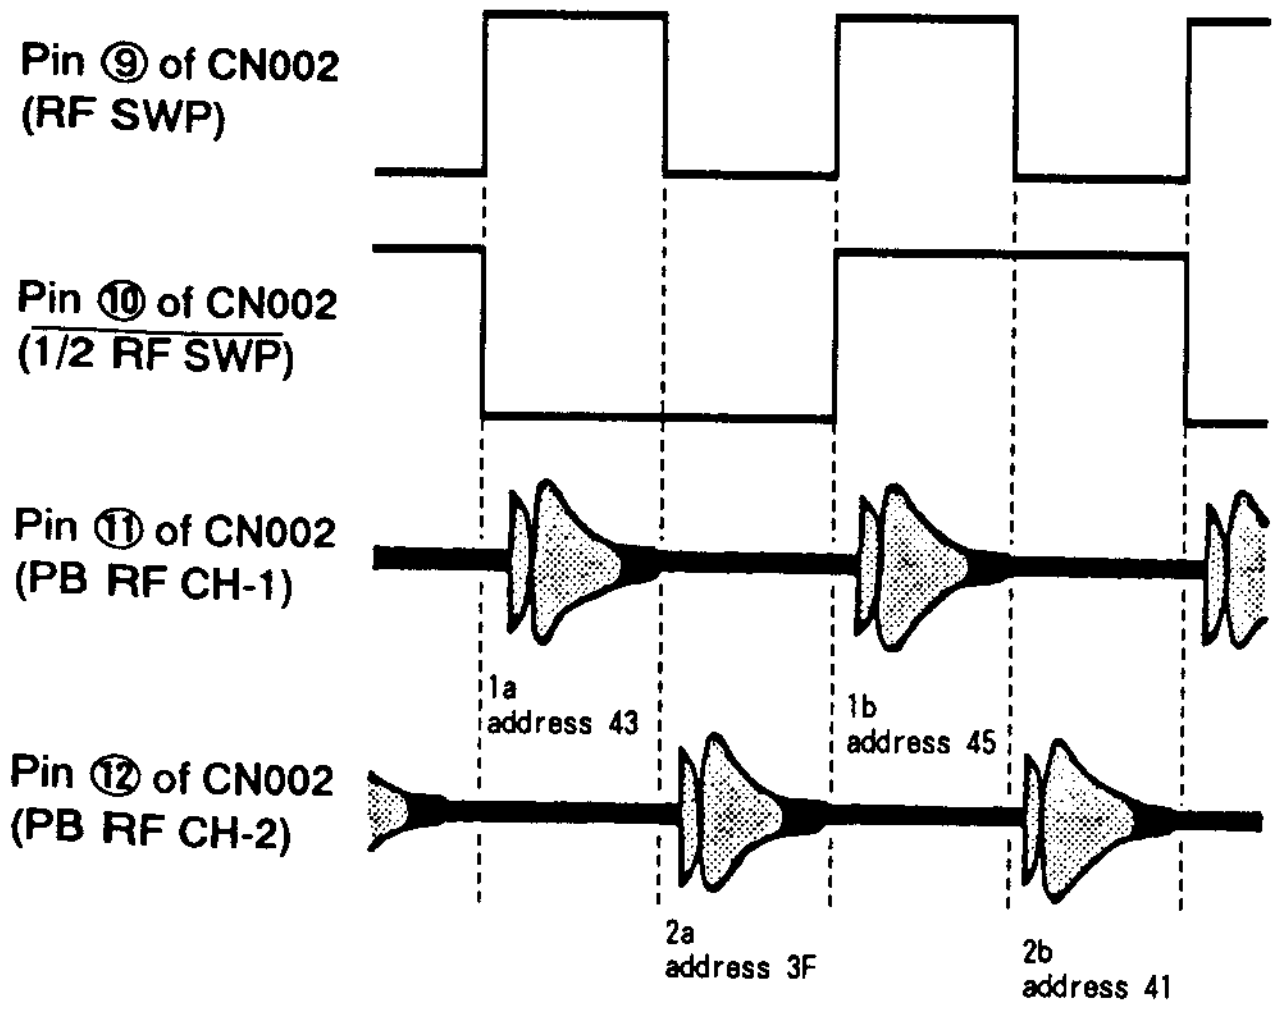
Pin ⑨ of CN002
(RF SWP)
Pin ⑩ of CN002
(1/2 RF SWP)
Pin ⑪ of CN002
(PB RF CH-1)
Pin ⑫ of CN002
(PB RF CH-2)
1a
address 43
1b
address 45
2a
address 3F
2b
address 41

Fig. 9-8.

- WR5-7CE (for AEP, UK model)

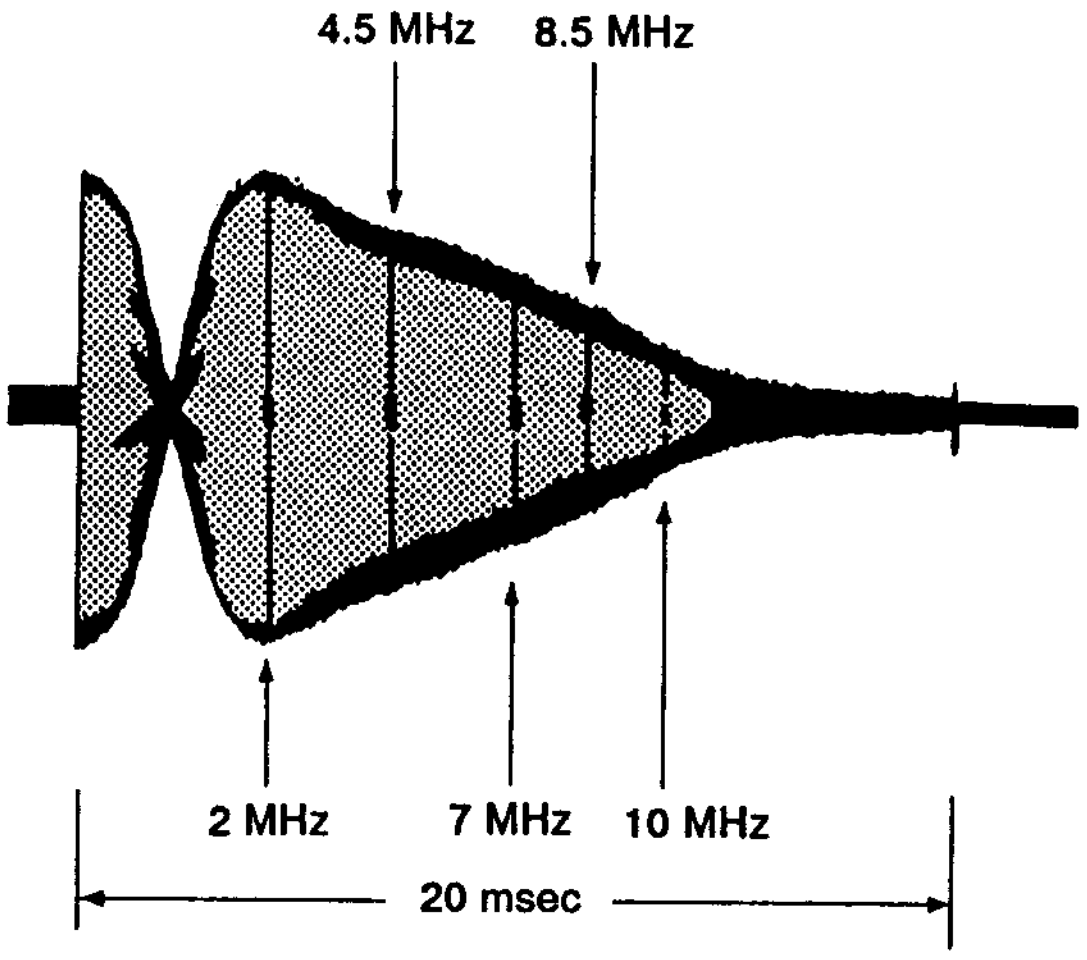
4.5 MHz
8.5 MHz
2 MHz
7 MHz
10 MHz
20 msec

Fig. 9-9.

- WR5-6C (for E, Australian model)

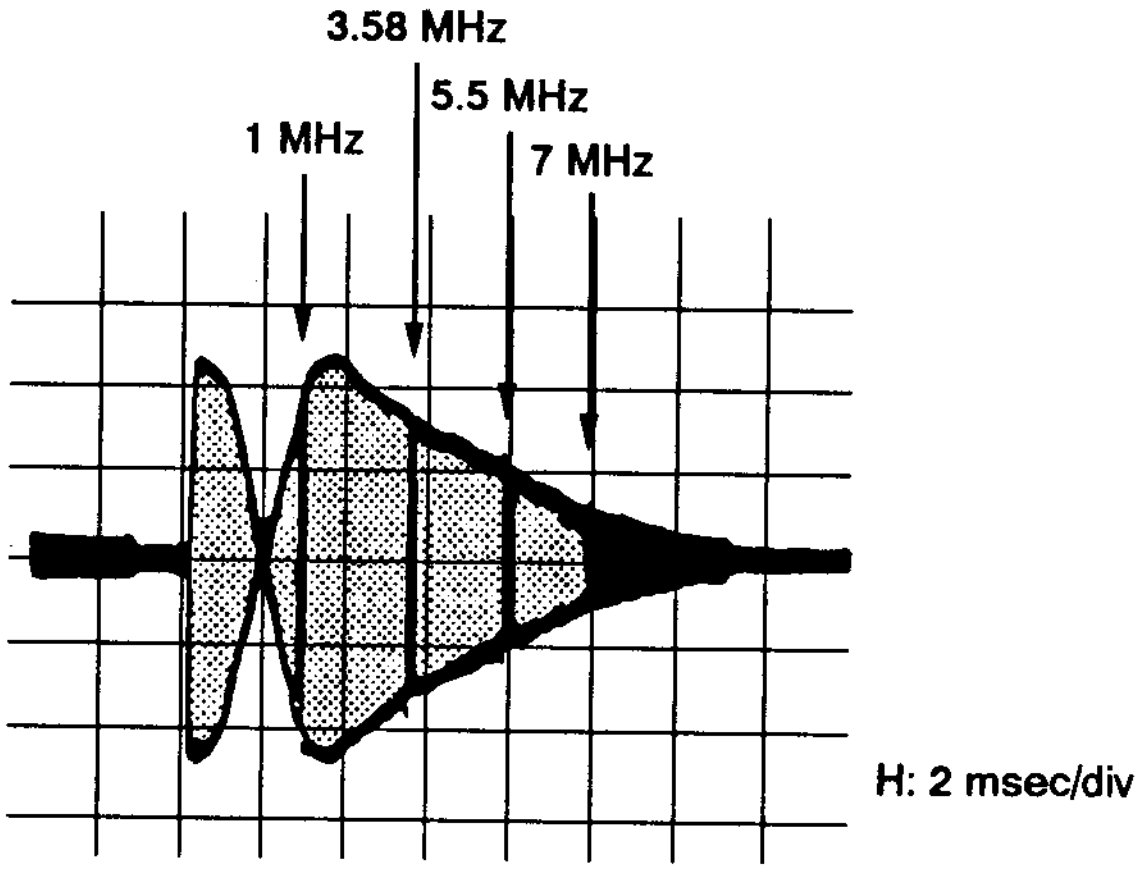
3.58 MHz
5.5 MHz
1 MHz
7 MHz
H: 2 msec/div

Fig. 9-10.

2. Flying Erase Check (VS-93P Board)

Mode	Record
Signal	Arbitrary
Measurement Point	Pin ⑮ of CN001 (FE (X))
Measuring Instrument	Oscilloscope and frequency counter
Specified Value	Frequency: Above 7.0 MHz Voltage: Above 7.0 Vp-p

Note: Use a MP type tape.

Checking method:

1) Check that the oscillation frequency is above 7.0 MHz and that the oscillation voltage is above 7.0 Vp-p.

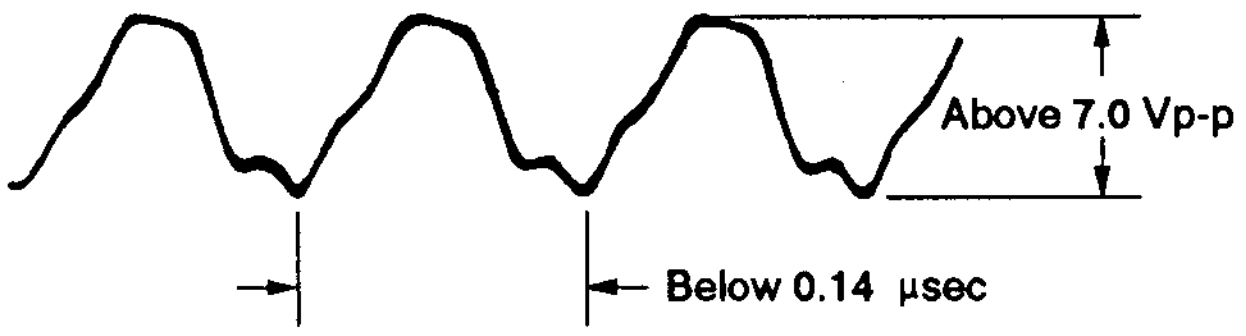

Fig. 9-11.

3. VXO Oscillation Frequency Check (VS-93P Board)

Mode	Record
Signal	Color bar
Measurement Point	Pin ⑫ of IC152
Measuring Instrument	Frequency counter
Specified Value	4433618 ± 70 Hz

Note: Connect the frequency counter via a high impedance (approximately 10 MΩ) and low capacity (below 10 pF) buffer.

Adjusting method:

1) Check that the oscillation frequency of pin ⑫ of IC152 is 4433618 ± 70 Hz.

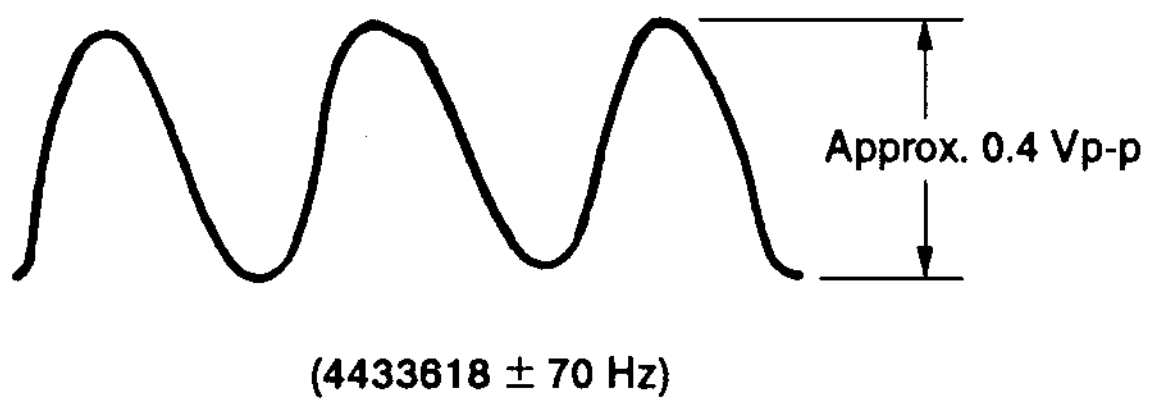

Fig. 9-12.

4. EE Level Adjustment (VS-93P Board)

Mode	Record
Signal	Color bar
Measurement Point	Pin ⑤ of CN101 (VIDEO OUT)[Note]
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	4A (EE LEVEL)
Specified Value	A=1.00 ± 0.025V

Note: Terminate pin ⑤ of CN101 at 75 Ω .
After completing adjustments, remove the 75 Ω resistor.

Adjusting method:

1) Release the protect.
Page: 1, address: 00, data: 01
2) Change the data of page: D, address: 4A, and adjust so that the Y signal level (A) becomes the specified value.
3) Press the PAUSE button of the adjusting remote control unit.

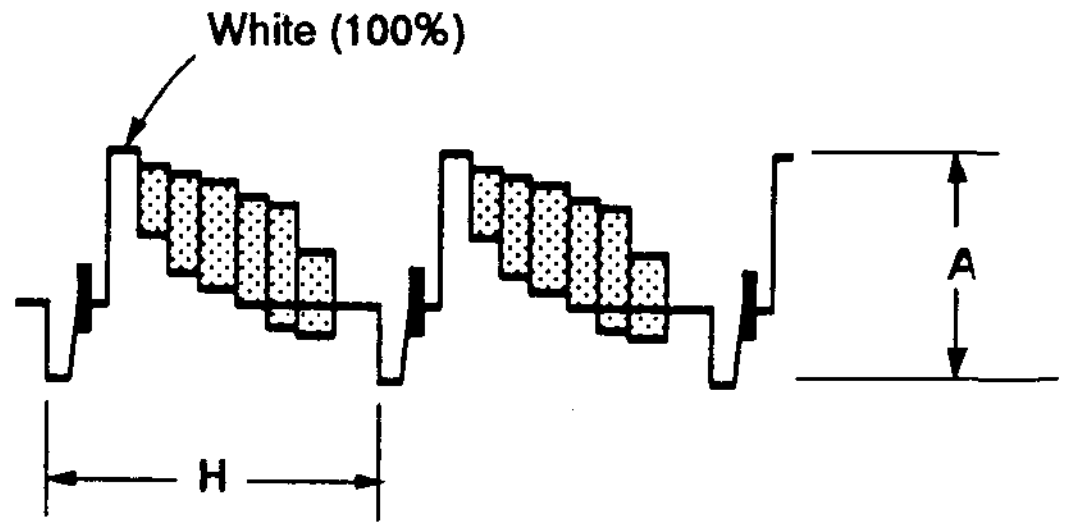

Fig. 9-13.

5. IR Adjustment (VS-93P Board)

Mode	Record
Signal	Color bar
Measurement Point	Pin ⑦ of IC151 (Y COMB OUT)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	4D (SR IR)
Specified Value	Residual chroma component (A) is minimum (below 50 mVp-p)

Connection

1) Connect pin (64) of IC151 (VG2: 2.5 Vdc) to pin (51) of IC151 with a jumper wire.

Adjusting method:

1) Release the protect.
Page: 1, address: 00, data: 01
2) Change the data of page: D, address: 4D, and adjust so that the residual chroma component (A) becomes minimum.
3) Press the PAUSE button of the adjusting remote control unit.

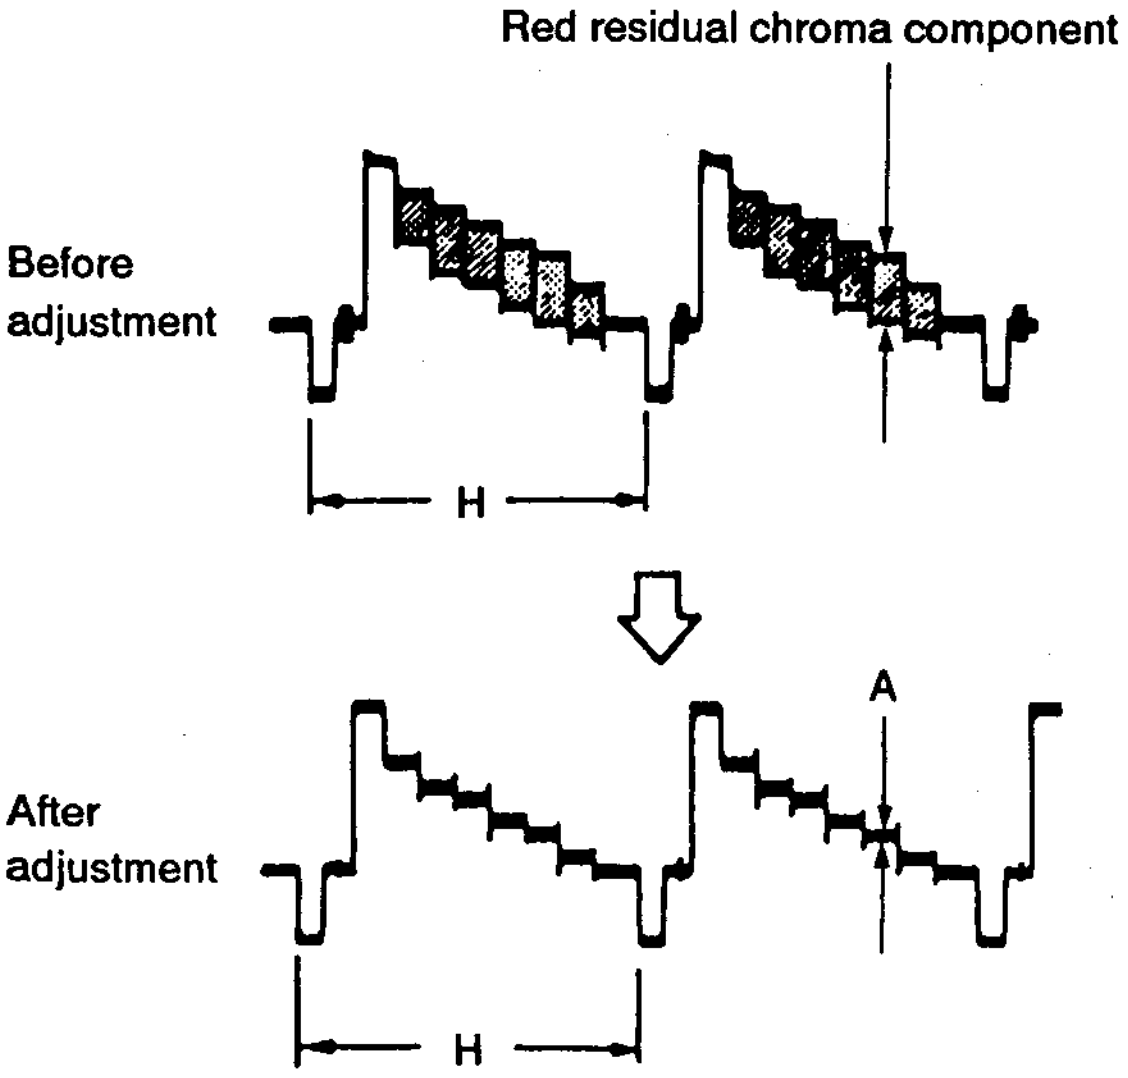
Red residual chroma component
Before adjustment
H
A
After adjustment
H

Fig. 9-14.

6. Y/C Separation Adjustment (VS-93P Board)

Mode	Record
Signal	Color bar
Measurement Point	Pin ⑪ of IC151 (C+CD)
Measuring Instrument	Oscilloscope
Adjusting Element	RV151 (Phase)
Adjustment Page	D
Adjustment Address	4C (COMB ADJ)
Specified Value	Residual chroma component (A) is minimum.

Adjusting method:

1) Release the protect.
Page: 1, address: 00, data: 01
2) Change the data of page: D, address: 4C, and adjust the residual chroma component to minimum.
3) Adjust RV151 so that the residual chroma component (A) becomes minimum.
4) Repeat 2) to 3).
5) Press the PAUSE button of the adjusting remote control unit.

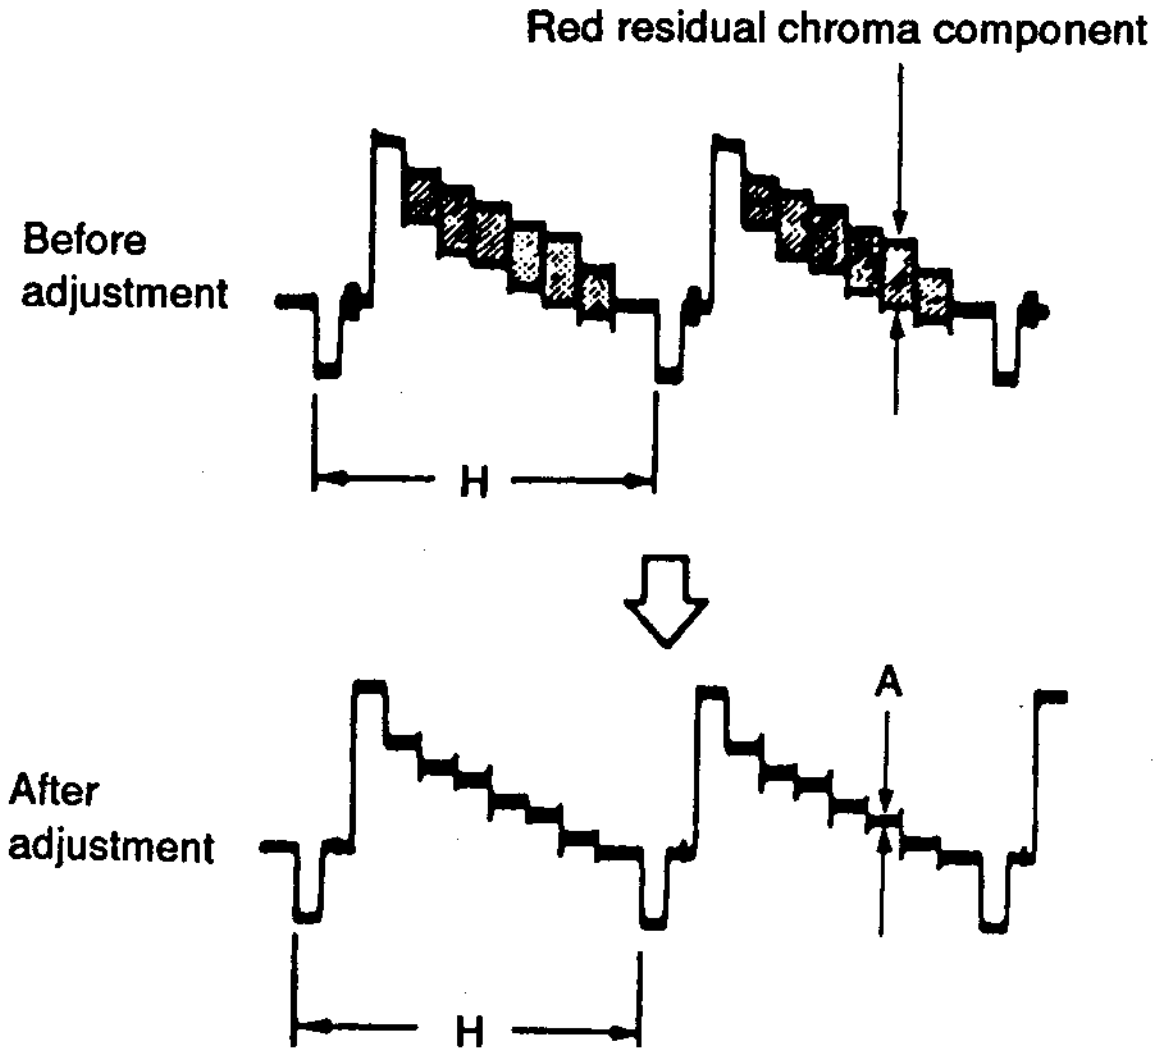
Red residual chroma component
Before adjustment
H
A
After adjustment
H

Fig. 9-15.

7. Emphasis Input Level Adjustment (VS-93P Board)

Mode	Record
Signal	Color bar
Measurement Point	Pin ③ of IC151 (or Pin ⑤ of IC155)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	5A (EMPHASIS INPUT LEVEL)
Specified Value	A=0.50 ± 0.025V

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Change the data of page: D, address: 5A, and adjust so that the Y signal level (A) becomes the specified value.
3) Press the PAUSE button of the adjusting remote control unit.

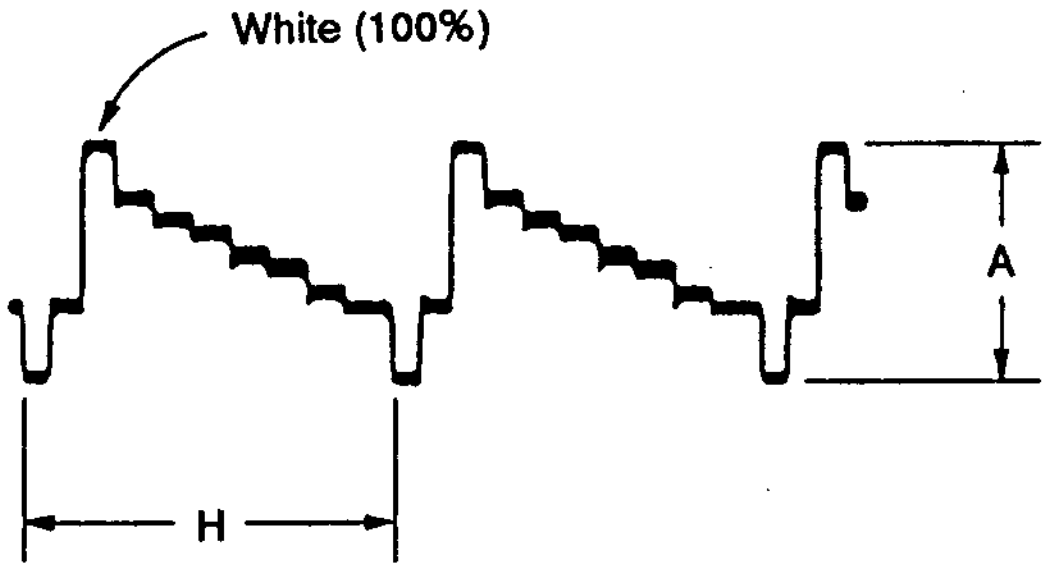

Fig. 9-16.

8. PB Y Level Adjustment (VS-93P Board)

Mode	Playback
Signal	Alignment tape: For checking operations Color bar section • Normal mode WR5-5CSP • Hi8 mode WR5-8CSE
Measurement Point	Pin ㉑ of IC151
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	• Normal mode 59 (NORMAL PB Y LEVEL) • Hi8 mode 58 (HI8 PB Y LEVEL)
Specified Value	A=0.50 ± 0.025V

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Playback the color bar section of the normal mode alignment tape (WR5-5CSP).
3) Change the data of page: D, address: 59, and adjust so that the Y signal level (A) becomes the specified value.
4) Press the PAUSE button of the adjusting remote control unit.
5) Playback the color bar section of the Hi8 mode alignment tape (WR5-8CSE).
6) Change the data of page: D, address: 58, and adjust so that the Y signal level (A) becames the specified value.
7) Press the PAUSE button of the adjusting remote control unit.

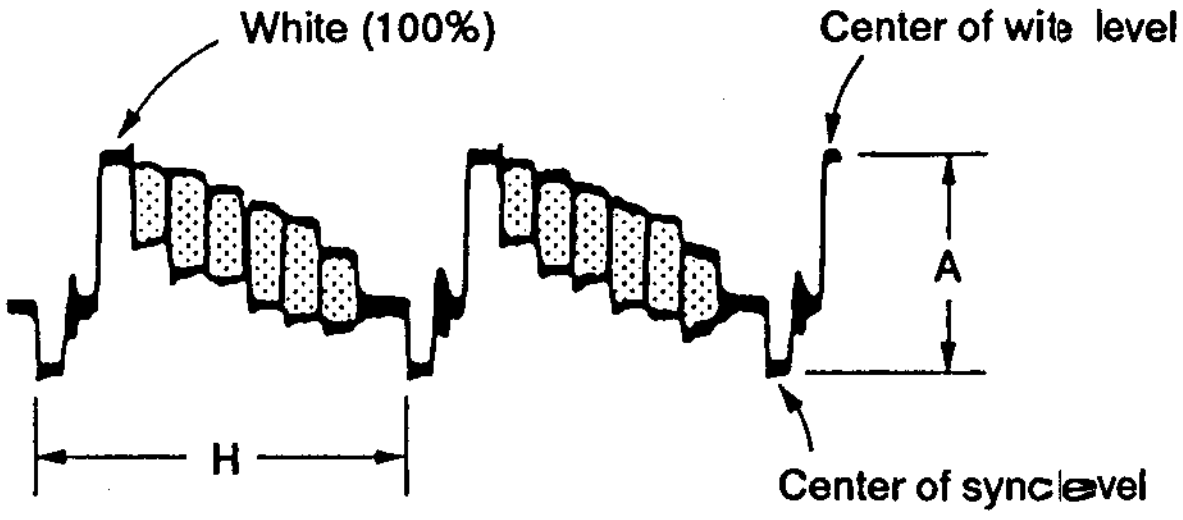

Fig. 9-17.

9. PB LINE OUT Level Adjustment

Mode	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Color bar section
Measurement Point	Video output terminal (terminated at 75 Ω)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	5B (PB LINE LEVEL)
Specified Value	A=1.0 ± 0.025V

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Change the data of page: D, address: 5B, and adjust so that the video signal level (A) becomes the specified value.
3) Press the PAUSE button of the adjusting remote control unit.

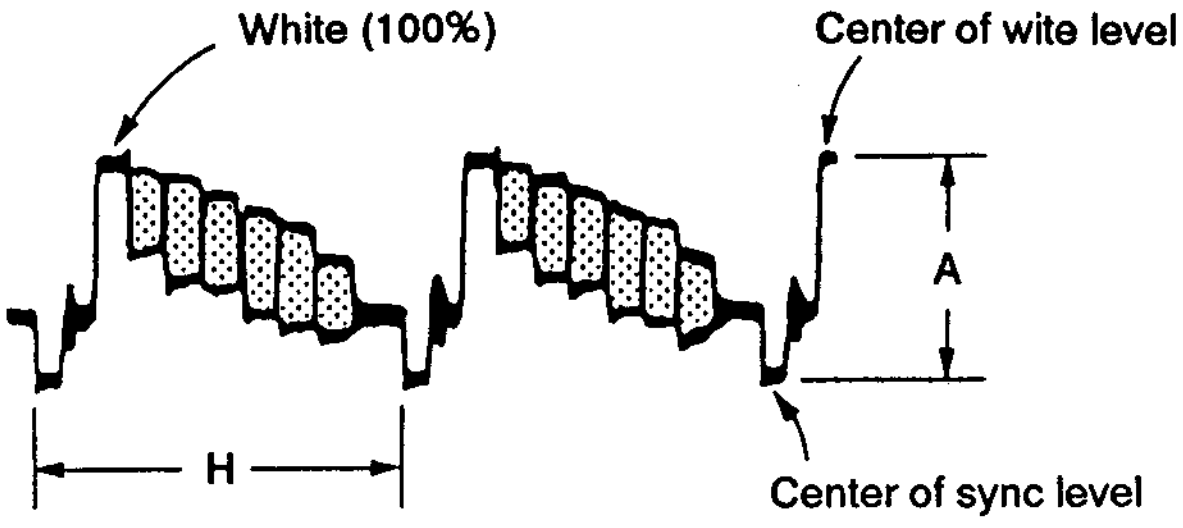

Fig. 9-18.

10. Y FM Carrier Frequency Adjustment (VS-93P Board)

Mode	Record
Signal	No signal
Measurement Point	Pin ⑤ of IC003 (REC Y RF OUT)
Measuring Instrument	Frequency counter
Adjustment Page	D
Adjustment Address	4F (Y FM CARRIER)
Specified Value	4.40 ± 0.04 MHz

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Change the data of page: D, address: 4F, and adjust so that the Y FM carrier frequency becomes the specified value.
3) Press the PAUSE button of the adjusting remote control unit.
4) Perform "Deviation Adjustment".

Pin ⑤ of IC003 waveform

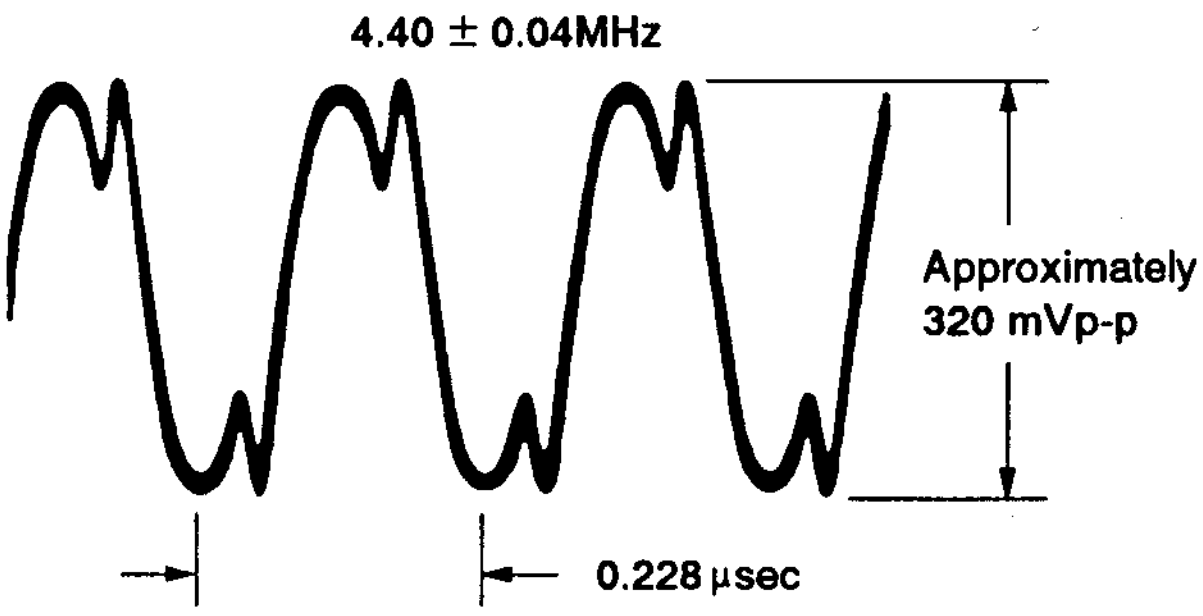

Fig. 9-19.

11. Deviation Adjustment (VS-93P Board)

Mode	Record and playback
Signal	Color bar
Measurement Point	Pin ㉑ of IC151
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	51 (Y FM DEVIATION)
Specified Value	A=0.50 ± 0.025V

Note: Check that "Emphasis Input Level Adjustment", "PB Y Level Adjustment" and "Y FM Carrier Frequency Adjustment" have been completed.

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Record the color bar signal.
3) Playback the recorded signal.
4) Check the playback signal level (A).
   Specification:A=0.50 ± 0.025V
5) If the specification is not satisfied, change the data of page: D, address: 51, and repeat steps 2) to 4).

Playback signal level	Changing the data
When smaller than the specified value	Increase
When bigger than the specified value	Decrease

6) Press the PAUSE button of the adjusting remote control unit.

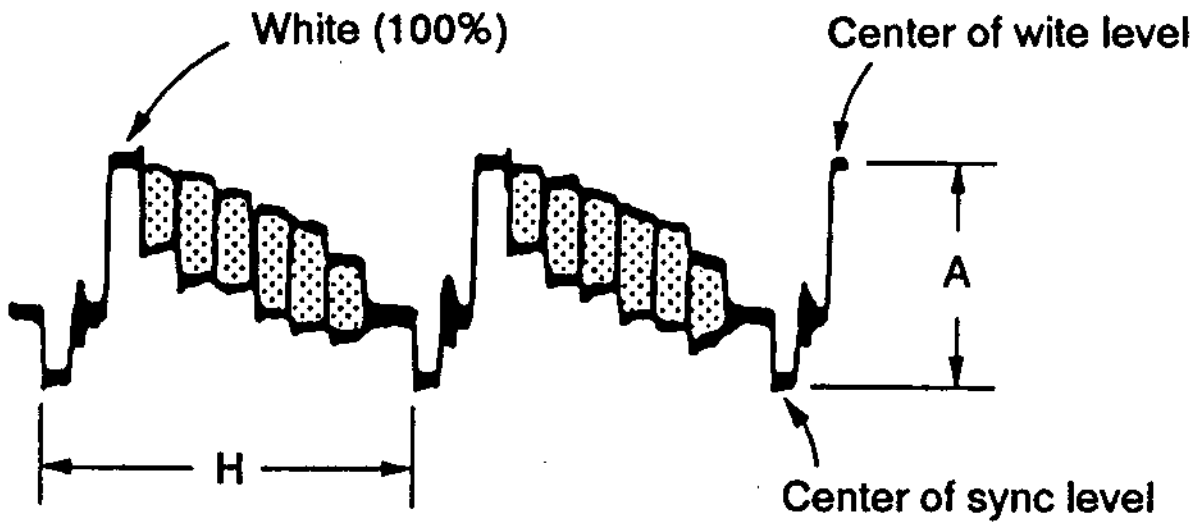

Fig. 9-20.

12. Chroma Emphasis fo Adjustment (VS-93P Board)

Mode	Record
Signal	Color bar
Measurement Point	Pin ㉔ of IC152
Measuring Instrument	Oscilloscope
Adjustment Element	FL153
Specified Value	Minimum fo component

Connection:

1) Connect pin ㉔ of IC152 to GND with a 2.2 kΩ resistor (1-249-421-11).

Adjusting method

1) Adjust FL153 so that the amplitude of the latter section of the chroma signal (yellow section) becomes minimum.

Minimize the amplitude of the latter section of the yellow section.

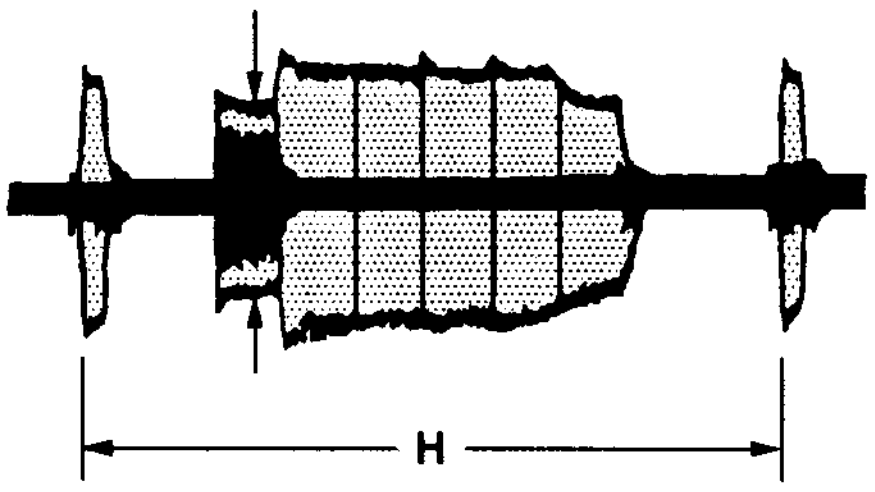

Fig. 9-21.

13. REC Y Level Adjustment (VS-93P Board)

Mode	Record (LP)
Signal	No signal
Measurement Point	Pin ⑤ of IC003
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	55 (REC Y LEVEL EE NOR MP) 54 (REC Y LEVEL EE NOR ME)
Specified Value	A=320 ± 5 mVp-p

Note: Use a MP type tape.

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Change the data of page: D, address: 55, and adjust so that the Y signal level (A) becomes the specified value.
3) Press the PAUSE button of the adjusting remote control unit.
4) Set the data of page: D, address: 55 to page: D, address: 54.
5) Press the PAUSE button of the adjusting remote control unit.

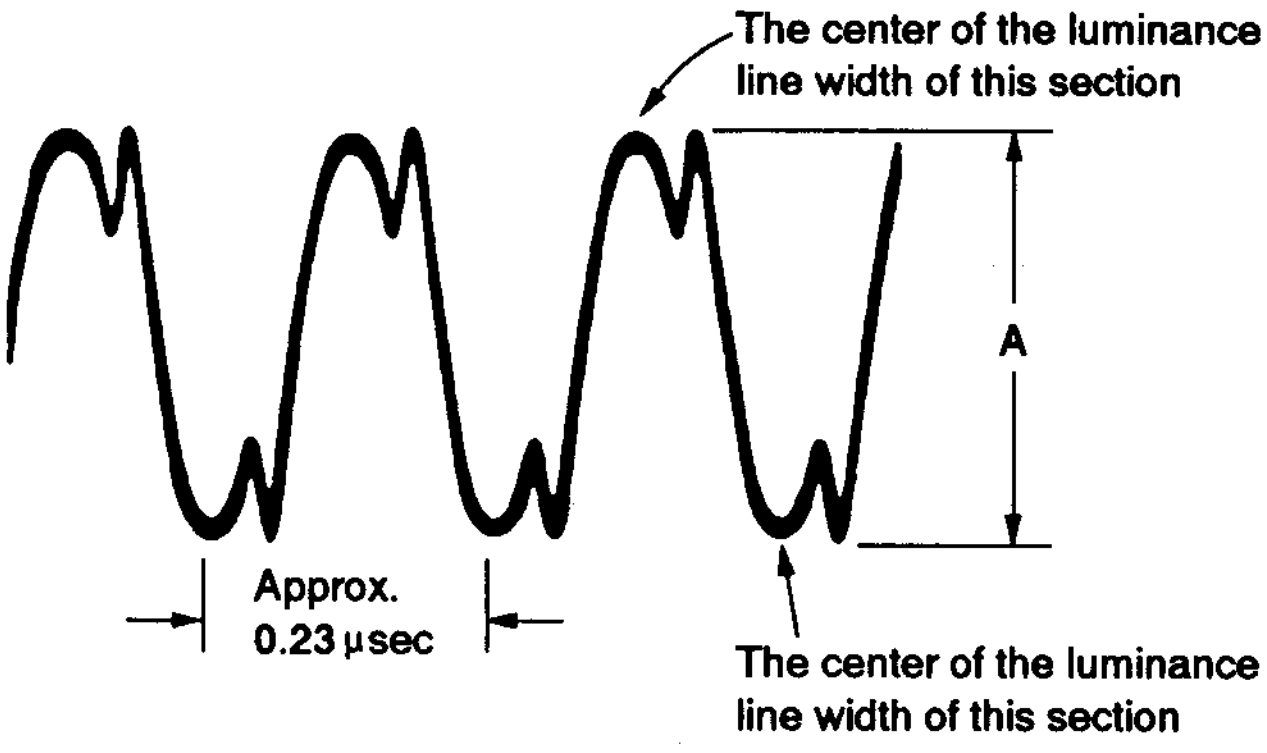
The center of the luminance line width of this section
A
Approx. 0.23 μsec
The center of the luminance line width of this section

Fig. 9-22.

14. REC C Level Adjustment (VS-93P Board)

Mode	Record (LP)
Signal	Color bar
Measurement Point	Pin ⑦ of CN002
Measuring Instrument	Oscilloscope (1:1 probe)
Adjustment Page	D
Adjustment Address	31 (MP REC C LEVEL) 30 (ME REC C LEVEL)
Specified Value	A=38 ± 1.5 mVp-p

Note: Use a MP type tape.

Connection:

1) Remove the AU-135P board CN601.
2) Connect the connecting point of R401 and R402 (the side of IC401 ㊸ pin) to GND with a jumper wire.

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) To reduce the REC Y signal, set data: 00 to page: D, address: 55.
   Note: Don't press the PAUSE button of the adjusting remote control unit.
3) Change the data of page: D, address: 31, and adjust so that the REC C level (A) becomes the specified value.
4) Press the PAUSE button of the adjusting remote control unit.
5) Set the same data of address: 31 to address: 30.
6) Press the PAUSE button of the adjusting remote control unit.
7) Turn the main power supply (6.3V) off.

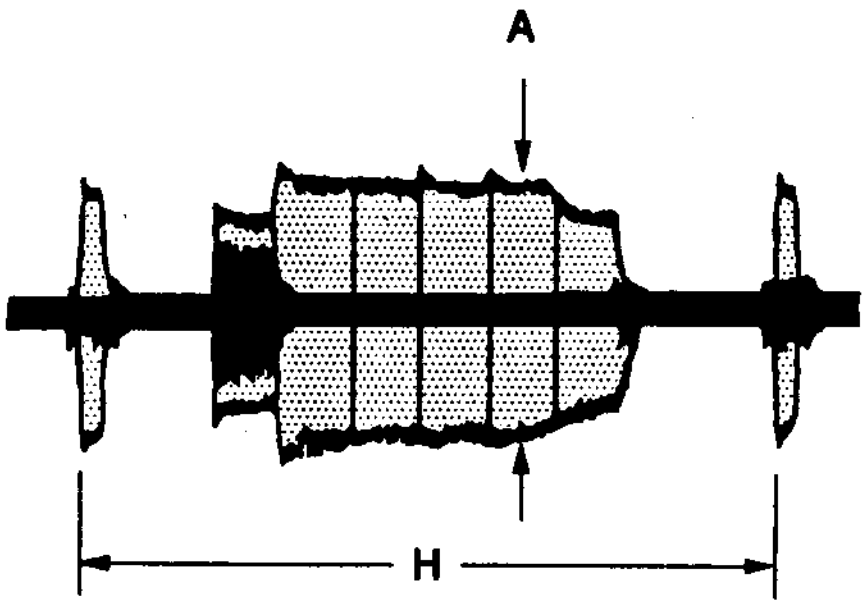

Fig. 9-23.

15. REC ATF Level Check (VS-93P Board)

Mode	Record (LP)
Signal	No signal
Measurement Point	Pin ⑦ of CN002 (REC 1A)
Measuring Instrument	Oscilloscope
Specified Value	A=11 ± 3 mVp-p

Note: Use a MP type tape.

Connection:

1) Remove the AU-135P board CN601.

Checking method:

1) Release the protect
   Page: 1, address: 00, data: 01.
2) To reduce the REC Y signal, set data: 00 to page: D, address: 55.
   Note: Don't press the PAUSE button of the adjusting remote control unit.
3) Check that the REC ATF signal level (A) satisfies the specified value.
4) Turn the main power supply (6.3V) off.

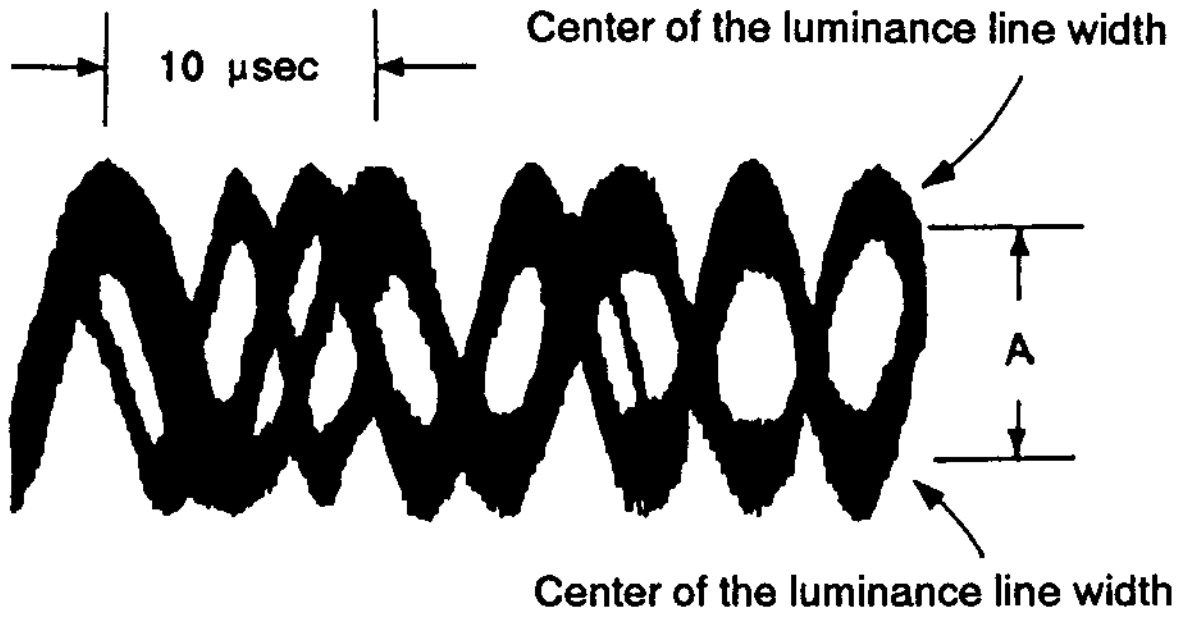
10 μsec
Center of the luminance line width
A
Center of the luminance line width

Fig. 9-24.

16. REC AFM Level Check (VS-93P Board)

Mode	Record
Signal	No signal
Measurement Point	Pin ⑦ of CN002 (REC 1A)
Measuring Instrument	Oscilloscope
Specified Value	A=13 ± 3 mVp-p

Note: 1) Use a MP type tape.
2) Do not insert anything into the audio input terminal (left).

Connection:

1) Connect the connecting point of R401 and R402 (the side of IC401 (83) pin) to GND with a jumper wire.

Checking method:

1) Release the protect
   Page: 1, address: 00, data: 01.
2) To reduce the REC Y signal, set data: 00 to page: D, address: 55.
   Note: Don't press the PAUSE button of the adjusting remote control unit.
3) Check that the REC AFM signal level (A) satisfies the specified value.
4) Turn the main power supply (6.3V) off.

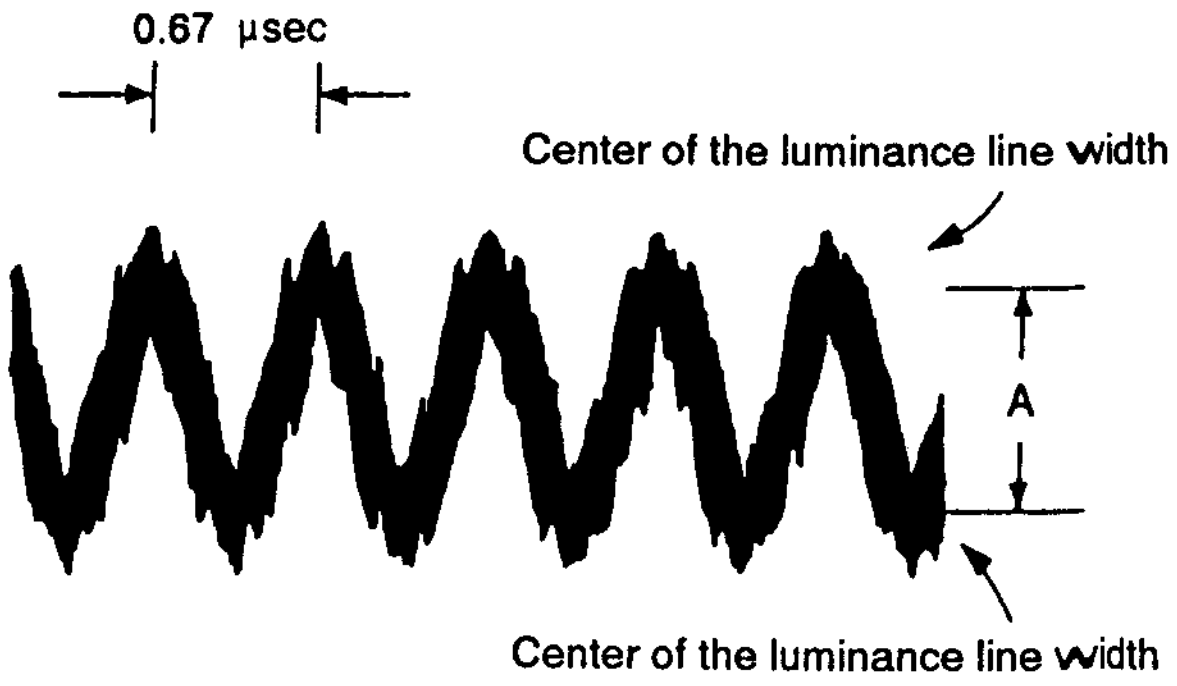
0.67 μsec
Center of the luminance line width
A
Center of the luminance line width

Fig. 9-25.

9-6. AUDIO SYSTEM ADJUSTMENT

- Perform the adjustment using the color bar signal as a video signal input.

[Connecting the measuring instruments for the audio]
Connect the audio system measuring instruments besides the video system measuring instruments as shown in Fig. 9-26, and perform adjustments with the power switch [video or player] position.
Switch the input/output switchover switch in accordance with the mode as follows in E, Australian, Tourist model.

- Input position·······Recording mode
- Output position·····Playback mode

Set the HIFI-SOUND switch (CF-3200 board S12) to the following position unless specified otherwise.

- Green (stereo) position

Use an extension cord if necessary.

- For AU-135P board (30P, 0.8 mm)
  Part code: J-6082-135-A

Note: 1) When inputting the audio signal, input the same signal to both L, and R channels, unless specified otherwise.
2) Be sure to insert the plug (shorting plug or dummy plug, etc.) into the audio input/output terminal (right). If the plug is not inserted, the unit will be set into the monaural mode, and correct adjustments cannot be carried out.
(Monaural mode)
During recording...REC AFM RF1.7 MHz carrier will not be output.
During playback...The L+R signal will be output from the audio input/output terminal (left).
3) The items to be adjusted for the R channel will be indicated within the [ ], in regard to the adjusting items to be adjusted for both L and R channels.

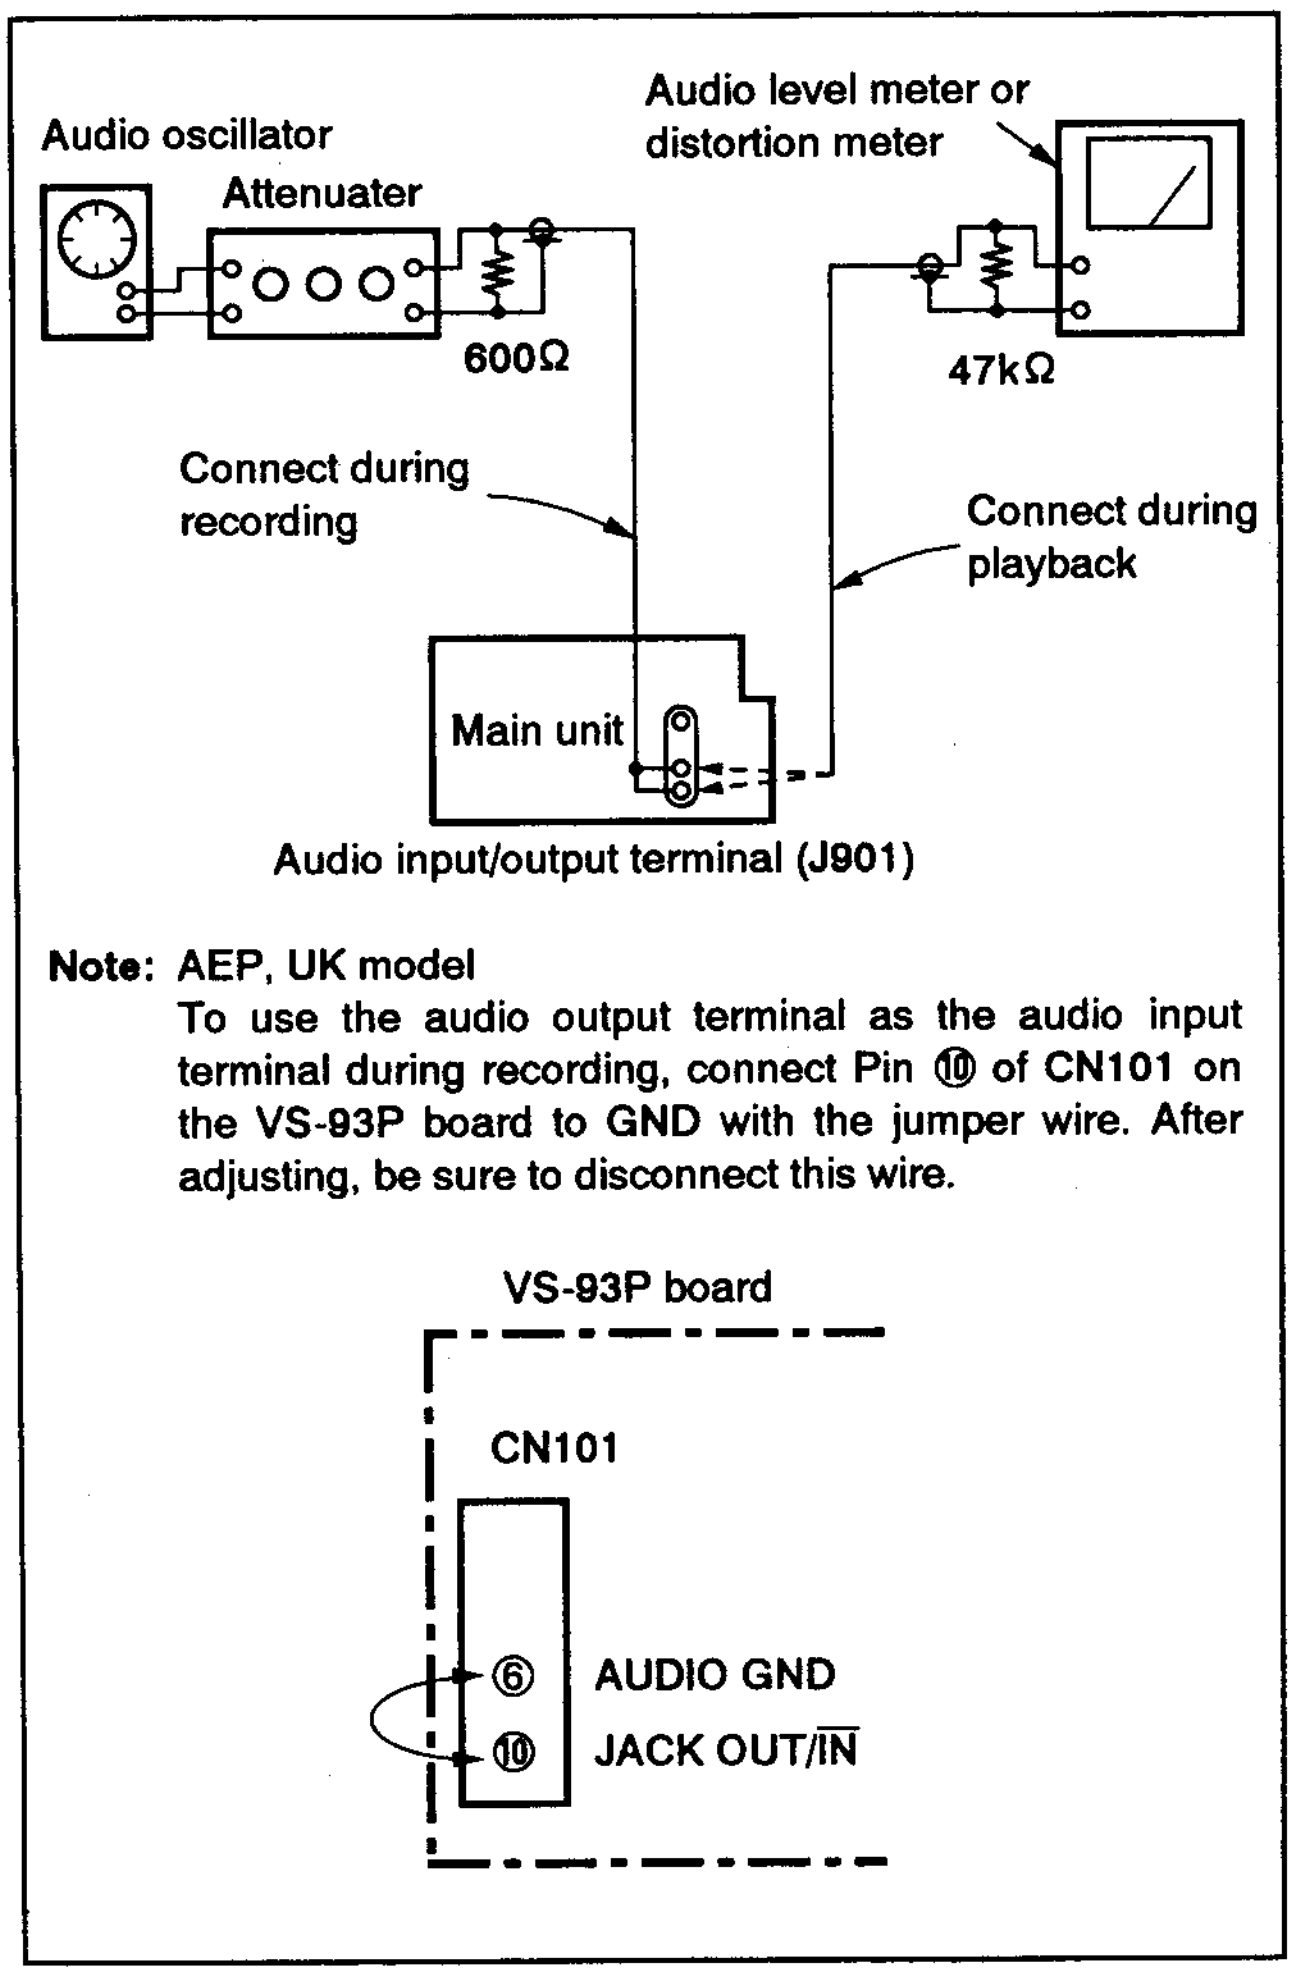
Audio oscillator
Attenuater
600Ω
Audio level meter or distortion meter
47kΩ
Connect during recording
Connect during playback
Main unit
Audio input/output terminal (J901)
VS-93P board
CN101
⑥ AUDIO GND
⑩ JACK OUT/$\overline{\text{IN}}$

Note: AEP, UK model
To use the audio output terminal as the audio input terminal during recording, connect Pin ⑩ of CN101 on the VS-93P board to GND with the jumper wire. After adjusting, be sure to disconnect this wire.

Fig. 9-26.

[Adjustment Procedure]

1) IR adjustment
2) 1.5 MHz carrier frequency check
3) 1.7 MHz carrier frequency check
4) 1.5 MHz recording level check
5) 1.7 MHz recording level check
6) E-E output level check
7) REC matrix L–R check
8) REC matrix L+R check
9) 1.5 MHz deviation adjustment
10) 1.7 MHz deviation adjustment
11) PB matrix L adjustment
12) PB matrix R adjustment
13) Overall level characteristics, distortion check
14) Separation check
15) Overall noise level check

1. IR Adjustment (AU-135P Board)

Mode	Playback
Signal	Alignment tape: AFM stereo For checking operations (WR5-9CS)
Measurement Point	Pins ㊹ and ⑥ of IC601 (LCH IR) Pins ㊹ and ⑥ of IC602 (RCH IR)
Measuring Instrument	Digital voltmeter
Adjustment Page	D
Adjustment Address	7A (1.5 IR), 7C (1.7 IR)
Specified Value	The DC voltage difference between pins ㊹ and ⑥ is 0 ± 10 mVdc

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01

- LCH IR adjustment

2) Connect the digital voltmeter to pin ㊹ of IC601, and read the voltage. (Approximately 2100 mVdc)
3) Connect the digital voltmeter to pin ⑥ of IC601.
4) Change the data of page: D, address: 7A, and adjust so that the voltage of pin ⑥ of IC601 becomes equal to the voltage of pin ㊹. (Voltage difference below 10 mVdc)
5) Press the PAUSE button of the adjusting remote control unit.

- RCH IR adjustment

6) Connect the digital voltmeter to pin ㊹ of IC602, and read the voltage. (Approximately 2100 mVdc)
7) Connect the digital voltmeter to pin ⑥ of IC602.
8) Change the data of page: D, address: 7C, and adjust so that the voltage of pin ⑥ of IC602 becomes equal to the voltage of pin ㊹. (Voltage difference below 10 mVdc)
9) Press the PAUSE button of the adjusting remote control unit.

2. 1.5 MHz Carrier Frequency Check (AU-135P Board)

Mode	Record
Signal	No signal
Measurement Point	Pin ⑧ of IC601
Measuring Instrument	Frequency counter (Note 1)
Specified Value	1.500 ± 0.002 MHz

Note: Use a high impedance (above 1 MΩ) and low capacity (below 20 pF) probe.

Checking method:

1) Check that the 1.5 MHz carrier frequency satisfies the specified value.

3. 1.7 MHz Carrier Frequency Check (AU-135P Board)

Mode	Record
Signal	No signal
Measurement Point	Pin ⑧ of IC602
Measuring Instrument	Frequency counter (Note 1)
Specified Value	1.700 ± 0.002 MHz

Note: 1) Use a high impedance (above 1 MΩ) and low capacity (below 20 pF) probe.
2) Insert a shorting plug into the audio input terminal (right).

Checking method:

1) Check that the 1.7 MHz carrier frequency satisfies the specified value.

4. 1.5 MHz Record Level Check (AU-135P Board)

Mode	Record (Monaural)
Signal	No signal
Measurement Point	Pin ② of CN601 (REC AFM)
Measuring Instrument	Oscilloscope
Specified Value	A=41 ± 5 mVp-p

Note: Do not insert the plug into the audio input terminal (right).

Checking method:

1) Check that the 1.5 MHz carrier level satisfies the specified value.
   (Read the center of the luminance line width and note down the level read.)

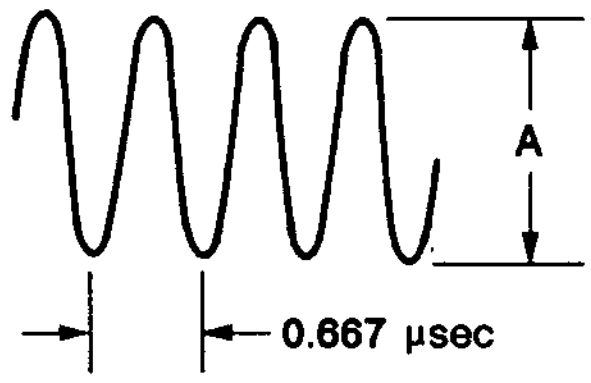

Fig. 9-27.

5. 1.7 MHz Record Level Check (AU-135P Board)

Mode	Record
Signal	No signal
Measurement Point	Pin ② of CN601 (REC AFM)
Measuring Instrument	Oscilloscope
Specified Value	$\frac{\text{1.7 MHz carrier level}}{\text{1.5 MHz carrier level}}$ =0.80 ± 0.12

Note: Insert a shorting plug into the audio input terminal (right).

Connection:

1) Remove and check C690 (0.01 μF). After checking, connect a new capacitor.

Checking method:

1) Check that the level ratio of 1.5 MHz carrier and 1.7 MHz carrier satisfies the specified value.

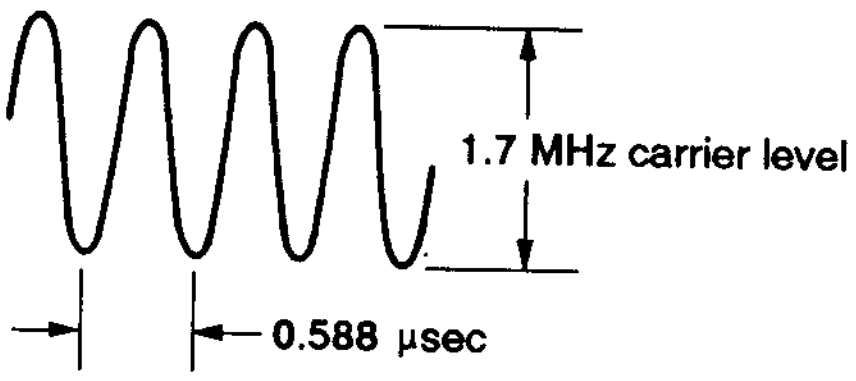

Fig. 9-28.

6. E-E Output Level Check (AU-135P Board)

Mode	Record
Signal	400 Hz, –7.5 dBs audio input terminal right [left]
Measurement Point	Pin ⑨ of IC604 [Pin ① of IC604]
Measuring Instrument	Oscilloscope
Specified Value	925^{+240}_{-190} mVp-p (–7.5 ± 2 dBs)

Checking method:

1) Check that the 400 Hz signal level satisfies the specified value.

7. REC Matrix L-R Adjustment (AU-135P Board)

Mode	Record
Signal	400 Hz, –7.5 dBs Input to both left and right terminals of the audio input terminal
Measurement Point	Pin ③ of IC603
Measuring Instrument	Oscilloscope (Use 1:1 probe)
Adjustment Page	D
Adjustment Address	78 (L/R MX LEVEL (REC))
Specified Value	0 ± 5 mVp-p

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Change the data of page: D, address: 78, and minimize the 400 Hz signal level.
3) Press the PAUSE button of the adjusting remote control unit.

8. REC Matrix L+R Check (AU-135P Board)

Mode	Record
Signal	1. 400 Hz, –7.5 dBs: Audio input terminal left No signal: Audio input terminal right 2. No signal: Audio input terminal left 400 Hz, –7.5 dBs: Audio input terminal right
Measurement Point	Pin ㉕ of IC603
Measuring Instrument	Oscilloscope
Specified Value	The level difference is 0 ± 10 mVp-p when only the left terminal is input and when only the right terminal is input.

Note: When measuring the signal level of pin ㉕ of IC603, wait for more than 1 minute after signal input before measuring. (To stabilize the AGC)

Adjusting method:

1) Input the 400 Hz, –7.5 dBs signal only to the audio input terminal (left). (Insert the shorting plug to the audio input terminal (right).)
2) Read the 400 Hz signal level of pin ㉕ of IC603, and take it down. (Approximately 200 mVp-p)
3) Input the 400 Hz, –7.5 dBs signal only to the audio input terminal (right). (Insert the shorting plug to the audio input terminal (left).)
4) Check that the 400 Hz signal level of pin ㉕ of IC603 is (the value that was taken down at step 2) ± 10 mVp-p.

9. 1.5 MHz Deviation Adjustment (AU-135P Board)

Mode	Playback
Signal	Alignment tape: For checking the operation (WR5-5CSP)
Measurement Point	Audio output terminal left or right (Pin ⑨ or ① of IC604)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	7B (1.5 DEV)
Specified Value	–7.5 ± 0.5 dBs

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Change the data of page: D, address: 7B, and adjust so that the 400 Hz signal level becomes the specified value.
3) Press the PAUSE button of the adjusting remote control unit.

10. 1.7 MHz Deviation Adjustment (AU-135P Board)

Mode	Playback
Signal	Alignment tape: AFM stereo For checking operations (WR5-9CS) Bilingual (Monoscope) section
Measurement Point	1. Pin ⑨ of IC604 2. Pin ① of IC604
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	7D (1.7 DEV)
Specified Value	8 ± 0.05 graduation

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Connect the oscilloscope to pin ⑨ of IC604.
3) Adjust the 400 Hz signal amplitude to the 8.0 graduation using the VOLT/DIV knob of the oscilloscope.
4) Connect the oscilloscope to pin ① of IC604.
5) Change the data of page: D, address: 7D, and adjust so that the 1 kHz signal level becomes 8 ± 0.05 graduation. (Adjust with the center of the luminance line width.)
6) Press the PAUSE button of the adjusting remote control unit.

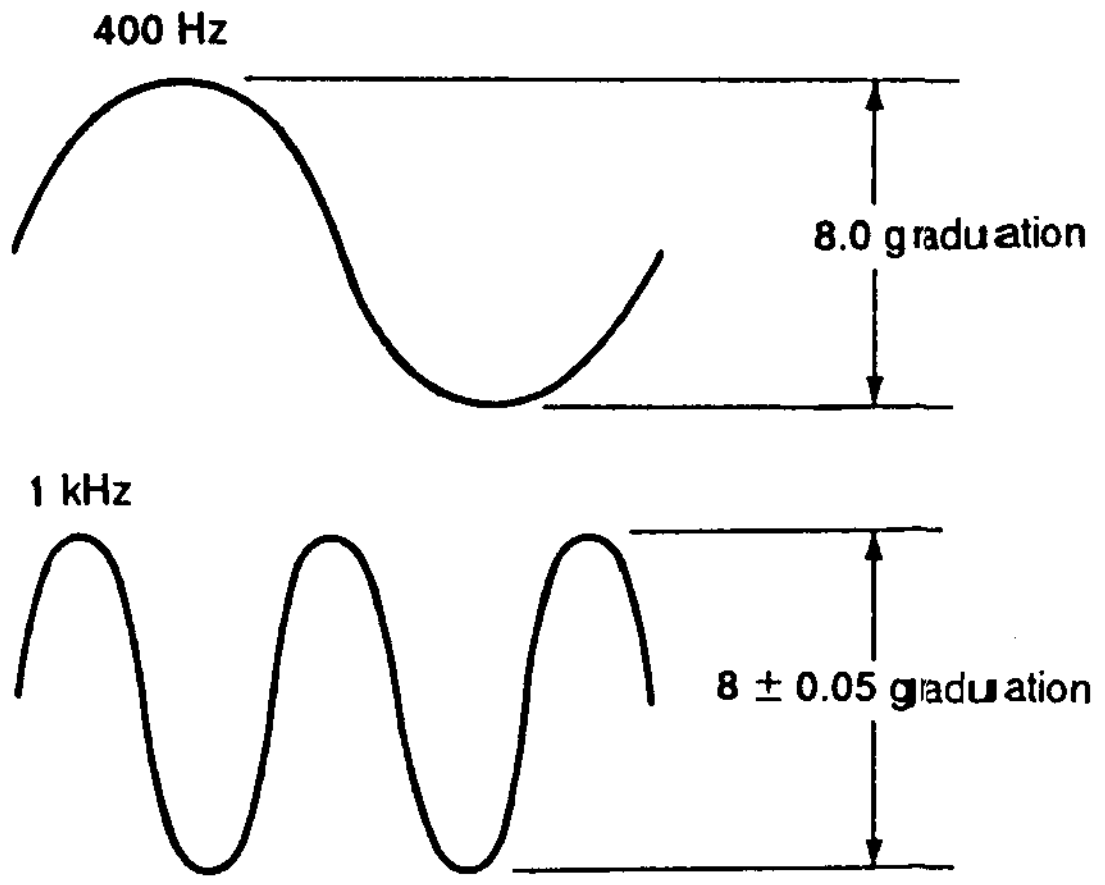

Fig. 9-29.

11. PB Matrix L Adjustment (AU-135P Board)

Mode	Self recording/playback
Signal	No signal: Audio input terminal (left) 400 Hz, –7.5 dBs: Audio input terminal (right)
Measurement Point	Pin ⑨ of IC604
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	79 (L/R MX LEVEL (PB))
Specified Value	Below 20 mVp-p

Adjusting method:

1) Release the protect.
   Page: 1, address: 00, data: 01
2) Input the 400 Hz, –7.5 dBs signal only to the audio input terminal (right). (Insert the shorting plug to the audio input terminal (left).)
3) Record.
4) Remove the input signal.
5) Playback the recorded section.
6) Change the data of page: D, address: 79, and minimize the cross talk component (400 Hz).
7) Press the PAUSE button of the adjusting remote control unit.

12. PB Matrix R Check (AU-135P Board)

Mode	Self recording/playback
Signal	400 Hz, –7.5 dBs: Audio input terminal (left) No signal: Audio input terminal (right)
Measurement Point	Pin ① of IC604
Measuring Instrument	Oscilloscope
Specified Value	Below 30 mVp-p

Checking method:

1) Input the 400 Hz, –7.5 dBs signal only to the audio input terminal (left). (Insert the shorting plug to the audio input terminal (right).)
2) Record.
3) Remove the input signal.
4) Playback the recorded section.
5) Check that the cross talk component (400 Hz) is below 30 mVp-p.

13. Overall Level Characteristic, Distortion Check (AU-135P Board)

Mode	Self recording/playback
Signal	400 Hz, –7.5 dBs: Audio input terminal (left) [right] No signal: Audio input terminal (right) [left]
Measurement Point	Audio output terminal (left) [right] (Pin ⑨ [Pin ①] of IC604)
Measuring Instrument	Audio level meter and distortion meter
Specified Value	Level: –8.5 ± 2 dBs Distortion rate: Below 0.8% (Note 2)

Note: 1) The [ ] indicates the measuring point during the right channel check
2) Value when the following filter is used

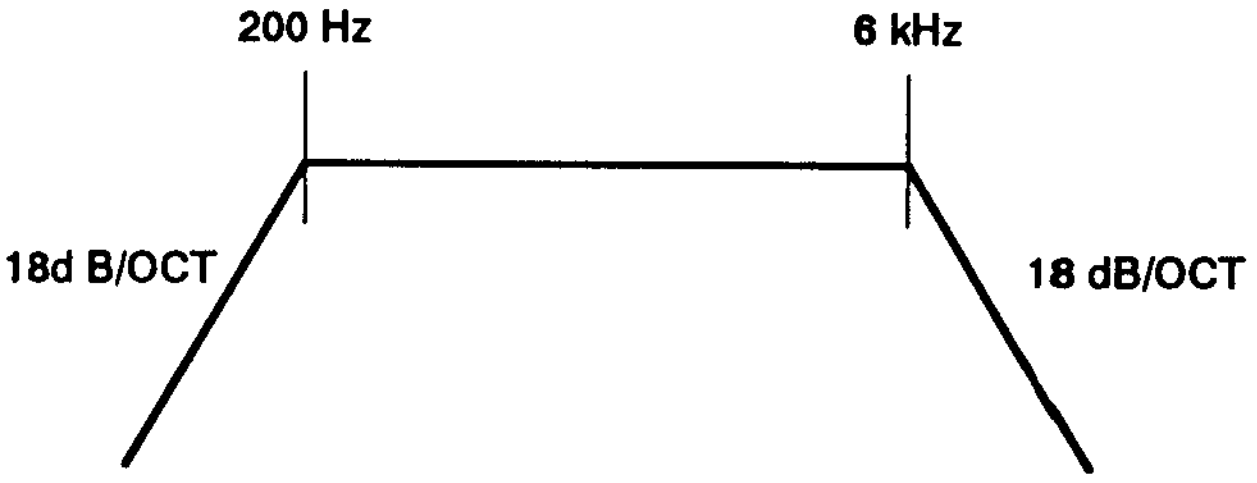

Fig. 9-30.

Checking method:

1) Input the 400 Hz, –7.5 dBs signal only to the audio input terminal (left) [right].
   Note: Be sure to insert the shorting plug to the terminal that was not signal input.
2) Record the signal.
3) Remove the input signal.
4) Playback the recorded section.
5) Check that the 400 Hz signal level of the audio output (left) [right] is –8.5 ± 2 dBs, and that the distortion rate is below 0.8% (Note 2).

14. Separation Check (AU-135P Board)

Mode	Self recording /playback
Signal	No signal: Audio input terminal (left) [right] 1 kHz, –7.5 dBs: Audio input terminal (right) [left]
Measurement Point	Audio output terminal (left) [right] (Pin ⑨ [Pin ①] of IC604)
Measuring Instrument	Audio level meter (Use an IHF-A curve audio correction filter)
Specified Value	Below –27.5 dBs

Note: The [ ] indicates the measuring point during the right channel check.

Checking method:

1) Insert a shorting plug into the audio input terminal (left) [right], and input a 1kHz, –7.5 dBs signal only to the audio input terminal (right) [left].
2) Record the signal.
3) Remove the input signal.
4) Playback the recorded section.
5) Check that the cross talk level (1 kHz) of the audio output terminal (left) [right] is below –27.5 dBs.

15. Overall Noise Level Check (AU-135P Board)

Mode	Self recording/playback
Signal	No signal: Audio input terminal left and right
Measurement Point	Audio output terminal (left) [right] (Pin ⑨ [Pin ①] of IC604)
Measuring Instrument	Audio level meter (Use an IHF-A curve auditory correction filter)
Specified Value	Below –62.5 dBs

Note: The [ ] indicates the measuring point during the right channel check.

Checking method:

1) Insert the shorting plug to both left and right of the audio input terminals.
2) Record.
3) Remove the shorting plug.
4) Playback the recorded section.
5) Check that the noise level of the audio output terminal (left) [right] is below –62.5 dBs.

9-7. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS

VS-93P BOARD (COMPONENT SIDE)

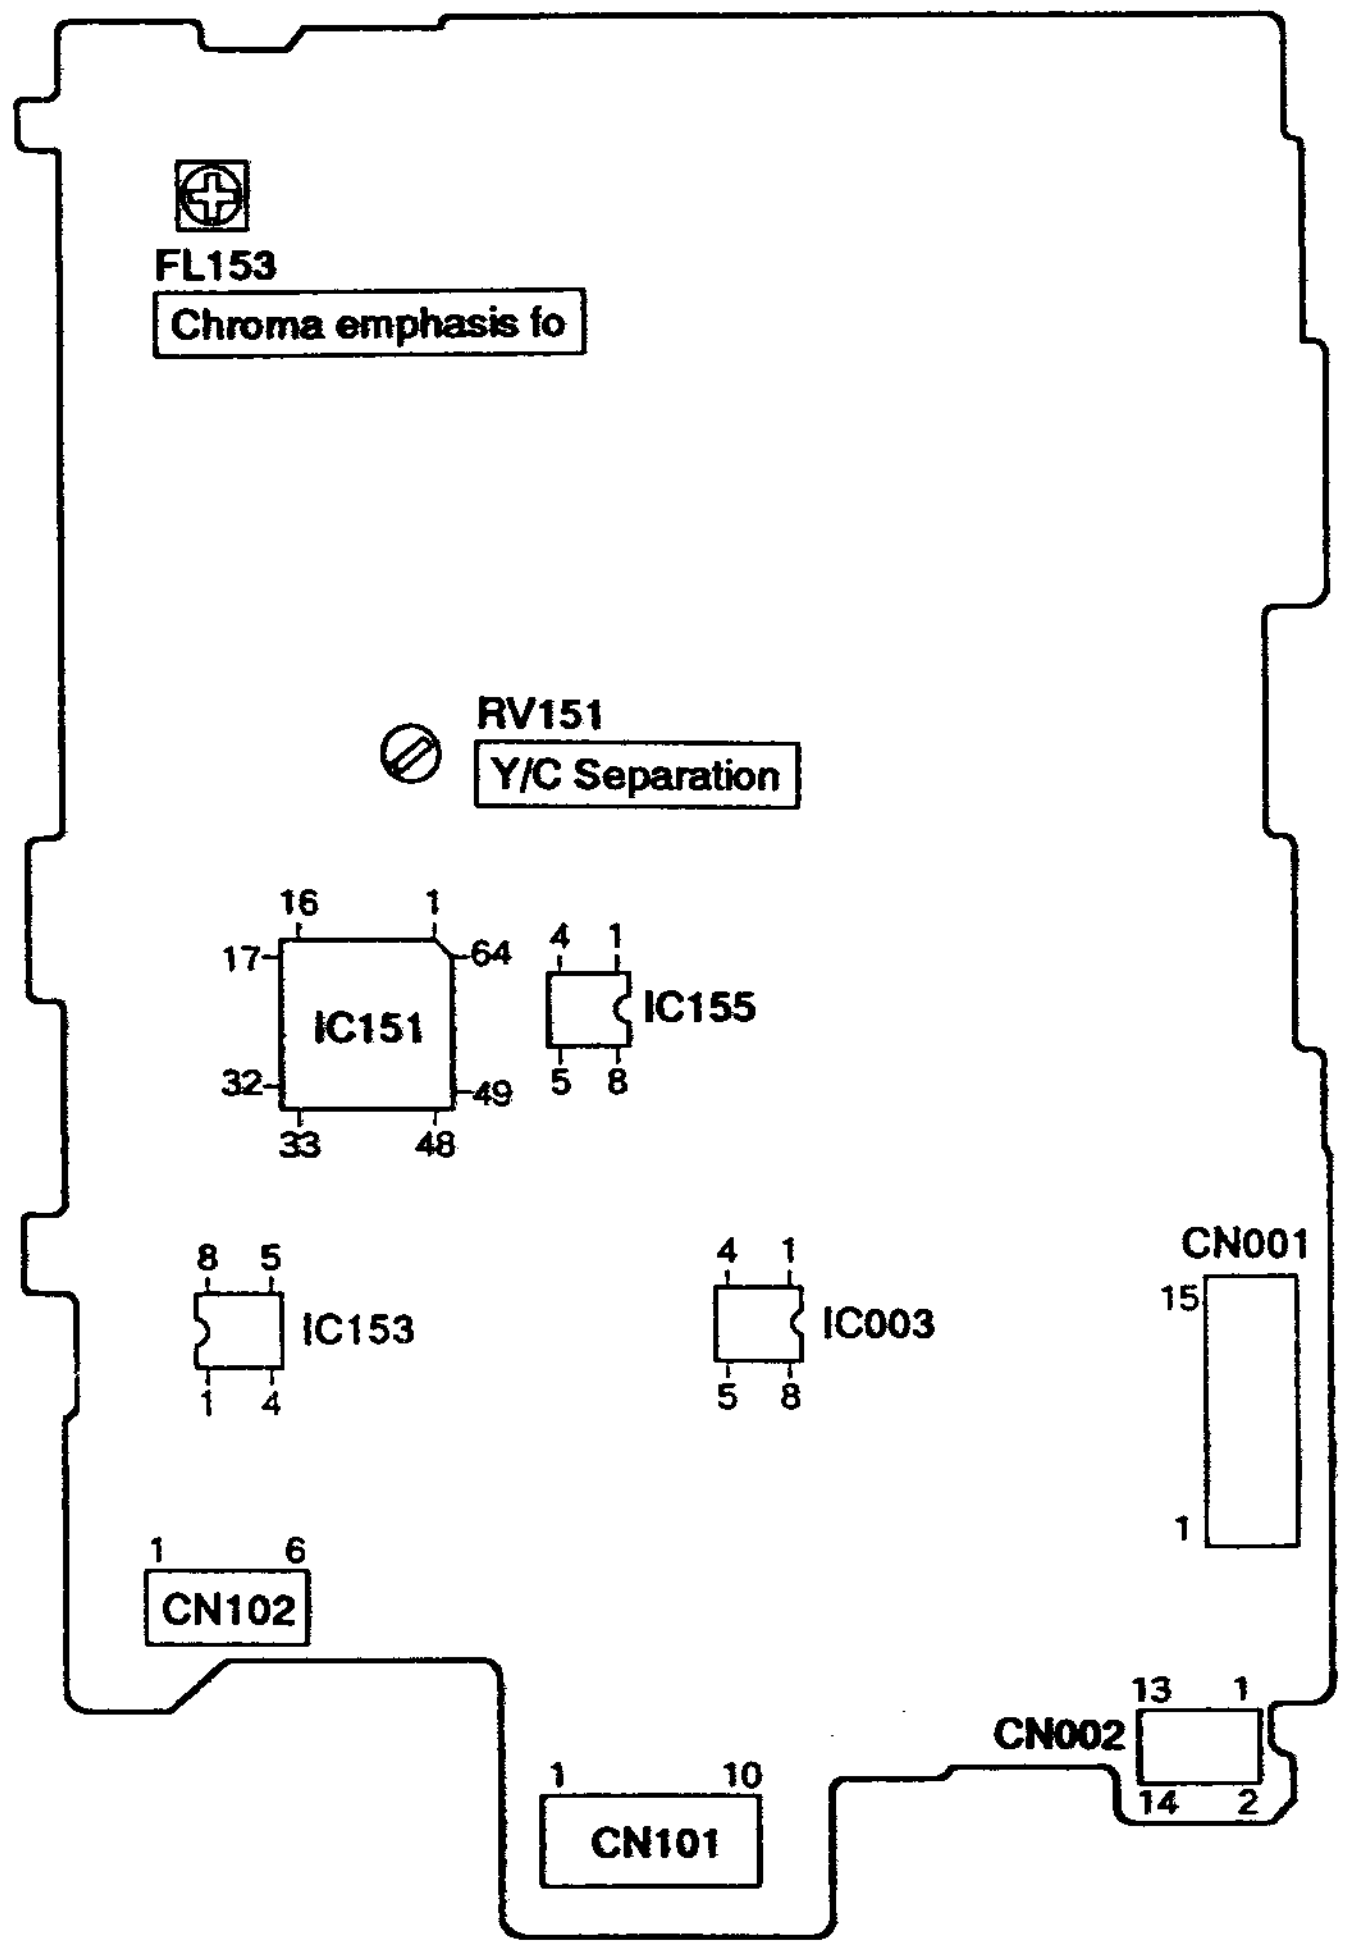
FL153
Chroma emphasis fo
RV151
Y/C Separation
16
1
17
64
IC151
32
49
33
48
4
1
IC155
5
8
8
5
IC153
1
4
4
1
IC003
5
8
CN001
15
1
1
6
CN102
1
10
CN101
CN002
13
1
14
2

VS-93P BOARD (CONDUCTOR SIDE)

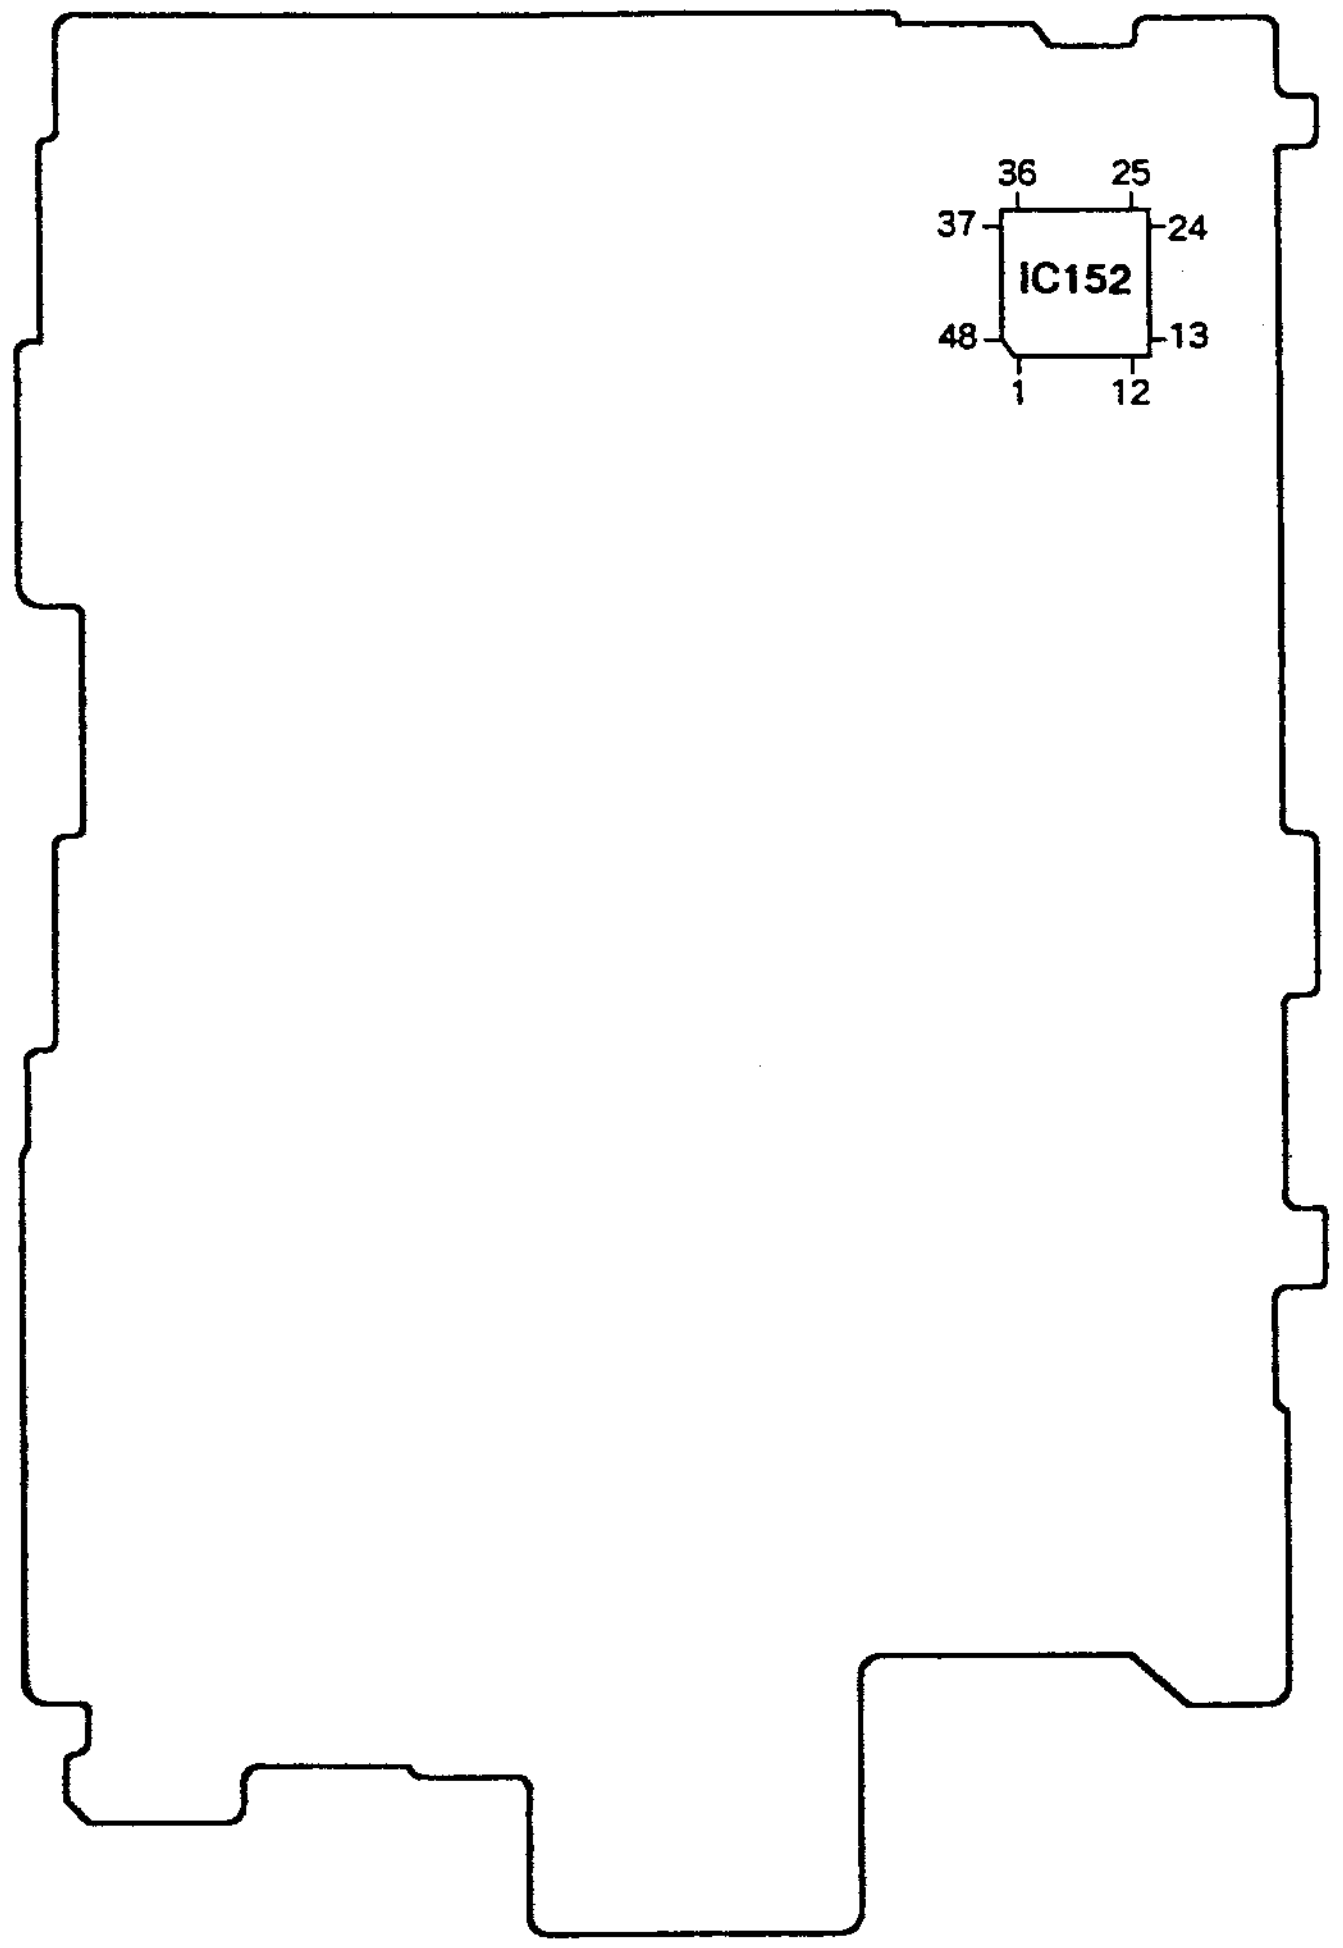
36
25
37
24
IC152
48
13
1
12

DD-47P BO

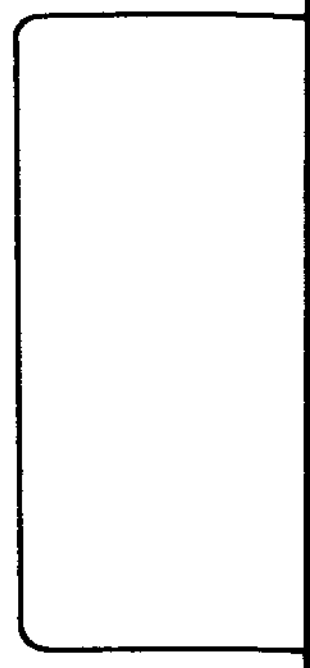

AU-135P B

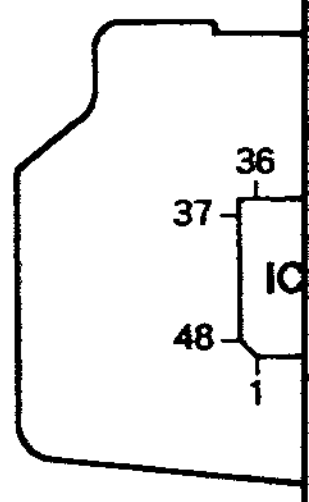

MA-143P BOARD (COMPONENT SIDE)

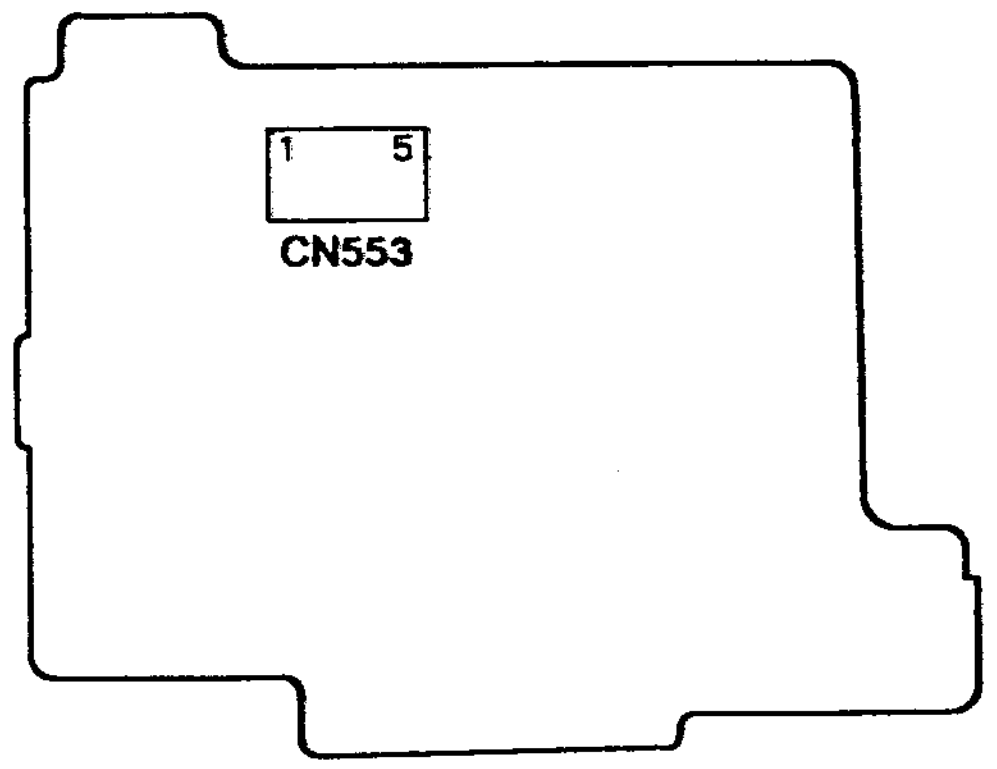

MF-175P BOARD (CONDUCTOR SIDE)

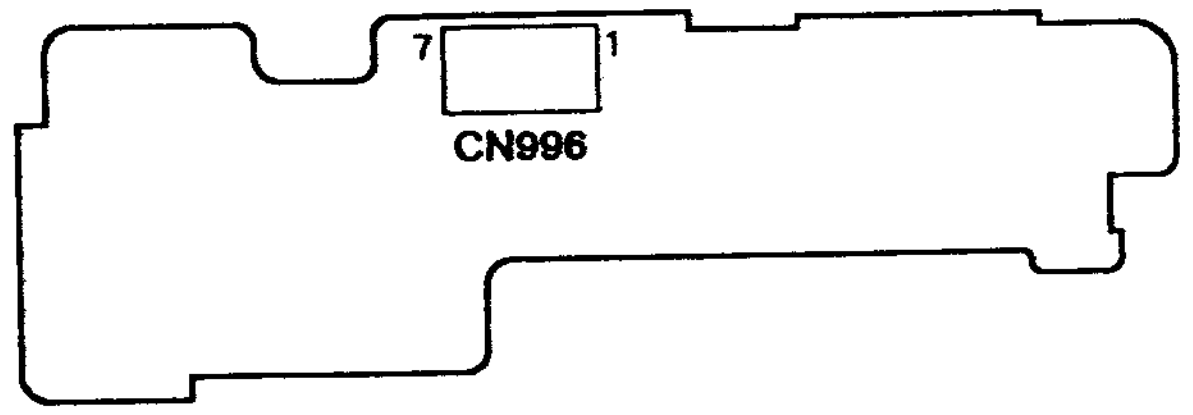

9-7. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS

VS-93P BOARD (COMPONENT SIDE)

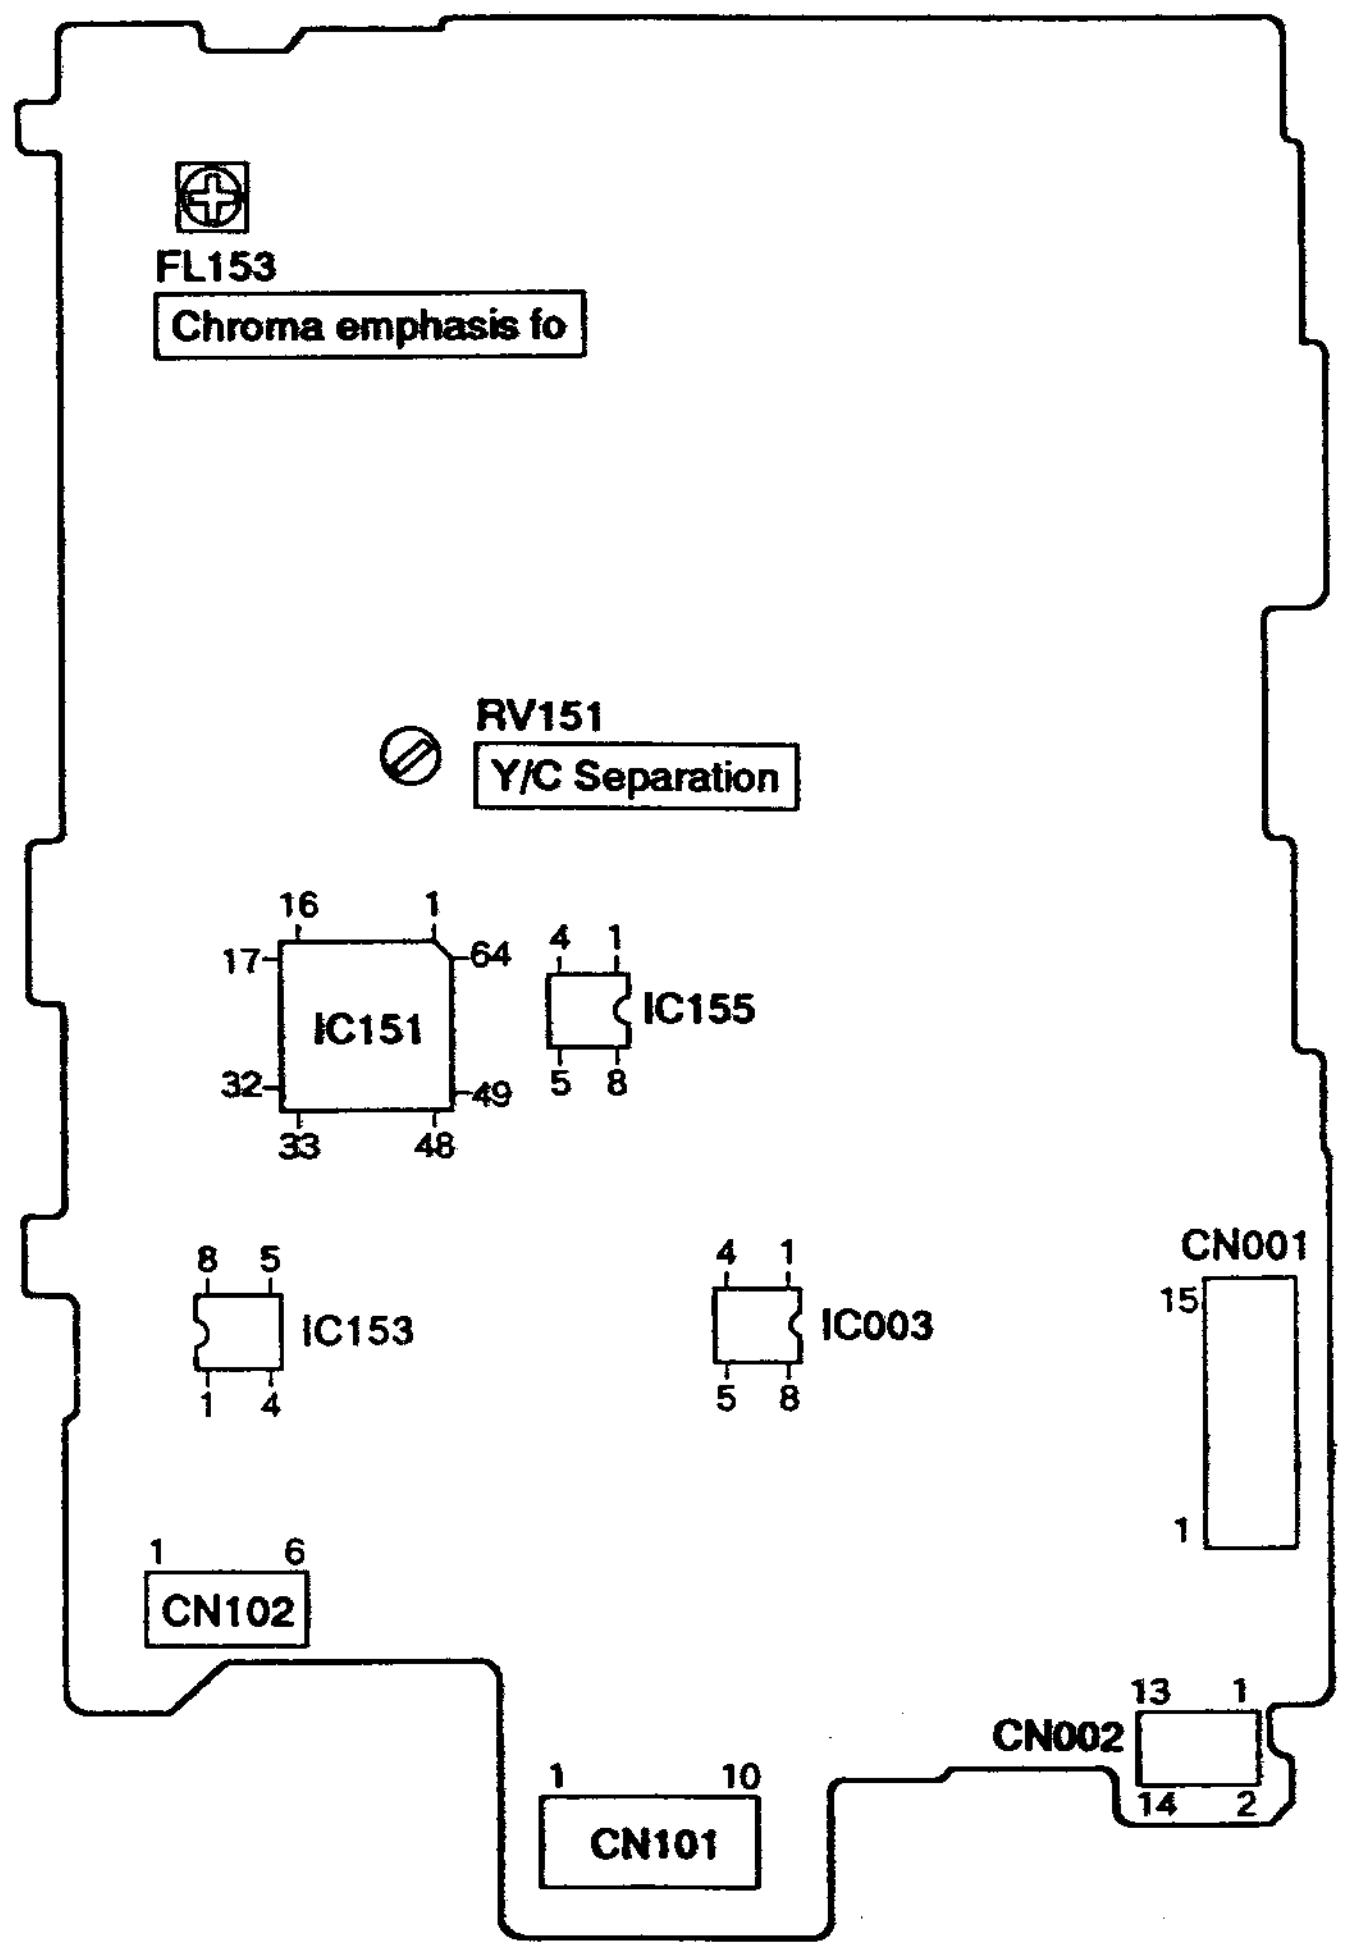
FL153
Chroma emphasis fo
RV151
Y/C Separation
IC151
16
1
17
64
32
49
33
48
IC155
4 1
5 8
IC153
8 5
1 4
IC003
4 1
5 8
CN001
15
1
CN102
1 6
CN101
1 10
CN002
13 1
14 2

VS-93P BOARD (CONDUCTOR SIDE)

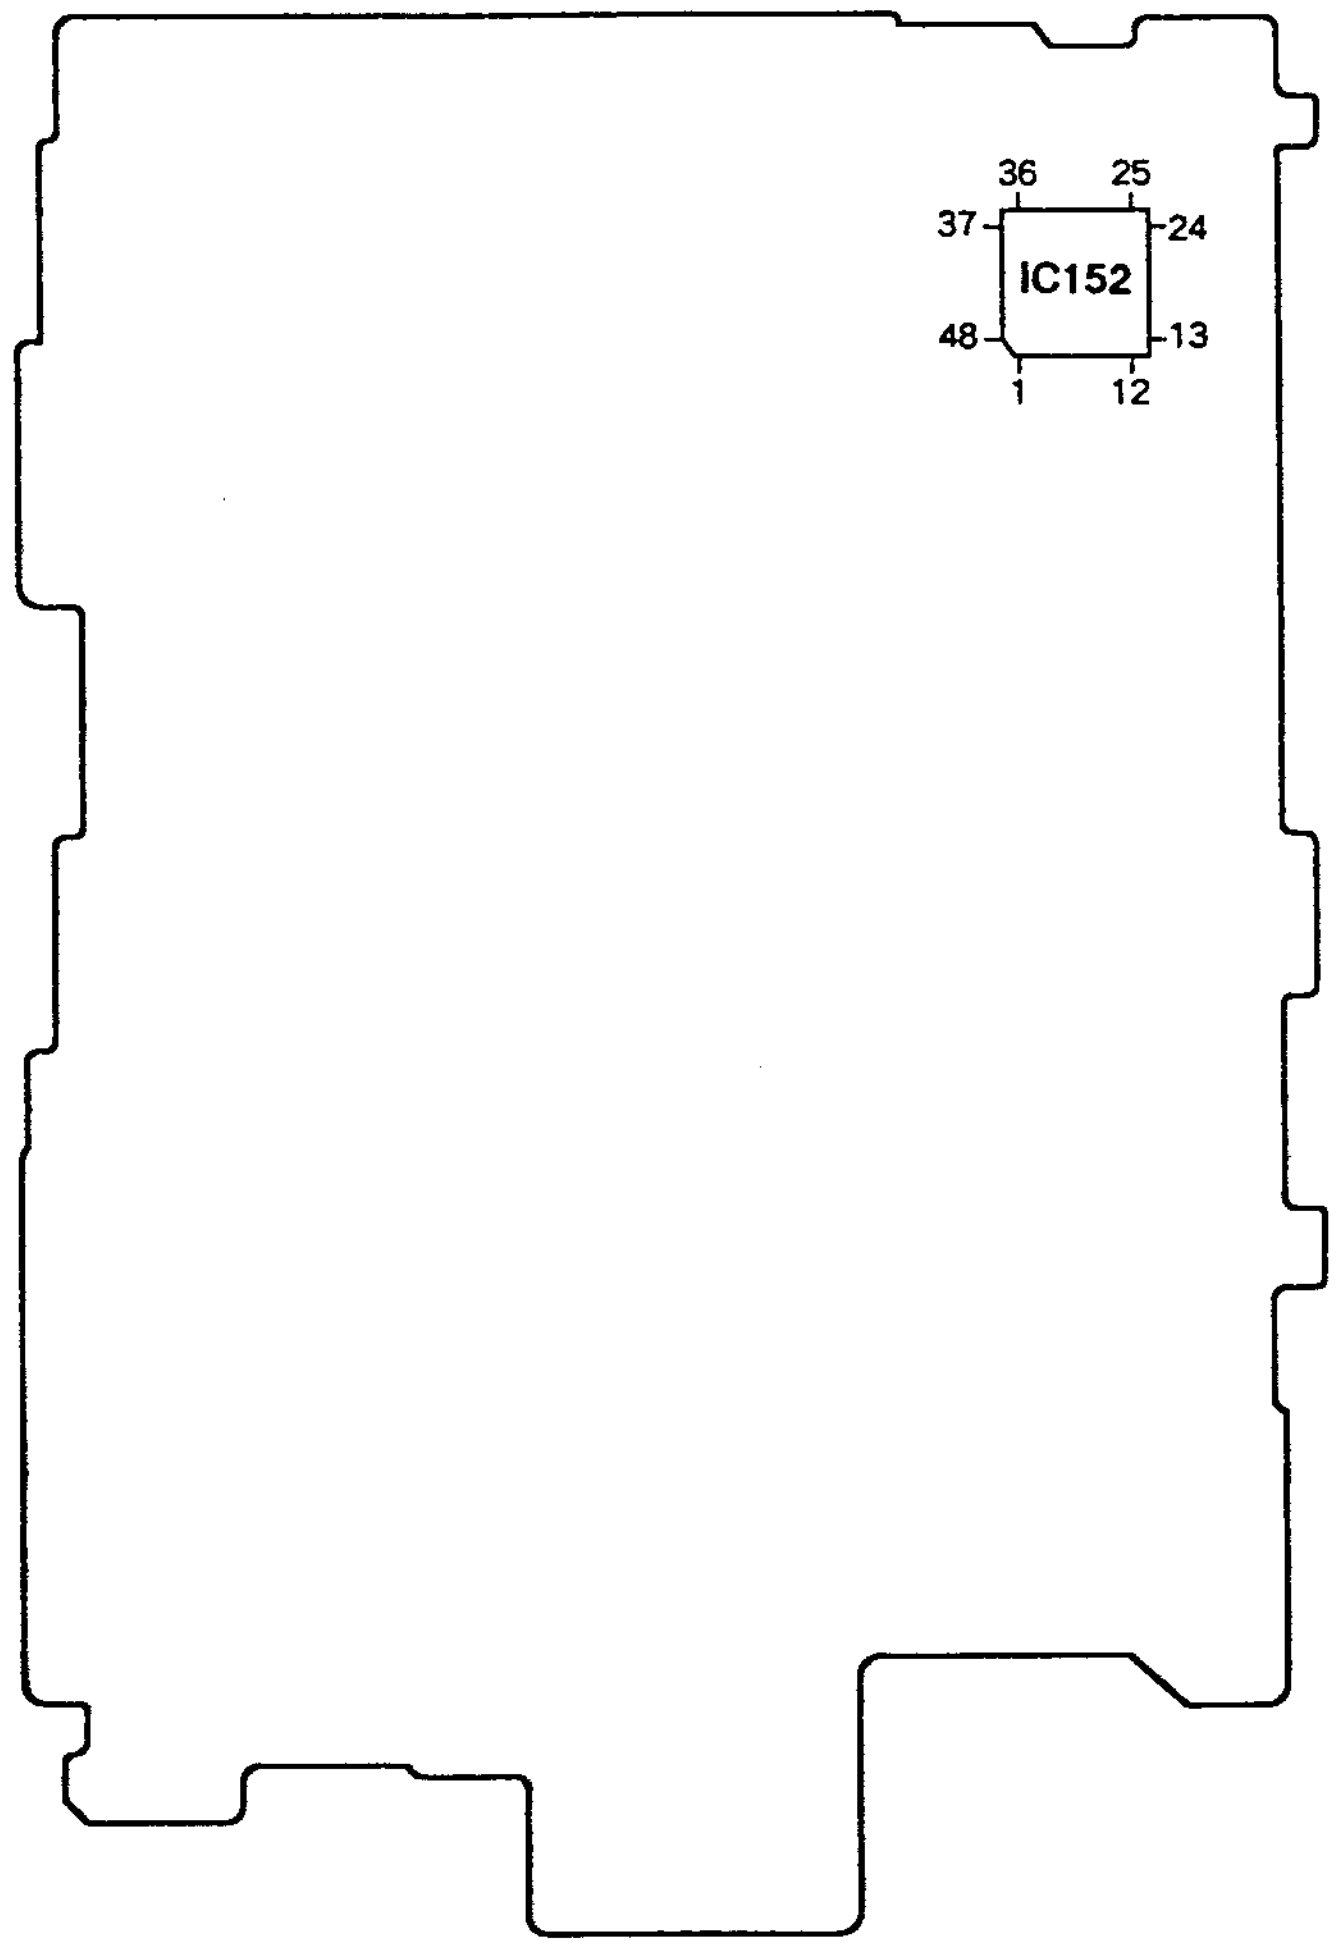
IC152
36 25
37
24
48
13
1 12

DD-47P BOARD (COMPONENT SIDE)

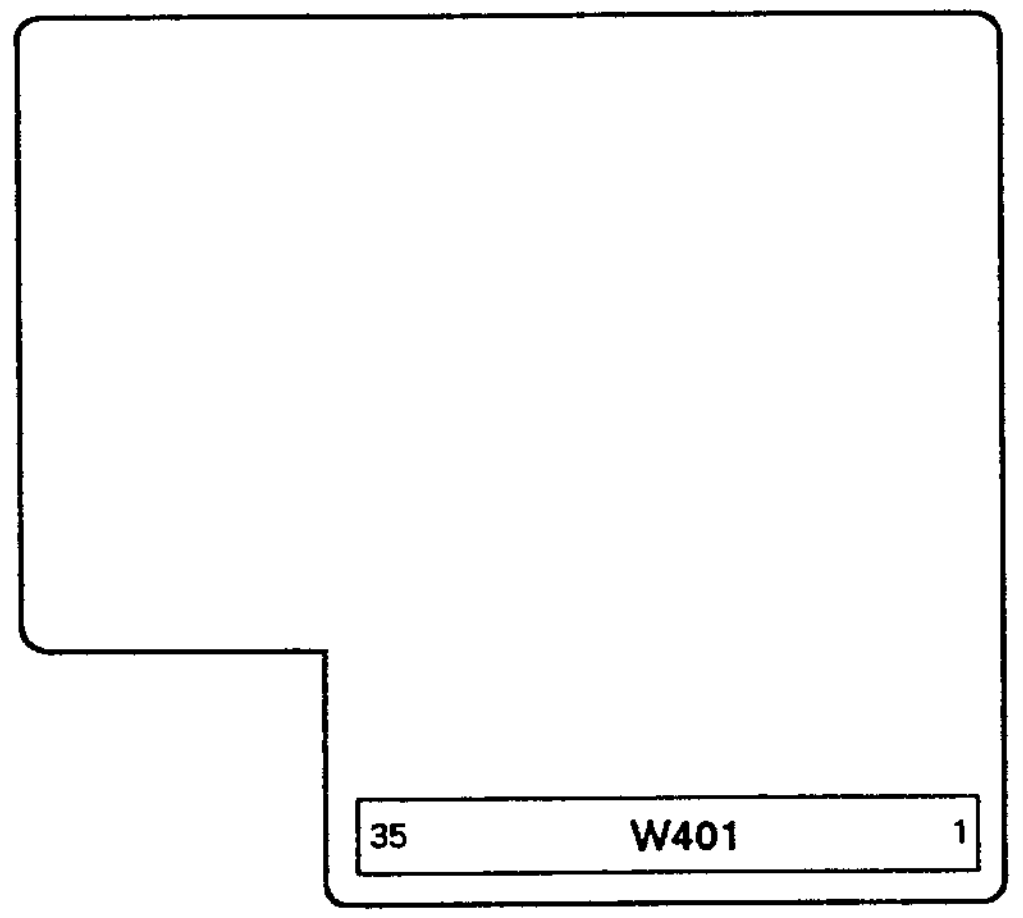

AU-135P BOARD (CONDUCTOR SIDE)

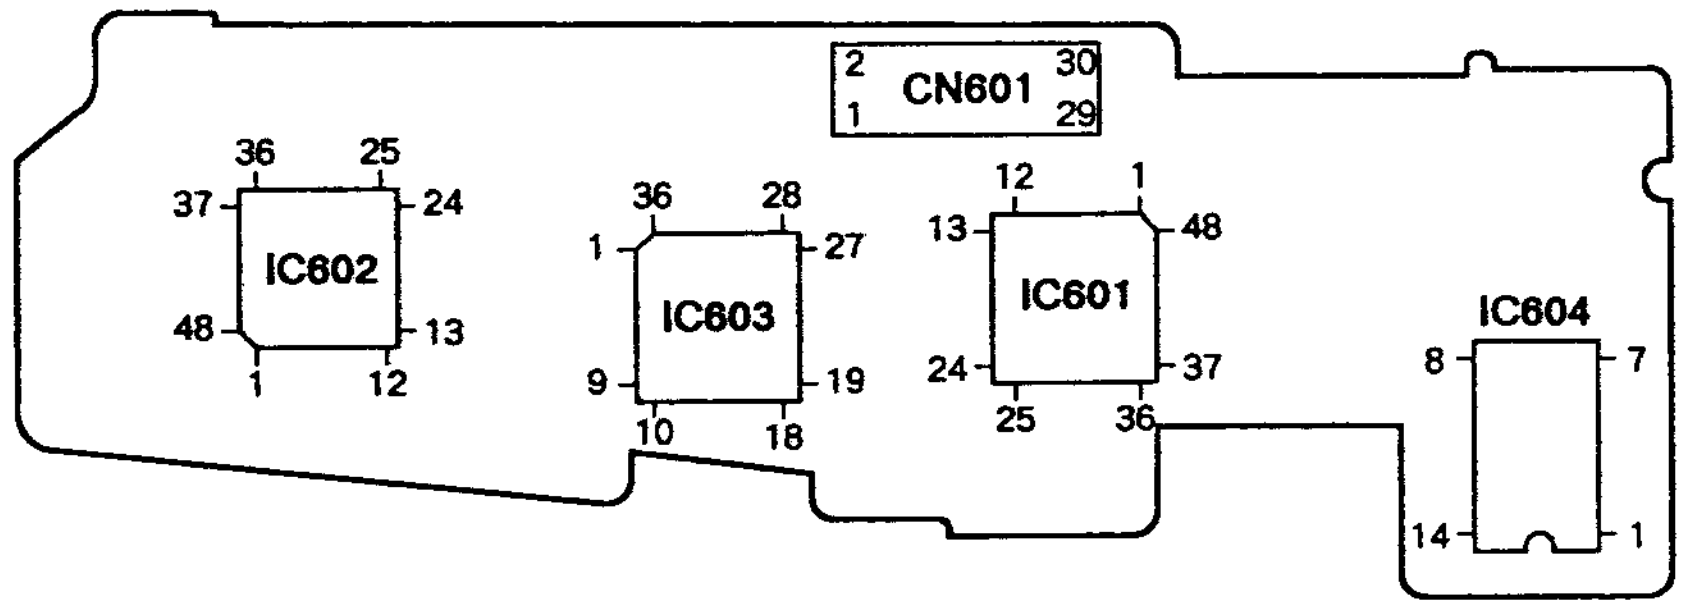
CN601
2 30
1 29
IC602
36 25
37
24
48
13
1 12
IC603
36 28
1
27
9
19
10 18
IC601
12 1
13
48
24
37
25 36
IC604
8
7
14
1

MA-143P BOARD (COMPONENT SIDE)

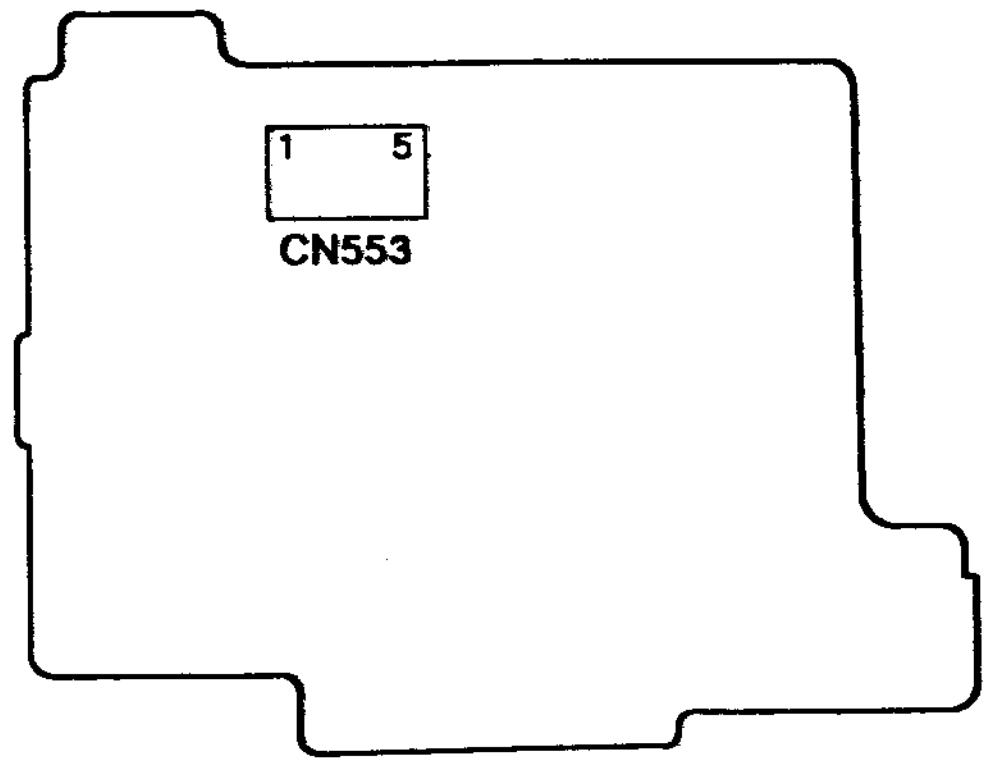

MF-175P BOARD (CONDUCTOR SIDE)